

Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------



Automotive Technical DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system Fiesta 1.1 & Van 1989 to 1994

Type	GUE HCS 40kW. 15.04 ¹	
Capacity (cm ³) / number of cylinders	1119 / 4	
Compression ratio / pressure	bar	9.5 / 13 to 16
Oil pressure	bar	0.6 [1.5]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.20 to 0.25
Valve clearance - exhaust	mm	0.30 to 0.35
Firing order	1-2-4-3	
No 1 cylinder position	TCE	
Thermostat opening temperature	°C	85 to 89
Radiator cap pressure	bar	1.0

Fuel system Fiesta 1.1 & Van 1989 to 1994

Idle speed - manual [auto]	rpm	750±50
Fast idle speed - manual [auto]	rpm	2800 [2600]
CO @ idle speed [3000 rpm] - see page VI	%	≤0.3
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO ₂ @ idle speed [3000 rpm] - see page VI	%	—
O ₂ @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection	Weber	
Type / ref	TLDM 89BF-9510-BA [CA]. GUD EA	
Main jet / needle	92, 122 [92, 112]	
Injection pressure	bar	—
Pump pressure	bar	0.24 to 0.38
Octane rating	RON	95[E 95 RON]

Ignition system Fiesta 1.1 & Van 1989 to 1994

Type	DIS	
Ignition coil	—	
Primary resistance	ohms	0.5 to 1.0
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor	—	
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation	—	
Ignition timing - basic [static	° Crankshaft @ rpm	[10 BTDC]
V = Vacuum NV = No Vacuum	—	
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs	Motorcraft/Champion	
Type	AGRF22C1 / RS9YC	
Electrode gap	mm	1.00

Electrical system Fiesta 1.1 & Van 1989 to 1994

Battery	V / CC / RC	12 / 270 / 50, 360 / 60,500/70
Alternator voltage / full load current / engine rpm	13.7 to 14.6 / 50, 70 / 3000	
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gear Fiesta 1.1 & Van 1989 to 1994

Brakes -		
Front (min. friction material thickness)	mm	1.5
Rear (min. friction material thickness)	mm	1.0
Tyres		
Saloon	Size	145x13: 155/70x13: 165/65x13
Estate / Van	Size	145x13
Pressure - front / rear - Saloon	bar	1.8 / 1.8 ²
- Estate / Van	bar	1.8 / 1.8
Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	0±1.0 ³
Camber	+25'±1°15' [+12'±1°15'] ⁴	
Castor	+23'±1° [+18'±1°] ⁵	
King pin inclination	—	
Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+0.2±2.0 ⁶
Camber	-1°1'+30'-1° ⁷	

Torque wrench settings Fiesta 1.1 & Van 1989 to 1994

Cylinder head - stage 1	Nm	30
- stage 2	Nm	+ 90°
Cylinder head - stage 3	Nm	+ 90°
- stage 4	Nm	—
Big-end bearings	Nm	4 + 90°
Main bearings	Nm	88 to 102
Clutch cover	Nm	24 to 35
Flywheel [driveplate]	Nm	64 to 70
Front hubs	Nm	205 to 235
Rear hubs	Nm	250 to 290
Wheel nuts / bolts	Nm	100
Spark plugs	Nm	14 to 20

Capacities Fiesta 1.1 & Van 1989 to 1994

Engine oil & filter	litres	3.25
Gearbox - 4-speed [5-speed]	litres	3.1
Automatic transmission - refill	litres	3.5
Final drive	litres	WT
Cooling system	litres	7.1
Fuel tank	litres	42

Notes and Illustrations

¹Also: GUD HCS 40kW 15.05

²155/70x13: 2.0 / 1.8

³90 ▶: -2.0±1.0


⁴90 ▶: -8'±1°20'. S: +22'±1°15'. Van: -3'±1°20'. 92 ▶ -9'±1°20'. Van: -6'±1°20'

⁵90 ▶: +53'±1°15'. S: +36'±1°. Van: +51'±1°15'. 92 ▶ +52'±1°15'. Van: +53'±1°15'


⁶S: +0.5±2.0. 4.90 ▶: +2.3±2.0

⁷4.90 ▶: -1°+30'-1°

1: Idle speed 2: CO / Mixture

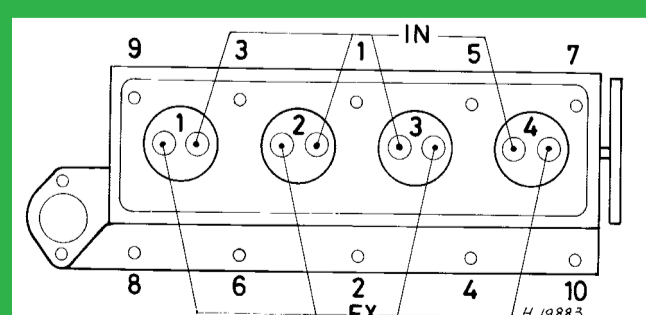

1119 cm³

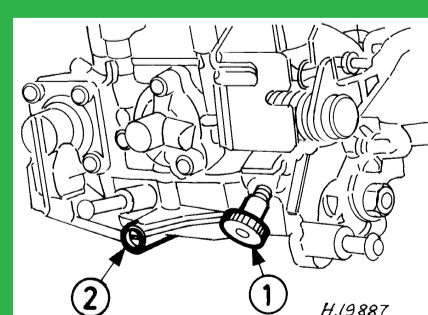

Weber TLDM