

Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------



Automotive Technical DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system Toledo 1.8i & CAT 1991 to 1995

Type		RP SOHC 65kW
Capacity (cm ³) / number of cylinders		1781 / 4
Compression ratio / pressure	bar	9.0 / ≥7.0
Oil pressure	bar	[2.0]
Oil temperature	°C	80
Valve clearance - inlet	mm	0: Hyd.
- exhaust	mm	0: Hyd.
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	85
Radiator cap pressure	bar	1.2 to 1.5

Fuel system Toledo 1.8i & CAT 1991 to 1995

Idle speed - manual [auto]	rpm	750 to 1000 N/A
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	≤0.5 [≤0.3]
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO ₂ @ idle speed [3000 rpm] - see page VI	%	—
O ₂ @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Bosch
Type / ref		Mono-Jetronic
Main jet / needle		—
Injection pressure	bar	—
Pump pressure	bar	0.8 to 1.2
Octane rating	RON	91[E 91 RON] ¹

Ignition system Toledo 1.8i & CAT 1991 to 1995

Type		Computerized
Ignition coil		Bosch
Primary resistance	ohms	0.52 to 0.76
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Bosch
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Clockwise
Ignition timing - basic [static	° Crankshaft @ rpm	6±1 BTDC @ Idle
V = Vacuum NV = No Vacuum		NV
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	0 to 2 @ 1200
	° Crankshaft @ rpm	13 to 17 @ 3000
	° Crankshaft @ rpm	27 to 31 @ 6000
Vacuum range check	mbar	100 to 260
Maximum vacuum advance	° Crankshaft	10 to 14
Spark plugs		NGK/Bosch
Type		BUR6ET / W7LTCR
Electrode gap	mm	0.7 to 0.9 / 0.9 to 1.1

Electrical system Toledo 1.8i & CAT 1991 to 1995

Battery	V / CC / RC	12 / 220 / 40, 45Ah
Alternator voltage / full load current / engine rpm		12.5 to 14.5 / 65, 90 / 3000
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gear Toledo 1.8i & CAT 1991 to 1995

Brakes -		
Front (min. friction material thickness)	mm	7.0 with backing
Rear (min. friction material thickness)	mm	2.5
Tyres		
Saloon	Size	175/70x13: 185/60x14:195/50x15
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	2.1 / 1.8
- Estate / Van	bar	—
Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	0±1.0
Camber		-30'±20'
Castor		+1°30'±30'
King pin inclination		—
Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	20'±10'
Camber		-1°30'±10'

Torque wrench settings Toledo 1.8i & CAT 1991 to 1995


Cylinder head - stage 1	Nm	40
- stage 2	Nm	60
- stage 3	Nm	+ 90°
- stage 4	Nm	+ 90°
Big-end bearings	Nm	30 + 90°
Main bearings	Nm	65
Clutch cover	Nm	20
Flywheel [driveplate]	Nm	60 + 90° N
Front hubs	Nm	260
Rear hubs	Nm	WSM
Wheel nuts / bolts	Nm	110
Spark plugs	Nm	25

Capacities Toledo 1.8i & CAT 1991 to 1995


Engine oil & filter	litres	3.8
Gearbox - 4-speed [5-speed]	litres	2.0
Automatic transmission - refill	litres	—
Final drive	litres	WT
Cooling system	litres	6.2
Fuel tank	litres	55

Notes and Illustrations

¹CAT: [U]

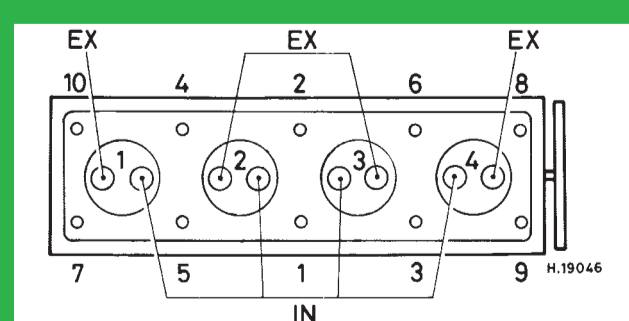

1781 cm³, 8V

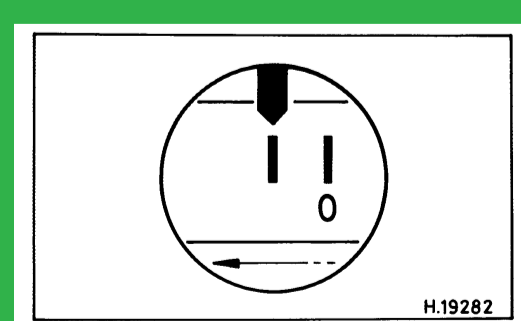

1781 cm³, 8V