



(TIP)
As a starting point, go into the sound card parameters and set "LINE OUT" half open, and set "LINE IN" half open.
DRAKE TR7 to PC sound card configured for PSK31 operation. Receive AF is extracted at the External Speaker port.