


# KENWOOD TS-440S

## EXPANDED RF M/C

1. Disconnect the Power and antenna.
2. Remove the top and bottom covers from the radio.
3. Remove the Countersunk screws that secure the front panel to the chassis. There are two on each side
4. Gently pull the front panel forwards.
5. Remove the 5 small round head screws that secure the shield plate to the front panel. There are 2 on top and 3 on the bottom.
6. Remove Diode D80. D80 is located in the corner near Connector 54.
7. Cut Diode 66 for 10 Hz resolution. See page 24 of the instruction manual.
8. Reassemble the radio.
9. RESET the CPU.

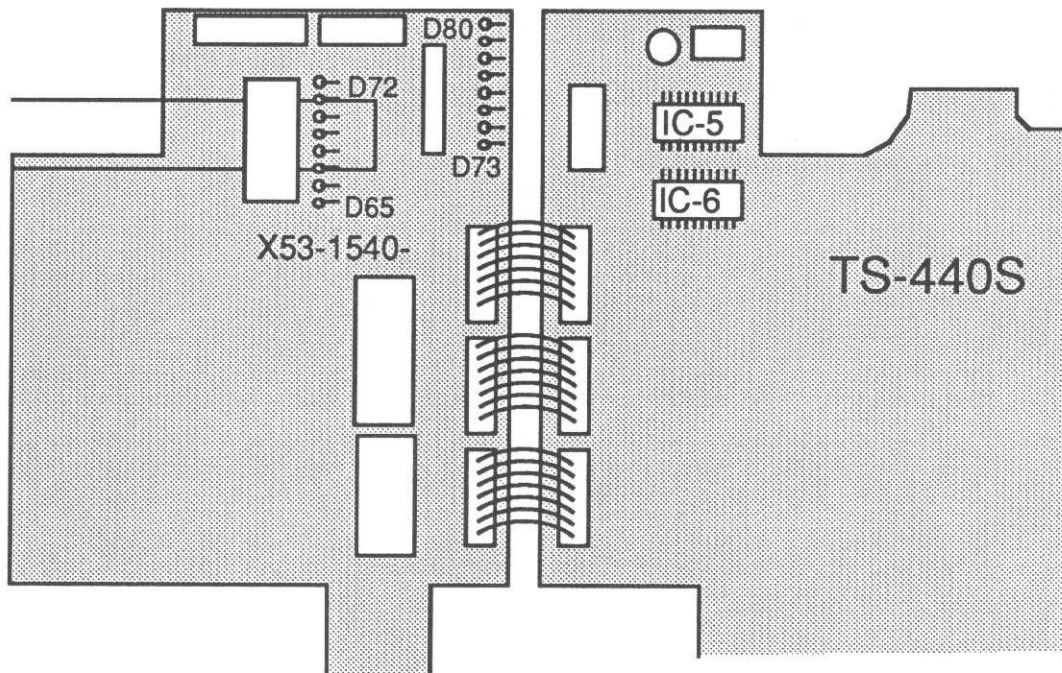

RESET CPU: Press and hold [A=B] and turn power on.



Caution

These modifications have not been tested. The Author, Publisher and all other parties takes NO responsibility or liability for any damage or violation resulting from these modifications. Performing any modification may be a Violation of FCC Rules and will void the warranty of the radio. Use of any modified radio may be a violation of FCC rules. If you have any doubts, DO NOT PERFORM THIS MODIFICATION.

© 1991 artsci inc. all rights reserved. (818) 843-4080 Fax: (818) 846-2298