

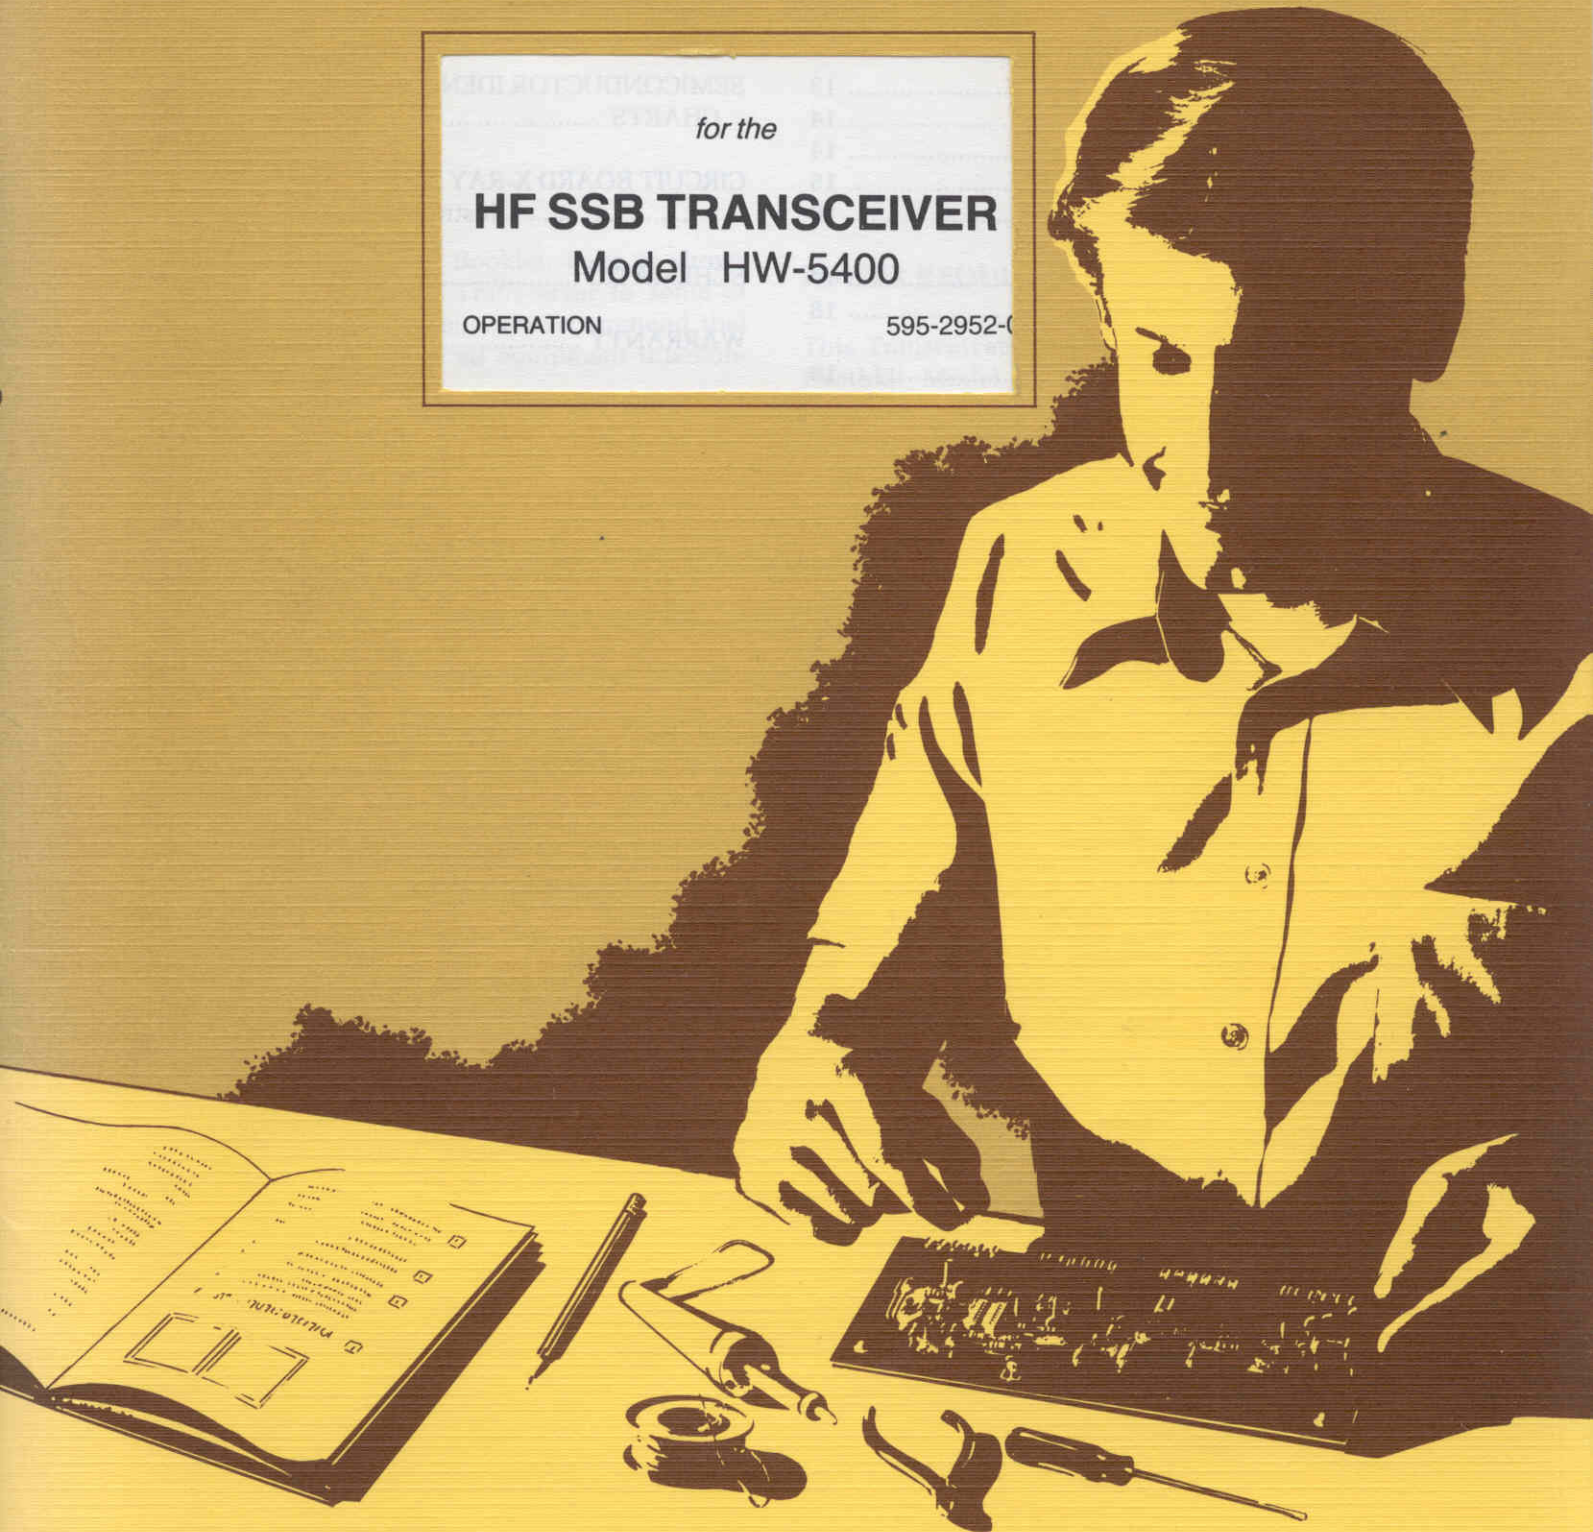
HEATHKIT[®] MANUAL

for the

HF SSB TRANSCEIVER Model HW-5400

OPERATION

595-2952-0



HEATH COMPANY • BENTON HARBOR, MICHIGAN

HEATH COMPANY PHONE DIRECTORY

The following telephone numbers are direct lines to the departments listed:

Kit orders and delivery information (616) 982-3411
Credit (616) 982-3561
Replacement Parts (616) 982-3571

Technical Assistance Phone Numbers

8:00 A.M. to 12 P.M. and 1:00 P.M. to 4:30 P.M., EST, Weekdays Only
R/C, Audio, and Electronic Organs (616) 982-3310
Amateur Radio (616) 982-3296
Test Equipment, Weather Instruments and
Home Clocks (616) 982-3315
Television (616) 982-3307
Aircraft, Marine, Security, Scanners, Automotive,
Appliances and General Products (616) 982-3496
Computers — Hardware (616) 982-3309
Computers — Software:
Operating Systems, Languages, Utilities (616) 982-3860
Application Programs (616) 982-3884
Heath Craft Wood Works (616) 982-3423



YOUR HEATHKIT 90-DAY LIMITED WARRANTY

Consumer Protection Plan for Heathkit Consumer Products

Welcome to the Heath family. We believe you will enjoy assembling your kit and will be pleased with its performance. Please read this Consumer Protection Plan carefully. It is a "LIMITED WARRANTY" as defined in the U.S. Consumer Product Warranty and Federal Trade Commission Improvement Act. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Heath's Responsibility

PARTS — Replacements for factory defective parts will be supplied free for 90 days from date of purchase. Replacement parts are warranted for the remaining portion of the original warranty period. You can obtain warranty parts direct from Heath Company by writing or telephoning us at (616) 982-3571. And we will pay shipping charges to get those parts to you . . . anywhere in the world.

SERVICE LABOR — For a period of 90 days from the date of purchase, any malfunction caused by defective parts or error in design will be corrected at no charge to you. You must deliver the unit at your expense to the Heath factory, any Heathkit Electronic Center (units of Veritechnology Electronics Corporation), or any of our authorized overseas distributors.

TECHNICAL CONSULTATION — You will receive free consultation on any problem you might encounter in the assembly or use of your Heathkit product. Just drop us a line or give us a call. Sorry, we cannot accept collect calls.

NOT COVERED — The correction of assembly errors, adjustments, calibration, and damage due to misuse, abuse, or negligence are not covered by the warranty. Use of corrosive solder and/or the unauthorized modification of the product or of any furnished component, will void this warranty in its entirety. This warranty does not include reimbursement for inconvenience, loss of use, customer assembly, set-up time, or unauthorized service.

This warranty covers only Heath products and is not extended to other equipment or components that a customer uses in conjunction with our products.

SUCH REPAIR AND REPLACEMENT SHALL BE THE SOLE REMEDY OF THE CUSTOMER AND THERE SHALL BE NO LIABILITY ON THE PART OF HEATH FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO ANY LOSS OF BUSINESS OR PROFITS, WHETHER OR NOT FORSEEABLE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Owner's Responsibility

EFFECTIVE WARRANTY DATE — Warranty begins on the date of first consumer purchase. You must supply a copy of your proof of purchase when you request warranty service or parts.

ASSEMBLY — Before seeking warranty service, you should complete the assembly by carefully following the manual instructions. Heathkit service agencies cannot complete assembly and adjustments that are customer's responsibility.

ACCESSORY EQUIPMENT — Performance malfunctions involving other non-Heath accessory equipment, (antennas, audio components, computer peripherals and software, etc.) are not covered by this warranty and are the owner's responsibility.

SHIPPING UNITS — Follow the packing instructions published in the assembly manuals. Damage due to inadequate packing cannot be repaired under warranty.

If you are not satisfied with our service (warranty or otherwise) or our products, write directly to our Director of Customer Service, Heath Company, Benton Harbor MI 49022. He will make certain your problems receive immediate, personal attention.

Heathkit® Manual

for the

HF SSB TRANSCEIVER

Model HW-5400

OPERATION

595-2952-02

HEATH COMPANY
BENTON HARBOR, MICHIGAN 49022

Copyright © 1983
Heath Company
All Rights Reserved
Printed in the United States of America

TABLE OF CONTENTS

INSTALLATION	3	REALIGNMENT	37
OPERATION	9	SPECIFICATIONS	45
Front Panel Controls and Connectors	9	CIRCUIT DESCRIPTION	49
Rear Panel Controls and Connectors	13	SEMICONDUCTOR IDENTIFICATION CHARTS	63
Internal Controls	14	CIRCUIT BOARD X-RAY VIEWS Illustration Booklet, Pages 8-13	
Initial Actions	14	SCHEMATIC	(fold-in)
Receiving	15	WARRANTY	Inside front cover
Transmitting	16	CUSTOMER SERVICE	Inside rear cover
Using Split-Frequency Operation	17		
Using the Keypad Accessory	18		
IN CASE OF DIFFICULTY	19		
Visual Tests	19		
Troubleshooting Charts	21		

INSTALLATION

Pictorial 18-1 (Illustration Booklet, Page 1) shows you how to connect your Transceiver to some of your other station equipment. We recommend that you use shielded cable for all equipment interconnections.

LOCATION

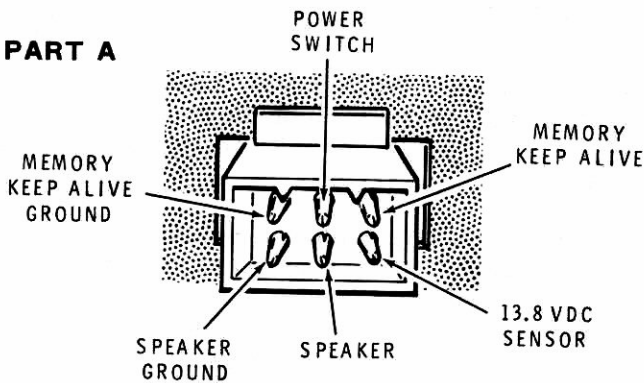
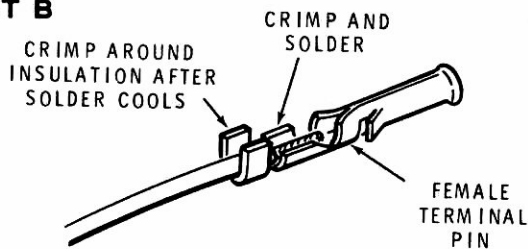
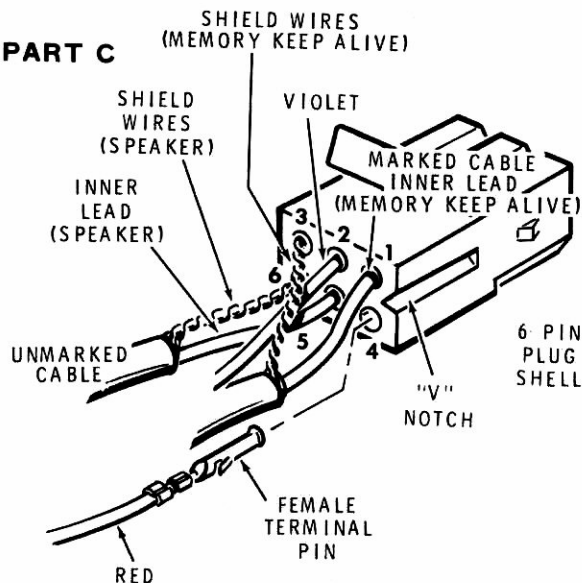
Carefully choose an operating location for the Transceiver so air can circulate freely around and through the cabinet. Do not place any books, magazines, or equipment under or on top of the cabinet. This could impede the free flow of air.

The location should also be dry and cool, and away from direct sunlight. Avoid extremes of heat and humidity.

POWER REQUIREMENTS

This Transceiver was designed to be used with the Heathkit Model HWA-5400-1 AC Power Supply/Speaker/Digital Clock. If you use any other power supply to power your Transceiver, be sure it can supply 13.8 VDC at 20 amperes. Be sure to use an acceptable fuse (not supplied) in the power cable.

NOTE: The following steps show you how to install the large spring connectors and the 4-pin socket shell on the free ends of the main power wires coming from the Model HWA-5400-1 Power Supply/Speaker/Digital Clock. If you use some other source of power, the wire colors called out may not match the colors of your wires.

PART A**PART B****PART C****Detail 18-1B****ACCESSORY SOCKET**

The accessory socket contains connections for a speaker, power supply sense voltage, and a memory keep-alive supply.

NOTE: The following steps show you how to install female terminal pins and the 6-pin plug shell on the free ends of the 6-wire cable coming from the Model HWA-5400-1 Power Supply/Speaker/Digital Clock. If you use a different power source, the wire colors called out may not match the colors of your wires.

Detail 18-1B Part A shows the pinouts for the accessory socket on the back of the Transceiver.

Refer to Detail 18-1B and use the following procedure to install female terminal pins and a 6-pin plug shell on the free ends of the wires coming from your Power Supply:

1. Refer to Part B of the Detail and install a female terminal pin on the end of each wire.
2. Position the 6-pin plug shell as shown in Part C of the Detail (note the location of the "V" notch in the side of the shell). Then push the female terminal pin on the free end of the red wire (+13.8 VDC sensor) into hole 4 of the shell until it locks in place.
3. Push the female terminal pins on the unmarked shielded cable (speaker) into the holes in the 6-pin plug shell as follows:
 - Inner lead into hole 5.
 - Shield wires into hole 6.
4. Push the female terminal pins on the remaining shielded cable (memory keep alive) and wire into the 6-pin lug shell as follows:

- Inner lead of the marked shielded cable (memory keep alive) into hole 1.
- Violet wire (power switch) into hole 2.
- Shielded wires of the shielded cable (memory keep alive ground) into hole 3.

ANTENNA

Although your Transceiver cannot be damaged by an improper load at the antenna connector, under normal conditions, you should use a proper antenna for best results. Use an antenna and feed line that presents a 50 Ω load with a standing wave ratio (SWR) of less than 2:1 for the best efficiency. NOTE: As the SWR goes up, the protective circuitry in the Transceiver will automatically reduce the power output.

Antennas are available commercially from the Heath Company, and from other sources, or you can construct your own. A discussion of antennas is beyond the scope of this Manual. Refer to one of the several good handbooks on the subject, available from many electronic equipment dealers.

GROUNDING

Connect a good earth ground rod or water pipe ground to the ground post on the rear of the Transceiver. Use the heaviest and shortest connection available.

Before you use a water pipe ground, inspect the connections around your water meter and make sure there are no plastic or rubber hose connections that would interrupt electrical continuity to the water supply line. Install a jumper around any insulating water connections you find. Use heavy copper wire and pipe clamps. It is best to ground all of your equipment to one point at the operating position, and then to ground this point as described above.

KEY CONNECTIONS

In the CW mode, a positive voltage is present at the KEY jack on the rear panel of the Transceiver. If you use a keyer that has specific polarity requirements, be sure to connect the keyer to this jack properly.

MICROPHONE CONNECTIONS

Use a high-impedance microphone equipped with a push-to-talk switch (such as the Heathkit Model HDP-242) with this Transceiver so you can use either PTT or VOX to turn on the transmitter. A 4-pin connector (#432-1100) is available from the Heath Company for this purpose. Refer to Detail 18-1C (Illustration Booklet, Page 2) to install this connector on your microphone cable. If you use a microphone other than the one listed above, and you wish to use VOX, be sure the microphone element is not switched by the PTT switch.

SPEAKER CONNECTIONS

The Heathkit Model HWA-5400-1 AC Power Supply/Speaker/Digital Clock includes a cable to connect to the Accessory connector on the rear of the Transceiver. If you use a different speaker, be sure it has an impedance of 3.2 or 4 ohms.

LINEAR AMPLIFIER CONNECTIONS

Pictorial 18-1 shows the connections for a typical amplifier.

ALC

If your amplifier has an ALC (automatic level control) output provision (negative voltage), connect a cable between the ALC jack on the rear of the Transceiver and the linear amplifier. The ALC bias voltage from the amplifier helps prevent transmitter overloading and "splatter".

Although protective circuitry of this nature is a valuable circuit element, it is not a substitute for proper adjustment of the exciter and its drive level to the amplifier. Be sure to refer to the "Operation" section of this Manual for the proper tune-up procedure.

Antenna Relay

Many amplifiers have an internal transmit-receive relay which is activated when the relay coil circuit is grounded. Heath amplifiers are of this type. This Transceiver has an internal relay to operate the transmit-receive relay in a linear amplifier. You can use a shielded cable, connected between the Relay jack on the rear of the Transceiver and the linear amplifier, for this grounding connection.

NOTE: Be sure the Relay On/Off switch on the rear panel of the Transceiver is at On.

This completes the "Installation" of your Transceiver. Proceed to the "Operation" section of this Manual.

[The body of the page contains extremely faint, illegible text, likely bleed-through from the reverse side of the document. The text is too light to transcribe accurately.]

OPERATION

NOTE: You must have an amateur radio operator's license and a station license before you place the transmitter section of this Transceiver on the air. You can obtain information about licensing and amateur frequencies from the Federal Communications Commission as well as from many other sources.

Operation of this Transceiver has been simplified as much as possible so you can make rapid adjustments. Once you make the initial adjustments, it should not be necessary to readjust many of the controls. Read the following information carefully. Good operating techniques will provide good clean signals and long trouble-free life from this Transceiver.

FRONT PANEL CONTROLS AND CONNECTORS

Refer to Pictorial 19-1 (Illustration Booklet, Page 3) for the locations of the following front panel controls and connectors.

KEYPAD PUSHBUTTONS (accessory)

Allow you to directly access a frequency within a particular band. Refer to "Using the Keypad Accessory" (see Page 18) for more information.

DISPLAY

Displays the operating frequency to the nearest 50 Hz. Also indicates USB, LSB, CW, and split operation. During split operation, the display shows the operating frequencies of the transmitter and the re-

ceiver. The display also indicates when you have the transmitter set to a frequency that is outside the amateur band.

SYMBOLS:

- ← Out-of-band transmit frequency indicator.
- Split operation indicator.
- M Split-memory access.
- U Upper sideband mode indicator.
- L Lower sideband mode indicator.
- C CW mode indicator (either wide or narrow).
- Transmit indicator.

METER

In the receive mode, the meter always indicates the strength of the incoming signal in S units.

In the transmit mode, the meter always indicates ALC.

VOX GAIN*

Adjusts the input level at which the voice-controlled relay circuits will operate. NOTE: VOX is defeated when the PTT/VOX pushbutton is in its released position.

ANTI VOX*

Adjusts the VOX circuits so a received signal from the speaker will not feed back into the microphone and key the transmitter.

VOX DELAY*

Sets the hold-in time of the transmit cycle in the VOX or CW modes.

SIDE TONE*

Controls the loudness of the sidetone signal when you are transmitting CW (or when the REC/TUNE pushbutton is depressed).

D→M

Copies the frequency shown on the display into memory. Any frequency that may already be in memory is lost.

D⇐M

Exchanges the frequency shown on the display with the frequency stored in memory. NOTE: After a power interruption, pressing this pushbutton causes the frequency to alternate between the upper and lower edges of the band that you have selected.

SPLIT

Allows you to transmit and receive on different frequencies. Refer to "Using Split-Frequency Operation" on Page 17 for more information.

REC/TUNE

Locks the Transceiver in the tune (CW) mode. You will hear a CW sidetone (if you have it turned up so you can hear it). Release this pushbutton to its out position to return to the receive mode. NOTE: This pushbutton has no effect when the Mode switch is at NORM or REV.

PTT/VOX

Selects either PTT (push-to-talk) or VOX control of the transmitter when you are using an SSB mode of operation.

When this pushbutton is in its released (or out) position, you must use the push-to-talk switch on the microphone to key the transmitter. When this pushbutton is in its depressed (or in) position, you can key the transmitter by simply speaking into the microphone, or by using the PTT switch.

*These controls are located under a small access door in the upper right-hand corner of the front panel. Push in on the top edge of the door to open it.

FAST/SLOW AGC

Selects fast or slow AGC action.

When this pushbutton is in its released (or out) position, fast AGC is activated. When this pushbutton is in its depressed (or in) position, slow AGC is activated.

PHONE

Allows you to use low-impedance headphones for private listening. Automatically disconnects the speaker.

MIC

Allows you to connect a high-impedance microphone. The mating connector (#432-1100) is available from the Heath Company. Refer to the "Installation" section of this Manual for the proper connections.

MODE

Selects the mode of operation.

CW-N: Same as CW-W, except it selects narrow CW (which uses a narrow CW active filter).

CW-W: Selects wide CW, USB mode, and uses the regular SSB filter. The CW sidetone oscillator is enabled, but the microphone input is inhibited. You can only turn the transmitter on by connecting a key to the KEY jack on the rear panel or by pressing the TUNE pushbutton. NOTE: If you press the microphone PTT switch in this mode, the Transceiver will change to transmit but you will have to close the CW key to obtain any

output. (This disables the break-in feature and allows you to keep the Transceiver in the transmit mode when you use CW.)

NORM: Selects single sideband operation and uses the regular SSB filter. Microphone audio input is active and CW operation is inhibited. NOTE: When you use this mode, lower sideband is automatically selected for 80 and 40 meters; upper sideband is automatically selected for the other six bands.

REV: Same as NORM, except that it selects the opposite sideband on each band.

MIC/CW GAIN

Sets the output level of the transmitter.

The small knob adjusts the audio drive to the transmitter in the NORM or REV modes (this control is disabled in the CW modes).

The large knob adjusts the transmitter output to the desired level in the CW modes (this control is disabled in the SSB modes). Full clockwise is maximum power output (100 watts nominal).

MAIN TUNING

Manually adjusts the frequency up or down in 50 Hz steps (approximately 1.25 kHz per revolution). Use the metal insert to change the frequency in 1 kHz increments (approximately 25 kHz per revolution). NOTE: When you use the metal insert, the last two digits of the display will blank and will not change (when you remove your finger, the last two digits will be the same as they were before you touched the insert).

AF/RF GAIN

Adjusts the audio and RF gain of the receiver.

The small knob turns on the power to the Transceiver and controls the audio level of the received signal. The volume increases with clockwise rotation of this control.

The large knob sets the RF attenuation of the RF signal at the front end of the receiver. Clockwise rotation increases the receiver sensitivity. Full clockwise is the normal setting for this control. Turn the control counterclockwise to reduce sensitivity when exceptionally strong signals are present, or reduce adjacent-channel interference.

RIT/SHIFT

Allows you to vary the receiver frequency and the IF center frequency to reduce interference.

The small knob provides receiver incremental tuning. Set the knob to its center (detent) position for no receiver frequency offset. Counterclockwise rotation reduces the frequency while clockwise rotation increases the frequency.

The large knob provides IF shift. Set the knob to its center (detent) position for no IF offset. Counterclockwise rotation lowers the center frequency of the IF filter, while clockwise rotation raises the center frequency.

BAND

Selects the desired amateur band. NOTE: WWV (National Bureau of Standards) at 10 MHz is available on the 30 meter band. The markings on the front panel indicate the amateur band in meters.

REAR PANEL CONTROLS AND CONNECTORS

Refer to Pictorial 19-2 (Illustration Booklet, Page 4) for the locations of the following rear panel controls and connectors.

ANTENNA

Provides a connection for your station antenna.

GND

Provides a station ground connection for the Transceiver.

ALC

Accepts ALC input (negative-going voltage) from a linear amplifier.

RELAY

Allows you to key the relay in a linear amplifier (goes to ground in the transmit mode).

ACCESSORY

Provides a connection for your power supply and speaker.

ON/OFF: Allows you to turn on your power supply from the front of the Transceiver. This pin goes to ground when the switch is in the On position.

GND: Provides a ground connection for a memory keep-alive voltage source.

MEMORY: Allows you to connect a continuous external (5 volt) voltage source to keep the memory contents intact when the Transceiver is turned off.

SPKR GND: Provides a ground connection for an external speaker.

SPKR: Provides a connection for your station speaker (4 ohms).

13.8 VDC SENSOR: Provides a sensor connection for your power supply regulator circuits (for automatic voltage correction at the Transceiver under varying loads).

RELAY ON/OFF

Allows you to disable the linear relay inside the Transceiver for quieter operation when you are not using a linear amplifier.

KEY

Allows you to use a telegraph key or electronic keyer for the CW mode of operation (ground this jack to key the transmitter). NOTE: This is a positive key line.

13.8 VDC

Provides a connection for your 13.8-volt DC power supply (has two positive (+) and two negative (-) terminals).

INTERNAL CONTROLS

Refer to Pictorial 19-3 (Illustration Booklet, Page 4) for the locations of the following internal controls.

NOTE: Only those controls that you may wish to readjust during the normal operation of this Transceiver are explained here. Refer to the "Realignment" section of this Manual for the other internal controls.

ZERO

Allows you to set the S-meter to zero when no signal is being received.

SENS

Allows you to set the S-meter sensitivity.

SPECIAL SYMBOLS

Allows you to set the intensity of the special symbols on the left side of the display to high, medium, or off.

- | | |
|------|--|
| HI: | Same intensity as the frequency display. |
| MED: | Less intensity than the frequency display. |
| OFF: | No special symbols. |

INITIAL ACTIONS

NOTE: Once you adjust your Transceiver controls for either SSB or CW operation, all that is necessary to place your Transceiver on the air is to turn the Transceiver on. Other than selecting your frequency, no other action is required.

Before you attempt to use your Transceiver, check to make sure you have made all of the following connections:

1. An antenna for the band you intend to use should be connected to the Antenna jack on the rear panel.
2. A 3.2-ohm or 4-ohm speaker should be connected to the SPKR pins on the Accessory socket on the rear panel, or headphones should be plugged into the Phone jack on the front panel.
3. The Model HWA-5400-1 Power Supply or equivalent should be connected to the 13.8 VDC socket on the rear panel.
4. For best results, the Transceiver GND post should be connected to a good earth ground.

5. If you are using a linear amplifier:
 - A. You should connect the ALC output of the amplifier to the ALC jack on the rear panel of the Transceiver.
 - B. If the amplifier's transmit/receive relay is the type that is activated by grounding the relay coil, connect the amplifier's relay coil connection to the RELAY jack on the rear panel of the Transceiver.
 - C. Make sure the RELAY ON/OFF switch is at ON.
6. Preset the front panel controls and switches as follows (CW means fully clockwise, CCW means fully counterclockwise):

MODE — NORM.

MIC GAIN — CCW.
 CW GAIN — CCW.
 REC/TUNE — Released (out).
 PTT/VOX — PTT.
 AF GAIN — CCW to OFF.
 RF GAIN — CW.
 RIT — Center of rotation (detent).
 IF SHIFT — Center of rotation (detent).
 BAND — Desired band.

NOTE: The settings of the other controls and switches are not important at this time.

RECEIVING

The receiver in this Transceiver is broad banded and requires no preselector tuning. Use an antenna designed for a 50 ohm impedance, or use an antenna coupler for matching the antenna's impedance to 50 ohms.

1. Check the connections in "Initial Actions" on Page 14.
2. Turn the power supply on, if this has not already been done. Then use the AF GAIN control to turn on the Transceiver. Adjust this control for the desired audio output.
3. If you intend to use VOX operation, depress the PTT/VOX pushbutton. Set your station microphone in the position it will occupy during normal operation, and tune in a strong station. The receiver may cycle on and off with voice peaks of a strong station. Turn the ANTI VOX control (refer to Pictorial 19-1) clockwise until the cycling action ceases. Do not advance the control beyond this point.
4. You may adjust the AGC switch to a different setting, but many SSB operators prefer SLOW. CW operators may prefer FAST.
5. If you desire, use the RIT control to fine tune a station.

TRANSMITTING

The power amplifier in this Transceiver is designed for service in any mode. For best performance, you must keep the vents on the top and bottom of the Transceiver free of restrictions.

SSB TRANSMISSION

1. Check the connections in "Initial Actions" on Page 14.
2. Turn the MODE switch to NORM (if you intend to use the conventional sideband for the band you select) or to REV (if you intend to use the opposite sideband). The display will indicate the sideband.
3. Turn the BAND switch to the desired band.
4. For PTT (push-to-talk), use the switch on the microphone to operate the transmit/receive switch.
5. For VOX operation, advance the VOX GAIN control until the transmitter keys with normal speech.
6. For VOX operation, advance the VOX DELAY control further until the transmitter holds in for the desired length of time after you cease talking.
7. Speak into the microphone and advance the MIC GAIN control until the meter kicks up into the ALC scale on voice peaks. CAUTION: Do not advance the control beyond this point because it will not increase power output, and may overdrive the power amplifier, which

will result in clipping of voice peaks and cause sideband "splatter".

8. This completes the SSB tune-up procedure; you can now transmit.

CW TRANSMISSION

1. Preset the controls as in "Initial Actions" on Page 14.
2. Turn the MODE switch to the desired CW mode (wide or narrow).
3. Be sure a key is connected to the KEY jack on the rear panel.
4. Adjust the VOX DELAY control (see Pictorial 19-1) for the desired hold-in time.
5. Adjust the SIDE TONE control (see Pictorial 19-1) for the desired volume with keying (or Tune).
6. Adjust the CW GAIN control for the desired output (between 40 and 60 on the meter).
7. This completes the CW tune-up procedure.

LINEAR AMPLIFIER

If you use an amplifier with this Transceiver, DO NOT advance the Transceiver's gain beyond the point where amplifier output ceases to increase with rotation of the CW GAIN control.

USING SPLIT-FREQUENCY OPERATION

1. Use the MAIN TUNING knob to select the desired transmitter frequency. Do not push the SPLIT pushbutton yet when you do this.
2. Push the D→M pushbutton to copy the display (transmitter) frequency into memory.
3. Use the MAIN TUNING knob to select the desired receiver frequency. DO NOT push the D→M pushbutton after you do this.
4. Push the SPLIT pushbutton. NOTE: Whenever the Transceiver is in the split mode of operation, an indicator (short dash) will light on the left side of the display (unless the special symbols jumper is set to OFF).

After you perform the above steps, the display will indicate the receiver frequency in the receive mode and the transmitter frequency in the transmit mode. NOTE: In the split mode, you can still use the MAIN TUNING to vary the receiver frequency, but the transmitter frequency will remain unchanged.

Now, assume you wish to change the transmitter frequency without affecting the receiver frequency (due

to QRM on your frequency). Use the following procedure to change the transmitter frequency while listening to the station you are communicating with. NOTE: DO NOT push the SPLIT pushbutton again.

1. Push the D⇌M pushbutton. The "M" (memory) indicator on the left side of the display will light. NOTE: The display will change to the current transmitter frequency, but the actual receiver frequency will not change (allowing you to continue listening to the other station).
2. Use the MAIN TUNING to vary the displayed frequency to the desired transmitter frequency.
3. Push the D⇌M pushbutton to exchange the display frequency with the frequency now in memory (the actual receiver frequency).

After you perform the above steps, the display will indicate the receiver frequency (unchanged) in the receive mode, and the new transmitter frequency in the transmit mode. NOTE: You can now use the MAIN TUNING to vary the receiver frequency as described earlier.

USING THE KEYPAD ACCESSORY

Use the following method to select a frequency with the keypad (if you have the Keypad Accessory installed in your Transceiver):

1. Press the ENT (Enter) pushbutton. The most significant digit (next to the mode display) will disappear and a cursor (-) will appear at the bottom segment of this digit.
2. Press a digit pushbutton. Each digit pushbutton will enter that digit into the display at the location of the cursor, which will then move one position to the right.

When the least significant digit is entered, the cursor will disappear and the Transceiver will access the new frequency, if it is within the allowed band limits. If it is not, the band-edge frequency that is nearest to the entered frequency will be accessed instead. If you press the ENT pushbutton instead of a digit pushbutton, the cursor will advance over that digit and leave it unchanged.

IN CASE OF DIFFICULTY

Begin your search for any trouble that occurs after assembly by carefully following the steps listed below under "Visual Tests." After you complete the "Visual Tests," refer to the Troubleshooting Charts. Start with the chart labeled "General Problems" and locate your problem in the left column of this chart. The right col-

umn of the chart shows you which components could be at fault and may give you typical voltage indications on a specific component. This chart may also direct you to another chart that deals with a specific circuit board. Refer to the "Circuit Board X-Ray Views" (Illustration Booklet, Pages 8 thru 13) for the physical locations of parts on the circuit boards.

VISUAL TESTS

1. Recheck the wiring. Trace each lead with a colored pencil on the Pictorial as you check it. It is frequently helpful to have a friend check your work. Someone who is not familiar with the unit may notice something that you have consistently overlooked.
2. About 90% of the kits that are returned to the Heath Company for repair do not function properly due to poor connections and soldering. Therefore, you can eliminate many troubles by reheating all of your connections to make sure they are soldered as described on Page 13 of the Assembly Manual. Be sure there are no solder "bridges" between circuit board foils.
3. Check to be sure all transistors and diodes are in their proper locations. Make sure each lead is connected to the proper point. Make sure that each diode band is positioned above the band printed on the circuit board or as directed in its step.
4. Check electrolytic and tantalum capacitors to be sure their positive (+) or negative (-) mark is at the correct location.
5. Check to be sure that each IC is properly installed, and that the pins are not bent out or under the IC. Also be sure the ICs are installed in their correct locations.

6. Check the values of the parts. Be sure in each step that you wired the correct part into the circuit, as shown in the Pictorial. It would be easy, for example, to install a 22 k Ω (red-red-orange) resistor where a 2200 Ω (red-red-red) resistor should have been installed.
7. Check for bits of solder, wire ends, or other foreign matter which may be lodged in the wiring.
8. Look between each circuit board and the chassis to be sure all leads were cut off short.
9. A review of the "Circuit Description" may also help determine where the trouble is.

If you have still not located the trouble after you complete the "Visual Tests," and a voltmeter is available, check voltage readings against those shown on the

Schematic Diagram. Read "Precautions for Troubleshooting" before you make any measurements. NOTE: All voltage readings were taken with a high input impedance voltmeter. DC voltages and resistances may vary as much as $\pm 20\%$.

PRECAUTIONS FOR TROUBLESHOOTING

Be sure you do not short any terminals to ground when you make voltage measurements. If the probe should slip, for example, and short across components or voltage sources, it is very likely to cause damage to one or more components.

NOTE: In an extreme case where you are unable to resolve a difficulty, refer to the "Customer Service" information inside the rear cover of this Manual. Your Warranty is located inside the front cover.

TROUBLESHOOTING CHARTS

The following charts list the condition and the possible causes of several malfunctions. If a particular part is mentioned as a possible cause, check that part to see if it was correctly installed. Also check the parts connected to it for poor connections. It is also possible, on rare occasions, for a part to be faulty and require replacement.

GENERAL PROBLEMS

CONDITION	POSSIBLE CAUSE OR TEST
Transceiver does not turn on.	<ul style="list-style-type: none"> A. On-Off switch SW3 or wiring. B. See "Filter Circuit Board Problems." C. Relay K1 or wiring. D. Check for less than 16 VDC at red wires on plug P1 (main power plug). If you have more than 16 VDC, check your power supply. E. Check for 13.8 VDC at pin 6 of socket S2 (Accessory socket).
Main relay clicks but Transceiver does not stay on.	<ul style="list-style-type: none"> A. Check for correct voltage from your power supply. B. See "Filter Circuit Board Problems" (overvoltage protection circuits).
No display.	<ul style="list-style-type: none"> A. See "Display Circuit Board Problems."
Display indicates "PLL".	<ul style="list-style-type: none"> A. See "Synthesizer Problems."
Mode switch does not operate.	<ul style="list-style-type: none"> A. See "Controller Circuit Board Problems."

RECEIVER PROBLEMS

CONDITION	POSSIBLE CAUSE OR TEST
Display is normal, but no sound from receiver.	A. See "Audio Circuit Board" chart. B. Accessory plug connections or wiring. C. Phone jack J3 or wiring.
Sound okay, but no meter movement.	A. See "IF Circuit Board" chart. B. Check meter and wiring. C. Check for 9 VDC on display circuit board plug P201 pin 2. D. Check for 3.2 VDC on display circuit board plug P201 pin 1 (in receive).
Sound is okay, meter indicates, but no receiver signals.	A. See "Audio Circuit Board" chart. B. See "BFO Circuit Board" chart. C. See "RF Circuit Board" chart. D. See "Filter Circuit Board" chart. E. Check Band switch installation (and alignment). F. See "ALC Circuit Board" chart.
RF Gain control does not operate.	A. RF Gain control R2A or wiring. B. See "RF Circuit Board" chart.
IF Shift control does not operate.	A. IF Shift control R3A or wiring. B. See "BFO Circuit Board" chart.
RIT control does not operate.	A. RIT control R3B or wiring. B. See "IF Circuit Board" chart. C. See "Controller Circuit Board" chart.
Fast/Slow AGC switch does not operate	A. AGC switch SW3 or wiring. B. See "IF Circuit Board" chart.
No audio with Mode switch at CW-N.	A. See "Audio Circuit Board" chart.

TRANSMITTER PROBLEMS

CONDITION	POSSIBLE CAUSE OR TEST
Receiver okay, but no transmitter carrier.	<ul style="list-style-type: none"> A. See "Audio Circuit Board" chart (balanced modulator). B. See "RF Circuit Board" chart. C. See "Power Amplifier Assembly" chart. D. See "IF Circuit Board" chart.
Transmitter carrier okay, but low output.	<ul style="list-style-type: none"> A. See "ALC Circuit Board" chart (L651). B. See "IF Circuit Board" chart (U1101). C. See "Audio Circuit Board" chart (balanced modulator).
Transmitter carrier okay, but high output.	<ul style="list-style-type: none"> A. See "ALC Circuit Board" chart (Q651). B. See "IF Circuit Board" chart (U1101).
Transmitter and receiver do not operate.	<ul style="list-style-type: none"> A. Refer to "Receiver Problems" chart and troubleshoot receiver first.
VOX does not operate.	<ul style="list-style-type: none"> A. Microphone socket J2 or wiring. B. Microphone wiring. C. See "Audio Circuit Board" chart. D. VOX control R209 or wiring on the display circuit board.
PTT does not operate.	<ul style="list-style-type: none"> A. Microphone socket J2 or wiring. B. Microphone wiring. C. See "Audio Circuit Board" chart (T/R circuit).
No Sidetone.	<ul style="list-style-type: none"> A. See "Audio Circuit Board" chart. B. Sidetone control R213 or wiring on the display circuit board. C. REC/Tune switch SW5 or wiring.
No transmitter audio.	<ul style="list-style-type: none"> A. Microphone socket J2 or wiring. B. Microphone wiring. C. See "Audio Circuit Board" chart. D. Mic Gain control R4B or wiring.
CW Gain control does not operate.	<ul style="list-style-type: none"> A. CW Gain control R4A or wiring. B. See "Audio Circuit Board" chart.
Transmitter does not operate relay in linear amplifier.	<ul style="list-style-type: none"> A. Slide switch SW2 or wiring. B. See "ALC Circuit Board" chart (P651). C. See "Filter Circuit Board" chart.

AUDIO CIRCUIT BOARD

CONDITION (Receive Mode)	POSSIBLE CAUSE OR TEST
No sound.	<p>A. Touch either lead of resistor R1038 with a screwdriver. If you do not hear a hum, check U905.</p> <p>B. Touch either lead of resistor R1004 with a screwdriver. If you do not hear a hum, check U906, D912, Q922 through Q928, or AF Gain control R2B.</p> <p>C. Check U903.</p> <p>D. Wrong value resistor at R1043.</p>
Audio hiss, but no signals.	<p>A. Check U904.</p> <p>B. Use RF probe to check for .1 volt RMS at plug P905 pin 5. If not, see "BFO Circuit Board" chart.</p> <p>C. If voltage at P905 pin 5 is okay, see "IF Circuit Board" chart.</p>
No sound with Mode switch at CW-N.	<p>A. Check for 5 VDC at plug P914 pin 6. If not, see "BFO Circuit Board" chart.</p> <p>B. Check Q926, Q927, or Q928.</p>
No receiver R12 voltage.	<p>A. Check for 0 volts at base of Q917.</p> <p>B. Check for 12.5 volts at base of Q918.</p> <p>C. Check for 12.5 volts at emitter of Q919.</p> <p>D. See "No Transmit T12 Voltage" below.</p>

CONDITION (Transmit Mode)	POSSIBLE CAUSE OR TEST
No transmit audio.	<p>A. Check U901C.</p> <p>B. Check P915 or P908.</p> <p>C. Check Mic Gain control R4B.</p> <p>D. Check P917.</p> <p>E. Check Q902, Q903, or Q901.</p> <p>F. Check for 9 volts at plug P908 pin 3.</p>
VOX does not operate.	<p>A. Check D905, D906, Q909, Q911, or Q912.</p> <p>B. Check microphone connector J2 or wiring.</p> <p>C. Check microphone wiring.</p> <p>D. Check PTT/VOX switch SW4 or wiring.</p> <p>E. Check for 0 volts at plug P913 pin 1.</p> <p>F. Check for 9 volts at plug P914 pin 5.</p> <p>G. Check VOX Gain control R209 or wiring on the display circuit board.</p>
No Sidetone.	<p>A. Check Key jack J1 or wiring.</p> <p>B. Check D911, D912, or Q907.</p> <p>C. Check U901D or U901A.</p> <p>D. Check Side Tone control R213 or wiring on the display circuit board.</p>
Anti-VOX does not operate.	<p>A. Check Anti-VOX control R211 or wiring on the display circuit board.</p> <p>B. Check Q908, D908, or D907.</p>
No transmit T12 voltage.	<p>A. Check Q913 or D909.</p> <p>B. Check for 0 volts at base of Q914.</p> <p>C. Check for 12.5 volts at base of Q915.</p> <p>D. Check for 12.5 volts at emitter of Q916.</p>

AUDIO CIRCUIT BOARD (Cont'd.)

CONDITION (Transmit Mode Cont'd.)	POSSIBLE CAUSE OR TEST (Cont'd.)
VOX delay does not operate.	A. Check Q909 or Q911. B. Check C948 or C947. C. Check VOX Delay control R214 or wiring on the display circuit board.
PTT does not operate.	A. Check microphone connector J2 or wiring. B. Check Q912.
CW Gain control does not operate (CW transmit mode).	A. Check D904 or D903. B. CW Gain control R4A or wiring. C. Check for .2 volt at collector of Q906.
No carrier.	A. Check Q905. B. Check for .1 volt RMS at U902 pin 9. C. Check for .1 volt RMS at emitter of Q904.
No carrier null.	A. Check U902. B. Check Q905.
CONDITION (Miscellaneous)	POSSIBLE CAUSE OR TEST
No +9 volts DC.	A. Check U903. B. Check L904. C. Check D913.
No +12.5 volts DC.	A. Check Q921. B. Check P914 pins 1 and 2.

BFO CIRCUIT BOARD

CONDITION (General)	POSSIBLE CAUSE OR TEST
No signals in the USB or LSB mode.	A. Check for 5 volts RMS at the base of Q804. If voltage is not correct, check items B through H. B. Check L806 or L803. C. Check D808 or D811. D. Check Y801 or Y802. E. Check for 8.5 volts at the collector of Q804 (in LSB mode). F. Check for 8.5 volts at the collector of Q802 (in USB mode). G. Check Q801 or Q803. H. Check for 5 volts at plug P805 pins 1 and 2. If not correct, see "Controller Circuit Board" chart.
No BFO signal.	A. Check for .8 volt RMS at the emitter of Q814 or Q813. B. Check L807 or L802. C. Check for .1 to .2 volt RMS at plug P801 pin 2 or P802 pin 2.

BFO CIRCUIT BOARD (Cont'd.)

CONDITION (Receive mode)	POSSIBLE CAUSE OR TEST
IF Shift does not operate.	A. Check D812. B. Check IF Shift control R3A or wiring. C. Check P804 pin 2.
No +9 volts in a CW mode.	A. Check Q809 or Q811. B. Check D806, D807, or P805. C. Check for 5 volts at plug P805 pin 3 or 4. If voltage is not correct, see "Controller Circuit Board" chart.
No +9 volts in an SSB mode.	A. Check Q805, Q807, or Q806. B. Check D803, D801, or D802. C. See the above condition.
No +9T volts in an SSB mode.	A. Check Q808. B. Check D813 or D804. C. See "No +9 Volts in an SSB Mode".
Cannot center frequency in an SSB mode.	A. Check D812. B. Check control R834. C. See the condition above.
Cannot center frequency in a CW mode.	A. Check D814 or D805. B. Check control R837. C. Check Q812. D. See the condition "No +9 volts in a CW Mode."

IF CIRCUIT BOARD

CONDITION (Receive mode)	POSSIBLE CAUSE OR TEST
AGC does not operate.	A. Check Q1106. B. Check D1101 or D1102. C. Check U1101 D. Check for 3.2 volts DC at U1101 pin 1.
No ALC on the S meter.	A. Check Q1107. B. Check U1101. C. Check P1101. D. See "Display Circuit Board" chart.
RIT control does not operate.	A. Check Q1108 through Q1112. B. Check P1107. C. Check RIT control R3B or wiring.
No IF signal.	A. Check Q1101, Q1103, Q1104, or Q1105. B. Check for .6 volt at base of Q1102. C. Check T1101 through T1104. D. Check P1103 or P1104. E. See "No AGC" above.

IF CIRCUIT BOARD (Cont'd.)

CONDITION (Transmit mode)	POSSIBLE CAUSE OR TEST
No transmitter signal.	<ul style="list-style-type: none"> A. Check Q1103. B. Check T1102 or 1107. C. Check for less than .1 volt RMS at plug P1103. D. Check for .3 volt RMS at plug P1104. E. Check for .1 volt RMS at gate of Q1103. F. Check for 6 volts RMS at drain of Q1103. G. Check U1101. H. See "ALC Circuit Board" chart.
RIT does not center in the transmit mode.	<ul style="list-style-type: none"> A. Check Q1108 or Q1111. B. Check RIT control R3B or wiring.

RF CIRCUIT BOARD

CONDITION (Receive mode)	POSSIBLE CAUSE OR TEST
No receiver signals.	<ul style="list-style-type: none"> A. Check P401 or P407. B. Check Band switch alignment (wafers SW401A, SW401B, and SW401C). C. Check T401. D. Check D401, D402, D403, D407, or D408. E. Check L401, L408, L438, or L439. F. Check for .4 volt RMS at plug P406. If the voltage is not correct, see "Synthesizer Circuit Board" chart. G. Check Q404 or Q405. H. Check RF Gain control R2A or wiring. I. Check D409 or D411. J. Check L441, L442, or L444. K. Check for 3.2 volts at plug P405 pin 2. If voltage is not correct, see "IF Circuit Board" chart (AGC problem). L. Check U401. M. Check D412 or L445. N. Check Q411.
No receiver signal on only one band.	<ul style="list-style-type: none"> A. Check Band switch and its corresponding filters. B. Check bandpass filter alignment. C. See "Controller Circuit Board" chart. D. Check for .4 volt RMS at plug P406. If voltage is not correct, see "Synthesizer Circuit Board" chart. E. See "Filter Circuit Board" chart.
IF trap does not work.	<ul style="list-style-type: none"> A. Check C407, C406, or C405. B. Check L404 or L405.

RF CIRCUIT BOARD

CONDITION (Transmit mode)	POSSIBLE CAUSE OR TEST
No transmit signal.	<p>A. Troubleshoot receiver first. B. Check U402. C. Check for .3 volt RMS at plug P408 pin 5. D. Check for .4 volt RMS on T403. E. Check for .25 volt RMS at base of Q402. F. Check for .3 volt RMS at emitter of Q401. G. Check L438 or L406. H. Check D404 or D408. I. Check for 1.5 volt DC at base of Q403 (transmitter keyed). J. Check Q412, D405, or D406. K. Check for 4 volts RMS or greater at plug P402 pin 1. L. Check T402 or wiring.</p>
Cannot key transmitter in a CW mode.	<p>A. Check Q402, Q406, or Q407. B. See "Controller Circuit Board" chart. C. Check D405. D. Check L445.</p>
Cannot key the transmitter in an SSB mode.	<p>A. Check Q409. B. Check D427 or D405. C. Check Q412.</p>

FILTER CIRCUIT BOARD

CONDITION	POSSIBLE CAUSE OR TEST
No receive or transmit signal.	<p>A. Check Band switch and wiring. B. Check each low-pass filter. C. Check for 0 volts DC at plug P554 pin 3 (receive mode). D. Check K551. E. Check socket S1202 on the power amplifier circuit board.</p>
No + 10 volts DC at plug P553 pin 2.	<p>A. Check Q555 or Q556. B. Check D555. C. Check plug P402 pin 1. D. Check for 13.8 volts DC at plug P553 pin 1.</p>
Relay K1 does not close.	<p>A. Check Q551 or Q552. B. Check D552. C. Check for 16 volts DC or less at plug P551 pin 2. D. Check relay K1 or wiring.</p>
No power amplifier bias voltage.	<p>A. Check Q554 or Q553. B. Check D554. C. Check for 12.5 volts DC at plug P553 pin 3 (transmit mode). D. Check feedthrough capacitor C1225 on the power amplifier assembly.</p>
Cannot key the linear in the transmit mode.	<p>A. Check slide switch SW2 or wiring. B. Check for 0 ohms at plug P551 pin 5 (transmit mode). C. Check K552. D. Check socket S653 on the ALC circuit board.</p>

POWER AMPLIFIER ASSEMBLY

CONDITION	POSSIBLE CAUSE OR TEST
No power output.	<p>A. Check for .68 volt DC on bases of Q1201 and Q1202. If this voltage is not correct, see "No Bias" below.</p> <p>B. Check T1201, T1202, T1203, or T1204.</p> <p>C. Check for .68 volt DC on bases of Q1203 and Q1204. If this voltage is not correct, see "No Bias" below.</p> <p>D. Check for .62 volt DC on bases of Q1206 and Q1207. If this voltage is not correct, see "No Bias" below.</p> <p>E. Check for 13.8 volts DC on the collectors of all transistors on the power amplifier circuit board.</p> <p>F. Check all diodes for correct installation.</p>
Low power output on one or more bands.	<p>A. Check causes A through F under "No Power Output" above.</p> <p>B. Check components on the bases of Q1201 through Q1207.</p> <p>C. See "RF Circuit Board" chart.</p> <p>D. See "ALC Circuit Board" chart.</p>
No bias.	<p>A. Check D1201 through D1204.</p> <p>B. Check Q1205.</p> <p>C. See "Filter Circuit Board" chart.</p>

ALC CIRCUIT BOARD

CONDITION	POSSIBLE CAUSE OR TEST
Low power output.	<p>A. Check L651.</p> <p>B. Check Q651, Q653, or Q654.</p> <p>C. Check D651 or D652.</p> <p>D. Check Q652 (high VSWR).</p> <p>E. Check for 3.2 volts DC at plug P651 pin 3 (in transmit mode). If this voltage is not correct, see "IF Circuit Board" chart.</p>
Cannot key linear amplifier in the transmit mode.	<p>A. Make sure socket S653 goes to ground (0 ohms) in the transmit mode. If it does not, see "Filter Circuit Board" chart.</p> <p>B. Check linear to be sure it is the grounded keying type.</p>
No linear ALC.	<p>A. Check linear to be sure it uses a negative-going ALC voltage. If not, consult its manufacturer.</p> <p>B. Check D653 or D654.</p> <p>C. See "Low Power Output" above.</p>

DISPLAY PROBLEMS

CONDITION	POSSIBLE CAUSE OR TEST
Blank display.	A. Check for 20 volts at plug P201 pin 3. B. Check for 5 volts at plug P203 pin 6. C. Check D203. D. Check U202.
Dim display.	A. Check for 20 volts at plug P201 pin 3.
Tuning speed does not change.	A. Check adjustment of control R208. B. Check U203, U205, U206, or D204. C. Check the wire inside the Main Tuning knob to make sure it is making proper contact.
No comma display.	A. Check D201.
No decimal in display.	A. Check D202.
Cannot select a particular band.	A. Check diodes that are associated with the band. (Example: Check D223 and D224 for the 15-meter band.)
Display brightness not uniform from top to bottom.	A. Open filament in the display tube V201.
Mode switch changes mode on the display, but mode does not change.	A. Check U709 on the controller circuit board.
Same segment in each display digit does not light.	A. Exchange U201 and U202. If symptoms change, check U201.
Some digits do not light.	A. Exchange U201 and U202. If symptoms change, check U202. B. Check U203. C. Check U204.

SYNTHESIZER PROBLEMS

NOTE: Before you use the following troubleshooting information, be sure your display circuit board is operating correctly. If it is not operating properly, refer to "Display Problems" before you continue.

Loop 2 (PLL-2) is the easiest of the three phase-locked loops to troubleshoot. This loop is independent from the other loops and involves no frequency mixing. Once you have loop 2 operating, you should troubleshoot loop 1, as it requires a signal from loop 2.

After loops 1 and 2 are operating properly, you can troubleshoot loop 3. This loop requires outputs from VCO's 1 and 2, output from the BFO circuit board, and (on the 20- through 10-meter bands) the 10 MHz signal from the controller circuit board.

The following procedure provides you with some preliminary voltage checks and then leads you through loops 2, 1, and 3, respectively. Make the pre-

liminary tests first, then skip over the parts of the procedure that are not required to troubleshoot your particular problem. If a measurement does not agree with the value specified, or a procedure does not produce the expected results, correct the problem. Then return to the "Realignment" section of this Manual. If a "Check" step asks you to make an adjustment to a coil or a trimmer capacitor that was adjusted previously, make sure that you follow the procedure in the corresponding part of the "Realignment" section of this Manual to make sure it is readjusted correctly.

NOTES:

1. Although it is possible to lock loop 1 while loop 2 is unlocked, and to lock loop 3 while loops 1 and 2 are unlocked, it is important to lock the loops in the order provided.
2. Use the RF probe provided and a VTVM with a high input impedance (10–11 megohms) to take the measurements in this procedure. Your measurements may vary $\pm 20\%$.

Preliminary Checks

CHECK	PROBLEM AREA												
1. Check for 11 volts at pin 7 of U704, U707, or U713.	A. Inverter circuit board.												
2. Check for 9 volts on the lead of the center feedthrough capacitor on the synthesizer circuit board shield.	A. Audio circuit board (U903 or D913).												
3. Check for 11 volts at C314 on the 80-, 40-, and 30-meter bands; 0 volts on the other bands.	A. RF circuit board. B. Q118. C. Q119.												
4. Check for 0 volts at C367 on the 80-, 40-, and 30-meter bands; 11 volts on the other.	A. RF circuit board. B. Q116. C. Q117.												
5. Check for 9 volts at the following points. Be sure to select the band indicated.	A. RF circuit board.												
<table border="0"> <thead> <tr> <th>BAND</th> <th>TEST POINT</th> </tr> </thead> <tbody> <tr> <td>80M</td> <td>C317</td> </tr> <tr> <td>40M</td> <td>C316</td> </tr> <tr> <td>20M</td> <td>C372</td> </tr> <tr> <td>17M</td> <td>C371</td> </tr> <tr> <td>15M</td> <td>C369</td> </tr> </tbody> </table>	BAND	TEST POINT	80M	C317	40M	C316	20M	C372	17M	C371	15M	C369	
BAND	TEST POINT												
80M	C317												
40M	C316												
20M	C372												
17M	C371												
15M	C369												

The above procedure verified that the required DC source and switching voltages are present.

Loop 2 Troubleshooting

NOTE: Observe LED D705 on the controller circuit board to determine whether or not this loop is locked. If this LED stays lit when you adjust coil L102, the loop is not locked.

CHECK	PROBLEM AREA
1. Check for 4.5 volts (RF) at U712 pin 6.	A. U703.
2. Check for 1.8 volts (RF) at U712 pin 3.	A. Q101. B. Q102. C. Q103.
3. Check for a positive pulse at U712 pin 11 as the frequency steps when you turn the Main tuning knob. (Use a logic probe or an oscilloscope to check this.)	A. U701. B. U702. C. U708. D. U711.
4. Exchange U712 and U705. Then try to adjust L102 again for a lock (LED D705 extinguished).	A. If the loop now locks, check IC now at U705.
5. Exchange U713 and U707. Then try adjusting L102 again for a lock (LED D705 extinguished).	A. If the loop now locks, check IC now at U707.
6. If you still cannot lock this loop, recheck the controller and synthesizer circuit boards for proper assembly (no solder bridges, etc.). When loop 2 locks, proceed to the "Realignment" section.	

Loop 1 Troubleshooting

NOTE: Observe LED D703 on the controller circuit board to determine whether or not this loop is locked. If this LED stays lit when you adjust coil L105, the loop is not locked.

CHECK	PROBLEM AREA
1. Check for 1 volt (RF) at ungrounded end of R136.	A. Q104. B. Q105. C. Q106.
2. Check for some RF at the collector of Q707 (changes when you adjust T101 and T102).	A. U101.
3. Check for a positive pulse at U703 pin 11 as the frequency steps when you turn the Main Tuning knob. (Use a logic probe or an oscilloscope to check this.)	A. U701. B. U702. C. U708. D. U711
4. Exchange U703 and U705. Then try to adjust L105 again for a lock (LED D703 extinguished).	A. If the loop now locks, check IC now at U705.
5. Exchange U704 and U707. Then try adjusting L105 again for a lock (LED D703 extinguished).	A. If the loop now locks, check IC now at U707.
6. If you still cannot lock this loop, recheck the controller and synthesizer circuit boards for proper assembly (no solder bridges, etc.). When loop 1 locks, proceed to the "Realignment" section.	

Loop 3 Troubleshooting

NOTE: Observe LED D707 on the controller circuit board to determine whether or not this loop is locked. If this LED stays lit, the loop is not locked.

CHECK	PROBLEM AREA																		
1. Check for 4.5 volts (RF) at plug P107 pin 1.	A. Q718. B. Q719.																		
2. Check for .2 volt (RF) at plug P102 pin 1.	A. BFO circuit board.																		
3. Check for at least .5 volt (RF) at plug P104 pin 1 (be sure the Band switch is at 30).	A. Q303. B. Q304. C. Q305.																		
4. Check for at least .5 volt (RF) at plug P104 pin 1 (be sure the Band switch is at 10).	A. Q354. B. Q355. C. Q356.																		
5. Check for RF voltage at gate 1 of Q111 (be sure the Band switch is at 80). This voltage should change when you adjust T103 and T104. NOTE: The case of transistor Q109 should measure .6 volt.	A. Q109.																		
6. Check for RF voltage at the drain of Q111 (be sure the Band switch is at 80). This voltage should change when you adjust T103 and T104. NOTE: The case of transistor Q111 should measure .6 volt.	A. Q111.																		
7. Try to adjust C175 and C179 as described in the "Realignment" section.	A. Q115																		
8. Check for RF voltage at gate 1 of Q112 on each band.	A. Corresponding bandpass is not being turned on. Check the diodes associated with the inoperative band.																		
9. Check for RF voltage at the drain of Q112.	A. Q112.																		
10. Check for 5 volts (RF) at collector of Q113.	A. Q113.																		
11. Check for 5 volts (RF) at collector of Q708.	A. Q708.																		
12. Check U706 pin 1 for the voltages shown below on each band.	A. RF circuit board.																		
<table border="0"> <thead> <tr> <th>BAND</th> <th>VOLTAGE</th> </tr> </thead> <tbody> <tr> <td>80M</td> <td>0</td> </tr> <tr> <td>40M</td> <td>5</td> </tr> <tr> <td>30M</td> <td>5</td> </tr> <tr> <td>20M</td> <td>0</td> </tr> <tr> <td>17M</td> <td>5</td> </tr> <tr> <td>15M</td> <td>0</td> </tr> <tr> <td>12M</td> <td>0</td> </tr> <tr> <td>10M</td> <td>5</td> </tr> </tbody> </table>	BAND	VOLTAGE	80M	0	40M	5	30M	5	20M	0	17M	5	15M	0	12M	0	10M	5	
BAND	VOLTAGE																		
80M	0																		
40M	5																		
30M	5																		
20M	0																		
17M	5																		
15M	0																		
12M	0																		
10M	5																		
13. Exchange U705 and U712.	A. If the loop still does not lock, check the IC now at U712.																		
14. Exchange U707 and U713.	A. If the loop still does not lock, check the IC now at U713.																		
15. If you still cannot lock this loop, recheck the controller and synthesizer circuit boards for proper assembly (no solder bridges, etc.).																			

INVERTER ASSEMBLY PROBLEMS

CHECK	PROBLEM AREA
1. Check for 12 volts (RF) at U501 pin 3.	A. U501.
2. Check for 13 volts (RF) at collector of Q501.	A. Q501. B. Q502.
3. Check the voltages in the inverter assembly against those shown on the Schematic diagram.	A. Associated diode or capacitor.
4. Disconnect the wires from feedthrough capacitors C514 (20-volt supply) and C515 (12-volt supply) to remove the load from the supplies.	A. If 20-volt supply is still low, check U502. If 12-volt supply is still low, check U503 or L502.

CONTROLLER PROBLEMS

CONDITION	POSSIBLE CAUSE
Main Tuning does not operate.	A. U601. B. Q705. C. Q706.
Main Tuning operates in only one direction.	A. U602. B. Q703. C. Q704.
Loses memory when you turn the Transceiver off.	A. No +5-volt memory backup. B. Q716. C. Q717. D. D711.
One or more phase-locked are unlocked.	A. See "Synthesizer Problems."

REALIGNMENT

Although realignment of your Transceiver is not normally required, you may wish to check the adjustment of specific circuits. The only time you should have to do this is if you ever replace a part or parts in one of the circuits that require adjustment.

Since several of the circuit boards are involved in some of the alignment procedures, the Pictorial numbers will not be called out each time. The circuit boards will be referred to by name and correspond to the following Pictorials:

BFO circuit board	Pictorial 20-1
IF circuit board	Pictorial 20-2
Display circuit board	Pictorial 20-3
Synthesizer circuit board	Pictorial 20-4
Lo VCO assembly	Pictorial 20-5
High VCO assembly	Pictorial 20-6
Controller circuit board	Pictorial 20-7
RF circuit board	Pictorial 20-8
ALC circuit board	Pictorial 20-9

ALIGNMENT PREPARATION

1. Preset the front panel controls and switches as follows. Use this same initial setup for all of the adjustment, unless a step directs you to set a control differently.

MODE — NORM
 MIC GAIN — Fully counterclockwise
 CW GAIN — Fully counterclockwise
 AF GAIN — Fully counterclockwise (until it clicks)
 RF GAIN — Fully clockwise
 RIT — 0 (detent)
 IF SHIFT — 0 (detent)
 BAND — 80
 REC/TUNE button — Released (REC)
 PTT/VOX button — Released (PTT)
 AGC button — Released (FAST)

2. Connect your power supply and speaker to the connectors on the rear panel of the Transceiver.

BFO ALIGNMENT

1. On the BFO circuit board, set LEVEL control R823, SSB control R834, and CW control R837 to the centers of their rotations.

2. On the front panel, make sure the IF SHIFT control is set to the center (detent position) of its rotation.
3. Temporarily unplug the shielded cable from BFO circuit board plug P802.
4. Connect the probe of a frequency counter to plug P802 pin 2.
5. Set the MODE switch to NORM, if this has not already been done.
6. Turn the Transceiver on.
7. Adjust trimmer capacitor C816 until the frequency counter indicates 8.8255 MHz.
8. Turn the MODE switch to REV.
9. Adjust trimmer capacitor C822 until the frequency counter indicates 8.83145 MHz.
10. Connect a microphone to the MIC connector on the front panel. Then use the PTT button on the microphone to key the transmitter. Hold this button down until a step directs you to release it.
11. Adjust SSB control R834 until the frequency counter indicates 8.83145 MHz. Then release the microphone button.
12. Turn the MODE switch to CW(W).
13. Depress the TUNE pushbutton on the front panel.
14. Adjust CW control R837 until the frequency counter indicates 8.8307 MHz. Then release the TUNE pushbutton.
15. Turn the Transceiver off.
16. Disconnect the frequency counter from the BFO circuit board and reconnect the shielded cable to plug P802. Be sure the shield wires in this socket are at plug pin 1.

IF ALIGNMENT

1. Set the MODE switch on the front panel to NORM, if this has not already been done.
2. Set the BAND switch to 80M, if this has not already been done.
3. Locate the shielded test cable that was assembled during the chassis assembly.
4. Unplug socket P802 from the BFO circuit board. Then push the socket on one end of the test cable onto plug P802. Be sure the shield wires in this socket are at plug pin 1.
5. Unplug socket P1102 from the IF circuit board. Then push the socket on the free end of the test cable onto plug P1102. Be sure the shield wires in this socket are at plug pin 1.
6. On the display circuit board, turn ZERO control R203 clockwise until the meter pointer starts to move upscale. Then turn the control counterclockwise until the meter pointer just indicates 0.
7. On the display circuit board, turn SENS control R201 fully counterclockwise.
8. On the BFO circuit board, turn LEVEL control R823 to the center of its rotation.
9. Connect the probe of a frequency counter to plug P802 pin 2. Then adjust trimmer capacitor C816 until the frequency counter indicates 8.83 MHz.

NOTE: As you perform the following adjustments, keep the meter pointer near mid-range. Adjust the display circuit board SENS control (R201) and the BFO circuit board LEVEL control (R823) as necessary to do this.

10. Adjust the following transformers in the order they are listed. Adjust each coil for a maximum indication on the front panel meter. NOTE: If necessary, to keep the meter pointer midrange, unplug the cable from BFO plug P802 and position the cable end near the plug.

Transformer T1101

Transformer T1102

Transformer T1103

Transformer T1104

11. Repeat step 10 until you notice no further improvement on the meter.
12. On the display circuit board, turn the SENS control fully counterclockwise.
13. Reconnect the test cable socket to P802 on the BFO circuit board, if you had to unplug it, and set control R823 to the center of its rotation.
14. On the display circuit board, turn the SENS control for a full-scale meter reading.
15. Unplug the shielded test cable from the BFO and IF circuit boards. Then reconnect the harness cables to these plugs. Be sure the shield wires in these sockets are at plug pins 1.
16. Adjust trimmer capacitor C816 until the frequency counter indicates 8.8255 MHz.
17. Turn the Transceiver off. 8.82855

RIT ADJUSTMENT

1. Be sure the RIT control on the front panel is at the center of its rotation (detent).
2. Set the MODE switch to NORM, if this has not already been done.
3. Set your voltmeter to read +8 volts DC.
4. Turn the Transceiver on.
5. Measure the voltage at IF circuit board plug P1106 pin 1. Remember this voltage.

6. Use your microphone PTT button to key the transmitter.
7. While the transmitter is keyed, adjust RIT CENTER control R1144, on the IF circuit board for the same voltage that you noted above in step 5 (at plug P1106 pin 1).
8. Release the microphone PTT switch.
9. Turn the Transceiver off and disconnect the voltmeter from the IF circuit board.

SYNTHESIZER AND VCO ALIGNMENT

1. Unplug the indicated jumper wire from the controller circuit board.
2. On the front panel, set all of the pushbutton switches to their out (released) positions.
3. Set the BAND switch to 80M, if this has not already been done.
4. Set the MODE switch to NORM, if this has not already been done.
5. Connect the common lead of your voltmeter to a convenient bare chassis ground.
6. Connect your voltmeter probe to test point PLL2 TUNE on the synthesizer circuit board.
7. Turn the MAIN TUNING knob on the front panel for an indication of 4.050.00 on the display.
8. Adjust trimmer capacitor C103 for a +9-volt DC reading. NOTE: If you cannot obtain +9 volts at any setting of trimmer capacitor C103, adjust coil L102 as necessary until you can.
9. Turn the MAIN TUNING knob for an indication of 3.459.95 on the display. Then adjust coil L102 for an indication of +3 to +4 VDC.
10. Repeat steps 7 through 9 until you obtain the correct voltages at each end of the band with no further adjustment. LED D705 on the controller circuit board should be off.
11. Connect the voltmeter probe to PLL1 TUNE.

12. Turn the MAIN TUNING knob for an indication of 4.050.00. Then adjust trimmer capacitor C128 for an indication of +9 VDC. NOTE: If you cannot obtain an indication of +9 volts at any setting of capacitor C128, adjust coil L105 as necessary until you can.
 13. Turn the MAIN TUNING knob for an indication of 3.450.00. Then adjust coil L105 for an indication of +4 to +5 VDC.
 14. Repeat steps 12 and 13 until you obtain the correct voltages with no further adjustment. LED D703 on the controller circuit board should be off.
 15. Disconnect the voltmeter from PLL1 TUNE.
 16. Connect a voltmeter RF probe to the collector (C) of transistor Q107.
 17. Turn the MAIN TUNING knob for an indication of 3.459.95. Then adjust transformers T101 and T102 for a highest meter indication.
 18. Turn the MAIN TUNING knob for an indication of 3.460.00. Then adjust trimmer capacitor C117 for a peak meter indication.
 19. Repeat steps 17 and 18 several times until you notice no further improvement.
 20. Connect the voltmeter RF probe to gate 1 (G1) of transistor Q112.
- NOTE: When you adjust coils L107 and L108 in the following steps, be careful not to exert any downward pressure on the slugs. Also do not turn the slugs more than two turns clockwise. Too much pressure, or turning the slug too far clockwise, could dislodge the slug from the transformer.
21. Turn the MAIN TUNING knob for an indication of 3.500.00. Then adjust transformer T104 and coil L108 for a peak meter indication.
 22. Turn the MAIN TUNING knob for an indication of 4.000.00. Then adjust transformer T103 and coil L107 for a peak meter indication.
 23. Repeat steps 21 and 22 several times until you notice no further improvement.
 24. Tune to the frequency (in steps 21 and 22) that produced the lowest meter reading. Then adjust the **opposite** transformer (T103 or T104) until the meter readings are as close as possible. For example, if 3500.00 produced the lowest meter reading, adjust **T103** until both frequencies produce meter readings that are as close as possible. Do not go back and readjust T104.
 25. Connect the voltmeter RF probe to gate 2 (G2) of transistor Q111.
 26. Turn the BAND switch to 12M. Then adjust trimmer capacitor C175 for a peak meter indication.
 27. Turn the BAND switch to 17M. Then adjust trimmer capacitor C179 for a peak meter indication.
 28. In steps 26 and 27, if trimmer C175 or C179 is at maximum capacitance, adjust transformer T105 slug 1/4 turn clockwise and repeat the two steps. If either trimmer is at minimum capacitance, turn the slug of the T105 1/4 turn counterclockwise and repeat steps 26 and 27.
 29. Turn the BAND switch to 20M.
 30. Connect the voltmeter RF probe to gate 1 (G1) of transistor Q112.
- NOTE: When you adjust coils L109 and L111 in the following steps, be careful not to exert any downward pressure on the slugs. Also do not turn the slugs more than two turns clockwise. Too much pressure, or turning the slug too far clockwise, could dislodge the slug from the coil.
31. Turn the MAIN TUNING knob for an indication of 14.000.00. Then adjust coil L111 for a peak meter indication.
 32. Turn the MAIN TUNING knob for an indication of 14.350.00. Then adjust coil L109 for a peak meter indication.
 33. Repeat steps 31 and 32 several times until you notice no further improvement.
 34. Turn the BAND switch to 10M.

35. Turn the MAIN TUNING knob for an indication of 28.000.00. Then adjust coil L113 for a peak meter indication.
36. Turn the MAIN TUNING knob for an indication of 29.499.95. Then adjust coil L112 for a peak meter indication.
37. Repeat steps 35 and 36 several times until you notice no further improvement.
38. Connect the positive voltmeter probe (not the RF probe) to test point PLL3 TUNE.
39. Turn the BAND switch to 30M and turn the MAIN TUNING knob for an indication of 10.000.00. Then adjust trimmer capacitor C309 (on the low band VCO) for + 7 volts DC.
40. Turn the BAND switch to 40M and turn the MAIN TUNING knob for an indication of 6.950.00. Then adjust trimmer capacitor C302 (on the low band VCO) for + 4 volts DC.
41. Turn the BAND switch to 80M and turn the MAIN TUNING knob for an indication of 3.450.00. Then adjust trimmer capacitor C305 (on the low band VCO) for + 4 volts DC.
42. Turn the MAIN TUNING knob for an indication of 4.050.00 and check to make sure that LED D707 on the controller circuit board is not lit. The voltmeter should indicate less than + 9 volts DC. NOTE: If the indicated voltage exceeds + 9 volts, adjust coil L302 (on the low band VCO) clockwise 1/4 turn and repeat steps 39 through 41.
43. Adjust coil L352 (on the HI VCO) so the core is flush with the top of the coil form. Then turn the core two full turns counterclockwise.
44. Turn the BAND switch to 12M and turn the MAIN TUNING knob for an indication of 24.840.00. Then adjust trimmer capacitor C362 (on the high VCO) for + 4 volts DC.
45. Turn the BAND switch to 10M and turn the MAIN TUNING knob for an indication of 29.750.00, and check to make sure that LED D707 on the controller circuit board is not lit. The voltmeter should indicate less than + 9 volts DC. NOTE: If the indicated voltage exceeds + 9 volts, adjust coil L352 (on the high VCO) 1/4 turn clockwise and repeat steps 44 and 45 again.
46. Turn the BAND switch to 15M and turn the MAIN TUNING knob for an indication of 20.950.00. Then adjust trimmer capacitor C352 (on the high VCO) for + 4 volts DC.
47. Turn the BAND switch to 17M and turn the MAIN TUNING knob for an indication of 18.018.00. Then adjust trimmer capacitor C355 (on the high VCO) for + 4 volts DC.
48. Turn the BAND switch to 20M and turn the MAIN TUNING knob for an indication of 13.950.00. Then adjust trimmer capacitor C358 (on the high VCO) for + 4 volts DC.
49. Reinstall the jumper on the controller circuit board. Then check the display on the front of the Transceiver. It should still be displaying a frequency (not "PLL").
50. Turn the Transceiver off and disconnect the voltmeter.

CONTROLLER ADJUSTMENT

1. Be sure the RIT control is set to the center of its rotation (detent).
2. Connect a frequency counter to the collector (C) of transistor Q702 on the controller circuit board.
3. Turn the Transceiver on.
4. Adjust trimmer capacitor C702 until the frequency counter indicates 8.040000 MHz.
5. Connect the frequency counter to the collector (C) of transistor Q719. Then adjust trimmer capacitor C739 until the frequency counter indicates 10.000000 MHz.
6. Turn the Transceiver off and disconnect the frequency counter.

RF CIRCUIT BOARD ADJUSTMENT

1. Unplug socket P402 from the RF circuit board. Then rotate it and plug it back in so that only the orange wire is connected to its pin (pin 3).
 2. Locate the 47 Ω resistor-socket assembly that you assembled during the chassis assembly. Then push this resistor-socket assembly onto circuit board plug P402 pins 1 and 2.
 3. Connect the voltmeter RF probe to P402 pin 1.
 4. Carefully remove the six screws from the RF circuit board coil shield. Then set the shield and the screws aside temporarily.
- NOTE: In the following steps, you will align the bandpass filters on each of the eight bands. Except for the fact that the filters are different, the procedure for each band is the same.
- A. Set the CW GAIN control on the front panel fully clockwise.
 - B. Start with your voltmeter on its lowest range. Then, as necessary, set the voltmeter to successively higher ranges.
 - C. Set the MODE switch to CW(W).
 - D. Adjust the three stated coils for the given band.
 - E. Adjust the band edge voltage levels until they are equal.
5. Turn the Transceiver off, if this has not already been done. Then unplug the 6-pin accessory socket from the rear panel of the Transceiver. Wait at least 30 seconds; then reconnect the socket. This automatically resets the memory in the Transceiver to each band edge.
 6. Turn the Transceiver on.
 7. Turn the BAND switch to 80M.
 8. Set the Transceiver to 3.500.00 MHz.
 9. Depress the TUNE pushbutton.
 10. Adjust coils L412 and L413 for the highest voltmeter indication.
 11. Release the TUNE pushbutton.
 12. Set the Transceiver to 4.000.00 MHz.
 13. Depress the TUNE pushbutton.
 14. Adjust coil L414 for the maximum voltage indication.
 15. Release the TUNE pushbutton.
 16. Alternate the frequency between 3.500.00 and 4.000.00 and note which frequency produces the lowest indication on the voltmeter. Then set the Transceiver to the frequency that produced the lowest indication.
 17. Adjust coil L413 so you obtain the same voltmeter indication at each band edge. NOTE: You may have to very slightly readjust coils L412 and L414 to arrive at equal voltages. Check the voltages once again to make sure they are equal.
 18. Repeat steps 8 through 17 until you obtain equal voltages at both ends of the band.
- NOTES:
1. You should have an indication of at least 2.5 volts RF at each end of the band in the above steps and in the following steps.
 2. When you adjust the 40 through 12-meter bands in the following steps, be careful not to exert any downward pressure on the slugs. Also do not turn the slugs more than two turns clockwise. Too much pressure, or turning the slug too far clockwise, could dislodge the slug from the coil.
 19. Turn the BAND switch to 40M. Then, in the same manner as outlined in the previous steps, adjust 40-meter bandpass coils L415, L416, and L417.
 20. Turn the BAND switch to 30M. Then, in the same manner, adjust 30-meter bandpass coils L418, L419, and L421.

21. Turn the BAND switch to 20M. Then, in the same manner, adjust 20-meter bandpass coils L422, L423, and L424.
 22. Turn the BAND switch to 17M. Then, in the same manner, adjust 17-meter bandpass coils L425 and L427 (only two coils for this band).
 23. Turn the BAND switch to 15M. Then, in the same manner, adjust 15-meter bandpass coils L428, L429, and L431.
 24. Turn the BAND switch to 12M. Then, in the same manner, adjust 12-meter bandpass coils L432 and L434 (only two coils for this band).
 25. Turn the BAND switch to 10M. Then, in the same manner, adjust 10-meter bandpass coils L435, L436, and L437.
 26. Turn the Transceiver off.
 27. Unplug the 47 Ω resistor-socket assembly and the RF probe from RF circuit board plug P402. Then reconnect socket P402 in its normal position on plug P402.
6. Connect the probe of a frequency counter to plug P802 pin 2. Then adjust trimmer capacitor C816 until the frequency counter indicates 8.83 MHz.
 7. Adjust trimmer capacitor C406 and coil L405, on the RF circuit board, for the best null on the front panel meter.
 8. Turn the Transceiver off.
 9. Unplug the shielded test cable from the BFO and RF circuit boards. Then reconnect sockets P802 and P401 to their corresponding circuit board plugs. Be sure the shield wires in socket P802 are at plug pin 1 and the violet wires in socket P401 are at plug pins 1 and 2.
 10. Adjust trimmer capacitor C816 until the frequency counter indicates 8.82855 MHz.

IF TRAP ADJUSTMENT

1. Unplug socket P802 from the BFO circuit board. Then connect the socket on one end of your shielded test cable onto plug P802. Be sure the shield wires in this socket are at plug pin 1.
 2. Unplug socket P401 from the RF circuit board. Then turn this socket around so that only the two violet wires are making contact with their circuit board pins. NOTE: These two pins are connected together on the circuit board.
 3. Plug the socket at the free end of the shielded test cable, coming from the BFO circuit board, onto plug P401 pins 4 and 5. Be sure the inner lead of the shielded cable in this socket is at plug pin 5.
 4. Turn the Transceiver on.
 5. Set the BAND switch to 40M and set the Transceiver to 7.300.00 MHz.
- ## POWER AND ALC ADJUSTMENT
1. Turn the Transceiver on.
 2. Turn the CW GAIN control on the front panel fully counterclockwise.
 3. Depress the TUNE pushbutton on the front panel.
 4. On the audio circuit board, adjust BIAS control R971 for an indication of exactly zero (0) on the front panel meter.
 5. Release the TUNE pushbutton and turn the Transceiver off.
 6. Connect the output of the Transceiver through a suitable wattmeter (100 watt capability) to a 50-ohm dummy load that can dissipate 100 watts of power.
 7. Turn the Transceiver on. Be sure the front panel controls are at 80M and CW (W).
 8. Turn the FWD control (R658) on the ALC circuit board fully clockwise.

9. Turn the BFO LEVEL control (R823) on the BFO circuit board to the center of its rotation.
10. Depress the TUNE pushbutton.
11. Turn the CW GAIN control clockwise for a maximum indication on the watt meter. NOTE: The output power should not exceed 100W. Also, the front panel meter should indicate full scale.
12. On the ALC circuit board, adjust FWD control R658 for 100 watts of output.
13. Watch the wattmeter and adjust BFO LEVEL control R823 counterclockwise until you obtain 95 watts of output.
14. Adjust FWD control R658, on the ALC circuit board, counterclockwise until you obtain 100 watts of output.
15. Release the TUNE pushbutton.
16. Turn the Transceiver off.

CARRIER NULL ADJUSTMENT

1. Be sure the MODE switch is set to NORM.
2. Connect a voltmeter RF probe to ALC circuit board socket S654.
3. Turn the Transceiver on.
4. Use the button on your microphone to key the transmitter.
5. On the audio circuit board, turn NULL control R931 for a dip or a null on the voltmeter.
6. Set the MODE switch to REV.
7. Readjust control R931 for a null on the voltmeter.
8. Set the MODE switch to NORM.
9. Repeat steps 6 through 8 until you obtain the best possible null.
10. Turn the Transceiver off and disconnect the RF probe from the ALC circuit board.

SPECIFICATIONS

GENERAL

Overall Band Coverage	80 through 10 meters, and WWV at 10 MHz.
Frequency Coverage	3.450 — 4.050 MHz 6.950 — 7.350 MHz 10.000 — 10.200 MHz 13.950 — 14.400 MHz 18.018 — 18.218 MHz 20.950 — 21.500 MHz 24.840 — 25.040 MHz 28.000 — 29.750 MHz
Frequency Readout	7 digit display, vacuum fluorescent with special symbols.
Readout Symbols	— Split. ← Out of Band. M Memory. L,U,C Modes. — Transmit.
Readout Accuracy	To nearest 50 Hz.
Frequency Control	Synthesized.
Frequency Tuning (dual rate):	
Slow	50 Hz per step, 1.25 kHz per knob rotation.
Fast	1 kHz per step, 25 kHz per knob rotation.
Tuning Backlash	None
Split Frequency Operation	Transmit from memory frequency, receive from displayed frequency.
Memory	Stores 1 frequency per band. (The display frequency is also saved.)
Frequency Stability	Less than 50 PPM drift from turn on.
Modes	SSB Normal and Reverse; CW, Wide or Narrow.

RECEIVER

Sensitivity	Less than 0.35 μ V for 10dB, S + N/N.
Selectivity (SSB):	
With standard filter	2.0 kHz min. at 6dB, 6 kHz max. at 60dB.
With HWA-5400-2 optional filter	1.8 kHz min. at 6dB.
CW audio active filter	250 Hz min. at 6dB, centered at 700 Hz.
Overall Gain	Less than 1 μ V for 0.25 watt audio output.
Audio Output	2 watts min. into 4 ohms; less than 10% THD.
AGC	Selectable Fast and Slow AGC (no more than 8dB audio change for a 100 dB or greater input signal range).
Intermodulation Distortion	70dB min. at 25 kHz.
Image Rejection	80dB min.
IF Rejection	100dB min.
IF Shift Tuning	\pm 600 Hz in Receive only.
Internally Generated Noise (spurious)	Generally below noise level; all below 1.0 μ V.
Audio Hum and Noise	Greater than 40dB below max. output.
RIT	\pm 350 Hz.

TRANSMITTER

RF Output:

High SSB	100 watts PEP power min., except 10 meters = 80 watts.
CW	100 watts min., except 10 meters = 80 watts.
Duty Cycle	Continuous SSB (voice). 50% receive-transmit ratio on CW; 5 min. on, 5 min. off.
Load Impedance	At least 90% rated power with less than 2:1 SWR. Protected against high SWR.
Carrier Suppression	- 50dB min., referenced to 100-watt single-tone 1000 Hz.
Unwanted Sideband Suppression	- 50dB min., referenced to 100-watt single-tone 1000 Hz.
Harmonic Radiation	- 50dB min., referenced to 100-watt output.
Spurious Radiation	- 60dB min., referenced to 100-watt output.
Third Order Distortion	- 30dB min., referenced to 100-watt PEP two-tone output.
Transmit-Receive Operation:	
SSB	PTT or VOX.
CW	Full break-in (simplex only).
CW Sidetone	700 Hz tone to speaker or headphones.
Microphone Input	High impedance (approx. 25k ohms) rated - 55dB. Approx. 10 mV.

OTHER SPECIFICATIONS

Operation With External Linear Amplifier	Linear relay and linear ALC rear panel connections.
Front Panel Meter	S-Units in Receive, ALC in Transmit.
Operating Temperature Range	0 to 40 degrees C.
Power Requirements*	11 to 16 volts DC; 120/240 VAC with optional AC power supply.
Dimensions Overall	11-1/2" W × 14" D × 5" H. (29.2 × 35.6 × 12.7 cm).
Net Weight	24 lbs (10.9 kg).
Optional Accessories	HWA-5400-1 AC Power Supply with clock and speaker. HWA-5400-2 2.0 kHz SSB Filter. HWA-5400-3 Frequency Entry Key Pad.

*All specifications are referenced to 13.8 volts DC at 25° C.

The Heath Company reserves the right to discontinue products and to change specifications at any time without incurring any obligation to incorporate new features in products previously sold.

CIRCUIT DESCRIPTION

Refer to the Block Diagram and the Schematic while you read this "Circuit Description". The component numbers are arranged in the following groups to help you locate specific parts on the Schematic, circuit boards, and chassis.

1-99	Parts mounted on the RF probe and the chassis.
101-199	Parts mounted on the synthesizer circuit board.
201-299	Parts mounted on the display circuit board.
301-349	Parts mounted on the low VCO assembly.
351-399	Parts mounted on the high VCO assembly.
401-499	Parts mounted on the RF circuit board.
501-549	Parts mounted on the inverter assembly.
551-599	Parts mounted on the filter circuit board.
601-649	Parts mounted on the shaft encoder circuit board.
651-699	Parts mounted on the ALC circuit board.

701-799	Parts mounted on the controller circuit board.
801-899	Parts mounted on the BFO circuit board.
901-999 1001-1099	Parts mounted on the audio circuit board.
1101-1199	Parts mounted on the IF circuit board.
1201-1299	Parts mounted on the power amplifier (PA) assembly.

RECEIVER SIGNAL FLOW

During the receive mode of operation, the incoming signals that are present at the antenna connector pass through the ALC circuit board and then through a low-pass filter circuit on the filter circuit board. The Band switch selects the required filter, which rolls off the high frequencies on each band. A T/R relay, also mounted on the filter circuit board, routes this filtered signal to the RF circuit board.

On the RF circuit board, the receiver signal first passes through a high-pass filter to roll off broadcast band signals and then through an 8.83 MHz IF trap. The resulting signal is further filtered by a bandpass filter circuit, amplified, and mixed with an injection signal from the VCO to produce an 8.83 MHz IF signal.

The 8.83 MHz IF signal from the RF circuit board is routed to the IF circuit board, where it either passes through a 4-pole, 8.83 MHz IF filter (optional) or directly to an IF amplifier stage. This signal then passes through a 6-pole IF filter and three stages of amplification before it is routed to the product detector on the audio circuit board. An AGC (automatic gain control) signal is produced on the IF circuit board to keep the IF and RF amplifiers operating at a constant level.

A product detector on the audio circuit board converts the 8.83 MHz IF signal to audio frequencies which then pass through either a wide or a narrow active filter. An audio frequency amplifier then amplifies this filtered signal so that it can drive a 4-ohm speaker.

TRANSMITTER SIGNAL FLOW

Although the transmitter signals flow in a direction that is opposite to the receiver signals, the stages are very similar.

Transmitter audio from the microphone passes through three stages of amplification on the audio circuit board and is then mixed, in a balanced modulator, with a signal from BFO circuit board to produce an 8.83 MHz transmitter IF signal. During CW operation, the signal from the BFO unbalances the

balanced modulator so that the BFO can produce a carrier.

The IF circuit board amplifies and filters the 8.83 MHz transmitter IF signal in the same manner as the receiver signal. An ALC (automatic level control) voltage from the ALC circuit board is fed back to the circuits on the IF circuit board to control the RF output during the transmit mode.

On the RF circuit board, the filtered 8.83 MHz transmitter IF signal is mixed with an injection signal from one of the VCO's to produce the desired transmitter signal. This signal is then filtered by the same bandpass filters that are used during the receive mode before it is preamplified and applied to the power amplifier (PA) circuit board.

The power amplifier contains three push-pull amplifier stages to produce a 100-watt RF signal. This signal is filtered by the low-pass filters on the filter circuit board to reduce harmonic radiation before the signal is applied to the antenna.

As mentioned earlier, a pickup circuit on the ALC circuit board produces an ALC voltage that is applied to the IF circuit board to control the RF output under several conditions.

The following sections describe the operation of each circuit board and assembly in greater detail.

ALC CIRCUIT BOARD

The ALC circuit board controls the RF power output during the transmit mode.

Pickup coil L651 and capacitor C651 sense the forward RF current present on the antenna line and convert it to an RF voltage. Diode D651 rectifies this RF voltage to a DC voltage, which is filtered by capacitor C653. As the power increases to 100 watts, this DC voltage reaches a threshold level, which turns on transistor Q651 and pulls the ALC voltage toward ground. This turns off transistor Q1103 on the IF circuit board. Diode D652 and transistor Q652

operate in a similar manner with the reflected RF current.

Resistors R662 and R663 and capacitor C655 are used to bias transistors Q651 and Q652 and form a time constant for the ALC attack and release times. Transistor Q653 sets the output level in the CW mode while transistor Q654 sets the output level on 10 meters. Diodes D653 and D654 form a threshold level for the ALC control by an external linear amplifier to prevent flat-topping.

IF CIRCUIT BOARD

The IF circuit board amplifies both receiver and the transmitter signals and produces an AGC (automatic gain control) voltage for the receiver circuits.

Transistor Q1101 amplifies the receiver signal, coming from integrated circuit U401 on the RF circuit board, and then passes the signal through 6-pole filter Y1102 to transistor Q1103. Transformers T1101 and T1102 form the tuned circuits for transistors Q1101 and Q1103, respectively. Transistors Q1103, Q1104, and Q1105 provide amplification for the receiver IF signal so it can drive the product detector on the audio circuit board.

Transistor Q1106, an emitter-follower amplifier, drives AGC diodes D1101 and D1102 and produces a negative-going voltage. This voltage is applied to a gate (G2) of transistors Q1101, Q1103, and Q404 (on the RF circuit board) to control the gains of these stages. Transistor Q1107 is a DC amplifier, which drives the front panel meter for AGC and ALC indications.

During the transmit mode, transformer T1101 couples the transmitter IF signal coming from the audio circuit board into crystal filter Y1102. Transistor Q1103 amplifies this signal which is coupled to the RF circuit board through transformer T1102. The gain of transistor Q1103 is controlled by an ALC voltage that comes from the ALC circuit board.

FET switch U1101A passes the AGC signal to gate 2 (G2) of transistor Q1103 during the receive mode, while FET switch U1101C performs the same function with the ALC signal during the transmit mode. For slow AGC action, FET switch U1101B connects capacitor C1133 to change the time constant of the circuit.

The remaining transistors, Q1108, Q1109, Q1111, and Q1112, form the RIT circuit. Transistors Q1109 and Q1112 drive the RIT control during receive. During the transmit mode, transistor Q1108 pulls resistor R1144 to ground to effectively center the RIT control (no offset). Transistor Q1111 turns off transistor Q1108 during CW operation to produce the desired offset frequency.

FILTER CIRCUIT BOARD

The filter circuit board contains six low-pass filters which roll off the high frequencies during both transmit and receive modes. Each filter comprises two pi-sections.

Relay K551 opens during the transmit mode to prevent the RF from the power amplifier from entering the receiver front end (on the RF circuit board). Relay K552 is connected across the 12-volt supply and is used to operate the relay in an external linear amplifier.

Transistors Q551 and Q552 form an overvoltage protection circuit for the Transceiver. If the input voltage should happen to exceed 16 volts DC, diode

D552 conducts and turns on transistor Q552. This turns off transistor Q551 which shuts down the Transceiver by de-energizing the master on-off relay (K1) located on the rear of the chassis.

A series-regulating circuit is formed by transistors Q555, Q556 and diode D555. Transistor Q556 senses the voltage at the emitter of transistor Q555 and adjusts the voltage drive level at the base of transistor Q555 as the load varies. Diode D555 forms the reference voltage for transistor Q556. Transistor Q553 supplies the drive for transistor Q554, which supplies the bias voltage to the power amplifier in the transmit mode.

BFO CIRCUIT BOARD

The BFO circuit board generates the LSB, USB, and CW signals for the product detector and the balanced modulator (located on the audio circuit board). The BFO circuit board also interfaces with the controller to generate several DC logic voltages that operate many stages throughout the Transceiver.

In the LSB mode, crystal Y801 is selected by diode D808 and connected to the series-tuned circuit formed by capacitor C819, coil L804, and diode D809. Transistor Q814 forms the BFO oscillator which has the required feedback provided by capacitors C811 and C812. Buffer transistor Q813 drives the low-pass filter that is formed by capacitors C805, C806, C807, and coil L801. This filter reduces any harmonic content in the signal produced by the BFO. Crystal Y802 is used during USB operation and operates in the same manner as the LSB circuit.

Varicap diode D809 varies the frequency of the BFO oscillator for proper IF shift and CW offset. Diode D812 allows the IF shift voltage to pass during the receive mode so diode can operate properly. Diode D813 and resistor R834 cause the SSB oscillator to return to center during the transmit mode. Diode D814

and resistor R837 produce the desired 700 Hz offset when the Transceiver is transmitting CW.

In the USB mode, the controller circuit turns on transistor Q801. This turns on transistor Q802, which produces an USB voltage that turns on crystal Y802. This also turns on diode D802 which turns on transistor Q807. Transistors Q803 and Q804 control the LSB voltage and operate in the same manner as transistors Q801 and Q802.

During the narrow CW (transmit) mode, the controller circuit turns on transistor Q811 via diode D807. In the wide CW (transmit) mode, the controller turns on transistor Q811 through diode D806. Transistor Q811 turns on transistor Q812 during the CW (transmit) mode, which feeds a DC voltage to CW offset control R837. Transistor Q811 also turns on transistor Q809, which provides a 9-volt source for other circuits in the Transceiver. Also during CW operation, transistor Q809 turns on transistor Q806 which keeps transistor Q807 off. Transistor Q807 is only turned on in the USB and LSB modes and turns on transistors Q805 and Q808. This generates a DC voltage in the transmit mode to operate the SSB centering and other stages.

POWER AMPLIFIER (PA) CIRCUIT BOARD

The power amplifier circuit board contains three stages of push-pull amplification which amplify the signal coming from the RF circuit board. Transformer T1201 matches the impedance of the signal coming from the RF circuit board to predriver transistors Q1201 and Q1202 on the power amplifier circuit board. Capacitor C1201 and resistor R1201 form a swamping circuit that matches the signal to the base of transistor Q1201 over the required frequency range. Resistor R1206 sets the amount of negative feedback to the base of transistors Q1201 and Q1202. This negative feedback limits the transistors from non-linear operation. Capacitor C1203 and resistor R1202 perform the same function for transistor Q1202 as capacitor C1201 and resistor R1201.

Transformer T1202 matches the push-pull collectors of transistors Q1201 and Q1202 to the push-pull base circuitry of transistors Q1203 and Q1204. Transformers T1203 and T1204 perform the same matching function for the final power transistors,

Q1206 and Q1207. Capacitor C1214 and resistor R1216 supply negative feedback to the base of transistor Q1206, while capacitor C1217 and resistor R1219 supply negative feedback to the base of transistor Q1207.

Transistor Q1205 provides the proper bias for final transistors Q1206 and Q1207. Diodes D1203 and D1204 are mounted on top of the final transistors and provide thermal protection by sampling the transistor temperatures. As these diodes become warm, transistor Q1205 begins to turn off, which decreases the bias current to final transistors Q1206 and Q1207.

Diodes D1201 and D1202 are used as clamping diodes for transistors Q1201 through Q1204. These diodes sample the heat at transistors Q1201 and Q1203 and, as the temperatures increase, begin to clamp the bias current to prevent thermal runaway.

RF CIRCUIT BOARD

In the receive mode, the RF circuit board converts the incoming receiver signals into an IF frequency. During transmission, this circuit board mixes an IF signal to produce the desired frequency, and then amplifies this signal before it passes to the power amplifier.

The incoming receive signal first passes through a high-pass filter that is formed by capacitors C403 and C404 and coils L402 and L403. This filter rolls off broadcast band signals. Capacitors C405 through C407 and coils L404 and L405 form an 8.83 MHz IF trap which prevents this frequency (8.83 MHz) from being coupled to transformer T401. Transformer T401 matches the incoming signal to the input of the bandpass filters to be described next.

Diodes D403 and D407 route the incoming receive signal through the bandpass filter. Each band has its own bandpass filter that is selected by the Band switch. On the 80-meter band, the filter components are coils L412 through L414 and capacitors C427 and C482. The filters for the other bands are similar to the 80-meter filter.

After the signal passes through the proper bandpass filter, capacitor C459 couples it into RF amplifier transistor Q404. This amplifier is a broad-band amplifier that is controlled by an AGC voltage from the IF circuit board. The processed signal now passes through buffer transistor Q405 to double-balanced mixer U401, where it is mixed with a signal from one of the VCO's to produce an IF frequency of 8.83 MHz.

In the transmit mode, the signal passes through the RF circuit board in a similar, but opposite, manner. Double-balanced mixer U402 mixes the VCO signal with the 8.83 MHz IF signal (from the IF circuit board) to produce the desired transmitter frequency. Transformer T403 matches the output of mixer U402 to the input of the bandpass filter. Diodes D408 and D404 couple the transmitter signal through this filter.

Transistors Q402, Q401, and Q403 amplify the filtered RF signal to a level that is sufficient to drive the power amplifier. Transformer T402 matches the output of transistor Q403 to the input of the power amplifier.

CW keying is performed by transistor Q403 which is controlled by keying transistor Q412. Transistor

Q412 sets the time constant for CW keying and supplies a muting voltage from the controller. This muting signal is a safety feature that turns off the transmitter if one of the phase-locked loops (to be described later) should become unlocked, or if a front panel control is tampered with during the transmit mode. DC driver transistors Q406 and Q407 also control the operation of transistor Q412 in the event the controller should happen to detect an abnormal control setting during the transmit mode.

Single sideband keying is provided by transistor Q409 while diodes D413 through D426 and transistor Q408 provide bandswitch information for the microprocessor (on the controller circuit board) so it can control the operation of the Transceiver.

AUDIO CIRCUIT BOARD

During the receive mode of operation, the audio circuit board converts the IF signal to an audio signal and amplifies it enough to drive a speaker. In the transmit mode, this circuit board amplifies the microphone audio and converts it to an IF signal. Other functions, such as VOX, anti-VOX, sidetone, and the transmit/receive voltage are also derived on this circuit board.

Product detector U904 converts the receiver IF signal into an audio frequency. This audio either passes through integrated circuits U905D and U905C in the wide CW mode, which roll off the high audio frequencies, or through integrated circuits U905A and U905B, which is a 250 Hz narrow CW active audio filter. Transistors Q922 and Q923 are the audio switches for the wide mode of operation, while transistors Q925 and Q924 are the switches for the narrow mode. These switches are controlled by switching transistors Q926, Q927, and Q928 which convert the controller circuit board logic to DC levels.

The audio signal from the switching transistors passes through the front panel AF Gain control and then back to integrated circuit U906. This integrated circuit amplifies the audio enough to drive a 4-ohm speaker or headphones.

In the transmit mode, microphone audio is amplified by integrated circuit U901A and then passes through the Mic Gain control (on the front panel). Transistors Q902 and Q903 amplify the transmitter audio so it can drive the balanced modulator, integrated circuit U902. Transistor Q901 turns on transistor Q902 in a SSB mode and turns it off in the CW mode.

Balanced modulator U902 converts the transmitter audio to an 8.83 MHz IF signal and buffer transistor Q904 matches the output of the balanced modulator to the input of the IF circuit board. Since a carrier is required during CW operation, transistor Q905 performs this function by unbalancing the balanced modulator.

Part of the audio signal from microphone amplifier U901A is coupled to VOX amplifier U901B. The resulting audio now passes through the VOX Gain control on the front panel to integrated circuit U901C. This integrated circuit drives diodes D905 and D906, which rectify the positive part of the audio signal. Capacitor C936 and resistor R953 form an RC filter which filters the rectified positive DC voltage.

Anti-VOX is performed by transistor Q908, which amplifies the receiver audio coming from the Anti-VOX control on the front panel so it can drive diodes D907 and D908. These diodes rectify the negative part of the receiver audio and route it back to the output of the positive rectifier diodes. As long as the received audio is greater than the microphone level, the negative voltage keeps transistor Q909 off until the AF Gain decreases.

Transistor Q909 is a VOX delay driver which is keyed by the positive voltage from diode D906. Capacitor C947 and the VOX Delay control on the front panel set the amount of delay during VOX operation. The delay voltage turns on transistor Q911, which drives the transmit/receive switching circuit. Transistor Q912 allows you to key the transmitter via the push-to-talk pin on the microphone connector.

Either transistor Q911 or Q912 turns on transistor Q913 which turns off transistor Q914. Since the collector of transistor Q914 is now high, transistor Q915

conducts and drives many transmitter stages in the Transceiver. In the receive mode, the collector of transistor Q914 is low and causes the emitter of transistor Q916 to go low. This pulls the transmit line toward ground. Transistors Q917, Q918, and Q919 generate the receiver R12 switch voltage that operates similarly to the transmit switch.

Transistor Q907 keys sidetone oscillator U901D. This oscillator drives the VOX amplifier and receiver audio amplifier.

Capacitors C952 and C953 together with choke L904 remove any RF that may be present on the +13.8-volt DC source. Integrated circuit U903 regulates the +13.8-volt source down to 9 volts which operates several stages in the Transceiver. Capacitance amplifier transistor Q921 isolates the +13.8-volt source from the controller circuit board.

PIN diodes D903 and D904 control the level of the carrier during CW operation. The CW Gain control on the front panel varies the voltage that is applied to diode D903 (between 9 volts and ground). As you rotate the control clockwise, diode D903 stops conducting and diode D904 conducts. When diode D904 conducts, the BFO oscillator signal is coupled to the balanced modulator. During the receive mode, transistor Q906 turns off diode D904 to prevent the carrier from entering the balanced modulator.

INVERTER ASSEMBLY

The inverter converts the incoming +13.8 VDC supply into several voltages required by the Transceiver. It provides the +20 volts for the vacuum fluorescent display and the +12 volts to operate the active loop filters on the controller circuit board, the high and low VCO assemblies, and to some circuits on the synthesizer circuit board.

A 555 astable multivibrator (U501) produces a square wave at a frequency of approximately 30 kHz. Complementary transistors Q501 and Q502 increase

the drive capability of integrated circuit U501. This voltage now drives a voltage-multiplier string, which provides a voltage that is sufficient to drive +20-volt regulator U502 and keeps the brightness of the display relatively constant during changes in the main supply voltage. Integrated circuit U503 is connected to the midpoint of the voltage multiplier and provides a regulated +12 volts.

Choke L501 and capacitor C501 form a low-pass filter that keeps any noise created by the inverter off of the main supply line.

VCO ASSEMBLIES

Two separate voltage-controlled oscillator assemblies supply the injection frequencies to the Transceiver. Depending upon which band you have selected, only one of the VCO assemblies receives power. The low-band VCO operates on the 80-, 40-, and 30-meter bands, while the high-band VCO operates on the 20- through 10-meter bands. Since both VCO assemblies are similar, only the low-band VCO is described in the following paragraphs.

When you select the 30-meter band, the synthesizer circuit board supplies +12 volts to the low-band VCO. Pull-down resistors R313 and R314 hold the 40- and 80-meter band select inputs low. This allows resistors R303 and R305 to back-bias transistors Q301 and Q302 so that capacitors C302 through C306 are effectively disconnected from the circuit. With these components out of the circuit, the frequency of the Hartley oscillator (Q303) is determined by coil L302, capacitors C308 and C309, and varactor diode D301.

Transistors Q304 and Q305 form a buffer circuit for the oscillator before the signal is applied to the synthesizer circuit board. Transistor Q305 forms a Darlington pair with transistor Q313 on the synthesizer circuit board. The outputs and the inputs of the two VCO assemblies are connected in parallel, but since transistor Q356 in the high-band VCO is back-biased and the tune input has a high impedance, the selected VCO assembly is not affected by the other.

When you select the 40-meter band, 9 volts is applied to transistor Q301 via diode D302. This connects capacitors C302 and C303 across the oscillator tank circuit and lowers the frequency range of the oscillator. On the 80-meter band, transistor Q302 switches in capacitors C305 and C306. Since transistor Q301 is still held on by diode D303, the tuning range of the oscillator is lowered even further.

DISPLAY CIRCUIT BOARD

The display circuit board converts the logic information, coming from the controller circuit board, so it can be used by the fluorescent display. This circuit board also provides control and pushbutton information for many sections of the Transceiver.

Integrated circuit U207 decodes the BCD (binary-coded-decimal) information from the controller circuit board, which causes one of its ten outputs to go low. These outputs go low one at a time and select, in turn, each digit of the display. This integrated circuit also polls many of the front panel switches. The low output on the selected output of integrated circuit U207 is inverted by a section of either integrated circuit U203 or U204, to provide a high input to the corresponding display driver section. At the same time, the controller circuit board provides the appropriate segment information to segment driver U201 to refresh that particular digit.

The low output from integrated circuit U207 is also applied to the Band switch, the Mode switch, one of the three momentary pushbutton switches (Split, D \rightleftharpoons M, or D \rightarrow M), the keypad pushbuttons (if you have this accessory installed), and the finger detection circuitry. Any of the diodes connected between the selected output of integrated circuit U207 and the four switch input lines to the controller circuit board will conduct, which allows the controller to determine the status of these front panel functions.

The finger-detect circuitry senses the presence of your finger in the metallic insert in the Main Tuning knob (which causes the tuning rate to increase from 50 Hz-per-step to 1 kHz-per-step). The following paragraph describes how this circuit operates.

One of the BCD scan inputs to integrated circuit U207 is buffered by integrated circuit U205A and is applied to both the D input and, after an adjustable delay, to the clock input to U206B. The delay provided by integrated circuits U205B and U203A, resistor R208, and capacitor C201 is adjusted so that, when the metallic finger insert (which is connected to the D input) is not being touched, the high level of each pulse arrives at the D input through resistor R207 just in time to be clocked to the Q output by the rising edge of the pulse at the clock input. Therefore, the Q output of integrated circuit U206B is normally high, which disables integrated circuit U205C and keeps diode D204 from conducting.

The Q output of U206B is normally low, which enables integrated circuits U204C and U204D so that the 100 Hz and 10 Hz digits in the display light. When you touch the metallic finger insert, your body capacitance is added between the D input of integrated circuit U206B and ground. This delays the input so that when the rising edge of the pulse arrives at the clock input, the D input is still low. This causes the Q and \bar{Q} outputs to change state, which causes diode D204 to conduct when it is polled. This, in turn, causes the controller to increase the step size, and also disables integrated circuits U204C and U204D to blank the 100 Hz and 10 Hz display digits.

Display V201 also contains special characters which you may turn off, set at full brightness, or set at half brightness by means of a jumper wire. This operates by disabling, enabling or alternately enabling and disabling integrated circuits U204C and U204D by clocking them with a square wave that comes from integrated circuit U206A.

CONTROLLER CIRCUIT BOARD

The controller circuit board performs the following functions:

1. Refreshes the display.
2. Programs a synthesizer integrated circuit in each of the three phase-locked loops.
3. Receives inputs from the shaft encoder circuit board and keypad (if this accessory is installed) to alter the frequency.
4. Polls the front panel switches for the desired band, mode, etc.
5. Monitors the phase-locked loops for an unlocked condition.
6. Allows the Transceiver to go into the transmit mode when you request it to do so, but first ensures that the phase-locked loops are locked and the frequency you have selected is within certain limits.
7. Stores display and memory frequencies for each band even when the Transceiver is turned off (if the memory keep-alive voltage is present at the rear panel Accessory Socket).
8. Mutes the receiver when required.
9. Performs diagnostics on itself when the Transceiver is turned on (if backup power was lost).

The various circuits on the controller circuit board will now be described in detail.

SHAFT ENCODER

The shaft encoder consists of two slotted infrared switches (mounted on a separate circuit board) and a wheel that has alternating clear and opaque areas. This arrangement produces two pulse trains as the wheel rotates that are in quadrature (they are approximately 90 degrees out of phase) to produce four unique states. One of the shaft encoder outputs is applied to the external interrupt input of the microprocessor. This allows the microprocessor to determine the direction of rotation. When this input goes high, the microprocessor determines whether it should increase or decrease the frequency. It also determines whether or not you are using the fast-tune metallic finger insert in the Main Tuning knob. Schmitt trigger transistors Q703 through Q706 prevent false triggering due to vibration.

LOOP SELECT LOGIC

Three phase-locked loops are used in this Transceiver to ultimately produce a single injection frequency. Each of these loops uses a frequency synthesizer integrated circuit, which contains programmable divide-by-N and reference dividers and a digital phase detector with a lock-detection circuit. To program one of these IC's, each of the internal dividers is programmed by applying a 3-bit binary address code (to select one of the seven digit latches) along with a 4-bit binary digit code, and then the strobe input of the particular IC to be programmed is strobed. This process repeats for each of the seven latches within the IC.

Port 4 of the microprocessor supplies the required address/data for each latch and the strobe output of the microprocessor supplies the required strobe pulse. The address and data inputs for each of the three synthesizer IC's are connected in parallel across this port. Due to the loop select logic, only one of these latches receives the strobe pulse at a time.

Since only seven of the eight lines from port 4 are required, three for address and four for data, bit 7 is available to help select between the three ICs. One bit can only select between two ICs, however, so a trick must be used. Because there are only seven digit latches in each IC, the latches ignore a binary code of 111 (decimal 7). Integrated circuit U708A decodes this binary code and uses it to set or clear flip-flop U701B, depending upon the level of bit 7 at port 4. This provides four possible states when the latch address/data is strobed out on port 4. If integrated circuit U701B is in the cleared state, and bit 7 is low, integrated circuit U711A passes the strobe pulse to integrated circuit U703.

If integrated circuit U701B is in the cleared state and bit 7 is high, integrated circuit U711B passes the strobe pulse to integrated circuit U712. If integrated circuit U701B is in the set state, however, integrated circuit U711C passes the strobe pulse to integrated circuit U705 (regardless of the level on bit 7). Since integrated circuits U703 and U712 must be reprogrammed each time you make a frequency change, integrated circuit U701B is normally kept in the cleared state. **NOTE:** Integrated circuit U705 is reprogrammed only when you make a band change (except for the 10-meter band, which is divided into four segments).

UNLOCK DETECTION

Lock detection logic within each synthesizer integrated circuit produces very narrow negative-going pulses on its output (pin 13) whenever it detects a phase-lock condition. If a large phase error occurs between the two inputs to the internal phase detector, the pulses increase in width. An external pulse width detection circuit senses this increase. **NOTE:** Since each lock detection circuit is identical, only the circuit associated with integrated circuit U703 is described in the next paragraph.

When the loop is locked, transistor Q711 is held on, which prevents diode D703 from conducting. If the loop unlocks, the wider pulses at the base of Q711 allow it to turn off long enough for capacitor C731 to charge through resistor R731 and diode D703. When the charge on this capacitor reaches 0.7 volt, transistor Q709 turns on. This applies a low to an input of integrated circuit U708C and takes its output high, which is inverted by integrated circuit U708B. If alignment jumper J is installed, the low on the output of U708B is applied to an input of microprocessor U710 and causes it to display a "PLL" message, force the Transceiver into the receive mode, and mute the receiver. Transistor Q709 lights LED D703 to indicate that this loop is unlocked.

CRYSTAL OSCILLATORS

Three crystal oscillators provide the frequency accuracy and stability of this Transceiver. Two of these are parallel-mode oscillators and are located on the controller circuit board. One of these oscillators operates at 8.04 MHz and is made up of transistor Q701, crystal Y701, and the associated components. The output of transistor Q701 drives transistor Q702 to TTL logic levels, which integrated circuit U701A divides by 2. This 4.02 MHz signal is used as a clock for microprocessor U710 and feeds the reference divider chain in integrated circuit U703. Integrated circuit U703 buffers this signal and also applies it to the reference divider chain in integrated circuit U712 (pin 16). Varactor diode D701 in this oscillator allows you to pull the oscillator frequency when you use the RIT (receiver incremental tuning) function.

The other oscillator on this circuit board, formed by transistor Q718, crystal Y702, and the associated components, operates at 10 MHz and operates very similarly to the 8.04 MHz oscillator. The output of buffer transistor Q719 drives the reference divider chain in integrated circuit U705.

LOOP FILTERS

Since the active loop filters for each of the phase-locked loops are similar, only the filter for loop 1 (PLL-1) is described below.

The double-ended outputs from the synthesizer IC's provide information about the relative frequency/phase differences between the outputs of the internal divide-by-N and the reference divider chains. If there is a frequency difference, one of the outputs remains high, while the other pulses low. If the frequencies match, both outputs pulse low and the widths of the individual pulses represents the phase difference between the two inputs. When the inputs are in phase, both outputs produce very narrow low-going pulses.

Loop filter U704 integrates the pulses at the outputs (pins 14 and 15) of the difference detector and produces a tune voltage. This voltage is used to tune a voltage-controlled oscillator (VCO), which provides an input to the divide-by-N input, and completes the loop. (In the case of loops 1 and 3, the output is first mixed with a signal from another source.) If the frequency of the VCO tries to rise or fall, the tune voltage from the loop filter changes in the direction required to return it to the correct frequency and attempts to keep the phase difference equal to zero. In loop 1, an additional low-pass filter follows the loop filter and reduces the reference frequency content on the tune voltage line.

MEMORY BACKUP

Microprocessor U710 has an internal memory that

can be saved when you turn the Transceiver off. This is done by keeping +5 volts on the V_{SB} (standby) pin and causing the RST/RAMPRT (RAM protect) pin to go low before V_{CC} falls below its lower operating limit. Two frequencies are stored in this memory for each band. When the +13.8-volt source drops, capacitor C737 quickly discharges through diode D711. As this voltage reaches approximately 8 volts, transistor Q717 turns off and allows the back-up supply to turn transistor Q716 on. This causes the RST/RAMPRT line low before integrated circuit U714 goes out of regulation.

An additional safety factor is provided by filter capacitor C736. When you turn the Transceiver on, capacitor C737 charges through resistor R749, which allows the V_{CC} to stabilize before the RAM is enabled and the microprocessor resets.

MODE SELECTION

Pin 18 of microprocessor U710 changes state according to whether you select CW or SSB operation. Pin 19 changes state in both the CW and SSB modes depending upon whether you select wide or narrow CW, or upper or lower sideband. Integrated circuits U709 and U702B decode this information into the levels required by the various circuits in the Transceiver.

SYNTHESIZER CIRCUIT BOARD

The synthesizer circuit board works together with the controller circuit board and the VCO assemblies to affect changes in frequency.

The time it takes to make a step in frequency is inversely proportional to loop filter bandwidth. This filter must be narrow enough to attenuate reference frequency energy to an acceptable level, and yet wide enough to allow quick response. In a single-modulus, single-loop synthesizer, the minimum step size equals the reference frequency and these two considerations are always in conflict.

In this Transceiver, loop 2 (PLL-2) is the type of synthesizer described above, which has a reference frequency and step size of 10 kHz. In loop 1, the input

to the divide-by-N chain is the difference between the output of the VCO in loop 2 (13.505 to 16.1 MHz) and the VCO output of loop 1 (approximately 5.45 to 6.05 MHz) and the reference frequency for this loop is 10.05 kHz. The bandwidth of these two loop filters, therefore, can be fairly wide to allow fast setting, and yet provide good attenuation of the reference frequency energy. When the VCO in loop 2 moves down in frequency by 10 kHz, the VCO in loop 1 moves up only 50 Hz to result in the required 10.05 MHz difference at the output of the mixer.

If the two loops had different slew rates, there would be an apparent overshoot in frequency, causing a chirping sound with each frequency step. To prevent this chirp, the microprocessor mutes the receiver for a few milliseconds during a frequency step.

The circuits for VCO 1 and VCO 2 are practically identical to the VCO's in loop 3 described earlier under "VCO Assemblies". The output of VCO 1 passes through a low-pass filter (formed by coil L106 and capacitors C134 through C136) to double-balanced mixer U101, where it is mixed with a signal from VCO 2. The difference between the two inputs is in the range of 8 to 10 MHz. This results in a signal that is bandpass filtered and amplified, and is then applied to the divide-by-N chain in loop 1 synthesizer integrated circuit U703 (on the controller circuit board).

Transistor Q109 now mixes the output of VCO 1, which changes in 50 Hz increments as described earlier, with a signal from the BFO circuit board. The sum of these two frequencies is in the range of about 14.28 to 14.88 MHz. This signal is now bandpass filtered and applied to transistor Q111, which acts as an amplifier on the 80-, 40-, and 30-meter bands. Trans-

istor Q114 conducts on these three bands and effectively shorts out the tank circuit formed by transformer T105 and capacitor C175. On the 20- and 17-meter bands, transistor Q111 mixes the signal with 10 MHz (from the controller circuit board) to produce a 24.28 to 24.88 MHz output. Since capacitors C178 and C179 shunt this tank circuit on these two bands, due to transistor Q115 being turned on, the circuit resonates at 10 MHz. On the 15-, 12-, and 10-meter bands, transistors Q114 and Q115 are off, the tank circuit resonates at 20 MHz, and provides an output in the 34.28 to 34.88 MHz range.

The signal from the tank circuit is bandpass filtered and coupled to transistor Q112. The input to the other gate of transistor Q112 is the loop 3 VCO signal, which the Transceiver uses for the injection signal. As shown in the following table, the output of mixer transistor Q112 depends on the band and, on the 10-meter band, the frequency you have selected.

<u>BAND</u>	<u>FREQUENCY RANGE</u>	<u>Q112 OUTPUT</u>	<u>÷ N</u>
80 M	3.45 — 4.05 MHz	2.0 MHz	4
40 M	6.95 — 7.35 MHz	1.5 MHz	3
30 M	10.0 — 10.2 MHz	4.5 MHz	5
20 M	13.95 — 14.4 MHz	1.5 MHz	3
17 M	18.018 — 18.218 MHz	2.5 MHz	5
15 M	20.95 — 21.5 MHz	4.5 MHz	9
12 M	24.84 — 25.04 MHz	1.0 MHz	4
10 M	28.0 — 28.49995 MHz	2.5 MHz	5
	28.5 — 28.99995 MHz	3.0 MHz	6
	29.0 — 29.49995 MHz	3.5 MHz	7
	29.5 — 29.7 MHz	4.0 MHz	8

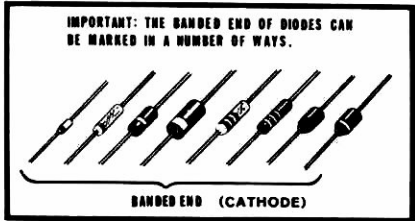
The input to the reference divider in integrated circuit U705 (on the controller circuit board) is 10 MHz. This frequency is internally divided to produce a reference frequency of 500 kHz on all bands except 12 meters, which uses 250 kHz as the reference frequency. On four of the bands (80, 20, 15, and 12 meters), the VCO 3 input to transistor Q112 is below the input from transistor Q108 while on the other four bands, it is above. Integrated circuit U706, on the controller circuit board, is therefore used to reverse the two outputs of the phase detector in this circuit to provide a tune voltage that moves in the correct direction to obtain lock.

Transistors Q116 through Q121 select the required VCO for loop 3 and the injection to transistor Q108, depending upon the band you select.

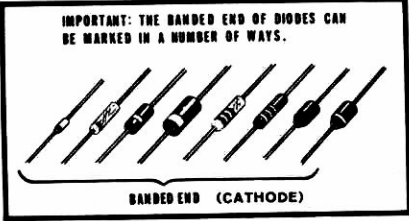
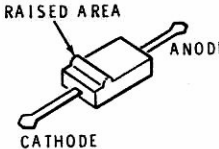
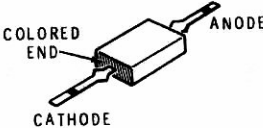
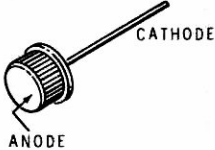
In the receive mode, gate 2 (G2) of RF transistor Q404, on the RF circuit board, is partially muted between tuning steps, during band changes, and when a phase-locked loop is unlocked to force the receiver into a muted condition.

SEMICONDUCTOR IDENTIFICATION CHARTS

DIODES

COMPONENT NUMBER	HEATH PART NUMBER	MAY BE REPLACED WITH	IDENTIFICATION
D804	56-19	VR-9.1	 <p>IMPORTANT: THE BANDED END OF DIODES CAN BE MARKED IN A NUMBER OF WAYS.</p> <p>BANDED END (CATHODE)</p>
D651, D652	56-20	1N295A	
D105-D109, D111, D808, D811	56-24	1N458	
D552	56-25	1N4166A	
D1, D2, D102, D104, D204, D209, D211-D219, D221-D229, D231, D232, D905-D908	56-26	1N191	
D112, D113, D201, D202, D302-D304, D352-D357, D401-D405, D407-D414, D416, D418, D421-D426, D551, D553, D702, D704, D706, D708, D801-D803, D805-D807, D812-D814, D901, D911, D912	56-56	1N4149	

DIODES (Cont'd.)

COMPONENT NUMBER	HEATH PART NUMBER	MAY BE REPLACED WITH	IDENTIFICATION
D427, D555, D654, D902, D909	56-58	1N5234B	
D501-D504	56-93	FD333	
D554	56-616	1N5232B	
D406	56-621	VR-8.2	
D412	56-646	BA-244	
D203, D653, D1203, D1204	56-652	1N4448	
D103	56-666	MV2115	
D1201, D1202	57-27	1N2071	
D709, D913	57-65	1N4002	
D809	56-640	MV2110	
D101, D301, D351, D701	56-648	MV109	
D903, D904	56-656	BA-379	
D3	57-35	1N3491	


DIODES (Cont'd.)

COMPONENT NUMBER	HEATH PART NUMBER	MAY BE REPLACED WITH	IDENTIFICATION
D703, D705, D707	412-632	NLS5076A	

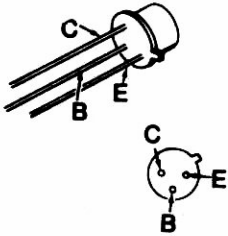
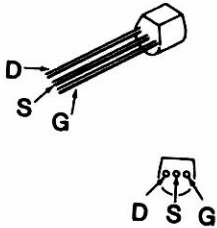
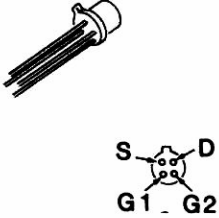
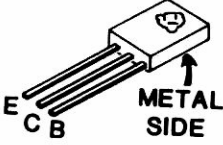
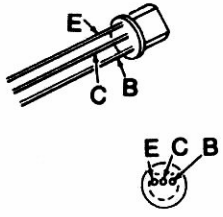
DISPLAY

COMPONENT NUMBER	HEATH PART NUMBER	MAY BE REPLACED WITH	IDENTIFICATION																																																										
V201	411-857		 <table border="1"> <thead> <tr> <th>PIN</th> <th>CONNECTION</th> </tr> </thead> <tbody> <tr><td>1</td><td>FILAMENT</td></tr> <tr><td>2</td><td>SEGMENT α (\leftarrow)</td></tr> <tr><td>3</td><td>G₉ (LEFT END)</td></tr> <tr><td>4</td><td>SEGMENT β ($-$)</td></tr> <tr><td>5</td><td>SEGMENT γ (M)</td></tr> <tr><td>6</td><td>G₈</td></tr> <tr><td>7</td><td>SEGMENT g</td></tr> <tr><td>8</td><td>SEGMENT f</td></tr> <tr><td>9</td><td>G₇</td></tr> <tr><td>10</td><td>SEGMENT e</td></tr> <tr><td>11</td><td>SEGMENT d</td></tr> <tr><td>12</td><td>G₆</td></tr> <tr><td>13</td><td>SEGMENT COM 2</td></tr> <tr><td>14</td><td>NO CONNECTION</td></tr> </tbody> </table> <table border="1"> <thead> <tr> <th>PIN</th> <th>CONNECTION</th> </tr> </thead> <tbody> <tr><td>15</td><td>G₅</td></tr> <tr><td>16</td><td>NO PIN</td></tr> <tr><td>17</td><td>G₄</td></tr> <tr><td>18</td><td>SEGMENT D_p</td></tr> <tr><td>19</td><td>G₃</td></tr> <tr><td>20</td><td>SEGMENT c</td></tr> <tr><td>21</td><td>SEGMENT b</td></tr> <tr><td>22</td><td>G₂</td></tr> <tr><td>23</td><td>SEGMENT a</td></tr> <tr><td>24</td><td>SEGMENT COM 1</td></tr> <tr><td>25</td><td>G₁ (RIGHT END)</td></tr> <tr><td>26</td><td>NO PIN</td></tr> <tr><td>27</td><td>FILAMENT</td></tr> </tbody> </table>	PIN	CONNECTION	1	FILAMENT	2	SEGMENT α (\leftarrow)	3	G ₉ (LEFT END)	4	SEGMENT β ($-$)	5	SEGMENT γ (M)	6	G ₈	7	SEGMENT g	8	SEGMENT f	9	G ₇	10	SEGMENT e	11	SEGMENT d	12	G ₆	13	SEGMENT COM 2	14	NO CONNECTION	PIN	CONNECTION	15	G ₅	16	NO PIN	17	G ₄	18	SEGMENT D _p	19	G ₃	20	SEGMENT c	21	SEGMENT b	22	G ₂	23	SEGMENT a	24	SEGMENT COM 1	25	G ₁ (RIGHT END)	26	NO PIN	27	FILAMENT
PIN	CONNECTION																																																												
1	FILAMENT																																																												
2	SEGMENT α (\leftarrow)																																																												
3	G ₉ (LEFT END)																																																												
4	SEGMENT β ($-$)																																																												
5	SEGMENT γ (M)																																																												
6	G ₈																																																												
7	SEGMENT g																																																												
8	SEGMENT f																																																												
9	G ₇																																																												
10	SEGMENT e																																																												
11	SEGMENT d																																																												
12	G ₆																																																												
13	SEGMENT COM 2																																																												
14	NO CONNECTION																																																												
PIN	CONNECTION																																																												
15	G ₅																																																												
16	NO PIN																																																												
17	G ₄																																																												
18	SEGMENT D _p																																																												
19	G ₃																																																												
20	SEGMENT c																																																												
21	SEGMENT b																																																												
22	G ₂																																																												
23	SEGMENT a																																																												
24	SEGMENT COM 1																																																												
25	G ₁ (RIGHT END)																																																												
26	NO PIN																																																												
27	FILAMENT																																																												

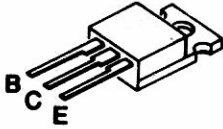
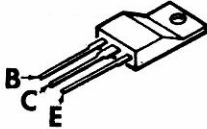
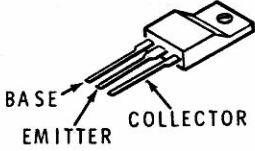
 
TRANSISTORS

COMPONENT NUMBER	HEATH PART NUMBER	MAY BE REPLACED WITH	IDENTIFICATION
Q1206, Q1207	117-16	(Matched pair; Replace with Heath part only.)	
Q114, Q115, Q301, Q302, Q351, Q352, Q353, Q411, Q813, Q904	417-134	MPS6520	
Q108, Q401, Q402, Q405, Q718, Q814, Q1104-Q1106	417-172	MPS6521	
Q116, Q118, Q119, Q406, Q408, Q409, Q703-Q709, Q711-Q717, Q801, Q803, Q806, Q807, Q811, Q901, Q905-Q907, Q926, Q928, Q1102, Q1108, Q1109, Q1111, Q1112	417-801	MPSA20	
Q552, Q553, Q556, Q651-Q654, Q902, Q903, Q908, Q909, Q913, Q914, Q917, Q922-Q925	417-864	MPSA05	
Q117, Q121, Q407, Q412, Q911, Q912, Q916, Q919	417-865	MPSA55	

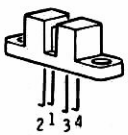
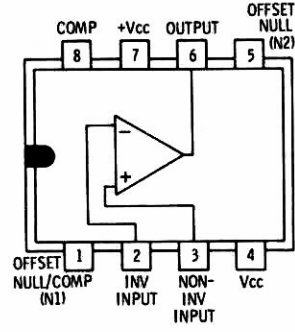
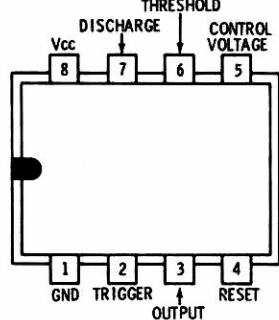
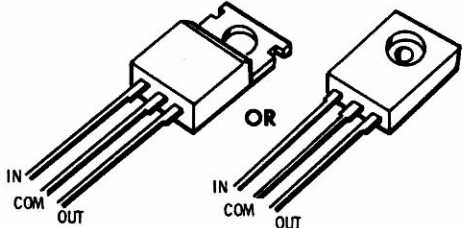
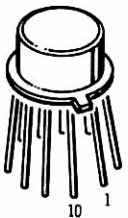
TRANSISTORS (Cont'd.)

COMPONENT NUMBER	HEATH PART NUMBER	MAY BE REPLACED WITH	IDENTIFICATION
Q103, Q106, Q107, Q113, Q305, Q356, Q701, Q702, Q719	417-154	2N2369	
Q403	417-205	2N3866	
Q101, Q104, Q303, Q354	417-169	MPF-105	
Q102, Q105, Q304, Q355, Q1107	417-241	EL131	
Q109, Q111, Q112, Q404, Q1101, Q1103	417-863	MFE131	
Q502, Q551, Q555, Q1205	417-818	MJE181	
Q501, Q554	417-819	MJE171	
Q802, Q804, Q805, Q808, Q809, Q812, Q927	417-201	X29A829	

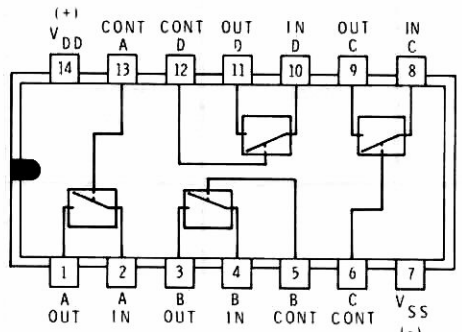
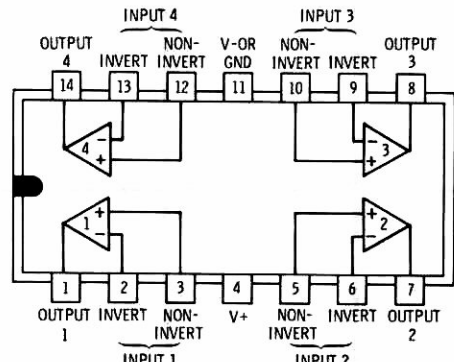
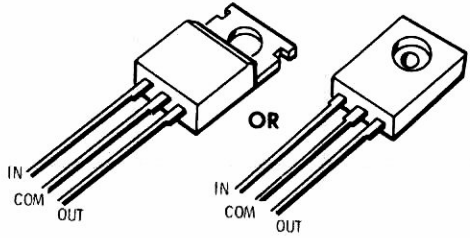
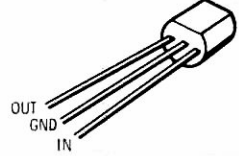
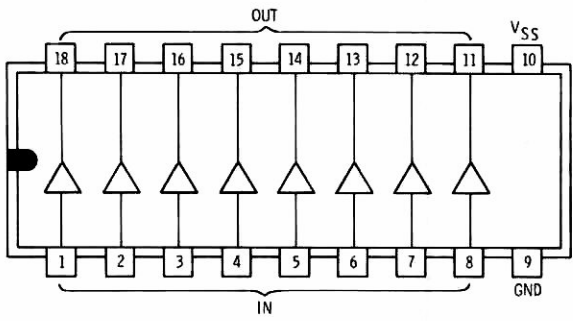
TRANSISTORS (Cont'd.)

COMPONENT NUMBER	HEATH PART NUMBER	MAY BE REPLACED WITH	IDENTIFICATION
Q915, Q918, Q921	417-852	TIP31	
Q1201, Q1202	417-971	(Replace with Heath part only.)	
Q1203, Q1204	417-972	(Replace with Heath part only.)	
Q1206, Q1207	417-973	(Replace with Heath part only.)	

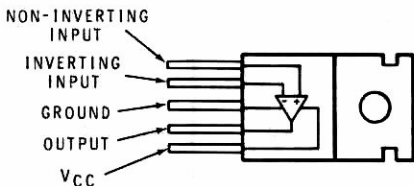
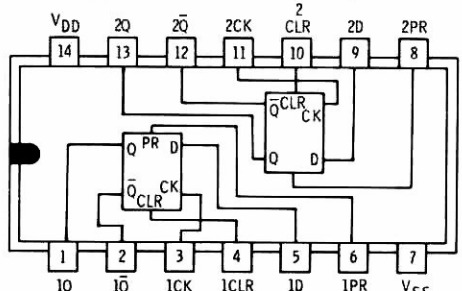
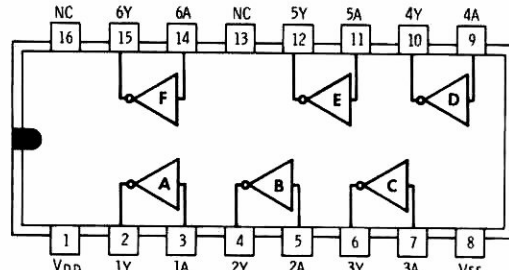
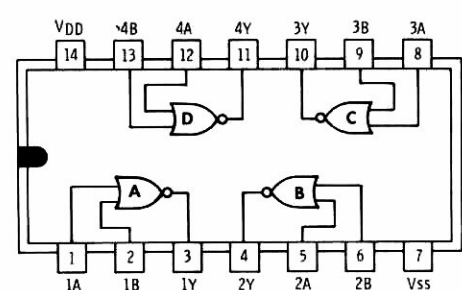
INTEGRATED CIRCUITS (ICs)

COMPONENT NUMBER	HEATH PART NUMBER	MAY BE REPLACED WITH	IDENTIFICATION
U601, U602	150-74	Heath part only.	
U704, U707, U713	442-39	LM301AN	
U501	442-53	NE555	
U714, U715	442-54	UA7805	
U101, U902, U904	442-96	MC1496G	

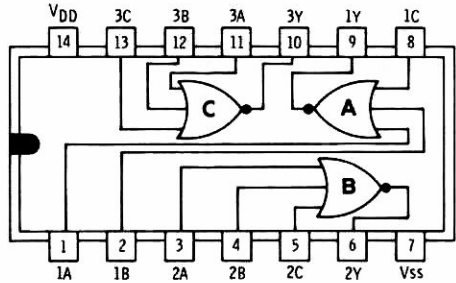
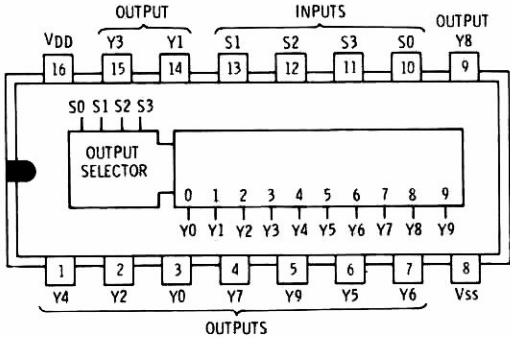
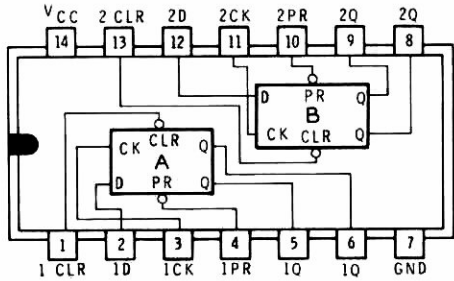
INTEGRATED CIRCUITS (Cont'd.)

COMPONENT NUMBER	HEATH PART NUMBER	MAY BE REPLACED WITH	IDENTIFICATION
U1101	442-99	CD4016AE	 <p>Pinout diagram for CD4016AE. The chip has 14 pins. Pin 14 is V_{DD} (+). Pin 7 is V_{SS} (-). The internal circuit shows three inverters. Pin 13 is labeled 'CONT A', pin 12 'CONT D', pin 11 'OUT D', pin 10 'IN D', pin 9 'OUT C', pin 8 'IN C'. The bottom row of pins is labeled: 1 'A OUT', 2 'A IN', 3 'B OUT', 4 'B IN', 5 'B CONT', 6 'C CONT', 7 'V_{SS} (-)'.</p>
U901, U905	442-602	LM324N	 <p>Pinout diagram for LM324N. The chip has 14 pins. Pin 14 is V_{DD} (+). Pin 7 is V_{SS} (-). The internal circuit shows four operational amplifiers. Pin 13 is labeled 'INPUT 4', pin 12 'NON-INVERT', pin 11 'V-OR GND', pin 10 'NON-INVERT', pin 9 'INPUT 3', pin 8 'OUTPUT 3'. The bottom row of pins is labeled: 1 'OUTPUT 1', 2 'INVERT', 3 'NON-INVERT', 4 'V+', 5 'NON-INVERT', 6 'INVERT', 7 'OUTPUT 2'. The top row of pins is labeled: 14 'OUTPUT 4', 13 'INVERT', 12 'NON-INVERT', 11 'V-OR GND', 10 'NON-INVERT', 9 'INPUT 3', 8 'OUTPUT 3'. The bottom row of pins is also labeled: 1 'OUTPUT 1', 2 'INVERT', 3 'NON-INVERT', 4 'V+', 5 'NON-INVERT', 6 'INVERT', 7 'OUTPUT 2'. The top row of pins is also labeled: 14 'INPUT 4', 13 'NON-INVERT', 12 'V-OR GND', 11 'NON-INVERT', 10 'INPUT 3', 9 'OUTPUT 3'.</p>
U503	442-663	78M12	 <p>Physical components for 78M12 and 78M08. The 78M12 is a TO-18 package with three pins labeled IN, COM, and OUT. The 78M08 is a TO-18 package with three pins labeled IN, COM, and OUT. The word 'OR' is placed between the two components.</p>
U903	442-691	78M08	
U502	442-681	78L08	 <p>Physical component for 78L08. It is a TO-18 package with three pins labeled OUT, GND, and IN.</p>
U201, U202	442-682	UDN6118A	 <p>Pinout diagram for UDN6118A. The chip has 18 pins. Pin 10 is V_{SS}. Pin 9 is GND. The internal circuit shows eight inverters. The top row of pins is labeled: 18 'OUT', 17 'OUT', 16 'OUT', 15 'OUT', 14 'OUT', 13 'OUT', 12 'OUT', 11 'OUT', 10 'V_{SS}'. The bottom row of pins is labeled: 1 'IN', 2 'IN', 3 'IN', 4 'IN', 5 'IN', 6 'IN', 7 'IN', 8 'IN', 9 'GND'.</p>

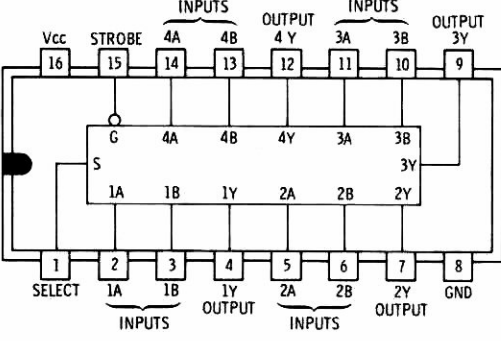
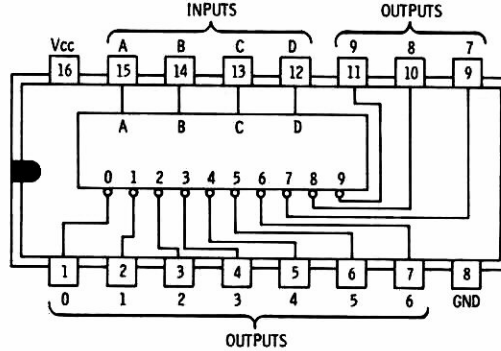
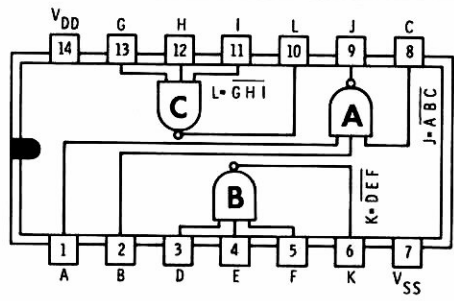
INTEGRATED CIRCUITS (Cont'd.)

COMPONENT NUMBER	HEATH PART NUMBER	MAY BE REPLACED WITH	IDENTIFICATION
U906	442-713	LM383	
U206	443-607	MC14013A1 or CD4013BCN	
U203	443-701	MC14049CP or CD4049CN	
U204, U205, U702	443-703	MC14001CP or CD4001BCN	

INTEGRATED CIRCUITS (Cont'd.)

COMPONENT NUMBER	HEATH PART NUMBER	MAY BE REPLACED WITH	IDENTIFICATION
U711	443-712	MC14025	 <p>The diagram shows a logic circuit with three gates labeled A, B, and C. Gate A is a NAND gate with inputs 1A (pin 1), 2A (pin 3), and 3A (pin 11). Gate B is an OR gate with inputs 1B (pin 2), 2B (pin 4), and 3B (pin 12). Gate C is an AND gate with inputs 1C (pin 8), 2C (pin 5), and 3C (pin 13). The circuit is powered by VDD (pin 14) and VSS (pin 7).</p>
U709		MC14028	 <p>The diagram shows an output selector circuit. It has four input selector pins labeled S0, S1, S2, and S3 (pins 10, 11, 12, 13). It has ten output pins labeled Y0 through Y9 (pins 1-9). The circuit is powered by VDD (pin 16) and VSS (pin 8).</p>
U701	443-730	74LS74	 <p>The diagram shows two D flip-flops, labeled A and B. Each flip-flop has a clock input (CK), a clear input (CLR), a data input (D), a preset input (PR), and a data output (Q). The circuit is powered by VCC (pin 14) and GND (pin 7).</p>

INTEGRATED CIRCUITS (Cont'd.)

COMPONENT NUMBER	HEATH PART NUMBER	MAY BE REPLACED WITH	IDENTIFICATION
U706	443-799	74LS157	 <p>The diagram shows the pinout for the 74LS157, a 3-bit binary decoder. It features 16 pins: Pin 16 is Vcc, Pin 15 is STROBE, Pin 14 is input 4A, Pin 13 is input 4B, Pin 12 is output 4Y, Pin 11 is input 3A, Pin 10 is input 3B, Pin 9 is output 3Y, Pin 8 is GND, Pin 7 is output 2Y, Pin 6 is input 2B, Pin 5 is output 2A, Pin 4 is output 1Y, Pin 3 is input 1B, Pin 2 is input 1A, and Pin 1 is SELECT. The internal logic shows three 2-to-1 multiplexers (G, S, and an unlabeled one) that combine the inputs to produce the outputs.</p>
U207	443-807	74LS42	 <p>The diagram shows the pinout for the 74LS42, a BCD-to-7-segment decoder. It has 16 pins: Pin 16 is Vcc, Pin 15 is input A, Pin 14 is input B, Pin 13 is input C, Pin 12 is input D, Pin 11 is output 9, Pin 10 is output 8, Pin 9 is output 7, Pin 8 is GND, Pin 7 is output 6, Pin 6 is output 5, Pin 5 is output 4, Pin 4 is output 3, Pin 3 is output 2, Pin 2 is output 1, and Pin 1 is output 0. The internal logic shows a 4-to-10 decoder circuit.</p>
U708	443-887	4023	 <p>The diagram shows the pinout for the 4023, a 3-input majority gate. It has 14 pins: Pin 14 is VDD, Pin 13 is input G, Pin 12 is input H, Pin 11 is input I, Pin 10 is input L, Pin 9 is input J, Pin 8 is input C, Pin 7 is output J=ABC, Pin 6 is input K, Pin 5 is input F, Pin 4 is input E, Pin 3 is input D, Pin 2 is input B, Pin 1 is input A, and Pin 0 is VSS. The internal logic shows three 2-input majority gates (A, B, and C) that combine the inputs to produce the output.</p>

INTEGRATED CIRCUITS (Cont'd.)

COMPONENT NUMBER	HEATH PART NUMBER	MAY BE REPLACED WITH	IDENTIFICATION
U703, U705, U712	443-1030	MC145145	
U710	444-94	MK3875	

CUSTOMER SERVICE

REPLACEMENT PARTS

Please provide complete information when you request replacements from either the factory or Heath Electronic Centers. Be certain to include the **HEATH** part number exactly as it appears in the parts list.

ORDERING FROM THE FACTORY

Print all of the information requested on the parts order form furnished with this product and mail it to Heath. For telephone orders (parts only) dial 616 982-3571. If you are unable to locate an order form, write us a letter or card including:

- Heath part number.
- Model number.
- Date of purchase.
- Location purchased or invoice number.
- Nature of the defect.
- Your payment or authorization for COD shipment of parts not covered by warranty.

Mail letters to: Heath Company
Benton Harbor
MI 49022
Attn: Parts Replacement

Retain original parts until you receive replacements. Parts that should be returned to the factory will be listed on your packing slip.

OBTAINING REPLACEMENTS FROM HEATH ELECTRONIC CENTERS

For your convenience, "over the counter" replacement parts are available from the Heath Electronic Centers listed in your catalog. Be sure to bring in the original part and purchase invoice when you request a warranty replacement from a Heath Electronic Center.

TECHNICAL CONSULTATION

Need help with your kit? — Self-Service? — Construction? — Operation? — Call or write for assistance. you'll find our Technical Consultants eager to help with just about any technical problem except "customizing" for unique applications.

The effectiveness of our consultation service depends on the information you furnish. Be sure to tell us:

- The Model number and Series number from the blue and white label.
- The date of purchase.
- An exact description of the difficulty.
- Everything you have done in attempting to correct the problem.

Also include switch positions, connections to other units, operating procedures, voltage readings, and any other information you think might be helpful.

Please do not send parts for testing, unless this is specifically requested by our Consultants.

Hints: Telephone traffic is lightest at midweek — please be sure your Manual and notes are on hand when you call.

Heathkit Electronic Center facilities are also available for telephone or "walk-in" personal assistance.

REPAIR SERVICE

Service facilities are available, if they are needed, to repair your completed kit. (Kits that have been modified, soldered with paste flux or acid core solder, cannot be accepted for repair.)

If it is convenient, personally deliver your kit to a Heathkit Electronic Center. For warranty parts replacement, supply a copy of the invoice or sales slip.

If you prefer to ship your kit to the factory, attach a letter containing the following information directly to the unit:

- Your name and address.
- Date of purchase and invoice number.
- Copies of all correspondence relevant to the service of the kit.
- A brief description of the difficulty.
- Authorization to return your kit COD for the service and shipping charges. (This will reduce the possibility of delay.)

Check the equipment to see that all screws and parts are secured. (Do not include any wooden cabinets or color television picture tubes, as these are easily damaged in shipment. Do not include the kit Manual.) Place the equipment in a strong carton with at least **THREE INCHES** of *resilient* packing material (shredded paper, excelsior, etc.) on all sides. Use additional packing material where there are protrusions (control sticks, large knobs, etc.). If the unit weighs over 15 lbs., place this carton in another one with 3/4" of packing material between the two.

Seal the carton with reinforced gummed tape, tie it with a strong cord, and mark it "Fragile" on at least two sides. Remember, the carrier will not accept liability for shipping damage if the unit is insufficiently packed. Ship by prepaid express, United Parcel Service, or insured Parcel Post to:

Heath Company
Service Department
Benton Harbor, Michigan 49022



HEATH COMPANY • BENTON HARBOR, MICHIGAN
THE WORLD'S FINEST ELECTRONIC EQUIPMENT IN KIT FORM

LITHO IN U.S.A.