


# '50s TELECASTER<sup>®</sup>, 013-1202

3 WAY SWITCH POSITION			
 3	 2	 1	
			← NECK PICKUP (A)
			← BRIDGE PICKUP (B)
	PICKUP IS ON		INDICATES POSITION OF 3 WAY SWITCH
	PICKUP IS OFF		
A	PICKUP (NECK)		 1
B	PICKUP (BRIDGE)		

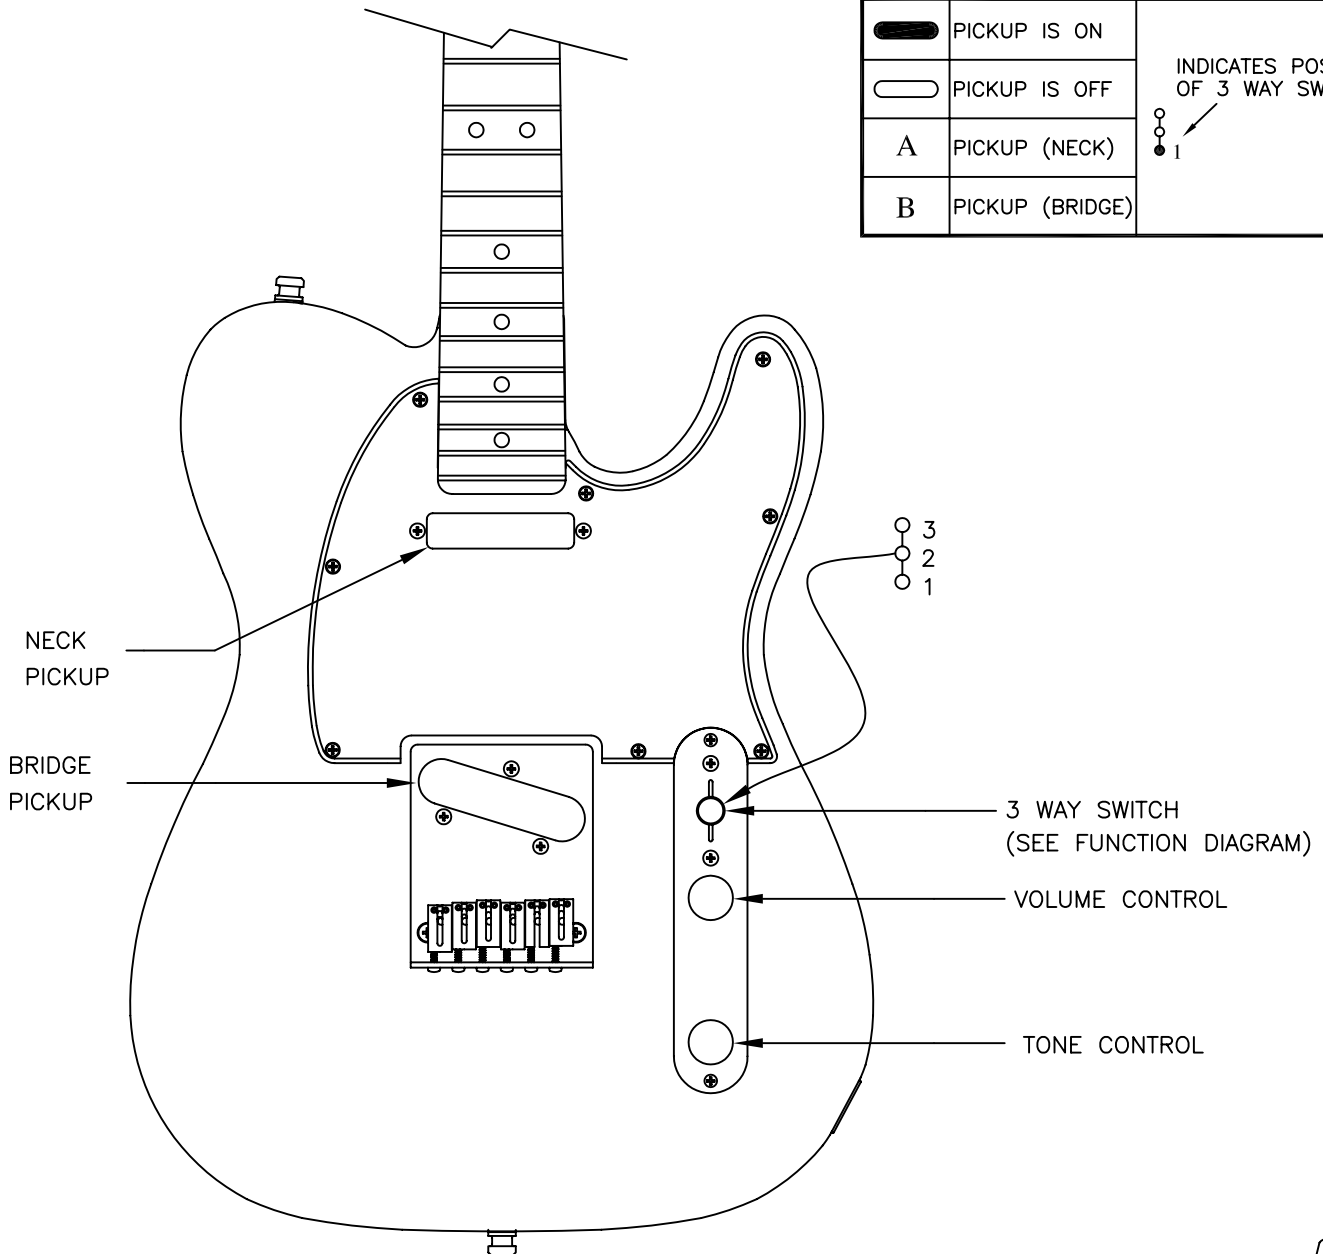

*Fender*<sup>®</sup>