

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
0A3	50	37	*70	2	11	3	5	1	10I3	2	40	*70	7	1	2	6	1	1S5	2	40	54	7	1	5	6	1
*Normally Shows Short on Position No. 11.									*Normally shows short position 5-11									70								
*Normally Shows Grid Emission.									1DG3									70								
0A3A	50	37	*70	2	11	3	5	1	*No short test.									1T4								
*Normally shows short on position 11									*Tube good if it reads 20 or more.									1T5								
*Normally shows grid emission									1D-K1									1U4								
0B3	50	37	*69	2	11	3	5	1	*Insert leads into pins 4 & 5 of socket 40.									1U5								
*Normally Shows Short on Position No. 11.									*Top cap goes to top lead									75								
*Normally Shows Grid Emission.									*Tube good if it reads 20 or more.									1V2								
0C3	50	37	*85	2	11	3	5	1	1DK29									2AF4								
*Normally Shows Short on Position No. 11.									*Insert leads into pins 4 & 5 of socket 40.									*Normally shows short position 1-7								
*Normally Shows Grid Emission.									Top cap goes to top lead.									2AH2								
0C3A	50	37	*85	2	11	3	5	1	*Tube good if it reads 20 or more.									2AS2								
*Normally shows short on position 11									75									2AV2								
*Normally shows grid emission									1DN5									*Tube good if it reads 55 or more.								
0D3	50	37	*99	2	11	3	5	1	1DY4									2A22								
*Normally Shows Short on Position No. 11.									*Normally Shows Short Position 1-7									2B3								
*Normally Shows Grid Emission.									1IF1									2BA2								
*Tube Good If It Reads 60 or More.									1IF2									2BJ2								
0D3A	50	37	*99	2	11	3	5	1	1IF3									2BN4								
*Normally shows short on position 11									1IF5									*Normally Shows Short Position 1-6.								
*Normally shows grid emission									1IF7									2BU2								
*Tube good if reads 60 or more									1IFD1									*Tube good if it reads 30 or more.								
0Z4	6	31	8					1	1IFD9									2C51								
8									2									6								
1A3	2	40	*70	7	1	2	6	1	1IG3									2CN3A								
*Normally Shows Short on Position 5 and 11.									1IG6									2CW4								
1A5	2	37	53	7	2	12	5	1	1IH2									*For Grid Emission Turn D Switch to Position 4.								
1A7	2	37	54	7	2	12	5	1	1IH5									2CY5								
1AB6	1	40	54	7	1	12	4	1	1IH6									2D21								
1AC6	1	40	48	7	1	12	4	1	1IH35									2DL4								
1AD2	1	32	93					1	1IJ3									*Normally shows short position 1-3-6-9.								
1AF4	1	40	50	7	1	5	6	1	1IJ6									2DS4								
1AH5	1	40	58	7	1	12	6	1	1IK3									*For grid emission turn switch D to position 4.								
70									65									2DX4								
1AJ4	1	40	58	7	1	5	6	1	1IL4									*Normally Shows Short Position 2-6								
1AN5	1	40	40	7	1	5	6	1	1IL6									2DY4								
1AU2	1	39	*100	5	4	12	1	1	1ILA4									*Normally Shows Short Position 1-7								
*Tube good if it reads 20 or more.									1ILA6									2DZ4								
1AU3	1	32	95					1	1ILB4									*Normally shows short position 1-7								
1AX2	1	24	93					1	1ILC5									2E26								
1AY2	1	*38	95	1	9	12	10	1	1ILC6									*Normally Shows Short Position 4-6.								
*Connect two leads from 1AY2 bottom pins to pin holes No. 1 and 9 of Socket No. 38.									1ILD5									2EA5								
1B3	1	32	55					1	1ILE3									2EG4								
1B7	1	37	55	7	2	12	5	1	1ILG5									*For grid emission turn D switch to position 4.								
1BC2	1	24	57					1	1ILH4									2EN5								
1BG2	1	39	*75	4	5	1	10	1	1ILN5									2ER5								
*Insert leads into pins 4 & 5 of socket 40.									1IN2-A									2ES5								
Top cap goes to top lead.									1IN5									2EV5								
*Tube good if it reads 20 or more.									1IP5									2FH5								
1BH2	1	*38	95	1	9	12	10	1	1IP10									2FQ5								
*Connect two leads from solder lugs of the 1BH2 to pin holes No. 1 and 9 of Socket No. 38.									*Normally Shows Short Position 2-6.									2FQ5A								
1BK2	1	24	*53					1	1IP11									2FS5								
*Tube good if it reads 40 or more.									1IQ5									2FV6								
1BQ2	1	24	56					1	1IR4									2FY5								
1BX2	1	24	56					1	1IR5									2GK5								
1BY2	1	37	*99	2	7	7	10	1	1IR-K23									2GU5								
*Tube good if it reads 20 or more.									1IR-K41									2GW5								
1C1	1	40	57	7	1	5	4	1	*Tube good if it reads 40 or more.									2HA5								
1C2	1	40	48	7	1	12	4	1	1IS2-A									2HK5								
1C3	1	40	54	7	1	12	4	1	1IS4									2HM5								
1C5	2	37	48	7	2	12	5	1	*Normally shows short position 2-6.									2HQ5								
1C7	2	37	54	7	2	12	5	1	1IS2-A									2HR8								
1D5GT	2	37	54	7	2	12	10	1	1IS4									2T4								
1D8	2	37	53	7	2	12	5	1	*Normally Shows Short Position 1-7.									3A2								
55									1									3A3								
75									1									3A3A								

◆Use TC-80 Adapter.

△Use TC-70 Adapter

*Normal Shorts Refer to Position of "D" Switch.

0A3-3A3A

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.
3A4	3	40	*36	7	1	5	4	1	3DF3	3	37	*75	3	8	5	10	1	3S4	3	40	*48	7	1	5	3	1
3A5	3	40	45	7	1	4	3	1	*No short test. *Tube good if it reads 20 or more.									3V4	3	40	45	7	1	5	6	1
3A8	3	37	54	7	2	1	10	1	3DG4	3	37	26	1	3	12	5	1	4AB8	4	38	37	5	4	12	9	1
3AB4	3	40	30	4	3	12	6	1	3DH3	3	37	*90	3	8	5	10	1	4AU6	4	1	82					1
3AF4	3	40	*24	4	3	2	6	1	*Tube good if it reads 40 or more. *No sort test.									4AU8	4	12	59					1
3AJ8	3	38	85	5	4	12	1	1	3DJ3	3	32	*30					1	4AV6	4	6	91					1
3AL5	3	5	62					1	*Tube good if it reads 30 or more.									4BA6	4	1	78					1
3AT2	3	Δ32	43					1	3DK3	3	1	61					1	4BC5	4	1	74					1
3AU6	3	1	82					1	3DR3	3	37	*90	3	8	5	10	1	4BC8	4	8	53					1
3AV6	3	6	88					2	*Tube good if it reads 40 or more. *Ignore all shorts except position 10.									4BE6	4	1	91					1
3AW2	3	32Δ	29					1	3DS3	3	37	*90	3	8	5	10	1	4BL8	4	11	66					1
3AW3	3	32	55					1	3DT6	3	1	91					1	4BN4	4	40	*33	4	3	2	7	1
3B2	3	32	72					1	3DX4	3	40	*62	3	4	1	7	1	*Normally Shows Short Position 2-6.								
3B7	3	36	45	8	1	4	3	1	3DY4	3	40	*24	4	3	2	6	1	4BN6	4	7	75					1
3BA6	3	1	78					1	3DZ4	3	40	*31	3	4	6	2	1	4BQ7	4	8	54					1
3BC5	3	1	74					1	*Normally shows short position 1-7									4BS8	4	8	54					1
3BE6	3	1	91					1	3EA5	3	1	80					1	4BU8	4	21	92					1
3BH2	3	42	*94	4	5	4	10	1	3EH7	3	38	30	5	4	3	2	1	4BX6	4	38	92	5	4	1	2	1
3BL2	3	Δ37	85	2	7	5	10	1	3EJ7	3	38	29	5	4	3	2	1	4BX8	4	38	33	5	4	12	2	1
3BM2	3	Δ32	30					1	3ER5	3	40	33	4	3	1	2	1	4BZ6	4	1	61					1
3BN2	3	Δ32	67					1	3ES5	3	40	33	4	3	1	2	1	4BZ7	4	8	53					1
3BN4	3	40	*33	4	3	2	7	1	3EV5	3	1	57					1	4BZ8	4	8	55					1
3BN6	3	7	75					1	3FH5	3	40	33	4	3	1	2	1	4CE5	4	1	62					1
3BS2Δ	3	32	23					1	3FQ5	3	40	33	4	3	1	2	1	4CM4	4	39	29	4	5	3	6	1
3BS2AΔ	3	32	23					1	3FQ5A	3	40	31	4	3	1	2	1	4CS6	4	1	94					1
3BT2Δ	3	37	*80	7	2	12	10	1	3FS5	3	1	99					1	4CY5	4	1	54					1
3BU8	3	21	92					1	3FY5	3	40	33	4	3	1	2	1	4DE6	4	1	61					1
3BW2Δ	3	37	*80	7	2	12	10	1	3GK5	3	40	25	4	3	1	2	1	4DK6	4	1	61					1
3BX6	3	38	33	5	4	1	2	1	3GK6	3	9	40					1	4DL4	4	38	*85	4	5	7	8	1
3BY6	3	1	91					1	3GS8	3	21	95					1	*Normally shows short position 1-3-6-9.								
3BY7	3	38	33	5	4	1	2	1	3GU5	3	40	27	3	4	2	1	1	4DL5	4	3	88					1
3BZ6	3	1	61					1	3GW5	3	40	29	3	4	6	2	1	4DT6	4	1	91					1
3C2	3	32	22					1	3GY5	3	35	*25	1	12	5	9	1	4EH7	4	38	30	5	4	3	2	1
3C4	2	40	48	7	1	5	6	1	*Normally Shows Short Position 1-3-4-7-10.									4EJ7	4	38	29	5	4	3	2	1
3CA3	3	32	55					1	3HA5	3	40	27	3	4	2	1	1	4ER5	4	40	33	4	3	1	2	1
3CB6	3	1	64					1	3HE7	3	35	27	1	12	10	2	1	4ES8	4	8	30					1
3CE5	3	1	62					1	3HF5	3	35	*25	1	12	9	5	1	4EWS	4	8	30					2
3CF6	3	1	60					1	*Normally shows short position 3-4-6-8-10-11.									4EW6	4	1	77					1
3CN3	3	32	30					1	3HK5	3	40	27	3	4	12	1	1	4GJ7	4	38	24	4	5	3	2	1
3CN3A	3	32	30					1	3HM5	3	40	27	3	4	2	1	1	4GK5	4	40	25	4	3	1	2	1
3CS6	3	1	94					1	3HM6	3	38	24	4	5	1	2	1	4GM6	4	1	64					1
3CU3	3	32	20					1	3HQ5	3	40	25	3	4	7	1	1	4GS7	4	14	80					1
3CV3	3	32	*40					1	3HS8	3	21	99					1	4GS8	4	21	95					2
3CX3	3	37	*88	3	8	5	10	1	3HT6	3	38	28	4	5	1	2	1	4GW5	4	40	29	3	4	6	?	1
3CY3	3	32	60					1	3JC6	3	38	25	4	5	1	2	1	4GX6	4	1	85					1
3CY5	3	1	54					1	3JC6A	3	9	59					1	4GX7	4	38	24	4	5	3	2	1
3CZ3	3	32	35					1	3JD6	3	38	26	4	5	1	2	1	4GZ5	4	40	26	3	4	2	5	1
3D6	2	36	43	8	1	7	6	1	3KF8	3	21	92					1	4HA5	4	40	27	3	4	2	1	1
3DA3	3	37	*88	3	8	5	10	1	*Ignore all shorts except position 10.									4HA7	4	35	35	1	12	5	9	1
3DB3	3	32	60					1	3M-R24	3	1	51					1	4HC7	4	35	*35	1	12	5	11	1
3DC3	3	32	*13					1	3M-V7	3	1	61					1	*Normally shows short position 7-10.								
*Tube good if it reads 30 or more.									3Q4	3	40	*42	7	1	5	3	1									
									3Q5	3	37	45	7	2	8	5	1									

◆ Use TC-80 Adapter.

△ Use TC-70 Adapter

*Normal Shorts Refer to Position of "D" Switch.

3A4-4HC7

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.
4HG8	4	38	25	4	5	3	2	1	5BK7	5	8	55					1	5HG8	5	38	24	4	5	3	2	1
			25	4	5	1	6	1				55					2				25	4	5	1	6	1
4HK5	4	40	27	3	4	12	1	1	5BQ5	5	23	68					1	5HZ6	5	1	83					1
4HM5	4	40	27	3	4	2	1	1	5BQ7	5	8	54					1	5J6	5	2	60					1
4HM6	4	38	24	4	5	1	2	1				54					2				60					2
4HQ5	4	40	25	3	4	7	1	1	5BR8	5	14	72					1	5JN6	5	1	61					1
4HR8	4	38	33	4	5	2	9	1				55					2	5JL6	5	1	23					1
4HS8	4	21	99					1	5BS8	5	8	54					1	5JW8	5	11	80					1
			99					2				54					2				85					2
4HT6	4	38	28	4	5	1	2	1	5BTR	5	38	33	5	4	12	8	1	5KD8	5	11	68					1
4JC6	3	38	25	4	5	1	2	1				54	5	4	12	1	1				52					2
4JD6	4	38	26	4	5	1	2	1				54	5	4	12	2	1	5KE8	5	38	24	4	5	12	2	1
4JH6	4	1	64					1	5BW8	5	38	33	5	4	2	6	1	5KZ8	5	38	26	4	5	12	2	1
4JK6	4	1	61					1				34	5	4	7	1	1				26	4	5	12	9	1
4JL6	4	1	23					1				34	5	4	7	3	1				26	4	5	12	9	1
4JW8	4	11	80					1	5BZ7	5	8	53					1	5LJ8	5	14	85					1
			85					2				53					2				60					2
4KE8	4	38	24	4	5	12	2	1	5CG8	5	14	73					1	5MB8	5	14	84					1
			24	4	5	12	9	1				57					2				61					2
4KF8	4	21	92					1	5C18	5	14	69					1	5MF8	5	35	35	1	12	6	7	1
			92					2				51					2				34	1	12	6	10	1
4KN8	4	38	86	4	5	12	1	1	5CM6	5	16	64					1	5M-HH3	5	2	56					1
			90	4	5	12	6	1	5CM8	5	38	33	5	4	12	2	1				56					2
4KT6	4	9	52					1				38	5	4	12	9	1	5M-K9	5	40	30	3	4	12	5	1
4LJ8	4	14	85					1	5CQ8	5	11	72					1	5MQ8	5	11	65					1
			60					2				55					2				66					2
4LU6	4	1	52					1	5CR8	5	38	*32	5	4	12	2	1	5N1039A	6	1	63					1
4MK8	4	21	98					1				*34	5	4	12	9	1	5P-29	6	29	*62					1
			98					2									1				53					2
4M-P12	4	1	60					1	5CU4	5	37	28	8	2	12	4	1									2
4M-P26	4	7	81					1				28	8	2	12	6	1									1
4R-HH2	4	8	53					1	5CZ5	5	16	60					1	5R4	5	33	22					2
			53					2	5DB4	5	33	16					1	5RDDH1	5	38	41	5	4	12	8	1
4R-HH8	4	38	86	4	5	12	1	1				16				2				35	5	4	12	1	1	
			90	4	5	12	6	1	5DH8	5	14	61					1			33	5	4	12	6	1	
			90					1				73					2	5R-HP1	4	11	66					1
4RHH15	4	8	53					1				16				1				55						2
5AF4	5	40	*24	4	3	2	6	1	5DJ4	5	33	16					1	5R-HR1	5	11	52					1
			*24					1				16					2				55					2
5AF11	5	35	31	1	12	12	11	1	5EA8	5	11	71					1	5R-K16	5	38	27	4	5	12	1	1
			31	1	12	12	6	1				56					2				27	4	5	12	8	1
			35	1	12	12	3	1	5EH8	5	12	71					1				27	4	5	12	8	1
5AM8	5	38	30	5	4	12	2	1				54					2	5T4	5	33	16					1
			30	5	4	12	8	1	5ES8	5	8	30					1				16					2
5AN8	5	13	62					1	5EOR	5	38	32	5	4	12	7	1	5T8	5	17	90					1
			61					2				32	5	4	12	2	1				63					2
5AQ5	5	3	77					1				32	5	4	12	2	1	5U4	5	33	16					1
5AR4	5	33	10					1	5EW6	5	1	77					1				16					2
			10					2	5FG7	5	14	68					1	5U8	5	11	79					1
5AS4	5	33	17					1				56					2				55					2
			17					2	5FV8	5	14	65					1	5U9	5	43	28	5	6	12	3	1
5AS8	5	38	31	5	4	12	2	1				54					2				32	5	6	12	10	1
			32	5	4	12	6	1	5GJ7	5	38	24	4	5	3	2	1	5V3	5	33	15					1
5AT8	5	14	77					1				26	4	5	3	9	1	5V4	5	33	12					2
			55					2	5GH8	5	11	68					1				12					1
5AU4	5	33	16					1				56					2				12					2
			16					2	5GH8A	5	11	68					1	5V6	5	29	79					1
5AV8	5	22	62					1				56					2	5V9	5	43	31	5	6	12	3	1
			86					2	5GM6	5	1	64					1				30	5	6	12	8	1
5AW4	5	33	17					1	5GS7	5	14	80					1	5W4	5	33	32					1
			17					2				53					2				32					2
5AZ4	5	36	53	8	2	12	4	1	5GX6	5	1	85					1	5X4	5	37	47	8	7	12	3	1
			53	8	2	12	6	1	5GX7	5	38	24	4	5	3	2	1	5X8	5	12	73					1
5B8	5	22	62					1				24	4	5	3	9	1				61					1
			86					2	5HA7	5	35	35	1	12	5	9	1	5X9	5	43	30	5	6	12	3	1
5BC3	5	42	*33	1	3	6	5	1				35	1	12	5	11	1				30	5	6	12	10	1
			*33	1	3	8	9	1	5HB7	5	38	24	4	5	3	2	1	5Y3	5	33	32					1
			*33					1				24	4	5	3	9	1				32					1
			*33					2	5HC7	5	35	*35	1	12	5	9	1	5Y4	5	37	52	8	7	12	3	1
			*33					1				*35	1	12	5	11	1				52	8	7	12	5	1
			*33					2									1				52	8	7	12	5	1

*Normally Shows Short Position 2-3-8-9
 **Normally Shows Short Position 2-3-5-6

*Normally shows short position 7-10

*Normal Shorts Refer to Position of "D" Switch.

4HG8-5Y4

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
5Z4	5	33	12					1	6AL9	6	35	28	1	12	12	5	1	6AX8	6	11	73					1
			12					2				28	1	12	12	11	1				54					2
5Z10	5	33	16					1	6AL11	6	35	31	1	12	12	3	1	6AY3	6	42	27	5	4	7	2	1
			16					2				27	1	12	12	8	1	6AY3B	6	42	27	5	4	7	2	1
6A8	6	37	45	7	2	1	5	1	6AM4	6	38	*96	8	7	1	5	1	6AY11	6	35	30	1	12	12	5	1
6AB4	6	40	30	4	3	12	6	1	*Normally Shows Short Position 3-4-6-9.												30	1	12	12	8	1
6AB7	6	30	74					1	6AM5	6	40	34	4	3	12	1	1				30	1	12	12	3	1
6AB8	6	38	37	5	4	12	9	1	6AM6	6	40	30	4	3	12	1	1				30	1	12	12	10	1
			44	5	4	12	2	1	6AM8	6	38	30	5	4	12	2	1	6AZ8	6	38	32	5	4	12	6	1
6AB9	6	43	79	5	6	10	2	1				30	5	4	12	8	1				36	5	4	12	9	1
			79	5	6	4	8	1	6AN4	6	40	*30	4	3	2	6	1	6B4	6	37	35	7	2	12	5	1
6AC5	6	37	40	7	2	12	5	1	*May Show Short Position 1-7.									6B6	6	37	37	7	2	12	10	1
6AC7	6	30	60					1	6AN5	6	1	26					1				58	7	2	12	4	1
6AC9	6	35	28	1	12	3	9	1	6AN6	6	40	52	7	1	12	2	1				58	7	2	12	5	1
			45	1	12	3	2	1				52	7	1	12	3	1	6B8	6	37	55	7	2	12	10	1
			35	1	12	2	3	1				52	7	1	12	4	1				65	7	2	12	4	1
6AC10	6	35	35	1	12	2	3	1	6AN8	6	13	52	7	1	12	5	1				65	7	2	12	5	1
			32	1	12	12	7	1				62	7	1	12	5	1	6B10	6	35	34	1	12	12	3	1
			32	1	12	12	9	1	6AQ4	6	40	*29	4	3	6	1	1				34	1	12	12	5	1
			32	1	12	12	11	1	*Normally Shows Short Position 2-5.												34	1	12	12	10	1
6AD7	6	37	54	7	2	12	5	1	6AQ5	6	3	77					1	6B31	6	5	62					1
			62	7	2	12	1	1	6AQ6	6	6	89					2				62					2
6AD10	6	35	30	1	12	12	3	1	6AQ7	6	37	45	8	7	12	4	1	6B32	6	5	62					1
			33	1	12	12	8	1				58	8	7	12	1	1				62					2
6AF3	6	15	12					1	6AQ8	6	8	70	8	7	12	3	1	6BA3	6	42	33	4	5	7	2	1
6AF4	6	40	*24	4	3	2	6	1				58	8	7	12	1	1	6BA6	6	1	78					1
6AF9	6	43	27	5	6	7	1	1	6AR5	6	3	91					2	6BA7	6	38	33	5	4	12	2	1
			27	5	6	2	8	1	6AR6	6	37	33	8	6	12	7	1	6BA8	6	12	53					1
6AF11	6	35	31	1	12	12	11	1	6AR8	6	38	30	5	4	12	6	1				59					2
			31	1	12	12	6	1	6AR11	6	35	28	1	12	12	5	1	6BA11	6	35	29	1	12	12	4	1
			35	1	12	12	3	1				28	1	12	12	10	1				37	1	12	12	9	1
6AG5	6	1	80					1	6AS5	6	4	55					1	6B-B14♦	6	42	*33	4	5	1	2	1
6AG7	6	30	38					1	6AS6	6	1	77					1	*Normally shows short position 3-6-7-8.								
6AG9	6	35	30	1	12	12	5	1	6AS7	6	37	35	8	7	12	1	1	6BC4	6	39	30	5	4	3	7	1
			28	1	12	12	11	1	6AS8	6	38	35	8	7	12	4	1	6BC5	6	1	74					1
6AG11	6	35	28	1	12	12	8	1				32	5	4	12	2	1	6BC7	6	38	32	5	4	12	2	1
			28	1	12	12	5	1	6AS11	6	35	32	1	12	12	6	1				32	5	4	12	8	1
			33	1	12	12	10	1				32	1	12	12	3	1	6BC8	6	8	53					1
			33	1	12	12	3	1	6AT6	6	6	85					2				53					2
6AH4	6	37	33	7	2	12	1	1	6AT8	6	14	77					1	6BC32	6	6	91					1
6AH6	6	1	58					1				55					2				78					2
6AH7	6	37	48	8	7	12	1	1	6AU4	6	34	10					1	6BD5	6	37	29	7	2	12	1	1
			48	8	7	12	5	1	6AU5	6	28	71					1	6BD6	6	1	85					1
6AH9	6	35	37	1	12	5	2	1	6AU6	6	1	82					1	6BD11	6	35	26	1	12	12	11	1
			30	1	12	5	6	1	6AU7	6	8	75					2				31	1	12	12	3	1
6AJ4	6	38	*84	8	7	1	5	1	6AU8	6	12	56					1				31	1	12	12	6	1
*Normally Shows Short Position 3-4-6-9.									6AV5	6	28	72					2	6BE3	6	35	26	1	12	4	10	1
6AJ5	6	40	36	4	3	2	1	1	6AV6	6	6	91					1	6BE6	6	1	91					1
6AJ7	6	30	60					1	6AV11	6	35	30	1	12	12	7	1	6BE7	6	38	33	5	4	3	7	1
6AJ8	6	38	85	5	4	12	1	1				30	1	12	12	9	1	6BE8	6	14	72					1
			38	5	4	12	9	1				30	1	12	12	11	1				55					2
6AJ9	6	43	29	5	6	12	3	1	6AV8	6	12	44					1	6BF5	6	3	40					1
			33	5	6	12	10	1	6AX2	6	24	88					1	6BF6	6	6	85					1
6AK5	6	1	63					1	6AX3	6	35	30	1	12	10	4	1	6BF8	6	38	25	4	5	12	1	1
6AK6	6	1	82					1	6AX4	6	34	13					1				25	4	5	12	2	1
6AK7	6	30	38					1	6AX5	6	37	44	7	2	1	5	1				25	4	5	12	3	1
6AK8	6	17	90					1				44	7	2	1	3	1				25	4	5	12	3	1
			63					2	6AX7	6	8	*85					1	6BG6	6	26	66					1
6AK9	6	35	33	1	12	6	10	1	*Tube Good if it Reads 72 or More.									6BH3	6	42	27	5	4	7	2	1
			35	1	12	6	3	1	6AW8	6	12	44					1	6BH3A	6	42	27	5	4	7	2	1
			31	1	12	6	8	1	6AX2	6	24	88					1	6BH6	6	1	89					1
6AK10	6	35	32	1	12	12	7	1	6AX3	6	35	30	1	12	10	4	1	6BH8	6	12	59					1
			32	1	12	12	9	1	6AX4	6	34	13					1				54					2
			32	1	12	12	11	1	6AX5	6	37	44	7	2	1	5	1									1
6AL3*	6	39	30	5	4	7	3	1				44	7	2	1	3	1									1
*If no test, use alternate settings.												90	1	12	12	11	1									1
6AL3	6	39	30	5	4	3	7	1	6AX8	6	12	44					1									1
6AL5	6	5	62					1	6AX2	6	24	88					1									1
			62					2	6AX3	6	35	30	1	12	10	4	1									1

♦Use TC-80 Adapter.

▲Use TC-75 Adapter.

*Normal Shorts Refer to Position of "D" Switch.

5Z4-6BH8

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
6BH11	6	35	27	1	12	12	4	1	6BW8	6	38	33	5	4	2	6	1	6CK3	6	42	25	4	5	7	2	1
			27	1	12	12	6	1				34	5	4	7	1	1	6CK4	6	37	34	7	2	1	3	1
			27	1	12	12	8	1				34	5	4	7	3	1	6CK6	6	38	30	5	4	12	2	1
6BJ3	6	35	26	1	12	4	10	1	6BW11	6	35	30	1	12	12	3	1	6CL3	6	42	27	4	5	2	7	1
6BJ6	6	1	81					1			30	1	12	12	11	1	6CL5	6	26	54					1	
6BJ7	6	38	33	5	4	12	2	1	6BX6	6	38	33	5	4	1	2	1	6CL6	6	38	*32	5	4	2	9	1
			33	5	4	12	6	1	6BX7	6	25	55					1	*Normally Shows Short Position 3-8.								
			33	5	4	12	8	1	6BX8	6	38	33	5	4	12	2	1	6CL8	6	14	69					1
6BJ8	6	38	38	5	4	12	8	1			33	5	4	12	7	1				51						2
			34	5	4	12	1	1	6BY5	5	37	38	7	2	12	4	1	6CM3	6	42	30	4	5	2	7	1
			34	5	4	12	6	1	6BY6	6	1	93					1	6CM4	6	39	29	4	5	3	6	1
6BK4▲	6	37	78	7	2	6	5	1	6BY7	6	38	33	5	4	1	2	1	6CM5	6	27	58					1
6BK4▲	6	37	78	7	2	6	5	1	6BY8	6	38	34	5	4	12	1	1	6CM6	6	16	64					1
6BK4B▲	6	37	78	7	2	6	5	1			34	5	4	12	6	1	6CM7	6	19	80					1	
6BK5	6	10	53					1	6BY11	6	35	32	1	12	12	3	1	6CM8	6	38	33	5	4	12	2	1
6BK6	6	6	86					1			32	1	12	12	8	1				38	5	4	12	9	1	
			70					2	6BZ3	6	35	30	1	12	4	10	1	6CN6	6	29	*62					1
6BK7	6	8	55					1	6BZ6	6	1	61					1	*For Plate Cap Use Jack Next to Socket 26.								
			55					2	6BZ7	6	8	53					1	6CN7	6	18	94					1
6BK11	6	35	35	1	12	12	7	1			53						1			60					2	
			35	1	12	12	9	1	6BZ8	6	8	55					1	6CQ4	6	34	11					1
			35	1	12	12	11	1			55						1	6CQ6	6	40	35	4	3	12	1	1
6BL4	6	34	10					1	6C4	6	40	41	4	3	1	6	1	6CQ8	6	11	72					1
6BL7	6	25	57					1			41						1			55					2	
			57					2	6C5	6	29	99					1	6CR6	6	40	39	4	3	12	7	1
6BL8	6	11	66					1	6C8	6	37	48	7	2	12	5	1				61	4	3	12	2	1
			55					2	6C9	6	38	28	5	4	6	1	1	6CR8	6	38	*32	5	4	12	2	1
6BM8	6	38	33	5	4	12	3	1			48	7	2	12	10	1				*34	5	4	12	9	1	
			39	5	4	12	1	1	6C10	6	35	42	1	12	12	7	1	*Normally Shows Short Position 8								
6BN4	6	40	*33	4	3	2	7	1	6C16	6	11	66					1	6CS6	6	1	94					1
								1			66						1	6CS7	6	20	96					1
								2			55						2			95					2	
								1	6C18	6	38	30	4	5	8	7	1	6CT3	6	38	32	4	5	6	2	1
								1			42	1	12	12	9	1	6CU5	6	4	47					1	
6BN5	6	38	*39	5	4	1	2	1	6C31	6	40	*80	4	3	1	7	1	6CU6	6	27	69					1
								1			33	4	5	8	9	1	6CU8	6	38	32	5	4	1	7	1	
6BN6	6	7	75					1			33	4	5	8	9	1				33	5	4	6	8	1	
6BN8	6	38	35	5	4	12	8	1			42	1	12	12	11	1	6CW4	6	41	*87	10	12	12	2	1	
								1			42	1	12	12	11	1	*For Grid Emission Turn D Switch to Position 4.									
								1	6CA4	6	38	34	5	4	12	1	1	6CW5	6	1	94					1
6BN11	6	35	29	1	12	12	3	1			34	5	4	12	7	1	6CW7	6	38	33	5	4	7	2	1	
			29	1	12	12	7	1			55									33	5	4	7	6	1	
6BQ5	6	23	68					1			55						6CX8	6	12	45					1	
6BQ6	6	27	69					1	6CA5	6	4	55								67						2
6BQ7	6	8	54					1	6CA7	6	29	53					1	6CY5	6	1	54					1
			54					2	6CA11	6	35	35	1	12	8	3	1	6CY7	6	38	31	5	4	2	3	1
6BR3	6	15	10					1			33	1	12	8	6	1	6CZ5	6	16	60					1	
6BR8	6	14	72					1			60						6D1	6	40	43	4	3	1	6	1	
								2	6CCY2	6	38	29	9	1	12	3	1	6D2	6	5	62					1
6BS3	6	42	27	4	5	2	7	1			29	9	1	12	7	1				62					2	
6BS3A	6	42	27	4	5	2	7	1	6CD3	6	35	*27	1	12	4	10	1	6D4	6	40	43	4	3	12	1	1
6BS8	6	8	54					1	*Some tubes may show short position 5-6-8-9.							6D8	6	37	43	7	2	12	5	1		
			54					2	6CD6	6	26	53					1	6D10	6	35	32	1	12	12	7	1
6BT6	6	6	85					1	6CE3	6	35	25	1	12	4	10	1				32	1	12	12	9	1
			78					2	6CE5	6	1	62					1			32	1	12	12	11	1	
6BT8	6	38	33	5	4	12	8	1	6CF6	6	1	60					1	6DA4	6	34	11					1
			54	5	4	12	1	1	6CG3	6	35	30	1	12	4	10	1	6DA6	6	38	34	5	4	1	2	1
			54	5	4	12	2	1	6CG7	6	8	76					1	6DB5	6	16	30					1
6BU6	6	6	85					1			76						2	6DB6	6	1	87					1
			80					2	6CG8	6	14	73					1	6DC6	6	1	67					1
6BU8	6	21	92					1			57						2	6DC8	6	38	33	5	4	12	2	1
			92					2	6CH3	6	42	29	4	5	7	2	1				60	5	4	12	7	1
6BV8	6	38	31	5	4	12	2	1	6CH6	6	38	28	5	4	12	2	1				60	5	4	12	8	1
								1	6CH8	6	38	33	5	4	12	7	1									1
								1			36	5	4	12	8	1		6DE4	6	34	13					1
6BV11	6	35	30	1	12	12	6	1	6CJ3	6	42	25	4	5	7	2	1</									

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater Socket	Sensitivity	A	B	C	D	Test Pos.							
6DJ8	6 38	31	5	4	12	2	1	6EF4*	6 35 76	1 12 6 4 1	6FG7	6 14	68			1	6FH5	6 40	33	4	3	1	2	1						
6DK3	6 42	31	4	5	2	7	1	*Insert a 2.7K 1W 5% resistor from pin hole No. 4 to No. 6 of socket No. 36, remove resistor after test is completed.		6FH8	6 38	32	5	4	12	6	1	32	5	4	12	2	1							
6DK6	6 1	61					1	*Normally shows short position 2-9.		6FJ7	6 35	36	1	12	12	3	1	6FM7	6 35	25	1	12	3	8	1					
6DL3	6 42	29	4	5	7	2	1	6EH4*	6 35 80	1 12 6 4 1	6FM8	6 38	47	5	4	12	8	1	6FM8	6 38	47	5	4	12	8	1				
6DL4	6 38	*85	4	5	7	8	1	*Insert a 2.7K, 1w., 5% resistor from pin hole #4 to #6 of socket #37. Remove resistor after test is completed.		6FQ5	6 40	34	5	4	12	2	1	6FQ5A	6 40	31	4	3	1	2	1					
6DL5	6 3	88					1	*Normally shows short position 2-5-9-11.		6FQ7	6 8	68				2	6FR7	6 38	24	4	5	2	3	1						
6DM4	6 34	11					1	6EJ4*	Use 6EF4 settings.	6FS5	6 1	99				1	6FV6	6 1	54					1						
6DN3	6 42	31	4	5	2	7	1	*May show short position 2-9-11.		6FV8	6 14	65				1	6FW5	6 28	57					1						
6DN6	6 26	47					1	6EJ7	6 38 29	5 4 3 2 1	6FW8	6 8	30				1	6FY5	6 40	33	4	3	1	2	1					
6DN7	6 25	56					1	6EL4▲	6 37 78	7 2 6 5 1	6FY7	6 35	25	1	12	12	3	1	6FY8	6 38	30	4	5	12	3	1				
6DQ3	6 35	30	1	12	4	10	1	6EM5	6 16 53		6G6	6 29	94				1	6G6	6 29	94				1						
6DQ4	6 34	11					1	6EM7	6 37 32	8 7 12 1 1	6G11	6 35	33	1	12	12	3	1	6G11	6 35	33	1	12	12	3	1				
6DQ5	6 26	55					1	6EN4	6 37 *40	7 2 6 5 1	6G-B3A	6 27	65				1	6GB5♦	6 42 *25	4 5 2 1 1	1	6G-B6	6 27	64				1		
6DQ6	6 27	65					1	*Normally shows short position 1-3-4-8.		6FY8	6 38	39	4	5	12	1	1	6G-B7	6 27	58				1						
6DQ6B	6 27	62					1	*Tube good if it reads 40 or more.		6G8	6 38	30	4	5	12	3	1	6GB9	6 27	64				1						
6DR4	6 40	43	4	3	1	6	1	6EQ7	6 38 34	5 4 12 2 1	6G8	6 38	30	39	4	5	12	1	6GC5	6 16	26				1					
6DR7	6 38	*32	4	5	2	3	1	6ER5	6 40 33	4 3 1 2 1	6G8	6 38	30	39	4	5	12	1	6GC6	6 26	52				1					
6DR8	6 38	*40	4	5	2	7	1	6ES5	6 40 33	4 3 1 2 1	6G8	6 38	30	39	4	5	12	1	6GD7	6 14	74				1					
6DS4	6 41	*87	10	12	12	2	1	6ES8	6 8 30		6G8	6 38	30	39	4	5	12	1	6GE5	6 35 *24	1 12 11 3	1	6G8	6 38	33	5	4	12	8	1
6DS5	6 3	76					1	*For Grid Emission Turn D Switch Position 4.		6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1					
6DS8	6 38	30	5	4	12	2	1	6EJb	6 40 30	4 3 12 1 1	6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6DT3	6 35	31	1	12	4	10	1	6ET7	6 38 30	5 4 12 7 1	6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6D14	6 34	11					1	6EU7	6 38 35	2 1 12 8 1	6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6DT5	6 16	45					1	6EU8	6 38 32	5 4 12 7 1	6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6DT6	6 1	91					1	6EV5	6 1 57		6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6DT8	6 8	71					1	6EV7	6 8 78		6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6DU3	6 35	30	1	12	4	10	1	6EX6	6 26 42		6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6DW4	6 42	27	4	5	2	7	1	6EY6	6 29 65		6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6DW5	6 16	30					1	6EZ5	6 29 65		6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6DX4	6 40	*62	3	4	1	7	1	6EZ8	6 38 33	5 4 12 2 1	6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6DX8	6 38	26	4	5	12	8	1	6F5	6 37 40	7 2 1 10 1	6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6DY5	6 23	68					1	6F6	6 29 91		6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6DZ4	6 40	*31	3	4	6	2	1	6F8	6 37 45	7 2 12 5 1	6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6DZ7	6 37	40	7	2	12	1	1	6F10	6 30 60		6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6DZ8	6 38	27	4	5	8	3	1	6F21	6 40 35	4 3 12 1 1	6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6E8	6 37	45	7	2	1	5	1	6F22	6 38 40	5 4 2 9 1	6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6EA4*	6 35	80	1	12	6	4	1	6F29	6 9 40		6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
*Insert a 2.7K 1W 5% resistor from pin hole No. 4 to No. 6 of socket No. 36. Remove resistor after test is completed.								6F31	6 1 78		6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
*Normally shows short position 2-5-9-11.								6F33	6 1 77		6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6EA5	6 1	80					1	6F36	6 1 58		6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6EA7	6 37	35	8	7	12	1	1	6F40	6 38 39	5 4 2 9 1	6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6EA8	6 11	71					1	6FA7	6 38 33	5 4 12 7 1	6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6EB5	6 5	71					2	6FC7	6 38 29	4 5 7 2 1	6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6EB8	6 12	35					1	6FD6	6 40 26	3 4 2 1 1	6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6EC4	6 37	32	7	8	2	5	1	6FD7	6 38 25	4 5 2 3 1	6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
6ED4♦	6 42	*52	4	5	12	8	1	6FE5	6 29 37		6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				
*Normally shows short position 2-3-6-7-9.								6FG5	6 40 31	4 3 2 1 1	6G8	6 38	30	39	4	5	12	1	6G8	6 38	33	5	4	12	3	1				

■ Use TC-62B Adapter

▲ Use TC-75 Adapter.

*Normal Shorts Refer to Position of "D" Switch.

♦ Use TC-80 Adapter.

6DJ8 - 6GL7

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.							
6GM5	6	38	*26	4	5	2	6	1	6HG8	6	38	25	4	5	3	2	1	6JE6B	6	42	*26	4	5	6	2	1							
*May Show Short Position 3-8.																		*Normally shows short position 1-7.															
6GM6	6	1	64					1	6HJ5	6	35	*27	1	12	3	11	1	6JE6C	6	42	*26	4	5	6	2	1							
6GM8	6	38	33	5	4	12	2	1	*Normally shows short position 4-5-9-10									*Normally shows short position 1-7.															
			33	5	4	12	7	1	6HJ7	6	38	*78	4	5	1	7	1	6JE8	6	12	56					1							
6GN7	6	9	21					1				30	4	5	1	9	1									2							
6GN8	6	12	36					1	*For grid emission turn D switch to position 2.									6JF6	6	42	*26	4	5	2	6	1							
			98					2	6HJ8	6	38	29	5	4	12	2	1	*Normally shows short position 1-7.															
6GQ7	6	38	24	4	5	3	2	1				31	5	4	12	8	1	6JG5	6	12	29					1							
			24	4	5	3	6	1	6HK5	6	40	27	3	4	12	1	1	6JG6	6	42	24	4	5	1	2	1							
6GS7	6	14	80					1	6HL5	6	38	30	4	5	1	2	1	6JG6A	6	42	24	4	5	1	2	1							
			53					2	6HL8	6	11	60					1	6JH5	6	35	*32	1	12	11	2	1							
6GS8	6	21	95					1	6HM5	6	40	27	3	4	2	1	1	*Normally shows short position 3-7-8-10															
			95					2	6HM6	6	38	24	4	5	1	2	1	6JH6	6	1	64					1							
6GT5	6	42	*30	4	5	6	2	1	6HQ5	6	40	25	3	4	/	1	1	6JH8	6	38	30	4	5	12	6	1							
*Normally Shows Short Position 1-7.									6HR5	6	3	77					1	6JK5	6	35	*32	1	12	11	2	1							
6GT5A	6	42	*30	4	5	6	2	1	6HR6	6	1	71					1	*Normally shows short position 3-7-8-10															
*Normally shows short position 1-7.									6HS5	6	35	*30	1	12	11	2	1	6JK6	6	1	61					1							
6GU5	6	40	27	3	4	2	1	1	*Normally shows short position 3-10.									6JK8	6	8	54						1						
6GU7	6	8	56					1	6HS6	6	1	66					1	6JL6	6	1	23					1							
			56					2	6HS8	6	21	99					2	6JL8	6	12	40					1							
6GV5	6	35	*26	1	12	5	9	1				99				2	6JM6	6	35	26	1	12	4	5	1								
*Normally Shows Short Position 3-4-7-10-11.									6HT5	6	35	*52	1	12	2	6	1	6JN6	6	35	27	1	12	4	11	1							
6GV7	6	38	30	4	5	8	7	1	*May show short position 4-7-9-11.									6JN8	6	14	67					1							
			33	4	5	8	9	1	6HT6	6	38	28	4	5	1	2	1	6JQ6	6	38	*34	4	5	8	7	1							
6GV8	6	38	25	4	5	12	9	1	6HU6	6	38	52	4	5	2	1	1								2								
			25	4	5	12	2	1	6HU8	6	38	29	4	5	12	2	1	*May show short position 2-3.															
6GW5	6	40	29	3	4	6	2	1				29	4	5	12	6	1	6JR6	6	42	34	4	5	1	2	1							
6GW6	6	27	62					1	6HV5	6	35	*33	1	12	2	11	1	6JS6	6	35	*29	1	12	9	5	1							
6GW8	6	38	25	4	5	2	8	1	*Normally shows short position 3-10.									*Normally shows short position 3-4-10-11															
			35	4	5	7	1	1	6HW8	6	38	32	4	5	12	6	1	6JT6	6	42	27	4	5	1	2	1							
6GX6	6	1	85					1	6HZ5	6	35	*30	1	12	2	11	1	6JT6A	6	42	27	4	5	1	2	1							
6GX7	6	38	24	4	5	3	2	1	*Normally shows short position 3-10									6JT8	6	12	20					1							
			24	4	5	3	9	1	6HZ6	6	1	83					1								2								
6GY5	6	35	*25	1	12	5	9	1	6HZ8	6	12	28					2	*Tube good if it reads 60 or more.															
*Normally shows short position 3-4-7-10-11.									6J4	6	40	*85	4	3	1	7	1	6JU6	6	42	*30	4	5	2	6	1							
6GY6	6	1	82					1	*Normally Shows Short Position 5-6.									*Normally shows short position 1-7.															
6GY8	6	38	*32	5	4	12	1	1	6J5	6	29	93					1	6JU8	6	38	*32	4	5	2	1	1							
			*32	5	4	12	3	1	6J6	6	2	60					2	*Normally Shows Short Position 8.															
			*94	5	4	12	6	1	*Normally Shows Short Position 2.									6JU8A	6	38	*32	4	5	2	1	1							
6GZ5	6	40	30	3	4	2	5	1	6J7	6	37	50	7	2	1	10	1	*Normally shows short position 2.															
6H6	6	37	48	7	2	1	3	1	6J9	6	38	26	4	5	12	2	1	6JV8	6	11	80					1							
			48	7	2	1	5	1	*Normally Shows Short Position 3-9.									6JW8	6	11	85					2							
6H31	6	1	91					1	6J8	6	38	25	4	5	12	7	1	6JX8	6	38	23	4	5	12	2	1							
6HA5	6	40	27	3	4	2	1	1	6JB5	6	35	*35	1	12	9	2	1	6JY8	6	12	40					1							
6HA6	6	9	23					1	*Normally shows short position 3-4-10-11.									6JZ6	6	35	*31	1	12	9	5	1							
6HB5	6	35	*25	1	12	11	3	1	6JB6	6	42	*29	4	5	6	2	1	*Some tubes may show short position 3-4-10-11.															
*Normally Shows Short Position 4-10.									6J10	6	35	96	1	12	12	6	1	6JZ8	6	35	29	1	12	6	7	1							
6HB6	6	38	*24	4	5	6	2	1	6J11	6	35	22	1	12	12	5	1	6K6	6	29	92					1							
*Normally Shows Short Position 3-9.									6JA8	6	38	25	4	5	12	7	1	6K7	6	37	52	7	2	1	10	1							
6HB7	6	38	24	4	5	3	2	1	6JB8	6	38	24	4	5	1	2	1	6K8	6	37	35	7	2	1	5	1							
			24	4	5	3	9	1	*Normally shows short position 3-4-10-11.									6K11	6	35	38	1	12	12	7	1							
6HC8	6	38	36	5	4	12	3	1	6JB6	6	42	*29	4	5	6	2	1	6K11	6	35	38	1	12	12	9	1							
			38	5	4	12	1	1	*Normally Shows Short Position 1-7.									6KA8	6	38	26	4	5	12	6	1							
6HD5	6	35	*27	1	12	3	11	1	6JBG6A	6	42	*29	4	5	6	2	1	*Normally shows short position 1-7.															
*Normally shows short position 4-5-9-10									6JC5	6	35	*32	1	12	9	2	1	6KD6	6	35	*26	1	12	9	5	1							
6HD7	6	38	30	4	5	1	2	1	*Normally shows short position 3-4-10-11									*Normally shows short position 3-4-10-11.															
			30	4	5	1	9	1	6JC6	6	38	25	4	5	1	2	1	6K6	6	29	92					1							
6HE5	6	35	*32	1	12	9	2	1	6JC6A	6	9	59					1	6K7	6	37	52	7	2	1	10	1							
*Normally Shows Short Position 3-4-10-11									6JC8	6	38	24	4	5	1	2	1	6K8	6	37	35	7	2	1	5	1							
6HE7	6	35	27	1	12	10	2	1	6JD5	6	35	*30	1	12	2	11	1	6K11	6	35	38	1	12	12	9	1							
			27	1	12	10	9	1	*Normally shows short position 3-10									6KA8	6	38	26	4	5	12	6	1							
6HF5	6	35	*25	1	12	9	5	1	6JD6	6	38	26	4	5	1	2	1	*Normally shows short position 1-7															
*Normally Shows Short Position 3-4-6-8-10-11.									6JE6	6	42	*26	4	5	6	2	1	*Normally shows short position 3-4-10-11.															
6HF8	6	12	27					1																									
			80					2																									
6HG5	6	3	85					1																									

◆Use TC-80 Adapter.

*Normal Shorts Refer to Position of "D" Switch.

6GM5 - 6KD6

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	
6KD8	6	11	68					1	6LJ8	6	14	85					1	6ML8	6	38	34	4	5	12	6	1	
			52					2				60					2										
6KE8	6	38	24	4	5	12	2	1	6LM8	6	11	68					1										
			24	4	5	12	9	1				58					2										
6KF8	6	21	92					1	6LN8	6	11	66					1	6MN8	6	35	33	1	12	7	8	1	
			92					2				55					2										
6KG6♦	6	42	*26	4	5	1	8	1	6LP12	6	39	33	5	4	12	3	1										
			*Normally shows short position 2-3-6-7.										39	5	4	12	1	1	6M-P17	6	3	90					
6KL8	6	38	31	4	5	12	2	1	6LQ6	6	42	*26	4	5	6	2	1	1	6M-P18	6	40	34	3	4	7	1	1
			70	4	5	12	8	1				*Normally shows short position 1-7.						1	6M-P20	6	1	43					
6KM6	6	42	*29	4	5	6	2	1	6LQ8	6	12	31					1	6MQ8	6	11	65						
			*Normally shows short position 1-7										50				2										
6KM8	6	38	31	4	5	12	7	1	6LR6	6	35	*32	1	12	9	5	1	6MU8	6	11	42						
			75	4	5	12	3	1				*May show short position 3-4-7-10-11.															
6KN6	6	35	*30	1	12	9	5	1	6LR8	6	42	31	4	5	12	2	1	6MV8	6	12	63						
			*Normally shows short position 3-4-10-11.										31	4	5	12	9	1									
6KN8	6	38	39	4	5	12	9	1	6LT8	6	38	27	4	5	12	9	1	6MX8	6	42	27	4	5	12	2	1	
			86	4	5	12	1	1				27	4	5	1	6	1										
6KR8	6	12	90	4	5	12	6	1	6LU6	6	1	52					1	6MY8	6	35	27	1	12	6	7	1	
			22					1				32	4	5	1	8	1										
6KR8A	6	12	59					2	6LU8	6	35	27	1	12	6	7	1	6N3	6	38	29	4	5	6	9	1	
			22					1			35	27	1	12	6	10	1	6N7	6	37	47	7	2	1	4	1	
6KS6	6	7	59					2	6LV6	6	35	*31	1	12	5	9	1	6N8	6	38	47	7	2	1	5	1	
6KS8	6	12	83					1			*May show short position 3-4-7-10-11																
			33					1	6LW6	6	37	*31	7	8	1	5	1										
			84					2			*Normally shows short position 2-6.																
6KT6	6	9	52					1	6LX8	6	11	80					1	6NK7GT	6	30	84						
6KT8	6	12	67					1			85						2	6P5	6	29	93						
			91					2	6LY8	6	12	21					1	6P15	6	23	68						
6KU8	6	38	22	4	5	12	7	1			*99					2	6PL12	6	39	33	5	4	12	3	1		
			60	4	5	12	2	1			*Tube good if it reads 28 or more																
6KV6	6	42	60	4	5	12	3	1	6LZ6	6	42	*31	4	5	6	2	1	6Q7	6	37	40	7	2	1	10	1	
6KV8	6	12	22	4	5	1	2	1			*Normally shows short position 1-7																
			82					2	6M11	6	35	25	1	12	12	2	1	6Q8	6	37	45	7	2	1	5	1	
6KW6♦	6	42	30	4	5	1	8	1			25	1	12	12	8	1	1	6Q11	6	35	38	1	12	12	7	1	
6KY6	6	9	20					1	6MA6	6	37	*58	3	8	2	6	1										
6KY8	6	42	27	4	5	12	2	1			*Tube good if it reads 40 or more.																
			39	4	5	12	9	1			*No Short test.																
6KY8A	6	42	27	4	5	12	2	1	6MB6	6	35	*32	1	12	9	5	1	6R3	6	38	33	5	4	2	9	1	
			26	4	5	12	2	1			*Normally shows short position 3-4-10-11.																
6KZ8	6	38	26	4	5	12	2	1	6MB8	6	14	84					1	6R4	6	38	30	4	5	12	1	1	
			26	4	5	12	9	1			61						2	6R7	6	37	52	7	2	1	10	1	
6L5	6	37	53	7	2	6	5	1	6MC6	6	42	*29	4	5	6	2	1	6R8	6	17	86						
6L6	6	29	63					1			*Normally shows short position 1-7																
6L7	6	37	44	7	2	1	10	1	6MD8	6	42	35	4	5	12	6	1	6RA6	6	39	34	4	5	9	7	1	
6L10	6	30	38					1			35	4	5	12	8	1	6R-A9	6	38	30	4	5	7	2	1		
6L12	6	8	70					1			35	4	5	12	8	1	6R-B11	6	38	32	4	5	6	3	1		
6L41	6	38	33	5	4	8	9	1	6ME6	6	42	*29	4	5	6	2	1	6R-HH2	6	8	53						
6L43	6	38	*32	5	4	2	9	1			*Normally shows short position 1-7.																
			*Normally Shows Short Position 3-8.							6ME8	6	38	30	4	5	12	6	1	6R-HH8	4	38	86	4	5	12	1	1
6LB6	6	35	*30	1	12	9	5	1	6MF8	6	35	35	1	12	6	7	1	6R-K19	6	15	10						
			*Normally shows short position 3-4-10-11.									34	1	12	6	10	1	6R-P15	6	38	35	4	5	1	2	1	
6LB8	6	12	21					1	6MG8	6	11	80					1	6R-P22	6	38	*32	4	5	2	9	1	
			71					2			59					2											
6LC6▲	6	37	78	7	2	12	5	1	6M-H1	6	40	*85	4	3	1	7	1										
6LC8	6	38	24	4	5	3	6	1			*Normally shows short position 5-6																
6LD6	6	9	24	4	5	6	2	1	6MH6	6	35	*31	1	12	5	9	1	6S2	6	24	35						
6LD12	6	16	90					1			*May show short position 3-4-7-10-11																
			63					2	6M-HH3	6	2	56					1	6S4	6	16	58						
6LE8	6	38	29	4	5	12	9	1			56						2	6S7	6	37	47	7	2	1	10	1	
6LF6	6	35	*31	1	12	5	9	1	6MJ6	6	42	*26	4	5	6	2	1	6S8	6	37	45	8	7	5	10	1	
			*May show short position 3-4-7-10-11.									*Normally shows short position 1-7															
6LF8	6	12	55					1	6MJ8	6	35	35	1	12	7	8	1										
			95					2			35	1	12	7	11	1	1	6SA7	6	37	37	7	2	1	5	1	
6LG6	6	35	*32	1	12	9	5	1	6MK8	6	21	98					1	6SB7Y	6	37	34	7	2	1	5	1	
			*May show short position 2-3-4-7-10-11.									98						2	6SC7	6	37	48	8	7	1	3	1
6LH6▲	6	37	78	7	2	12	5	1	6M-L4	6	40	*24	4	3	2	6	1	6SD7	6	30	69						

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.
6SG7	6	30	77					1	6Y10	6	35	29	1	12	4	3	1	7KZ6	7	9	17					1
6SH7	6	30	77					1																		1
6SJ7	6	30	83					1	6Z10	6	35	30	1	12	12	11	1	7L7	6	36	36	8	1	12	6	1
6SK7	6	30	84					1				95	1	12	12	6	1	7M-P18	7	40	34	3	4	7	1	1
6SL7	6	25	*85					1										7N7	6	36	42	8	1	12	4	1
			*85					2	6Z31	6	40	44	4	3	12	1	1				42	8	1	12	5	1
			*Tube Good if it Reads 22 or More.					1	6ZY5	6	33	17						7Q7	6	36	35	8	1	12	4	1
6SN7	6	25	78					2	7A4	6	36	41	8	1	12	6	1	7R7	6	36	35	8	1	12	6	1
6SQ7	6	37	42	8	7	1	2	1	7A5	6	36	34	8	1	12	6	1				72	8	1	12	3	1
			71	8	7	1	4	1	7A6	6	36	48	8	1	12	3	1	7S7	6	36	38	8	1	12	6	1
6SR7	6	37	71	8	7	1	5	1	7A7	6	36	48	8	1	12	6	1				52	8	1	12	4	1
			46	8	7	1	2	1	7A8	6	36	45	8	1	12	6	1	7V7	6	36	32	8	1	12	6	1
			68	8	7	1	4	1	7AD7	6	36	40	8	1	12	4	1	7W7	6	36	31	8	1	4	6	1
			68	8	7	1	5	1	7AF7	6	36	35	8	1	12	6	1	7X6	6	36	35	8	1	12	3	1
6SS7	6	37	46	7	2	1	4	1	7AG7	6	36	41	8	1	12	4	1	7X7	6	36	35	8	1	12	6	1
6ST7	6	37	52	8	7	1	2	1	7AH7	6	36	32	8	1	12	6	1				43	8	1	12	3	1
			72	8	7	1	4	1	7AK7	6	36	32	8	1	12	6	1				36	8	1	12	5	1
			72	8	7	1	5	1	7AN7	7	38	33	5	4	7	2	1	7Y4	6	36	45	8	1	12	3	1
6SU7	6	37	43	8	7	12	4	1	7AU7	7	8	33	5	4	7	6	1	7Z4	6	36	45	8	1	12	6	1
			44	8	7	1	2	1	7B4	6	36	40	8	1	12	6	1				50	8	1	12	3	1
6SZ7	6	37	44	8	7	1	2	1				75									50	8	1	12	6	1
			72	8	7	1	4	1	7B5	6	36	52	8	1	12	6	1	8A8	8	11	66					1
6T4	6	40	*33	4	3	2	6	1	7B6	6	36	40	8	1	4	3	1	8AC9	8	35	28	1	12	3	9	1
			*Normally Shows Short Position 1-7.					1	7B7	6	36	45	8	1	12	6	1				45	1	12	3	2	1
6T8	6	17	90					2	7B8	6	36	68	8	1	4	5	1	8AC10	8	35	32	1	12	12	7	1
6T8A	6	17	63					1	7C4	6	36	68	8	1	4	6	1				32	1	12	12	9	1
			90					2	7C5	6	36	68	8	1	4	6	1	8AL9	8	35	28	1	12	12	5	1
6T9	6	35	27	1	12	12	8	1	7C6	6	36	50	8	1	4	3	1	8AR11	8	35	28	1	12	12	5	1
6T10	6	35	27	1	12	12	4	1				68	8	1	4	5	1				28	1	12	12	11	1
			28	1	12	12	3	1	7C7	6	36	68	8	1	4	6	1	8AU8	8	12	56					1
6U4	6	34	11					1	7D10	6	9	55						8AV11	8	35	72					2
6U6	6	29	54					1	7DJ8	7	38	31	5	4	12	2	1				30	1	12	12	7	1
6U7	6	37	35	7	2	12	10	1				31	5	4	12	7	1				30	1	12	12	9	1
6U8	6	11	79					2	7E5	6	36	*33	8	2	1	5	1	8AW8	8	12	44					1
6U9	6	43	55					1	*Normally Shows Short Position 3-4-6-7.			40	8	1	4	3	1				78					2
			28	5	6	12	3	1	7E6	6	36	40	8	1	4	3	1	8B8	8	38	33	4	5	12	3	1
6U10	6	35	32	1	12	12	7	1				69	8	1	4	5	1	8B10	8	35	34	1	12	12	3	1
			32	1	12	12	9	1	7E7	6	36	69	8	1	4	6	1				34	1	12	12	5	1
6V3	6	15	10					1	7ES8	7	8	69	8	1	4	6	1				34	1	12	12	8	1
6V4	6	38	40	5	4	12	1	1				68	8	1	12	3	1	8BA8	8	12	53					1
6V6	6	29	79					1	7EY6	7	29	65									59					2
6V8	6	38	40	5	4	12	6	1	7F7	6	36	45	8	1	12	4	1	8BA11	8	35	29	1	12	12	4	1
			32	5	4	12	2	1				45	8	1	12	5	1				37	1	12	12	9	1
			32	5	4	12	7	1	7F8	6	36	30	7	2	12	1	1	8BH8	8	12	59					1
6V9	6	43	31	5	6	12	3	1				30	7	2	12	8	1				54					2
6W4	6	34	30	5	6	12	8	1	7FC7	7	38	29	4	5	7	2	1	8BM11	8	35	30	1	12	12	6	1
6W6	6	29	51					1				29	4	5	7	6	1				30	1	12	12	11	1
6W7	6	37	50	7	2	12	10	1	7G7	6	36	36	8	1	12	6	1	8BN8	8	38	35	5	4	12	8	1
6X4	6	40	44	4	3	12	1	1	7GS7	7	14	80									35	5	4	12	1	1
6X5	6	33	15					1				53						8BN11	8	35	29	1	12	12	3	1
			15					2	7GV7	7	38	30	4	5	8	7	1				29	1	12	12	7	1
6X6	6	37	48	7	2	12	3	1				33	4	5	8	9	1	8BQ5	8	23	68					1
6X8	6	12	48	7	2	12	5	1	7H7	6	36	35	8	1	12	6	1	8BQ7	8	8	54					1
			73					1	7HG8	7	38	25	4	5	3	2	1				54					2
			61					2				25	4	5	1	6	1	8BQ11	8	35	28	1	12	12	5	1
6X9	6	43	30	5	6	12	3	1	7J7	6	36	35	8	1	12	6	1				28	1	12	12	10	1
			30	5	6	12	10	1				50	8	1	12	4	1	8BU11	8	35	28	1	12	12	8	1
6Y6	6	29	40					1	7K7	6	36	45	8	1	12	4	1				28	1	12	12	4	1
6Y9	6	43	27	5	6	12	1	1	7KY6	7	9	20									28	1	12	12	5	1
			27	5	6	12	8	1										8CB11	8	35	28	1	12	12	10	1

*Normal Shorts Refer to Position of "D" Switch.

6SG7 - 8CB11

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	
8CG7	8	8	76					1	8KT8	8	12	67					1	9KG6♦	9	42	*26	4	5	1	8	1	
			76					2				51					2										
8CH8	8	38	33	5	4	12	7	1	8LC8	6	38	24	4	5	3	6	1	9KV8	9	12	22					1	
			36	5	4	12	8	1				24	4	5	6	2	1				82					2	
8CL8	8	14	69					1	8LE8	8	38	29	4	5	12	9	1	9KX6	9	9	16					1	
			51					2	8LS6	8	9	44					1	9KZ8	9	38	26	4	5	12	2	1	
8CM7	8	19	80					1	8LT8	8	38	27	4	5	7	9	1				26	4	5	12	9	1	
			94					2				32	4	5	1	6	1	9LA6	9	9	21					1	
8CN7	8	18	94					1				32	4	5	1	8	1	9M-HH3	9	2	56					1	
			60					2	8MD8	8	42	35	4	5	12	6	1				56					2	
8CS7	8	20	96					1				35	4	5	12	8	1	9ML8	9	38	34	4	5	12	6	1	
			98					2				35	4	5	12	9	1					4	5	12	8	1	
8CU8	8	38	32	5	4	1	7	1	8M-P12	8	1	60					1					4	5	12	9	1	
			33	5	4	6	8	1	8MU8	8	11	42					1	9MN8	9	35	33	1	12	7	8	1	
8CW5	8	23	58					1				60					2				33	1	12	7	10	1	
8CX8	8	12	45					1	8R-HP1	8	38	33	4	5	12	3	1					33	1	12	7	11	1
			67					2				39	4	5	12	1	1	9M-P12	9	40	38	3	4	2	1	1	
8CY5	8	1	54					1	8RLP1	8	38	35	4	5	12	1	1	9R-A6	9	39	34	4	5	9	7	1	
			26	4	5	12	1	1				32	4	5	12	3	1	9R-AL1	9	38	33	4	5	2	3	1	
8CY7	8	38	31	5	4	2	3	1	8SN7	8	25	78					1	9R-HR2	9	11	68					1	
			45	5	4	2	7	1				78					2				56					2	
8D8	8	38	41	5	4	2	9	1	8U9	8	43	28	5	6	12	3	1	9U8	9	11	79					1	
8DE7	8	20	81					1				32	5	6	12	10	1				55					2	
			90					2	8X9	8	43	30	5	6	12	3	1	9V9	9	43	31	5	6	12	3	1	
8DX8	8	38	26	4	5	12	8	1				30	5	6	12	10	1				30	5	6	12	8	1	
8EB8	8	12	35					1	9A8	9	11	66					1	9X8	9	12	73					1	
			99					2				55					2				61					2	
8EM5	8	16	53					1	9AB4	9	40	30	4	3	12	6	1	10AF11	10	35	31	1	12	12	11	1	
8ET7	8	38	30	5	4	12	7	1	9AH9	9	35	37	1	12	5	2	1				31	1	12	12	6	1	
			70	5	4	12	3	1				30	1	12	5	6	1				35	1	12	12	3	1	
8FQ7	8	8	68					1	9AK8	9	16	90					1	10AL11	10	35	31	1	12	12	3	1	
			68					2				63					2				27	1	12	12	8	1	
8GJ7	8	38	24	4	5	3	2	1	9AK10	9	35	32	1	12	12	7	1	10BQ5	10	23	68					1	
			26	4	5	3	9	1				32	1	12	12	9	1	10C8	10	13	59					1	
8GM6	8	1	64					1				32	1	12	12	11	1				73					2	
8GN8	8	12	36					1	9AM10	9	35	34	1	12	12	7	1	10CW5	10	23	58					1	
			24	4	5	3	9	1				34	1	12	12	9	1	10D2	19	5	62					1	
8GU7	8	8	56					1	9AQ8	9	8	70					1	10DE7	10	20	81					1	
			56					2				70					2				90					2	
8GX7	8	38	24	4	5	3	2	1	9AU/	9	8	75					1	10DR7	10	38	32	5	4	2	3	1	
			95					2				75					2				41	5	4	2	7	1	
8HA6	8	9	23					1	9BJ11	9	35	28	1	12	12	6	1	10DX8	10	38	26	4	5	12	8	1	
8HG8	8	38	25	4	5	3	2	1				28	1	12	12	11	1				26	4	5	12	1	1	
			25	4	5	1	6	2	9BR7	9	38	32	5	4	9	2	1	10/E/312	25	29	47					1	
8JE8	8	12	56					1				37	5	4	9	6	1	10/E/349	6	29	79					1	
			78					2	9BR8	9	14	72	5	4	9	7	1	10/E/558	6	37	52	7	2	12	10	1	
8JK8	8	8	54					1				55					2	10/E/11448	6	29	93					1	
			55					2	9CG8A	9	14	73					1	10/E/11533	6	29	63					1	
8JL8	8	12	40					1				57					2	10/E/11581	6	37	40	7	2	12	10	1	
			70					2	9CL8	9	14	69					1	10EB8	10	12	35					1	
8JT8	8	12	20					1				51					2				99					2	
			*99					2	9DZ8	9	38	27	4	5	8	3	1	10EG7	10	37	32	8	7	12	1	1	
8JU8A	8	38	*32	4	5	2	1	1				30	4	5	2	1	1				45	8	7	12	4	1	
			**32	4	5	8	7	1	9EA8	9	11	71					1	10EM7	10	37	32	8	7	12	1	1	
			**Normally shows short position 8.					1				56					2				45	8	7	12	4	1	
8JV8	8	12	55					1	9ED4♦	9	42	*52	4	5	12	8	1	10EW7	10	20	87					1	
			85					2				68					1				92					2	
8K11	8	35	38	1	12	12	7	1	9GH8A	9	11	68					1	10FD7	10	38	25	4	5	2	3	1	
			38	1	12	12	9	1				56					2				32	4	5	2	7	1	
8KA8	8	38	38	1	12	12	11	1	9GV8	9	38	25	4	5	12	9	1	10FR7	10	38	24	4	5	2	3	1	
			26	4	5	12	6	1				25	4	5	12	2	1				32	4	5	2	7	1	
8KR8	8	12	22					1	9HS6	9	1	66					1	10GF7	10	42	27	4	5	12	2	1	
			59					2	9J6	9	2	60					1				38	4	5	12	9	1	
8KS8	8	12	33					1	9JW8	9	11	80					1	10GH8	10	11	68					1	
			84					2				85					2				56					2	
								2	9KC6	9	38	25	4	5	12	2	1	10GK6	10	38	33	5	4	3	2	1	
								2				83	4	5	12	9	1	10GM8	10	38	33	5	4	12	2	1	

♦Use TC-80 Adapter

*Normal Shorts Refer to Position of "D" Switch.

8CG7 - 10GM8

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	
10GN8	10	12	36					1	11JE8	10	12	56					1	12AW8	12	12	44					1	
			98					2				78					2				78					2	
10GV8	10	38	25	4	5	12	9	1	11KV8	10	12	22					1	12AX3	12	35	30	1	12	10	4	1	
			25	4	5	12	2	1				82					2	12AX4	12	34	13					1	
10HA6	10	9	23					1	11LQ8	12	12	31					1	12AX7	12	8	*85					1	
10HF8	10	12	27					1				50					2				*85					2	
			80					2	11LT8	12	38	27	4	5	7	9	1				*Tube Good if it Reads 22 or More.						
10JA5	10	35	*33	1	12	9	2	1				32	4	5	1	6	1	12AY3	12	42	27	5	4	7	2	1	
				*Normally shows short position 3-4-10-11					1				32	4	5	1	8	1	12AY3A	12	42	27	5	4	7	2	1
10JA8	10	38	25	4	5	12	7	1	11LY6	10	9	46					1	12AY7	12	8	93					1	
			95	4	5	12	3	1	11MS8	10	38	25	4	5	12	9	1				93					2	
10JT8	10	12	20					1				25	4	5	12	2	1	12AZ7	12	8	73					1	
			*99					2	11R3	10	38	33	5	4	2	9	1				73					2	
				*Tube good if reads 60 or more.					1	11Y9	12	43	27	5	6	12	1	1	12B4	12	39	35	5	4	3	7	1
10JY8	10	12	36					1				27	5	6	12	8	1	12B7	12	36	45	8	1	12	6	1	
			61					2	12A4	12	39	32	5	4	3	7	1	12BA6	12	1	78					1	
10KR8	10	12	22					1	12A6	12	29	92					1	12BA7	12	38	33	5	4	12	2	1	
			59					2	12A8	12	37	45	7	2	12	5	1	12BA11	12	35	28	1	12	12	4	1	
10KU8	10	38	22	4	5	12	7	1	12AB5	12	16	67					1				36	1	12	12	9	1	
			60	4	5	12	2	1	12AC6	12	40	42	4	3	12	1	1	12B-B14	12	42	*33	4	5	1	2	1	
			60	4	5	12	3	1	12AC10	12	35	32	1	12	12	7	1				*Normally shows short position 3-6-7-8.						
10LB8	10	12	21					1				32	1	12	12	9	1	12BC32	12	6	91					1	
			71					2				32	1	12	12	11	1				78					2	
10LD6	10	9	51					1	12AD6	12	40	35	4	3	12	1	1	12BD6	12	1	85					1	
10LD12	10	17	90					1	12AD7	12	8	85					1	12BE3	12	35	26	1	12	4	10	1	
			63					2	12AE6	12	40	85					2	12BE6	12	1	91					1	
10LE8	10	38	29	4	5	12	9	1				52	4	3	12	1	1	12BF6	12	6	85					1	
10LW8	10	12	25					1				66	4	3	12	5	1				80					2	
			92					2	12AE7	12	38	32	5	4	9	2	1	12BF11	12	35	25	1	12	12	3	1	
10LY8	10	12	21					1				32	5	4	9	7	1				25	1	12	12	8	1	
			*99					2	12AE10	12	35	30	1	12	12	8	1	12BH7	12	8	56					1	
				*Tube good if it reads 28 or more.					1				31	1	12	12	3	1	12BK5	12	10	53					2
10LZ8	10	12	54					1	12AF3	12	15	12					1	12BK6	12	6	86					1	
			*99					2	12AF6	12	40	37	4	3	12	1	1				70					2	
				*Tube good if it reads 40 or more						12AF11	12	35	31	1	12	12	11	1	12BL6	12	40	35	4	3	12	1	1
10T10	10	35	28	1	12	12	3	1				31	1	12	12	6	1	12BN6	12	7	75					1	
			25	1	12	12	8	1	12AG6	12	40	35	4	3	12	1	1	12BQ6	12	27	69					1	
10Z10	10	35	30	1	12	12	11	1	12AH7	12	37	48	8	7	12	1	1	12BR3	12	15	10					1	
			95	1	12	12	6	1				48	8	7	12	5	1	12BR7	12	38	32	5	4	9	2	1	
11AF9	10	43	27	5	6	7	1	1	12AJ6	12	40	40	4	3	12	1	1				36	5	4	9	6	1	
			27	5	6	2	8	1				66	4	3	12	5	1	12BS3	12	42	27	4	5	2	7	1	
11AR11	12	35	28	1	12	12	5	1	12AJ7	12	38	32	5	4	12	2	1	12BT3	12	35	27	1	12	4	10	1	
			28	1	12	12	10	1				35	5	4	12	9	1	12BT6	12	6	85					1	
11BM8	12	38	33	5	4	12	3	1	12AL5	12	5	62					1	12BU6	12	6	85					2	
			39	5	4	12	1	1				62					2				80					2	
11BN11	10	35	29	1	12	12	3	1	12AL8	12	38	34	5	4	12	3	1	12BV7	12	9	39					1	
			29	1	12	12	7	1				52	5	4	12	8	1	12BV11	12	35	30	1	12	12	6	1	
11BQ11	10	35	28	1	12	12	5	1	12AL11	12	35	31	1	12	12	3	1				30	1	12	12	7	1	
			28	1	12	12	10	1				27	1	12	12	8	1	12BW4	12	38	50	5	4	12	1	1	
11BT11	10	35	27	1	12	6	11	1	12AQ5	12	3	77					1	12BX6	12	38	33	5	4	1	2	1	
			30	1	12	8	5	1	12AS5	12	4	55					1	12BX7	12	25	55					1	
			26	1	12	8	3	1	12AT6	12	6	85					2				55					2	
11C5	12	4	54					1	12AT7	12	8	74					1	12BY7	12	9	42					1	
11CA11	10	35	35	1	12	8	3	1				74					2	12BZ6	12	1	61					1	
			33	1	12	8	6	1	12AU5	12	28	71					1	12BZ7	12	8	95					1	
			33	1	12	7	8	1	12AU6	12	1	82					1				95					2	
11CF11	10	35	34	1	12	7	9	1	12AU7	12	8	75					1	12C5	12	4	44					1	
			34	1	12	8	11	1				75					2	12C8	12	37	55	7	2	12	10	1	
			32	1	12	8	5	1	12AU8	12	12	56					1				65	7	2	12	4	1	
11CH11	10	35	31	1	12	6	11	1	12AV5	12	28	62					1	12C8Y	12	37	55	7	2	12	10	1	
			34	1	12	8	5	1	12AV6	12	6	91					1				65	7	2	12	4	1	
			30	1	12	8	3	1				78					2	12CA5	12	4	55					1	
11CY7	12	38	31	5	4	2	3	1	12AV7	12	8	55					1	12CK3	12	42	25	4	5	7	2	1	
			45	5	4	2	7	1				55					2	12CL3	12	42	27	4	5	2	7	1	
11DS5	10	3	76					1	12AW6	12	1	78					1				65	7	2	12	5	1	
11FY7	12	35	25	1	12	12	3	1				78					2				65	7	2	12	5	1	
			42	1	12	12	10	1				55					1				65	7	2	12	5	1	
11HM7	10	38	*29	4	5	6	2	1				55					2				65	7	2	12	5	1	
				*Normally shows short position 3-9.					1				78					1				65	7	2	12	5	1

◆Use TC-80 Adapter.

*Normal Shorts Refer to Position of "D" Switch.

10GN8 - 12CL3

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi-tivity	A	B	C	D	Test Pos.	
12CM6	12	16	64					1	12E13	6	29	52					1	12H6	12	37	48	7	2	12	3	1	
12CN5	12	40	33	4	3	2	5	1	12EA6	12	40	32	4	3	12	1	1	12H31	12	1	91	48	7	2	12	5	1
12CR6	12	40	39	4	3	12	7	1	12EC8	12	38	30	5	4	12	9	1	12HB25♦	12	42	*33	4	5	1	2	1	
			61	4	3	12	2	1				32	5	4	12	1	1	*Normally shows short position 3-6-7-8.									
12CS6	12	1	94					1	12ED5	12	4	57					1	12HE7	12	35	27	1	12	10	2	1	
12CT3	12	38	32	4	5	6	2	1	12EG6	12	40	36	4	3	12	1	1				27	1	12	10	9	1	
12CT8	12	13	57					2	12EH5	12	4	57					1	12HG7	12	9	28					1	
			63					1	12EK6	12	40	31	4	3	12	1	1	12HL5	12	38	30	4	5	1	2	1	
12CU5	12	4	47					1	12EL6	12	40	38	4	3	12	1	1	12HL7	12	38	*33	4	5	6	2	1	
12CU6	12	27	69					1				68	4	3	12	5	1	*Normally shows short position 3-9.									
12CX6	12	40	30	4	3	12	1	1	12EM6	12	38	34	5	4	12	1	1	12HU8	12	38	29	4	5	12	2	1	
12D4	12	34	11					1				90	5	4	12	9	1				29	4	5	12	6	1	
12DA6	12	9	80					1	12EN6	12	29	36					1	12J5	12	29	93					1	
12DB5	12	16	30					1	12EQ7	12	38	34	5	4	12	2	1	12J7	12	37	50	7	2	12	10	1	
12DE8	12	38	36	5	4	12	1	1				71	5	4	12	8	1	12J8	12	38	30	5	4	12	1	1	
			34	5	4	12	3	1	12EZ6	12	40	32	4	3	12	1	1				35	5	4	12	8	1	
12DF5	12	38	52	5	4	9	1	1	12F5	12	37	40	7	2	12	10	1				35	5	4	12	9	1	
			52	5	4	9	6	1	12F8	12	38	40	5	4	12	8	1	12JB6	12	42	*29	4	5	6	2	1	
12DF7	12	8	*85					1				62	5	4	12	6	1	*Normally Shows Short Position 1-7.									
			*85					2	12F31	12	1	78					1	12JB6A	12	42	*29	4	5	6	2	1	
*Tube Good if it Reads 22 or More.									12FK6	12	40	40	4	3	12	1	1									1	
12DJ8	12	38	31	5	4	12	2	1				65	4	3	12	5	1	12JF5	12	35	*32	1	12	11	3	1	
			31	5	4	12	7	1				65	4	3	12	6	1	*Normally shows short position 4-10									
12DK6	12	1	61					1	12FM6	12	40	35	4	3	12	1	1	12JM6	12	35	26	1	12	4	5	1	
12DK7	12	38	33	5	4	8	1	1				68	4	3	12	5	1	12JN6	12	35	27	1	12	4	11	1	
			80	5	4	8	6	1	12FQ7	12	8	68					1	12JN8	12	14	67					1	
12DL8	12	38	35	5	4	12	3	1				68	4	3	12	6	1				53					2	
			80	5	4	8	9	1				68					2	12JQ6	12	38	*34	4	5	8	7	1	
			35	5	4	12	3	1	12FQ8	12	38	39	5	4	12	2	1				57	4	5	8	6	1	
			65	5	4	12	9	1	12FR8	12	38	*39	5	4	12	7	1	*May show short position 2-3.									
			65	5	4	12	1	1				*37	4	5	12	1	1	12JS6	12	35	*29	1	12	9	5	1	
12DM4	12	34	11					1				*62	4	5	12	8	1	*Normally shows short position 3-4-10-11.									
12DN6	12	26	47					1	12FS5	12	1	99					1	12JT6	12	42	27	4	5	1	2	1	
12DQ4	12	34	11					1	12FT6	12	40	52	4	3	12	1	1	12JT6A	12	42	27	4	5	1	2	1	
12DQ6	12	27	65					1				66	4	3	12	5	1	12JZ8	12	35	29	1	12	6	7	1	
12DQ6B	12	27	62					1				66	4	3	12	6	1				40	1	12	6	10	1	
12DQ7	12	9	36					1	*Normally Shows Short on Position No. 5.									12K5	12	40	35	4	3	5	6	1	
12DS7	12	38	34	5	4	12	3	1	12FV7	12	8	42					1	12K7	12	37	52	7	2	12	10	1	
			*85	5	4	12	1	1				42					2	12K8	12	37	35	7	2	12	5	1	
			*85	5	4	12	9	1	12FX5	12	4	68					1	12KA8	12	38	26	4	5	12	6	1	
*Tube good if it reads 20 or more.									12FX8	12	38	32	5	4	12	2	1	12KL8	12	38	31	4	5	12	2	1	
12DT5	12	16	45					1				28	5	4	12	6	1				70	4	5	12	8	1	
12DT6	12	1	91					1	12FY8	12	38	30	4	5	12	3	1	12L6	12	29	47					1	
12DT7	12	8	*85					1				39	4	5	12	1	1	12M08	12	42	35	4	5	12	6	1	
			*85					2	12G4	12	40	41	4	3	1	6	1				35	4	5	12	8	1	
*Tube Good if it Reads 22 or More.									12G11	12	35	33	1	12	12	3	1	12MX8	12	42	27	4	5	15	2	1	
12DT8	12	8	71					1				31	1	12	12	8	1				39	4	5	12	9	1	
			71					2	12GA6	12	40	36	4	3	12	1	1	12Q7	12	37	40	7	2	12	10	1	
12DU7	12	38	31	5	4	12	1	1	12G-B3A	12	27	65					1				63	7	2	12	4	1	
			77	5	4	12	7	1	12G-B7	12	27	61					1	12R5	12	40	39	4	3	2	5	1	
			77	5	4	12	9	1	12GC5	12	16	26					1	12R-K19	12	15	10					1	
12DV7	12	38	49	5	4	9	7	1	12GC6	12	26	52					1	12R-LL3	12	8	55					1	
			78	5	4	9	2	1	12GE5	12	35	*24	1	12	11	3	1				55					2	
12DV8	12	38	35	5	4	12	3	1	*Normally Shows Short Positions 4-10.									12R-LL5	12	8	68					1	
			58	5	4	12	9	1	12GJ5	12	42	*30	4	5	6	2	1				68					2	
			58	5	4	12	1	1	*Normally Shows Short Position 1-7.									12S8	12	37	45	8	7	5	10	1	
12DW4A	12	42	27	4	5	2	7	1	12G-K17	12	34	12					1				62	8	7	5	1	1	
12DW5	12	16	30					1	12GN7	12	9	21					1				62	8	7	5	4	1	
12DW7	12	8	75					1	12GT5	12	42	*30	4	5	6	2	1	12SA7	12	37	37	7	2	12	5	1	
			*90					2	*Normally Shows Short Position 1-7.									12SC7	12	37	48	8	7	12	3	1	
*Tube Good if it Reads 22 or More									12GT5A	12	42	*30	4	5	6	2	1				48	8	7	12	4	1	
12DW8	12	38	32	5	4	12	2	1	*Normally shows short position 1-7.									12SF5	12	37	41	8	7	12	3	1	
			32	5	4	12	7	1	12GV5	12	35	*26	1	12	5	9	1	12SF7	12	37	46	8	7	12	2	1	
			44	5	4	12	9	1	*Normally shows short position 3-7-10-11.												69	8	7	12	5	1	
12DY8	12	38	30	5	4	12	1	1	12GW6	12	27	62					1	12SG7	12	30	77					1	
			35	5	4	12	9	1	12H4	12	40	44	4	3	2	6	1									1	
12DZ6	12	40	33	4	3	12	1	1																			
12DZ8	12	38	27	4	5	8	3	1																			
			30	4	5	2	1	1																			
12E5	12	25	93					1																			

♦Use TC-80 Adapter

*Normal Shorts Refer to Position of "D" Switch.

12CM6 - 12SG7

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	
12SH7	12	30	77					1	14A5	12	36	34	8	1	12	6	1	15CW5	15	23	58					1	
12SJ7	12	30	83					1	14A7	12	36	45	8	1	12	6	1	15DQ8	15	38	26	4	5	12	8	1	
12SK7	12	30	84					1	14AF7	12	36	41	8	1	12	4	1				26	4	5	12	1	1	
12SL7	12	25	*85					1				41	8	1	12	5	1	15EA7	15	37	35	8	7	12	1	1	
			*85					2	14B6	12	36	40	8	1	4	3	1				39	8	7	12	4	1	
			*Tube Good if it Reads 22 or More.																								
12SN7	12	25	78					1				68	8	1	4	5	1	15EW6	15	1	77					1	
			78					2	14B8	12	36	42	8	1	12	4	1	15EW7	15	20	87					1	
12SQ7	12	37	42	8	7	12	2	1	14BF11	14	35	25	1	12	12	3	1				92					2	
			71	8	7	12	4	1				25	1	12	12	8	1	15FM7	15	35	25	1	12	3	8	1	
			71	8	7	12	5	1	14BL11	14	35	29	1	12	12	3	1				36	1	12	3	10	1	
12SR7	12	37	46	8	7	12	2	1				31	1	12	12	5	1	15FY7	15	35	25	1	12	12	3	1	
			68	8	7	12	4	1				29	1	12	12	11	1	15HA6	15	9	23					1	
			68	8	7	12	5	1	14BQ11	14	35	28	1	12	12	5	1	15HB6	15	38	*24	4	5	6	2	1	
12SS7	12	30	97					1				28	1	12	12	10	1	*Normally Shows Short Position 3-9.									
12SW7	12	37	52	8	7	12	2	1	14BR11	14	35	30	1	12	12	2	1	15KY8	15	42	27	4	5	12	2	1	
			70	8	7	12	4	1				31	1	12	12	8	1				39	4	5	12	9	1	
			70	8	7	12	5	1				33	1	12	12	10	1	15LE8	15	38	29	4	5	12	9	1	
12SX7	12	25	78					1	14C5	12	36	38	8	1	12	6	1	15MF8	15	35	35	1	12	6	7	1	
			78					2	14C7	12	36	37	8	1	12	6	1				34	1	12	6	10	1	
								1	14E6	12	36	40	8	1	4	3	1	15MX8	15	42	27	4	5	12	2	1	
12SY7	12	37	39	7	2	12	5	1				69	8	1	4	5	1				39	4	5	12	9	1	
12T10	12	35	28	1	12	12	3	1	14E7	12	36	47	8	1	12	6	1	16A5	16	23	68					1	
			25	1	12	12	8	1				69	8	1	4	6	1	16A8	16	38	33	5	4	12	3	1	
12U7	12	38	40	5	4	9	2	1				68	8	1	12	3	1				39	5	4	12	1	1	
			40	5	4	9	7	1										16AK9	7	35	33	6	12	6	10	1	
								1													35	6	12	6	3	1	
12V6	12	29	79					1	14F7	12	36	45	8	1	12	4	1				31	6	12	6	8	1	
12W6	12	29	51					1				45	8	1	12	5	1	16AQ3*	16	39	30	5	4	7	3	1	
12X4	12	40	44	4	3	12	1	1	14F8	12	36	30	7	2	12	1	1	*If no test, use alternate settings.									
			44	4	3	12	6	1				30	7	2	12	8	1	16AQ3	16	39	30	5	4	3	7	1	
13CM5	12	27	57					1	14GT8	14	38	52	5	4	12	8	1	16BQ11	16	35	28	1	12	12	5	1	
13CW4	14	41	*87	10	12	12	2	1				35	5	4	12	2	1				28	1	12	12	10	1	
			*For Grid Emission Turn D Switch to Position 4.																								
13D1	25	25	78					1	14GW8	14	38	25	4	5	2	8	1	16BX11	16	35	32	1	12	12	2	1	
			78					2				35	4	5	7	1	1				31	1	12	12	5	1	
13DE7	12	20	81					1																		1	
			90					2	14H7	12	36	35	8	1	12	6	1				31	1	12	12	8	1	
13DF7	12	8	*85					1	14J7	12	36	35	8	1	12	6	1	16C-B28	16	35	*28	1	12	5	9	1	
			*85					2				50	8	1	12	4	1	*Normally shows short position 3-4-10-11.									
			*Tube Good if it Reads 22 or More.																								
13DR7	12	38	32	5	4	2	3	1	14JG8	14	38	32	4	5	12	8	1	16CL8	16	14	69					1	
			41	5	4	2	7	1				27	4	5	12	2	1				51					2	
13EM7	12	37	32	8	7	12	1	1										16GK6	16	38	33	5	4	3	2	1	
			45	8	7	12	4	1	14N7	12	36	42	8	1	12	4	1	16GY5	16	35	*25	1	12	5	9	1	
13FD7	12	38	25	4	5	2	3	1				42	8	1	12	5	1	*Normally Shows Short Position 1-3-4-7-10									
			32	4	5	2	7	1	14Q7	12	36	35	8	1	12	4	1	16HB5	16	35	*25	1	12	11	3	1	
								1	14R7	12	36	35	8	1	12	6	1	*Normally shows short position 4-10.									
13FG7	12	14	68					1				72	8	1	12	3	1	16K11	16	35	38	1	12	12	7	1	
			56					2				72	8	1	12	4	1				38	1	12	12	9	1	
13FM7	14	35	25	1	12	3	8	1	14S7	12	36	38	8	1	12	6	1				38	1	12	12	11	1	
			36	1	12	3	10	1				52	8	1	12	4	1	16KA6	16	35	30	1	12	9	5	1	
13FR7	12	38	24	4	5	2	3	1	14V7	12	36	32	8	1	12	6	1	*May show short position 3-4-7-11.									
			32	4	5	2	7	1	14W7	12	36	31	8	1	4	6	1	16LD6	16	9	51					1	
13GB5	12	42	*25	4	5	2	1	1	14X7	12	36	43	8	1	12	3	1	16LU8	16	35	27	1	12	6	7	1	
			*Normally shows short position 3-6-7-8.																								
13GF7	12	42	27	4	5	12	2	1				36	8	1	12	5	1				27	1	12	6	10	1	
			38	4	5	12	9	1	14Y4	12	36	45	8	1	12	3	1	16MY8	16	35	27	1	12	6	7	1	
13GF7A	12	42	27	4	5	12	2	1				35	8	1	12	6	1				27	1	12	6	10	1	
			38	4	5	12	9	1	15A6	15	38	30	5	4	12	2	1	16Y9	16	43	27	5	6	12	1	1	
13J10	12	35	96	1	12	12	6	1	15A8	15	37	36	7	2	12	4	1				27	5	6	12	8	1	
			28	1	12	12	11	1				40	7	2	12	3	1	17A8	17	11	66					1	
13JT8	12	12	20					1	15AB9	15	43	79	5	6	10	2	1				55					2	
			*99					2				79	5	6	4	8	1	17AB9	17	43	79	5	6	10	2	1	
			*Tube good if it reads 60 or more.																								
13JZ8	12	35	29	1	12	6	7	1	15AF11	15	35	31	1	12	12	11	1	17AB10	17	35	29	1	12	12	11	1	
			40	1	12	6	10	1				31	1	12	12	6	1				95	1	12	12	6	1	
13SJ7	12	30	83					1	15BD11	15	35	26	1	12	12	11	1	17AF3	17	15	12					1	
								1										17AV5	17	28	62					1	
13V10	12	35	33	1	12	12	3	1				31	1	12	12	3	1	17AX3	17	35	30	1	12	10	4	1	
			33	1	12	12	8	1				31	1	12	12	6	1	17AX4	17	34	13					1	
13Z10	12	35	30	1	12	12	11	1	15BD11A	15	35	26	1	12	12	11	1	17AY3	17	42	27	5	4	7	2	1	
			95	1	12	12	6	1				31	1	12	12	3	1	17AY3B	17	42	27	5	4	7	2	1	
14A4	12	36	41	8	1	12	6	1				31	1	12	12	6	1									1	

◆Use TC-80 Adapter

△Use TC-70 Adapter

*Normal Shorts Refer to Position of "D" Switch.

12SH7 - 17AY3B

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Hester Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Hester Socket	Sensitivity	A	B	C	D	Test Pos.	TUBE TYPE	Hester Socket	Sensitivity	A	B	C	D	Test Pos.
17B-B14♦	17 42	*33	4	5	1	2	1	17JG6A	17 42	24	4	5	1	2	1	19CL8-A	19 14	74					1
*Normally shows short position 3-6-7-8.								17JK8	17 8	54						19D8	19 38	32	5	4	12	2	1
17BD11	17 35	26	1	12	12	11	1	17JM6	17 35	26	1	12	4	5	1	19DE7	19 20	81					1
		31	1	12	12	3	1	17JN6	17 35	27	1	12	4	11	1			90					2
		31	1	12	12	6	1	17JQ6	17 38	*34	4	5	8	7	1	19DK3	19 42	31	4	5	2	7	1
17BE3	17 35	26	1	12	4	10	1			57	4	5	8	6	1	19DKQ3	19 35	30	1	12	4	10	1
17BF11	17 35	25	1	12	12	3	1	*May show short position 2-3.								19DN6	19 26	47					1
		25	1	12	12	8	1	17JR6	17 42	34	4	5	1	2	1	19EA8	19 11	71					1
17BF11A	17 35	25	1	12	12	3	1	17JS6	17 35	*29	1	12	9	5	1			56					2
		25	1	12	12	8	1	*Normally shows short position 3-4-10-11.								19EW7	19 20	87					1
17BH3	17 42	27	5	4	7	2	1	17JT6	17 42	27	4	5	1	2	1			92					2
17BH3A	17 42	27	5	4	7	2	1	17JT6A	17 42	27	4	5	1	2	1	19EZ8	19 38	33	5	4	12	2	1
17BJ6	17 1	81					1	17JZ8	17 35	29	1	12	6	7	1			33	5	4	12	7	1
17BQ6	17 27	69					1			40	1	12	6	10	1	19FX5	19 4	68					1
17BR3	17 15	10					1	17KV6	17 42	30	4	5	1	2	1	19GQ7	19 38	24	4	5	3	2	1
17BS3	17 42	27	4	5	2	7	1	17KW6♦	17 42	30	4	5	1	8	1			24	4	5	3	6	1
17BW3	17 35	28	1	12	4	10	1	17L6	17 29	47					1	19GY5	19 35	*25	1	12	5	9	1
17BZ3	17 35	30	1	12	4	10	1	17LD8	17 42	25	4	5	12	2	1	*Normally shows short position 3-4-7-10-11.							
17C5	17 4	44					1			33	4	5	12	9	1	19HR6	19 1	71					1
17C8	17 38	33	5	4	12	2	1	17R5	17 4	50					1	19HS6	19 1	66					1
		65	5	4	12	7	1	17R-HH2	17 8	65					1	19HV8	19 14	64					1
		65	5	4	12	8	1			65				2	*Tube Good if it Reads 40 or More.								
17C9	17 38	28	5	4	6	1	1	17R-K19	17 15	10				1	19J6	19 2	60					1	
		28	5	4	10	7	1	17W6	17 29	52				1		60						2	
17CA5	17 4	55					1	17X10	17 35	98	1	12	12	6	1	19JC6	19 9	65					1
17CK3	17 42	25	4	5	7	2	1			28	1	12	12	11	1	19JN8	19 14	67					1
17CL3	17 42	27					1	17Y9	17 43	27	5	6	12	1	1			53					2
17CQ4	17 34	11					1			27	5	6	12	8	1	19KF6♦	19 42	33	4	5	7	1	1
17CT3	17 38	32	4	5	6	2	1	17Z3*	17 38	33	4	5	2	9	1	19KG8	19 38	21	4	5	12	9	1
17CU5	17 4	47					1	*If no test use alternate setting below.										21	4	5	12	2	1
17D4	17 34	11					1	18A5	18 28	69					1	19MR9	19 1	73					1
17DE4	17 34	13					1	18AJ10	18 35	32	1	12	4	3	1	19Q9	19 38	25	4	5	12	1	1
17DM4	17 34	11					1			33	1	12	4	8	1			25	4	5	12	8	1
17DQ4	17 34	11					1	18AK5	18 1	63					1	19T8	19 17	90					1
17DQ6	17 27	65					1	18AQ5	18 3	77					1			63					2
17DQ6B	17 27	62					1	18C51	18 38	29	9	1	12	3	1	19U3	19 38	29	5	4	12	9	1
17DW4A	17 42	27	4	5	2	7	1	18DZ8	18 38	27	4	5	8	3	1	19V8	19 38	40	5	4	12	6	1
17EW8	17 8	65					2			29	9	1	12	7	1			32	5	4	12	2	1
		65					2	18FW6	18 1	79					1			32	5	4	12	7	1
17F7	17 35	25	1	12	12	3	1	18FX6	18 1	92					1			61	5	4	12	9	1
		42	1	12	12	10	1	18FY6	18 6	84					2	19W3	19 38	29	5	4	12	9	1
17GE5	17 35	*24	1	12	11	3	1	18GB5♦	18 42	*25	4	5	2	1	1	19X3	19 38	29	5	4	12	9	1
*Normally Shows Short Position 4-10.								18A5	18 28	69					1	19X8	19 12	73					1
17GJ5	17 42	*30	4	5	6	2	1	18AJ10	18 35	32	1	12	4	3	1			61					2
*Normally Shows Short Position 1-7.								18AK5	18 1	63					1	19Y3	19 38	29	4	5	12	9	1
17GJ5A	17 42	*30	4	5	6	2	1	18AQ5	18 3	77					1	20AQ3*	19 39	30	5	4	7	3	1
*Normally shows short position 1-7.								18C51	18 38	29	9	1	12	3	1	*If no test, use alternate settings.							
17GT5	17 42	*30	4	5	6	2	1	18DZ8	18 38	27	4	5	8	3	1	20AQ3	19 39	30	5	4	3	7	1
*Normally Shows Short Position 1-7.								18FW6	18 1	79					1	20D1	9 5	62					1
17GT5A	17 42	*30	4	5	6	2	1	18FX6	18 1	92					1			62					2
*Normally shows short position 1-7.								18FY6	18 6	84					1	20EQ7	19 38	34	5	4	12	2	1
17GV5	17 35	*26	1	12	9	5	1	18GB5♦	18 42	*25	4	5	2	1	1			71	5	4	12	8	1
*Normally Shows Short Position 3-4-7-10-11.								18G6	18 6	78					1	20EW7	19 20	87					1
17GW6	17 27	62					1	18G6	18 6	78					1			92					2
17GY5	17 35	*25	1	12	5	9	1	18G6	18 6	85					2	20F77	19 38	35	2	1	3	5	1
*Normally shows short position 3-4-7-10-11.								18GV5	18 35	*26	1	12	5	9	1			35	2	1	3	8	1
17H3	17 15	13					1	18GV8	18 38	25	4	5	12	9	1	20LF6	20 35	*31	1	12	5	9	1
17H-B25♦	17 42	*33	4	5	1	2	1	18HR8	18 38	36	5	4	12	9	1	*May show short position 3-4-7-10-11.							
*Normally shows short position 3-6-7-8.								18J6	18 2	60					1	21A6	22 38	*32	5	4	7	2	1
17HC8	17 38	36	5	4	12	3	1			60					1	*Normally Shows Short Position 1-6-9							
		38	5	4	12	1	1	18R-AL1	18 38	33	4	5	2	3	1	21AK6	22 1	82					1
17HG8	17 38	25	4	5	3	2	1	19A3	19 40	32	3	4	6	5	1	21FX6	22 26	42					1
		25	4	5	1	6	1	19AJ8	19 38	85	5	4	12	1	1	21GY5	22 35	*25	1	12	5	9	1
17JB6	17 42	*29	4	5	6	2	1	19AQ5	19 3	77					1	*Normally shows short position 3-4-7-10-11.							
*Normally Shows Short Position 1-7.								19AU4	19 34	10					1			62					2
17JB6A	17 42	*29	4	5	6	2	1	19BG6	19 26	66					1	*Normal Shorts Refer to Position of "D" Switch							
*Normally shows short position 1-7.								19BX6	19 9	76					1	19CG3	19 35	30	1	12	4	10	1
17JF6	17 42	*26	4	5	2	6	1	19BY7	19 9	62					1								1
*Normally shows short position 1-7.								19C8	19 17	94					1								
17JG6	17 42	24	4	5	1	2	1			62					2								1

△Use TC-70 Adapter ♦Use TC-80 Adapter

*Normal Shorts Refer to Position of "D" Switch

17B-B14 - 2

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensi- tivity	A	B	C	D	Test Pos.	
21HB5	22	35	*25	1	12	11	3	1	25C5	25	4	44					1	28EC4	30	37	32	7	8	2	5	1	
	*Normally Shows Short Position 4-10								25C6	25	29	45					1	28GB5	30	42	*25	4	5	2	1	1	
21HD5	22	35	*27	1	12	3	11	1	25CA5	25	4	55					1	*Normally shows short position 3-6-7-8.									
	*Normally shows short position 4-5-9-10								25C06	25	26	53					1	28HA6	30	9	23					1	
21HJ5	22	35	*27	1	12	3	11	1	25CG3	25	35	30	1	12	4	10	1	28HD5	30	35	*27	1	12	3	11	1	
	*Normally Shows Short Position 4-5-9-10								25CK3	25	42	30	4	5	7	2	1	*Normally shows short position 4-5-9-10									
21JS6	22	35	*29	1	12	9	5	1	25CM3	25	42	30	4	5	2	7	1	29GK6	30	38	33	5	4	3	2	1	
	*Normally shows short position 3-4-10-11.								25CT3	25	38	32	4	5	6	2	1	29KQ6	30	42	*29	4	5	1	8	1	
21JV6	22	35	28	1	12	4	11	1	25C06	25	27	69					1	*Normally shows short position 2-3-6-7.									
21JZ6	22	35	*31	1	12	9	5	1	25D4	25	34	11					1	29LE6	30	42	*30	4	5	8	1	1	
	*Some tubes may show short position 3-4-10-11.								25DK3	25	42	31	4	5	2	7	1	*Normally shows short position 2-3-6-7.									
21KA6	22	35	*30	1	12	9	5	1	25DK4	25	40	26	3	4	6	5	1	30A5	30	40	27	3	4	5	2	1	
	*May show short position 3-4-7-11.								25DL3	25	42	29	4	5	7	2	1	30AE3	30	39	30	5	4	7	3	1	
21KQ6	22	42	*29	4	5	1	8	1	25DN6	25	26	47					1	*If no test, use alternate settings.									
	*Normally shows short position 2-3-6-7.								25D06	25	27	65					1	30AE3	30	39	30	5	4	3	7	1	
21LG6	22	35	*32	1	12	9	5	1	25DT5	25	16	45					1	30AG11	30	35	28	1	12	12	8	1	
	*May show short position 2-3-4-7-10-11.								25E5	25	27	58					1				28	1	12	12	5	1	
21LR8	22	42	31	4	5	12	2	1	25EC6	25	26	53					1				33	1	12	12	10	1	
			31	4	5	12	9	1	25EH5	25	4	57					1				33	1	12	12	3	1	
21LU8	22	35	27	1	12	6	7	1	25F5	25	4	54					1	30C1	9	11	66					1	
			35	27	1	12	6	10	1	25F5A	25	4	54					1	30CW5	30	23	58					1
21MY8	22	35	27	1	12	6	7	1	25FY8	25	38	30	4	5	12	3	1	30HD5	30	35	*27	1	12	3	11	1	
			27	1	12	6	10	1				39	4	5	12	1	1	*Normally shows short position 4-5-9-10									
22AL3	22	39	30	5	4	7	3	1	25G-B6	25	27	64					1	30HJ5	30	35	*27	1	12	3	11	1	
	*If no test, use alternate settings.								25GE5	25	35	*24	1	12	11	3	1	*Normally shows short position 4-5-9-10									
22AL3	22	39	30	5	4	3	7	1	*Normally shows short position 4-10.								30JZ6	30	35	*31	1	12	9	5	1		
22BH3	22	42	27	5	4	7	2	1	25HX5	25	42	*30	4	5	7	1	1	*Some tubes may show short position 3-4-10-11.									
22BH3A	22	42	27	5	4	7	2	1	*Normally shows short position 2-3.								30KD6	30	35	*26	1	12	9	5	1		
22BW3	22	35	28	1	12	4	10	1	25JQ6	25	38	*34	4	5	8	7	1	*Normally shows short position 3-4-10-11.									
22DE4	22	34	13					1				57	4	5	8	6	1	30KG6	30	42	*26	4	5	1	8	1	
22JF6	22	42	*26	4	5	2	6	1	*May show short position 2-3.								*Normally shows short position 2-3-6-7.										
	*Normally shows short position 1-7.								25JZ8	25	35	29	1	12	6	7	1	30L1	7	38	33	5	4	7	2	1	
22JG6	22	42	24	4	5	1	2	1				40	1	12	6	10	1				33	5	4	7	6	1	
22JG6A	22	42	24	4	5	1	2	1	25L6	25	29	47					1	30MB6	30	35	*32	1	12	9	5	1	
22JR6	22	42	34	4	5	1	2	1	25M-P20	25	1	43					1	*Normally shows short position 3-4-10-11.									
22JU6	22	42	*30	4	5	2	6	1	25R-K19	25	15	10					1	30M-P23	30	40	30	3	4	5	2	1	
	*Normally shows short position 1-7								25SN7	25	25	78					1	30M-P27	30	40	30	3	4	5	2	1	
22KM6	22	42	*29	4	5	6	2	1				78					2	30P16	16	23	68					1	
	*Normally shows short position 1-7.								25U4	25	34	11					1	30PL12	16	38	33	5	4	12	3	1	
22KV6	22	42	30	4	5	1	2	1	25W4	25	34	11					1				39	5	4	12	1	1	
23JS6	22	35	*29	1	12	9	5	1	25W6	25	29	51					1	31AL10	30	35	51	1	12	6	3	1	
	*Normally shows short position 3-4-10-11.								25Z6	25	37	34	7	2	12	3	1				33	1	12	6	8	1	
23JS6A	22	35	*29	1	12	9	5	1	26A6	25	1	77					1				38	1	12	6	11	1	
	*Normally shows short position 3-4-10-11.								26A7	25	37	29	7	6	12	1	1	31JS6A	30	35	*29	1	12	9	5	1	
23MB6	22	35	*32	1	12	9	5	1				29	7	6	12	3	1	*Normally shows short position 3-4-10-11									
	*Normally shows short position 3-4-10-11.								26AQ8	25	8	70					1	31LQ6	30	42	*26	4	5	6	2	1	
23Z9	22	35	30	1	12	6	10	1				70					2	*Normally shows short position 1-7.									
			39	1	12	6	3	1	26BK6	25	6	86					1	31LR8	30	42	31	4	5	12	2	1	
			28	1	12	6	8	1				70					2				31	4	5	12	9	1	
24AX4	25	34	13					1	26C6	25	6	85					1	31LZ6	30	42	*31	4	5	6	2	1	
24BF11	25	35	25	1	12	12	3	1				82					2	*Normally shows short position 1-7.									
			25	1	12	12	8	1	26D6	25	1	93					1	32A8	30	38	33	5	4	12	3	1	
24JE6A	25	42	*26	4	5	6	2	1	26DQ5	25	26	55					1				39	5	4	12	1	1	
	*Normally shows short position 1-7.								26E6	25	29	40					1	32ET5	30	4	60					1	
24JZ8	25	35	29	1	12	6	7	1	26HU5	25	37	*28	7	8	1	5	1	32HQ7	35	35	34	1	12	7	2	1	
			40	1	12	6	10	1	*Normally shows short position 2-6.											34	1	12	7	9	1		
24LQ6	25	42	*26	4	5	6	2	1	26JG6	25	42	56					1	33GT7	30	35	*55	1	12	7	10	1	
	*Normally shows short position 1-7.								26LW6	25	37	*31	7	8	1	5	1				*26	1	12	7	2	1	
24LZ6	24	42	*31	4	5	6	2	1	*Normally shows short position 2-6.								*Normally Shows Short Position 9-11.										
	*Normally shows short position 1-7.								26Z5	25	38	36	5	4	9	1	1	33GY7	30	35	*56	1	12	7	11	1	
25A6	25	29	74					1				36	5	4	9	6	1	*26 1 12 7 2 1									
25AU4	25	34	10					1	27GB5	25	42	*25	4	5	2	1	1	*Normally Shows Short Position 9-10.									
25AV5	25	28	62					1	*Normally shows short position 3-6-7-8.								33GY7A	30	35	*56	1	12	7	11	1		
25AX4	25	34	13					1	27KG6	25	42	*26	4	5	1	8	1	*26 1 12 7 2 1									
25B6	25	29	48					1	*Normally shows short position 2-3-6-7.								*Normally shows short position 9-10.										
25B-B14	25	42	*33	4	5	1	2	1	27LF6	25	35	*31	1	12	5	9	1	33HE7	30	35	27	1	12	10	2	1	
	*Normally shows short position 3-6-7-8								*May show short position 3-4-7-10-11								33JR6	30	42	34	4	5	1	2	1		
25BK5	25	10	53					1	28D7	30	36	40	8	1	12	2	1	33JV6	30	35	28	1	12	4	11	1	
25BQ6	25	27	69					1				40	8	1	12	7	1										
25BR3	25	15	10					1																			

■ Use TC-62B Adapter.

◆ Use TC-80 Adapter.

*Normal Shorts Refer to Position of "D" Switch.

21HB5 - 33JV6

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
6067	12	8	75					1	6463	12	38	28	4	5	9	3	1	7105	12	37	35	8	7	12	1	1
			75					2				28	4	5	9	8	1				35	8	7	12	4	1
6069	6	1	63					1	6485	6	1	58					1	7119	12	38	30	4	5	8	2	1
6072	12	8	93					1	6516	6	40	34	4	3	12	1	1				30	4	5	8	7	1
			93					2	6520	6	37	35	8	7	12	1	1	7167	12	1	54					1
6080	6	37	35	8	7	12	1	1				35	8	7	12	4	1	7189	6	38	*33	5	4	1	2	1
			35	8	7	12	4	1	6550	6	29	52					1	*Normally Shows Short Position 1-3-6-9.								
6082	25	37	35	8	7	12	1	1	6660	6	1	78					1	7199	6	38	30	5	4	12	7	1
			35	8	7	12	4	1	6661	6	1	89					1				32	5	4	12	9	1
6084	6	38	39	4	5	7	9	1	6662	6	1	81					1	7233	6	38	*33	5	4	2	7	1
6085	12	8	74					1	6663	6	5	62					1	*Normally Shows Short Position 1-3-6-9.								
			74					2				62					2	7247	12	8	75					1
6087	5	33	23					1	6664	6	40	30	4	3	12	6	1	*Tube Good If It Reads 22 or More.								
			23					2	6669	6	3	77					1				*90					2
6096	6	1	63					1	6676	6	1	64					1									
6097	6	5	62					1	6677	6	38	*32	5	4	2	9	1	7258	12	13	62					1
			62					2	*Normally Shows Short Position 3-8.											61					2	
6100	6	40	41	4	3	1	6	1	6678	6	11	79					1	7308	6	8	23					1
6101	6	2	60					1				55					2				24					2
			60					2	6679	12	8	79					1	7320	6	23	68					1
6113	6	25	*85					1				79					2	7355	6	37	37	7	2	12	6	1
			*85					2	6680	12	8	75					1	7360	6	38	29	4	5	12	3	1
*Tube Good if It Reads 22 or More.									6681	12	8	75					2	7370	40	38	24	4	5	8	2	1
6134	6	30	60					1				*85					1				24	4	5	8	7	1
6135	6	40	41	4	3	1	6	1				*85					2	7408	6	29	80					1
6136	6	1	82					1	*Tube Good if It Reads 22 or More.									7543	6	1	85					1
6137	6	30	84					1	6686	6	38	24	4	5	1	2	1	7551	15	38	*33	4	5	9	2	1
6146	6	37	*38	7	2	1	5	1	6687	6	1	89					1	*Normally Shows Short Position 3-8.								
*Normally Shows Short Position 4-6.									6688	6	38	25	4	5	1	2	1	7558	6	38	*26	4	5	3	2	1
6147	6	29	63					1	6689	6	38	25	4	5	12	2	1	*Normally Shows Short Position 1-9.								
6159	25	37	*38	7	2	1	5	1	6829	12	8	54					1	7581	6	29	64					1
*Normally Shows Short Position 4-6.												54					2	7586	6	41	*65	10	12	12	2	1
6180	6	25	78					1	6883	12	37	*38	7	2	1	5	1	*For Grid Emission Turn D Switch to Position 4.								
			78					2	*Normally Shows Short Position 4-6.									7587	6	41	*67	10	12	12	2	1
6186	6	1	80					1	6887	6	40	33	4	3	12	2	1	*For Grid Emission Turn D Switch to Position 4.								
6187	6	1	87					1				33	4	3	12	7	1	7591	6	37	34	7	2	4	6	1
6188	6	25	*81					1	6888	6	30	62					1	7607	6	37	*32	7	2	1	5	1
			*81					2	6919	6	5	62					1	*Normally Shows Short Position 4-6.								
*Tube Good if It Reads 22 or More.									6922	6	8	24					1	7643	6	11	72					1
6189	12	8	75					1				24					2				55					2
			75					2	6939	12	38	34	4	5	9	1	1	7687	6	11	77					1
6197	6	38	*32	5	4	2	9	1				34	4	5	9	3	1				67					2
*Normally shows short position 3-8.									6968	6	1	63					1	7693	6	1	93					1
6198	12	8	75					1	6973	6	16	62					1	7694	6	1	84					1
			75					2	7000	6	37	50	7	2	12	10	1	7695	50	38	34	5	4	12	6	1
6201	12	8	74					1	7025	12	8	*85					1	7701	12	38	*38	5	4	1	2	1
			74					2				*85					2	*Normally Shows Short Position 3-7-8-9.								
6202	6	40	44	4	3	12	1	1	7027	6	37	*36	7	2	5	6	1	7716	12	12	53					1
			44	4	3	12	6	1	*Tube Good if It Reads 22 or More.												*97					2
6203	6	38	41	4	5	12	1	1	*Normally Shows Short Position 1-4.									*Tube Good if It Reads 20 or More.								
			41	4	5	12	9	1	7036	6	1	92					1	7719	12	39	29	4	5	1	7	1
6211	12	8	54					1	7044	12	38	30	4	5	8	2	1	7722	6	23	80					1
			54					2				30	4	5	8	7	1	7724	14	38	52	5	4	12	8	1
6216	6	38	*29	4	5	3	2	1	7054	12	9	42					1				35	5	4	12	2	1
*Normally shows short position 1-6.									7055	12	5	62					1				35	5	4	12	6	1
6218	6	38	72	4	5	12	2	1				62					2	7728	12	8	74					1
6227	6	38	25	4	5	1	2	1	7056	12	1	64					1				74					2
6265	6	1	89					1	7057	12	8	53					1	7729	12	8	*85					1
6267	6	38	40	5	4	2	9	1				53					2	*Tube Good if It Reads 22 or More.								
6293	6	37	*38	7	2	1	5	1	7058	12	8	*85					1	7730	12	8	75					1
*Normally shows short position 4-6												*85					2				75					2
6336	6	37	29	8	7	12	1	1	*Tube Good if It Reads 22 or More.									7731	6	11	79					1
			29	8	7	12	4	1	7059	12	11	79					1				55					2
6350	12	38	31	4	5	9	3	1				55					2	7732	6	1	64					1
			31	4	5	9	8	1	7060	12	13	55					1	7733	12	9	42					1
6360	12	38	30	4	5	9	1	1				75					2	7738	6	40	*33	4	3	2	6	1
			30	4	5	9	3	1	7061	12	16	67					1	*Normally Shows Short Position 1-7.								
6384	6	37	33	8	6	12	7	1	7062	12	8	54					1	7751	6	37	30	2	7	4	5	1
6417	12	38	33	5	4	8	9	1				54					2	7754	6	38	34	5	4	12	6	1

◆Use TC-80 Adapter

△Use TC-70 Adapter

*Normal Shorts Refer to Position of "D" Switch.

6067 - 7754

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.		
7788	6	38	*29	4	5	3	2	1	B152	12	8	74					1	CV580	6	37	45	7	2	12	5	1		
	*Normally shows short position 6-9.																		CV581	6	29	99					1	
7867	6	26	53					1	B309	12	8	74					1	CV582	6	29	99					1		
7868	6	42	*27	4	5	2	6	1				74					1	CV583	6	29	99					1		
	*Normally Shows Short Position 1-7.									B319	7	38	33	5	4	7	2	1	CV586	6	29	63					1	
7895	6	41	*85	10	12	12	2	1				33	5	4	7	6	1	CV587	6	37	40	7	2	12	10	1		
	*For Grid Emission Turn D Switch to Position 4.									B329	12	8	75					1				63	7	2	12	4	1	
7898	14	8	73					1				75					2	CV588	6	37	40	7	2	12	10	1		
			73					2	B339	12	8	*85					1				63	7	2	12	4	1		
7984	12	35	*59	1	12	7	11	1				*85					2				63	7	2	12	5	1		
	*Normally shows short position 2-3-4-5-6-8-9.									B719	6	8	70					1	CV589	6	37	40	7	2	12	10	1	
8016	1	32	55					1				70					2				63	7	2	12	4	1		
8032	12	37	*38	7	2	1	5	1	BPM04	6	3	77					1	CV590	6	30	83					1		
	*Normally shows short position 4-6.									CV131	6	40	35	4	3	12	1	1	CV591	6	30	83					1	
8056	6	41	*63	10	12	12	2	1	CV133	6	40	41	4	3	1	6	1	1	CV592	6	30	83					1	
	*For grid emission turn D switch to position 4.									CV136	6	40	34	4	3	12	1	1	CV593	5	33	12					1	
8102	12	38	28	4	5	12	3	1	CV138	6	40	30	4	3	12	1	1				12					1		
			27	4	5	12	9	1	CV140	6	5	62					1	CV594	6	30	77					2		
8106	12	38	*24	4	5	3	7	1				62					1				12					1		
	*Normally Shows Short Position 2-6-9.									CV216	50	37	*99	2	11	3	5	1	CV595	6	30	77					1	
8113	6	1	58					1				70					1	CV657	6	37	50	7	2	12	10	1		
8136	6	1	65					1				70					2	CV660	6	30	60					1		
8156	13	35	*32	1	12	9	10	1				77					1	CV661	6	30	74					1		
	*Normally Shows Short Position 2-3-4-5-6-7-8-11.									CV283	6	5	62					1	CV664	6	40	*46	4	3	1	6	1	
8233	6	42	*25	4	5	7	8	1				62					2				6	1	*73			1		
	*Normally shows short position 2-6.									CV450	6	29	*62					1	CV665	6	1	*73					1	
	*May show short on position 3.												62				1	CV686	50	37	*85	2	11	3	5	1		
8255	6	38	*85	4	5	7	8	1				78					2				50	37	*85	2	11	3	5	
	*Normal short position 1-3-6-9									CV452	6	6	85					1				50	37	*85	2	11	3	5
8278	6	42	*31	4	5	3	7	1				91					1				50	37	*85	2	11	3	5	
	*Normally shows short position 1-2-6-8.									CV453	6	1	91					1				50	37	*85	2	11	3	5
8327	6	23	65					1				78					1	CV692	6	31	8					1		
8417	6	29	54					1	CV454	6	1	78					1				8					2		
8425	6	1	87					1	CV455	12	8	74					1	CV694	12	30	77					1		
8458	12	42	32	4	5	9	1	1	CV491	12	8	75					1	CV697	12	30	83					1		
			32	4	5	9	3	1				75					2	CV698	12	30	83					1		
8552	12	37	*38	7	2	1	5	1	CV492	12	8	*85					2	CV700	12	37	46	8	7	12	2	1		
	*Normally shows short position 4-6.											*85					1				68	8	7	12	4	1		
8908	6	37	*30	7	8	1	5	1				85					2				68	8	7	12	5	1		
	*Normally shows short position 2-6.									CV493	6	40	44	4	3	12	1	1	CV703	6	37	35	7	2	12	5	1	
9001	6	1	93					1				44	4	3	12	6	1	CV706	6	37	48	7	2	12	10	1		
9002	6	40	*46	4	3	1	6	1	CV511	6	29	79					1	CV717	5	33	22					1		
	*Normally Shows Short 2-7.									CV538	12	37	37	7	2	12	5	1				22				2		
9003	6	1	*73					1	CV544	12	30	84					1	CV723	3	37	39	7	2	12	5	1		
	*Tube Good if it Reads 23 or More.									CV547	12	37	42	8	7	12	2	1	CV726	35	36	31	8	1	12	2	1	
9006	6	40	*55	4	3	1	5	1				71	8	7	12	4	1	CV728	2	37	53	7	2	12	10	1		
	*Normally Shows Short Position 2-7.									CV551	25	29	45					1	CV729	5	33	12					1	
A863	6	37	50	7	2	12	10	1	CV552	25	29	47					1	CV731	6	29	91					1		
A1834	6	37	35	8	7	12	1	1	CV553	25	29	47					1	CV732	6	34	11					1		
			35	8	7	12	4	1	CV554	6	37	48	7	2	12	3	1	CV747	6	30	60					1		
AR18	6	37	40	7	2	12	10	1				48	7	2	12	5	1	CV753	2	40	*70	7	1	2	6	1		
			63	7	2	12	4	1	CV559	25	37	34	7	2	12	3	1				55	7	2	12	5	1		
ARDD3	6	37	48	7	2	12	3	1				34	7	2	12	5	1				55	7	2	12	5	1		
			48	7	2	12	5	1	CV561	35	29	54					1	CV755	1	37	55	7	2	12	5	1		
ARH1	6	37	44	7	2	12	10	1	CV562	35	29	54					1	CV756	1	37	55	7	2	12	5	1		
ARP15	6	37	52	7	2	12	10	1	CV565	35	36	31	8	1	12	2	1	CV760	1	37	55	7	2	12	5	1		
ARP16	6	37	50	7	2	12	10	1	CV567	35	37	33	7	2	3	5	1	CV764	2	37	54	7	2	12	10	1		
ARP17	6	29	91					1	CV568	35	37	33	7	2	3	5	1	CV768	2	37	48	7	2	12	5	1		
ARP32	6	29	79					1	CV571	50	29	47					1	CV770	2	37	54	7	2	12	10	1		
ARP33	6	29	79					1				15					1				64	7	2	12	4	1		
ARTH-1	6	37	35	7	2	12	5	1	CV572	6	33	15					1	CV772	1	37	55	7	2	12	4	1		
AU13	5	33	32					1	CV573	6	33	15					1				55	7	2	12	5	1		
			32					2				15					1	CV773	1	37	55	7	2	12	4	1		
AZ32	4	33	32					1	CV574	6	33	15					1				55	7	2	12	5	1		
			32					2				15					2	CV775	1	36	62	8	1	12	4	1		
B36	12	25	78					1	CV575	5	33	16					1	CV776	1									

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
CV779	2	36	53	8	1	12	6	1	CV892	6	36	47	8	1	12	6	1	CV1790	6	36	50	8	1	12	3	1
			63	8	1	12	4	1				68	8	1	12	3	1				50	8	1	12	6	1
CV780	2	36	52	8	1	12	6	1				68	8	1	12	4	1	CV1800	1	37	57	7	2	12	5	1
			60	8	1	12	4	1	CV893	6	36	45	8	1	12	4	1	CV1802	1	37	57	7	2	12	5	1
CV781	1	36	53	8	1	5	6	1				45	8	1	12	5	1	CV1803	1	37	54	7	2	12	5	1
CV782	1	40	57	7	1	5	4	1	CV894	6	36	36	8	1	12	6	1	CV1805	1	37	54	7	2	12	5	1
CV783	1	40	*55	7	1	5	3	1	CV895	6	36	35	8	1	12	6	1	CV1811	1	37	58	7	2	12	5	1
CV784	1	40	56	7	1	12	6	1	CV896	6	36	45	8	1	12	4	1				86	7	2	12	10	1
			95	7	1	12	3	1				65	8	1	12	5	1				*99	7	2	12	8	1
CV785	1	40	55	7	1	5	6	1	CV897	6	36	35	8	1	12	6	1									
CV786	1	37	54	7	2	12	5	1				50	8	1	12	4	1	CV1818	1	37	55	7	2	12	10	1
CV797	6	40	32	4	3	5	1	1	CV898	6	36	42	8	1	12	4	1				96	7	2	12	5	1
CV805	50	37	35	7	2	12	3	1				42	8	1	12	5	1	CV1819	6	29	93					1
			35	7	2	12	5	1	CV899	6	36	35	8	1	12	4	1	CV1820	1	37	55	7	2	12	10	1
CV807	3	40	*36	7	1	5	4	1	CV900	6	36	35	8	1	12	6	1				96	7	2	12	5	1
CV808	3	40	45	7	1	4	3	1				72	8	1	12	3	1	CV1821	2	37	53	7	2	12	10	1
CV815	2	36	43	8	1	7	6	1	CV901	6	36	45	8	1	12	3	1	CV1822	2	37	53	7	2	12	10	1
CV818	3	40	*42	7	1	5	3	1				72	8	1	12	4	1	CV1823	2	37	53	7	2	12	10	1
CV819	3	37	45	7	2	8	5	1	CV910	12	37	45	7	2	12	5	1	CV1824	1	37	48	7	2	12	5	1
CV820	3	40	*48	7	1	5	3	1	CV916	12	37	48	7	2	12	3	1	CV1826	1	37	48	7	2	12	5	1
CV841	5	33	16					1	CV917	12	37	50	7	2	12	10	1	CV1829	1	37	54	7	2	12	5	1
CV842	5	33	32					2	CV918	12	37	52	7	2	12	10	1	CV1846	5	33	22					1
CV844	6	37	40	7	2	12	5	1	CV919	12	37	41	8	7	12	3	1				22					2
CV845	6	37	40	7	2	12	5	1	CV920	12	37	41	8	7	12	3	1	CV1849	5	33	32					1
CV846	6	30	60					1	CV921	12	37	46	8	7	12	2	1				32					2
CV848	6	1	80					1				69	8	7	12	5	1	CV1851	5	37	47	8	7	12	3	1
CV849	6	30	60					1	CV922	12	30	77					1				47	8	7	12	5	1
CV850	6	1	63					1	CV924	12	25	*85					2	CV1852	5	37	47	8	7	12	3	1
CV851	6	37	35	7	2	12	5	1				*85					1				47	8	7	12	5	1
CV852	6	40	41	4	3	1	6	1	CV925	12	25	78					2	CV1854	5	33	32					1
CV858	6	2	60					1				78					1				32					2
CV862	6	37	53	7	2	12	5	1	CV930	12	36	45	8	1	12	4	1	CV1856	5	33	32					1
CV865	6	30	69					1				45	8	1	12	5	1				32					2
CV866	6	30	83					1	CV939	25	37	40	7	2	12	5	1	CV1857	5	37	52	8	7	12	3	1
CV867	6	37	46	8	7	12	2	1	CV945	30	36	40	8	1	12	2	1				52	8	7	12	5	1
			68	8	7	12	4	1				40	8	1	12	7	1	CV1862	6	3	77					1
			68	8	7	12	5	1	CV946	30	36	40	8	1	12	2	1	CV1863	5	33	12					1
CV873	6	33	17					2	CV995	6	40	36	4	3	2	1	1				12					2
CV876	6	36	48	8	1	12	3	1	CV1067	6	29	93					1	CV1864	5	33	12					1
			48	8	1	12	6	1	CV1071	5	33	16					1				12					2
CV877	6	36	45	8	1	12	6	1	CV1074	6	37	50	7	2	12	10	1	CV1873	6	30	74					1
CV878	6	36	40	8	1	12	4	1	CV1268	5	33	32					1	CV1876	6	30	60					1
CV879	6	36	40	8	1	12	6	1	CV1280	6	37	44	7	2	12	10	1	CV1878	6	37	54	7	2	12	5	1
CV880	6	36	52	8	1	12	6	1	CV1285	6	37	47	7	2	12	4	1				62	7	2	12	1	1
CV881	6	36	52	8	1	12	6	1	CV1301	6	37	47	7	2	12	5	1	CV1882	6	30	38					1
CV882	6	36	40	8	1	4	3	1	CV1375	6	38	33	5	4	1	2	1	CV1893	6	37	55	7	2	12	10	1
			68	8	1	4	5	1	CV1377	5	33	10					1				65	7	2	12	4	1
			68	8	1	4	6	1	CV1633	12	8	74					2	CV1894	6	37	55	7	2	12	10	1
CV883	6	36	42	8	1	12	4	1	CV1649	6	29	99					1				65	7	2	12	4	1
CV885	6	36	38	8	1	12	6	1	CV1741	6	29	53					1	CV1895	50	37	*70	2	11	3	5	1
CV886	6	36	38	8	1	12	6	1	CV1753	35	36	34	8	1	12	6	1				65	7	2	12	5	1
CV887	6	36	50	8	1	4	3	1	CV1757	6	1	93					1	CV1902	6	37	45	7	2	12	5	1
			68	8	1	4	6	1	CV1758	1	40	55	7	1	5	6	1	CV1908	6	37	40	7	2	12	10	1
CV890	6	36	*33	8	2	1	5	1	CV1762	6	1	82					1	CV1909	6	37	40	7	2	12	10	1
									CV1763	6	40	*85	4	3	1	7	1	CV1910	6	37	40	7	2	12	10	1
CV891	6	36	40	8	1	4	3	1				*85					1	CV1911	6	29	91					1
			69	8	1	4	5	1	CV1777	6	36	37	8	1	12	6	1	CV1912	6	29	91					1
			69	8	1	4	6	1	CV1784	6	30	38					1	CV1926	6	26	52					1

△Use TC-70 Adapter.

*Normal Shorts refer to position of "D" Switch.

CV779 - CV1934

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
CV1935	6	37	50	7	2	12	10	1	CV2390	3	40	*36	7	1	5	4	1	DF91	1	40	55	7	1	5	6	1
CV1936	6	37	50	7	2	12	10	1	*Normally Shows Short Position 2-6.									DF92	1	40	55	7	1	5	6	1
CV1937	6	37	50	7	2	12	10	1	CV2500	35	37	33	7	2	12	5	1	DF96	1	40	58	7	1	5	6	1
CV1938	6	29	92					1	CV2507	1	40	52	7	1	5	6	1	DF97	1	40	40	7	1	5	6	1
CV1940	6	29	92					1	CV2522	6	1	77					1	DF904	1	40	52	7	1	5	6	1
CV1941	6	37	52	7	2	12	10	1	CV2524	6	1	82					1	DH63	6	37	40	7	2	12	10	1
CV1942	6	37	52	7	2	12	10	1	CV2526	6	6	91					1				63	7	2	12	4	1
CV1943	6	37	52	7	2	12	10	1				78					2				63	7	2	12	5	1
CV1944	6	37	35	7	2	12	5	1	CV2534	50	29	47					1	DH74	12	37	40	7	2	12	10	1
CV1945	6	37	35	7	2	12	5	1	CV2704	6	36	*33	8	2	1	5	1				63	7	2	12	4	1
CV1946	6	37	35	7	2	12	5	1	*Normally Shows Short Position 3-4-6-7.												63	7	2	12	5	1
CV1947	6	29	63					1	CV2706	6	36	53	8	1	12	4	1	DH76	12	37	40	7	2	12	10	1
CV1948	6	29	63					1	CV2714	6	29	67					1				63	7	2	12	4	1
CV1949	6	40	43	4	3	12	1	1	CV2716	6	37	48	8	7	12	3	1				63	7	2	12	5	1
CV1950	6	37	44	7	2	12	10	1				48	8	7	12	4	1	DH77	6	6	85					1
CV1951	6	37	44	7	2	12	10	1	CV2721	6	38	*32	5	4	7	2	1				78					2
CV1956	6	37	47	7	2	12	4	1	*Normally Shows Short Position 1-6-9.									DH107	19	6	85					1
			47	7	2	12	5	1	CV2748	5	33	12					1				78					2
CV1957	6	37	47	7	2	12	4	1				12					2	DH149	6	36	50	8	1	4	3	1
			47	7	2	12	5	1	CV2769	6	40	*55	4	3	1	5	1				68	8	1	4	5	1
CV1958	6	37	47	7	2	12	4	1	*Normally Shows Short Position 2-7.												68	8	1	4	6	1
			47	7	2	12	5	1	CV2901	6	38	40	4	5	2	9	1	DH710	6	17	90					1
CV1959	50	4	44					1	CV2938	6	29	53					1				63					2
CV1961	12	1	82					1	CV2975	6	38	33	5	4	1	2	1	DH719	6	17	90					1
CV1962	6	37	52	7	2	12	10	1	CV2983	3	40	45	7	1	5	6	1				63					2
			63	7	2	12	4	1	CV2984	6	37	35	8	7	12	1	1	DK91	1	40	57	7	1	5	4	1
			63	7	2	12	5	1				35	8	7	12	4	1	DK92	1	40	48	7	1	12	4	1
CV1963	6	37	52	7	2	12	10	1	CV3512	6	40	34	4	3	5	6	1	DK96	1	40	54	7	1	12	4	1
			63	7	2	12	4	1	CV3523	6	37	*38	7	2	1	5	1	DL33	3	37	45	7	2	8	5	1
			63	7	2	12	5	1	*Normally Shows Short Position 4-6.									DL35	1	37	54	7	2	12	5	1
CV1964	6	37	52	7	2	12	10	1	*Normally Shows Grid Emission.									DL36	1	37	48	7	2	12	5	1
			63	7	2	12	4	1	CV3798	50	37	*70	2	11	3	5	1	DL91	1	40	*55	7	1	5	3	1
			63	7	2	12	5	1	*Normally Shows Short Position 11.									*Normally Shows Short Position 2-6.								
CV1966	6	37	37	7	2	12	5	1	*Normally Shows Grid Emission.									DL92	3	40	*48	7	1	5	3	1
CV1967	6	37	37	7	2	12	5	1	CV3799	50	37	*69	2	11	3	5	1	*Normally Shows Short Position 2-6.								
CV1969	6	37	48	8	7	12	3	1	*Normally Shows Short Position 11.									DL93	3	40	*36	7	1	5	4	1
			48	8	7	12	4	1	*Normally Shows Grid Emission.									*Normally Shows Short Position 2-6.								
CV1970	6	37	48	8	7	12	3	1	CV4007	6	5	62					1	DL94	3	40	45	7	1	5	6	1
			48	8	7	12	4	1				62					2	DL95	3	40	*42	7	1	5	3	1
CV1972	6	37	41	8	7	12	3	1	CV4010	6	1	63					1	*Normally Shows Short Position 2-6.								
CV1973	6	37	41	8	7	12	3	1	CV4018	6	40	32	4	3	5	1	1	DL96	3	40	45	7	1	5	6	1
CV1974	6	37	47	7	2	12	10	1	CV4024	12	8	74					1	DP61	6	1	63					1
CV1975	6	37	47	7	2	12	10	1				74					2	DY30	1	32	55					1
CV1976	6	37	37	7	2	12	5	1	D2M9	6	5	62					1	DY80	1	24	85					1
CV1978	6	30	77					1				62					2	DY86	1	24	35					1
CV1981	6	30	84					1	D63	6	37	48	7	2	12	3	1	DY87	1	24	35					1
CV1982	6	30	84					1				48	7	2	12	5	1	DY802	1	24	56					1
CV1985	6	25	*85					1	D77	6	5	62					1	E55L	6	42	*25	4	5	7	8	1
			*85					2				62					2	*Normally shows short position 2-6.								
*Tube Good if it Reads 22 or More.									D152	6	5	62					1	E80CC	12	8	74					1
CV1988	6	25	78					1				62					2				74					2
			78					2	D193	3	40	*36	7	1	5	4	1	E80CF	6	11	72					1
CV1990	6	37	42	8	7	12	2	1	*Normally Shows Short Position 2-6.												55					2
			71	8	7	12	4	1	DA90	2	40	*70	7	1	2	6	1	E80F	6	38	34	4	5	7	9	1
			71	8	7	12	5	1	*Normally Shows Short Position 5-11.									E80L	6	38	25	4	5	1	2	1
CV1991	6	37	42	8	7	12	2	1	DAC32	1	37	55	7	2	12	10	1	E80T	6	38	72	4	5	12	2	1
			71	8	7	12	4	1				96	7	2	12	5	1	E81CC	12	8	74					1
			71	8	7	12	5	1	DAF91	1	40	56	7	1	12	6	1				74					2
CV1993	6	30	92					1				95	7	1	12	3	1	E81L	6	38	24	4	5	1	2	1
CV1995	6	37	52	8	7	12	2	1	DAF92	2	40	55	7	1	12	6	1	E810F	6	38	*29	4	5	3	2	1
			72	8	7	12	4	1				70	7	1	12	4	1	*Normally shows short position 6-9.								
			72	8	7	12	5	1	DAF96	1	40	58	7	1	12	6	1	E83F	6	38	25	4	5	12	2	1
CV1996	6	37	52	8	7	12	2	1				70	7	1	12	3	1	E88CC	6	8	24					1
			72	8	7	12	4	1	DC90	1	40	*70	7	1	5	6	1				24					2
			72	8	7	12	5	1	*Normally Shows Short Position 2-3.									E90CC	6	2	49					1
CV2128	6	38	85	5	4	12	1	1	DCC90	3	40	45	7	1	4	3	1				49					2
			38	5	4	12	9	1				45	7	1	4	5	1	E90F	6	1	82					1
CV2129	6	38	33	5	4	8	9	1	DD6	6	5	62					1	E91AA	6	5	62					1
CV2370	3	40	*48	7	1	5	3	1				62					2				62					2
*Normally Shows Short Position 2-6.									DF33	2	37	53	7	2	12	10	1	E91H	6	1	89					1

◆Use TC-80 Adapter

△Use TC-70 Adapter

*Normal Shorts Refer to Position of "D" Switch.

CV1935 - E91H

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
E91N	6	40	32	4	3	5	1	1	ECC801S	12	8	74					1	EFL200	6	43	27	5	6	12	1	1
E92CC	6	2	61					1	ECC802S	12	8	74					2	EH90	6	1	94					1
E99F	6	1	84					1	ECC808	6	38	75					2	EH-900S	6	1	91					1
E180F	6	38	25	4	5	1	2	1	ECC808	6	38	36	4	5	12	1	1	EK90	6	1	91					1
E182CC	6	38	30	4	5	8	2	1	ECC808	6	38	36	4	5	12	9	1	EL34	6	29	53					1
E188CC	6	8	30	4	5	8	7	1	ECC808	6	38	41	4	5	6	1	1	EL36	6	27	58					1
E235L	6	37	24					2	ECC960	6	2	41	4	5	6	9	1	EL37	6	29	63					1
E280F	6	23	24					1	ECC960	6	2	49					2	EL38	6	29	*62					1
EA91	6	5	80					1	ECF80	6	11	49					1	*For Plate Cap Use Jack Next to Socket 26.								
EAA91	6	5	62					2	ECF80	6	11	66					2	EL81	6	38	*32	5	4	7	2	1
EABC80	6	17	62					1	ECF82	6	11	55					1	*Normally Shows Short Position 1-6-9.								
EAF801	6	38	90					2	ECF82	6	11	79					2	EL82	6	23	68					1
EB34	6	37	63					1	ECF86	6	38	56					2	EL83	6	38	30	5	4	12	2	1
EB91	6	5	62					1	ECF86	6	38	25	4	5	3	2	1	EL84	6	23	68					1
EBC90	6	6	62					2	ECF86	6	38	25	4	5	3	2	1	EL85	6	38	*39	5	4	1	2	1
EBC91	6	6	85					1	ECF200	6	43	25	4	5	1	6	1	*Normally Shows Short Position 6-8.								
EBC91	6	6	78					2	ECF200	6	43	30	5	6	12	3	1	EL86	6	23	58					1
EBC91	6	6	91					1	ECF201	6	43	30	5	6	12	10	1	EL90	6	3	77					1
EBC91	6	6	78					2	ECF201	6	43	28	5	6	12	3	1	EL91	6	40	34	4	3	12	1	1
EBF80	6	38	37	5	4	12	2	1	ECF801	6	38	32	5	6	12	10	1	EL95	6	3	88					1
EBF80	6	38	64	5	4	12	7	1	ECF801	6	38	24	4	5	3	2	1	EL500	6	42	*25	4	5	2	1	1
EBF80	6	38	64	5	4	12	8	1	ECF801	6	38	26	4	5	3	9	1	*Normally shows short position 3-6-7-8.								
EBF80	6	38	61	5	4	12	2	1	ECF802	6	11	80					1	EL503	6	42	*31	4	5	3	7	1
EBF80	6	38	62	5	4	12	7	1	ECF802	6	11	85					2	*Normally shows short position 1-2-6-8.								
EBF89	6	38	62	5	4	12	8	1	ECF805	6	38	30	4	5	8	7	1	EL505	6	42	*26	4	5	1	8	1
EBF89	6	38	60	5	4	12	7	1	ECF805	6	38	30	4	5	8	7	1	*Normally shows short position 2-3-6-7.								
EBF89	6	38	60	5	4	12	8	1	ECH81	6	38	33	4	5	8	9	1	EL508	6	42	*30	4	5	1	8	1
EC81	6	38	60	5	4	12	8	1	ECH81	6	38	85	5	4	12	1	1	EL509	6	42	*26	4	5	1	8	1
EC81	6	38	60	5	4	12	8	1	ECH83	6	38	38	5	4	12	9	1	*Normally shows short position 2-3-6-7.								
EC86	6	39	29	4	5	3	6	1	ECH83	6	38	30	5	4	12	2	1	EL802	6	9	51					1
EC88	6	38	*85	4	5	7	8	1	ECH83	6	38	34	5	4	12	9	1	EL803	6	38	30	5	4	12	2	1
*Normally Shows Short Position 1-3-6-9.									ECH84	6	38	23	4	5	12	2	1	EL820	6	38	*32	5	4	7	2	1
EC9C	6	40	41	4	3	1	6	1	ECH200	6	43	26	4	5	12	9	1	*Normally Shows Short Position 1-6-9.								
EC91	6	40	*29	4	3	6	1	1	ECH200	6	43	31	5	6	12	3	1	EL821	6	38	28	5	4	12	2	1
*Normally Shows Short Position 2-5.									ECL80	6	38	30	5	6	12	8	1	ELL80	6	38	29	4	5	12	2	1
EC92	6	40	30	4	3	12	6	1	ECL80	6	38	37	5	4	12	9	1	EM-87	6	38	29	4	5	12	6	1
EC95	6	40	32	4	3	1	2	1	ECL82	6	38	44	5	4	12	2	1	EN93	6	40	43	4	3	12	1	1
EC97	6	40	33	4	3	1	2	1	ECL82	6	38	33	5	4	12	3	1	EQ80	6	38	33	5	4	3	7	1
EC806S	6	39	29	4	5	3	6	1	ECL84	6	38	39	5	4	12	1	1	EY81	6	38	33	5	4	2	9	1
EC900	6	40	27	3	4	2	1	1	ECL84	6	38	26	4	5	12	8	1	EY82	6	38	29	4	5	6	9	1
ECC35	6	25	*85					1	ECL85	6	38	26	4	5	12	1	1	EY86	6	39	*95	5	4	1	10	1
ECC35	6	25	*85					2	ECL85	6	38	25	4	5	12	9	1	*Normally Shows Short Position 6-11.								
*Tube Good If It Reads 22 Or More.									ECL86	6	38	35	4	5	7	1	1	EY87	6	39	*95	5	4	1	10	1
ECC81	12	8	74					1	ECLL800	6	38	*99	4	5	12	1	1	*Normally Shows Short Position 6-11.								
ECC82	12	8	74					2	ED2	6	5	36	4	5	12	2	1	EY88*	6	39	30	5	4	7	3	1
ECC82	12	8	75					1	ED2	6	5	36	4	5	12	6	1	*If no test, use alternate settings.								
ECC82	12	8	75					2	ED500	6	42	62					2	EY88	6	39	30	5	4	3	7	1
ECC83	12	8	*85					1	ED500	6	42	*52	4	5	12	8	1	EY500	6	37	32	7	8	2	5	1
ECC83	12	8	*85					2	ED500	6	42	*52	4	5	12	8	1	EZ35	6	33	15					1
*Tube Good if it Reads 22 or More.									EF22	6	36	36	8	1	12	6	1	EZ80	6	38	40	5	4	12	1	1
ECC84	6	38	33	5	4	7	2	1	EF37-A	6	37	37	2	7	1	10	1	EZ81	6	38	40	5	4	12	7	1
ECC85	6	8	33	5	4	7	6	1	EF80	6	38	33	5	4	1	2	1	EZ81	6	38	34	5	4	12	1	1
ECC85	6	8	70					1	EF85	6	38	33	5	4	1	2	1	EZ90	6	40	34	5	4	12	7	1
ECC85	6	8	70					2	EF86	6	38	40	5	4	2	9	1	EZ90	6	40	44	4	3	12	1	1
ECC86	6	38	33	5	4	12	2	1	EF89	6	38	34	5	4	1	2	1	G180/ZM	50	37	*99	2	11	3	5	1
ECC88	6	38	33	5	4	12	7	1	EF91	6	40	30	4	3	12	1	1	*Tube Good If it Reads 60 or More.								
ECC88	6	38	31	5	4	12	2	1	EF92	6	40	35	4	3	12	1	1	*Normally Shows Short Position 11.								
ECC89	6	38	31	5	4	12	7	1	EF93	6	1	78					1	*Normally Shows Grid Emission.								
ECC89	6	38	29	4	5	7	2	1	EF94	6	1	82					1	G501	3	42	*94	4	5	4	10	1
ECC91	6	2	29	4	5	7	6	1	EF95	6	1	63					1	*No short test								
ECC91	6	2	60					1	EF96	6	1	80					1	GZ-30	5	33	12					1
ECC189	6	8	60					2	EF98	6	40	30	4	3	12	1	1	GZ-32	5	33	12					2
ECC189	6	8	30					1	EF183	6	38	30	5	4	3	2	1	GZ-32	5	33	12					2
ECC189	6	8	30					2	EF184	6	38	29	5	4	3	2	1	GZ34	5	33	10					1
ECC189	6	8	30					1	EF804	6	38	39	5	4	2	9	1	GZ34	5	33	10					2
ECC189	6	8	30					2	EF-806S	6	38	40	4	5	2	9	1									

■ Use TC-62B Adapter. ◆ Use TC-80 Adapter △ Use TC-70 Adapter *Normal Shorts Refer to Position of "D" Switch.

E91N - GZ34

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.
H63	6	37	40	7	2	12	10	1	LZ329	9	11	66					1	PCF200	8	43	30	5	6	12	3	1
HABC80	19	17	90					1				55					2				30	5	6	12	10	1
			63					2	M8081	6	2	60					1	PCF201	8	43	28	5	6	12	3	1
HBC90	12	6	85					1				60					2				32	5	6	12	10	1
			78					2	M8100	6	1	63					1	PCF801	8	38	24	4	5	3	2	1
HBC91	12	6	91					1	N14	1	37	54	7	2	12	5	1				26	4	5	3	9	1
			78					2	N17	3	40	*48	7	1	5	3	1	PCF802	9	11	80					1
HCC85	17	8	65					1				*Normally Shows Short Position 2-6.					2				85					2
			65					2	N18	3	40	*42	7	1	5	3	1	PCF805	7	38	30	4	5	8	7	1
HCH81	12	38	32	5	4	12	2	1				*Normally Shows Short Position 2-6.					1				33	4	5	8	9	1
HD14	1	37	35	5	4	12	9	1	N19	3	40	45	7	1	5	6	1	PC200	9	43	31	5	6	12	3	1
			55	7	2	12	10	1	N22LL	19	42	33	4	5	7	1	1				30	5	6	12	8	1
			96	7	2	12	5	1	N152	19	38	*32	5	4	7	2	1	PCL82	16	38	33	5	4	12	3	1
HF93	12	1	78					1				*Normally Shows Short Position 1-6-9.					1				39	5	4	12	1	1
HF94	12	1	82					1	N329	16	23	68					1	PCL84	15	38	26	4	5	12	8	1
HK90	12	1	91					1	N709	6	23	68					1				26	4	5	12	1	1
HL90	19	3	77					1	NCC189	4	38	30	5	4	12	2	1	PCL85	18	38	25	4	5	12	9	1
HL92	50	4	44					1				30	5	4	12	7	1				25	4	5	12	2	1
HL94	30	40	27	3	4	5	2	1	NR67	6	37	44	7	2	12	10	1	PCL86	14	38	25	4	5	2	8	1
HM04	6	1	91					1	NR78	6	29	99					1				35	4	5	7	1	1
HY90	35	40	33	4	3	6	5	1	NR78A	6	29	93					1	PD500	9	42	*52	4	5	12	8	1
KT32	25	29	47					1	NR81	6	37	52	7	2	12	10	1				*Normally shows short position 2-3-6-7-9.					1
KT63	6	29	91					1	NR83	6	37	50	7	2	12	10	1	PF9	6	37	52	7	2	12	10	1
KT66	6	29	63					1	NR85	6	29	91					1	PF86	4	38	33	4	5	2	9	1
KT88	6	29	43					1	NR95	25	29	47					1	PFL200	16	43	27	5	6	12	1	1
KTZ63	6	37	50	7	2	12	10	1	NU20	5	33	32					1				27	5	6	12	8	1
L63	6	29	93					1				32					2	PH4	6	37	45	7	2	12	5	1
L77	6	40	41	4	3	1	6	1	OBC3	12	37	42	8	7	12	2	1	PL36	25	27	58					1
LC900	3	40	27	3	4	2	1	1				71	8	7	12	4	1	PL81	19	38	*32	5	4	7	2	1
LCF80	6	11	66					1	OF1	6	37	47	7	2	12	10	1				*Normally Shows Short Position 1-6-9.					1
			55					2	OH4	12	37	45	7	2	12	5	1	PL82	16	23	68					1
LCF200	5	43	30	5	6	12	3	1	OSW2190	6	30	60					1	PL83	12	38	30	5	4	12	2	1
			30	5	6	12	10	1	OSW2192	6	30	38					1	PL84	15	23	58					1
LCF201	5	43	28	5	6	12	3	1	OSW2600	6	30	60					1	PL95	4	3	88					1
			32	5	6	12	10	1	OSW2601	6	30	38					1	PL500	30	42	*25	4	5	2	1	1
LCF-201	6	11	80					1	OSW3105	6	37	42	8	1	12	2	1				*Normally shows short position 3-6-7-8.					1
			85					2				71	8	1	12	4	1	PL504	30	42	*25	4	5	2	1	1
LCF801	5	38	24	4	5	3	2	1				71	8	1	12	5	1				*Normally shows short position 3-6-7-8.					1
			26	4	5	3	9	1	OSW3106	6	29	79					1	PL505	40	42	*26	4	5	1	8	1
LCH200	5	43	31	5	6	12	3	1	OSW3108	6	29	63					1				*Normally shows short position 2-3-6-7.					1
			30	5	6	12	8	1	OSW3109	6	37	48	7	2	12	3	1	PL508	17	42	30	4	5	1	8	1
LCL80	4	38	37	5	4	12	9	1				48	7	2	12	5	1	PL-509	30	42	*26	4	5	1	8	1
			44	5	4	12	2	1	OSW3111	6	30	84					1				*Normally shows short position 2-3-6-7.					1
LCL82	12	38	33	5	4	12	3	1	OSW3112	6	29	93					1	PL521	30	42	*29	4	5	1	8	1
			39	5	4	12	1	1	PABC80	9	17	90					1				*Normally shows short position 2-3-6-7.					1
LCL84	10	38	26	4	5	12	8	1	PC86	4	39	29	4	5	3	6	1	PL802	16	9	51					1
			26	4	5	12	1	1	PC88	4	38	*85	4	5	7	8	1	PL820	19	38	*32	5	4	7	2	1
LCL85	10	38	25	4	5	12	9	1				*Normally shows short position 1-3-6-9.					1				*Normally Shows Short Position 1-6-9.					1
			25	4	5	12	2	1	PC92	3	40	30	4	3	12	6	1	PM04	6	1	78					1
LF183	4	38	30	5	4	3	2	1	PC-95	4	40	33	4	3	1	2	1	PM05	6	1	63					1
LF184	4	38	29	5	4	3	2	1	PC97	5	40	33	3	4	1	2	1	PY32	30	37	24	2	7	6	3	1
LFL200	12	43	27	5	6	12	1	1	PC900	4	40	27	3	4	2	1	1				24	2	7	6	5	1
			27	5	6	12	8	1	PCC84	7	38	33	5	4	7	2	1	PY80	19	38	29	5	4	12	9	1
LL86	10	23	58					1				33	5	4	7	2	1	PY81	17	38	33	5	4	2	9	1
LL500	18	42	*25	4	5	2	1	1	PCC85	9	8	70					1	PY82	19	38	29	4	5	6	9	1
			Normally shows short position 3-6-7-8.					1				70					2	PY88	30	39	30	5	4	7	3	1
LL505	25	42	*26	4	5	1	8	1	PCC88	7	38	31	5	4	12	2	1				*If no test, use alternate settings.					1
			*Normally shows short position 2-3-6-7.					1				31	5	4	12	7	1	PY88	30	39	30	5	4	3	7	1
LL521	22	42	*29	4	5	1	8	1	PCC89	7	38	29	4	5	7	2	1	PY500	40	37	32	7	8	2	5	1
			*Normally shows short position 2-3-6-7.					1				29	4	5	7	6	1	QA240	6	40	41	4	3	1	6	1
LL802	10	9	51					1	PCC189	7	8	30					1	QA2404	6	5	62					1
LN152	6	38	37	5	4	12	9	1				30					2	QA2406	12	8	74					1
			44	5	4	12	2	1	PCF80	9	11	66					1				74					2
LY-81	10	38	33	5	4	2	9	1				55					2	QA2407	6	40	44	4	3	12	1	1
LY88*	22	39	30	5	4	7	3	1	PCF82	9	11	79					1				44	4	3	12	6	1
			*If no test, use alternate settings.					1				55					2	QA2408	6	25	78					1
LY88	22	39	30	5	4	3	7	1	PCF86	7	38	25	4	5	3	2	1				78					2
LY500	30	37	32	7	8	2	5	1				25	4	5	1	6	1	QE03/10	6	38	33	5	4	8	9	1
LZ319	9	11	66					1				55					2									1
			55					2									1									1

◆Use TC-80 Adapter

■Use TC-62B Adapter. *Normal Shorts Refer to Position of "D" Switch.

H63 - QE03/10

B & K DYNA-QUIK MODEL 700 TUBE CHART

TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.	TUBE TYPE	Heater	Socket	Sensitiv-ity	A	B	C	D	Test Pos.				
QE05/40	6	37	*38	7	2	1	5	1	V177	6	40	35	4	3	12	1	1	X73 (M)	6	37	45	7	2	12	5	1				
*Normally Shows Short Position 4-6.									V741	6	40	41	4	3	1	6	1	X107	19	1	91									
QS150/40	50	37	*99	2	11	3	5	1	V884	6	40	35	4	3	12	1	1	X155	6	8	55									
*Tube Good if it Reads 60 or More.									V886	6	40	34	4	3	12	1	1				55									
*Normally Shows Short Position 11.									VP6	6	40	35	4	3	12	1	1	X727	6	1	91									
*Normally Shows Grid Emission.									VP1321	12	40	*55	4	3	1	5	1	XB767A	6	37	34	7	2	12	5	1				
QV03/12	6	38	33	5	4	8	9	1	*Normally Shows Short Position 2-7.									XC95	2	40	33	4	3	1	2	1				
QV06/20	6	37	*38	7	2	1	5	1	VR75	50	37	*70	2	11	3	5	1	XC97	2	40	33	4	3	1	2	1				
*Normally Shows Short Position 4-6.									*Normally Shows Short Position 11.									XC900	2	40	27	3	4	2	1	1				
R52	5	33	12					1	*Normally Shows Grid Emission.									XCC189	4	8	30									
SN7	1	32	55					2	VR90	50	37	*69	2	11	3	5	1	*Normally shows short position 4-6												
SP6	6	40	30	4	3	12	1	1	*Normally Shows Short Position 11.									XCF80	4	11	66									
TJ880	12	9	35					1	*Normally Shows Grid Emission.												65									
T2M05	6	40	34	4	3	12	5	1	VR105	50	37	*85	2	11	3	5	1	XCF86	5	38	24	4	5	3	2	1				
*Normally Shows Short Position 5-6.									*Normally Shows Short on Position 11.									*Normally Shows Short position 4-6												
TM12	6	40	*85	4	3	12	6	1	*Normally Shows Grid Emission.									XCF801	4	38	25	4	5	1	6	1				
TS51	6	1	63					1	VR150/30	50	37	*99	2	11	3	5	1	XCF801	4	38	24	4	5	3	2	1				
TS52	6	2	60					1	*Tube Good if it Reads 60 or More.									XCH81	3	38	26	4	5	3	9	1				
*Normally Shows Short Position 5-6.									*Normally Shows Short on Position 11.									*Normally Shows Short position 4-6												
TS-876C	6	9	28					2	VT52	6	29	92					1	XCL82	8	38	33	5	4	12	3	1				
U5Q	5	33	32					1	VT65	7	29	99					1				39	5	4	12	1	1				
U52	5	33	32					2	VT66	6	29	91					1	XCL84	8	38	26	4	5	12	8	1				
U54	5	33	16					2	VT74	5	33	12					2	XCL85	18	38	26	4	5	12	1	1				
U78	6	40	44	4	3	12	1	1	VT86	6	37	52	7	2	12	10	1				25	4	5	12	2	1				
U147	6	33	15					2	VT87	6	37	44	7	2	12	10	1	XF80	3	38	33	5	4	1	2	1				
U149	6	36	45	8	1	12	3	1	VT88	6	37	52	7	2	12	10	1	XF85	3	38	33	5	4	1	2	1				
U153	17	38	33	4	5	2	9	1	VT90	6	37	52	7	2	12	4	1	XF183	3	38	30	5	4	3	2	1				
U154	19	38	29	4	5	6	9	1	VT91	6	37	48	7	2	12	3	1	XF184	3	38	29	5	4	3	2	1				
U192	19	38	29	4	5	6	9	1	VT93	6	37	50	7	2	12	10	1	XL36	12	27	57									
U709	6	38	34	5	4	12	1	1	VT94	6	29	93					1	XL84	8	23	68									
UAA91	19	5	62					1	VT96	6	37	47	7	2	12	4	1	XL86	8	23	58									
UABC80	25	17	62					2	VT97	5	33	32					2	XL500♦	12	42	*25	4	5	2	1	1				
UBF80	17	38	33	5	4	12	2	1	VT99	6	37	45	7	2	12	5	1	*Normally shows short position 3-6-7-8.												
UC92	9	40	30	4	3	12	6	1	VT102	6	29	92					1	XXD	12	36	41	8	1	12	4	1				
UCC84	22	38	33	5	4	7	2	1	VT103	6	37	42	8	7	12	2	1	XXFM	6	36	43	8	1	12	3	1				
UCC85	25	8	70					1	VT104	12	37	71	8	7	12	4	1				36	8	1	12	5	1				
UCF80	25	11	66					2	VT105	6	37	48	8	7	12	3	1				35	8	1	12	6	1				
UCH81	19	38	32	5	4	12	2	1	VT107	6	29	79					1	XXL	6	36	41	8	1	12	6	1				
UCL82	50	38	33	5	4	12	3	1	VT112	6	30	60					1	XY88*	16	39	30	5	4	7	3	1				
UF80	19	9	76					1	VT114	5	33	16					2	*If no test, use alternate settings.												
UF85	19	9	62					1	VT115	6	29	63					1	XY88	16	39	30	5	4	3	7	1				
UF86	12	38	40	5	4	2	9	1	VT116	6	30	83					1	YF183	4	38	30	5	4	3	2	1				
UF89	12	38	34	4	5	1	2	1	VT117	6	30	84					1	YF184	4	38	29	5	4	3	2	1				
UL84	50	23	58					1	VT124	1	37	55	7	2	12	5	1	YL1371	12	37	*38	7	2	1	5	1				
UU12	6	38	34	5	4	12	1	1	VT125	1	37	54	7	2	12	5	1	Z14	2	37	53	7	2	12	10	1				
UY82	50	38	29	4	5	6	9	1	VT126	6	33	15					2	Z63	6	37	50	7	2	12	10	1				
UY85	35	39	30	4	5	1	6	1	W17	1	40	55	7	1	5	6	1	Z719	6	38	33	5	4	1	2	1				
V2M70	6	40	44	4	3	12	1	1	W77	6	40	35	4	3	12	1	1	Z729	6	38	40	5	4	2	9	1				
			44	4	3	12	6	1	W149	6	36	45	8	1	12	6	1	ZD17	1	40	*55	7	1	5	3	1				
									W719	6	38	33	5	4	1	2	1	*Normally Shows Short Position 2-6.												
									W727	6	1	78					1	ZD25	1	40	58	7	1	12	6	1				
									X63 (M)	6	37	45	7	2	12	5	1				70	7	1	12	3	1				
									X64	6	37	44	7	2	1	10	1	ZD151	6	38	37	5	4	12	2	1				

♦Use TC-80 Adapter.