


O P E R A T O R S   G U I D E

# 1742A OSCILLOSCOPE

RSE GROUP  
(MASTER)

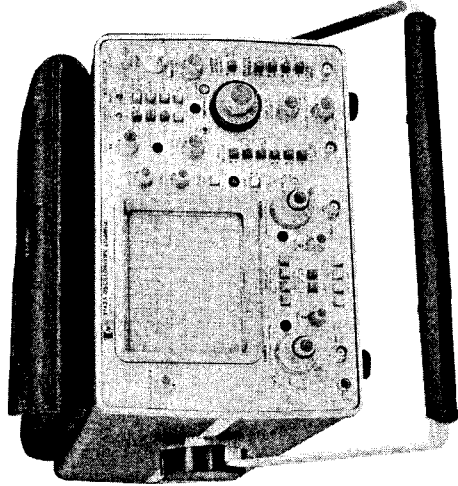



## **SAFETY SUMMARY**

*The following general safety precautions must be observed during operation of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.*

### **GROUND THE INSTRUMENT.**

*To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.*

### **DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE.**

*Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.*

### **DO NOT REMOVE INSTRUMENT COVERS.**

*Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Service instructions for this instrument are provided in a separate Operating and Service Manual.*

### **DANGEROUS PROCEDURE WARNINGS.**

*Warnings such as the example below, precede potentially dangerous procedures throughout this manual! Instructions contained in the warnings must be followed.*

### **WARNING**

*Dangerous voltages, capable of causing death, are present in this instrument.  
Use extreme caution when handling, installing or operating.*



ach 5

copy 2



# OPERATORS GUIDE

## MODEL 1742A OSCILLOSCOPE

© COPYRIGHT HEWLETT-PACKARD COMPANY/COLORADO SPRINGS DIVISION 1978  
1900 GARDEN OF THE GODS ROAD, COLORADO SPRINGS, COLORADO, U.S.A.

ALL RIGHTS RESERVED

Manual Part Number 01742-90904  
Microfiche Part Number 01742-90804

PRINTED: JULY 1978

## TABLE OF CONTENTS

	Page		Page
General Information .....	1	Use of Option 034 DMM .....	28
Description .....	1	Pulse Period and Pulse Width Measurements .....	28
Accessories Furnished .....	2	Transition Measurements .....	30
Accessories Available .....	2	Duty Cycle Measurements .....	32
Options .....	2	Signal Frequency or Pulse Repetition Rate .....	32
Preparation for Use .....	10	Propagation Delay Measurements .....	32
Power Cord .....	10	Adjusting Desirable Time Interval Between Pulses .....	34
Power Requirements .....	10	Pulse Jitter Measurements .....	35
Controls and Connectors .....	11	Phase Difference Measurements Using Time Delay .....	37
Turn-on Procedure .....	17	Conventional Measurements Using DMM Only .....	38
Operator's Adjustments .....	18	Voltage Measurement Applications .....	39
Trace Align .....	18	DC and Absolute Voltage Measurements .....	40
Astigmatism and Focus .....	18	Peak-to-peak Voltage Measurements .....	41
Probe Compensation .....	19	Average Voltage Measurements Using Oscilloscope .....	42
Display/Readout Zero .....	19	Average and RMS Voltage Measurements Using Option 034 DVM .....	43
Operator's Functional Check .....	20	Amplitude Comparison Measurements .....	43
Obtaining Basic Displays .....	22	Common-mode Rejection .....	44
Normal Sweep Display .....	23	Option 101 - Logic State Display .....	46
Magnified Sweep Display .....	23		
Delayed Sweep Display .....	24		
A vs B Display .....	24		
Time-interval Measurement ( $\Delta T$ ) Applications .....	25		
Time-interval Mode Switches .....	25		
Time-interval Readouts .....	28		

## MODEL 1742A OPERATORS GUIDE OPERATING INSTRUCTIONS

### GENERAL INFORMATION.

This Operators Guide will acquaint you with the Model 1742A features, capabilities, accessories, power requirements, and controls. To aid in operating the oscilloscope, initial turn-on procedures, adjustments, and a functional check are provided. Detailed explanations in the Applications Section of this manual show how you can use varied capabilities of the 1742A to best advantage in a variety of electrical measurements. Model 1742A specifications and general characteristics are listed in tables 1 and 2. Service information is available in a separate service manual.

### DESCRIPTION.

The Hewlett-Packard Model 1742A is a dual-channel, 100-MHz, delayed-sweep oscilloscope designed for general-purpose bench or field use. The dual-channel dc to 100 MHz vertical deflection system has 12 calibrated deflection factors from 5 mV/div to 20 V/div. A maximum sensitivity of 1 mV/div to 40 MHz is provided on both channels by means of a 5X

vertical magnification. Selectable input impedance of either 50 ohms or 1 megohm permits impedance selection that best meets measurement application.

The 1742A provides the two-marker, time-interval measurement feature in addition to the traditional delayed sweep mode. When using the two-marker  $\Delta T$  mode, the time interval is scaled and the output (as a voltage) is applied to rear-panel connectors for readout on a 3 1/2-digit DVM. With Option 034 the time interval voltage is internally connected and read out on a built-in DMM on the top of the oscilloscope.

The horizontal deflection system has calibrated sweep rates from 2 s/div to 0.05  $\mu\text{s}/\text{div}$  and delayed-sweep rates from 20 ms/div to 0.05  $\mu\text{s}/\text{div}$ . A 10X magnifier expands all sweeps by a factor of 10 and extends the fastest sweep to 5 ns/div. In alternate or chop modes, a trigger-view control will display three signals: the channel A signal, the channel B signal, and the trigger signal. When using trigger view in the alternate mode along with the  $\Delta T$  sweep mode, the time interval start marker appears on the trigger waveform and the stop

marker appears coincident in time on the channel A and channel B waveforms. This allows you to correlate the time between the trigger signal and the channel A and channel B signals. In trigger-view operation, center screen represents the trigger threshold point, allowing you to see the triggering level location. With the A VS B control, an X-Y mode of operation is possible. The channel A input (Y-axis) is plotted versus the channel B input (X-axis). The CRT has 8- by 10-cm major divisions on an internal graticule.

## ACCESSORIES FURNISHED.

One Blue Light Filter, HP Part No. 01740-02701  
 One Front-panel Cover, HP Part No. 5040-0516  
 One Vinyl Storage Pouch, HP Part No. 1540-0292  
 One 7.5-ft Power Cord, HP Part No. 8120-1521  
 Two 2-meter 10:1 Divider Probes, HP Model 10041A  
 One 0.5 A Slow-Blow Fuse for 220/240-V operation, HP Part No. 2110-0202

## ACCESSORIES AVAILABLE.

The following accessories are available for the 1742A:  
 Models 1007A and 1114A - Testmobiles  
 Model 1120A - 500 MHz Active Probe  
 Model 1125A - Impedance Converter Probe  
 Model 10002A - 50:1 Divider Probe, 1.5 m (5 ft) long

Model 10020A - Resistive Divider Probe Kit  
 Model 10021A - 1:1 Divider Probe, 1 m (3.3 ft) long  
 Model 10040A - 10:1 Divider Probe, 1 m (3.3 ft) long  
 Model 10042A - 10:1 Divider Probe; 3 m (9.8 ft) long  
 Model 10140A - Collapsible Viewing Hood  
 Model 10491B - Rack Mount Adapter  
 Model 10173A - RFI Filter and Contrast Screen  
 HP Part No. 01715-69501 - Kit for installing Option 034

## OPTIONS.

The following standard options extend the usefulness of 1742A:

**OPTION 001:** Supplies a fixed ac power cord in place of the normal detachable power cord.

**OPTION 034:** Provides a built-in Digital Multimeter that can be used for time interval measurements or as a separate digital multimeter.

**OPTION 090:** Deletes the two Model 10041A divider probes normally supplied. You may specify other probes listed that are more suited to your requirements.

**OPTION 101:** Single pushbutton interface option for operation with the HP Model 1607A Logic State Analyzer. The A vs B mode of operation is deleted.



**OPTION 102:** Option 102 is the Option 101 with an additional special adapter plate (HP Part No. 5061-1213). The adapter plate is used to attach the 1742A and the 1607A instruments together as a single unit.

**OPTION 580:** This option provides the instrument with a special bottom cover to meet Canadian Fire Safety Codes.

**OPTION 900:** Power cord option for use in Great Britain and Singapore. 2.3 m (7.5 ft), removable, 240 V max, 3-conductor 90° IEC.

**OPTION 901:** Power cord option for use in Australia and New Zealand. 2.3 m (7.5 ft), removable, 240 V max, 3-conductor IEC.

**OPTION 902:** Power cord option for use in East and West Europe. 2.3 m (7.5 ft), removable, 240 V max, 3-conductor 90° IEC.

**OPTION 906:** Power cord option for use in Switzerland only. 2.0 m (6.5 ft), removable, 240 V max, 3-conductor 90° CEE22/V.

Table 1. Specifications

#### VERTICAL DEFLECTION (TWO CHANNELS)

**RISE TIME:**  $\leq 3.5$  ns (measured from 10% to 90% points of 6-division input step).

**BANDWIDTH:** dc to 100 MHz measured 3-dB down from 8-div reference. Bandwidth may be limited to approximately 20 MHz by BW LIMIT switch.

Lower 3-dB Limit, ac Coupling:  $\sim 10$  Hz ( $\sim 1$  Hz with 10:1 probe).

#### DEFLECTION FACTOR

**Ranges:** 5 mV/div to 20 V/div in 12 calibrated positions in 1, 2, 5 sequence, accurate within 3%. With vernier uncalibrated, continuously variable between ranges and to at least 50 V/div on 20 V/div range.

#### INPUT RC (SELECTABLE)

**AC and DC:** 1 megohm  $\pm 2\%$  shunted by approximately 20 pF.

**50 Ohm:** 50 ohms  $\pm 3\%$ .

Table 1. Specifications (Cont'd)

<p><b>MAXIMUM INPUT VOLTAGE</b>  <b>AC and DC:</b> 250 V (dc+ peak ac) or 500 V p-p ac at 1 kHz or less.  <b>50 Ohm:</b> 5 Vrms  <b>A+B OPERATION</b>  <b>Differential (A - B) Common Mode:</b> CMRR is at least 20 dB from dc to 20 MHz. Common mode signal amplitude equivalent to 8 div with one vernier adjusted for optimum rejection.</p>												
<p><b>VERTICAL MAGNIFICATION (X5)</b>  <b>BANDWIDTH:</b> 3 dB down from 8-division reference signal.  <b>DC-COUPLED:</b> dc to ~40 MHz (ac-coupled); ~10 Hz to 40 MHz.  <b>RISE TIME:</b> <math>\leq 9</math> ns (measured from 10% to 90% points of 8-division input step).  <b>DEFLECTION FACTOR:</b> increases sensitivity of each deflection factor setting by a factor of five with a maximum sensitivity of 1 mV on channels A and B. (Recommended only for use on .005 V and .01 V ranges.)</p>												
<p><b>MAIN AND DELAYED SWEEPS RANGES</b>  <b>Main:</b> 50 ns/div to 2 s/div (24 ranges) in 1, 2, 5 sequence.</p>												
<p><b>ACCURACY</b>  <b>Delayed:</b> 50 ns/div to 20 ms/div (18 ranges) in 1, 2, 5 sequence.</p>												
<table border="1"> <thead> <tr> <th>Sweep Time/Div</th> <th>*Accuracy</th> <th>Temp Range</th> </tr> </thead> <tbody> <tr> <td rowspan="2">50 ns to 20 ms</td> <td>X1</td> <td rowspan="2">0°C to +15°C +15°C to +35°C +35°C to +55°C</td> </tr> <tr> <td>X10</td> </tr> <tr> <td colspan="3">*50 ms to 2s add 1%</td> </tr> </tbody> </table>			Sweep Time/Div	*Accuracy	Temp Range	50 ns to 20 ms	X1	0°C to +15°C +15°C to +35°C +35°C to +55°C	X10	*50 ms to 2s add 1%		
Sweep Time/Div	*Accuracy	Temp Range										
50 ns to 20 ms	X1	0°C to +15°C +15°C to +35°C +35°C to +55°C										
	X10											
*50 ms to 2s add 1%												
<p><b>CALIBRATED SWEEP DELAY</b>  <b>DELAY TIME RANGE:</b> 0.5 to 10 x MAIN TIME/DIV setting; 100 ns to 2s (minimum delay 150 ns).</p>												
<p><b>Sweep Vernier (Main Only):</b> continuously variable between all ranges and extends slowest sweep to at least 5 s/div. Front-panel UNCAL light indicates when vernier is not in CAL position.  <b>X10 Magnifier:</b> expands all sweeps by a factor of 10 and extends fastest sweep to 5 ns/div.</p>												

Table 1. Specifications (Cont'd)

DIFFERENTIAL TIME MEASUREMENT ACCURACY (OVER FIRST 10CM OF SWEEP):			
Main Time Base Setting	Option 034	**External DVM	Dial
*100 ns/div to 20 ms/div	$\pm(.5 + .05\%$ of full scale)	$\pm(.5 + .05\%$ of full scale)	$\pm(.5 + .1\%$ of full scale)
50 ms/div to 2 s/div	$\pm(1 + .1\%$ of full scale)	$\pm(1 + .1\%$ of full scale)	$\pm(1 + .1\%$ of full scale)
* On 100 ns/div range, specification applies after 1 cm of sweep.			
** Plus accuracy of the external DVM.			
<b>Delay Jitter:</b> <0.002% (1 part in 50 000) of maximum delay in each step from +15°C to +35°C; <0.005% (1 part in 20 000) from 0°C to +15°C and +35°C to +55°C.			
<b>TIME INTERVAL (<math>\Delta</math> TIME MODE)</b>			
<b>TIME INTERVAL OUTPUT VOLTAGE:</b> varies from 50 V to 100 mV full scale. Full scale output voltage can be			

determined by multiplying the number on the TIME/DIV dial by 10 V (e.g., 0.05 s, 0.05 ms, or 0.05  $\mu$ s per division gives 0.5V output full scale).

**ACCURACY:** measurement accuracy is the Time Interval Accuracy plus the external DVM accuracy.

**TRIGGERING**

**INTERNAL:** dc to 25 MHz on signals causing 0.3 division or more vertical deflection, increasing to 1 division of vertical deflection at 100 MHz in all display modes. Increase signal level by 2 when in CHOP and by 5 when MAG X5 is used.

**EXTERNAL:** dc to 50 MHz on signals of 50 mV p-p or more increasing to 100 mV p-p at 100 MHz. Increase signal level by 2 when in CHOP.

**LEVEL AND SLOPE**

**Internal:** at any point on the positive or negative slope of the displayed waveform.

**External:** continuously variable through  $\pm 1V$  on either slope of the trigger signal;  $\pm 10 V$  in  $\div 10$ .

**MAXIMUM INPUT VOLTAGE**

**AC and DC:** 250 V (dc + peak ac) or 500 V p-p ac at 1 kHz or less.

Table 1. Specifications (Cont'd)

**TRIGGER VIEW**

Displays the internal or external trigger signal. In alternate or chop mode (dual channel) channel A, channel B, and the trigger signal are displayed. In channel A or B mode (single channel), trigger view overrides that channel and displays the trigger signal. Displayed amplitude of the internal trigger signal is approximately the same as the on-screen vertical signal. Deflection factor of the external trigger signal is 100 mV/div or 1V/div in EXT ÷ mode. Trigger point of the main sweep is approximately at the point that the displayed trigger signal crosses center screen. With identically timed signals applied to a vertical channel and the external trigger input, the trigger signal is delayed by 2.5 ns  $\pm$  1 ns.

**A VS B OPERATION****BANDWIDTH**

**A (Y-axis):** same as channel A.

**B (X-axis):** dc to 5 MHz.

**DEFLECTION FACTOR:** 5 mV/div to 20 V/div (12 calibrated positions) in 1, 2, 5 sequence.

**PHASE DIFFERENCE BETWEEN CHANNELS:**  $<3^\circ$ , dc to 100 kHz.

**CATHODE-RAY TUBE AND CONTROLS**

**Z-AXIS INPUT:** +4 V,  $>50$ -ns width pulse blanks trace of any intensity, usable to 10 MHz for normal intensity. Input R, 1 kilohm  $\pm$ 10%. Maximum input  $\pm$ 20 V (dc + peak ac).

**GENERAL****CALIBRATOR**

**Type:** approximately 1.4-kHz square wave,  $<0.1$   $\mu$ s rise time.

**Voltage:** 1 V p-p into  $>1$  megohm; 0.1 V p-p into 50 ohms.

Accuracy:  $\pm$ 1%.

**REAR PANEL OUTPUTS:** Main and delayed gates, 0 V to  $>+2.5$  V;  $\Delta$  Time out.

Table 2. General Characteristics

**VERTICAL DEFLECTION (TWO CHANNELS)**  
**DISPLAY MODES:** channel A; channel B (Normal or Invert); Alternate; chopped (approximately 250 kHz rate); A+B; and Trigger View.  
**INPUT COUPLING:** selectable for AC or DC, 50 ohms (dc), or ground. Ground position disconnects input connector and grounds amplifier input.  
**SIGNAL DELAY:** input signals are delayed sufficiently to view leading edge of input pulse without advanced trigger.

#### HORIZONTAL DEFLECTION

**DISPLAY MODES:** main, delayed, A start/B start, MAG X10, and A vs B.

#### TRIGGERING

##### MAIN SWEEP

**Normal:** sweep is triggered by internal or external signal.

**Automatic:** bright baseline displayed in absence of input signal. Triggering is same as normal above 45 Hz.

**Single:** sweep occurs once with same triggering as normal; reset pushbutton arms sweep and lights indicator.

##### DELAYED SWEEP

**Auto:** delayed sweep automatically starts at end of delay period.

**Trig'd:** delayed sweep is armed and triggerable at end of delay period from selected sources.

##### TRIGGER SOURCE

Selectable from channel A, channel B, composite, or line frequency (composite triggering on displayed signal except in chop; in chop, channel A is trigger source).

**External Input RC:** approximately 1 megohm shunted by approximately 20 pF.

**Coupling:** AC, DC, LF REJ, or HF REJ.

**AC:** attenuates signals below approximately 20 Hz.

**LF Rej:** (main sweep only) attenuates signals below approximately 4 kHz.

**HF Rej:** (main sweep only) attenuates signals above approximately 4 kHz.

**Trigger Holdoff:** (main sweep only) increases sweep holdoff time in all ranges.

##### MAIN INTENSIFIED

**DELAYED SWEEP:** intensifies that part of main time base to be expanded to full screen in delayed time base mode. Stop control adjusts position of intensified portion of sweep.

Table 2. General Characteristics (Cont'd)

**ΔTIME MODE:** intensifies two parts of main time base to be expanded to full screen in delayed time base mode. START control positions the first intensified portion of the sweep and the STOP control positions the second intensified portion of the sweep.

**GRATICULE:** 8- by 10-div internal graticule; 0.2-div subdivisions on major horizontal and vertical axes. 1 div = 1 cm. Internal flood gun graticule illumination.

**BEAM FINDER:** returns trace to CRT screen regardless of setting on horizontal, vertical, or intensity controls.

**REAR-PANEL CONTROLS:** astigmatism and trace align.

#### GENERAL

**POWER:** 100, 120, 220, 240 Vac, ±10%, 48 to 440 Hz, 100 V A maximum.

**WEIGHT:** (with accessories) net, 13 kg (28.6 lb).

**DIMENSIONS:** see outline drawing.

#### OPERATING ENVIRONMENT

**Temperature:** 0°C to 55°C.

**Humidity:** up to 95% relative humidity at 40°C.

**Altitude:** to 4600 m (15 000 feet).

**Vibration:** vibrated in three planes for 15 minutes each with 0.254 mm (0.010 in.) excursion 10 to 55 Hz.

#### TIME INTERVAL (Δ TIME MODE)

**FUNCTION:** measures time interval between two events on channel A (channel A display); between two events on channel B (channel B display); or between two events starting from an event on either channel A or B and ending with an event on either channel A or B (alternate display).

#### CATHODE-RAY TUBE AND CONTROLS

**TYPE:** post accelerator, approximately 15 kV accelerating potential; aluminumized P31 phosphor.


Table 2. General Characteristics (Cont'd)

**MODEL 1742A  
WITH  
OPTION 034 INSTALLED**

**NOTES:**

1. DIMENSIONS ARE FOR GENERAL INFORMATION ONLY. IF DIMENSIONS ARE REQUIRED FOR BUILDING SPECIAL ENCLOSURES, CONTACT YOUR HP FIELD ENGINEER .

2. DIMENSIONS ARE IN MILLIMETRES AND (INCHES).

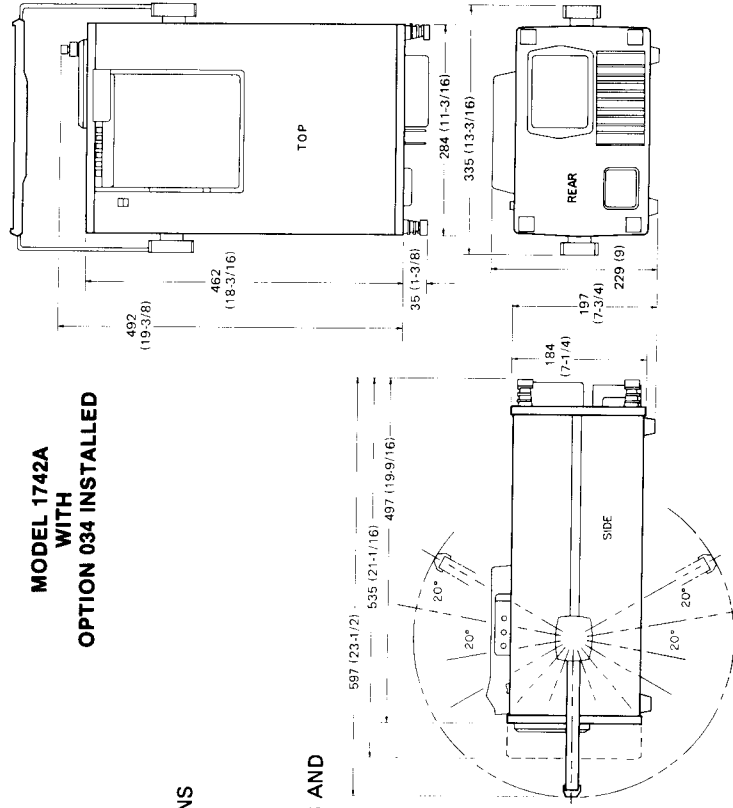

**PREPARATION FOR USE.****WARNING**

Read the Safety Summary at the front of this guide before installing or operating the instrument.




 

HP POWER CABLE PART NUMBERS		
8120 - 1692 OPTION 902		8120 - 0696 OPTION 901
		
8120 - 1703 OPTION 900	8120 - 2296 OPTION 906	8120 - 1521 STD
		
INPUT POWER RECEPTACLE TYPES		

Figure 1. Power Cables Available

**POWER CORD.** The power cord required depends on the ac input voltage and the country in which the instrument is to be used. Figure 1 illustrates standard power receptacle (wall outlet) configurations. The HP part number shown above each receptacle drawing specifies the power cord equipped with the appropriate power cord is not included with your instrument, notify the nearest HP Sales/Service Office and a replacement cord will be provided.

**POWER REQUIREMENTS.** Model 1742A can be operated from any power source supplying 100 V, 120 V, 220 V, or 240 V ac  $\pm 10\%$ , single-phase, 48 to 440 Hz. Power dissipation is 100 VA (maximum). The instrument is normally set at the factory for 120-volt operation.

**CAUTION**

Instrument damage may result if the line voltage selection switch is not set correctly for the proper input power source.

To change the instrument from one voltage to another, proceed as follows:

1. Verify that the 1742A power cord is not connected to any input power source.



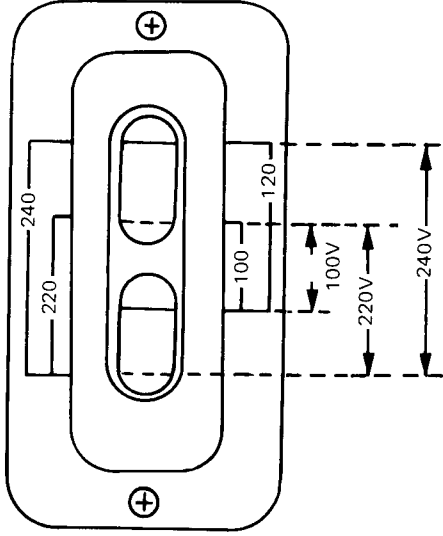


Figure 2. Line Voltage Selection Switch Settings

2. Stand instrument on rear-panel legs and use a blade-type screwdriver to position power selector switches through opening in bottom cover. Figure 2 shows switches set for 120-V operation.

3. Move LINE VOLTAGE SELECT switches to appropriate position.

4. Replace line fuse (rear-panel) with 0.5-ampere fuse for 220/240 V (HP Part No. 2110-0202) or 1-ampere

fuse for 100/120 V (HP Part No. 2110-0007). Both fuses are Slow-blow/time delay type fuses.


5. Connect input power cord to selected power source.


**CONTROLS AND CONNECTORS.**

The front- and rear-panel photograph (figure 21) is located at the rear of this guide on a foldout page for easy reference while reading any part of this guide. The following paragraphs describe each control and connector. The descriptions have index numbers that are keyed to the illustration. Refer to the Applications Section for information about using the 1742A for making measurements.

- 1 **SCALE ILLUM.** Adjusts CRT background illumination for good contrast between background and graticule. Useful to illuminate graticule when viewing in dark area, photographing - if camera has no light source, or for prefooding film.
- 2 **LINE.** Switch turns instrument power on and off.
- 3 **LINE INDICATOR.** Indicator lights when instrument power is on.

 - 4 BEAM FIND.** Returns display to viewing area relative to its off-screen position.
- 5 BEAM INTENSITY.** Controls brightness of CRT display.
- 6 FOCUS.** Adjusts writing beam for sharpest trace. Always keep display focused to prevent damaging CRT internally.
- 7 Main TRIGGER LEVEL.** Selects amplitude point on trigger signal that starts main sweep.
- 8 MAG X10.** Magnifies horizontal display 10 times and expands fastest sweep time to 5 ns/div.
- 9 SINGLE.** Sweep occurs once with same triggering as in NORM. After each sweep, trigger circuit must be manually RESET **10**.
- 10 RESET.** Momentary pushbutton that arms trigger circuit in single-sweep mode. After RESET **10**, sweep can be triggered by internal or external trigger signal or by rotating TRIGGER LEVEL control **7** through zero.
- 11 Reset Lamp.** When lit, indicates trigger circuit is armed. Lamp goes off at end of sweep and remains off until trigger circuit is again armed by pressing RESET **10**.
- 12 AUTO/NORM.** AUTO sweep mode (pushbutton out). Free running sweep provides bright display in absence of trigger signal. Trigger signal input (internal or external) of 45 Hz or more overrides AUTO operation and sweep triggering is same as in NORM mode. NORM sweep mode (pushbutton in) requires internal or external signal to generate sweep and must be used if input frequency is less than 45 Hz.
- 13 & 14 POSITION.** Coarse **13** and FINE **14** adjustments position display horizontally.
- 15 SIGNAL OVERLAY ( $\Delta T=0$ ).** Screwdriver adjustment to overlap displays in  $\Delta t$  mode with STOP **13** control set to 0.00.
- 16  $\Delta$ TIME ON/OFF.** In OFF position, switch turns off second delayed sweep marker, providing conventional delayed sweep operation.
- 17 START.** Selects delay time between start of main sweep and start of time interval measurement.


- 18 STOP.** Selects end point of time interval measurement.
- 19 A START/B START.** A START position sets first delayed sweep marker on channel A and second delayed sweep marker on channel B. This allows time interval measurement from reference point on Channel A to ending point on channel B. B START position sets first delayed sweep marker on channel B and second delayed sweep marker on channel A. This allows time interval measurements from reference point on channel B to ending point on channel A.
- 20 DLYD.** Selects delayed sweep mode of display.
- 21 MAIN.** Selects main sweep mode for display.
- 22 A VS B.** Selects X-Y mode of operation with channel A input (Y-axis) plotted versus channel B input (X-axis).
- OPTION 101.** Deletes A VS B function and adds logic state display. When the 1742A is connected to an HP Model 1607A Logic State Analyzer, pressing STATE DSPL **22** displays 16-word table of 16-bit words. See Applications Section for details.
- 23 Delayed TRIGGER LEVEL.** Selects amplitude point of trigger signal that starts delayed sweep.
- 24 Main TIME/DIV.** Inner knob controls main sweep rate. Rate indicated by numbers displayed in knob skirt opening.
- 25 Delayed TIME/DIV.** Outer rotating section selects delayed sweep rate. Rate indicated by marker on outer knob. An interlock is incorporated so delayed sweep is always faster than main sweep. When rotated out of OFF position in MAIN mode of operation, portion of main sweep is intensified, indicating STOP **18** position of delayed sweep with respect to main sweep.
- 26 & 27 AUTO/TRIG'D.** In AUTO **26**, delayed sweep starts immediately after delay interval which is product of either START **17** control setting or STOP **18** control setting and main TIME/DIV **24** setting. In TRIG'D **27** delayed trigger circuit is armed after delay interval and delayed sweep must be triggered internally or externally by trigger signal. (NOTE: the two marker Time System is active only in the AUTO mode of operation.)
- 28** . Two position switch that selects slope of event that triggers delayed sweep when in TRIG'D mode.

- 29 Delayed AC/DC.** Selects delayed sweep trigger coupling.
- 30 Delayed INT/EXT.** Selects internal or external delayed sweep triggering.
- 31 Delayed EXT ÷ 10.** Attenuates external trigger signal by factor of 10.
- 32 Delayed EXT TRIG INPUT.** BNC connector for delayed external trigger signal.
- 33 TIME/DIV VERNIER.** Provides continuous adjustment of main TIME/DIV between calibrated positions, extending slowest sweep to 5 s/div.
- 34 UNCAL.** Lights when TIME/DIV VERNIER **33** is out of CAL detent position, and indicates that sweep is not calibrated.
- 35 TRIGGER HOLDOFF.** Increase time between sweeps and aids triggering on complex displays such as digital words.
- 36** . Two position switch that selects slope of internal or external trigger signal used to start main sweep.
- 37 LF REJ.** Attenuates internal or external trigger signals below 4 kHz. This is useful to condition high-frequency signals for best synchronization by eliminating unwanted low-frequency signals such as power line interference.
- 38 HF REJ.** Attenuates internal or external trigger signals above 4 kHz. This is useful to condition low-frequency signals for best synchronization by eliminating unwanted high-frequency signals such as RF.
- LINE.** Selecting both LF REJ **37** and HF REJ **38** removes all internal and external trigger signals and applies input ac power frequency for triggering.
- 39 Main AC/DC.** Selects main sweep trigger coupling.
- 40 Main INT/EXT.** Selects internal or external main sweep triggering.
- 41 Main EXT ÷ 10.** Attenuates external trigger signal by factor of 10.
- 42 Main EXT TRIG INPUT.** BNC connector for main external trigger signal.

- 43 ALT.** Channel A and B signals are displayed alternately on consecutive sweeps.
- 44 Channel A.** Displays channel A input signal.
- 45 Channel B.** Displays channel B input signal.
- A + B.** Pressing both channel A **43** and channel B **45** displays the algebraic sum of channel A and channel B input signals. If channel B display is inverted (press CH B INVT **52**), A minus B display results.
- 46 CHOP.** Channel A and B signals are displayed simultaneously by switching between channels at a 250-kHz rate.
- 47 TRIGGER A.** Selects sample of channel A signal as a trigger signal when INT/EXT **40** is in INT.
- 48 TRIGGER B.** When in INT **40**, sample of channel B signal is selected as trigger signal.
- COMP.** Engaging both trigger A **47** and trigger B **48** selects composite trigger. When display mode is set to channel A, channel B, ALT, or A + B, sweep is triggered by displayed signal. When in CHOP, sweep is triggered by channel A signal only.
- 49 TRIG VIEW.** Displays main sweep trigger signal. A fixed sensitivity of 100 mV/div or 1 V/div with EXT  $\div$  10 **41** can be selected in external trigger. TRIGGER LEVEL **7** positions display vertically. Center screen indicates trigger threshold level with respect to trigger signal. If ALT **43** or CHOP **46** is selected, three signals are displayed: channel A, selected trigger signal (at center screen), and channel B. If external trigger signal is selected, you can correlate time between trigger signal and channel A and channel B signals. If you select single channel, trigger view overrides that channel to display selected trigger signal.
- 50 MAG X5.** Magnifies vertical presentation five times, and increases maximum sensitivity to 1 mV/div. Bandwidth is decreased to 40 MHz. Recommended on 5 mV/div and 10 mV/div ranges only.
- 51 BW LIMIT.** Reduces bandwidth of channel A and channel B to 20 MHz.
- 52 CH B INVT.** Inverts polarity of channel B signal. In A + B **43** & **45** mode, pressing CH B INVT **52** results in A minus B display.

**NOTE**

 In the following descriptions for controls **53** through **59**, only channel A controls and connectors are discussed. Channel B controls and connectors are identical in function.

- 53 POSN.** Varies vertical position of channel A display.
- 54 Coupling.** Selects capacitive (AC), direct (DC), or 50-ohm coupling of input signal. GND position disconnects input signal and grounds input to vertical preamplifier.
- 55 VOLTS/DIV.** Selects vertical deflection factor in 1, 2, 5 sequence from 0.005 V/div to 20 V/div, accurate within 3% with vernier **56** in CAL position.
- 56 Vernier.** Provides continuous control of deflection factor between calibrated VOLTS/DIV ranges. Vernier range is at least 2.5 to 1.
- 57 UNCAL.** Lights when vernier control is out of dezent position to indicate VOLTS/DIV is uncalibrated.
- 58 INPUT.** BNC connector to apply signals to channel A vertical amplifier. Impedance and coupling are selected by **59**.
- 59 GROUND POST** . Convenient ground connector. Useful to ensure common ground with equipment under test.
- 60 CAL 1V.** Provides 1-V peak-to-peak (within 1%) square-wave voltage signal recurring at a rate of 1.4 kHz (100 mV peak-to-peak when terminated in 50Ω).
- 61 Z-AXIS INPUT.** BNC connector for intensity modulation of CRT display. +4-volt, >50-ns width pulse blanks trace of any intensity. Do not apply more than ±20 V (dc + peak ac).
- 62 TRACE ALIGN.** Screwdriver adjustment to align horizontal trace with graticule.
- 63 ASTIGMATISM.** Screwdriver adjustment used in conjunction with FOCUS **6** to achieve clean sharp spot or trace. Adjustment is easier with stationary spot.
- 64 MAIN GATE OUTPUT.** Provides rectangular output of +2.5 V coincident with main sweep.

- 65 DLY'D GATE OUTPUT.** Provides rectangular output of +2.5 V coincident with the delayed sweep.
- 66 - 68 1607A INPUTS - Option 101 only.**
- 66 Z-AXIS.** Intensity input from HP Model 1607A.
- 67 VERT.** Y-axis input from HP Model 1607A.
- 68 HORIZ.** X-axis input from HP Model 1607A.
- 69 LINE INPUT.** Connector for ac power cord.
- 70 FUSE.** 1A 250 V slow-blow for 100-V or 120-V operation 0.5A 250 V slow-blow for 220-V or 240-V operation.
- 71 Δ TIME OUT.** Banana-jack connectors for time interval measurement. Voltage output and position of main TIME/DIV control **23** indicates time interval in s, ms, or  $\mu$ s.

### TURN-ON PROCEDURE.

Before turning on the oscilloscope, please read the instructions in the Safety Summary (at the front of this

guide) and in the power cord and power requirements paragraphs. You should also become familiar with the controls and their functions by reading the Controls and Connectors Section and by referring to figure 21 at the back of this guide. To turn on the Model 1742A perform the following steps:

1. Set BEAM INTENSITY **5** fully counterclockwise.
2. Set vertical DISPLAY to ALT **43**.
3. Set internal TRIGGER to A **47**.
4. Set vertical verniers **56** for channel A and Channel B to CAL detent.
5. Set CH B INVT switch **52** to out position.
6. Set vertical coupling control **54** for channel A and channel B to GND.
7. Set vertical POSN control **53** to midrange.
8. Set horizontal POSITION control **13** to midrange.
9. Set main TIME/DIV control **24** to 1 mSEC.

10. Set delayed TIME/DIV control **25** to OFF.
11. Set TIME/DIV VERNIER **53** to CAL detent.
12. Set AUTO/NORM switch **12** to AUTO.
13. Set main INT/EXT trigger switch **40** to INT.
14. Set LINE switch **2** to ON position and allow 15-minute warm-up period.
15. Adjust BEAM INTENSITY **5** for barely visible trace.

### OPERATOR'S ADJUSTMENTS.

Perform the following checks and adjustments to verify that the 1742A is operating properly:

**TRACE ALIGN:** If the oscilloscope is moved from one magnetic environment to another, the trace align coil may need adjustment to align the horizontal trace with the graticule. To align the trace properly, proceed as follows:

1. Obtain basic display as described in TURN-ON procedure.

2. Using channel A POSN control **53**, set trace to center horizontal graticule line.

3. Using nonmetallic alignment tool, adjust TRACE ALIGN **52** (rear panel) for best alignment of trace with horizontal graticule line.

**ASTIGMATISM AND FOCUS.** Astigmatism and focus controls may need adjustment to obtain a sharp display. If so, proceed as follows:

1. Obtain basic display as described in TURN-ON procedure.
2. Set BEAM INTENSITY control **5** fully counterclockwise.
3. Select A VS B **22** horizontal mode of operation.
4. Adjust BEAM INTENSITY control **5** to observe spot.
5. Position spot near center of CRT using vertical POSN **53** and horizontal POSITION **13** controls.
6. Adjust FOCUS control **6** (front panel) and ASTIGMATISM control **53** (rear panel) for best defined spot.



**PROBE COMPENSATION.** Probe compensation may be required because of variations in total input resistance and capacitance from one oscilloscope to another. To accomplish probe compensation, proceed as follows:

1. Obtain basic display as described in **TURN-ON** procedure.
2. Connect divider probe cable to channel A INPUT connector **58**.
3. Connect divider probe tip to CAL 1 V terminal **60**.
4. Set channel A input coupling **54** to DC.
5. Set channel A VOLTS/DIV control **55** for square-wave display with two to three divisions of vertical deflection.
6. Set main TIME/DIV control **24** for horizontal display of at least two full square waves (0.2 mSEC range).
7. Adjust divider probe compensation for correct display (see figure 3).

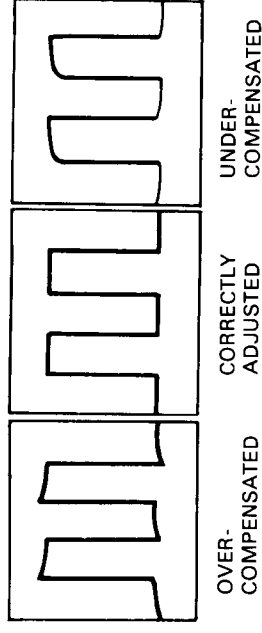


Figure 3. *Divider Probe Adjustment Display*

**DISPLAY/READOUT ZERO.** This adjustment compensates for differential delays in the input amplifier and probes of both oscilloscope channels. It calibrates the 0.00 setting of the time interval STOP dial **18** or the 0.000 indication of the LED on the digital multimeter. Perform this adjustment whenever the test setup is changed. Proceed as follows:

1. Apply input signal to channel A or B INPUT **58**.
2. Select channel A or B vertical DISPLAY **43** or **45** and internal trigger **47** or **48**.
3. Adjust appropriate VOLTS/DIV **55** and vernier **56** for full five-division display of signal.

4. Select main TIME/DIV **20** sensitivity that displays at least one full signal cycle.
5. Set delayed TIME/DIV **25** to sweep speed approximately five times faster than main TIME/DIV **20** sweep speed (if possible).
6. Set  $\Delta$ TIME ON/OFF **16** switch to ON position.
7. Adjust time interval START **17** to place first intensified marker on point of interest on displayed trace.
8. Set time interval STOP **18** dial to 0.00. If using Option 034 Digital Multimeter (or external multimeter), readjust time interval STOP **18** to obtain indication as close as possible to 0.000 on multimeter LEDs.
9. Engage DLYD **20** pushbutton switch. Two intensified portions of waveform are now expanded on screen.
10. With indication of 0.000 on multimeter, or 0.00 on time interval STOP **18** dial, two display segments should be perfectly overlapped. If not, adjust front-panel SIGNAL OVERLAY  $\Delta T=0$  **15** to overlay two signal segments displayed.
11. If using only one signal channel, this completes adjustment. If using two signal channels, connect probe from other channel to same signal source as first channel (same signal applied to both channels simultaneously).
12. Select AILT **43** display and internal triggering **47** or **48**.
13. Set time interval mode **19** to CH A START or CH B START, as desired.
14. Press the MAG X10 **8** display pushbutton.
15. With indication of 0.000 on multimeter or 0.00 on the time interval STOP **18** dial, two display segments should be perfectly overlapped. If not, readjust front-panel SIGNAL OVERLAY ( $\Delta T=0$ ) **15** to overlay two signal segments displayed.

### OPERATOR'S FUNCTIONAL CHECK.

The 1742A operation can be checked without additional test equipment by using the CAL 1 V output as a signal source. These tests functionally check each display mode and front-panel controls. To check the instrument specifications, refer to the operating and service manual.

The operator's check must be performed in the sequence given. Do not attempt to start a procedure in mid-sequence because succeeding steps may depend on previous control settings and correct results may be unobtainable.

1. Set 1742A controls as follows:  
 CHANNEL A  
 VOLTS/DIV **55** ..... .2  
 Coupling **54** ..... DC  
 Vernier **56** ..... CAL detent  
 POSN **53** ..... as required  
 DISPLAY **44** ..... A  
 CH B INVT **52** ..... out

- TIME BASE
- POSITION **13** ..... as required
  - TIME/DIV VERNIER **53** ..... CAL detent
  - Horizontal Display **21** ..... MAIN
  - Main TIME/DIV **24** ..... 0.5 mSEC
  - Delayed TIME/DIV **25** ..... OFF
  - AUTO/NORM **12** ..... AUTO
  - Main INT/EXT **40** ..... INT
  - Main Trigger Slope **36** .....  $\lrcorner$
  - Main TRIGGER LEVEL **7** ..... as required
  - Delayed TRIGGER LEVEL **23** ..... ccw
  - TRIGGER HOLDOFF **35** ..... MIN
  - MAG X10 **8** ..... OUT

- $\Delta$  TIME ON/OFF **16** ..... ON
  - A START/B START **19** ..... A START
  - START **17** ..... fully ccw
  - STOP **13** ..... fully ccw
2. Set INTENSITY **5**, FOCUS **6**, and POSN **53** controls for desired baseline display.
  3. Apply CAL 1 V **60** output directly to channel A INPUT **53**.
  4. Adjust main TRIGGER LEVEL **7** for stable display. Observe approximately seven positive-going pulses.
  5. Set delayed TIME/DIV **25** to 0.1 mSEC. Observe intensified portion of sweep.
  6. Adjust time interval START control **17** until intensified portion of trace is centered on CRT.
  7. Set horizontal display for DLYD **20** operation. Observe that intensified portion is expanded to 10 divisions.
  8. Set horizontal display for MAIN **21** operation.
  9. Vary time interval START control **17**. Observe that intensified portion moves smoothly along display.

10. Set time interval START control **17** fully counterclockwise.
11. Vary time interval STOP control **18**. Observe that second intensified segment moves smoothly along display.
12. Set delayed TIME/DIV **23** of OFF position.
13. Rotate TIME/DIV VERNIER **33** fully counterclockwise. Observe 18 or more pulses between first and eleventh graticule lines.
14. Disconnect CAL 1V **60** from channel A INPUT **59**.
15. Set main TIME/DIV **24** to .1 SEC.
16. Set main TRIGGER LEVEL **7** fully clockwise.
17. Set AUTO/NORM switch **12** to NORM.
18. Select SINGLE **9** operation.
19. Press RESET pushbutton **10**. Observe RESET indicator **11** is on.
20. Rotate main TRIGGER LEVEL **7** fully counterclockwise. Observe one sweep; RESET indicator **11** extinguishes after sweep.
21. Set AUTO/NORM switch **12** to AUTO.
22. Select MAIN **21** operation.
23. Set vertical display for ALT **43** mode.
24. Set main TIME/DIV **24** to 5  $\mu$ SEC.
25. Vary time interval STOP control **18**. Only marker on channel B should move.
26. Vary time interval START **17**. Both markers should move together.
27. Set A START/B START **19** to B START.
28. Repeat steps 25 and 26. Now, time interval STOP control **18** affects marker on channel A.

#### OBTAINING BASIC DISPLAYS.

The following procedures will help you in obtaining commonly used displays. Before performing the procedures, complete the TURN ON procedure and adjust the following controls:

Channel A coupling **54** ..... DC  
 Channel A VOLTS/DIV **55** ..... .02  
 Main TIME/DIV **24** ..... .5 mSEC  
 START **17** ..... fully ccw  
 STOP **13** ..... fully ccw

**NORMAL SWEEP DISPLAY**

1. Connect Model 10041A (10:1 divider probe) to channel A INPUT connector **58** and CAL 1 V terminal **60**.
2. Adjust channel A POSN **53** to align base of square-wave display on second graticule line from bottom, and adjust main TRIGGER LEVEL **7** for stable display. Observe square-wave display with amplitude of 5 divisions and approximately seven positive going pulses.

**MAGNIFIED SWEEP DISPLAY**

1. Accomplish NORMAL SWEEP DISPLAY.
2. Adjust horizontal POSITION **13** to place portion of waveform to be magnified on center graticule of CRT (figure 4a).
3. Press MAG X10 **8** and adjust horizontal fine POSITION **12** for precise placement of magnified display (figure 4b).

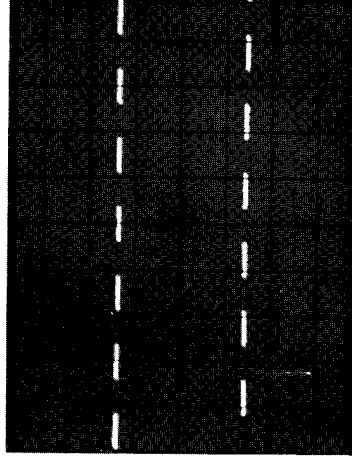


Figure 4a. Normal Display

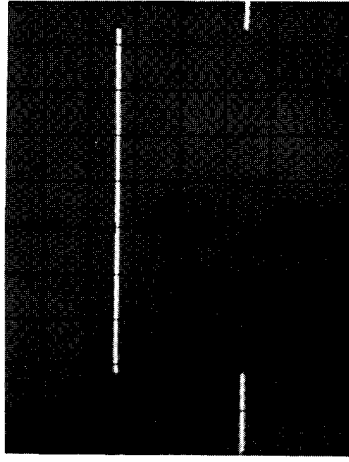


Figure 4b. Magnified Display

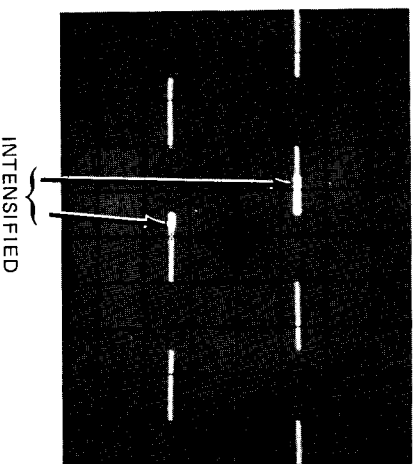


Figure 5a. Normal Display with Intensified Area

#### DELAYED SWEEP DISPLAY

1. Accomplish NORMAL SWEEP DISPLAY.
2. Set  $\Delta$ TIME ON/OFF **19** to OFF position.
3. Set delayed TIME/DIV **25** to 0.1 mSECS. Observe intensified portion of square wave. Adjust BEAM INTENSITY **5** for comfortable viewing level.
4. Adjust time interval STOP **18** until intensified portion of trace is over display segment you wish to investigate (figure 5a).

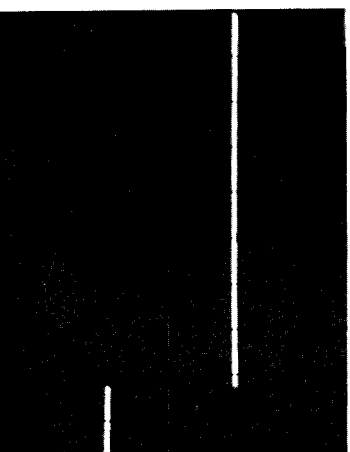


Figure 5b. Delayed Sweep Display

5. Press DLYD pushbutton **20** and note intensified portion of trace is now displayed across entire CRT (figure 5b).
6. Readjust time interval STOP **18** to observe other pulses in pulse train.

For a more complete description of delayed sweep, refer to the Timer Interval Measurement Application in this operators guide.

#### A VS B DISPLAY

1. Apply vertical (Y-axis) signal to channel A INPUT connector **58**. Apply horizontal (X-axis) signal to channel B INPUT connector.

2. Engage A VS B pushbutton **22**.
3. Adjust channel A and channel B VOLTS/DIV controls **55** for desired vertical and horizontal scale factors.
4. Channel A POSN **53** will adjust vertical positioning of display. Horizontal POSITION **13** will adjust horizontal positioning of display.
5. If display is not visible, press BEAM FIND **4** and adjust channel A and channel B VOLTS/DIV controls **55** until display is compressed. Next, center display with channel A POSN **53** and horizontal POSITION **13**. Release BEAM FIND **4** and adjust FOCUS **6** for sharp display.

### TIME-INTERVAL MEASUREMENT ( $\Delta T$ ) APPLICATIONS.

Time-interval measurements are made between any two points on the same or different waveforms. In time-interval measurements, both channels of the oscilloscope may be used. The horizontal distance is measured from a reference point on one waveform to another reference point on either the same or a different waveform.

The  $\Delta T$  measurement technique offered by this instrument eliminates the need to count divisions and interpolate between divisions which can introduce errors, increase measurement times, and reduce repeatability. The controls and indicators dedicated to the  $\Delta T$  measurement technique are discussed in the following subparagraphs. Applications for the technique follow these discussions.

**TIME-INTERVAL MODE SWITCHES.** The time-interval mode switches consist of  $\Delta$ TIME ON/OFF **16**, A START/B START **19**, and DLYD **20**. Time-interval measurements can be made between any two points on a single trace, from any point beginning on the channel A trace to any point ending on the channel B trace or from any point beginning on the channel B trace to any point ending on the channel A trace. Time-interval mode switch A START/B START **19** simplifies measurement selections. This switch eliminates the need to disconnect input signals and reconnect them to opposite channels whenever exact delayed sweep measurements are made from an occurrence on one channel to an occurrence on the other channel.

**Single Channel Displays.** The A START/B START switch **19** can be set to either position during single-channel displays. Regardless of which setting is selected, the start marker will always appear ahead of the stop marker on a single trace.

When  $\Delta$ TIME ON/OFF switch **19** is set to OFF, the second marker is turned off, and time-interval measurements are made in the conventional manner. With delayed sweep (DLYD **20**) selected, the time-interval STOP control is adjusted to place the first point of interest on some reference line on the CRT. The number on the multimeter LED display or time-interval STOP dial **18** is recorded. Then the time-interval STOP control is readjusted to bring the second point of interest to the same reference line on the CRT. Again, the number on the multimeter display or the time-interval STOP dial is recorded. Finally, the number obtained at the first point of interest is subtracted from the number obtained at the second point of interest. The result is the measurement of horizontal separation between the two points. If the DMM display was used for the calculation, the result is the time interval in the units indicated on the main TIME/DIV control **24**. If the STOP dial **18** was used for the calculation, then the result of the subtraction must be multiplied by the main TIME/DIV **24** setting.

#### NOTE

When delayed AUTO/TRIG'D switch is in the TRIP'D **27** position, the time-interval feature ( $\Delta$ TIME) is disabled. Output from  $\Delta$ TIME OUT connectors (or DMM on Option 034) will indicate the position of the STOP control **18**, not the time interval being displayed.

By setting A START/B START switch **19** to either the A START or B START position, time-interval measurements can be made between any two signal points using the DLYD mode. In this mode, the two points of interest are overlapped on the screen. The multimeter (if used) will indicate the exact time interval between the two points overlapped. If no multimeter is used, the dial of the time-interval STOP control **18** will indicate the exact spacing (in graticule divisions of the main sweep) between the two points overlapped.

**Dual-Channel Display.** The A START/B START switch **19** eliminates the requirement of always applying the start event to channel A. To make a measurement from some point on the channel A trace to a point on the channel B trace, the time-interval mode switch is set to A START. The START marker will appear on the channel A trace and the STOP marker will appear on the channel B trace. When the two points are adjusted to overlap, the time-interval STOP dial **18** and DMM will indicate the space between the two markers. Then to make a corresponding measurement from some point on the channel B trace back to some later point on channel A, the A START/B START switch **19** is set to B START. The signals and channels are undisturbed. Only the two markers change places. (See figure 6.)



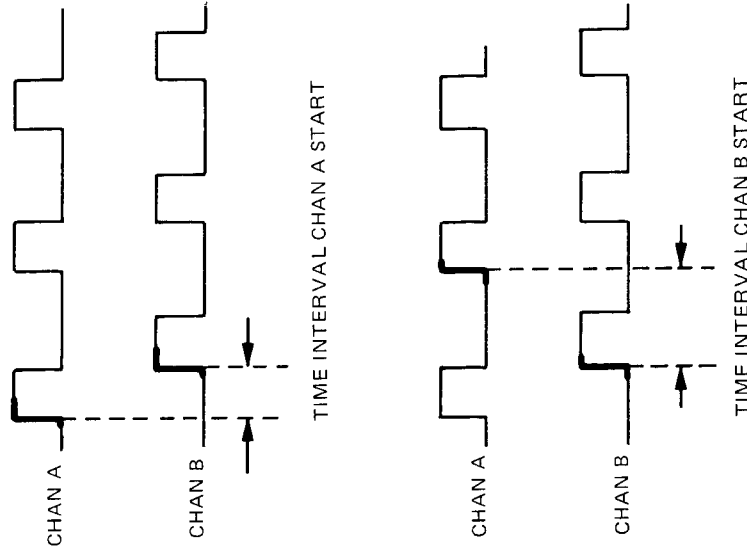


Figure 6. Time Interval Start Selection

**Three-Channel Display.** The trigger-view feature of the 1742A allows the user to compare two separate events which have a common occurrence (such as a clock signal, reset signal, etc.). When using trigger view in the ALT **43** or CHOP **45** mode of operation along with the  $\Delta T$  sweep mode, the time-interval start marker appears on the trigger waveform and the stop marker appears coincident in time on the channel A and channel B waveforms. To accomplish three-channel measurements, the common occurrence signal is applied as an external trigger signal to the main EXT TRIG INPUT connector **42** and EXT **40** triggering is selected. The two time-related signals are applied to the channel A and channel B INPUT connectors **53**. ALT **43** and TRIG VIEW **49** operations are then selected. Other front-panel controls are set so that a good view of the entire time interval to be measured is presented on the CRT. The START control **17** places the intensified segment on the trigger signal over the start event. The channel A and channel B signals will each display an intensified segment associated with the STOP control **18**. As the STOP control **18** is varied, the intensified segments on channel A and channel B will move in unison. The time interval between the trigger signal event and the event on either channel A or channel B selected by the STOP control **18** will be indicated on the Option 034 Digital Multimeter LEDs (or computed from the STOP **18** dial setting).

**TIME-INTERVAL READOUTS.** The Model 1742A provides for the use of a DMM (digital multimeter) to simplify time-interval measurements. A built-in DMM, Hewlett-Packard Option 034, is available for this instrument. It can easily be installed using the kit available (HP Part No. 01715-69501). It indicates exact time intervals between the start and stop markers directly in seconds, milliseconds, or microseconds.

The operator can also connect any digital multimeter of his choice to the ΔTIME OUT **71** pair of connectors on the rear panel of the 1742A. To preserve accuracy of the 1742A, use a 3 1/2-digit (or greater) DMM for digital readout of time interval measurements.

The 1742A supplies an analog voltage to the Option 034 DMM and to the ΔTIME OUT **71** rear-panel connections. The analog voltage is dc and is directly proportional to the position of the time-interval STOP dial **18**.

When no DMM is available to indicate time intervals measured, use the 10-turn dial of the time-interval STOP control **18**. This dial is calibrated in divisions of main sweep separation between the time-interval START and time-interval STOP markers.

**USE OF OPTION 034 DMM.** To use the Option 034 Digital Multimeter for time-interval measurements, the DMM POWER switch must be ON and the front-panel DC VOLTS pushbutton must be engaged (because the analog voltage applied is dc).

The two-position switch built into the Option 034 top cover must be in the forward position to obtain time-interval measurements of displayed waveforms. In the rear switch position, the analog dc voltage is disconnected from the meter and the multimeter connections at the side of the the unit are enabled for normal multimeter measurements.

#### **PULSE PERIOD AND PULSE WIDTH MEASUREMENTS.**

Pulse period is usually measured from the 50% amplitude point of one pulse leading edge to the 50% amplitude point on the next leading edge. Pulse width is normally measured between the 50% amplitude points on the leading and trailing edges of the pulse. The ΔTIME technique improves accuracy of pulse period and pulse width measurements by allowing you to overlap the points of interest on the display. To measure pulse period or pulse width, proceed as follows:

1. Apply signal to channel A or channel B INPUT connector **53**.
2. Select channel A **44** or channel B **45** DISPLAY and channel A **47** or channel B **43** TRIGGER (whichever is appropriate).
3. Set A START/B START switch **19** to A START or B START, as applicable.
4. Adjust VOLTS/DIV switch **55** for convenient display of pulse amplitude.
5. Select main TIME/DIV **24** sensitivity that places second occurrence of measurement as far as possible toward right-hand edge of CRT.
6. Set delayed TIME/DIV control **25** to sweep speed approximately five times faster (if possible) than main TIME/DIV **23** setting.
7. Set ΔTIME ON/OFF switch **16** to ON position.
8. Adjust time-interval START **17** to place first intensified marker at beginning of time interval to be measured.
9. Adjust time-interval STOP **13** to place second intensified marker at end point of time interval to be measured.
10. Engage DLYD pushbutton **20**. Both the beginning and ending segments of time interval to be measured should appear on screen.
11. Adjust time-interval START **13** to place 50% point of first leading edge at center vertical graticule line.
12. Adjust time-interval STOP **13** to overlap 50% point of next pulse leading edge (for pulse period measurements) or to overlap 50% point of pulse trailing edge (for pulse width measurements) at center vertical line. (See figure 7 or 8 as applicable.)
13. Using Option 034 Digital Multimeter (or external DVM) read actual pulse width or pulse period directly from multimeter. Refer to main TIME/DIV **24** setting to determine whether output is in s, ms, or  $\mu$ s.
14. If not using Option 034 or external DVM, read interval measured in divisions from time-interval STOP control **13**. Then multiply number of divisions by main TIME/DIV control **23** setting to determine actual pulse width or pulse period.

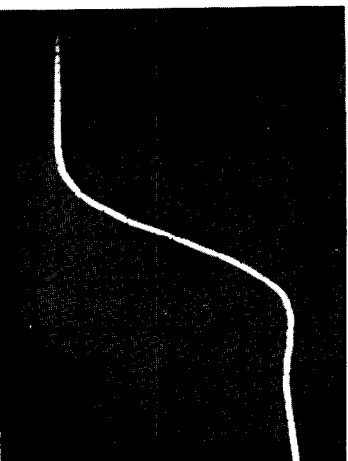


Figure 7. Pulse Period Measurement

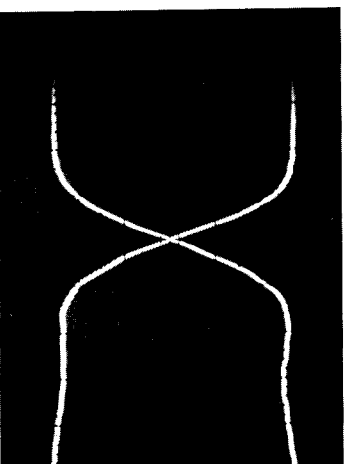


Figure 8. Pulse Width Measurements

**TRANSITION MEASUREMENTS.** Transition measurements are normally made between the 10% and 90% points on a pulse with the vernier adjusted for a full 5-division vertical display. Calibrated 20% and 80% points are provided. Maximum resolution for this measurement is achieved when the main TIME/DIV sweep speed is set as fast as possible while still being able to accurately position the waveform at the 10% and 90% points. The 10% and 90% points are conveniently marked on the CRT graticule.

To measure signal transition time, proceed as follows:

1. Apply signal to channel A or channel B INPUT connector **53**.
2. Select channel A **47** or channel B **45** DISPLAY and channel A **47** or channel B **43** TRIGGER (whichever is appropriate).
3. Set A START/B START switch **19** to A START or B START, as applicable.
4. Adjust appropriate VOLTS/DIV switch **55** and vernier **56** for full five-division display of signal.
5. Select main TIME/DIV **24** sensitivity that places second occurrence of transition as far as possible toward right-hand edge of CRT.

6. Set delayed TIME/DIV control **25** to sweep speed approximately five times faster (if possible) than main TIME/DIV **23** setting.
7. Set  $\Delta$  TIME ON/OFF switch **16** to ON position.
8. Adjust time-interval START control **17** to place first intensified marker on 10% point of waveform leading edge.
9. Adjust time-interval STOP control **18** to place second intensified marker on 90% point of waveform leading edge.
10. Engage DLYD pushbutton **20**. Both intensified portions of waveforms are expanded on screen.
11. Adjust time-interval START **17** to place 10% point on convenient vertical graticule line.
12. Adjust time-interval STOP **18** to place 90% point on same vertical graticule line. (See figure 9.)

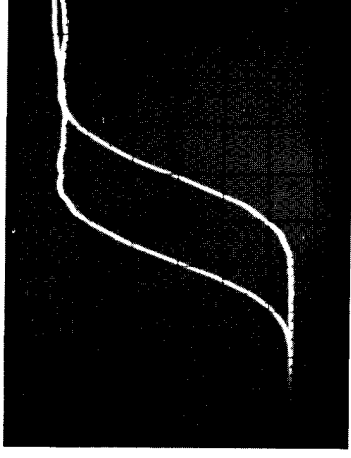


Figure 9. Transition Time Measurement

13. Using Option 034 Digital Multimeter (or external DVM), read actual pulse transition time directly from multimeter. Refer to main TIME/DIV **23** setting to determine whether output is in s, ms, or  $\mu$ s.
14. If not using Option 034 or external DVM, read interval between the 10% and 90% points as measure of CRT divisions on time-interval STOP **18** dial. Multiply number of divisions by main TIME/DIV dial **23** setting to determine signal transition time.

**DUTY CYCLE MEASUREMENTS.** The duty cycle is expressed as the ratio of pulse width to pulse period (width/period = duty cycle). Duty cycle measurements are important in systems where a pulse must remain within certain limitations to allow for pulser recognition.

The accuracy of duty cycle measurements depends upon the length of the time interval over which the pulse width and period are measured. To increase measurement accuracy for low duty cycle signals, increase the main time base sweep speed when measuring the pulse width. Use the preceding pulse width and pulse period measurement technique.

**SIGNAL FREQUENCY OR PULSE REPETITION RATE.**

The repetition rate or frequency of a signal is the reciprocal of the period. Use the pulse period measurement application procedure to determine the period of a signal. Then take the reciprocal of the period to determine repetition rate or frequency. Use the following formula:

$$\frac{1}{\text{time (in seconds) of period}}$$

**Example:** If a period of 0.8 ms is measured, then:

$$\frac{1}{0.8 \text{ ms}} = \frac{1}{8 \times 10^{-4} \text{ Sec}} = 0.125 \times 10^4 \text{ Hz} = 1.25 \text{ kHz}$$

**PROPAGATION DELAY MEASUREMENTS.** By selecting

ALT or CHOP mode of operation, ΔTIME measurements can be made between an event on channel A and event on channel B. The A START/B START switch **19** on the 1742A permits measuring from an event on channel A to an event on channel B, or from an event on channel B to an event on channel A. To measure propagation delay between signals in the two channels, proceed as follows:

1. Apply one signal to channel A and other signal to channel B INPUT connectors **59**.
2. Select either ALT **29** or CHOP **26** DISPLAY and internal TRIGGER to A **47**.

**NOTE**

External triggering may be used if the external trigger is from the same channel where the start event occurs. When using external triggering, time-interval readings must be adjusted to compensate for the difference between the external trigger and the two inputs channels.

3. Adjust each VOLTS/DIV switch **55** to obtain usable display on each channel.
4. Set A START/B START switch **19** to select channel where measurement will begin. If measurement will start from point on channel A, set A START/B START **19** to A START. If measurement will start from point on channel B, set A START/B START **19** to B START.
5. Select main TIME/DIV **23** sensitivity that places second occurrence in the measurement as far as possible toward right-hand edge of CRT.
6. Set delayed TIME/DIV control **25** to sweep speed approximately five times faster (if possible) than main TIME/DIV **23** setting.
7. Set  $\Delta$ TIME ON/OFF switch **16** to ON position.

8. Adjust time-interval START **17** to position first intensified marker at beginning of desired time interval (one channel). (See figure 10.)
9. Adjust time-interval STOP **13** to position second intensified marker at end of desired time interval (other channel).
10. Engage DLYD pushbutton switch **20**. Intensified portion of both waveforms should be present on screen.
11. Adjust time-interval START **17** and associated vertical POSN control **53** to place 50% amplitude point of beginning trace at center vertical graticule line. (see figure 11.)
12. Adjust time-interval STOP **13** and the associated vertical POSN control **53** to superimpose ending trace over beginning trace.
13. Using Option 034 DMM (or external DVM), read actual propagation delay directly from multimeter LED display. Refer to setting of main TIME/DIV **23** to determine whether output is in s, ms or  $\mu$ s. When using cables of unequal length, remember to consider cable delays in this measurement.

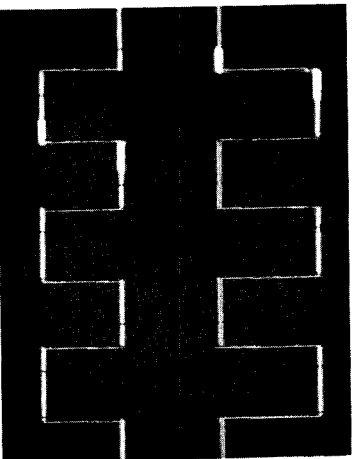


Figure 10. Adjustment of Start and Stop

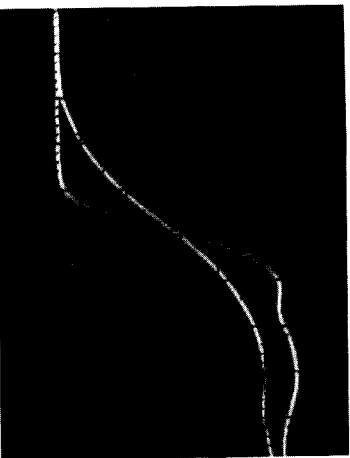


Figure 11. Propagation Delay Measurement

14. If not using DMM or DVM, read divisions and subdivisions of delay directly from dial of time-interval STOP control **13**. Multiply this number by main TIME/DIV **23** dial setting. When using cables of unequal length, remember to consider cable delays in this measurement.

#### ADJUSTING DESIRABLE TIME INTERVAL BETWEEN PULSES.

The  $\Delta$ TIME feature of the 1742A provides ease and accuracy when adjusting for a particular time interval between pulses, such as dual-clock phasing or dual-trigger circuitry. With  $\Delta$ TIME technique, the two signals are applied to the two oscilloscope channels, and the time-interval controls are adjusted to indicate the desired time interval between pulses. Then the signal source is adjusted until the two signals are superimposed on the CRT. To make this adjustment, proceed as follows:

1. Apply one signal to channel A and other signal to channel B INPUT connectors **53**.
2. Select either ALT **43** or CHOP **46** DISPLAY and internal TRIGGER to A **47**.
3. Adjust each VOLTS/DIV switch **55** to obtain equal amplitude displays on both channels.



4. Adjust both vertical POSN controls **53** to center traces on CRT.
5. Select main TIME/DIV **23** sensitivity that permits good view of entire time interval to be established.
6. Set delayed TIME/DIV control **25** to sweep speed approximately five time faster (if possible) than main TIME/DIV **25** setting.
7. Set A START/B START switch **19** to select channel which has beginning event, normally reference pulse or waveform. Set to A START if reference signal is on channel A and to B START if reference signal is on channel B.
8. Set  $\Delta$ TIME ON/OFF switch **16** to ON position.
9. Adjust time-interval STOP control **13** to select desired time interval between pulses. When using Option 034 DMM (or external DVM), multimeter display will indicate time interval adjusted. If not using DMM or DVM, determine **23** horizontal scale factor selected on main TIME/DIV switch **24** and adjust time-interval STOP **13** for number of divisions and subdivision of display equal to desired time interval.

10. Adjust time-interval START **17** to position first intensified marker on pulse which represents beginning of desired time interval.

11. Engage DLYD pushbutton switch **20**. Intensified portions of both waveforms should appear on screen.

12. Adjust time-interval START **17** to place first pulse (reference pulse) at center of CRT.

13. Adjust source of signal under test to superimpose two traces. When traces are superimposed, pulses will be separated by time interval selected.

**PULSE JITTER MEASUREMENTS.** Jitter is a time uncertainty in a waveform caused by random noise or spurious or periodic signals. The  $\Delta$ TIME technique in the 1742A makes jitter measurements which are both accurate and easy. To measure jitter, proceed as follows:

1. Apply signal to channel A or channel B INPUT connector **53**.
2. Select channel A **44** or channel B **45** DISPLAY and channel A **47** or channel B **48** TRIGGER (which ever is appropriate).

3. Set A START/B START **19** as applicable.
4. Adjust appropriate VOLTS/DIV switch **53** and vernier **53** for full six-division display of signal.
5. Adjust main TRIGGER LEVEL **7** until display is as stable as possible.
6. Select main TIME/DIV **29** sensitivity that places next occurrence of transition as far as possible toward right hand edge of CRT.
7. Set delayed TIME/DIV control **25** to sweep speed approximately five times faster (if possible) than main TIME/DIV **29** setting.
8. Set ΔTIME ON/OFF switch **16** to ON position.
9. Adjust time-interval START **17** to place first intensified marker on signal leading edge.
10. Set time-interval STOP **18** to 0.00.
11. Engage DLYD pushbutton **20**.
12. Adjust time-interval START **17** to place trace at center of CRT.
13. Adjust time-interval STOP **18** to separate second trace and then return it to point where it just contacts first trace. (See figure 12.)
14. Using Option 034 DMM (or external DVM), read actual pulse jitter from multimeter display. Refer to setting of main TIME/DIV switch **29** to determine whether value displayed is in s, ms, or  $\mu$ s.
15. If not using DMM or DVM, read number of CRT divisions and subdivisions directly from display. Multiply this number by sensitivity selected on main TIME/DIV **29** to determine exact time duration of jitter.

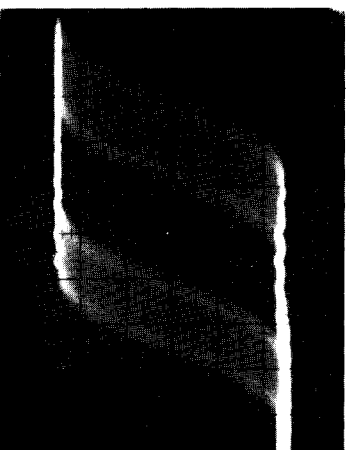


Figure 12a. No AC Touch



Figure 12b. Random Peaks Contact



Figure 12c. Correct Jitter Display - Even Density

**PHASE DIFFERENCE MEASUREMENTS USING TIME DELAY.** The phase difference between two signals of the same frequency can be determined up to the frequency limit of the vertical amplifier by using  $\Delta$ TIME techniques. Use the following procedure:

1. Apply reference signal to channel A INPUT **53**.
2. Select channel A DISPLAY **44** and internal TRIGGER to A **47**.
3. Select main TIME/DIV switch **24** sensitivity which provides display of one complete signal cycle.
4. Set  $\Delta$ TIME ON/OFF **16** to ON position.
5. Adjust time-interval START **17** and STOP **18** until first marker on first leading edge and second marker on second leading edge).

#### NOTE

Delayed TIME/DIV **25** must be in some position other than OFF to observe intensified markers.

6. Engage DLYD pushbutton **20**.

7. Readjust time-interval STOP **18** to overlap both traces on CRT.
8. Using Option 034 DMM (or external DVM), record indication. If not using DMM or DVM, record setting of time-interval STOP **18** dial. Do not change main TIME/DIV **24** setting after this step.
9. Engage MAIN pushbutton **21**.
10. Connect other signal to channel B INPUT connector **53**.
11. Select either ALT **43** or CHOP **46** DISPLAY.
12. Select either A START or B START **19**. Channel carrying signal with advanced phase shift is start channel.
13. Adjust time-interval STOP **18** to place marker on stop channel trace at same relative position as marker on start channel trace (example: both markers on leading edges).
14. Engage DLYD pushbutton **20**.
15. Readjust time-interval STOP **18** to overlap both traces on CRT.

16. Using Option 034 DMM (or external DVM), record indication. If not using DMM or DVM, record setting of time-interval STOP dial **18**.

17. To determine phase difference between signals take ratio of number recorded in steps 15 and 8, subtract 1, and multiply by 360.

**Example:** If 5.26 was recorded in step 15 and 3.02 was recorded in step 8, then phase difference between signals is  $(5.26/3.02-1) 360 = 267^\circ$  degrees of phase difference.

#### CONVENTIONAL MEASUREMENTS USING DMM ONLY.

It may be convenient to use the Option 034 DMM (or external DVM) to make time-interval measurements in the conventional mode of operation (ATIME ON/OFF in OFF position). To accomplish this method of time-interval measurement proceed as follows:

1. Apply signal to channel A or channel B INPUT connector **53**.
2. Select channel A **42** or channel B **45** DISPLAY and channel A **47** or channel B **48** TRIGGER (whichever is appropriate).
3. Adjust appropriate VOLTS/DIV switch **55** for proper display.

4. Select main TIME/DIV **24** sensitivity that places second occurrence of transition as far as possible toward right-hand edge of CRT.
5. Set delayed TIME/DIV **25** to sweep speed approximately five times faster (if possible) than main TIME/DIV **24** setting.
6. Set  $\Delta$ TIME ON/OFF **16** to OFF position.
7. Adjust time-interval STOP **13** to place intensified marker over starting point of event to be measured.
8. Engaged DLYD pushbutton **20**.

**NOTE**

Do not move horizontal POSITION controls **13** and **14** during these measurements.

9. Readjust time-interval STOP **13** to place starting event on center vertical graticule line of CRT.
10. Note indication on DMM (or external DVM).
11. Engage MAIN pushbutton **21**.

12. Adjust time-interval STOP control **13** to place intensified marker over stopping point of event to be measured.

13. Engaged DLYD pushbutton **20**.
14. Readjust time-interval STOP control **13** to place stopping event on center vertical graticule line of CRT.
15. Note indication on DMM (or external DVM).
16. Subtract indication noted in step 10 from indication noted in step 15. This is time interval of event being measured in s, ms or  $\mu$ s as determined by main TIME/DIV control **25** setting.

**VOLTAGE MEASUREMENT APPLICATIONS.**

Voltage measurements can be made between any point on a waveform and a 0-volt reference (absolute voltage) or between any two points on a waveform (voltage difference). (See figure 13.)

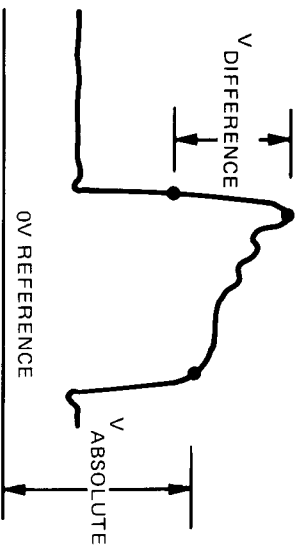


Figure 13. Types of Voltage Measurements


**DC AND ABSOLUTE VOLTAGE MEASUREMENTS.** The following procedure can be used to make absolute voltage measurements with respect to a 0-volt reference, and to determine the dc component of an input signal.

1. Connect signal to channel A or B INPUT connector **58**.
2. Set coupling **54** to DC and adjust main TRIGGER LEVEL **7** for stable display.
3. Adjust vertical POSN **53** VOLTS/DIV **55**, and main TIME/DIV **24** for well centered display. Make

sure that associated verniers **56** and **33** are in their CAL detent positions.

4. Set input coupling **54** to GND and AUTO/NORM **12** to AUTO. Trace defines level of zero volt. If level is below signal, signal is positive. If level is above signal, signal is negative.
5. Adjust vertical POSN control **53** to set trace on convenient graticule line to establish 0-volt reference level. Do not move vertical POSN control **53** after this step.
6. Return coupling **54** to DC.
7. Measure distance in divisions between reference line and any point of interest on signal.
8. Multiply number of divisions obtained in step 7 by VOLTS/DIV **55** setting to determine signal voltage. Include attenuation factor if using probe.

**Example:** Assume vertical deflection of 7 divisions, waveform above reference line, and VOLTS/DIV setting of 0.2 (Figure 14). Absolute Voltage =  $7 \times 0.2 = 1.4$  volts. Waveform is above reference line so voltage is positive.

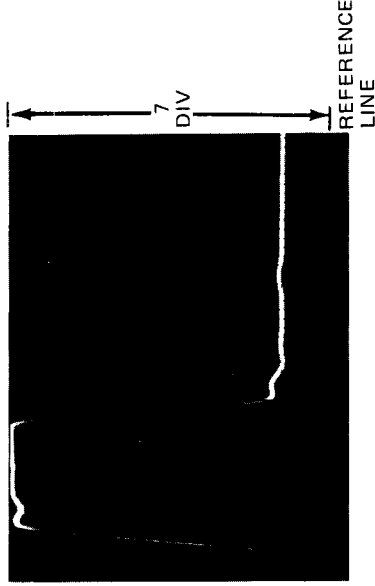

an oscilloscope. To measure peak-to-peak voltage of an input signal, proceed as follows:

1. Connect signal to channel A or B INPUT connector or **53**.
2. Set coupling **54** to AC and adjust main TRIGGER LEVEL **7** for stable display.
3. Adjust vertical POSN **53** VOLTS/DIV **5**, and main TIME/DIV **24** for well centered display of at least three cycles duration and at least three divisions of amplitude. Make sure that VOLTS/DIV vernier **56** is in CAL detent position.
4. Using vertical POSN control **53**, place negative peaks of input signal on horizontal graticule line near bottom of CRT.
5. Using horizontal POSITION control **13**, place one positive peak of signal on center vertical graticule line.
6. Count number of vertical divisions from most negative to most positive portions of waveform (estimate to nearest tenth of division; see figure 15).

Figure 14. Absolute Voltage Measurements

**PEAK-TO-PEAK VOLTAGE MEASUREMENTS.** Displays of ac voltages contain amplitude errors due to frequency response of the instrument. With increasing signal frequencies, the amplitude of the errors increases. To obtain displays with less than 10% amplitude error the frequency of the signal being measured must be less than half the specified bandwidth of the oscilloscope. A frequency equal to the specified bandwidth of the oscilloscope will display a voltage amplitude on the CRT that is 3 dB down from the actual amplitude of the applied signal. Frequency rolloff of the instrument must be considered when making voltage measurements with

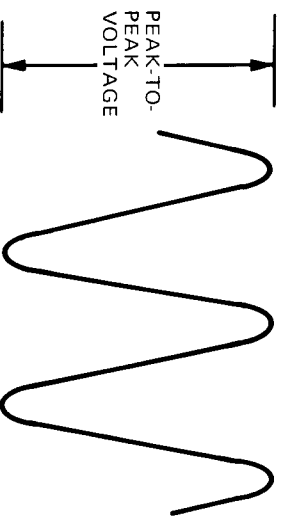



Figure 15. Peak-to-Peak Measurement

7. Multiply number of divisions noted in step 6 by setting of VOLTS/DIV switch **59**. If signal is derived through divider probe, multiply result of this step by attenuation factor of probe. Remember to consider amplitude attenuation caused by frequency roll off of oscilloscope.

**AVERAGE VOLTAGE MEASUREMENTS USING OSCILLOSCOPE.** To measure average voltage using the oscilloscope alone, proceed as follows:

1. Connect signal to channel A or B INPUT connector **53**.
2. Set coupling **54** to GND and AUTO/NORM **12** to AUTO. Trace level is zero volt.

3. Switch coupling **54** to DC and measure absolute voltage at point of interest on waveform. (See figure 16A.)
4. Switch coupling **54** to AC and measure absolute voltage to same point on waveform. (See figure 16B.)

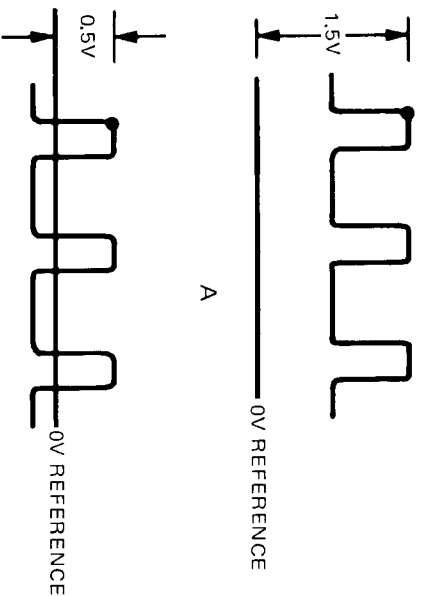

AVERAGE VOLTAGE = 1.5V - 0.5V = 1V

Figure 16. Average Voltage Measured with Oscilloscope



5. Difference between first and second voltage measurements is average voltage.

ment and display rms voltage with maximum resolution. To measure average voltage, set DC/AC for dc voltage (out).

**AVERAGE AND RMS VOLTAGE MEASUREMENTS USING OPTION 034 DVM.** The Option 034 DMM is an average-responding meter calibrated in rms. To measure rms voltage using the DMM, proceed as follows:

1. Set two-position switch on 1742A top cover to rear position.
2. Set DMM controls as follows:

POWER ..... ON  
 DC/AC (~) ..... ~ (IN)  
 VOLTS (V) ..... (IN)  
 AUTO HOLD ..... AUTO (OUT)  
 AMPS (A) AND KΩ ..... (OUT)

**CAUTION**

Do not connect the leads to any ac voltages greater than 707 V rms.

3. Connect test leads from VΩ (HI) and COM (LOW) on DMM to signal under test. Digital Multimeter will automatically select best meter range for measure-

**AMPLITUDE COMPARISON MEASUREMENTS.** When measuring the amplitude of a signal, it may be helpful to obtain a deflection factor not calibrated on the VOLTS/DIV switch. This can be done by using a signal of known amplitude (reference signal) and adjusting the VOLTS/DIV vernier to obtain the desired deflection factor. Amplitude comparison measurements may be desirable when calibrating an instrument. By using this method, the accuracy of your measurement depends upon the reference signal accuracy. To make measurements by amplitude comparison, proceed as follows:

1. Apply reference signal to channel A INPUT connector **53**, and set DISPLAY and internal TRIGGER **67** to A.
2. Adjust main TIME/DIV **24** to display several signal cycles.
3. Adjust VOLTS/DIV **55** and vernier **56** to obtain display with exact number of divisions of vertical deflection. Greater accuracy is obtained with greater vertical deflection. Do not readjust vernier **56** after this step.

4. Calculate scale factor (sf) by the following formula:

$$\text{sf} = \frac{\text{Reference signal amplitude (volts)}}{\text{Display amplitude in DIV}}$$

**Example:** Assume reference signal amplitude of 40 volts, VOLTS/DIV setting of 5, and display amplitude of six divisions.

$$\text{sf} = \frac{40}{6 \times 5} = 1.3$$

5. Disconnect reference signal and connect signal to be measured.
6. Set VOLTS/DIV **55** for measurable display amplitude. Do not readjust vernier **55**.
7. Use following formula to calculate amplitude of signal being measured:

$$\text{Signal Amplitude} = \text{VOLTS/DIV setting multiplied by sf (step 4) multiplied by display amplitude (step 6).}$$

**Example:** Assume signal amplitude of 5 divisions, VOLTS/DIV setting of 2, and scale factor of 1.3. Signal amplitude = 5 x 2 x 1.3 = 13 volts

8. You can also calculate value of unknown signal as percentage of reference signal.

**Example:** Assume reference signal has display amplitude of eight divisions. In this case, each division is equal to 12.5% of total reference signal amplitude. If unknown signal is applied and it has amplitude of 6.2 divisions, then amplitude of unknown signal is:

$$\text{Unknown signal amplitude} = 6.2 \text{ DIV} \times 12.5\% = 77.5\% \text{ of reference signal amplitude.}$$

**COMMON-MODE REJECTION.** Frequently, signals of interest are offset by undesired dc or low frequency voltage ac components that prevent use of vertical ranges sensitive enough to make good measurements. Often a signal similar to the unwanted component can be connected to the opposite channel, inverted, and added algebraically to the signal of interest to cancel the unwanted component.

True dc components can usually be eliminated by selecting ac input coupling. The ability of an oscilloscope to cancel ac common-mode signals varies with amplitude and frequency of the signals. Very high common-mode amplitudes may not be completely cancelled. Good common-mode rejections should be achieved with common-mode signal amplitudes of up to two

screen diameters (16 CRT divisions). With high-frequency common-mode signals, minor components may be impossible to eliminate from the display. The lower the frequency of the common-mode signal, the better the common-mode rejection of the oscilloscope. To use the common-mode rejection technique, proceed as follows:

1. Apply signal to be measured (with unwanted component) to channel A INPUT **53**.
2. Apply signal similar to unwanted component to channel B INPUT **53**. (See figure 17.)
3. Set coupling as required and select ALT **43** DISPLAY mode.
4. Adjust VOLTS/DIV **55** and vernier **56** so that display on channel B is approximately equal in amplitude to unwanted component on channel A.

5. Set the oscilloscope controls as follows:

TRIGGER .....	A <b>47</b>
CH B INPUT .....	INVT <b>52</b>
DISPLAY .....	A+B <b>44</b> and <b>45</b>

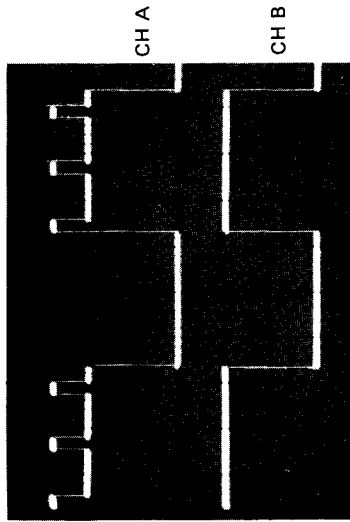


Figure 17. Common-Mode Signals

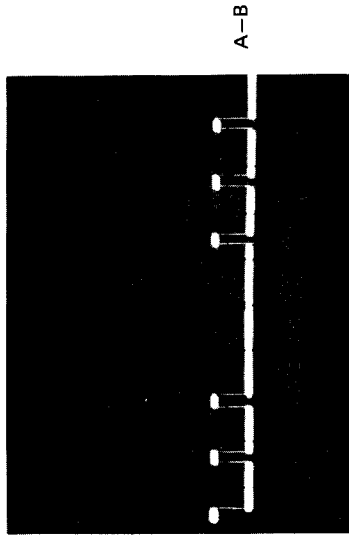


Figure 18. Resultant Display

6. With either channel A or B VOLTS/DIV vernier **59**, adjust for minimum deflection in common-mode signal. The resultant display will either subtract all of unwanted component or display desired signal larger than common-mode signal. (See figure 18.)

### OPTION 101 - LOGIC STATE DISPLAY.

This option allows you to use the 1742A with an HP Model 1607A Logic State Analyzer to aid in the analysis of digital systems that depend on sequences of logic states to control their operation.

Horizontal, vertical, and Z-axis signals from the Model 1607A convert the 1742A into a 16-channel logic state analyzer. You can switch from logical state to electrical analysis by pressing one pushbutton, a real convenience. To connect the 1742A to the 1607A, place the 1742A on top of the 1607A, and using three Model 10502A cables, connect 1607A rear-panel outputs HORIZ, VERT, and Z-AXIS to the corresponding oscilloscope rear-panel inputs. Check 1742A operation with the 1607A as follows:

**NOTE**  
Clock and data probes do not have to be connected to the 1607A for this procedure.

1. Press STATE DSPL **22** on Model 1742A.
2. Set Model 1607A controls as follows:

POWER .....	OFF
OFF/WORD .....	WORD
Sample Mode .....	SINGLE
COLUMN BLANKING .....	fully ccw
Z-AXIS .....	ON

All other pushbuttons ..... disengaged

3. Apply power **2** to 1742A and 1607A. Adjust 1742A FOCUS control **6** for sharpest display; 16-word table of ones and zeros will be displayed. If table is not displayed, press 1607A power switch on and off until 1607A starts up in display mode.

**NOTE**  
The following adjustments apply to the Model 1607A.

4. Adjust HORIZ SIZE control for six-division wide display and VERT SIZE control for eight-division high display. Adjust HORIZ and VERT POSN controls to center display.

5. Set BYTE to 3 BIT and notice that display format changes from four-bit bytes to three-bit bytes.
6. Set LOGIC to NEG and note that all zeros change to ones and all ones change to zeros.
7. Rotate COLUMN BLANKING control clockwise and observe that vertical columns are blanked, starting with most significant bit.
8. Rotate COLUMN BLANKING control fully clockwise and note that least significant bit column remains on CRT.
9. Rotate COLUMN BLANKING control fully counterclockwise.
10. Set trigger mode to START DSPL and observe that first word is intensified.
11. Set trigger mode to END DSPL and note that last word is intensified.
12. Set DELAY ON/OFF to ON. Setting DELAY thumbwheels from 0 to 15 will move intensified word on display. For delays greater than 15, intensified word will not be displayed.


The following example explains how you can use the Option 101 in logic state and electrical analysis to find the location of a fault in digital program flow.

Since a fault in an algorithmic state machine will cause an erroneous state to exist in the program flow, it is desirable to start troubleshooting using program flow. When you find the fault location, you can more easily find the specific cause using conventional time analysis techniques. With Option 101, the 1742A and 1607A provide logic state and timing analysis displays.

Assume our algorithmic state machine is a 60-second timer that is terminating its count prematurely. By observing the logic state flow with the 1742A and 1607A, the premature termination point can easily be found. In this example, the malfunction is at count 25 (see figure 19). In this case we triggered on word 20. Notice the timer proceeded normally until word 24, when it reset to zero.

The 1607A supplied an external trigger to the 1742A, triggering the time display on the word we selected (word 20). A probe was connected from channel A on the 1742A to the least significant bit channel on the timer. Another probe was connected from channel B to the reset line on the timer. By switching the 1742A STATE



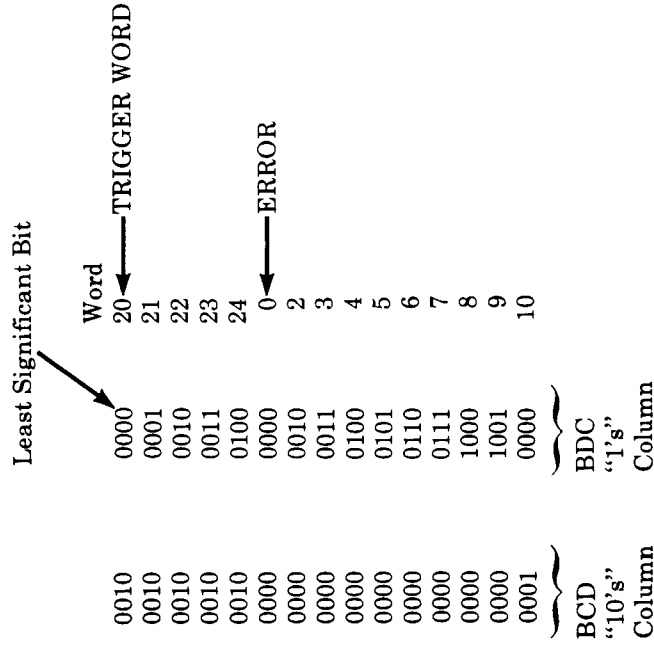

DSP pushbutton 22 to the off position, we obtained a time display starting with word 20 (see figure 20).

You will notice that channel A pulses are normal until after word 24. The pulse at word 25 started to go high, but was not completed. Instead, the timer reset and started again at zero. Looking at the reset line on channel B, we see a glitch at word 25.

In this example, you can see the advantage of being able to switch from logic state to electrical analysis and interrogate inputs, outputs, and control lines for transients and glitches.

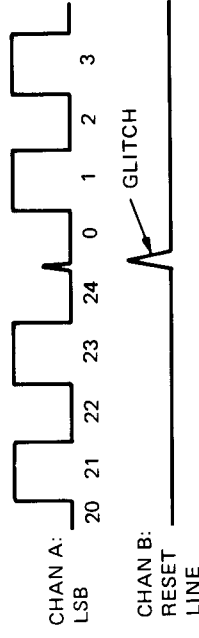


Figure 20. Glitch on Timer Reset Line Causing Timer to Reset Prematurely

Figure 19. Logic State Display

D-7000 **Baden**, Württemberg  
 D-7000 **Baden**, Württemberg  
 Cable HEWPACK Hamburg  
 Telex 07267279 Dbn  
 Hewlett-Packard GmbH  
 Edmund-Lenz-Str. 11  
 D-4000 **Düsseldorf** 11  
 Hewlett-Packard GmbH  
 Lemm Ktr. 67  
 Telex 02211139711 hpd d  
 Hewlett-Packard GmbH  
 Technisches Büro Hamburg  
 Wendenstrasse 23 1  
 D-2000 **Hamburg**  
 Cable HEWPACK Hamburg  
 Telex 21 6032 Tphm d  
 Hewlett-Packard GmbH  
 Am Grossacker 6  
 D-3000 **Hannover** 91  
 Telex 0051171 46 80 01  
 Hewlett-Packard GmbH  
 Weh-Groenen  
 Weh-Groenen  
 D-7500 **Karlsruhe** 41  
 Telex 07 82507 88  
 Hewlett-Packard GmbH  
 Technisches Büro Nuernberg  
 D-9000 **Munich**  
 Cable HEWPACKSA München  
 Telex 0325985  
 Hewlett-Packard GmbH  
 Koenigsplatz Berlin  
 D-1000 **Berlin** 30  
 Telex 18 3420 Jhbn d  
**GREECE**  
 Hewlett-Packard  
 06 Girona Street  
 GR-Athens 133  
 Tel. 329723  
 Cable HEWPAK Athens  
 Telex 21 59 82 Mar gr  
 Analytical Only  
 Medical only  
 VINCEDIO G. Papanastasiou & Co  
 17, Vasilissis Str  
 GR-Athens 103  
 Tel. 522 1915  
 Cable HEWPAK Athens  
 Tel. 21 3232 NITE GR  
 Technomic Heliex Ltd  
 52 Skoufa Street  
 GR-Athens 105  
 Tel. 31 23 9330  
 Cable ETALUX Athens  
 Telex 41 6935 ETL GR  
**HUNGARY**  
 Hewlett-Packard  
 06 Csodavari ut  
 MTA  
 Budapest VI  
 1381 Budapest VI  
 Telex 22 5714  
**IRELAND**  
 Medical Only  
 Eling Trading Company Inc  
 Heron Road  
 Drogheda  
 Telex 1 58 20  
**ITALY**  
 Hewlett-Packard Teating Co  
 41/8 Mansori City  
**ISRAEL**  
 King Street Lane  
 GB Winnetri/Moham  
 Beks, HRTL 548 74  
 Telex 8477848479  
**ITALY**  
 Hewlett-Packard Italiana S.p.A  
 Via Ameglio Vesputci 2  
 I-20100 **Milano**  
 Tel. (2) 6231 110 Lines  
 Telex 3206  
 Hewlett-Packard Italiana S.p.A  
 Via Piero Maroncelli 40  
 I-20100 **Milano**  
 Tel. 439 6649 88  
 Telex 41612 Hewpacu  
 Medical only  
 Hewlett-Packard Italiana S.p.A  
 I-20100 **Milano**  
 Telex 19621 Hpas n  
**MOROCCO**  
 196 Blvd. Braham Boulad  
 Casablanca  
 Telex 25 1676-75-90-99  
 Cable Gep-Casa  
**MOROCCO**  
 196 Blvd. Braham Boulad  
 Casablanca  
 Telex 25 1676-75-90-99  
 Cable Gep-Casa  
**NETHERLANDS**  
 Hewlett-Packard Benelux N.V.  
 N.V. De Wijk  
 NL-1000 **Amsterdam** 121  
 Telex 1000 20 21  
 Cable HEWPAK Amsterdam  
 Via Piero Maroncelli 40  
 I-20100 **Milano**  
 Tel. 439 6649 88  
 Telex 41612 Hewpacu  
**NORWAY**  
 Hewlett-Packard Norge A.S.  
 Kjeften 13  
 N-1344 **Hesling**  
 Telex 16821 Hpas n  
**POLAND**  
 Bureau Inzynier Techniczne  
 Hewlett-Packard Italiana S.p.A  
 I-20100 **Milano**  
 Telex 19621 Hpas n  
**PORTUGAL**  
 Zankov Navegador Sretru  
 Medizcno  
 P.O. Box 2311  
 131055 **Lisboa**  
 Telex 334-41 337-43  
**PORTUGAL**  
 Fabrica Empresa Technica de  
 Equipamentos Electronicos S.A. I  
 P.O. Box 2311  
 131055 **Lisboa**  
 Telex 334-41 337-43  
**RUSSIA**  
 Hewlett-Packard Reprezentanta  
 Bldg. Bldg. 18  
 Telex 137885  
**RUSSIA**  
 Hewlett-Packard Reprezentanta  
 Bldg. Bldg. 18  
 Telex 137885  
**SPAIN**  
 Hewlett-Packard Española S.A.  
 E-Madrid 15  
 Telex 22513 Sps  
**SPAIN**  
 Hewlett-Packard Española S.A.  
 E-Madrid 15  
 Telex 22513 Sps  
**SWEDEN**  
 Hewlett-Packard Sverige AB  
 S-161 20 **Bromma** 20  
 Telex 4817589  
**SWEDEN**  
 Hewlett-Packard Sverige AB  
 S-161 20 **Bromma** 20  
 Telex 4817589  
**SWITZERLAND**  
 Hewlett-Packard (Schweiz) AG  
 P.O. Box 307  
 CH-8952 **Schlieren**/Zurich  
 Telex 1194 20  
 Cable HEWPAK Zurich  
 Telex 53833 Hpa g  
**SYRIA**  
 Hewlett-Packard (Schweiz) AG  
 P.O. Box 307  
 CH-8952 **Schlieren**/Zurich  
 Telex 1194 20  
 Cable HEWPAK Zurich  
 Telex 53833 Hpa g  
**TURKEY**  
 Teknok Engineering Bureau  
 P.O. Box 437  
 TR-Ankara 15  
 Telex 48 40 40  
**TURKEY**  
 Teknok Engineering Bureau  
 P.O. Box 437  
 TR-Ankara 15  
 Telex 48 40 40  
**UNITED KINGDOM**  
 Hewlett-Packard Ltd  
 King Street Lane  
 Barking IG11 4AA  
 Telex 07341 78 47 74  
 Cable Hewpac London  
 Telex 04717589  
**UNITED KINGDOM**  
 Hewlett-Packard Ltd  
 King Street Lane  
 Barking IG11 4AA  
 Telex 07341 78 47 74  
 Cable Hewpac London  
 Telex 04717589  
**UNITED STATES**  
 Hewlett-Packard Company  
 1500 Page Mill Road  
 Palo Alto CA 94304  
 Telex 207 10000  
**USSR**  
 Hewlett-Packard Reprezentanta  
 Bldg. Bldg. 18  
 Telex 137885  
**USSR**  
 Hewlett-Packard Reprezentanta  
 Bldg. Bldg. 18  
 Telex 137885  
**Vietnam**  
 Hewlett-Packard Reprezentanta  
 Bldg. Bldg. 18  
 Telex 137885  
**Vietnam**  
 Hewlett-Packard Reprezentanta  
 Bldg. Bldg. 18  
 Telex 137885  
**YUGOSLAVIA**  
 Hewlett-Packard Reprezentanta  
 Bldg. Bldg. 18  
 Telex 137885  
**YUGOSLAVIA**  
 Hewlett-Packard Reprezentanta  
 Bldg. Bldg. 18  
 Telex 137885

E-Barcelona 17  
 Telex 32838 Hpa e  
 Cable HEWPAK España S.A  
 Av. Ramón y Cajal 97  
 E-Sevilla 5  
 Telex 5418  
 Hewlett-Packard Española S.A.  
 Edificio Alpha II 7 B  
 E-Bilbao 1  
 Telex 33 83 0623 82 06  
 Hewlett-Packard Española S.A.  
 Gran Via Fernando El Catolico 67  
 E-Valladolid 3  
 Telex 328 07 28326 65 55  
**SWEDEN**  
 Hewlett-Packard Sverige AB  
 S-161 20 **Bromma** 20  
 Telex 4817589  
**SWITZERLAND**  
 Hewlett-Packard (Schweiz) AG  
 P.O. Box 307  
 CH-8952 **Schlieren**/Zurich  
 Telex 1194 20  
 Cable HEWPAK Zurich  
 Telex 53833 Hpa g  
**SYRIA**  
 Hewlett-Packard (Schweiz) AG  
 P.O. Box 307  
 CH-8952 **Schlieren**/Zurich  
 Telex 1194 20  
 Cable HEWPAK Zurich  
 Telex 53833 Hpa g  
**TURKEY**  
 Teknok Engineering Bureau  
 P.O. Box 437  
 TR-Ankara 15  
 Telex 48 40 40  
**TURKEY**  
 Teknok Engineering Bureau  
 P.O. Box 437  
 TR-Ankara 15  
 Telex 48 40 40  
**UNITED KINGDOM**  
 Hewlett-Packard Ltd  
 King Street Lane  
 Barking IG11 4AA  
 Telex 07341 78 47 74  
 Cable Hewpac London  
 Telex 04717589  
**UNITED STATES**  
 Hewlett-Packard Company  
 1500 Page Mill Road  
 Palo Alto CA 94304  
 Telex 207 10000  
**USSR**  
 Hewlett-Packard Reprezentanta  
 Bldg. Bldg. 18  
 Telex 137885  
**USSR**  
 Hewlett-Packard Reprezentanta  
 Bldg. Bldg. 18  
 Telex 137885  
**Vietnam**  
 Hewlett-Packard Reprezentanta  
 Bldg. Bldg. 18  
 Telex 137885  
**Vietnam**  
 Hewlett-Packard Reprezentanta  
 Bldg. Bldg. 18  
 Telex 137885  
**YUGOSLAVIA**  
 Hewlett-Packard Reprezentanta  
 Bldg. Bldg. 18  
 Telex 137885  
**YUGOSLAVIA**  
 Hewlett-Packard Reprezentanta  
 Bldg. Bldg. 18  
 Telex 137885

**FOR OTHER AREAS**  
 Hewlett-Packard S.A.  
 P.O. Box 405  
 CH-1717 Meyrin 2 - Geneva  
**NOT LISTED CONTACT**  
 Hewlett-Packard S.A.  
 P.O. Box 405  
 CH-1717 Meyrin 2 - Geneva  
**FOR OTHER AREAS**  
 Hewlett-Packard S.A.  
 P.O. Box 405  
 CH-1717 Meyrin 2 - Geneva  
**NOT LISTED CONTACT**  
 Hewlett-Packard S.A.  
 P.O. Box 405  
 CH-1717 Meyrin 2 - Geneva

**FOR OTHER AREAS**  
 Hewlett-Packard S.A.  
 P.O. Box 405  
 CH-1717 Meyrin 2 - Geneva  
**NOT LISTED CONTACT**  
 Hewlett-Packard S.A.  
 P.O. Box 405  
 CH-1717 Meyrin 2 - Geneva  
**FOR OTHER AREAS**  
 Hewlett-Packard S.A.  
 P.O. Box 405  
 CH-1717 Meyrin 2 - Geneva  
**NOT LISTED CONTACT**  
 Hewlett-Packard S.A.  
 P.O. Box 405  
 CH-1717 Meyrin 2 - Geneva

**FOR OTHER AREAS**  
 Hewlett-Packard S.A.  
 P.O. Box 405  
 CH-1717 Meyrin 2 - Geneva  
**NOT LISTED CONTACT**  
 Hewlett-Packard S.A.  
 P.O. Box 405  
 CH-1717 Meyrin 2 - Geneva  
**FOR OTHER AREAS**  
 Hewlett-Packard S.A.  
 P.O. Box 405  
 CH-1717 Meyrin 2 - Geneva  
**NOT LISTED CONTACT**  
 Hewlett-Packard S.A.  
 P.O. Box 405  
 CH-1717 Meyrin 2 - Geneva



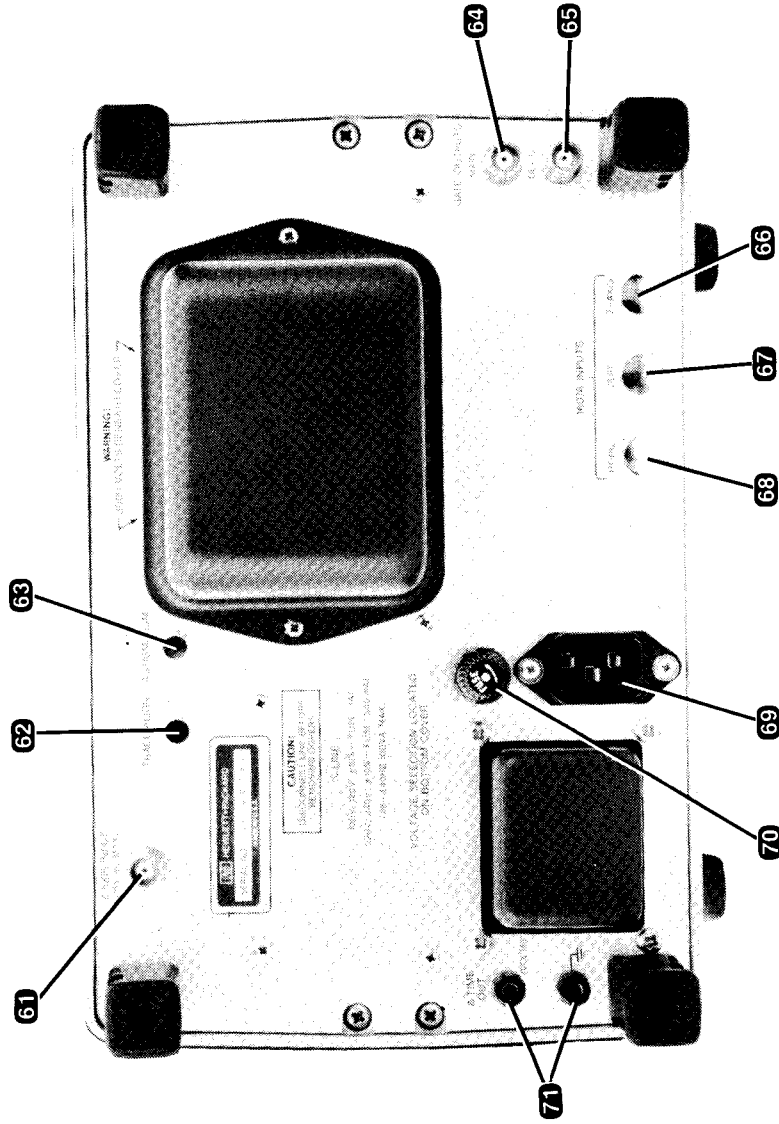


Figure 21.  
Front- and Rear-Panel Controls  
49

# AFRICA, ASIA, AUSTRALIA

<b>ANGOLA</b> Praçá Equipamentos P. 838054 Rodrigues 421. 01 Praçá Luaranda Tel. 3551587 Cable TELTECH Luanda	Spring Hill 4000 Queensland Tel. 728.1544 Cable HEWPAKD Brisbane	<b>GUAM</b> Procter-Cirelucos Ony Guam Medical Supply, Inc. Jay Esax Building Room 210 Tel. 699.6011 Toll free 866-4513 Cable EARNED Guam	<b>INDIA</b> Blue Star Ltd 30th Floor 91 Nehru Place Cable BULSTRA Tel. 534771 & 635166 New Delhi 110024 Tel. 634771 & 635166 Cable BULSTRA Shubh Vihar Toll free 866-4513 Cable BULSTRA Banarjee Road 60 025 Tel. 55868 Cable BULSTRA Tel. 943430 Cable BULSTRA Cochin 692 016 3282 Tel. 9885 514 Cable BULSTRA Blue Star Ltd Secunderabad 500 003 Tel. 7078 7072 D. R. Bhat Building Tel. 415 459 Blue Star Ltd 234 Kodumakam High Road Madurai 625004 Tel. 041 319 Cable BULSTRA	<b>HONG KONG</b> Schnorr & Co Hong Kong Ltd Comnigh Centre 39th floor Comnigh Road, Central Tel. 252915 Tel. 74766 SCHMCK HK Cable SCHMWTCO Hong Kong	<b>JAPAN</b> Yokogawa-Hewlett-Packard Ltd Ohashi Building Shinjuku-ku, Tokyo 151 Tel. 03-370-2281/92 Tel. 232-2224HP MARKET Cable YHPMARKET Yokogawa-Hewlett-Packard Ltd 4-20, Nishi-Shinjuku 3-chome Chuo-Bldg, 4th Floor Otsuka 522 Tel. 06-504-6021 Yokogawa-Hewlett-Packard Ltd 24 Kam. Sasaki-cho Nishiku-ku, Nagoya 450 Tel. 052-571-5171 Yokogawa-Hewlett-Packard Ltd 2-24-1 Tsuetsubo-cho Kanagawa-ku Osaka 532 Tel. 06-504-6021 Yokogawa-Hewlett-Packard Ltd 24 Kam. Sasaki-cho Nishiku-ku, Nagoya 450 Tel. 052-571-5171 Yokogawa-Hewlett-Packard Ltd Mito Mitsui Building Mito, Ibaraki-ken Tel. 0282-25-7470 Yokogawa-Hewlett-Packard Ltd Inoue Building 2-10-10, Ichinome Akihabara, Kanagawa 443 Tel. 0462-24-0452 Yokogawa-Hewlett-Packard Ltd Kumogai Building 4th floor 3-4 Tsukuba Sakura 380 Tel. 0485-24-5563	<b>KENYA</b> Technical Engineering Servicecentre A Ltd P. O. Box 193111	<b>NEW ZEALAND</b> Hewlett-Packard (N.Z.) Ltd P.O. Box 19072 Naironi Airport Tel. 336055-56 Tel. 22201/22301 Cable (N.Z.)HEWHP KOREA Gansung Electronics Co. Ltd 100, Seongsu-dong, Seongbuk C.P.O. Box 2775 Seonyung-ro, Chung-ku Seoul 121-9811 Tel. 27575 Saebyeok Cable ELNESHAR Seoul MALAYSIA Pohk Miao Sdn. Bhd. Section 3 Petaling Jaya Selangor Tel. 644-3295 P. O. Box 3295 Lot 289, Selek Road Tel. 2400 Cable PROFEL ENG MOZAMBIQUE A. N. Goncalves Ltd 762, Ave. 14 Av. O Luis Lourenço Marques Tel. 77091, 2714 Cable KES010	<b>NETHERLANDS</b> Wentigton Tel. 469946 Cable HEWPAKD Washington Hewlett-Packard (N.Z.) Ltd Pakuranga Professional Centre 261 Pakuranga Highway Box 803	<b>NEW ZEALAND</b> Hewlett-Packard (N.Z.) Ltd P.O. Box 19072 Naironi Airport Tel. 336055-56 Tel. 22201/22301 Cable (N.Z.)HEWHP KOREA Gansung Electronics Co. Ltd 100, Seongsu-dong, Seongbuk C.P.O. Box 2775 Seonyung-ro, Chung-ku Seoul 121-9811 Tel. 27575 Saebyeok Cable ELNESHAR Seoul MALAYSIA Pohk Miao Sdn. Bhd. Section 3 Petaling Jaya Selangor Tel. 644-3295 P. O. Box 3295 Lot 289, Selek Road Tel. 2400 Cable PROFEL ENG MOZAMBIQUE A. N. Goncalves Ltd 762, Ave. 14 Av. O Luis Lourenço Marques Tel. 77091, 2714 Cable KES010	<b>PAKISTAN</b> Mushno & Company Ltd Osman Chambers Ashdhan Road Lahore Cable THETEL Lagos Lagos	<b>PAKISTAN</b> Mushno & Company Ltd Osman Chambers Ashdhan Road Lahore Cable THETEL Lagos Lagos 1-4 Aggar Road, Multan Tel. 80945 P. O. Box 39325 Durrani, Sindh Tel. 84922 Cable HEWPAKD JOHANNESBURG Service Department P. O. Box 301 Sunderland Cable HEWPAKD Johannesburg Tel. 84922 Cable HEWPAKD Johannesburg Service Department P. O. Box 301 Sunderland Cable HEWPAKD Johannesburg Tel. 84922	<b>PHILIPPINES</b> The Unime Advanced Rigid Films Corporation Amosson cor. Herrera St Legaspi Village, Makati Tel. 85-35-81 85-34-91 Tel. 3274 ONLINE Cable FEWUS Rawaphdi RHOESIA The Unime Advanced Rigid Films Corporation Amosson cor. Herrera St Legaspi Village, Makati Tel. 85-35-81 85-34-91 Tel. 3274 ONLINE Cable FEWUS Rawaphdi SINGAPORE Hewlett-Packard Singapore 1-10 River Road Singapore 4 Tel. 270-2335 21466 Cable HEWPAKD Singapore SOUTH AFRICA Hewlett-Packard South Africa Private Bag, Westwood Sunderland Tel. 84922 Cable HEWPAKD Johannesburg Service Department P. O. Box 301 Sunderland Cable HEWPAKD Johannesburg Tel. 84922 Cable HEWPAKD Johannesburg Service Department P. O. Box 301 Sunderland Cable HEWPAKD Johannesburg Tel. 84922
--	--	--	--	--	--	--	--	---	--	--	---	--

OTHER AREAS NOT LISTED. CONTACT:

Hewlett-Packard International
P.O. Box 1200
New York, NY 10108
Tel: (212) 512-2000

CANADA

ALBERTA
Hewlett-Packard (Canada) Ltd
P.O. Box 500
Edmonton T6C 2K3
Tel: (403) 452-3670

BRITISH COLUMBIA
Hewlett-Packard (Canada) Ltd
837 E. Columbia Street
Vancouver V6A 3R2
Tel: (604) 254-0531

QUEBEC
Hewlett-Packard (Canada) Ltd
275 H. Muir Blvd
Pointe Claire H9R 1G7
Tel: (514) 432-3022

FOR CANADIAN AREAS NOT LISTED:
Contact Hewlett-Packard (Canada) Ltd
at Headquarters

CENTRAL AND SOUTH AMERICA

ECUADOR
Computadores y Equipos
Parronillo 2323 CCI
Eloy Alfaro # 1824, 3 Piso
Quito
Tel: (02) 2113 Sagua E1

PERU
Compamilla Electro Medica S.A.
Los Flamencos 45
Lima 1, Casilla 1030
Tel: 41-4325

PUERTO RICO
Hewlett-Packard Inter-Americas
Calle Comercio Branch Office
Calle 272
No. 203 Urb. Country Club
Tel: (089) 782-7255

URUGUAY
Pablo Ferrando S.A.
Comercial e Industrial
Calle de Comercio 370
Montevideo
Tel: 40-3100

VENEZUELA
Hewlett-Packard de Venezuela
C.A.
Caracas 105
Los Ruices Norte
Tel: (021) 81.65.40

FOR AREAS NOT LISTED. CONTACT:
Hewlett-Packard
P.O. Box 250
Caracas

EUROPE, NORTH AFRICA AND MIDDLE EAST

NETHERLANDS
Hewlett-Packard B.V.
Postfach 560 140
Tel: (06) 111 50 041

FRANCE
Hewlett-Packard France
Quartier de Courtabouf
Boite Postale No. 6
Tel: (1) 907 78 25

GERMANY
Hewlett-Packard GmbH
Postfach 117
Bonn
Tel: (0228) 48 1249

CYPRUS
Hewlett-Packard (Cyprus) Ltd
P.O. Box 1152
Cyprus
Tel: 31 06 11

CZECHOSLOVAKIA
Vynovka a Pruhonice vyzkumny
ústredny ústav elektroniky
F.31300 Toulouck-Le Mirail
Tel: (61) 40 11 12

FINLAND
Hewlett-Packard Oy
P.O. Box 500
Tel: (09) 331 88 50

FRANCE
Hewlett-Packard France
Centre d'Affaires Paris-Nord
B.P. 300
Tel: (01) 931 88 50

GERMANY
Hewlett-Packard GmbH
Postfach 117
Bonn
Tel: (0228) 48 1249

HONG KONG
Hewlett-Packard (Hong Kong) Ltd
P.O. Box 100
Tel: (2) 2563 8850

INDIA
Hewlett-Packard India Pvt. Ltd.
P.O. Box 150
Tel: (415) 691 1500

ITALY
Hewlett-Packard S.p.A.
P.O. Box 4899
Tel: (02) 84 27 00

JAPAN
Hewlett-Packard (Japan) Ltd
P.O. Box 250
Tel: (3) 5700 1111

KOREA
Hewlett-Packard (Korea) Ltd
P.O. Box 250
Tel: (2) 2563 8850

NETHERLANDS
Hewlett-Packard B.V.
Postfach 560 140
Tel: (06) 111 50 041

NETHERLANDS
Hewlett-Packard B.V.
Postfach 560 140
Tel: (06) 111 50 041

NETHERLANDS
Hewlett-Packard B.V.
Postfach 560 140
Tel: (06) 111 50 041

NETHERLANDS
Hewlett-Packard B.V.
Postfach 560 140
Tel: (06) 111 50 041

B.P. 162
Kyprou
Tel: (78) 33 81 25

F-67000 Stresbourg
Tel: (88) 93 23 20 21

F-59000 Lille
Tel: (20) 35 00 11

Centre d'Affaires Paris-Nord
B.P. 300
Tel: (01) 931 88 50

Postfach 117
Bonn
Tel: (0228) 48 1249

Postfach 560 140
Tel: (06) 111 50 041

Postfach 117
Bonn
Tel: (0228) 48 1249

Postfach 560 140
Tel: (06) 111 50 041

Postfach 560 140
Tel: (06) 111 50 041

Postfach 560 140
Tel: (06) 111 50 041

Postfach 560 140
Tel: (06) 111 50 041

Postfach 560 140
Tel: (06) 111 50 041

Postfach 560 140
Tel: (06) 111 50 041

Postfach 560 140
Tel: (06) 111 50 041



# UNITED STATES

**ALABAMA**  
 646 W. North Market Blvd  
 P.O. Box 1000  
 Sacramento 95534  
 Tel: (916) 424-1222  
 9606 Aero Bldg  
 P.O. Box 2333  
 San Diego 92123  
 Tel: (714) 779-3200  
**COLORADO**  
 228 W. Bellway Ave.  
 Birmingham 35209  
 Tel: (205) 942-2087  
**ARIZONA**  
 2336 E. Magnolia St  
 Phoenix 85016  
 Tel: (602) 244-1361  
 2424 East Aragon Rd  
 Tucson 85706  
 Tel: (602) 794-3148  
**ARKANSAS**  
 P.O. Box 5546  
 Brink Station  
 Little Rock 72215  
 Tel: (501) 376-1844  
**CALIFORNIA**  
 Medical Service Only  
 P.O. Box 1365  
 Fullerton 92631  
 Tel: (714) 870-1000  
 3839 Lamerahm Boulevard  
 North Hollywood 91604  
 Tel: (818) 709-7700  
 Tel: (818) 499-2671  
 5400 West Rosecrans Blvd  
 P.O. Box 82105  
 Long Beach 90806  
 Tel: (213) 970-7500  
**Los Angeles**  
 Tel: (213) 776-7500  
 3023 Sport Boulevard  
 Burbank 91506  
 Tel: (408) 249-7000  
 Tel: (408) 246-0592  
 P.O. Box 2103  
 Warner Robbins 31098  
 Tel: (912) 927-0449  
**CONNECTICUT**  
 12 Lunar Drive  
 New Haven 06525  
 Tel: (203) 465-2029  
**FLORIDA**  
 P.O. Box 24210  
 Jacksonville 32217  
 Tel: (904) 325-3575  
**FLORIDA**  
 P.O. Box 24210  
 Jacksonville 32217  
 Tel: (904) 325-3575  
**GEORGIA**  
 P.O. Box 105005  
 Atlanta 30338  
 Tel: (404) 355-1500  
 Tel: (404) 355-4890  
 Medical Service Only  
 P.O. Box 105005  
 Atlanta 30338  
 Tel: (404) 355-1500  
 P.O. Box 2103  
 Warner Robbins 31098  
 Tel: (912) 927-0449  
**HAWAII**  
 2875 So. King Street  
 Honolulu 96815  
 Tel: (808) 955-4455  
 Feet 723-705  
**ILLINOIS**  
 5201 Tolnew Dr.  
 Lombard 60148  
 Tel: (708) 255-9999  
 Tel: (708) 255-9999  
**INDIANA**  
 7301 North Shadeland Ave  
 Indianapolis 46250  
 Tel: (317) 255-1737  
**IOWA**  
 2415 Heinz Road  
 Iowa City 52240  
 Tel: (319) 338-9466  
**KENTUCKY**  
 Medical Only  
 Attn: Service Only  
 Suite 400  
 Louisville 40218  
 Tel: (502) 456-1573  
**LOUISIANA**  
 P.O. Box 840  
 Kenner 70065  
 Tel: (504) 443-6201  
**MARYLAND**  
 P.O. Box 105005  
 Baltimore 21201  
 Tel: (301) 944-5400  
 Tel: (301) 944-9151  
 P.O. Box 20050  
 Columbia 21046  
 Tel: (301) 948-6370  
 Tel: (301) 542-1384  
**MASSACHUSETTS**  
 37 Nutwell Ave  
 P.O. Box 11534  
 Dayton 45448  
 Tel: (513) 859-8202  
**MINNESOTA**  
 2400 N. Prior Ave  
 St. Paul 55113  
 Tel: (612) 536-0700  
**MISSISSIPPI**  
 Medical Service Only  
 Tel: (601) 982-9363  
**MISSOURI**  
 1131 Colorado Ave  
 Fairport 6450  
 Tel: (716) 253-9550  
 5658 East Meador Road  
 St. Louis 63141  
 Tel: (314) 878-0200  
**NEBRASKA**  
 Suite 100  
 Omaha 68105  
 Tel: (402) 392-0948  
**NEW JERSEY**  
 P.O. Box 105005  
 Baltimore 21201  
 Tel: (301) 944-5400  
 Tel: (301) 944-9151  
 P.O. Box 20050  
 Columbia 21046  
 Tel: (301) 948-6370  
 Tel: (301) 542-1384  
**NEW MEXICO**  
 37 Nutwell Ave  
 P.O. Box 11534  
 Dayton 45448  
 Tel: (513) 859-8202  
**NORTH CAROLINA**  
 P.O. Box 5188  
 Hickory 27001  
 Tel: (813) 885-9101  
**OHIO**  
 16500 Sprague Road  
 Cleveland 44130  
 Tel: (216) 744-3446  
 330 Progress Rd  
 Dayton 45448  
 Tel: (513) 859-8202  
**OKLAHOMA**  
 1041 Kingsmill Parkway  
 Columbus 73229  
 Tel: (817) 466-1041  
 205 Billy Mitchell Road  
 San Antonio 78226  
 Tel: (512) 434-8241  
**UTAH**  
 2160 South 2270 West Street  
 Cedar Rapids 52401  
 Tel: (801) 972-4111  
**VIRGINIA**  
 P.O. Box 12778  
 No. 7 Koger Exec Center  
 Suite 200  
 Raleigh 27602  
 Tel: (804) 461-40256  
 P.O. Box 9669  
 2314 Huntington Springs Road  
 King of Prussia 19381  
 Tel: (804) 285-3431  
**WASHINGTON**  
 1203 14th Ave. S.E.  
 Bellevue 98004  
 Tel: (206) 454-3971  
 Tel: (206) 454-3446  
**WEST VIRGINIA**  
 Medical Only  
 Charleston  
 Tel: (304) 345-1640  
**WISCONSIN**  
 9024 West Lincoln Ave  
 Milwaukee 53224  
 Tel: (414) 541-0350  
**FOR U.S. AREAS NOT LISTED**  
 nearest you: Atlanta, Georgia  
 North Hollywood, California  
 Roanoke, Maryland  
 Rolling Meadows, Illinois  
 addresses are listed above  
 \*Service Only





01742-90904

PRINTED IN U.S.A.

