

OPERATING AND SERVICE MANUAL

DC POWER SUPPLY

MPB-5 SERIES, MODEL 6285A

SERIAL NUMBER PREFIX 6K

**MASTER**

HEWLETT  PACKARD

DC POWER SUPPLY  
MPB-5 SERIES, MODEL 6285A  
SERIAL NUMBER PREFIX 6K



Printed: September, 1966  
® Stock Number: 06285-90001

TABLE OF CONTENTS

Section	Page No.	Section	Page No.
<b>I GENERAL INFORMATION</b>	1-1	<b>IV PRINCIPLES OF OPERATION</b>	
1-1 Description	1-1	4-8 Simplified Schematic	4-3
1-6 Specifications	1-1	4-10 Detailed Circuit Analysis	4-3
1-8 Options	1-1	4-11 Preregulator and Control Circuit	4-3
1-10 Accessories	1-2	4-19 Series Regulator	4-5
1-12 Instrument Identification	1-2	4-21 Constant Voltage Input Circuit	4-5
1-15 Ordering Additional Manuals	1-2	4-26 Constant Current Input Circuit	4-6
		4-31 Gating Circuit	4-7
<b>II INSTALLATION</b>	2-1	4-34 Error Amplifiers	4-7
2-1 Initial Inspection	2-1	4-37 Fault Input Circuit	4-7
2-3 Mechanical Check	2-1	4-42 Reference Circuit	4-8
2-5 Electrical Check	2-1	4-46 Meter Circuit	4-8
2-7 Installation Data	2-1		
2-9 Location	2-1	<b>V MAINTENANCE</b>	5-1
2-11 Rack Mounting	2-1	5-1 Introduction	5-1
2-15 Input Power Requirements	2-2	5-3 General Measurement Techniques	5-1
2-17 50Hz Operation	2-2	5-8 Test Equipment Required	5-1
2-19 Power Cable	2-2	5-10 Performance Test	5-3
2-22 Repackaging for Shipment	2-2	5-12 Constant Voltage Tests	5-4
		5-21 Constant Current Tests	5-6
<b>III OPERATING INSTRUCTIONS</b>	3-1	5-25 Troubleshooting	5-6
3-1 Operating Controls and Indicators	3-1	5-27 Trouble Analysis	5-7
3-3 Operating Modes	3-1	5-34 Repair and Replacement	5-7
3-5 Normal Operating Mode	3-1	5-36 Adjustment and Calibration	5-13
3-7 Constant Voltage	3-1	5-38 Meter Zero	5-13
3-9 Constant Current	3-1	5-40 Voltmeter Tracking	5-13
3-11 Connecting Load	3-2	5-42 Ammeter Tracking	5-13
3-14 Operation of Supply Beyond Rated Output	3-2	5-44 Constant Voltage Programming Current	5-14
3-16 Optional Operating Modes	3-2	5-46 Constant Current Programming Current	5-14
3-17 Remote Programming, Constant Voltage	3-2	5-48 Overvoltage Trip	5-14
3-24 Remote Programming, Constant Current	3-3	5-50 Transient Recovery Time	5-14
3-30 Remote Sensing	3-3	5-52 Preregulator Tracking (60 Hz Operation)	5-14
3-35 Series Operation	3-4	5-54 Preregulator Tracking (50 Hz Operation)	5-14
3-39 Parallel Operation	3-5		
3-42 Auto-Tracking Operation	3-5	<b>VI REPLACEABLE PARTS</b>	6-1
3-45 Special Operating Considerations	3-6	6-1 Introduction	6-1
3-46 Pulse Loading	3-6	6-4 Ordering Information	6-1
3-48 Output Capacitance	3-6	Reference Designators	
3-51 Reverse Voltage Loading	3-6	Abbreviations	
3-53 Reverse Current Loading	3-6	Manufacturers	
		6-8 Code List of Manufacturers	6-2
<b>IV PRINCIPLES OF OPERATION</b>	4-1	Parts List Table	
4-1 Overall Block Diagram	4-1		
Discussion	4-1		

### LIST OF ILLUSTRATIONS

Figure		Page No.	Figure		Page No.
1-1	DC Power Supply	iv	4-3	SCR Phase Control of DC Input Level	4-3
2-1	Rack Mounting, Two Units	2-1	4-4	SCR Control Circuit, Simplified Schematic	4-4
2-2	Rack Mounting, One Unit	2-2	4-5	SCR Control Circuit Waveforms	4-4
3-1	Front Panel Controls and Indicators	3-1	4-6	Constant Voltage Input Circuit, Simplified Schematic	4-5
3-2	Normal Strapping Pattern	3-1	4-7	Constant Current Input Circuit, Simplified Schematic	4-6
3-3	Remote Resistance Programming (Constant Voltage)	3-2	4-8	Meter Circuit, Simplified Schematic	4-8
3-4	Remote Voltage Programming (Constant Voltage)	3-2	5-1	Front Panel Terminal Connections	5-1
3-5	Remote Resistance Programming (Constant Current)	3-3	5-2	Output Current Measurement Techniques	5-2
3-6	Remote Voltage Programming (Constant Current)	3-3	5-3	Differential Voltmeter Substitute Test Setup	5-3
3-7	Remote Sensing	3-4	5-4	Output Current Test Setup	5-4
3-8	Normal Series Connections	3-4	5-5	Load Regulation, Constant Voltage	5-4
3-9	Auto-Series, Two Units	3-5	5-6	Ripple and Noise, Constant Voltage	5-5
3-10	Normal Parallel Connections	3-5	5-7	Transient Response, Test Setup	5-5
3-11	Auto-Parallel, Two Units	3-5	5-8	Transient Response Waveforms	5-5
3-12	Auto-Tracking, Two Units	3-5	5-9	Output Impedance, Test Setup	5-6
4-1	Overall Block Diagram	4-1	5-10	Servicing Printed Wiring Boards	5-12
4-2	Simplified Schematic	4-2			

### LIST OF TABLES

Table		Page No.	Table		Page No.
1-1	Specifications	1-1	5-6	Common Troubles	5-10
5-1	Test Equipment Required	5-2	5-7	Selected Semiconductor Characteristics	5-10
5-2	Reference Circuit Troubleshooting	5-7	5-8	Checks and Adjustments After Replacement of Semiconductor Devices	5-11
5-3	High Output Voltage Troubleshooting	5-8	5-9	Calibration Adjustment Summary	5-13
5-4	Low Output Voltage Troubleshooting	5-8			
5-5	Preregulator/Control Circuit Troubleshooting	5-9			



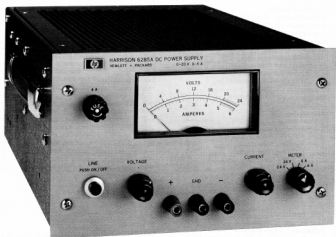


Figure 1-1. DC Power Supply, Model 6285A

**SECTION I  
GENERAL INFORMATION**

**1-1 DESCRIPTION**

1-2 This power supply, Figure 1-1, is completely transistorized and suitable for either bench or relay rack operation. It is a compact, well-regulated, Constant Voltage / Constant Current supply that will furnish full rated output voltage at the maximum rated output current or can be continuously adjusted throughout the output range. The front panel CURRENT controls can be used to establish the output current limit (overload or short circuit) when the supply is used as a constant voltage source and the VOLTAGE control can be used to establish the voltage limit (loading) when the supply is used as a constant current source. The supply will automatically crossover from constant voltage to constant current operation and vice versa if the output current or voltage exceeds these preset limits.

1-3 The power supply has both front and rear terminals. Either the positive or negative output terminal may be grounded or the power supply can be operated floating at up to a maximum of 300 volts off ground.

1-4 A single meter is used to measure either output voltage or output current in one of two ranges. The voltage or current ranges are selected by a METER switch on the front panel.

1-5 Barrier strip terminals located at the rear of the unit allow ease in adapting to the many operational capabilities of the power supply. A brief description of these capabilities is given below:

**a. Remote Programming**

The power supply may be programmed from a remote location by means of an external voltage source or resistance.

**b. Remote Sensing**

The degradation in regulation which would occur at the load because of the voltage drop in the load leads can be reduced by using the power supply in the remote sensing mode of operation.

**c. Series and Auto-Series Operation**

Power supplies may be used in series when a higher output voltage is required in the voltage mode of operation or when greater voltage compliance is required in the constant current mode of operation. Auto-Series operation permits one knob control of the total output voltage from a "master" supply.

**d. Parallel and Auto-Parallel Operation**

The power supply may be operated in parallel with a similar unit when greater output current capability is required. Auto-Parallel operation permits one knob control of the total output current from a "master" supply.

**e. Auto-Tracking**

The power supply may be used as a "master" supply, having control over one or more "slave" supplies that furnish various voltages for a system.

**1-6 SPECIFICATIONS**

1-7 Detailed specifications for the power supply are given in Table 1-1.

**1-8 OPTIONS**

1-9 Options are factory modifications of a standard instrument that are requested by the customer. The following options are available for the instrument covered by this manual. Where necessary, detailed coverage of the options is included throughout the manual.

Option No.	Description
01	50 Hz Regulator Reassignment: Standard instruments will operate satisfactorily at both 60 and 50 Hz without adjustment. However Option 01 factory reassignment results in more efficient operation at 50 Hz, and is recommended for all applications when continuous operation from a 50 Hz ac input is intended.

<u>Option No.</u>	<u>Description</u>
07	Voltage 10-Turn Control: A single control that replaces both coarse and fine voltage controls and improves output setability.
08	Current 10-Turn Control: A single control that replaces both coarse and fine current controls and improves output setability.
09	Voltage and Current 10-Turn Controls: Options 07 and 08 on same instrument.
11	Internal Overvoltage Protection "Crowbar": Operating and Service information is included in Appendix A at the rear of the manual.
13	Three Digit Graduated Decadal Voltage Control: Control that replaces 10-turn voltage control permitting accurate resetability.
14	Three Digit Graduated Decadal Current Control: Control that replaces coarse and fine current controls permitting accurate resetability.
18	230V AC, Single Phase, Input: Supply is shipped for 115V ac operation. Option 18 consists of modifying the supply for 230Vac operation.

#### 1-10 ACCESSORIES

1-11 The accessories listed in the following chart may be ordered with the power supply or separately from your local Hewlett-Packard field sales office (refer to list at rear of manual for ad-

dresses).

<u>Part No.</u>	<u>Description</u>
14515A	Rack Kit for mounting one $5\frac{1}{2}$ " high supply. (Refer to Section II for details.)
14525A	Rack Kit for mounting two $5\frac{1}{2}$ " high supplies. (Refer to Section II for details.)

#### 1-12 INSTRUMENT IDENTIFICATION

1-13 Hewlett-Packard power supplies are identified by a three-part serial number tag. The first part is the power supply model number. The second part is the serial number prefix, which consists of a number-letter combination that denotes the date of a significant design change. The number designates the month, January through December respectively. The third part is the power supply serial number.

1-14 If the serial number prefix on your power supply does not agree with the prefix on the title page of this manual, change sheets are included to update the manual. Where applicable, back-dating information is given in an appendix at the rear of the manual.

#### 1-15 ORDERING ADDITIONAL MANUALS

1-16 One manual is shipped with each power supply. Additional manuals may be purchased from your local Hewlett-Packard field office (see list at rear of this manual for addresses). Specify the model number, serial number prefix, and stock number provided on the title page.

Table 1-1. Specifications

<b>INPUT:</b> 100-125 VAC, single phase, 50-60Hz, 1, 5A, 240W.	including a direct short placed across the terminals in constant voltage operation. The constant voltage circuit limits the output voltage in the constant current mode of operation.
<b>OUTPUT:</b> 0-20 volts @ 0-5 amps.	<b>METER:</b> The front panel meter can be used as either a 0-14 or 0-1.4 volt voltmeter or as a 0-5 or 0-0.5 amp ammeter.
<b>LOAD REGULATION:</b> <b>Constant Voltage</b> -- Less than 0.01% plus 1mV for a full load to no load change in output current. <b>Constant Current</b> -- Less than 0.05% plus 1mA for a zero to maximum change in output voltage.	<b>OUTPUT CONTROLS:</b> Coarse and fine voltage controls and coarse and fine current controls provide continuous adjustment over the entire output span.
<b>LINE REGULATION:</b> <b>Constant Voltage</b> -- Less than 0.01% plus 1mV for any line voltage change within the input range. <b>Constant Current</b> -- Less than 0.05% plus 1mA for any line voltage change within the input range.	<b>OUTPUT TERMINALS:</b> Three "five-way" output posts are provided on the front panel and an output terminal strip is located on the rear of the chassis. All power supply output terminals are isolated from the chassis and either the positive or negative terminal may be connected to the chassis through a separate ground terminal. If the front panel terminals are used, the load regulation will be 0.5mV per ampere greater, due to the front terminal resistance.
<b>RIPPLE AND NOISE:</b> <b>Constant Voltage</b> -- Less than 50mV rms. <b>Constant Current</b> -- Less than 3mA rms.	<b>REMOTE SENSING:</b> Line sensing is normally accomplished at the front terminals if the load is attached to the front or at the rear terminals if the load is attached to the rear terminals. Also, provision is included on the rear terminal strip for remote sensing.
<b>OPERATING TEMPERATURE RANGE:</b> Operating: 0 to 50°C. Storage: -20 to 40°C.	<b>REMOTE PROGRAMMING:</b> Remote programming of the supply output at approximately 100 ohms per volt is constant voltage or made available at the rear terminals. In constant current mode of operation, the current can be remotely programmed at approximately 100 ohms per ampere.
<b>TEMPERATURE COEFFICIENT:</b> <b>Constant Voltage</b> -- Less than 0.02% plus 500mV per degree Centigrade. <b>Constant Current</b> -- Less than 0.02% plus 1.5mA per degree Centigrade.	<b>COOLING:</b> Convection cooling is employed. The supply has no moving parts.
<b>STABILITY:</b> <b>Constant Voltage</b> -- Less than 0.10% plus 2.5mV total drift for 8 hours after an initial warm-up time of 30 minutes at constant ambient, constant line voltage, and constant load. <b>Constant Current</b> -- Less than 0.10% plus 11.5mA total drift for 8 hours after an initial warm-up time of 30 minutes at constant ambient, constant line voltage, and constant load.	<b>SIZE:</b> $1\frac{1}{2}''$ H x $16''$ D x $6\frac{1}{2}''$ W. Two of the units can be mounted side by side in a standard 19" relay rack.
<b>INTERNAL IMPEDANCE AS A CONSTANT VOLTAGE SOURCE:</b> Less than 0.001 ohm from DC to 100Hz. Less than 0.01 ohm from 100Hz to 1kHz. Less than 0.1 ohm from 1kHz to 100kHz. Less than 1.0 ohm from 100 kHz to 1 MHz.	<b>WEIGHT:</b> 25 lbs. net, 32 lbs. shipping.
<b>TRANSIENT RECOVERY TIME:</b> Less than 50µsec for output recovery to within 1% following a current change in the output equal to the current rating of the supply or 5 amperes, whichever is smaller.	<b>FINISH:</b> Light gray front panel with dark gray case.
<b>OVERLOAD PROTECTION:</b> A continuously acting constant current circuit protects the power supply for all overloads	<b>POWER CORD:</b> A three-wire, five-foot power cord is provided with each unit.

## SECTION 11 INSTALLATION

### 2-1 INITIAL INSPECTION

2-2 Before shipment, this instrument was inspected and found to be free of mechanical and electrical defects. As soon as the instrument is unpacked, inspect for any damage that may have occurred in transit. Save all packing materials until the inspection is completed. If damage is found, proceed as described in the Claim for Damage in Shipment section of the warranty page at the rear of this manual.

### 2-3 MECHANICAL CHECK

2-4 This check should confirm that there are no broken knobs or connectors, that the cabinet and panel surfaces are free of dents and scratches, and that the meter is not scratched or cracked.

### 2-5 ELECTRICAL CHECK

2-6 The instrument should be checked against its electrical specifications. Section V includes an "in-cabinet" performance check to verify proper instrument operation.

### 2-7 INSTALLATION DATA

2-8 The instrument is shipped ready for bench operation. It is necessary only to connect the in-

strument to a source of power and it is ready for operation.

### 2-9 LOCATION

2-10 This instrument is air cooled. Sufficient space should be allotted so that a free flow of cooling air can reach the sides and rear of the instrument when it is in operation. It should be used in an area where the ambient temperature does not exceed 50°C.

### 2-11 RACK MOUNTING

2-12 This instrument may be rack mounted in a standard 19 inch rack panel either alongside a similar unit or by itself. Figures 2-1 and 2-2 show how both types of installations are accomplished.

2-13 To mount two units side-by-side, proceed as follows:

- Remove the four screws from the front panels of both units.
- Slide rack mounting ears between the front panel and case of each unit.
- Slide combining strip between the front panels and cases of the two units.
- After fastening rear portions of units together using the bolt, nut, and spacer, replace panel screws.

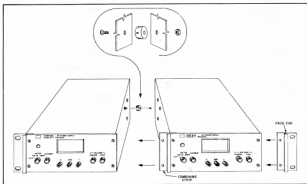


Figure 2-1. Rack Mounting, Two Units

 


Figure 2-2. Rack Mounting, One Unit

2-14 To mount a single unit in the rack panel, proceed as follows:

a. Bolt rack mounting ears, combining straps, and angle brackets to each side of center spacing panels. Angle brackets are placed behind combining straps as shown in Figure 2-2.

b. Remove four screws from front panel of unit.

c. Slide combining strips between front panel and case of unit.

d. Bolt angle brackets to front sides of case and replace front panel screws.

#### 2-15 INPUT POWER REQUIREMENTS

2-16 This power supply may be operated from either a nominal 115 volt or 230 volt 50-60 cycle power source. The unit, as shipped from the factory, is wired for 115 volt operation only. A factory modification (Option 18) must be made to permit operation from a 230 volt line. The input power required when operated from a 115 volt, 60 cycle power source at full load is given in the specification table in Section I.

#### 2-17 50 Hz OPERATION

2-18 The unit as normally shipped from the factory can be operated from either a 50 or 60 Hz source. However, with a 50 Hz input, the operation of the unit may become somewhat degraded when the temperature exceeds 35° Centigrade (instead of the normal 50° Centigrade capability with a 60 Hz input). To permit optimum operation at 50 Hz, the unit must

be realigned. This realignment procedure is described in Paragraph 5-54 at the rear of the manual.

#### 2-19 POWER CABLE

2-20 To protect operating personnel, the National Electrical Manufacturers' Association (NEMA) recommends that the instrument panel and cabinet be grounded. This instrument is equipped with a three conductor power cable. The third conductor is the ground conductor and when the cable is plugged into an appropriate receptacle, the instrument is grounded. The offset pin on the power cable three-prong connector is the ground connection.

2-21 To preserve the protection feature when operating the instrument from a two-contact outlet, use a three-prong to two-prong adapter and connect the green lead on the adapter to ground.

#### 2-22 REPACKAGING FOR SHIPMENT

2-23 To insure safe shipment of the instrument, it is recommended that the package designed for the instrument be used. The original packaging material is reusable. If it is not available, contact your local Hewlett-Packard field office to obtain the materials. This office will also furnish the address of the nearest service office to which the instrument can be shipped. Be sure to attach a tag to the instrument which specifies the owner, model number, full serial number, and service required, or a brief description of the trouble.

## SECTION III OPERATING INSTRUCTIONS

### 3-1 OPERATING CONTROLS AND INDICATORS

3-2 The front panel controls and indicators, together with the normal turn-on sequence, are shown in Figure 3-1.

 


Figure 3-1. Front Panel Controls and Indicators

### 3-3 OPERATING MODES

3-4 The power supply is designed so that its mode of operation can be selected by making strapping connections between particular terminals on the terminal strip at the rear of the power supply. The terminal designations are specified in white on the power supply above their respective terminals. Although the strapping patterns illustrated in this section show the positive terminal grounded, the operator can ground either terminal or operate the power supply up to 350 vdc (if grounded). The following paragraphs describe the procedures for utilizing the various operational capabilities of the power supply. A more theoretical description concerning the operational features of this supply is contained in a power supply Application Manual and in various Tech. Letters published by the Harrison Division. Copies of these can be obtained from your local Hewlett-Packard field office.

### 3-5 NORMAL OPERATING MODE

3-6 The power supply is normally shipped with its rear terminal strapping connections arranged for Constant Voltage/Constant Current, local sensing, local programming, single unit mode of operation. This strapping pattern is illustrated in Figure 3-2. The operator selects either a constant voltage or a constant current output using the front panel controls (local programming, no strapping changes are necessary).

 


Figure 3-2. Normal Strapping Pattern

### 3-7 CONSTANT VOLTAGE

3-8 To select a constant voltage output, proceed as follows:

a. Turn-on power supply and adjust VOLTAGE controls for desired output voltage (output terminals open).

b. Short output terminals and adjust CURRENT controls for maximum output current allowable (current limit), as determined by load conditions. If a load change causes the current limit to be exceeded, the power supply will automatically crossover to constant current output at the preset current limit and the output voltage will drop proportionately. In setting the current limit, allowance must be made for high peak current which can cause unwanted cross-over. (Refer to Paragraph 3-6b).

### 3-9 CONSTANT CURRENT

3-10 To select a constant current output, proceed as follows:

a. Short output terminals and adjust CURRENT controls for desired output current.

b. Open output terminals and adjust VOLTAGE controls for maximum output voltage allowable (voltage limit), as determined by load conditions. If a load change causes the voltage limit to be exceeded, the power supply will automatically crossover to constant voltage output at the power voltage limit and the output current will drop proportionately. In setting the voltage limit, allowance must be made for high peak voltages which can cause unwanted crossover. (Refer to Paragraph 3-9c).

#### NOTE

When Model 6281A is operated continuously in the crossover region, between Constant Voltage/Constant Current, the feedback loop may break into oscillation; particularly in the 0.5A to 1.5A output current range. Although the crossover region is not usually an area of continuous operation, this problem can be eliminated, if necessary, by connecting the emitter of Q169 to a1 (instead of to the emitter of Q168) and modifying R107. Note that when this is done, the transient recovery time of Model 6281A must be derated to "50µsec for recovery to within 25mV" (instead of 15mV).

#### 3-11 CONNECTING LOAD

3-11a Each load should be connected to the power supply output terminals using separate pairs of connecting wires. This will minimize mutual coupling effects between loads and will obtain full advantage of the low output impedance of the power supply. Each pair of connecting wires should be as short as possible and twisted or shielded to reduce noise pick-up. (If shield is used, connect one end to power supply ground terminal and leave the other end unconnected.)

3-11b If load considerations require that the output power distribution terminals be remotely located from the power supply, then the power supply output terminals should be connected to the remote distribution terminals via a pair of twisted or shielded wires and each load separately connected to the remote distribution terminals. For this case, remote sensing should be used (Paragraph 3-10b).

#### 3-14 OPERATION OF SUPPLY BEYOND BASED OUTPUT

3-14a The shaded area on the front panel meter face indicates the amount of output voltage or current that is available in excess of the normal output. Although the supply can be operated in this shaded region without being damaged, it cannot be guaranteed to meet all of its performance specifications. However, if the line voltage is maintained above 115 Vac, the supply will probably operate within its specifications.

#### 3-16 OPTIONAL OPERATING MODES

##### 3-17 REMOTE PROGRAMMING, CONSTANT VOLTAGE

3-17a The constant voltage output of the power supply can be programmed (controlled) from a remote location if required. Either a resistance or voltage source can be used for the programming device. The wires connecting the programming terminals of the supply to the remote programming device should be twisted or shielded to reduce noise pick-up. The VOLTAGE controls on the front panel are disabled according to the following procedures.

 


Figure 3-3. Remote Resistance Programming (Constant Voltage)

3-17b Resistance programming (Figure 3-3). In this mode, the output voltage will vary at a rate determined by the programming coefficient, 100 ohms per volt (100 ohms per volt for Model 6294A). The output voltage will increase 1 volt for each 100 ohms (or 100 ohms added in series with the programming terminals). The programming coefficient is determined by the programming current. This current is factory adjusted to within 2% of 5 ma (2% of 1.2 ma for Model 6294A). If greater programming accuracy is required, it may be achieved by changing resistor R106.

3-17c The output voltage of the power supply should be zero volts  $\pm$ 30 millivolts when zero ohms is connected across the programming terminals.

3-17d To maintain the stability and temperature coefficient of the power supply, use programming resistors that have stable, low noise, and low temperature (less than 30 ppm per degree Centigrade) characteristics. A switch can be used in conjunction with various resistance values in order to obtain discrete output voltages. The switch should have make-before-break contacts to avoid momentarily opening the programming terminals during the switching interval.

3-17e Voltage Programming (Figure 3-4). Employ the wiring diagram shown on Figure 3-4 for voltage programming. In this mode, the output voltage will vary in a 1 to 1 ratio with the pro-



programming voltage (reference voltage) and the load on the programming voltage source will not exceed 25 microamperes.

 


Figure 3-4. Remote Voltage Programming (Constant Voltage)

3-13 The impedance matching resistors ( $R_0$ ) for the programming voltage source should be approximately 1000 ohms to maintain the temperature and stability specifications of the power supply.

### 3-14 REMOTE PROGRAMMING, CONSTANT CURRENT

3-25 Either a resistance or a voltage source can be used to control the constant current output of the supply. The CURRENT controls on the front panel are disabled according to the following procedure.

 


Figure 3-5. Remote Resistance Programming (Constant Current)

3-16 Resistance Programming (Figure 3-5). In this mode, the output current varies at a rate determined by the programming coefficient -- 100 ohms per ampere for Models 6283A and 6285A, 200 ohms per ampere for Models 6285A and 6291A, and 500 ohms per ampere for Models 6290A and 6294A. The programming coefficient is determined by the Constant Current programming current 1 mA for Models 6283A, 6285A, 6289A, and 6291A or 0.44 mA for Models 6290A and 6294A. This current is adjusted to within 10% at the factory. If greater programming accuracy is required, it may be achieved by changing resistor R938 as outlined in Section V.

3-27 Ultra stable, low noise, low temperature coefficient (less than 50 ppm/ $^{\circ}$ C) programming resistors to maintain the power supply temperature

coefficient and stability specifications. A switch may be used to set discrete values of output current. A make-before-break type of switch should be used since the output current will exceed the maximum rating of the power supply if the switch contacts open during the switching interval.

### CAUTION

If the programming terminals (A1 and A7) should open at any time during this mode, the output current will rise to a value that may damage the power supply and/or the load. To avoid this possibility, connect a 1K resistor (1.0K for Models 6290A and 6294A) across the programming terminals. Like the programming resistor, this resistor should be of the low noise, low temperature coefficient type.

3-28 Voltage Programming (Figure 3-6). In this mode, the output current will vary linearly with changes in the programming voltage. The programming voltage should not exceed 1.5 volts. Voltage in excess of 1.5 volts will result in excessive power dissipation in the instrument and possible damage.

 


Figure 3-6. Remote Voltage Programming (Constant Current)

3-27 The output current will be the programming voltage divided by the internal current sampling resistance R800. The current required from the voltage source will be less than 10 microamperes. The impedance matching resistor ( $R_0$ ) should be approximately 1000 ohms if the temperature coefficient and stability specifications of the power supply are to be maintained.

### 3-30 REMOTE SENSING (See Figure 3-7)

3-31 Remote sensing is used to maintain good regulation at the load and reduce the degradation of regulation which would occur due to the voltage drop in the leads between the power supply and the load. Remote sensing is accomplished by utilizing the strapping pattern shown in Figure 3-7. The power supply should be turned off before changing strapping patterns. It is not required

that these leads be as heavy as the load leads. However, they must be twisted or shielded to minimize noise pick-up.



Figure 3-7. Remote Sensing

#### CAUTION

Observe polarity when connecting the sensing leads to the load.

3-32 Note that it is desirable to minimize the drop in the load leads and it is recommended that the drop not exceed 1 volt per lead if the power supply is to meet its DC specifications. If a larger drop must be tolerated, please consult a Hewlett-Packard field representative.

#### NOTE

Due to the voltage drop in the load leads, it may be necessary to re-adjust the current limit in the remote sensing mode.

3-33 The procedure just described will result in a low DC output impedance at the load. If a low AC impedance is required, it is recommended that the following precautions be taken:

- Disconnect output capacitor C803 by disconnecting the strap between 42 and 45.
- Connect a capacitor having similar characteristics (approximately same capacitance, same voltage rating or greater, and having good high frequency characteristics) across the load using short leads.

3-34 Although the strapping patterns shown in Figures 3-3 through 3-6 employ local sensing, note that it is possible to operate a power supply simultaneously in the remote sensing and Constant Voltage/Constant Current remote programming modes.

#### 3-35 SERIES OPERATION

##### 3-36 Normal Series Connections (Figure 3-8).

Two or more power supplies can be operated in series to obtain a higher voltage than that available from a single supply. When this connection

 


Figure 3-8. Normal Series Connections

is used, the output voltage is the sum of the voltages of the individual supplies. Each of the individual supplies must be adjusted in order to obtain the total output voltage. The power supply contains a protective diode connected internally across the output which protects the supply if one power supply is turned off while its series partner(s) is on.

3-37 Auto-Series Connections (Figure 3-9). The Auto-Series configuration is used when it is desirable to have the output voltage of each of the series connected supplies vary in accordance with the setting of a control unit. The control unit is called the master; the controlled units are called slaves. At maximum output voltage, the voltage of the slaves is determined by the setting of the front panel VOLTAGE control on the master. The master supply must be the most positive supply of the series. The output CURRENT controls of all series units are operative and the current limit is equal to the lowest control setting. If any output CURRENT controls are not too low, automatic crossover to constant current operation will occur and the output voltage will drop. Remote sensing and programming can be used; however, the strapping arrangements shown in the applicable figures show local sensing and programming.

 


Figure 3-9. Auto-Series, Two Units

3-38 In order to maintain the temperature coefficient and stability specifications of the power supply, the external resistor ( $R_x$ ) shown in Figure 3-9 should be stable, low noise, low temperature coefficient (less than 20 ppm per degree Centigrade) resistors. The value of this resistor is dependent on the maximum voltage rating of the "master" supply. The value of  $R_x$  is this voltage divided by the voltage programming current of the slave supply  $I_p/K_p$  where  $K_p$  is the voltage programming coefficient. The voltage contribution of the slave is determined by its voltage control setting.

### 3-39 PARALLEL OPERATION

3-40 **Normal Parallel Connections (Figure 3-10).** Two or more power supplies can be connected in parallel to obtain a total output current greater than that available from one power supply. The total output current is the sum of the output currents of the individual power supplies. The output CURRENT controls of each power supply can be separately set. The output voltage controls of one power supply should be set to the desired output voltage; the other power supply should be set for a slightly larger output voltage. The supply set to the lower output voltage will act as a constant voltage source; the supply set to the higher output will act as a constant current source, dropping its output voltage until it equals that of the other supply. The constant voltage source will deliver only that fraction of its total rated output current which is necessary to fulfill the total current demand.

 


Figure 3-10. Normal Parallel Connections

3-41 **Auto-Parallel.** The strapping patterns for Auto-parallel operation of two power supplies are shown in Figure 3-11. Auto-Parallel operation permits equal current sharing under all load conditions, and allows complete control of output current from one master power supply. The output current of each slave will be approximately equal


 


Figure 3-11. Auto-Parallel, Two Units

to the master's regardless of the load conditions. Because the output current controls of each slave are operative, they should be set to maximum to avoid having the slave revert to constant current operation; this would occur if the master output current setting exceeded the slave's.

### 3-42 AUTO-TRACKING OPERATION (See Figure 3-12)

 

RESISTOR MUST BE HIGH PRECISION CONTROL

Figure 3-12. Auto-Tracking, Two Units

3-43 The Auto-Tracking configuration is used when it is necessary that several different voltages referred to a common bus, vary in proportion to the setting of a particular instrument (the control or master). A fraction of the master's output voltage is fed to the comparison amplifier of the slave supply, thus controlling the slave's output. The master must have the largest output voltage of any power supply in the group (least in the most positive supply in the example shown on Figure 3-12).

3-44 The output voltage of the slave is a percentage of the master's output voltage, and is determined by the voltage divider consisting of  $R_3$  and the voltage control of the slave supply,  $R_2$ , where:  $E_2 = R_2/R_3 + R_2$ . Turn-on and turn-off the power supplies is controlled by the master. Remote sensing and programming can be used; although the strapping patterns for these modes show only local sensing and programming. In order to maintain the temperature coefficient and stability specifications of the power supply, the external resistors should be stable, low noise, low temperature (less than 30 ppm per °C) resistors.

### 3-45 SPECIAL OPERATING CONSIDERATIONS

#### 3-46 PULSE LOADING

3-47 The power supply will automatically cross over from constant voltage to constant current operation, or the reverse, in response to an increase (over the preset limit) in the output current or voltage, respectively. Although the preset limit may be set higher than the average output current or voltage, high peak currents or voltages (as occur in pulse loading) may exceed the preset limit and cause crossover to occur. If this crossover limiting is not desired, set the preset limit for the peak requirement and not the average.

#### 3-48 OUTPUT CAPACITANCE

3-49 An internal capacitor, connected across the output terminals of the power supply, helps to supply high-current pulses of short duration during constant voltage operation. Any capacitance added externally will improve the pulse current capability, but will decrease the safety provided by the constant current circuit. A high-current pulse may damage load components before the average output

current is large enough to create the constant current circuit to operate.

3-50 The effects of the output capacitor during constant current operation are as follows:

- The output impedance of the power supply decreases with increasing frequency.
- The recovery time of the output voltage is longer for load resistance changes.
- A large surge current causing a high power dissipation in the load occurs when the load resistance is reduced rapidly.

#### 3-51 REVERSE VOLTAGE LOADING

3-52 A diode is connected across the output terminals. Under normal operating conditions, the diode is reverse biased (anode connected to negative terminal). If a reverse voltage is applied to the output terminals (positive voltage applied to negative terminal), the diode will conduct, shunting current across the output terminals and limiting the voltage to the forward voltage drop of the diode. This diode protects the series transistors and the output electrolytic capacitor.

#### 3-53 REVERSE CURRENT LOADING

3-54 Active loads connected to the power supply may actually deliver a reverse current to the power supply during a portion of its operating cycle. An external source cannot be allowed to pump current into the supply without loss of regulation and possible damage to the output capacitor. To avoid these effects, it is necessary to pre-load the supply with a dummy load resistor so that the power supply delivers current through the entire operating cycle of the load device.

SECTION IV  
PRINCIPLES OF OPERATION

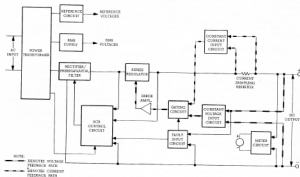


Figure 4-1. Overall Block Diagram

4-1 OVERALL BLOCK DIAGRAM DISCUSSION

4-2 The power supply, as shown on the overall block diagram on Figure 4-1, consists of a power transformer, a rectifier-pereregulator-filter, pereregulator (SCR) control circuit, series regulator, error amplifiers, gating circuit, a constant voltage input circuit, a constant current input circuit, a fault input circuit, a reference circuit, bias supply, and a meter circuit.

4-3 The input line voltage is reduced to the proper level by the power transformer and coupled to a rectifier bridge consisting of two rectifier diodes and two SCR's. The bridge simultaneously performs the necessary rectifying and pereregulating functions. The SCR's, operating in conjunction with a control circuit, minimize the power dissipated by the series regulator by keeping the voltage drop across the regulator at a low and constant level. The SCR control circuit accom-

plishes this by issuing a firing pulse to one of the SCR's once during each half cycle of the input ac. The control circuit continuously samples the output voltage, the input line voltage, and the voltage across the series regulator and, on the basis of these inputs, determines at what time during each half cycle that the firing pulse will be generated.

4-4 The series regulator, part of another feedback loop, is made to alter its conduction to maintain a constant output voltage or current. Its conduction varies in accordance with feedback control signals obtained from the error amplifier. It should be noted that the series regulator provides fine and "fast" regulation of the output, while the pereregulator handles large relatively "slow" regulation demands. The dc current from the series regulator passes through a current sampling resistor before reaching the positive output terminal.



4-5 The feedback signals that control the conduction of the series regulator are originated within the constant voltage input circuit in the constant current input circuit. The output voltage of the power supply is sampled by the constant voltage input circuit by means of the sensing terminals (45). The voltage developed across the current sensing resistor is the input to the constant current input circuit. This voltage drop varies in direct proportion to the output current. Any changes in output voltage/current are detected in the constant voltage/constant current input circuit, amplified by the gating and error amplifiers, and applied to the series regulator in the current phase and amplitude to counteract the changes.

4-6 The fault input circuit detects the presence of overvoltage or overcurrent conditions and generates the necessary turn-down signals to the SCR control circuit in the series regulator circuit. In the case of an overvoltage condition, a turn-down signal is applied to the SCR control circuit. The series regulator receives a turn-down signal via the gating circuit if an overcurrent condition is detected.

4-7 The reference circuit provides stable reference voltages which are used by the constant voltage/current input circuits for comparison purposes. The bias supply furnishes voltages which are used throughout the instrument for biasing purposes. The meter circuit provides an indication of output voltage or current in one of two ranges.

#### 4-8 SIMPLIFIED SCHEMATIC

4-9 A simplified schematic of the power supply is shown in Figure 4-2. It shows the operating controls; the ON-off pushbutton, the voltage programming controls (R813 and R814) and the current programming controls (R828 and R829). The METER switch, included in the meter circuit block on Figure 4-2, allows the meter to read output voltage or current in one of two ranges. Figure 4-2 also shows the internal sources of bias and reference voltages and their nominal magnitudes with an input of 115 Vac and no load connected. Diode CR69, connected across the output terminals of the power supply, is a protective device which prevents internal damage that might occur if a reverse voltage were applied across the output terminals. Output capacitor, C889 stabilizes the feedback loop when the normal strapping pattern shown in Figure 4-3 is employed. Note that this capacitor can be removed if an increase in the programming speed is desired. Under these conditions, capacitor C891 serves to insure loop stability. Resistor R811 and R812 limit the output of the supply if the straps between the output and sensing terminals are inadvertently opened.

#### 4-10 DETAILED CIRCUIT ANALYSIS

##### 4-11 PREREGULATOR AND CONTROL CIRCUIT

4-12 The preregulator maintains changes in the power dissipated by the series regulator due to output voltage or input line voltage changes. Preregulation is accomplished by means of a phase control circuit utilizing SCR's CR594 and CR593 as the switching elements. The approximate SCR is fired once during each half-cycle (8.33 milliseconds) of the rectified ac (see Figure 4-3). Notice that when the SCR is fired at an early point during the half-cycle, the dc level applied to the series regulator is fairly high. When the SCR is fired later during the cycle, the dc level is relatively low.

 


Figure 4-3. SCR Phase Control of DC Input Level

4-13 The SCR control circuit (See Figure 4-8) samples the input line voltage, the output voltage, and the voltage across the series transistor. It generates a firing pulse, at the time required, to fire the SCR so that the voltage across input capacitor C190 will be maintained at the desired level.

4-14 The inputs to the control circuit are algebraically summed across capacitor C786. All inputs contribute to the time required to charge C786. The input line voltage is rectified by CR784 through CR787, attenuated by voltage divider R788 and R791, and applied to the summing point at TP 55 via capacitor C788. Capacitor C791 is used for smoothing purposes.

4-15 Transistor Q701, connected in a common base configuration, provides a charging current for the summing capacitor which varies in accordance with the input signals applied to its emitter.





diagram. The firing pulse is relatively narrow because Q700 saturates rapidly causing the magnetic field surrounding T700 to collapse. Diode CR500 clamps out the negative overshoot.

4-17 Reset of the control circuit occurs once every 8.33 milliseconds when the rectified ac voltage at test point 52 recedes to a level at which diode CR700 becomes forward biased. Timing capacitor C700 is then allowed to discharge through CR700. Diodes CR710 and CR710 become reverse biased at reset and transistor Q701 reverts to its "on" state. Consequently, Q700 is turned off and capacitor C700 charges up through R703 at a comparatively slow rate until the collector voltage of Q700 reaches approximately +17 volts. The above action causes the small negative spike that appears across the winding of pulse transformer T700 at reset time.

4-18 Capacitor C900, diode CR900, and resistor R900 form a long time constant network which achieves a slow turn-on characteristic. When the unit is first turned on, C900 provides a positive voltage to the cathode of CR711 to ensure that it is initially reverse biased. After C900 becomes fully charged, the control circuit is permitted to fire the SCR's. Diode CR902 provides a discharge path for C900 when the unit is turned off.

#### 4-19 SERIES REGULATOR

4-20 The series regulator (transistor Q400 or Q400 and Q401, see schematic at rear of manual)

operates as the series, or "pass", element which provides precise and rapid control of the output. The conduction of the series transistor(s) is controlled by the feedback signals obtained from driver Q301. Diode CR400, connected across the regulator circuit, protects the series element(s) from reverse voltages that could develop across them during parallel operation if one supply is turned on before the other.

#### 4-21 CONSTANT VOLTAGE INPUT CIRCUIT (See Figure 4-6)

4-22 The circuit consists of the programming resistors (R811 and R810) and a differential amplifier stage (Q100) and associated components. Transistor Q100 consists of two silicon transistors housed in a single package. The transistors have matched characteristics minimizing differential voltages due to mismatched stages. Moreover, drift due to thermal differentials is minimized, since both transistors operate at essentially the same temperature.

4-23 The constant voltage input circuit continuously compares a fixed reference voltage with a portion of the output voltage and, if a difference exists, produces an error voltage whose amplitude and phase is proportional to the difference. The error output is fed back to the series regulator, through the gating and error amplifiers. The error voltage changes the conduction of the series regulator which, in turn, alters the output voltage

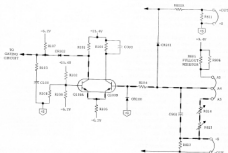


Figure 4-6. Constant Voltage Input Circuit, Simplified Schematic

so that the difference between the two input voltages applied to the differential amplifier is reduced to zero. This action maintains the output voltage constant.

4-24 Stage Q100A of the differential amplifier is connected to a common (0) potential through impedance equalizing resistor R104. Resistors R102 and R106 are used to zero bias the input stage, offsetting minor bias to emitter voltage differences in Q100. The base of Q100B is connected to a summing point (A0) at the junction of the programming resistors and the current pulloff resistor R105. Instantaneous changes in the output like to load variations or changes due to the manipulation of R111, result in an increase or decrease in the summing point potential. Q100B is then made to conduct more or less, in accordance with summing point voltage change. The change in Q100B's conduction also varies the conduction of Q100A due to the coupling effects of the common emitter resistor, R106. The "error" voltage is taken from the collector of Q100A and ultimately varies the conduction of the series regulator.


4-25 Resistor R104, in series with the base of Q100B, limits the current through the programming resistors during rapid voltage turn-downs. Diodes CR100 and CR101 form a clamping network which prevents excessive voltage excursions from over driving stage Q100B. Capacitor CR01, shunting

the programming resistors, increases the high frequency gain of the input amplifier. Resistor R104, shunting the pulloff resistor, serves as a trimming adjustment for the programming current. Diode CR102 establishes the proper collector bias for Q100A while R101 and C100 provide low frequency equalization for the feedback loop.

4-26 CONSTANT CURRENT INPUT CIRCUIT (See Figure 4-7)

4-27 This circuit is similar in appearance and operation to the constant voltage input circuit. It consists of the coarse and fine current programming resistors (R200 and R210), and a differential amplifier stage (Q200 and associated components). Like transistor Q100 in the voltage input circuit, Q200 consists of two transistors, having matched characteristics, that are housed in a single package.

4-28 The constant current input circuit continuously compares a fixed reference voltage with the voltage drop across the current sampling resistor. If a difference exists, the differential amplifier produces an "error" voltage which is proportional to this difference. The remaining components in the feedback loop (amplifiers and series regulated) function to maintain the drop across the current sampling resistor, and consequently the output current, at a constant value.

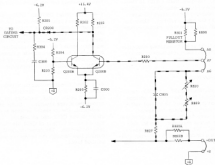

4-29 Stage Q188A is connected to  $V_{CC}$  through impedance equalizing resistor R21A. Instantaneous changes in output current on the positive line are felt at the current sensing point (terminal A7) and, hence, the base of Q188. Stage Q188B varies its conduction in accordance with the polarity of the change at the sensing point. The error voltage is taken from the collector Q188B and ultimately varies the conduction of the series regulator.

4-30 Resistor R20A, in conjunction with C100, helps stabilize the feedback loop. Resistor R20B, shunting the parallel resistor, serves as a trimming adjustment for the programming current flowing through R20A and R103.

#### 4-31 GATING CIRCUIT

4-31 The gating circuit (see schematic) consists of gating amplifiers Q191 and Q192 and associated OR-gate diodes, CR104 and CR101. The gating circuit provides sharp crossover between constant voltage and constant current operation. During steady state conditions, one transistor is saturated while the other is conducting in its linear region. The cathodes of the OR-gate diodes are always at a more positive potential than the anode potential of Q191 or Q192. Thus, the diode associated with the saturated transistor is reverse biased while the diode associated with the other transistor is forward biased. In the constant voltage mode Q191 is operating in its linear region and Q192 is saturated due to the positive collector voltage of Q191B. OR-gate diode CR101 is therefore reverse biased, coupling the constant voltage feedback signal to the error amplifier. Opposite conditions prevail during constant current operation.

4-32 Capacitor C100 is a compensating capacitor which improves the transient response of the unit. Resistor R100 is the biasing resistor for the OR-gate diodes.

#### 4-33 ERROR AMPLIFIERS

4-33 The error amplifiers Q193 and Q194, amplify the feedback signal from the constant voltage or constant current input circuit to a level sufficient to drive the series regulator transistors. Transistor Q193 serves as the driver and Q194 the predriver, for the series regulator. The RC network, composed of C101 and R107, is an equalizing network which provides for high frequency roll-off in the loop gain response in order to stabilize the feedback loop.

4-34 Capacitor C102, diode CR101, and resistor R102 form a long time constant network which addresses a slow turn-on characteristic. When the unit is first turned on, C102 provides a positive voltage to the base of Q192 keeping the series regulator from conducting initially. As C102 charges up, the restriction bias becomes less positive enabling the regulator to conduct. Diode CR102 provides a low resistance discharge path for C102 when the unit is turned off.

#### 4-37 FIRST INPUT CIRCUIT

4-37 The first input circuit (see schematic at rear) protects the power supply against overvoltage and overcurrent conditions. Transistor Q195, and associated components, comprise the overvoltage detector. With normal output voltages Q195 is cut off due to the  $+15.4V$  reference voltage connected to the top of voltage divider R122 and R121. If the output voltage exceeds a certain limit (about 20% above the maximum rated output voltage) transistor Q195 is driven into conduction. Current is then conducted away from the sensing point and in opposition to the charge path of C100 in the SCR control circuit. As a result, the SCR's are fired at a later time, reducing the series regulator input voltage to a safe value.

4-38 A full wave rectified voltage, obtained from the SCR control circuit, exercises a stabilizing influence on transistor Q196. This signal tends to synchronize the conduction of Q196 at a 120 Hz rate preventing random firing of the SCR's.

4-39 Transistors Q197 and Q198 provide overcurrent and short circuit protection for the unit. Overcurrent protection is accomplished by Q197 which is activated only if the constant current input circuit should fail. Q198 monitors the voltage drop across the current sensing resistor and contacts if this drop exceeds a certain level. The output of Q197 is fed to gating amplifier Q191 via R115 and ultimately reduces the conduction of the series regulator.

4-40 Short circuit protection is provided by transistors Q199 and Q200. Transistor Q199, normally biased below cutoff, senses the voltage drop across the series regulator. Under short circuit conditions, the increased voltage across the regulator drives Q199 into saturation. The positive going emitter voltage of Q199 also drives Q200 into conduction. The output of Q200 limits the current flow through the series regulator to a prescribed level.

4-42 REFERENCE CIRCUIT (See Schematic at Rear)

4-43 The reference circuit is a feedback power supply similar to the main supply. It provides stable reference voltages which are used throughout the unit. The reference voltages are all derived from smoothed dc obtained from the full wave rectifier (CR600 and CR601) and filter capacitor C600. The +9.4 and -6.2 voltages are developed across temperature compensated Zener diodes VR600 and VR601. Resistor R611 limits the current through the Zener diodes to establish an optimum bias level.

4-44 The regulating circuit consists of series regulating transistor Q600, error amplifier Q601, and differential amplifier Q602 and Q603. The voltage across the Zener reference diode VR600 and the voltage at the junction of divider R605 and R606 are compared, and any differences are de-

TECTED by Q602 and Q603. The error voltage is amplified and inverted by Q601 and applied to series regulator Q600 in the correct phase and amplitude to maintain the +15.4 volt output constant.

4-45 Zener diode VR601 provides an additional bias voltage of -6.2 volts. Resistor R601, connected across Q600, minimizes power dissipation in the series element. Output capacitor C602 stabilizes the reference regulator loop.

4-46 METER CIRCUIT

4-47 The meter circuit (see Figure 4-8) provides continuous indications of output voltage or current on a single multiple range meter. The meter can be used either as a voltmeter or an ammeter depending upon the position of METER switch S2 on the front panel of the supply. This switch

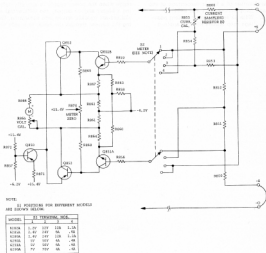


Figure 4-8. Meter Circuit, Simplified Schematic

also selects one of two meter ranges on each scale. The metering circuit consists basically of a selection circuit (switch S2 and associated voltage dividers), a stable differential amplifier stage (Q851A and Q851B), two meter amplifiers (Q852 and Q853), and the meter movement.

4-48 The selection circuit determines which voltage divider is connected to the differential amplifier input. When S2 is in one of the voltage positions, the voltage across divider R850, R851, and R852 (connected across the output of the supply) is the input to the differential amplifier. When S2 is in one of the current positions, the voltage across divider R853, R854, and R855 (connected across the sampling resistor) is the input to the differential amplifier. With S2 in the higher voltage range (position 2) the voltage drop across R852 is applied to stage Q851A while stage Q851B is grounded to the +S terminal. For low output voltages, S2 can be set to position (1) resulting in the application of a larger percentage of the output voltage (drop across R851 and R852) to stage Q851A. With S2 in the higher current position (3) the voltage drop across R853 is applied

to stage Q851B while stage Q851A is grounded to the +S terminal. In the low current range, the voltage drop across R853 and R854 is applied to Q851B.

4-49 Differential amplifier stage Q851 is a stable device having a fixed gain of ten. To minimize temperature effects, the two stages are housed in a single package that is similar to those used in the constant voltage and current input circuits. The outputs of the differential amplifier drive meter amplifiers Q852 and Q853 which, in turn, deflect the meter. Transistor Q850 provides a constant bias current to the emitters of Q852 and Q853. Potentiometer R870 permits electrical zeroing of the meter.

4-50 The meter circuit contains an inherent current limiting feature which protects the meter movement against overloads. For example, if METER switch S2 is placed in the low current range when the power supply is actually delivering a higher ampere output, the differential amplifiers are quickly driven into saturation, limiting the current through the meter to a safe value.

## SECTION V MAINTENANCE

### 5-1 INTRODUCTION

5-2 Upon receipt of the power supply, the performance check (Paragraph 5-10) should be made. This check is suitable for incoming inspection. If a fault is detected in the power supply while making the performance check or during normal operation, proceed to the troubleshooting procedures (Paragraph 5-25). After troubleshooting and repair (Paragraph 5-35), perform any necessary adjustments and calibrations (Paragraph 5-37). Before returning the power supply to normal operation, repeat the performance check to assure that the fault has been properly corrected and that no other faults exist. Before doing any maintenance checks, turn-on power supply, allow a half-hour warm-up, and read the general information regarding measurement techniques (Paragraph 5-4).

### 5-3 GENERAL MEASUREMENT TECHNIQUES

5-4 The measuring device must be connected across the sensing leads of the supply or as close to the output terminals as possible when measuring the output impedance, transient response, regulation, or ripple of the power supply in order to achieve valid measurements. A measurement made across the load includes the impedance of the leads to the load and such lead lengths can easily have an impedance several orders of magnitude greater than the supply impedance, thus invalidating the measurement.

5-5 The monitoring device should be connected to the +5 and -5 terminals (see Figure 5-2) or as shown in Figure 5-1. The performance characteristics should never be measured on the front terminals if the load is connected across the rear terminals. Note that when measurements are made at the front terminals, the monitoring leads are connected at A, not B, as shown in Figure 5-1. Failure to connect the measuring device at A will result in a measurement that includes the resistance of the leads between the output terminals and the point of connection.

5-6 For output current measurements, the current sampling resistor should be a four-terminal resistor. The four terminals are connected as shown in Figure 5-2. In addition, the resistor should be of the low noise, low temperature coefficient (less than 30 ppm/°C) type and should be used at no more than 5% of its rated power so that its temperature rise will be minimized.

 


Figure 5-1. Front Panel Terminal Connections



Figure 5-2. Output Current Measurement Technique

5-7 When using an oscilloscope, ground one terminal of the power supply and then ground the case of the oscilloscope to this same point. Make certain that the case is not also grounded by some other means (power line). Connect both oscilloscope input leads to the power supply ground terminal and check that the oscilloscope is not exhibiting a ripple or transient due to ground loops, pick-up, or other means.

### 5-8 TEST EQUIPMENT REQUIRED

5-9 Table 5-1 lists the test equipment required to perform the various procedures described in this Section.

Table 5-1. Test Equipment Required

Type	Required Characteristics	Use	Recommended Model
Differential Voltmeter	Sensitivity: 1 mv full scale (min.), Input impedance: 10 megohms (min.).	Measure DC voltages; calibration procedures	Ⓢ 342B See Note!
Variable Voltage Transformer	Range: 90-130 volts, Equipped with voltmeter accurate within 1 volt.	Vary AC Input	-----
AC Voltmeter	Accuracy: 2%. Sensitivity: 1 mv full scale deflection (min.).	Measure AC voltages and ripple	Ⓢ 403 B
Oscilloscope	Sensitivity: 100 $\mu$ v/cm, Differential input.	Display transient response waveforms	Ⓢ 140 A plus 1400A plug in.
Oscillator	Range: 5Hz to 1 MHz, Accuracy: 2%.	Impedance checks	Ⓢ 200 CD
DC Voltmeter	Accuracy: 1%, Input resistance: 20,000 ohms/volt (min.).	Measure DC voltages	Ⓢ 412 A
Repetitive Load Switch	Rate: 60 — 400 Hz, 2 $\mu$ sec rise and fall time.	Measure transient response	See Figure 5-7
Resistive Loads	Value: See Paragraph 5-14, and Figure 5-4. $\pm$ 5% 250 watts.	Power supply load resistors	-----
Current Sampling Resistor	Value: See Figure 5-4, 1%, 200 watts, 20ppm, 4-Terminal.	Measure current; calibrate meter	-----
Resistor	1%, $\pm$ 1%, 2 watt non-inductive	Measure impedance	-----
Resistor	100 ohms, $\pm$ 5%, 10 watt	Measure impedance	-----
Resistor	Value: See Paragraph 5-45, $\pm$ 0.1%, 20 watt.	Calibrate programming current	-----

Type	Required Characteristics	Use	Recommended Model
Resistor	Value: See Paragraph 5-47. ±0.1%, 1/2 watt.	Calibrate programming current	-----
Capacitor	500 $\mu$ f, 50 vdc	Measure impedance.	-----
Decade Resistance Box	Range: 0-500K. Accuracy: 0.1% plus 1 ohm Make-before-break contacts.	Measure programming coefficients.	-----

#### NOTE

A satisfactory substitute for a differential voltmeter is to arrange a reference voltage source and null detector as shown in Figure 5-3. The reference voltage source is adjusted so that the voltage difference between the supply being measured and the reference voltage will have the required resolution for the measurement being made. The voltage difference will be a function of the null detector that is used. Examples of satisfactory null detectors are:  $\frac{1}{2}$  415 A null detector, a DC coupled oscilloscope utilizing differential input, or a 50 mv meter movement with a 100 division scale. For the latter, a 2 mv change in voltage will result in a meter deflection of four divisions.

#### CAUTION

Care must be exercised when using an electronic null detector in which one input terminal is grounded to avoid ground loops and circulating currents.

 


Figure 5-3. Differential Voltmeter Substitute Test Setup

#### 5-10 PERFORMANCE TEST

5-11 The following test can be used as an incoming inspection check and appropriate portions of the test can be repeated either to check the operation of the instrument after repairs or for periodic maintenance tests. The tests are performed using a 115-WAC 60 cps., single phase input power source. If the correct result is not obtained for a particular check, do not adjust any controls; proceed to troubleshooting (Paragraph 5-28).



### 5-12 CONSTANT VOLTAGE TESTS

#### 5-13 Rated Output and Meter Accuracy.

5-14 Voltage. Proceed as follows:

- Connect load resistor across rear output terminals of supply. Resistor value to be as follows:  
**Model** 6212A 6215A 6218A 6220A 6225A 6230A  
**Res.** 1 $\Omega$  4 $\Omega$  2 $\Omega$  11 $\Omega$  8 $\Omega$  25 $\Omega$
- Connect differential voltmeter across +S and -S terminals of supply observing correct polarity.
- Set METER switch to highest voltage range and turn on supply.
- Adjust VOLTAGE controls until front panel meter indicates exactly the maximum rated output voltage.
- Differential voltmeter should indicate maximum rated output voltage within  $\pm 2\%$ .

5-15 Current. Proceed as follows:

- Connect test setup shown in Figure 5-4, leaving switch S1 open.
- Turn CURRENT controls fully clockwise.
- Set METER switch to highest current range and turn on supply.
- Adjust VOLTAGE controls until front panel meter indicates exactly the maximum rated output current.
- Differential voltmeter should read 1.0  $\pm$  0.02 Vdc.

 


Figure 5-4. Output Current Test Setup

5-16 Load Regulation. To check constant voltage load regulation, proceed as follows:

- Connect test setup as shown in Figure 5-5.
- Turn CURRENT controls fully clockwise.
- Set METER switch to highest current range and turn on supply.

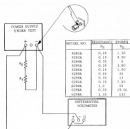


Figure 5-5. Load Regulation, Constant Voltage

- Adjust VOLTAGE controls until front panel meter indicates exactly the maximum rated output voltage.
- Read and record voltage indicated on differential voltmeter.
- Disconnect load resistors.
- Reading on differential voltmeter should not vary from reading recorded in step a by more than the following variations expressed in mVdc:  
**Model** 6212A 6215A 6218A 6220A 6225A 6230A  
**Variation**  $\pm 2$   $\pm 8$   $\pm 3$   $\pm 5$   $\pm 5$   $\pm 7$

#### NOTE

If measurements are made at the front terminals, readings will be 0.5mV per amp greater due to front terminal resistance.

5-17 Line Regulation. To check the line regulation, proceed as follows:

- Connect variable auto transformer between power source and power supply power input.
- Turn CURRENT controls fully clockwise.
- Connect test setup shown in Figure 5-5.
- Adjust variable auto transformer for 105 VAC input.
- Set METER switch to highest voltage range and turn on supply.
- Adjust VOLTAGE controls until front panel meter indicates exactly the maximum rated output voltage.
- Read and record voltage indicated on differential voltmeter.
- Adjust variable auto transformer for 125 VAC input.

l. Reading on differential voltmeter should not vary from reading recorded in step g by more than the following variations expressed in mVdc: Model 4282A 4285A 4286A 4290A 4291A 4296A Variation ±2 ±3 ±3 ±5 ±5 ±7

5-18 **Ripple and Noise.** To check the ripple and noise, proceed as follows:

- Retain test setup used for previous line regulation test except connect AC voltmeter across output terminals as shown in Figure 5-6.
- Adjust variable auto transformer for 125 WAC input.
- Set METER switch to highest current range.
- Turn CURRENT controls fully clockwise and adjust VOLTAGE controls until front panel meter indicates exactly the maximum rated output voltage.
- AC voltmeter should read less than 0.50Vrms.

 


Figure 5-6. Ripple and Noise, Constant Voltage

5-19 **Transient Recovery Time.** To check the transient recovery time proceed as follows:

- Connect test setup shown in Figure 5-7.
- Turn CURRENT controls fully clockwise.
- Set METER switch to highest current range and turn on supply.
- Adjust VOLTAGE controls until front panel meter indicates exactly the maximum rated output current or 5 amperes, whichever is smaller.
- Close line switch on repetitive load switch setup.

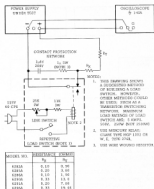


Figure 5-7. Transient Response, Test Setup

l. Adjust 25K potentiometer until a stable display is obtained on oscilloscope. Waveforms should be within the tolerances shown in Figure 5-8 (output should return to within 15 mV of original value in less than 50 microseconds).

 


Figure 5-8. Transient Response Waveforms

5-20 **Output Impedance.** To check the output impedance, proceed as follows:

- Connect test setup shown in Figure 5-9.

 


Figure 5-9. Output Impedance. Test Setup.

h. Set METER switch to highest voltage range turn CURRENT controls fully clockwise, and turn on METER.

a. Adjust VOLTAGE controls until front panel meter reads 10 volts.

d. Set AMPLITUDE control on Oscillator to 10 volts ( $E_{in}$ ), and FREQUENCY control to 100Hz.

e. Record voltage across output terminals of the power supply ( $E_o$ ) as indicated on AC voltmeter.

f. Calculate the output impedance by the following formula:

$$Z_{out} = \frac{E_{in} R}{E_{in} - E_o}$$

$E_o$  = rms voltage across power supply output terminals.

$R$  = 1000

$E_{in}$  = 10 volts

g. The output impedance ( $Z_{out}$ ) should be less than 0.001 ohm.

h. Using formula of step f, calculate output impedance at frequencies of 10Hz, 100Hz, and 1000Hz. Values should be less than 0.01 ohm, 0.2 ohm, and 1 ohm, respectively.

## 5-21 CONSTANT CURRENT TESTS

5-21 Load Regulation. To check the constant current load regulation, proceed as follows:

a. Connect test setup shown in Figure 5-4.

b. Turn VOLTAGE controls fully clockwise.

c. Set METER switch to highest current range and turn on supply.

d. Adjust CURRENT controls until front panel meter reads exactly the maximum rated output current.

e. Read and record voltage indicated on differential voltmeter.

f. Short out load resistor ( $R_L$ ) by closing switch  $S_1$ .

g. Reading on differential voltmeter should not vary from reading recorded in step e by more than the following (variations expressed in mVdc):  
Model 6282A 6282A 6282A 6282A 6282A 6282A  
Variation 01.60 02.20 03.00 03.80 04.70 05.60

5-22 Line Regulation. To check the line regulation, proceed as follows:

a. Utilize test setup shown in Figure 5-4 leaving switch  $S_1$  open throughout test.

b. Connect variable auto transformer between input power source and power supply power input.

c. Adjust auto transformer for 100WAC input.

d. Turn VOLTAGE controls fully clockwise.

e. Set METER switch to highest current range and turn on supply.

f. Adjust CURRENT controls until front panel meter reads exactly the maximum rated output current.

g. Read and record voltage indicated on differential voltmeter.

h. Adjust variable auto transformer for 125 WAC input.

i. Reading on differential voltmeter should not vary from reading recorded in step g by more than the following (variations expressed in mVdc):  
Model 6282A 6282A 6282A 6282A 6282A 6282A  
Variation 01.60 02.20 03.00 03.80 04.70 05.60

5-24  Ripple and Noise. To check the ripple and noise, proceed as follows:

a. Use test setup shown in Figure 5-4, except connect AC voltmeter across sampling resistor instead of differential voltmeter.

b. Rotate VOLTAGE controls fully clockwise.

c. Set METER switch to highest current range and turn on supply.

d. Adjust CURRENT controls until front panel meter indicates exactly the maximum rated output current.

e. Turn range switch on AC voltmeter to 1mV position.

f. The AC voltmeter should read as follows: (Readings are expressed in mVdc)

Model 6282A 6282A 6282A 6282A 6282A 6282A  
Reading 0.50 0.60 0.50 1.0 0.5 1.0

## 5-25 TROUBLESHOOTING

5-25 Components within Hewlett-Packard power supplies are conservatively operated to provide maximum reliability. In spite of this, parts within a supply may fail. Usually the instrument must be immediately repaired with a minimum of "downtime" and a systematic approach as outlined in succeeding paragraphs can greatly simplify and speed up the repair.

## 5-17 TROUBLE ANALYSIS

**5-18 General.** Before attempting to trouble shoot this instrument, ensure that the fault is with the instrument and not with an associated circuit. The performance test (Paragraph 5-10) enables this to be determined without having to remove the instrument from the cabinet.

**5-19** Once it is determined that the power supply is at fault, check for obvious troubles such as open fuse, a defective power cable, or an input power failure. Next, remove the top and bottom covers (each held by four retaining screws) and inspect for open connections, charred components, etc. If the trouble source cannot be detected by visual inspection, follow the detailed procedure outlined in succeeding paragraphs. Once the defective component has been located (by means of visual inspection or trouble analysis) correct it and re-conduct the performance test. If a component is replaced, refer to the repair and replacement and adjustment and calibration paragraphs in this section.

**5-20** A good understanding of the principles of operation is a helpful aid in troubleshooting, and it is recommended that the reader review Section IV of the manual before attempting to troubleshoot the unit in detail. Once the principles of operation are understood, logical application of this knowledge used in conjunction with the normal voltage readings and waveforms shown on the schematic and the additional procedures given in the following paragraphs should enable to isolate a fault to a component or small group of components. The component location diagram at the rear of the manual can be consulted to determine the location of components and test points. The normal voltages shown on the schematic are positioned adjacent to the applicable test points (identified by circled numbers on the schematic and component location diagram). Additional test procedures that will aid in isolating trouble are as follows:

a. Reference circuit check (Paragraph 5-31). This circuit provides critical operating voltages for the supply and faults in the circuit could effect the overall operation in many ways. This circuit should be checked first, before proceeding to other areas of the unit.

b. Series regulator and pre-regulator feedback loop checks (Paragraph 5-32).

c. Procedures for dealing with common troubles (Paragraph 5-33).

### 5-31 Reference Circuit.

a. Make an ohmmeter check to be certain that neither the positive nor negative output terminal is grounded.

b. Turn front-panel VOLTAGE and CURRENT controls fully clockwise (maximum).

c. Turn on power supply (no load connected).

d. Proceed as instructed in Table 5-2.

**5-32 Series Regulator and Pre-regulator Feedback Circuits.** Generally, malfunction of these two feedback circuits is indicated by high or low (or no) output voltage. If one of these situations occur, disconnect the load and proceed as instructed in Table 5-3 or 5-4. Pre-regulator waveforms are included on the schematic at the rear of the manual.

**5-33 Common Troubles.** Table 5-6 lists the symptoms, checks, and probable causes for common troubles.

## 5-34 REPAIR AND REPLACEMENT

**5-35** Before servicing a printed wiring board, refer to Figure 5-10. Section VI of this manual contains a list of replaceable parts. Before replacing a semiconductor device, refer to Table 5-7 which lists the special characteristics of selected semiconductors. If the device to be replaced is not listed in Table 5-7, the standard manufacturer's part number listed in Section VI is applicable. After replacing a semiconductor device, refer to Table 5-8 for checks and adjustments that may be necessary.

Table 5-2. Reference Circuit Troubleshooting

Step	Meter Common	Meter Positive	Normal Indication	If Indication Abnormal, Take This Action
1	+B	1B	9, 4 $\pm$ 0.5Vdc	Check 1B, 4 volt bias or VR001
2	1B	+B	6, 2 $\pm$ 0.5Vdc	Check diode VR002
3	+B	3B	15, 4 $\pm$ 0.5Vdc	Check R605, Q606 through Q608, C640, C660, and C661.

Table 5-3. High Output Voltage Troubleshooting

Step	Measure	Response	Probable Cause
1	Voltage between TP26 and TP90	a. 0V or negative b. More positive than 0V	a. Q400 (Q401) shorted CR400 shorted b. Q303 open or R309 shorted Proceed to Step 2
2	Voltage between #8 and A4	a. 0V to +0.8V b. More negative than 0V	a. Open strap A3-A4 R813 or R814 open R805 or R806 shorted b. Proceed to Step 3
3	Voltage between #8 and 11	a. More positive than +1.5V b. +0.9V to +1.5V	a. Q100B shorted Q100A open b. Proceed to Step 4
4	Voltage between #8 and 21	a. More negative than 0V	a. Q302 open Q301 open R305, R300 shorted

Table 5-4. Low Output Voltage Troubleshooting

Step	Measure	Response	Probable Cause
1	Voltage between TP26 and TP90	a. More positive than 0V b. 0V or negative	a. Proceed to Step 2 b. Proceed to Step 3
2	Voltage between TP90 and TP27	a. Less positive than +4V b. More positive than +5V	a. Check fuse F1. If blown check CR502 or CR504 for short. If not blown, proceed to Table 5-5. b. Q400 (Q401) open Proceed to Step 3
3	Disable Q300 by disconnecting CR200	a. Normal output voltage b. Low output voltage	a. Constant Current circuit faulty: check Q200B, R810, R809, for short. b. If supply is furnishing current without load, check CR809, C802, or C803 for short. If it is not, proceed to Step 3
4	Voltage between #8 and A4	a. More negative than 0V	a. Open strap A4-A5 R813, R814, C801 Proceed to Step 5

Table 5-4. Low Output Voltage Troubleshooting (Continued)

Step	Measure	Response	Probable Cause
5	Voltage between +8 and 11	a. Less positive than +0.9V b. +0.9V to +1.5V	a. Q108 open Q108A shorted Q802 or Q801 shorted b. Proceed to Step 6
6	Voltage between +8 and 21	a. 0V or positive	a. Q303 shorted Q302 shorted R310 shorted

Table 5-5. Preregulator/Control Circuit Troubleshooting

Step	Measure	Response	Probable Cause
1	Waveform between 4 and 3 of T700	a. Normal firing pulse b. No or abnormal firing pulse	a. CR502-CR504 defective R501-R502 open CR501, CR503, T800 defective b. T700 open CR500 shorted Proceed to Step 2
2	Waveform between 90 and 47	a. Zero or small positive voltage b. +14 to +20 Volt level c. Waveform distorted	a. Q700 shorted C703 shorted Q701 open R703, primary T700 open Proceed to Step 3 b. Q700 open R703 shorted Q701 shorted Proceed to Step 3 c. Proceed to Step 3
3	Waveform between 90 and 59	a. Amplitude incorrect b. Period incorrect	a. Q702 defective R707, R708, R713 incorrect value or open C700, CR710, C711 defective b. CR709 defective Proceed to Step 4
4	Waveform between 90 and 52	a. Amplitude incorrect b. Period incorrect	a. CR708, CR709, R702 defective b. CR700 through CR703 defective
5	Waveform between 90 and 54	a. Amplitude incorrect b. Period incorrect	a. R705, R701, C701 defective b. CR704 through CR707 defective

Table 5-6. Common Troubles

System	Checks and Probable Causes
High ripple	<ul style="list-style-type: none"> <li>a. Check operating setup for ground loops.</li> <li>b. If output floating, connect <math>1\mu\text{F}</math> capacitor between output and ground.</li> <li>c. Ensure that supply is not crossing over to constant current mode under loaded conditions.</li> <li>d. Check for low voltage across C948 or Q400.</li> <li>e. Check for excessive ripple on reference voltages. Peak-to-peak ripple should be less than 2mV for +5, 4V and -6, 3V and less than 4mV for +15, 4V.</li> </ul>
Poor line regulation	<ul style="list-style-type: none"> <li>a. Check reference circuit (Paragraph 5-31).</li> </ul>
Poor load regulation (Constant Voltage)	<ul style="list-style-type: none"> <li>a. Measurement technique. (Paragraph 5-16, f)</li> <li>b. Check reference circuit (Paragraph 5-31).</li> <li>c. Ensure that supply is not going into current limit. Check constant current input circuit.</li> </ul>
Poor load regulation (Constant Current)	<ul style="list-style-type: none"> <li>a. Check reference circuit (Paragraph 5-31).</li> <li>b. CR02, CR03, and CR09 leaky.</li> <li>c. Ensure that supply is not crossing over to constant voltage operation. Check constant voltage input circuit.</li> </ul>
Oscillates (Constant Voltage / Constant Current)	<ul style="list-style-type: none"> <li>a. Check C301 for open, adjustment of R307 (Paragraph 5-56).</li> <li>b. Check R103, C100 or R304, C301.</li> </ul>
Poor Stability (Constant Voltage)	<ul style="list-style-type: none"> <li>a. Check reference voltages (Paragraph 5-31).</li> <li>b. Noisy programming resistors R013, R014.</li> <li>c. CR100, CR101 leaky.</li> <li>d. Check R104, R005, R006, CR01 for noise or drift.</li> <li>e. Stage Q100 defective.</li> </ul>
Poor Stability (Constant Current)	<ul style="list-style-type: none"> <li>a. Check reference voltages (Paragraph 5-31).</li> <li>b. Noisy programming resistors R009, R010.</li> <li>c. CR009, CR005, CR02 leaky.</li> <li>d. Check R007, R008, R200, R000, for noise or drift.</li> <li>e. Stage Q200 defective.</li> </ul>

Table 5-7. Selected Semiconductor Characteristics

Reference Designator	Characteristic	⊕ Stock No.	Suggested Replacement
Q100, Q200	Matched differential amplifier, MPN Si Planar, 70 (min.) $I_{\text{BQ}} @ I = 1 \text{ mA}$ , $V_{\text{CE}} = 5\text{V}$ , $I_{\text{CE}} @ 0.01 @ V_{\text{CE}} = 5\text{V}$ .	1854-0229	2N1917 G, E.
Q303, Q400 Q400B	MPN power, $I_{\text{BQ}} = 35$ (min.) $@ I_{\text{C}} = 4\text{A}$ , $V_{\text{CE}} = 4\text{V}$ .	1854-0225	2N1055 B, C, A.
Q851	Matched differential amplifier, MPN Si.	1854-0223	2N4045 Union Carbide

Excessive heat or pressure can lift the copper strip from the board. Avoid damage by using a low power soldering iron (30 watts maximum) and following these instructions. Copper that lifts off the board should be cemented in place with a quick drying acetate base cement having good electrical insulating properties.

A break in the copper should be repaired by soldering a short length of tinned copper wire across the break.

Use only high quality rosin core solder when repairing etched circuit boards. NEVER USE PASTE FLUX. After soldering, clean off any excess flux and coat the repaired area with a high quality electrical varnish or lacquer.

When replacing components with multiple mounting pins such as tube sockets, electrolytic capacitors, and potentiometers, it will be necessary to lift each pin slightly, working around the components several times until it is free.

**WARNING:** If the specific instructions outlined in the steps below regarding etched circuit boards without eyelets are not followed, extensive damage to the etched circuit board will result.

1. Apply heat sparingly to lead of component to be replaced. If lead of component passes through an eyelet

in the circuit board, apply heat on component side of board. If lead of component does not pass through an eyelet, apply heat to conductor side of board.



2. Reheat solder in vacant eyelet and quickly insert a small awl to clean inside of hole.

If hole does not have an eyelet, insert awl or a #93 drill from conductor side of board.



3. Bend clean tinned lead on new part and carefully insert through eyelet or hole in board.



4. Hold part against board (avoid over heating) and solder leads.

Apply heat to component leads on correct side of board as explained in step 1.



In the event that either the circuit board has been damaged or the conventional method is impractical, use method shown below. This is especially applicable for circuit boards without eyelets.

1. Clip lead as shown below.



2. Bend protruding leads upward. Bend lead of new component **AWAY** FROM PROTRUDING LEAD. Apply solder using a pair of long nose pliers as a heat sink.



This procedure is used in the field only as an alternate means of repair. It is not used within the factory.

Figure 5-10. Servicing Printed Wiring Boards



Excessive heat or pressure can lift the copper strip from the board. Avoid damage by using a low power soldering iron (30 watts maximum) and following these instructions. Copper that lifts off the board should be cemented in place with a quick drying acetate base cement having good electrical insulating properties.

A break in the copper should be repaired by soldering a short length of tinned copper wire across the break.

Use only high quality rosin core solder when repairing etched circuit boards. NEVER USE PASTE FLUX. After soldering, clean off any excess flux and coat the repaired area with a high quality electrical varnish or lacquer.

When replacing components with multiple mounting pins such as tube sockets, electrolytic capacitors, and potentiometers, it will be necessary to lift each pin slightly, working around the components several times until it is free.

**WARNING:** If the specific instructions outlined in the steps below regarding etched circuit boards without eyelets are not followed, extensive damage to the etched circuit board will result.

1. Apply heat sparingly to lead of component to be replaced. If lead of component passes through an eyelet

in the circuit board, apply heat on component side of board. If lead of component does not pass through an eyelet, apply heat to conductor side of board.



2. Reheat solder in vacant eyelet and quickly insert a small awl to clean inside of hole.

If hole does not have an eyelet, insert awl or a #93 drill from conductor side of board.



3. Bend clean tinned lead on new part and carefully insert through eyelet or hole in board.



4. Hold part against board (avoid over heating) and solder leads.

Apply heat to component leads on correct side of board as explained in step 1.



In the event that either the circuit board has been damaged or the conventional method is impractical, use method shown below. This is especially applicable for circuit boards without eyelets.

1. Clip lead as shown below.



2. Bend protruding leads upward. Bend lead of new component **AWAY** from protruding lead. Apply solder using a pair of long nose pliers as a heat sink.



This procedure is used in the field only as an alternate means of repair. It is not used within the factory.

Figure 5-10. Servicing Printed Wiring Boards

Table 5-8. Checks and Adjustments After Replacement of Semiconductor Devices (Continued)

CR880, CR881, CR880, CR881, CR801-CR804	Rectifier diodes	Voltage across appropriate filter capacitor	
VR800, VR801	Reference voltages	Check +5, 4V and -6, 2V reference voltages	

Table 5-9. Calibration Adjustment Summary

Adjustment or Calibration	Paragraph	Control Device
Meter Zero	5-38	Pointer
Voltmeter Tracking	5-40	R878 and R865
Ammeter Tracking	5-42	R855
"Voltage" Programming Current	5-44	R886
"Current" Programming Current	5-46	R886
Overvoltage Trip	5-48	R804
Transient Response	5-50	R307
Regulator Tracking	5-52	R711

### 5-36 ADJUSTMENT AND CALIBRATION

5-32 Adjustment and calibration may be required after performance testing, troubleshooting, or repair and replacement. Perform only those adjustments that affect the operation of the faulty circuit and no others. Table 5-9 summarizes the adjustments and calibrations contained in the following paragraphs.

#### 5-38 METER ZERO

5-38 Proceed as follows to zero meter:

- Turn off instrument (after it has reached normal operating temperature) and allow 30 seconds for all capacitors to discharge.
- Insert sharp pointed object (pen point or awl) into the small indentation near top of round black plastic disc located directly below meter face.
- Rotate plastic disc clockwise (cw) until meter reads zero, then rotate cw slightly in order to free adjustment screw from meter suspension. If pointer moves, repeat steps b and c.

#### 5-40 VOLTMETER TRACKING

5-40 To calibrate voltmeter tracking, proceed as follows:

- To electrically zero meter, set METER switch to highest current position and, with supply off and no load connected, adjust R878 until front panel meter reads zero.
- Connect differential voltmeter across supply, observing correct polarity.
- Set METER switch to highest voltage range and turn on supply. Adjust VOLTAGE control until differential voltmeter reads exactly the maximum rated output voltage.
- Adjust R865 until front panel meter also indicates maximum rated output voltage.

#### 5-42 AMMETER TRACKING

5-42 To calibrate ammeter tracking, proceed as follows:

- Zero meter as described in step a of 5-41. Connect test setup shown on Figure 5-4 leaving switch S1 open.
- Turn VOLTAGE control fully clockwise and set METER switch to highest current range.
- Turn on supply and adjust CURRENT controls until differential voltmeter reads 1.0Vdc.
- Adjust R855 until front panel meter indicates exactly the maximum rated output current.

#### 5-46 CONSTANT VOLTAGE PROGRAMMING CURRENT

5-46 To calibrate the constant voltage programming current, proceed as follows:

a. Connect a 0.1K, 1/2 watt resistor between terminals -B and A4 on rear barrier strip. Resistor value to be as follows:

Model	6291A	6291A	6291A	6291A	6291A	6291A
Res.	2K	2K	2K	2K	2K	1.5K

b. Disconnect jumper between A1 and A4 on rear terminal barrier strip.

c. Connect a decade resistance in place of R604.

d. Connect a differential voltmeter between +E and -E and turn on supply.

e. Adjust decade resistance box so that differential voltmeter indicates maximum rated output voltage within the following tolerances:

Model	6291A	6291A	6291A	6291A	6291A	6291A
Tol. (Vdc)	+0.2	+0.4	+0.4	+0.8	+0.8	+1.2

f. Replace decade resistance with resistor of appropriate value in R604 position.

#### 5-46 CONSTANT CURRENT PROGRAMMING CURRENT

5-47 To calibrate the constant current programming current, proceed as follows:

a. Connect power supply as shown in Fig. 5-4.

b. Remove strip between A6 and A7 (jumping A7 and A8 jumpered).

c. Connect a 0.1K, 1/2 watt resistor between A1 and A7. Resistor value is 1K, 1.5K, for Models 6291A and 6291A.

d. Connect decade resistance box in place of R604.

e. Set METER switch to highest current range and turn on supply.

f. Adjust the decade resistance so that the differential voltmeter indicates 1.0 ± 1.5Vdc.

g. Replace decade resistance with appropriate value resistor in R604 position.

#### 5-48 OVERVOLTAGE TRIP

5-48 To adjust the overvoltage trip point, proceed as follows:

a. Connect differential voltmeter across -B and -B terminals of supply.

b. Rotate VOLTAGE controls fully clockwise.

c. Turn on unit. Differential voltmeter should read 20% above maximum rated output voltage within ±5%.

d. If it does not, turn off supply and connect decade resistance across R605 in place of R604.

e. Adjust decade resistance until differential voltmeter reads that indicated in step c.

#### NOTE

The +1.5V reference voltage must be kept within ±0.5Vdc when adjusting the decade resistance box.

f. Replace decade resistance with resistor of appropriate value in R604 position.

#### 5-50 TRANSIENT RECOVERY TIME

5-51 To adjust the transient response, proceed as follows:

a. Connect test setup as shown in Figure 5-5.

b. Repeat steps a through c as outlined in Paragraph 5-15.

c. Adjust R207 so that the transient response is as shown in Figure 5-6.

#### 5-52 PREREGULATOR TRACKING (DC) OPERATION

5-52 To adjust the preregulator control circuit with a 500Hz ac input, proceed as follows:

a. Connect proper load resistor across output terminals of supply. Resistance value to be as follows:

Model	6291A	6291A	6291A	6291A	6291A	6291A
Res.	1k	4k	1k	1k	4k	2k

b. Connect DC voltmeter between TP17 and TP20 (across series regulator).

c. Turn on supply and adjust VOLTAGE controls for maximum rated output voltage.

d. Adjust R711 so that DC voltmeter reads 1 ± 0.1Vdc.

#### 5-54 PREREGULATOR TRACKING (50Hz OPERATION)

5-55 To adjust the preregulator control circuit when the ac input is from a 50Hz source, proceed as follows:

a. Connect load resistor across rear output terminals of supply. Resistor value to be as follows:

Model	6291A	6291A	6291A	6291A	6291A	6291A
Res.	1k	4k	1k	1k	4k	2k

b. Connect oscilloscope (if coupled across series regulator, T. P. 27 to T. P. 30).

c. Disconnect R709 in the SCR control circuit, and connect decade resistance box in its place.

d. Rotate CURRENT controls fully clockwise and turn on supply.

e. Decrease resistance of decade resistance from normal value of R709 until sawtooth waveform on oscilloscope is symmetrical (amplitude of 10Hz sawtooth waves are equal).

f. Replace decade resistance box with appropriate value resistor in R709 position.

g. Adjust ramp potentiometer R711 for 5.7Vdc drop across series regulator.

h. If 5.5 volts cannot be obtained, connect R712 in series with R711 and connect the decade resistance box in its place.

i. Increase value of decade resistance box from normal value of R712 until 3.5Vdc drop is obtained across series regulator.

j. Remove decade resistance and connect new resistance value in R712 position.

## SECTION VI REPLACEABLE PARTS

### 6-1 INTRODUCTION

6-2 This section contains information for ordering replacement parts. Table 6-4 lists parts in alphanumeric order by reference designators and provides the following information:

a. Reference Designators. Refer to Table 6-1.

b. Description. Refer to Table 6-2 for abbreviations.

c. Total Quantity (TQ). Gives only the first time the part number is listed except in instruments containing many sub-module assemblies, in which case the TQ appears the first time the part number is listed in each assembly.

d. Manufacturer's Part Number or Type.

e. Manufacturer's Federal Supply Code Number. Refer to Table 6-3 for manufacturer's name and address.

f. Hewlett-Packard Part Number.

g. Recommended Spare Parts Quantity (RS) for complete maintenance of one instrument during one year of isolated service.

h. Parts not identified by a reference designator are listed at the end of Table 6-4 under Mechanical and/or Miscellaneous. The former consists of parts belonging to and grouped by individual assemblies; the latter consists of all parts not immediately associated with an assembly.

### 6-3 ORDERING INFORMATION

6-4 To order a replacement part, address order or inquiry to your local Hewlett-Packard sales office (see lists at end of this manual for addresses). Specify the following information for each part: Model, complete serial number, and any Option or special modification (S) numbers of the instrument; Hewlett-Packard part number; circuit reference designator and description. To order a part not listed in Table 6-4, give a complete description of the part, its function, and its location.

Table 6-1. Reference Designators

A	= assembly	E	= miscellaneous
B	= blower (fan)	F	= electronic part
C	= capacitor	G	= fuse
CB	= circuit breaker	I	= jack, jumper
CR	= diode	K	= relay
DS	= device, signaling (lamp)	L	= inductor
		M	= meter

Table 6-1. Reference Designators (Continued)

P	= plug	V	= vacuum tube, neon bulb, photocell, etc.
Q	= transistor	VR	= varactor diode
R	= resistor	X	= socket
S	= switch	Z	= integrated circuit or network
T	= transformer		
TB	= terminal block		
TS	= thermal switch		

Table 6-2. Description Abbreviations

A	= ampere	mf	= manufacturer
ac	= alternating current	mod.	= modular or modified
assy.	= assembly	mtg	= mounting
bd	= board	n	= nano = 10 <sup>-9</sup>
brk	= bracket	NC	= normally closed
dc	= direct current	NO	= normally open
	Centigrade	NP	= nickel-plated
cd	= card	o	= ohm
coef	= coefficient	oid	= order by description
comp	= composition	OD	= outside diameter
CRT	= cathode-ray tube	p	= pico = 10 <sup>-12</sup>
CT	= center-tapped	P.C.	= printed circuit
dc	= direct current	pot.	= potentiometer
DPDT	= double pole, double throw	p-p	= peak-to-peak
DPST	= double pole, single throw	ppm	= parts per million
elect	= electrolytic	pr	= peak reverse voltage
encap.	= encapsulated	rect	= rectifier
F	= foot	rms	= root mean square
°F	= degree Fahrenheit	Si	= silicon
ft	= foot	SPDT	= single pole, double throw
Ge	= germanium	SPST	= single pole, single throw
H	= Henry	SS	= small signal
Hz	= Hertz	T	= slow-blow
IC	= integrated circuit	tan.	= tantalum
ID	= inside diameter	Ti	= titanium
inrad	= inradiancent	V	= volt
k	= kilo = 10 <sup>3</sup>	var	= variable
m	= milli = 10 <sup>-3</sup>	w/w	= wirewound
M	= mega = 10 <sup>6</sup>	W	= Watt
μ	= micro = 10 <sup>-6</sup>		
met.	= metal		

Table 6-3. Code List of Manufacturers

CODE NO.	MANUFACTURER	ADDRESS
80429	EVY Sales Co., Inc.	Jamaica, N. Y.
80454	Aerovox Corp.	New Bedford, Mass.
80453	Sensorex Electric Co. S. Carolina Div.	Pickens, S. C.
81121	Allen Bradley Co.	Milwaukee, Wis.
81155	Linco Industries, Inc.	Severly Hills, Calif.
81181	TRW Semiconductor, Inc.	Lansdale, Calif.
81285	Texas Instruments, Inc. Semiconductor-Components Div.	Dallas, Texas
81484	RCL Electronics, Inc.	Manchester, N. H.
81530	Ametek Corp.	Rockford, Ill.
82037	Sparks Mfg. Co.	Dover, Ohio
82114	Permanix Corp.	Seagoville, N. Y.
82284	Penwal Laboratories	Morton Grove, Ill.
82440	Amphenol Corp.	Brooklyn, Ill.
82735	Rafco Corp. of America, Solid State and Resolving Tube Div.	Somerville, N. J.
82848	G. E. Semiconductor Products Dept.	Syracuse, N. Y.
83757	Eidems Corp.	Compton, Calif.
83877	Translinear Electronic Corp.	Methen, Mass.
83888	Pyrothin Resistor Co. Inc.	Center Knolls, N. J.
84069	Aerovox, Hart and Hegeman Electric Co.	Rockford, Conn.
84272	ADC Electronics, Inc.	Hastler City, Calif.
84233	Caldwell & Burns Mfg. Co. Inc.	Milford, N. Y.
84484	*Hewlett-Packard Co. Palo Alto Div.	Palo Alto, Calif.
84713	Motorola Semiconductor Prod. Inc.	Phoenix, Arizona
85127	Westinghouse Electric Corp. Semiconductor Dept.	Youngwood, Pa.
85147	Utronix, Inc.	Grand Junction, Colo.
85439	Wobfield Dept. Inc.	Woburn, Mass.
85581	General Elect. Co. Electronic Capacitor & Battery Dept.	Brook, S. C.
85684	Bassett Div. Swann-Moran Corp.	Bridgeport, Conn.
85485	TRW Div. of TRW Inc. Semiconductor Plant	Lynn, Mass.
86148	Anascan Electronic Hardware Co. Inc.	New Rochelle, N. Y.
86155	Beeco Electrical Instrument Co.	Peapack, N. H.
86146	General Devices Co., Inc.	Indianapolis, Ind.
86751	Sensor Div. Components, Inc.	Phoenix, Arizona
86778	Baldwin Mgmt. Inc.	New Albany, Ind.
86812	Warrington Mfg. Co., West Div.	San Mateo, Calif.
87137	Transistor Electronics Corp.	Minneapolis, Minn.

CODE NO.	MANUFACTURER	ADDRESS
87138	Westinghouse Electric Corp. Electronic Tube Div.	Elmira, N. Y.
87243	Fairchild Camera and Instrument Corp. Semiconductor Div.	Mountain View, Calif.
87387	Bitolite Corp., The	Los Angeles, Calif.
87387	Sylvania Electric Prod. Div. Sylvania Electronic Systems Western Div.	Mountain View, Calif.
87716	TRW Div. of TRW Inc. Burlington Plant	Burlington, Iowa
87910	Continental Device Corp.	Hawthorne, Calif.
87915	Raytheon Co. Components Div. Semiconductor Operation	Mountain View, Calif.
88184	Brenco Components, Inc.	Union, N. J.
88230	Bellanca Mica Corp.	Brooklyn, N. Y.
88237	Shaw Company, The	San Valley, Calif.
88230	Yamaline Products Co. Inc.	Wyckoff, N. J.
88284	General Elect. Co. Mini- tube Lamp Dept.	Cleveland, Ohio
88883	Kyokusho Corp.	Scottsville, Pa.
88825	RCI Supply Co.	Vernon, Calif.
89021	Allen Spear Electronic Components	Balluff, Pa.
89182	*Hewlett-Packard Co. New Jersey Div.	Berkeley Heights, N. J.
89213	General Elect. Co. Semiconductor Prod. Dept.	Buffalo, N. Y.
89214	General Elect. Co. Semiconductor Prod. Dept.	Spartan, N. Y.
89283	C & E Components Inc.	Brewton, Mass.
89321	Bundy Corp.	Norwalk, Conn.
11181	Wagner Electric Corp.	Bloomfield, N. J.
11236	CTS of Rome, Inc.	Watts, Ind.
11237	Chicago Telephone of Cal. Inc.	So. Pasadena, Calif.
11542	TRW Div. of TRW Inc. Beeco Plant	Bozoo, N. C.
11781	General Instrument Corp. Bentham Div.	Norwalk, N. J.
12136	Philadelphia Handle Co. Inc.	Camden, N. J.
13185	U.S. Terminals, Inc.	Cincinnati, Ohio
13257	Hartin Inc.	Lake Mills, Wisconsin
13387	Chascom Mfg. Co. Inc.	Dover, N. H.
13388	Thermatray Co.	Dallas, Texas
14483	*Hewlett-Packard Co. Loveland Div.	Loveland, Colo.
14655	Cornell-Dubilier Electronics Div. Federal Pacific Electric Co.	Norwalk, N. J.
14936	General Instrument Corp. Semicon- ductor Prod. Group	Hicksville, N. Y.
15281	Penwal Elect.	Framingham, Mass.
14299	Corning Glass Works, Electronic Components Div.	Raleigh, N. C.

\*See Code 28480 assigned to Hewlett-Packard Co., Palo Alto, California

Table E-1. Code List of Manufacturers (Continued)

CODE NO.	MANUFACTURER	ADDRESS	CODE NO.	MANUFACTURER	ADDRESS
16758	Delco Radio Div. of General Motors Corp.	Kokomo, Ind.	70583	Angarita Co., Inc.	Union City, N.J.
17545	Atlantic Semiconductors, Inc.	Astbury Park, N.J.	70993	Beemer Engrg. Co.	Fort Washington, Pa.
17883	Fairchild Camera and Instrument Corp. Semiconductor Div. Transistor Plant	Mountain View, Calif.	70995	Belden Corp.	Chicago, Ill.
17870	Down Div. Thomas A. Edison Industries	Orange, N.Y.	71218	Bul Radio, Inc.	Willoughby, Ohio
18324	McGraw-Edison Co.	Orange, N.Y.	71276	Cambridge Thermionic Corp.	Cambridge, Mass.
18324	Superior Corp.	Sunnyvale, Calif.	71400	Buschman Mfg. Div. of McGraw E	St. Louis, Mo.
19310	Bendix Corp. The Navigation and Control Div.	Teaneck, N.J.	71450	CTS Corp.	Elkhart, Ind.
19793	Electra/Midland Corp.	Mineral Wells, Texas	71968	I.T.T. Cannon Electric Inc.	Los Angeles, Calif.
20520	Fansteel Metallurgical Corp.	Mo. Chicago, Ill.	72190	Globe-Deane Inc. Catalytic Div.	Milwaukee, Wis.
21229	Union Carbide Corp. Electronics Div.	Mountain View, Calif.	72700	General Cable Corp. Corning Wire Co. Div.	Williamstown, Mass.
22713	SED Electronics Corp.	Hollywood, Fla.	72707	Cable Cast Co., Inc.	Providence, R.I.
23536	Pemotek, Inc.	Pampa, Texas	72744	Chicago Miniature Lamp Works	Chicago, Ill.
24446	General Electric Co.	Schenectady, N.Y.	72785	Cinch Mfg. Co. and Howard S. Jones Div.	Chicago, Ill.
24805	General Electric Co. Lamp Div. of Con- sumer Prod. Group	Mata Park, Cleveland, Ohio	71484	Dow Corning Corp.	Midland, Mich.
24805	General Radio Co.	West Concord, Mass.	72528	Electro Motion Mfg. Co. Inc.	Williamston, Conn.
24881	SPV Electronics for Memory/Com- ponents Operations	Huntington, Ind.	72819	Delight Corp.	Brooklyn, N.Y.
24882	Dynalene Mfg. Co., Inc.	Saugettes, N.Y.	72889	General Instrument Corp.	Metuchen, N.J.
27004	National Semiconductor Corp.	Santa Clara, Calif.	72765	Drake Mfg. Co.	Harwood Heights, Ill.
28488	Howlett-Packard Co.	Palo Alto, Calif.	72862	Diario Shop Nat. Div. of American Enso Corp.	Elson, N.J.
28528	Heyman Mfg. Co.	Sterilworth, N.J.	72882	Erie Technological Products Inc.	Erie, Pa.
28875	DMC Magnetics Corp.	New Hampshire Div.	72894	Hart Mfg. Co.	Hartford, Conn.
31514	SAC Advance Packaging, Inc.	Santa Ana, Calif.	73288	Beckman Instruments Inc. Hillier Div.	Fullerton, Calif.
31827	Subway Mfg. Co.	Samoa, Calif.	73283	Formal, Inc.	Schland, Mass.
32373	G. E. Co. Tube Dept.	Owensboro, Ky.	73283	Hughes Aircraft Co. Electron Dynamics Div.	Torrance, Calif.
32434	Lectrotek, Inc.	Chicago, Ill.	73448	Ampere Electronic Corp.	Waukegan, N.Y.
37942	F.R. Malbury & Co., Inc.	Indianapolis, Ind.	73508	Bradley Semiconductor Corp.	New Haven, Conn.
41280	Mator Co.	Chicago, Ill.	73518	Carlisle Electric, Inc.	Hartford, Conn.
43334	New Department-Hyatt Bearings Div.	General Motors Corp.	73734	Federal Snow Products, Inc.	Chicago, Ill.
44835	Chemie Manufacturing Co.	Skokie, Ill.	74193	Helmman Electric Co.	Trenton, N.J.
46284	Penn Equip. and Mfg. Corp.	Drydenown, Pa.	74145	Hobbs-Harvey Inc.	Bridgport, Conn.
47894	Polaroid Corp.	Cambridge, Mass.	74668	Kaphend Corp.	Kaphend, N.Y.
48956	Raytheon Co.	Alexandria, Mass.	74670	E. F. Johnson Co.	Danvers, Conn.
53326	Simpson Electric Co. Div. of American Gage and Machine Co.	Chicago, Ill.	75042	INC Div. of TRW, Inc.	Philadelphia, Pa.
54228	Spacax Electric Co.	North Adams, Mass.	75185	*Howard S. Jones Div. of Clevco Mfg. Corp.	New York, N.Y.
54474	Superior Electric Co.	Wiatod, Conn.	75170	Burt and Knott, Inc.	Dayton, Ohio
54848	Sylvania Div. of PNC Corp.	Homestead, Pa.	75382	Sikka Electric Corp.	Mt. Vernon, N.Y.
56738	Thomas and Betts Co.	Philadelphia, Pa.	75915	Littichow, Inc.	Des Plaines, Ill.
61617	Union Carbide Corp.	New York, N.Y.	76381	Minnesota Mining and Mfg. Co.	St. Paul, Minn.
63743	West Leonard Electric Co.	ML, Vernon, N.Y.	76385	Minor Rubber Co., Inc.	Westfield, N.J.
			76487	Jones Miller Mfg. Co., Inc.	Malden, Mass.
			76493	J.W. Miller Co.	Conpton, Calif.

\*Use Code 71785 assigned to Clack Mfg. Co., Chicago, Ill.

Table 4-3. Code List of Manufacturers (Continued)

CODE NO.	MANUFACTURER	ADDRESS
76130	Cowh	City of Industry, Calif.
76004	Oak Mfg. Co. Div. of Oak	
77058	Electra/Ventec Corp.	Crystal Lake, Ill.
	Benfil Corp., Electrodynamic Div.	
77123	Palout Co.	Wm. Hallywood, Calif.
77147	Palout-Madigan Co.	Mountainside, N. J.
77120	Placotron Instrument and Electronic Co.	Frederick, N. J.
77213		South Pasadena, Calif.
77213	Philadelphia Glass and Wire Corp.	Philadelphia, Pa.
77341	American Machine and Foundry Co.	
	Potter and Brumfield Div. Placotron, Inc.	
77430	TOW Electronic Components Div.	
		Camden, N. J.
77544	Resistance Products Co.	Hanlsburg, Pa.
78089	Illinois Tool Works Inc.	Shelwood Dr.,
		Elgin, Ill.
78402	Overlook Chicago, Inc.	Chicago, Ill.
78488	Scarpella Carlson Co.	St. Marys, Pa.
78526	Scarsync Winding Div.	San Francisco
78553	Electro Mfg. Co. Inc.	Newburgh, N. Y.
78584	Tommson Products, Inc.	Cleveland, Ohio
78136	Summit Stamping Corp.	Yonkers, N. Y.
78307	Walden Robinson, Inc.	L. I. C., N. Y.
78307	Whiteland Metals Inc.	New York, N. Y.
78717	Continental-Walt Electronic Corp.	
		Philadelphia, Pa.
78943	Zepek Mfg. Co.	Mt. Kisco, N. Y.
80030	Moyno Div. of American Clock Co.	
		Monticello, N. J.
80284	Summ, Inc.	Elyria, Ohio
80343	Howard Industries Div. of Mal Int. Inc.	
		Barton, Miss.
80373	Greyhill, Inc.	La Grange, Ill.
81483	International Rectifier Corp.	
		El Segundo, Calif.
81751	Columbus Electronics Corp.	Yonkers, N. Y.
82089	Goodyear Sundries & Mechanical Co. Inc.	
		New York, N. Y.
82143	Alco Specr Electronic Components	
		De Bala, Pa.
82157	Sylvania Electric Products Inc.	
	Electronic Tube Div. Manufacturing	
	Tube Operations	Emporium, Pa.
82388	Reichardt, Inc.	Chicago, Ill.
82447	Metals and Controls Inc.	Control
	Products Group	Andover, Mass.
82856	Research Products Corp.	Medford, Wis.
82877	Roton Inc.	Woodstock, N. Y.
82893	Vester Electronic Co.	Glendale, Calif.
82894	Carl Farnover Co.	Concord, Mass.
83108	Victory Engineering Corp.	
		Springfield, N. J.
83288	Benfil Corp. Electric Power Div.	
		Easton, N. J.
83320	Norman H. Smith, Inc.	Brooklyn, N. Y.
83381	Central Screw Co.	Chicago, Ill.
83581	Grant Wire and Cable Div. of	
	Amcorc Wire Corp.	Brookfield, Mass.

CODE NO.	MANUFACTURER	ADDRESS
83508	Grant Pulley and Hardware Co.	
		West Nyack, N. Y.
83554	Surtrough Corp. Electronics	
	Components Div.	Plainfield, N. J.
83635	U. S. Radium Corp.	Monticello, N. J.
83677	Therby Laboratories, Inc.	
		New York, N. Y.
84173	Arco Electronics, Inc.	Great Neck, N. Y.
84113	TRW Capacitor Div.	Orlando, Fla.
84284	RCA Corp. Electronic Components	
		Hartford, N. J.
84328	Rennel Film Co.	Syracuse, N. Y.
87834	Moro & Oak Industries a Div. of Oak	
	Electro/Ventec Corp.	San Jose, Calif.
87316	Phelan Corp. Laminole Div.	Lansdale, Pa.
87585	Stockwell Rubber Co. Inc.	
		Philadelphia, Pa.
87820	Tower-Gleason Corp.	Bridgeport, Conn.
88048	Custer-Bassett Inc. Power Distribution	
	and Control Div. Lincoln Plant	
		Lincoln, Ill.
88245	Litten Precision Products Inc. USBCO	
	Div. Litten Industries	Van Nuys, Calif.
88234	Colton Industries Inc.	Meriden, N. J.
88763	United-Car Inc.	Chicago, Ill.
89345	Miller Dial and Synchro Co.	
		El Monte, Calif.
89418	Belle Materials Co.	Chicago, Ill.
89266	Asper, Inc.	Arlington, Mass.
89337	Date Electronics, Inc.	Columbus, Miss.
89362	Elex Corp.	Wilkes Barre, Pa.
89328	Honeywell Inc. Div. Micro Switch	
		Freeport, Ill.
89825	Whites, Inc.	Schiller Pt., Ill.
89882	Sylvania Electric Prod. Inc. Semi-	
	conductor Prod. Div.	Woburn, Mass.
89410	Essex Wire Corp. Boston	
	Canada Div.	Manfield, Ohio
89444	Raytheon Co. Components Div.	
	Int. Components Oper.	Quincy, Mass.
89554	Wagner Electric Corp.	
	Plug-Set Div.	Livingston, N. J.
89222	Seathco Inc.	Lester, Pa.
89255	General Mfg. Co. Inc.	L. I. C., N. Y.
89256	Methods Mfg. Co. Rolling Machines, Div.	
89712	Benfil Corp. Milwaukee	
	Systems Div.	Franklin, Ind.
89887	Wheeler Co. Inc.	Chicago, Ill.
89781	Amphtrol Corp. Amphtrol	
	Controls Div.	Janesville, Wis.
87484	Industrial Retaining Ring Co.	
		Brighton, N. J.
87782	EMC Magnetic Corp. Eastern Div.	
		Westbury, N. Y.
88286	Sealco Corp.	Manhasset, N. Y.
88438	ETC Inc.	Cleveland, Ohio
88578	International Electronic Research Corp.	
		Buffalo, Calif.
89534	Benckoch, Inc.	Boston, Mass.

Reference Designator	Description	Quantity	Mfr. Part # or Type	Mfr.	Mfr. Code	Stock No.	RS
C100	fed. film 0.002uf 200V	1	192P02392	Sprague	56289	0160-0167	1
C200	fed. film 0.0047uf 200V	1	192P47292	Sprague	56289	0160-0167	1
C300	fed. film 0.22uf 80V	1	192P224998	Sprague	56289	0160-0453	1
C301	fed. film 0.001uf 200V	1	192P10392	Sprague	56289	0160-0153	1
C302, 303	fed. film 0.0022uf 200V	2	192P22392	Sprague	56289	0160-0154	1
C500	fed. elect 34,000uf 30V	1	D40073	HLAB	09182	0180-1930	1
C501	fed. paper 3.3uf 400V	1	160P10404	Sprague	56289	0160-0013	1
C600	fed. elect. 20uf 30V	1	D34656	HLAB	09182	0180-0332	1
C601, 602, 702, 801	fed. elect. 1uf 80V	4	D33009	HLAB	09182	0180-1836	1
C700	fed. elect. 1uf 35V	1	154D-1050903542	Sprague	56289	0180-0391	1
C701	fed. elect. 1uf 50V	1	38D109G0509044	Sprague	56289	0180-0108	1
C702	fed. film 0.1uf 200V	1	192P10492	Sprague	56289	0160-0168	1
C800	fed. elect. 1500uf 40V	1	D36713	HLAB	09182	0180-1894	1
C802	fed. elect. 40uf 50V	1	D30491	HLAB	09182	0180-1869	1
C803	fed. elect. 3000uf 40V	1	D40015	HLAB	09182	0180-1899	1
C804	NOT ASSIGNED	-	-	-	-	-	-
C805	fed. elect. 4.7uf 35V	1	154D4710303582	Sprague	56289	0180-0109	1
C900	fed. elect. 20uf 50V	1	38D106G05050004	Sprague	56289	0180-0049	1
CR100-101,200,300, 301, 500, 700-711, 801, 807, 808, 901, 901	Diode sil. 200mA 200PFV	24		HLAB	09182	1901-0033	3
CR400, 800	Rect. sil. 12A@150°C 100PFV	2	1N1200A	R. C. A.	02735	1901-0002	2
CR601, 603, 604, 800, 801, 802, 901, 902	Rect. sil. 500mA 200PFV	8	1N1134	R. C. A.	02735	1901-0009	6
CR602, 602, 802-804	Diode sil. 200mA 15PFV	6		HLAB	09182	1901-0461	6
CR501, 502	Rect. sil. 20A@110°C 10PFV	1	A40F	G. E.	03588	1901-0323	2
CR502, 504	SCR 12.5A 200PFV	2	2N3449	R. C. A.	02735	1684-0019	2
CR1	Lamp, neon (part of 81 ass'y) RZF			HLAB	09182	2140-0044	2
F1	Fuse cartridge 4A	1	312004	Littelfuse	75915	2110-0055	3
Q100, 200	NPN dif. amp. si.	2		HLAB	09182	1854-0020	2
Q300, 301, 601-603	NPN si.	3				1854-0071	3
Q302, 700, 701, 801, 802	NPN si.	3	2N1417	G. E.	03508	1854-0067	3
Q303, 400	Power NPN sil. p-35 @ 4ADC	1		HLAB	09182	1854-0225	2
Q401	NOT USED	-	-	-	-	-	-
Q500	PNP si.	1	40362	R. C. A.	02735	1853-0040	1
Q701, 800, 800, 852, 853	PNP si.	3	2N2907A	Sprague	56289	1853-0099	3
Q801	NPN dif. amp. si.	1		HLAB	09182	1854-0221	1
Q854	NOT ASSIGNED	-	-	-	-	-	-
R100, 200, 300	fed. met. film 100K±10% 1/8w	3	Type CEA T-0	I. R. C.	07716	0690-5092	1
R101, 201, 301	fed. met. film 81.9K±10% 1/8w	3	Type CEA T-0	I. R. C.	07716	0757-0460	1
R102, 100, 204	fed. met. film 432K±10% 1/8w	3	Type CEA T-0	I. R. C.	07716	0757-0460	1
R103	fed. comp 430K ±5% 1/8w	1	ER-4315	A. B.	01121	0680-4315	1
R104	fed. var 40K±10% 3w 30	1	24204915	Sprague	56289	0611-1801	1
R105, 206	fed. met. film 33.5K±10% 1/8w	2	Type CEA T-0	I. R. C.	07716	0690-5099	1
R106, 200, 300	fed. met. film 1.5K±10% 1/8w	3	Type CEA T-0	I. R. C.	07716	0757-0427	1



Reference Designator	Description	Quantity	Mfr. Part # or Type	Mfr.	Mfr. Code	Part No.	RF
R307, 309	feed. met. film 47.5 K, ±1% 1/4w 2		Type CEA T-O	I. R. C.	07716	0757-0453	1
R308	feed. comp 100 K, ±5% 1/4w	1	EE-3345	A. B.	01121	0096-3345	1
R301	feed. comp 10K, ±5% 1/4w	1	EE-3095	A. B.	01121	0096-3095	1
R302, 303	feed. comp 30K, ±5% 1/4w	2	EE-3635	A. B.	01121	0096-3635	1
R304	feed. comp 75, ±5% 1/4w	1	EE-7195	A. B.	01121	0096-7195	1
R305	feed. comp 8.2K, ±5% 1/4w	1	EE-6125	A. B.	01121	0096-6125	1
R306, 315	feed. comp 1K, ±5% 1/4w	2	EE-1035	A. B.	01121	0096-1035	1
R307	var. wv 10K,	1	Series 75	C. T. S.	71450	2130-0093	1
R308	feed. comp 1.2K, ±5% 1/4w	1	EE-1225	A. B.	01121	0096-1225	1
R309	feed. wv 50, ±5% 40w	1	Type 817	W. L.	43743	0018-0044	1
R310	feed. comp 47K, ±5% 1/4w	1	EE-4735	A. B.	01121	0096-4735	1
R311	feed. wv 2.7, ±5%	1	Type 8WH	I. R. C.	07716	0011-1671	1
R312, 311, 311	feed. wv 100, ±5% 1/4w	3	EE-1035	A. B.	01121	0096-1035	1
R313	feed. wv 10K, ±5% 1/4w	1	EE-1035	A. B.	01121	0096-1035	1
R400	Strip	1		HLAB	09182		1
R401	LEAVE OPEN						
R406	feed. wv 500, ±5% 1/4w	1	Type 10RM	W. L.	43743	0018-0054	1
R408, 502	feed. comp 47, ±5% 1/4w	2	EE-4735	A. B.	01121	0096-4735	1
R409	feed. comp 470, ±5% 1/4w	1	EE-4735	A. B.	01121	0096-4735	1
R410	feed. comp 100K, ±5% 1/4w	1	EE-1045	A. B.	01121	0096-1045	1
R411	feed. met. film 1K, ±1% 1/4w	1	Type CEB T-O	I. R. C.	07716	0757-0338	1
R412, 871	feed. met. film 1.2K, ±5% 1/4w	2	Type CEB T-O	I. R. C.	07716	0096-3534	1
R413	feed. met. film 2K, ±1% 1/4w	1	Type CEB T-O	I. R. C.	07716	0757-0739	1
R414, 806, 808	feed. comp SELECTIVE ±5% 1/4w	3	Type EB	A. B.	00121		1
R415, 408-410	feed. met. film 8.2K, ±5% 1/4w	4	Type CEB T-O	I. R. C.	07716	0096-9149	1
R416	feed. met. film 8.2K, ±5% 1/4w	1	Type CEB T-O	I. R. C.	07716	0096-9283	1
R417	feed. met. film 500, ±1% 1/4w	1	Type CEB T-O	I. R. C.	07716	0096-9144	1
R418	feed. wv 100, ±5% 1/4w	1	242E 3915	Sprague	56289	0011-1799	1
R700	feed. met. ox 27K, ±5% 2w	1	Type C425	Corning	16299	0096-3629	1
R701	feed. comp 24, ±5% 1/4w	1	EE-2405	A. B.	01121	0096-2405	1
R702	feed. wv 1.4K, ±5% 1/4w	1	242E-2425	Sprague	56289	0011-0887	1
R703	feed. comp 3.9K, ±5% 1/4w	1	EE-3925	A. B.	01121	0096-3925	1
R704	feed. comp 8.2K, ±5% 1/4w	1	EE-8125	A. B.	01121	0096-8125	1
R705	feed. comp 110K, ±5% 1/4w	1	EE-1145	A. B.	01121	0096-1145	1
R706	feed. comp 4.7, ±5% 1/4w	1	CG-0475	A. B.	01121	0096-0475	1
R707	feed. comp 4.7K, ±5% 1/4w	1	EE-4725	A. B.	01121	0096-4725	1
R708	feed. comp 5.6K, ±5% 1/4w	1	EE-5625	A. B.	01121	0096-5625	1
R709	feed. comp 8.2K, ±5% 1/4w	1	EE-8225	A. B.	01121	0096-8225	1
R710	feed. comp 400K, ±5% 1/4w	1	EE-4345	A. B.	01121	0096-4345	1
R711	var. wv 50,	1	Type 110-F4	C. T. S.	11236	2130-1024	1
R712	feed. comp 12K, ±5% 1/4w	1	EE-1235	A. B.	01121	0096-1235	1
R713	feed. comp 91K, ±5% 1/4w	1	EE-9135	A. B.	01121	0096-9135	1
R800	feed. wv 3.3, ±5% 40w	1	200-37/5680	W. L.	73976	0018-3059	1
R801	feed. wv 2K, ±5% 1/4w	1	242E-3325	Sprague	56289	0011-1806	1
R802	feed. wv 7.1K, ±5% 1/4w	1	242E-7325	Sprague	56289	0011-1815	1
R803, 818	var. wv 1.2K, -2%, DUAL	1		HLAB	09182	2130-1803	1
R813, 814	var. wv 5K, -5%, DUAL	1		HLAB	09182	2130-0996	1
R816	feed. comp 62K, ±5% 1/4w	1	EE-6235	A. B.	01121	0096-6235	1
R817	feed. comp 81, ±5% 1/4w	1	EE-8135	A. B.	01121	0096-8135	1
R818	feed. comp 27K, ±5% 1/4w	1	EE-2735	A. B.	01121	0096-2735	1
R821	feed. met. film 33K, ±1% 1/4w	1	Type CEA T-O	I. R. C.	07716	0757-0449	1
R822	feed. comp 91K, ±5% 1/4w	1	EE-9135	A. B.	01121	0096-9135	1
R823	feed. met. film 12K, ±1% 1/4w	1	Type CEA T-O	I. R. C.	07716	0096-0888	1
R824	feed. comp 15K, ±5% 1/4w	1	EE-1535	A. B.	01121	0096-1535	1
R825	feed. met. ox 15K, ±5% 2w	1	Type C425	Corning	16299	0096-3625	1
R826	feed. comp 3.3K, ±5% 1/4w	1	EE-3325	A. B.	01121	0096-3325	1
R827	feed. wv 3, ±5% 2w	1	242E3925	Sprague	56289	0011-1234	1

Reference Designator	Description	Quantity	Mfr. Part # or Type	Mfr.	Mfr. Code	Stock No.	RS
R828	fed. comp 300K, $\pm 5\%$ $\frac{1}{2}w$	1	ES-36-05	A. B.	01121	0686-3645	1
R850	fed. met. film 10K, $\pm 1\%$ $\frac{1}{4}w$	1	Type CEA T-C	I. R. C.	07716	0698-3260	1
R851, R84, R5C, R59	fed. met. film 500, $\pm 1\%$ $\frac{1}{4}w$	4	Type CEA T-C	I. R. C.	07716	0757-3099	1
R852, R63	fed. met. film 100, $\pm 1\%$ $\frac{1}{4}w$	2	Type CEA T-C	I. R. C.	07716	0757-0401	1
R853, R65	var. ww 25K,	2	Type 110-P4	C. T. S.	11236	2199-0439	1
R857	fed. met. film 1.2K, $\pm 1\%$ $\frac{1}{2}w$	1	Type CEB T-C	I. R. C.	07716	0698-3149	1
R858	fed. met. film 9, 31K, $\pm 1\%$ $\frac{1}{2}w$	1	Type CEB T-C	I. R. C.	07716	0698-3281	1
R860, R63	fed. met. film 36K, $\pm 1\%$ $\frac{1}{2}w$	2	Type CEB T-C	I. R. C.	07716	0757-0723	1
R861, R63, R64, R67	fed. met. film 3, 40K, $\pm 1\%$ $\frac{1}{2}w$	4	Type CEB T-C	I. R. C.	07716	0698-4642	1
R866	fed. met. film 75K, $\pm 1\%$ $\frac{1}{4}w$	1	Type CEA T-C	I. R. C.	07716	0757-0420	1
R868, R69	fed. met. film 36, 5K, $\pm 1\%$ $\frac{1}{2}w$	2	Type CEB T-C	I. R. C.	07716	0757-0765	1
R870	var. ww 10K,	1	Type 110-P4	C. T. S.	11236	2199-0396	1
R872	fed. met. film 2K, $\pm 1\%$ $\frac{1}{4}w$	1	Type CEA T-C	I. R. C.	07716	0757-0283	1
R900	fed. comp 39K, $\pm 5\%$ $\frac{1}{2}w$	1	ES-1938	A. B.	01121	0686-3935	1
R901	fed. comp 180K, $\pm 5\%$ $\frac{1}{2}w$	1	ES-1845	A. B.	01121	0686-1845	1
R902	fed. comp 2K, $\pm 5\%$ $\frac{1}{2}w$	1	ES-3035	A. B.	01121	0686-3035	1
R903	fed. comp 33K, $\pm 5\%$ $\frac{1}{2}w$	1	ES-3335	A. B.	01121	0686-3335	1
S1	Switch, pilot lt. (red) ON/OFF	1	54-61681-26A1B	Cok	87034	3101-0100	1
S2	Switch, rotary (meter)	1	3 poles, 4 position	HLAB	09182	3109-1910	1
T710	Power Transformer	1		HLAB	09182	9199-1824	1
T810	Power Transformer	1		HLAB	09182	9199-1842	1
T891	Bus Transformer	1		HLAB	09182	9199-1832	1
VR300	Diode, zener 4.22V $\pm 5\%$ 400mw	1		HLAB	09182	1902-3079	1
VR600	Diode, zener 9.4V $\pm 5\%$ 500mw	1	1N3163	U. S. Sencor	94751	1902-0762	1
VR601	Diode, zener 6.2V $\pm 5\%$ 4.22V	1	1N921	N. A. Elect.	04486	1902-0761	1
	Meter $3\frac{1}{2}$ " DUAL, 0-24V 0-6A	1		HLAB	09182	1130-1135	1
	Meter head $\frac{1}{2}$ MOD.	1		HLAB	09182	4040-0294	1
	Meter Spring	4		HLAB	09182	1460-0256	1
	Pushholder	1	342004	Lambertson	75915	1400-0084	1
	Binding Post (Silver)	1	DF211M	HLAB	09182	1510-0040	1
	Binding Post (Black)	2	DF211BC	Superior	58474	1510-0039	1
	Rubber feet	4	MS-50	Stockwell	87575	0403-0080	1
	Knob, $\frac{1}{8}$ " dia. (Black)	1		HLAB	09182	0370-0084	1
	Knob, insert pointer, $\frac{1}{8}$ " dia.	2		HLAB	09182	0370-0101	1
	Knob, $\frac{1}{8}$ dia., (Red)	2		HLAB	09182	0370-0179	1
	Knob Strip	1		HLAB	09182	0360-0236	1
	Line cord $7\frac{1}{2}$ " FS 151	1	EH-4036	Baldon	70903	8120-0050	1
	Strain Relief Bushing	1	SR-SF-1	Hayco	28520	0400-0013	1
	Mica washer	2	734	Reliance	08530	0340-0174	1
	Mica washer 1" dia.	4		Reliance	08530	2199-0710	1
	Mica washer $\frac{1}{8}$ " dia.	2		Reliance	08530	2199-0708	1
	Delrin Bushing	6		HLAB	09182	0340-0169	2
	Delrin Bushing	2		HLAB	09182	0340-0171	1
	Jumper (Knob Strip)	9	422-19-11 013	Cinch	71785	0340-1274	2
OPTION 07:							
	Voltage 10-Turn Potentiometer	1	Series 9400	I. R. C.	07716	2199-1965	1

Reference Designator	Description	Quantity	Mfr. Part # or Type	Mfr.	Mfr. Code	Stock No.	RS
OPTION 08:	Current 10-Turn Potentiometer	1	Series 8400	I. R. C.	07716	2100-1864	1
OPTION 09:	Voltage/Current 10-Turn Pots	1	(Includes:)				
	Voltage 10-Turn Potentiometer	1	Series 8400	I. R. C.	07716	2100-1865	1
	Current 10-Turn Potentiometer	1	Series 8400	I. R. C.	07716	2100-1864	1
OPTION 13:	Voltage Decadial Control	1	(Includes:)				
	Voltage 10-Turn Potentiometer	1	Series 8400	I. R. C.	07716	2100-1865	1
	Decadial Control	1	RD-411	I. R. C.	07716	1140-0020	1
OPTION 14:	Current Decadial Control	1	(Includes:)				
	Current 10-Turn Potentiometer	1	Series 8400	I. R. C.	07716	2100-1864	1
	Decadial Control	1	RD-411	I. R. C.	07716	1140-0020	1

## APPENDIX A

## Option 11. Overvoltage Protection "Crowbar"

## DESCRIPTION:

This option is installed in DC Power Supplies, 6282A, 6285A, 6286A, 6290A, 6291A, and 6296A, and tested at the factory. It consists of a printed circuit board, screwdriver-type front panel potentiometer, and six wires that are soldered to the main power supply board.

The crowbar monitors the output voltage of the power supply and fires an SCR that effectively shorts the output when it exceeds the preset trip voltage. The trip voltage is determined by the setting of the CROWBAR ADJUST control on the front panel. The trip voltage range is as follows:

Model	6282A	6285A	6286A	6290A	6291A	6296A
Trip Voltage Range	1-13V	2-22V	2-22V	5-42V	5-42V	6-66V

To prevent transients from falsely tripping the crowbar, the trip voltage must be set higher than the power supply output voltage by the following margin: 7% of the output voltage +1V. The margin represents the minimum crowbar trip setting for a given output voltage; the trip voltage can always be set higher than this margin.

## OPERATION:

1. Turn the CROWBAR ADJUST fully clockwise to set the trip voltage to maximum.
2. Set the power supply VOLTAGE control for the desired crowbar trip voltage. To prevent false crowbar tripping, the trip voltage should exceed the desired output voltage by the following amount: 7% of the output voltage +1V.
3. Slowly turn the CROWBAR ADJUST ccw until the crowbar trips, output goes to 0V or a small positive voltage.
4. The crowbar will remain activated and the output shorted until the supply is turned off. To reset the crowbar, turn the supply off, then on.

Table A-1. Replaceable Parts

REP. DESIG.	DESCRIPTION	TQ	MFR. PART NO.	MFR. CODE	HP PART NO.	ES
C1	fld. film .1 $\mu$ F 200Vdc	1	192P10492	56289	0160-0168	1
CR1-4	Diode, SL 200mA 200prv	4	1N485B	09182	1901-0033	4
CR6	Rect. SL 12A 100prv	1	1N1200A	02735	1901-0002	1
CR7	SCR 8A 200prv	1	2N3669	02735	1884-0019	1
Q1	SS NPN SL	1	2N2714	03508	1854-0027	1
Q2	SS NPN SL	1	2N3417	03508	1854-0087	1
Q3	SS PNP SL	1	T2173	56289	1853-0099	1
R1	fld. comp 75 $\Omega$ , $\pm$ 5% $\frac{1}{2}$ W	1	EB-7515	01121	0686-7515	1
R2	fld. comp 200K $\Omega$ , $\pm$ 5% $\frac{1}{2}$ W	1	EB-2045	01121	0686-2045	1
R3	fld. comp 10K $\Omega$ , $\pm$ 5% $\frac{1}{2}$ W	1	EB-1035	01121	0686-1035	1
R4	fld. comp 3.9K $\Omega$ , $\pm$ 5% $\frac{1}{2}$ W	1	EB-3925	01121	0686-3925	1
R6	fld. comp 4.7 $\Omega$ , $\pm$ 5% $\frac{1}{2}$ W	1	EB-47G5	01121	0698-0001	1
R7	fld. comp 47 $\Omega$ , $\pm$ 5% $\frac{1}{2}$ W	1	C-425	16299	0698-3626	1
R8	fld. met. ox. 180 $\Omega$ , $\pm$ 5% 2W	1	Type C-425	16299	0698-3626	1
R9	fld. met. film 1.21K $\Omega$ , $\pm$ 1% 1/8W	1	Type CIA T-O	07716	0757-0274	1
R10	fld. comp 39 $\Omega$ , $\pm$ 5% 3W	1	242E	56289	0811-1799	1
R11	var. ww 5K $\Omega$ , $\pm$ 5% 2W	1		09182	2100-1853	1
R12	fld. ww 0.125 $\Omega$ , $\pm$ 5% 5W	1		09182	0811-1846	1
R13	fld. comp 200K $\Omega$ , $\pm$ 5% $\frac{1}{2}$ W	1	EB-2045	01121	0686-2045	1
T1	Pulse Transformer	1		09182	9100-1824	1
VR1	Diode, zener 5.62V $\pm$ 5%	1	1N3512	07716	1902-3104	1
	MISCELLANEOUS					
	Bushing, Potentiometer	1		09182	1409-0052	
	Nut, Hex	1		09182	2950-0034	
	Printed Circuit Board Assembly, Includes Components	1		09182	06285-60021	
	Printed Circuit Board, Bracket Modified Front Panel, Includes Components	1		09182	5000-6125	
		1		09182	06285-60003	


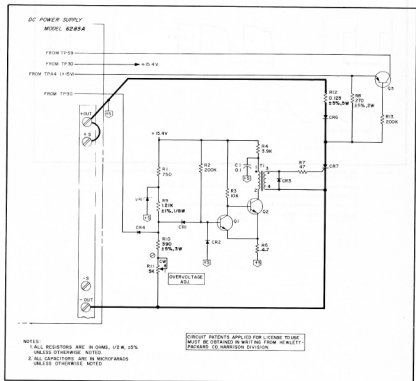


Figure A-1. Model 6285A Overvoltage Protection Crowbar




- NOTES:
1. ALL WAVEFORMS TAKEN WITH 100PAC, 4000, SINGLE-PHASE INPUT AT MAXIMUM RATED OUTPUT VOLTAGE AND NO LOAD CONNECTED. AMPLITUDES ARE TYPICAL ±30%.
  2. OSCILLOSCOPE DC COUPLED AND REFERENCED TO T. P. 36 UNLESS OTHERWISE INDICATED.
  3. WAVEFORMS ARE NOT DRAWN TO SCALE.
  4. AMPLITUDE OF WAVEFORM AT T. P. 47 VARIES WITH DIFFERENT MODELS AS FOLLOWS:

MODEL NO.	619A	620A	620A	620A	621A	620A
VOLTAGE	+15V	+17V	+15V	+10V	+17V	+20V

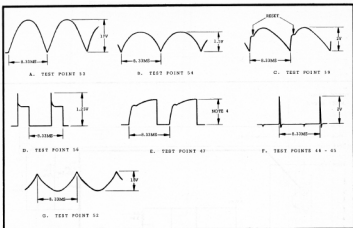






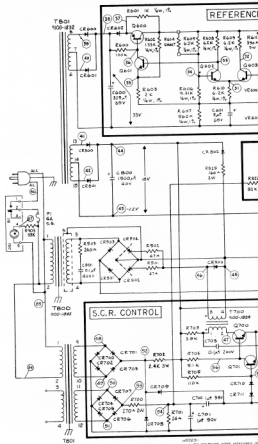

1. 35V SUPPLY  
 2. 115VAC INPUT  
 3. VOLTAGE REFERENCED TO  
 4. VOLTAGE NOT TYPICAL  
 5. ALL WINDINGS TAKEN WITH  
 6. MOTOR WINDING SITED TO  
 CONTROL WINDING IN T

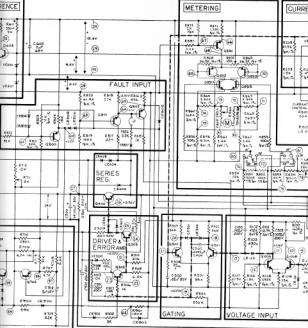

1. SEE THE FOLLOWING DRAWINGS FOR SYMBOLS.

2. ALL VALUES UNLESS OTHERWISE SPECIFIED ARE IN OHMS.

3. ALL RESISTORS ARE 1/2 WATT, 5% TOLERANCE UNLESS OTHERWISE SPECIFIED.

4. ALL CAPACITORS ARE 50V UNLESS OTHERWISE SPECIFIED.

5. ALL RELAYS ARE 12VDC UNLESS OTHERWISE SPECIFIED.

6. ALL VOLTAGES ARE UNLESS OTHERWISE SPECIFIED.

7. ALL VALUES UNLESS OTHERWISE SPECIFIED ARE IN OHMS.

8. ALL VALUES UNLESS OTHERWISE SPECIFIED ARE IN OHMS.



## MANUAL CHANGES

Model 6285A DC Power Supply  
Manual HP Part No. 06285-90001

Make all corrections in the manual according to errors below, then check the following table for your power supply serial number and enter any listed change(s) in the manual.

SERIAL		MAKE CHANGES
Prefix	Number	
6K	0191-0201	1
6K	0222-0251	1, 2
6K	0262-0291	1, 2, 3
7M	0382-0341	1, 2, 3, 4
7M	0342-0416	1 thru 5
7M	0417-0461	1 thru 6
7M	0462-0596	1 thru 7
All	...	Errors
1147A	0682-0706	1 thru 9
1147A	0707-1206	1 thru 10
1548A	1207-1218	1 thru 11
1550A	1219 - up	1 thru 12


### CHANGE 1:

In the replaceable parts table, change R309 from 5K12 to 4K12.

### CHANGE 2:

In the replaceable parts table make the following changes:  
VR606: Change to 1N2162A, Motorola, HP Part No. 1902-0762.  
T801: Change T801 to HP Part No. 9100-2184.

On the schematic, the primary of bias transformer T801 is connected as shown in the sketch below for 115Vac operation. For 230Vac operation the jumpers between lugs 1 and 3, and 2 and 4 must be removed and lugs 2 and 3 connected together. In addition, a new power transformer, T800, must be installed in accordance with Option 1B.

 

### CHANGE 3:

In the replaceable parts table, make the following changes:  
CR603: Add new diode CR603, 200mA, 200V, HP Part No. 1901-0032.

► R212: Change to 1K12, (Selected) 1/4W, HP Part No. 0686-1025.

R601: Change to 4221, 1/4W, HP Part No. 0686-4586.

R356: Change to 4.7K, 2W, 0WH, 1%.  
R620: Change to 5K12 potentiometer, HP Part No.

3170-1824.

R671: Change to 7501 ±1%, 1/8W, HP Part No. 0252-0429.

R672: Delete resistor R672.

R800: Add new zener diode VR800, 4.22V, HP Part No. 1902-3070.

On the schematic, connect new diode CR603 across VR800 in the reference circuit. Anode to +5 and cathode to +8.4 volts. Also, delete R672 in the meter circuit and connect VR800 in its place. Anode to base of Q850 and cathode to +15.4 volts.

### CHANGE 4:

On the title page, change serial number prefix from "6K" to "7M".

In the replaceable parts, delete S1 (switch/pilot light) and replace with separate toggle switch (S1, HP Part No. 3101-0664) and pilot light (DS1, HP Part No. 1450-0048).

Schematic connections to these two components remain the same, except that they are physically separate. Also on the schematic, change R608 in the reference circuit to 6.2K12.

### CHANGE 5:

In the replaceable parts table, change R626 to 3.9K, 0.5W, 1/4W, HP Part No. 0686-3925.

### CHANGE 6:

In the replaceable parts table, make the following changes:  
R712: Change to 15K12 ±5%, 1/4W, A. B., HP Part No. 0686-1525.

**CHANGE 7:**

In the replaceable parts table, change R501 and R502 to 22K 15W, 1/4W, HP Part No. 06285-2205.

**ERRATA:**

(1702, 800, 860, 852, 853): Change to 2N2907A, Sprague, 96289, HP Part No. 1853-0099.

On page 3-2, Figure 3-4, disconnect strap between terminals A4 and A5 and connect A5 to +E.

On page 3-3, Figure 3-4, disconnect strap between terminals A7 and A8 and connect A8 to +E.

On page 5-14, paragraph 5-63, Step b, change it to read as follows:

- b. Connect dc voltmeter between TP27 and emitter of series regulator transistor(s).

On page 5-8, in Step 3d. of Table 5-4, change the last sentence to read:

If it is not, proceed to Step 4.

In specifications table on page 1-3, change the specification on output impedance to read:

1 milliohm in series with 1 microhenry.

On page 5-6, in step lg) of paragraph 5-22 and step li) of paragraph 5-23, change the maximum variation in differential voltmeter reading to 10.7 millivolts.

**CHANGE 8:**

In the replaceable parts table, make the following changes:  
 RT02: Change to 1.5K, 3W, 50W, HP Part No. 0811-1805.  
 RT09: Change to 1.5K, 50W, HP Part No. 0686-1625.

**CHANGE 9:**

In the replaceable parts table, change the HP Part No. of CR501, CR503 from 1901-0323 to 1901-0315.

**CHANGE 10:**

The standard colors for this instrument are now mint gray (for front panel) and olive gray (for all other external surfaces). Option X95 designates use of the former color scheme of light gray and blue gray. Option A85 designates use of a light gray front panel with olive gray used for all other external surfaces. New part numbers are shown below.

**ERRATA:**

In the parts list on page 6-5, change the HP Part No. of CR501 and CR503 to 1901-0317.

**ERRATA:**

In table 1-1 and paragraph 5-20, change the INTERNAL IMPEDANCE AS A CONSTANT VOLTAGE SOURCE (Output Impedance) specification to read as follows:

OUTPUT IMPEDANCE (TYPICAL): Approximated by a 0.001 milliohm resistance in series with a 1 microhenry inductance.

DESCRIPTION	HP PART NO.		
	STANDARD	OPTION A85	OPTION X95
Front Panel, Lettered	06285-00004	06285-00001	←
Heat Sink Assembly	5000-7968	←	5000-6131
Rear Chassis	5000-9485	←	5000-6103
Cover, Top	5000-9431	←	5000-6104
Chassis, Right Side	5000-9400	←	5000-6098
Chassis, Left Side	5000-9407	←	5000-6099

#### CHANGE 11:

All primary ac connections have been removed from the circuit board and are now made directly to the transformer primaries. Pilot light solenoid R903 has been removed from the PC board and is now on a new terminal strip (00693-1690) mounted on the SCR feedback assembly. These changes do not affect the circuit schematic.

#### CHANGE 12:

In this supply, main power transformer T800 has been replaced by a new transformer with a dual winding primary for 115/230V ac operation. The new transformer (HP Part No. 06285-80001) replaces both T800 transformers presently used in this model for 115V or 230V operation. Since it is no longer necessary to replace T800 to convert the supply from 115V to 230V operation, or vice-versa, Option 018 (which equipped the supply for 230V operation only) has been discontinued to be replaced by a new Option 029. Option 029 modifies the standard 115V unit to a 230V unit as described below.

To convert the supply for 230V operation:


- Remove the jumpers from between terminals 1 and 3, and 2 and 4 of T800.
- Install a jumper between terminals 2 and 3 on T800.
- Replace F1 with a 2A 250V fuse, 21-00-0002.

Note: Due to the circuit changes shown below, it is no longer necessary to change any jumper connection at T801. The dual primary windings of T801 are now permanently wired in parallel across winding 3-4 of T800. The pilot light, in series with R903, is also connected across this winding.

The revised primary circuit schematic is shown below.

#### ERRATA:

In replaceable parts list, change HP Part No. of pilot lamp DS1 to 1430-0566.

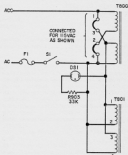

Effective January 1st, 1977, Options 007 (10-turn voltage control) and 008 (10-turn current control) are no longer available individually, but they are still available combined as Option 009. Likewise, Options 013 (10-turn voltage control with decadal) and 014 (10-turn current control with decadal) are no longer available individually, but they are available combined into a single new option designated Option 015. Make these changes whenever Option 007, 008, 013, or 014 is mentioned in the manual.

The front panel binding posts have been changed to a type with better designed insulation. Delete the two types of posts listed on page B-7 of the parts list and add: black binding post, HP Part No. 1510-0114 (qty. 2); and red binding post, HP Part No. 1510-0115 (qty. 1).

In Table 1-1 and paragraph 5-2b, change the internal impedance as a constant voltage source (output impedance) specification to read as follows: Output impedance (typical): Approximated by a 1 millihenry inductor in series with a 1 microhenry inductance.

Indicate on the schematic with a dagger (†) to show that 1k is the nominal value for R213. The value for R213 is factory selected to optimize the range of transient adjust per R207.