


What to Do If the COOLPIX990/880 is Listed Under Other Devices

- Windows 98/98 Second Edition (SE) -


Step 1

The Device Manager sheet will be displayed. Double-click the listing for the “Nikon Digital Camera E990” that appears under “Other devices” or “Miscellaneous Devices.”

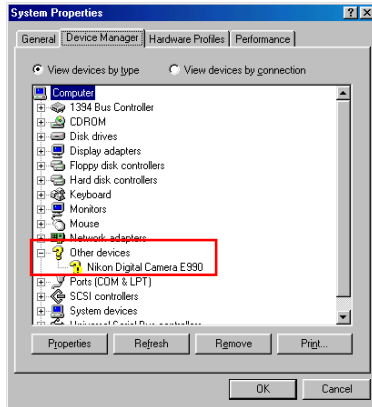


Step 2

The Nikon Digital Camera E990 Properties dialog will be displayed. Open the General tab and click **Reinstall Driver**.

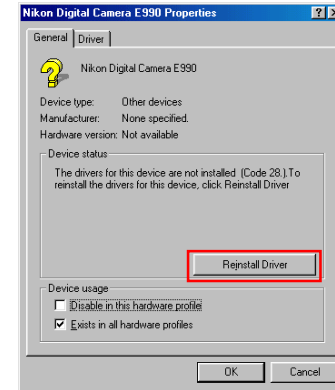

Step 3

The Windows Update Device Driver Wizard will be displayed; click **Next**.

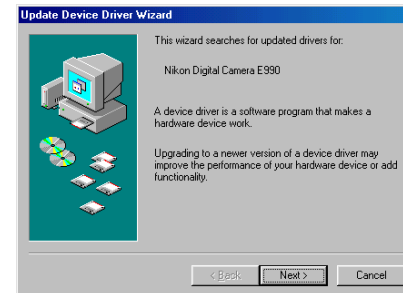

[Click here](#)  to proceed to the next step.


Step 4

The dialog shown below will be displayed. Select “Search for a better driver than the one your device is using now. (Recommended)” and click **Next**.



Step 5

The dialog shown below will be displayed. Holding down the shift key to prevent the Welcome dialog from opening automatically, insert the Nikon View 4 CD into the CD-ROM drive. Select **CD-ROM drive** and click **Next**.

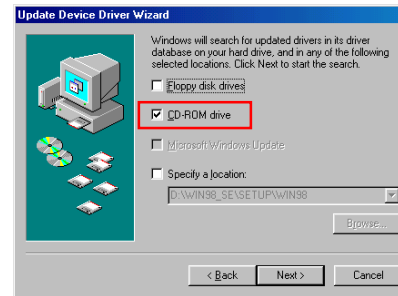


If the Welcome dialog appears when the CD-ROM is inserted, close the dialog by clicking the **Quit** button.

Click [here](#)  to proceed to the next step.

Step 6


A dialog will be displayed stating that Windows has found the drivers for “Nikon COOLPIX990”; click **Next**.

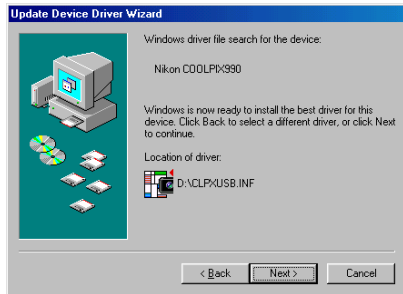



If the message, “Windows was unable to find a suitable driver for this device,” is displayed, this may indicate that the Nikon View 4 CD was not correctly inserted in the CD-ROM drive or that the correct search location was not specified. Click **Back** to return to the dialog shown in Step 5, where you can confirm that the correct location has been specified.

If an Insert Disk message appears

 
If an insert disk message appears, insert the Windows 98 (Second Edition) CD-ROM and click **OK**.



If the Copy File dialog box appears, click **Browse**, double-click **win98** in the CD-ROM drive folder list, then click **OK**.

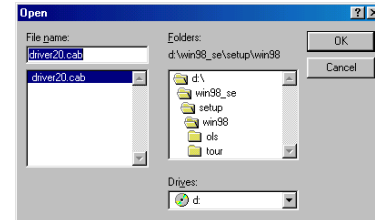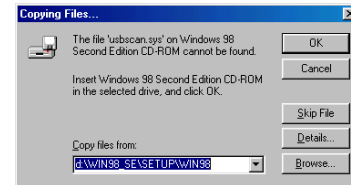

Confirm that the **win98** folder on the CD-ROM is displayed under “Copying Files ...” and click **OK**.

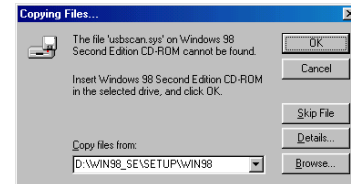


* If the Windows 98 (Second Edition) CD-ROM starts up click **X** to close the window.

Click [here](#)  to proceed to the next step.


Step 7

The dialog shown below will be displayed; click **Finish**.

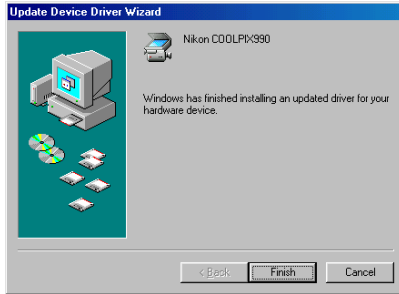


Step 8

The Nikon COOLPIX990 Properties dialog will be displayed. Click the General tab and confirm that “This device is working properly” appears under “Device status.” Click **Close**.

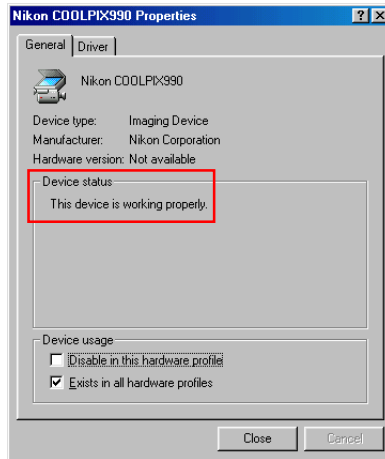

Step 9

Click **OK** to close the System Properties Dialog.

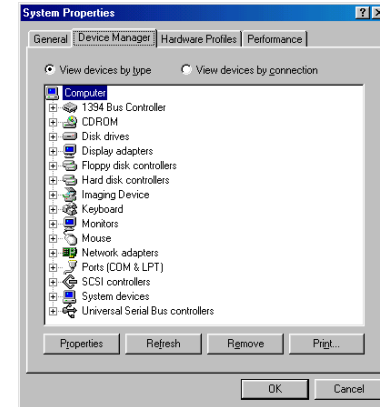

Click [here](#)  to return to the Nikon View 4 Reference Manual.