


# What to Do If the COOLPIX990/880 is Listed Under Other Devices

- Windows 2000 Professional-


## Step 1

The Device Manager will be displayed. Double-click the listing for Nikon Digital Camera E990 that appears under “Other devices” or “Miscellaneous Devices”.

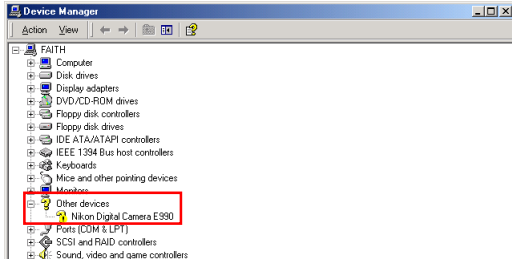

## Step 2

Open the General tab and click **Reinstall Driver....**

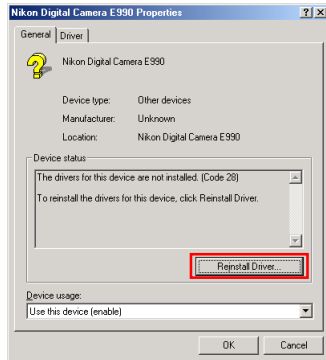


## Step 3

The Windows upgrade device driver wizard will be displayed; click **Next**.



## Step 4


Select “Search for a suitable driver for my device(recommended)” and click **Next**.

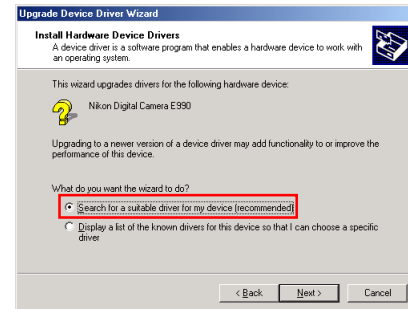

[Click here](#)  to proceed to the next step.

## Step 5


The dialog shown below will be displayed. Holding down the shift key to prevent the Welcome dialog from opening automatically, insert the Nikon View 4 CD into the CD-ROM drive. Select **CD-ROM drives** and click **Next**.

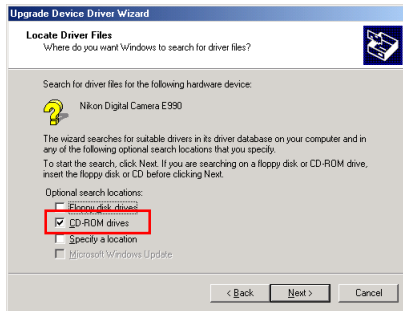

If the Welcome dialog appears when the CD-ROM is inserted, close the dialog by clicking the **Quit** button.

## Step 6


The dialog shown below will be displayed; click **Next**.

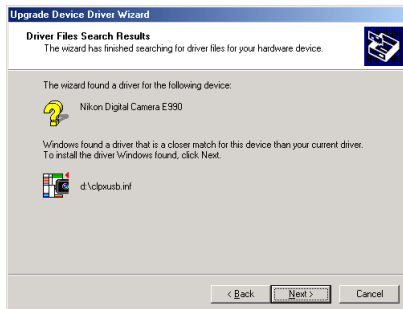

If the message, “Windows was unable to find a suitable driver for this device,” is displayed, this may indicate that the Nikon View 4 CD was not correctly inserted in the CD-ROM drive or that the correct search location was not specified. Click **Back** to return to the dialog shown in Step 5, where you can confirm that the correct location has been specified.


## Step 7

The dialog shown below will be displayed; click **Finish**.

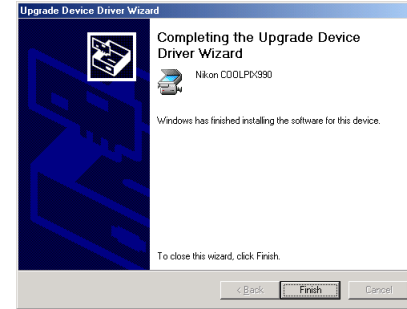

## Step 8

Confirm that “This device is working properly” appears under “Device status” in the General Tab of the Nikon COOLPIX990 Properties dialog. Click **Close**.

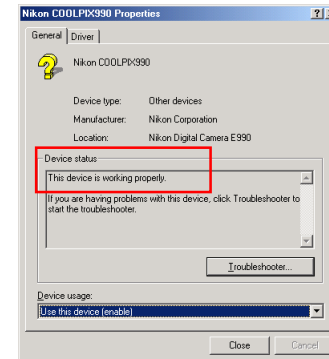

Click **OK** to close the System Properties dialog.

Click [here](#)  to return to the Nikon View 4 Reference Manual.