



BladeCenter and BladeCenter T

Management Module Command-Line Interface  
Reference Guide







@server

BladeCenter and BladeCenter T

Management Module Command-Line Interface  
Reference Guide

**Note:** Before using this information and the product it supports, read the general information in Appendix A, "Getting help and technical assistance," on page 103 and Appendix B, "Notices," on page 105.

**Second Edition (June 2004)**

**© Copyright International Business Machines Corporation 2004. All rights reserved.**

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

---

# Contents

<b>Chapter 1. Introduction</b> . . . . .	1
Before you begin . . . . .	2
<b>Chapter 2. Using the command-line interface</b> . . . . .	3
Command-line interface guidelines . . . . .	3
Selecting the command target . . . . .	4
Command authority . . . . .	5
Starting the command-line interface . . . . .	8
Telnet connection . . . . .	8
Secure Shell (SSH) connection . . . . .	9
Starting an SOL session . . . . .	9
Ending an SOL session . . . . .	10
<b>Chapter 3. Command reference</b> . . . . .	11
Built-in commands . . . . .	12
env (environment) command . . . . .	12
help command . . . . .	14
history command . . . . .	15
list (system physical configuration) command . . . . .	16
Common commands . . . . .	17
health commands . . . . .	17
identify (location LED) command . . . . .	20
info (configuration information) command . . . . .	22
update (update firmware) command . . . . .	23
Configuration commands . . . . .	26
alertentries command . . . . .	26
clear command . . . . .	32
dhcpinfo command . . . . .	34
dns command . . . . .	35
ifconfig command . . . . .	37
smtp command . . . . .	42
snmp command . . . . .	43
sol (serial over LAN) commands . . . . .	50
tcpcmdmode command . . . . .	54
telnetcfg (Telnet configuration) command . . . . .	56
users (management-module users) command . . . . .	57
Event-log commands . . . . .	65
clearlog command . . . . .	65
displaylog command . . . . .	66
Power-control commands . . . . .	67
boot command . . . . .	67
power command . . . . .	68
reset command . . . . .	71
Session commands . . . . .	73
console command . . . . .	73
exit command . . . . .	73
System management commands (for BladeCenter T only) . . . . .	74
alarm command . . . . .	74
thres (alarm threshold) command . . . . .	80
<b>Chapter 4. Error messages</b> . . . . .	85
Common errors . . . . .	86
alarm command errors . . . . .	87

alertentries command errors . . . . .	88
boot command errors . . . . .	88
clear command errors . . . . .	88
clearlog command errors . . . . .	89
console command errors . . . . .	89
dhcpinfo command errors . . . . .	89
displaylog command errors . . . . .	89
dns command errors . . . . .	90
health command errors . . . . .	90
identify command errors . . . . .	90
ifconfig command errors . . . . .	91
info command errors . . . . .	93
list command errors . . . . .	93
power command errors . . . . .	93
reset command errors . . . . .	94
smtp command errors . . . . .	94
snmp command errors . . . . .	94
sol command errors . . . . .	95
tcpcmdmode command errors . . . . .	96
telnetcfg command errors . . . . .	96
thres command errors . . . . .	97
update command errors . . . . .	97
users command errors . . . . .	99
<b>Appendix A. Getting help and technical assistance . . . . .</b>	<b>103</b>
Before you call . . . . .	103
Using the documentation . . . . .	103
Getting help and information from the World Wide Web . . . . .	103
Software service and support . . . . .	104
Hardware service and support . . . . .	104
<b>Appendix B. Notices . . . . .</b>	<b>105</b>
Edition notice . . . . .	105
Trademarks. . . . .	106
<b>Index . . . . .</b>	<b>107</b>

---

## Chapter 1. Introduction

The IBM® @server BladeCenter™ and the IBM @server BladeCenter T Management Module Command-Line Interfaces provide direct access to BladeCenter and BladeCenter T management functions as an alternative to using the Web-based user interface. Using the command-line interface, you can issue commands to control the power and configuration of the management module and other components in the BladeCenter or BladeCenter T units. The IBM @server BladeCenter and IBM @server BladeCenter T units are also referred to throughout this book as the BladeCenter unit. Unless otherwise noted, all commands can be run on both the BladeCenter and BladeCenter T units.

The command-line interface also provides access to the text-console command prompt on each blade server through a serial over LAN (SOL) connection. See the *IBM @server BladeCenter and BladeCenter T Serial Over LAN Setup Guide* for information about SOL and setup instructions.

You access the Management Module Command-Line Interface by establishing a Telnet connection to the IP address of the management module or through a Secure Shell (SSH) connection. You can initiate connections from the client computer using standard remote communication software; no special programs are required. Users are authenticated by the management module before they can issue commands. You enter commands one at a time; however, you can use command scripting to enter multiple commands. The interface does not support keyboard shortcuts, except for the special key sequence (pressing “Esc” then “(”) that terminates an SOL session.

The most recent versions of all BladeCenter and BladeCenter T documentation are available from the IBM Web site. Complete the following steps to check for updated BladeCenter and BladeCenter T documentation and technical updates:

1. Go to <http://www.ibm.com/pc/support/>.
2. In the **Learn** section, click **Online publications**.
3. On the “Online publications” page, in the **Brand** field, select **Servers**.
4. In the **Family** field, select **BladeCenter** or **BladeCenter T**.
5. Click **Continue**.

---

## Before you begin

The BladeCenter or BladeCenter T unit must be correctly configured before you can use the management-module command-line interface. Hardware and software required for the command-line interface are as follows:

### Hardware:

No special hardware is required to use the management-module command-line interface.

To use the SOL feature, an Ethernet I/O module that supports SOL must be installed in I/O-module bay 1. You can use the console command to control a blade server through SOL only on blade server types that support SOL functionality and have an integrated system management processor firmware level of version 1.00 or later. See the *IBM @server BladeCenter and BladeCenter T Serial Over LAN Setup Guide* for information.

### Firmware:

Make sure you are using the latest versions of device drivers, firmware, and BIOS code for your blade server, management module, and other BladeCenter components. Go to the IBM Support Web site, <http://www.ibm.com/pc/support/> for the latest information about upgrading the device drivers, firmware, and BIOS code for BladeCenter components. The latest instructions are in the documentation that comes with the updates.

The Management Module Command-Line Interface is supported by BladeCenter management module firmware level version 1.08 or later. All versions of BladeCenter T management module firmware support the command-line interface. The SOL feature has additional firmware requirements. See the *IBM @server BladeCenter and BladeCenter T Serial Over LAN Setup Guide* for information.



---

## Chapter 2. Using the command-line interface

The IBM Management Module Command-Line Interface provides a convenient method for entering commands that manage and monitor BladeCenter and BladeCenter T components. This chapter contains the following information about using the command-line interface:

- “Command-line interface guidelines”
- “Starting the command-line interface” on page 8
- “Starting an SOL session” on page 9
- “Ending an SOL session” on page 10

See Chapter 3, “Command reference,” on page 11 for detailed information about commands that are used to monitor and control BladeCenter and BladeCenter T components. Command-line interface error messages are in Chapter 4, “Error messages,” on page 85. See the *IBM @server BladeCenter and BladeCenter T Serial Over LAN Setup Guide* for SOL setup instructions and the documentation for your operating system for information about commands you can enter through an SOL connection.

---

### Command-line interface guidelines

All commands have the following basic structure:

*command -option parameter*

Some commands do not require options and some command options do not require parameters. You can add multiple options to a command on one line to avoid repeating the same command. Options that display a value and options that set a value must not be used together in the same command. Some examples of valid command option syntax are:

- *command*
- *command -option\_set*
- *command -option\_set parameter*
- *command -option1\_set parameter -option2\_set parameter*

For example, `telnetcfg -t 360`.

The information for each option is returned in the order in which it was entered and is displayed on separate lines.

Observe the following general guidelines when using the command-line interface:

- Case sensitivity

All commands, command options, and pre-defined command option parameters are case sensitive.

**Note:** If you receive a Command not found error, make sure that you are typing the commands in the correct case; they are case sensitive. For a list of valid commands, type `help` or `?`.

- Data types


The `ip_address` data type uses a predefined formatted string of `xxx.xxx.xxx.xxx`, where `xxx` is a number from 0 to 255

- Delimiters
  - Options are delimited with a minus sign.
  - In a command that requires parameters, a single space is expected between the option and the parameter. Any additional spaces are ignored.
- Output format
  - Failed commands generate failure messages.
  - Successful commands are indicated by the message OK, or by the display of command results.
- Strings
  - Strings containing spaces should be enclosed in quotation marks, such as in `snmp -cn "John B. Doe"`.
  - String parameters can be mixed case.
- The `help` command lists all commands and a brief description of each command. You can also issue the `help` command by typing `?`. Adding the `-h` parameter to any command displays its syntax.
- You can use the up arrow and down arrow keys in the command-line interface to access the last eight commands that were entered.

---

## Selecting the command target

You can use the command-line interface to target commands to the management module or to other devices installed in the BladeCenter unit. The command-line prompt indicates the persistent command environment: the environment where commands are entered unless otherwise redirected. When a command-line interface session is started, the persistent command environment is “system”; this indicates that commands are being directed to the BladeCenter unit. Command targets are specified hierarchically, as shown in the following illustration.

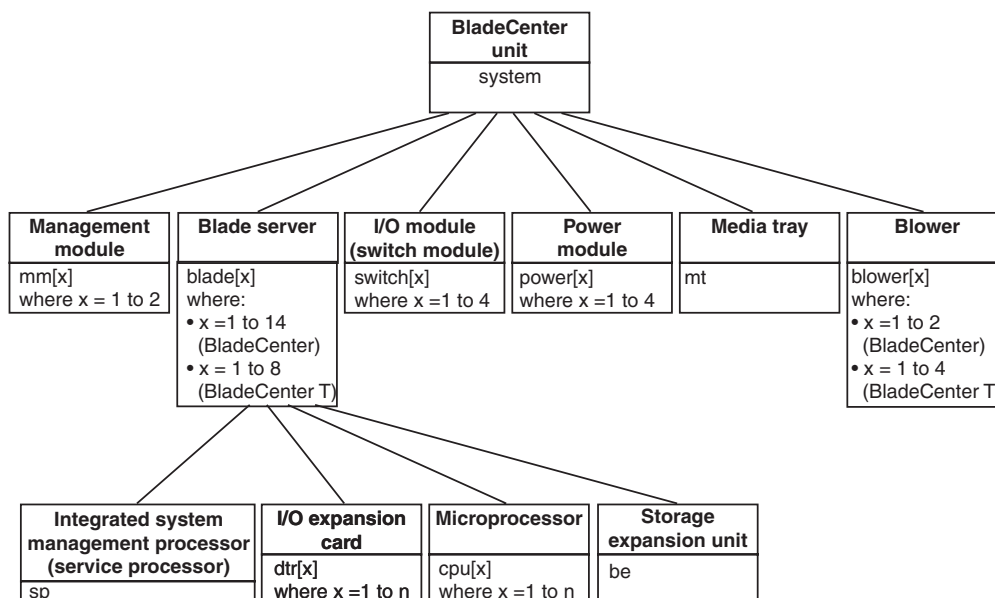

You can change the persistent command environment for the remainder of a command-line interface session by using the `env` command (see “env (environment) command” on page 12). When you list the target as a command attribute using the `-T` option, you change the target environment for the command that you are entering, temporarily overriding the persistent command environment. Target environments can be specified using the full path name, or using a partial path

name based on the persistent command environment. Full path names always begin with “system”. The levels in a path name are divided using a colon “:”.

For example:

- Use the `-T system:mm[1]` option to redirect a command to the management module in bay 1.
- Use the `-T system:switch[1]` option to redirect a command to the I/O (switch) module in I/O (switch) module bay 1.
- Use the `-T sp` option to redirect a command to the integrated system management processor (service processor) of the blade server in blade bay 3, when the persistent command environment is set to the blade server in blade bay 3.

Most management module commands must be directed to the primary management module. If only one management module is installed in the BladeCenter unit, it will always act as the primary management module. Either management module can function as the primary management module; however, only one management module can be primary at one time. You can determine which management module is acting as the primary management module using the `list` command (see “list (system physical configuration) command” on page 16).

---

## Command authority

Some commands in the command-line interface can only be successfully executed by users who are assigned a required level of authority. Commands that display information do not require any special command authority. Users with “Supervisor” command authority can successfully execute all commands.

The following table shows command-line interface commands and their required authority levels. To use the table, observe the following guidelines:

- The commands listed in this table only apply to the command variants that set values or cause an action: display variants of the commands do not require any special command authority.
- When only one command authority at a time is required to execute a command, this is indicated by a “•” entry in a table row.
- When a command has several rows associated with it, each row indicates one of the valid user command authorities needed to successfully execute the command. For example, the `clearlog` command is available to users with the “Supervisor” command authority or to users with the “Ability to Clear Event Logs” command authority.
- When a combination of two or more command authorities at a time is required to execute a command, this is indicated by multiple “◇” entries in a table row. The user must be assigned both of these command authorities to successfully execute the command. For example, one available authority combination for the `boot -c` command is the “Blade Server remote Control Access” command authority and the “Blade and I/O Module Power/Restart Access” command authority.

Table 1. Command authority relationships

Command	Authority									
	Supervisor	User Account Management	Blade Server Remote Console Access	Blade Server Remote Console and Virtual Media Access	Blade and I/O Module Power/Restart Access	Ability to Clear Event Logs	Basic Configuration (MM, I/O Modules, Blades)	Network and Security Configuration	Advanced Configuration (MM, I/O Modules, Blades)	
alarm	.						.		.	
alertentries	.	.								
boot	.				.					
boot -c	.		◇		◇					
clear -config	.			◇	◇				.	
clearlog	.					.				
console	.		.	.						
dns	.						.		.	
identify	.						.		.	
ifconfig	.						.		.	
power	.				.					
power -c	.		◇	◇	◇					

Table 1. Command authority relationships (continued)

Command	Authority									
	Supervisor	User Account Management	Blade Server Remote Console Access	Blade Server Remote Console and Virtual Media Access	Blade and I/O Module Power/Restart Access	Ability to Clear Event Logs	Basic Configuration (MM, I/O Modules, Blades)	Network and Security Configuration	Advanced Configuration (MM, I/O Modules, Blades)	
reset (blade server or ISMP)	•				•					
reset -c (blade server, ISMP, or I/O module)	•		◇	◇	◇					
reset (management module)	•							•		
reset -std, -exd, -full (I/O module)	•				•					
smtp	•							•	•	
snmp	•							•	•	
sol	•							•	•	
tcpcmdmode	•							•	•	
telnetcfg	•							•	•	
thres	•						•		•	
update	•								•	
users	•	•								

---

## Starting the command-line interface

Access the Management Module Command-Line Interface from a client computer by establishing a Telnet connection to the IP address of the management module or by establishing a Secure Shell (SSH) connection. You can establish up to 20 separate Telnet or SSH sessions to the BladeCenter management module, giving you the ability to have 20 command-line interface sessions active at the same time.

Although a remote network administrator can access the Management Module Command-Line Interface through Telnet, this method does not provide a secure connection. As a secure alternative to using Telnet to access the command-line interface, SSH ensures that all data that is sent over the network is encrypted and secure.

The following SSH clients are available. While some SSH clients have been tested, support or non-support of any particular SSH client is not implied.

- The SSH clients distributed with operating systems such as Linux, AIX®, and UNIX® (see your operating-system documentation for information). The SSH client of Red Hat Linux 8.0 Professional was used to test the command-line interface.
- The SSH client of cygwin (see <http://www.cygwin.com> for information)
- Putty (see <http://www.chiark.greenend.org.uk/~sgatham/putty> for information)

The following table shows the types of encryption algorithms that are supported, based on the client software version that is being used.

Algorithm	SSH version 1.5 clients	SSH version 2.0 clients
Public key exchange	SSH 1-key exchange algorithm	Diffie-Hellman-group 1-sha-1
Host key type	RSA (1024-bit)	DSA (1024-bit)
Bulk cipher algorithms	3-des	3-des-cbc or blowfish-cbc
MAC algorithms	32-bit crc	Hmac-sha1

## Telnet connection

To log on to the management module using Telnet, complete the following steps:

1. Open a command-line window on the network-management workstation, type `telnet 192.168.70.125`, and press Enter. The IP address 192.168.70.125 is the default IP address of the management module; if a new IP address has been assigned to the management module, use that one instead.

A command-prompt window opens.

2. At the login prompt, type the management-module user ID. At the password prompt, type the management-module password. The user ID and password are case sensitive and are the same as those that are used for management-module Web access.

A command prompt is displayed. You can now enter commands for the management module.

## Secure Shell (SSH) connection

To log on to the management module using SSH, complete the following steps:

1. Make sure that the SSH service on the network-management workstation is enabled. See your operating-system documentation for instructions.
2. Make sure that the SSH server on the BladeCenter management module is enabled. See the *IBM @server BladeCenter Management Module User's Guide* or the *IBM @server BladeCenter T Management Module User's Guide* for instructions.
3. Start a SSH session to the management module using the SSH client of your choice. For example, if you are using the cygwin client, open a command-line window on the network-management workstation, type `ssh 192.168.70.125`, and press Enter. The IP address 192.168.70.125 is the default IP address of the management module; if a new IP address has been assigned to the management module, use that one instead.

A command prompt window opens.

4. Type the management-module user ID when prompted. At the password prompt, type the management-module password. The user ID and password are case sensitive and are the same as those that are used for management-module Web access.

A command prompt is displayed. You can now enter commands for the management module.

---

## Starting an SOL session

**Note:** Serial over LAN (SOL) must be enabled for both the BladeCenter unit and the blade server before you can start an SOL session with the blade server. See “sol (serial over LAN) commands” on page 50 and the *IBM @server BladeCenter and BladeCenter T Serial over LAN Setup Guide* for information about setting up and enabling SOL.

After you start a Telnet or SSL session to the BladeCenter management module, you can start an SOL session to any individual blade server that supports SOL using the **console** command. Since you can start up to 20 separate Telnet or SSL sessions to the BladeCenter management module, this gives you the ability to have simultaneous SOL sessions active for each blade server installed in the BladeCenter unit.

Use the `console` command from the command line, indicating the target blade server. For example, to start an SOL connection to the blade server in blade bay 6, type

```
console -T system:blade[6]
```

A blade server that occupies more than one blade bay is identified by the lowest bay number that it occupies.

Once an SOL session is started, all commands are sent to the blade server specified by the `console` command until the SOL session is ended, regardless of the persistent command target that was in effect before the SOL session.

See “sol (serial over LAN) commands” on page 50 and the *IBM @server BladeCenter and BladeCenter T Serial over LAN Setup Guide* for information about

configuring a blade server for SOL. See your operating-system documentation for information about SOL commands that you can enter using the command-line interface.

---

## Ending an SOL session

To end an SOL session, press Esc followed by an open parenthesis:

Esc (

When the SOL session ends, the command-line interface will return to the persistent command target that was in effect before the SOL session. If you want to end the Telnet or SSH command-line session, type `exit`.

**Note:** Exiting an SOL session does not stop the flow of serial data.



---

## Chapter 3. Command reference

This section contains command function and usage information and examples. It is divided into the following subsections:

- “Built-in commands” on page 12
  - env (environment) command
  - help command
  - history command
  - list (system physical configuration) command
- “Common commands” on page 17
  - health commands
  - identify (location LED) command
  - info (configuration information) command
  - update (update firmware) command
- “Configuration commands” on page 26
  - alertentries command
  - clear command
  - dhcpinfo command
  - dns command
  - ifconfig command
  - smtp command
  - snmp command
  - sol (serial over LAN) commands
  - tpcmdmode command
  - telnetcfg (Telnet configuration) command
  - users (management-module users) command
- “Event-log commands” on page 65
  - clearlog command
  - displaylog command
- “Power-control commands” on page 67
  - boot command
  - power command
  - reset command
- “Session commands” on page 73
  - console command
  - exit command
- “System management commands (for BladeCenter T only)” on page 74
  - alarm command
  - thres (alarm threshold) command

Adding a `-h`, `-help`, or `?` option to a command displays syntax help for that command. For example, to display help for the environment command, type one of the following commands:

- `env -h`
- `env -help`
- `env ?`

You can target a command to a device other than the one that is set as the default by adding a `-T` option to a command. See “Selecting the command target” on page 4 for information.

---

## Built-in commands

Use these commands to perform top-level functions within the command-line interface:

- env (environment) command
- help command
- history command
- list (system physical configuration) command

### env (environment) command

This command sets the persistent environment for commands that are entered during the remainder of the current session. The persistent command environment is indicated by the command prompt. When you start the command-line interface, the persistent command environment is the BladeCenter unit, denoted as “system” by the command prompt. You can target a single command to an environment other than the one that is set as the default by adding a `-T` option to the command that includes a valid target destination (see “Selecting the command target” on page 4 for information). Target environments can be specified using the full path name, or using a partial path name based on the persistent command environment. Full path names always begin with “system”. The levels in a path name are divided using a colon “.”.

Table 2. env (environment) command

Function	What it does	Command	Valid targets
<b>Set BladeCenter unit as command target</b>	Sets the BladeCenter unit as the persistent target for commands during the current session. This is the persistent command environment you are in at the beginning of each command-line interface session, indicated by the <code>system&gt;</code> prompt.	<code>env</code> <code>env -T system</code>	The any installed device.
<b>Set management module as command target</b>	Sets the management module as the persistent target for commands during the current session.	<code>env -T system:mm[x]</code> where <code>x</code> is the bay (1 or 2) that identifies the management module.	The env command can be directed to any installed device, in this case <code>-T system:mm[x]</code> where <code>x</code> is the management module bay number.
<b>Set blade server as command target</b>	Sets the specified blade server as the persistent target for commands during the current session.	<code>env -T system:blade[x]</code> where <code>x</code> is the blade bay that identifies the blade server. A blade server that occupies more than one blade bay is identified by the lowest bay number that it occupies.	The env command can be directed to any installed device, in this case <code>-T system:blade[x]</code> where <code>x</code> is the blade bay that identifies the blade server.

Table 2. env (environment) command (continued)

Function	What it does	Command	Valid targets
<b>Set blade server integrated system management processor as command target</b>	Sets the integrated system management processor on the specified blade server as the persistent target for commands during the current session.	env -T system:blade[x]:sp  where x is the blade bay that identifies the blade server on which the integrated system management processor is installed. A blade server that occupies more than one blade bay is identified by the lowest bay number that it occupies.	The env command can be directed to any installed device, in this case -T system:blade[x]:sp  where x is the blade bay that identifies the blade server on which the integrated system management processor is installed.
<b>Set I/O (switch) module as command target</b>	Sets the specified I/O (switch) module as the persistent target for commands during the current session.	env -T system:switch[x]  where x is the I/O (switch) module bay (1 - 4) where the I/O (switch) module is installed.	The env command can be directed to any installed device, in this case -T system:switch[x]  where x is the I/O (switch) module bay (1 - 4) where the I/O (switch) module is installed.

**Example:**

To set the persistent target of commands to the ISMP on the blade server in blade bay 5 while the BladeCenter unit is set as the default command target, at the system> prompt, type

```
env -T system:blade[5]:sp
```

The following example shows the information that is returned:

```
system> env -T system:blade[5]:sp
OK
system:blade[5]:sp>
```

To set the persistent target of commands to the ISMP on the blade server in blade bay 5 while the BladeCenter unit is set as the default command target, at the system> prompt, you can also type

```
env -T blade[5]:sp
```

The following example shows the information that is returned:

```
system> env -T blade[5]:sp
OK
system:blade[5]:sp>
```

To issue the reset command on the blade server in blade bay 1 while the management module is set as the default command target, at the system:mm[x]> prompt, type

```
reset -T system:blade[1]
```

## help command

This command displays a list of all commands that are available in the command-line interface with a brief description of each command. You can also issue the help command by typing ?. Adding a -h, -help, or ? option to a command displays syntax help for the command.

Table 3. help command

Function	What it does	Command	Valid targets
Help	Displays a list of commands and a brief description of each command.	help	Any installed device.
		?	Any installed device.

### Example:

To display a list of commands while management module 1 is set as the default command target, at the `system:mm[1]>` prompt, type

```
help
```

The following example shows the information that is returned:

```
system:mm[1]> help
?- Display commands
alertentries- View/edit remote alert recipients
boot- Boot target
clear- Clear the config
clearlog- Clear the event log
console- Start SOL session to a blade
dhcpinfo- View DHCP server assigned settings
displaylog- Display event log entries
dns- View/edit DNS config
env- Set persistent command target
exit- Log off
health- View system health status
help- Display command list
history- Display command history
identify- Control target location LED
ifconfig- View/edit network interface config
info- Display identity and config of target
list- Display installed targets
power- Control target power
reset- Reset target
shutdown- Shutdown target
smtp- View/edit SMTP config
snmp- View/edit SNMP config
sol- View SOL status and view/edit SOL config
tcpcmdmode- View/edit TCP command mode config
telnetcfg- View/edit telnet config
update- Update firmware from TFTP server
users- View/edit user login profiles
alarm- Manage Telco System Management alarm(s)
thres- Manage Telco System threshold(s)
threshold- Manage Telco system threshold(s)
```

Type "`<command> -h`" for individual command syntax help.

[ ] is used for indexing (by bay number)

< > denotes a variable

{ } denotes optional arguments

| denotes choice  
system:mm[1]>

To obtain help about the env command, type one of the following commands:

- env -h
- env -help
- env ?

## history command

This command displays the last eight commands that were entered, allowing the user to choose and re-enter one of these commands. Users choose the command to re-enter from the displayed list by typing an exclamation point (!) followed immediately by the numeric designation the command is assigned in the list. Users can also recall one of the past eight previously entered commands using the up-arrow and down-arrow keys.

Table 4. history command

Function	What it does	Command	Valid targets
<b>Command history</b>	Displays the last eight commands that were entered.	history	Any installed device.
<b>Re-enter previous command using numeric designation</b>	Re-enters a numerically-specified command from the command history.	! !x where x is the number of the command (0 - 7) to re-enter from the command history list.	Any installed device.

### Example:

To display a list of the last eight commands entered while management module 1 is set as the default command target, at the system:mm[1]> prompt, type

```
history
```

To re-enter the command designated by “2” in the command history, type

```
!2
```

The following example shows the information that is returned from these two commands:

```
system:mm[1]> history
0 dns
1 dns -on
2 dns
3 dns -i1 192.168.70.29
4 dns
5 dns -i1 192.168.70.29 -on
6 dns
7 history
system:mm[1]> !2
Enabled
-i1 192.168.70.29
-i2 0.0.0.0
-i3 0.0.0.0
system:mm[1]>
```

## list (system physical configuration) command

This command displays a list of devices present within the command target. It can be used to determine how many management modules are installed in the BladeCenter unit and which management module is set as primary.

Table 5. list (system physical configuration) command

Function	What it does	Command	Valid targets
<b>View command target</b>	Displays the current command target. If a management module bay is the current command target, it will be identified as primary or redundant.	list	Any installed device.
<b>View system configuration tree</b>	Displays the tree structure of devices present in the BladeCenter unit, starting at the command target level. If management module bays are part of the tree, they will be identified as primary or redundant.	list -l <i>depth</i>  where <i>depth</i> is "all" or "a" for full tree display, starting at the command target level.  Specifying a <i>depth</i> of "1" displays the current command target. Specifying a <i>depth</i> of "2" displays the content of the current command target.	Any installed device.

### Example:

To display a list of devices installed in the BladeCenter unit while the BladeCenter unit is set as the persistent command environment, at the system> prompt, type

```
list -l a
```

(This is the command syntax that can be used to determine the primary management module.)

The following example shows the information that is returned:

```
system> list -l a
system
  mm[1]    primary
  power[4]
  blower[1]
  blower[2]
  blade[1]
          sp
          dtr[1]
  blade[5]
          sp
  blade[6]
          sp
  blade[7]
          sp
  blade[8]
          sp
  mt
system>
```

## Common commands

Use these commands to monitor and control operation of BladeCenter components using the command-line interface:

- health commands
- identify (location LED) command
- info (configuration information) command
- update (update firmware) command

## health commands

These commands display the current health status of the command target. They can also be used to display the alerts that are active for the command target. You can only specify one command target each time you run the health command.

Table 6. health commands

Function	What it does	Command	Valid targets
<b>Display health status</b>	<p>Displays the current health status of the command target. Return values are different for the BladeCenter and BladeCenter T configurations.</p> <ul style="list-style-type: none"> <li>• Possible return values for the BladeCenter configuration are: <ul style="list-style-type: none"> <li>– ok</li> <li>– warning</li> <li>– critical</li> </ul> </li> <li>• Possible return values for the BladeCenter T configurations are: <ul style="list-style-type: none"> <li>– ok</li> <li>– minor</li> <li>– major</li> <li>– critical</li> </ul> </li> </ul>	health	<ul style="list-style-type: none"> <li>-T system</li> <li>-T system:mm[x]</li> <li>-T system:blade[x]</li> <li>-T system:switch[x]</li> <li>-T system:power[x]</li> <li>-T system:blower[x]</li> </ul> <p>where x is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.</p>
<b>Display health status for tree</b>	<p>Displays the current health status of the tree structure of devices present in the BladeCenter unit, starting at the command target level. If management module bays are part of the tree, they will be identified as primary or redundant. Return values are different for the BladeCenter and BladeCenter T configurations.</p> <ul style="list-style-type: none"> <li>• Possible return values for the BladeCenter configuration are: <ul style="list-style-type: none"> <li>– ok</li> <li>– warning</li> <li>– critical</li> </ul> </li> <li>• Possible return values for the BladeCenter T configurations are: <ul style="list-style-type: none"> <li>– ok</li> <li>– minor</li> <li>– major</li> <li>– critical</li> </ul> </li> </ul>	<p>health -l <i>depth</i></p> <p>where <i>depth</i> is “2”, “all”, or “a” for full tree display, starting at the command target level.</p> <p>Specifying a <i>depth</i> of “1” displays health status of the current command target.</p>	<ul style="list-style-type: none"> <li>-T system</li> <li>-T system:mm[x]</li> <li>-T system:blade[x]</li> <li>-T system:switch[x]</li> <li>-T system:power[x]</li> <li>-T system:blower[x]</li> </ul> <p>where x is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.</p>

Table 6. health commands (continued)

Function	What it does	Command	Valid targets
<b>Display health status and alerts</b>	<p>Displays the current health status and active alerts for the command target. Return values are different for the BladeCenter and BladeCenter T configurations.</p> <ul style="list-style-type: none"> <li>• Possible return values for the health status of the BladeCenter configuration are: <ul style="list-style-type: none"> <li>– ok</li> <li>– warning</li> <li>– critical</li> </ul> </li> <li>• Possible return values for the health status of the BladeCenter T configurations are: <ul style="list-style-type: none"> <li>– ok</li> <li>– minor</li> <li>– major</li> <li>– critical</li> </ul> </li> <li>• Active alert information provides short text descriptions of alerts that are active for each monitored component.</li> </ul> <p>The total amount of information returned from the health -f command is limited to 1024 bytes.</p>	health -f	<ul style="list-style-type: none"> <li>-T system</li> <li>-T system:mm[x]</li> <li>-T system:blade[x]</li> <li>-T system:switch[x]</li> <li>-T system:power[x]</li> <li>-T system:blower[x]</li> </ul> <p>where x is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.</p>

**Example:**

To display the overall health status of the BladeCenter T unit while the BladeCenter T unit is set as the default command target, at the system> prompt, type

```
health
```

To display the health status of all components installed in the BladeCenter T unit, that are valid command targets, while the BladeCenter T unit is set as the default command target, at the system> prompt, type

```
health -l a
```

To display the health status of the blade server installed in blade bay 5 while the BladeCenter T unit is set as the default command target, at the system> prompt, type

```
health -T system:blade[5]
```

To display the health status and alerts for all components installed in the BladeCenter T unit, that are valid command targets, while the BladeCenter T unit is set as the default command target, at the system> prompt, type

```
health -l a -f
```

The following example shows the information that is returned from these commands:

```
system> health
system:major
system> health -l a
system:major
mm[1]:ok
```



```
blade[1]:ok
blade[3]:ok
blade[5]:minor
power[1]:ok
power[2]:minor
blower[1]:ok
blower[2]:ok
blower[3]:ok
blower[4]:ok
switch[1]:major
system> health -T system:blade[5]
blade[5]:minor
health -l a -f
system:major
  blade[5]:minor
    5V over voltage
    CPU1 temperature warning
  power[2]:minor
    5V over voltage
  switch[1]:major
    temperature fault
system>
```

## identify (location LED) command

This command controls operation of the location LED in a blade server or in the BladeCenter unit. It can also be used to display the state of a location LED.

Table 7. identify (location LED) command

Function	What it does	Command	Valid targets
<b>Display location LED state</b>	<p>Displays the current state of the location LED in the command target.</p> <p>This command returns the identity of the command target, System or blade server bay (slot) number, followed by the current state of the target location LED. Possible LED states are:</p> <ul style="list-style-type: none"> <li>• off</li> <li>• on</li> <li>• blink</li> </ul>	identify -s	<p>-T system</p> <p>-T system:blade[x]</p> <p>where x is the blade bay number.</p>
<b>Turn off location LED</b>	Turns off the location LED in the command target.	<p>identify -off</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system</p> <p>-T system:blade[x]</p> <p>where x is the blade bay number.</p>
<b>Light location LED</b>	Lights the location LED in the command target.	<p>identify</p> <p>identify -on</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system</p> <p>-T system:blade[x]</p> <p>where x is the blade bay number.</p>
<b>Flash location LED</b>	Flashes the location LED in the command target.	<p>identify -blink</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system</p> <p>-T system:blade[x]</p> <p>where x is the blade bay number.</p>

Table 7. identify (location LED) command (continued)

Function	What it does	Command	Valid targets
<b>Turn on BladeCenter unit location LED for specified period of time</b>	Turns on the location LED in the BladeCenter unit for a specified period of time before turning it off automatically.	<pre>identify -on <i>time</i></pre> <p>where <i>time</i> is the number of seconds the location LED will remain lit.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system

**Example:**

To display the status of the location LED in the blade server in blade bay 4 module while the BladeCenter unit is set as the persistent command environment, at the system> prompt, type

```
identify -s -T system:blade[4]
```

To light the location LED in the blade server in blade bay 4 module while the BladeCenter unit is set as the persistent command environment, at the system> prompt, type

```
identify -T system:blade[4]
```

or

```
identify -on -T system:blade[4]
```

The following example shows the information that is returned from a series of identify commands:

```
system> identify -s -T system:blade[4]
Identify: LED in slot 4 is off
system> identify -on -T system:blade[4]
OK
system> identify -s -T system:blade[4]
Identify: LED in slot 4 is on
system>
```

## info (configuration information) command

This command displays information about BladeCenter components and their configuration.

Table 8. info (configuration information) command

Function	What it does	Command	Valid targets
<b>Display component information</b>	Displays identification and configuration information for the specified command target.	info  <b>Note:</b> Only one target at a time can be viewed with the info command.	-T system:mm[x] -T system:blade[x] -T system:blade[x]:dtr[x] -T system:blade[x]:sp -T system:blade[x]:be -T system:switch[x] -T system:power[x] -T system:mt  where x is the management module bay number, blade server, I/O (switch) module bay number, power module bay number, or daughter-card number.

**Note:** The command target -T system:blade[x]:dtr[x] is shown with a line break before :dtr[x]. When this command target is entered, the entire entry must all be on one line.

### Example:

To view the information about the management module in management module bay 1 while this management module is set as the persistent command environment, at the system:mm[1]> prompt, type

```
info -T system:mm[1]
```

The following example shows the information that is returned from the info command:

```
system:mm[1]> info -T system:mm[1]
UUID: 0000 0000 0000 0000 0000 0000 0000 0000
Manuf ID: SLRM
Mach type/model: Management Module
Mach serial number: n/a
Manuf date: 4102
Part no.: 02R1606
FRU no.: 59P6622
FRU serial no.: J1P702A511F
Main application
  Build ID:      DVETXX-
  File name:    CNETMNUS.PKT
  Rel date:     05-27-04
  Rev:         16
Boot ROM
  Build ID:      BRBR14-
  File name:    CNETBRUS.PKT
```

```

Rel date:      09-12-02
Rev:          16
Remote control
Build ID:     BRRG14-
File name:    CNETRGUS.PKT
Rel date:     09-12-02
Rev:         16
system:mm[1]>

```

## update (update firmware) command

This command updates firmware using a Trivial File Transfer Protocol (TFTP) server and displays information about firmware installed in BladeCenter components.

Table 9. update (update firmware) command

Function	What it does	Command	Valid targets
<b>Display update command help</b>	Displays information about using the update command.	update	-T system:mm[x] -T system:blade[x]:sp -T system:switch[x]  where x is the primary management module, blade server, or I/O (switch) module bay number.
<b>Display firmware attributes</b>	Displays attributes of the firmware installed in the command target. Return values are: <ul style="list-style-type: none"> <li>• Firmware type</li> <li>• Build ID</li> <li>• Filename</li> <li>• Release date</li> <li>• Revision level</li> </ul>	update -a	-T system:mm[x] -T system:blade[x]:sp -T system:switch[x]  where x is the primary management module, blade server, or I/O (switch) module bay number.
<b>Update firmware</b>	Update firmware for the command target.	update -i <i>ip_address</i> -n <i>filename</i>  where: <ul style="list-style-type: none"> <li>• <i>ip_address</i> is the IP address of TFTP server.</li> <li>• <i>filename</i> is the name of the firmware update file.</li> </ul> Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x] -T system:blade[x]:sp -T system:switch[x]  where x is the primary management module, blade server, or I/O (switch) module bay number.

Table 9. update (update firmware) command (continued)

Function	What it does	Command	Valid targets
<b>Update firmware (verbose)</b>	Update firmware for the command target, showing details of the firmware download and flash operations. The detailed information is not shown until the update is complete, which might take several minutes.	<pre>update -i <i>ip_address</i> -n <i>filename</i> -v</pre> <p>where:</p> <ul style="list-style-type: none"> <li><i>ip_address</i> is the IP address of TFTP server.</li> <li><i>filename</i> is the name of the firmware update file.</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>Supervisor</li> <li>Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<pre>-T system:mm[x] -T system:blade[x]:sp -T system:switch[x]</pre> <p>where x is the primary management module, blade server, or I/O (switch) module bay number.</p>

**Example:**

To update the firmware and display update details for the management module in management-module bay 1 while this management module is set as the persistent command environment, type the following command at the `system:mm[1]>` prompt. For this example, the IP address of the TFTP server is 192.168.70.120 and the firmware file containing the update is named `dev_mm.pkt`.

```
update -v -i 192.168.70.120 -n dev_mm.pkt
```

To display information about firmware installed in the management module in management-module bay 1 while this management module is set as the persistent command environment, at the `system:mm[1]>` prompt, type

```
update -a
```

To update the service-processor firmware in the blade server in blade bay 8 (not using verbose mode) while the management module in management-module bay 1 is set as the persistent command environment, type the following command at the `system:mm[1]>` prompt. For this example, the IP address of the TFTP server is 192.168.70.120 and the firmware file containing the update is named `h8.pkt`.

```
update -i 192.168.70.120 -n h8.pkt -T system:blade[8]:sp
```

The following example shows the information that is returned from these three update commands:

```
system:mm[1]> update -v -i 192.168.70.120 -n dev_mm.pkt
TFTP file upload successful 1517829.
Starting flash packet preparation.
Flash preparation - packet percent complete 24.
Flash preparation - packet percent complete 48.
Flash preparation - packet percent complete 72.
Flash preparation - packet percent complete 96.
Flash preparation - packet percent complete 100.
Flash operation phase starting.
Flashing - packet percent complete 34.
Flashing - packet percent complete 38.
Flashing - packet percent complete 50.
Flashing - packet percent complete 55.
Flashing - packet percent complete 80.
Flashing - packet percent complete 90.
Flash operation complete. The new firmware will become active after the next
```

```
reset of the MM.  
OK  
system:mm[1]> update -a  
Bay 1 Name 1  
Firmware type: Main application  
Build ID: BRETkd+  
Filename: CNETMNUS.PKT  
Released: 11-17-03  
Revision: 16  
Firmware type: Boot ROM  
Build ID: BRBR1B+  
Filename: CNETBRUS.PKT  
Released: 10-27-03  
Revision: 16  
Firmware type: Remote control  
Build ID: BRRG1B+  
Filename: CNETRGUS.PKT  
Released: 10-27-03  
Revision: 16  
OK  
system:mm[1]> update -i 192.168.70.120 -n h8.pkt -T system:blade[8]:sp  
OK  
system:mm[1]>
```

## Configuration commands

Use these commands to view and configure network settings and Ethernet interfaces:

- alertentries command
- clear command
- dhcpinfo command
- dns command
- ifconfig command
- smtp command
- snmp command
- sol (serial over LAN) commands
- tcpcmdmode command
- telnetcfg (Telnet configuration) command
- users (management-module users) command

### alertentries command

This command manages the recipients of alerts generated by the primary management module.

Table 10. alertentries command

Function	What it does	Command	Valid targets
<b>Display alert properties for all recipients</b>	Displays alert properties for all management-module alert recipients. Returned values for each alert recipient are: <ul style="list-style-type: none"> <li>• recipient name</li> <li>• notification method (E-Mail over LAN/Director comp./SNMP over LAN)</li> <li>• type of alerts received (Receives critical alerts only/Receives all alerts/Disabled)</li> </ul>	alertentries	-T system:mm[x]  where x is the primary management module bay number.
<b>Display alert properties for alert recipients</b>	Displays alert properties for the specified management-module alert recipient profile. Returned values are: <ul style="list-style-type: none"> <li>• -status <i>alert_recipient_status</i> (on/off)</li> <li>• -n <i>alert_recipient_name</i></li> <li>• -f <i>alert_type</i> (critical/none)</li> <li>• -t <i>notification_method</i> (email/director/snmp)</li> <li>• -e <i>email_address</i> (used for e-mail notifications)</li> <li>• -i <i>static_IP_addr/hostname</i> (used for IBM Director notifications)</li> </ul>	alertentries - <i>recip_number</i>  where <i>recip_number</i> is a number from 1 to 12 that corresponds to the recipient number assigned in the "Display alert properties for all recipients" list.	-T system:mm[x]  where x is the primary management module bay number.



Table 10. alertentries command (continued)

Function	What it does	Command	Valid targets
<p><b>Delete alert recipient</b></p>	<p>Delete the specified alert recipient.</p>	<p>alertentries -<i>recip_number</i> -del</p> <p>where <i>recip_number</i> is a number from 1 to 12 that corresponds to the recipient number assigned in the “Display alert properties for all recipients” list. It is possible to delete an empty alert recipient.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>

Table 10. alertentries command (continued)

Function	What it does	Command	Valid targets
<p><b>Create alert recipient</b></p>	<p>Create the specified alert recipient.</p> <p>All fields must be specified when creating an alert recipient.</p>	<pre> alertentries -recip_number -n recip_name -status alert_status -f filter_type -t notification_method -e email_addr -i ip_addr/hostname </pre> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>recip_number</i> is a number from 1 to 12 that corresponds to an unused recipient number in the “Display alert properties for all recipients” list.</li> <li>• <i>recip_name</i> is a alphanumeric string up to 31 characters in length containing any character, including spaces, except for angle brackets ( &lt; and &gt; ). If the string includes spaces it must be enclosed in double-quotes.</li> <li>• <i>alert_status</i> is on or off for receipt of alerts.</li> <li>• <i>filter_type</i> filters the alert types received: critical (receive critical alerts only) or none (receive all alerts).</li> <li>• <i>notification_method</i> is e-mail, director (IBM Director) or snmp. <ul style="list-style-type: none"> <li>– For e-mail, you must specify an e-mail address (-e argument).</li> <li>– For director, you must specify an IP address (-i argument).</li> <li>– If snmp is selected, the -e and -i arguments are not needed.</li> </ul> </li> <li>• <i>email_addr</i> is a valid e-mail address string up to 63 characters in length.</li> </ul> <p>(continued on next page)</p>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>

Table 10. alertentries command (continued)

Function	What it does	Command	Valid targets
<b>Create alert recipient (continued)</b>		<ul style="list-style-type: none"> <li><i>ip_addr/hostname</i> is a valid static IP address or an alphanumeric hostname string for the recipient that is up to 49 characters in length that can include periods ( . ), hyphens ( - ), and underscores ( _ ).</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>Supervisor</li> <li>User Account Management</li> </ul>	
<b>Set alert recipient name</b>	Sets a name for the specified alert recipient.	<p>alertentries -<i>recip_number</i> -n <i>recip_name</i></p> <p>where:</p> <ul style="list-style-type: none"> <li><i>recip_number</i> is a number from 1 to 12 that corresponds to the recipient number assigned in the “Display alert properties for all recipients” list.</li> <li><i>recip_name</i> is a alphanumeric string up to 31 characters in length that can include any character, including spaces, except for angle brackets ( &lt; and &gt; ). If the name includes spaces it must be enclosed in double-quotes.</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>Supervisor</li> <li>User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>
<b>Set alert recipient status</b>	Sets status for the specified alert recipient. The status determines if a recipient will receive alarm notifications.	<p>alertentries -<i>recip_number</i> -status <i>alert_status</i></p> <p>where:</p> <ul style="list-style-type: none"> <li><i>recip_number</i> is a number from 1 to 12 that corresponds to the recipient number assigned in the “Display alert properties for all recipients” list.</li> <li><i>alert_status</i> is on or off.</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>Supervisor</li> <li>User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>

Table 10. alertentries command (continued)

Function	What it does	Command	Valid targets
<b>Set alert types received</b>	Filters the types of alert that are received by the specified alert recipient.	<p>alertentries <i>-recip_number</i> <i>-f filter_type</i></p> <p>where:</p> <ul style="list-style-type: none"> <li><i>recip_number</i> is a number from 1 to 12 that corresponds to the recipient number assigned in the “Display alert properties for all recipients” list.</li> <li><i>alert_type</i> filters the alert types received: critical (receive critical alerts only) or none (receive all alerts).</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>Supervisor</li> <li>User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>
<b>Set alert notification method</b>	Sets the alert notification method for the specified alert recipient.	<p>alertentries <i>-recip_number</i> <i>-t notification_method</i></p> <p>where:</p> <ul style="list-style-type: none"> <li><i>recip_number</i> is a number from 1 to 12 that corresponds to the recipient number assigned in the “Display alert properties for all recipients” list.</li> <li><i>notification_method</i> is e-mail, director (IBM Director) or snmp.</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>Supervisor</li> <li>User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>

Table 10. *alertentries* command (continued)

Function	What it does	Command	Valid targets
<b>Set alert recipient e-mail address</b>	<p>Sets the e-mail address for the specified alert recipient. This e-mail address is used to send alerts to the recipient via e-mail.</p> <p>The e-mail address can be set only if the alert notification method (-t option) is set to e-mail. The -t and -e options can be combined within the same command.</p>	<p><code>alertentries -recip_number -e email_addr</code></p> <p>where:</p> <ul style="list-style-type: none"> <li><i>recip_number</i> is a number from 1 to 12 that corresponds to the recipient number assigned in the “Display alert properties for all recipients” list.</li> <li><i>email_addr</i> is a valid e-mail address string up to 63 characters in length.</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>Supervisor</li> <li>User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>
<b>Set alert recipient IP address or hostname</b>	<p>Sets the IP address or hostname used to send alert notifications to the specified alert recipient using IBM Director.</p> <p>The IP address or hostname used to send alert notifications can be set only if the alert notification method (-t option) is set to director (IBM Director). The -t and -i options can be combined within the same command.</p>	<p><code>alertentries -recip_number -i ip_addr/hostname</code></p> <p>where:</p> <ul style="list-style-type: none"> <li><i>recip_number</i> is a number from 1 to 12 that corresponds to the recipient number assigned in the “Display alert properties for all recipients” list.</li> <li><i>ip_addr/hostname</i> is a valid static IP address or an alphanumeric hostname string up to 49 characters in length that can include periods ( . ), hyphens ( - ), and underscores ( _ ).</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>Supervisor</li> <li>User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>

**Example:**

To view the configuration for alert recipient 1 while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type

```
alertentries -1
```

To configure alert recipient 2 to receive only critical alert notifications by e-mail while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type

```
alertentries -2 -n test2 -status on -f critical -t email -e test2@us.ibm.com
```

To configure alert recipient 3 to receive all alert notifications through IBM Director while management module 1 is set as the persistent command environment, at the system:mm[1]> prompt, type

```
alertentries -3 -n test3 -status on -f none -t director -i 192.168.70.140
```

To configure alert recipient 4 to receive all alert notifications through SNMP while management module 1 is set as the persistent command environment, at the system:mm[1]> prompt, type

```
alertentries -4 -n test4 -status on -f none -t snmp
```

The following example shows the information that is returned from these commands:

```
system:mm[1]> alertentries -1
-status on
-n test1
-f critical
-t email
-e test1@us.ibm.com
system:mm[1]> alertentries -2 -n test2 -status on -f critical -t email
-e test2@us.ibm.com
OK
system:mm[1]> alertentries -3 -n test3 -status on -f none -t director
-i 192.168.70.140
OK
system:mm[1]> alertentries -4 -n test4 -status on -f none -t snmp
OK
system:mm[1]>
```

## clear command

This command resets the primary management module configuration or an I/O (switch) module configuration to the default settings. The command must always include the -config option.

Table 11. clear command

Function	What it does	Command	Valid targets
<b>Reset configuration of primary management module</b>	<p>Resets the configuration of the primary management module to the default settings; then, resets the management module.</p> <p>No results are returned from this command because it resets the management module.</p> <p>When you reset the management module configuration, the Ethernet configuration method is set to a value of dthens. After the management module resets, this causes the management module to try dhcp configuration and then default to the static IP configuration, which might cause the management module to remain offline for longer than normal.</p>	<p>clear -config</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>

Table 11. *clear* command (continued)

Function	What it does	Command	Valid targets
<b>Reset configuration of I/O (switch) module</b>	Resets the configuration of the specified I/O (switch) module to the default settings.	<code>clear -config</code>  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<code>-T system:switch[x]</code>  where <i>x</i> is the I/O (switch) module bay number.

**Example:**

To reset the primary management module configuration to default settings while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type

```
clear -config
```

No results are returned from this command. After the management module resets, you will need to start a new command-line session.

## dhcpcinfo command

This command displays the IP configuration that is assigned to the primary management module by the DHCP server.

**Note:** The dhcpcinfo command does not apply to eth1, which always uses a static IP configuration.

Table 12. dhcpcinfo commands

Function	What it does	Command	Valid targets
<b>Display Ethernet channel 0 DHCP configuration</b>	<p>If the IP configuration for eth0 is assigned by a DHCP server, the configuration that is assigned by the DHCP server and DHCP server information is displayed. If the IP configuration for eth0 is <i>not</i> assigned by a DHCP server, an error message is displayed. Possible configuration values returned are:</p> <ul style="list-style-type: none"> <li>• -server <i>dhcp_ip_address</i></li> <li>• -n <i>hostname</i></li> <li>• -i <i>ip_address</i></li> <li>• -g <i>gateway_address</i></li> <li>• -s <i>subnet_mask</i></li> <li>• -d <i>domainname</i></li> <li>• -dns1 <i>primary_dns_ip_address</i></li> <li>• -dns2 <i>secondary_dns_ip_address</i></li> <li>• -dns3 <i>tertiary_dns_ip_1address</i></li> </ul>	dhcpcinfo -eth0	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>

### Example:

To display the DHCP server assigned network settings for Ethernet channel 0 while management module 1 is set as the persistent command environment, at the system:mm[1]> prompt, type

```
dhcpcinfo -eth0
```

The following example shows the information that is returned:

```
system:mm[1]> dhcpcinfo -eth0
-server 192.168.70.29
-n MM00096BCA0C80
-i 192.168.70.183
-g 192.168.70.29
-s 255.255.255.0
-d linux-sp.raleigh.ibm.com
-dns1 192.168.70.29
-dns2 0.0.0.0
-dns3 0.0.0.0
system:mm[1]>
```



## dns command

This command configures and displays the management-module DNS settings.

Table 13. dns commands

Function	What it does	Command	Valid targets
<b>Display DNS configuration of management module</b>	Displays the current DNS configuration of the management module. Possible return values are: <ul style="list-style-type: none"> <li>• enabled</li> <li>• disabled</li> <li>• -i1 <i>first ip_address</i></li> <li>• -i2 <i>second ip_address</i></li> <li>• -i3 <i>third ip_address</i></li> </ul>	dns	-T system:mm[x]  where x is the primary management module bay number.
<b>DNS - enable</b>	Enables the management-module DNS configuration.	dns -on  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>DNS - disable</b>	Disables the management-module DNS configuration.	dns -off  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>DNS first IP address - set</b>	Checks syntax and sets the first IP address.	dns -i1 <i>ip_address</i>  where <i>ip_address</i> is the first IP address.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>DNS second IP address - set</b>	Checks syntax and sets the second IP address.	dns -i2 <i>ip_address</i>  where <i>ip_address</i> is the second IP address.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.

Table 13. dns commands (continued)

Function	What it does	Command	Valid targets
<b>DNS third IP address - set</b>	Checks syntax and sets the third IP address.	<p><code>dns -i3 <i>ip_address</i></code></p> <p>where <i>ip_address</i> is the third IP address.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>

**Example:**

To set the first IP address of the management-module DNS server to 192.168.70.29 and enable DNS on the primary management module while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type

```
dns -i1 192.168.70.29 -on
```

To display the DNS status of the primary management module while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type

```
dns
```

The following example shows the information that is returned from these two commands:

```
system:mm[1]> dns -i1 192.168.70.29 -on
Changes to the network settings will take effect after the next reset of the MM.
system:mm[1]> dns
Enabled
-i1 192.168.70.29
-i2 0.0.0.0
-i3 0.0.0.0
system:mm[1]>
```

## ifconfig command

This command configures and displays the network interface settings for the management-module Ethernet interface and the blade server integrated system management processors.

Table 14. *ifconfig* commands

Function	What it does	Command	Valid targets
<b>Display Ethernet channel 0 configuration</b>	Displays the current configuration of Ethernet channel 0. Possible return values are: <ul style="list-style-type: none"> <li>• enabled</li> <li>• disabled</li> <li>• -i <i>static_ip_address</i></li> <li>• -g <i>gateway_address</i></li> <li>• -s <i>subnet_mask</i></li> <li>• -n <i>hostname</i></li> <li>• -c <i>config_method</i></li> <li>• -r <i>data_rate</i></li> <li>• -d <i>duplex_mode</i></li> <li>• -m <i>mtu</i></li> <li>• -l <i>locally_administered_mac_addr</i></li> <li>• -b <i>burnedin_mac_address</i></li> </ul>	ifconfig -eth0	-T system:mm[x]  where x is the primary management module bay number.
<b>Set Ethernet channel 0 static IP address</b>	Checks syntax and sets the static IP address for Ethernet channel 0.	ifconfig -eth0 -i <i>ip_address</i>  where <i>ip_address</i> is the static IP address for Ethernet channel 0.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>Set Ethernet channel 0 gateway IP address</b>	Checks syntax and sets the gateway IP address for Ethernet channel 0.	ifconfig -eth0 -g <i>ip_address</i>  where <i>ip_address</i> is the gateway IP address for Ethernet channel 0.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.

Table 14. *ifconfig* commands (continued)

Function	What it does	Command	Valid targets
<b>Set Ethernet channel 0 subnet mask</b>	Checks syntax and sets the subnet mask for Ethernet channel 0.	<code>ifconfig -eth0 -s <i>ip_address</i></code>  where <i>ip_address</i> is the subnet mask for Ethernet channel 0.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where <i>x</i> is the primary management module bay number.
<b>Set Ethernet channel 0 hostname</b>	Checks syntax and sets the host name for Ethernet channel 0.	<code>ifconfig -eth0 -n <i>hostname</i></code>  where <i>hostname</i> is the host name for Ethernet channel 0.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where <i>x</i> is the primary management module bay number.
<b>Set Ethernet channel 0 configuration method</b>	Checks syntax and sets the configuration method for Ethernet channel 0.  A value of <i>dthens</i> will try the dhcp configuration and default to the static IP configuration if dhcp is unsuccessful.	<code>ifconfig -eth0 -c <i>config_method</i></code>  where <i>config_method</i> is dhcp, static, or dthens.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where <i>x</i> is the primary management module bay number.
<b>Set Ethernet channel 0 data rate</b>	Checks syntax and sets the data rate for Ethernet channel 0.	<code>ifconfig -eth0 -r <i>data_rate</i></code>  where <i>data_rate</i> is auto, 10, or 100.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where <i>x</i> is the primary management module bay number.

Table 14. *ifconfig* commands (continued)

Function	What it does	Command	Valid targets
<b>Set Ethernet channel 0 duplex mode</b>	Checks syntax and sets the duplex mode for Ethernet channel 0.	<code>ifconfig -eth0 -d <i>duplex_mode</i></code>  where <i>duplex_mode</i> is auto, half, or full.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>Set Ethernet channel 0 MTU</b>	Checks syntax and sets the MTU for Ethernet channel 0.	<code>ifconfig -eth0 -m <i>mtu</i></code>  where <i>mtu</i> is between 60 and 1500, inclusive.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>Set Ethernet channel 0 static MAC address (locally administered)</b>	Checks syntax and sets the locally administered MAC address to the specified MAC address for Ethernet channel 0.	<code>ifconfig -eth0 -l <i>address</i></code>  where <i>address</i> is the locally administered MAC address for Ethernet channel 0.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>Display Ethernet channel 1 configuration</b>	Displays the current configuration of Ethernet channel 1. Possible return values are: <ul style="list-style-type: none"> <li>• enabled</li> <li>• disabled</li> <li>• -i <i>static_ip_address</i></li> <li>• -g <i>gateway_address</i></li> <li>• -s <i>subnet_mask</i></li> <li>• -r <i>data_rate</i></li> <li>• -d <i>duplex_mode</i></li> <li>• -m <i>mtu</i></li> <li>• -l <i>locally_administered_mac_addr</i></li> <li>• -b <i>burnedin_mac_address</i></li> </ul>	<code>ifconfig -eth1</code>	-T system:mm[x]  where x is the primary management module bay number.

Table 14. *ifconfig* commands (continued)

Function	What it does	Command	Valid targets
<b>Set Ethernet channel 1 static IP address</b>	Checks syntax and sets the static IP address for Ethernet channel 1.	<p><code>ifconfig -eth1 -i <i>ip_address</i></code></p> <p>where <i>ip_address</i> is the static IP address for Ethernet channel 1.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>
<b>Set Ethernet channel 1 gateway IP address</b>	Checks syntax and sets the gateway IP address for Ethernet channel 1.	<p><code>ifconfig -eth1 -g <i>ip_address</i></code></p> <p>where <i>ip_address</i> is the gateway IP address for Ethernet channel 1.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>
<b>Set Ethernet channel 1 subnet mask</b>	Checks syntax and sets the subnet mask for Ethernet channel 1.	<p><code>ifconfig -eth1 -s <i>ip_address</i></code></p> <p>where <i>ip_address</i> is the subnet mask for Ethernet channel 1.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>
<b>Set Ethernet channel 1 static MAC address (locally administered)</b>	Checks syntax and sets the locally administered MAC address to the specified MAC address for Ethernet channel 1.	<p><code>ifconfig -eth1 -l <i>address</i></code></p> <p>where <i>address</i> is the locally administered MAC address for Ethernet channel 1.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>

Table 14. *ifconfig* commands (continued)

Function	What it does	Command	Valid targets
<b>Enable Ethernet channel 1</b>	Enables Ethernet channel 1.	<code>ifconfig -eth1 -up</code>  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<code>-T system:mm[x]</code>  where <i>x</i> is the primary management module bay number.
<b>Disable Ethernet channel 1</b>	Disables Ethernet channel 1.	<code>ifconfig -eth1 -down</code>  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<code>-T system:mm[x]</code>  where <i>x</i> is the primary management module bay number.
<b>Set starting IP address for blade server integrated system management processor</b>	Sets the starting point of the integrated system management processor IP addresses for blade servers that are installed in the BladeCenter unit.	<code>ifconfig -i <i>ip_address</i></code>  where <i>ip_address</i> is the starting IP address for all blade servers that are installed in the BladeCenter unit.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<code>-T system:blade[1]:sp</code>

**Example:**

To display the configuration for Ethernet channel 0 while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type `ifconfig -eth0`

To set the static IP address for Ethernet channel 0 to 192.168.70.133 while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type `ifconfig -eth0 -i 192.168.70.133 -c static`

The following example shows the information that is returned from these two commands:

```
system:mm[1]> ifconfig -eth0
Enabled
-i 10.10.10.10
-g 0.0.0.0
-s 255.255.255.0
-n MM00096BCA0C80
-c Try DHCP server. If it fails, use static IP config.
```

```

-r Auto
-d Auto
-m 1500
-l 00:00:00:00:00:00
-b 00:09:6B:CA:0C:80
system:mm[1]> ifconfig -eth0 -i 192.168.70.133 -c static
Changes to the network settings will take effect after the next reset of the MM.
system:mm[1]>

```

## smtp command

This command configures and displays the management-module SMTP settings.

Table 15. smtp commands

Function	What it does	Command	Valid targets
<b>Display SMTP server host name or IP address</b>	Displays the SMTP server host name or IP address.	smtp	-T system:mm[x]  where x is the primary management module bay number.
<b>Server host name or IP address - set</b>	Checks syntax and sets the server host name or IP address.	smtp -s <i>hostname/ip_address</i>  where <i>hostname/ip_address</i> is the host name or IP address of the server.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.

### Example:

To set the SMTP server host name to us.ibm.com while management module 1 is set as the persistent command environment, at the system:mm[1]> prompt, type

```
smtp -s us.ibm.com
```

To display the SMTP configuration while management module 1 is set as the persistent command environment, at the system:mm[1]> prompt, type

```
smtp
```

The following example shows the information that is returned from these two commands:

```

system:mm[1]> smtp -s us.ibm.com
OK
system:mm[1]> smtp
-s us.ibm.com
system:mm[1]>

```



## snmp command

This command configures and displays the management-module SNMP settings.

Table 16. snmp commands

Function	What it does	Command	Valid targets
<b>Display SNMP configuration of management module</b>	<p>Displays the current SNMP configuration of the management module. Possible return values are:</p> <ul style="list-style-type: none"> <li>• -a enabled/disabled</li> <li>• -t enabled/disabled</li> <li>• -c1 <i>community1_name</i></li> <li>• -c1i1 <i>community1_ipaddr1_or_hstname</i></li> <li>• -c1i2 <i>community1_ipaddr2_or_hstname</i></li> <li>• -c1i3 <i>community1_ipaddr3_or_hstname</i></li> <li>• -c2 <i>community2_name</i></li> <li>• -c2i1 <i>community2_ipaddr1_or_hstname</i></li> <li>• -c2i2 <i>community2_ipaddr2_or_hstname</i></li> <li>• -c2i3 <i>community2_ipaddr3_or_hstname</i></li> <li>• -c3 <i>community3_name</i></li> <li>• -c3i1 <i>community3_ipaddr1_or_hstname</i></li> <li>• -c3i2 <i>community3_ipaddr2_or_hstname</i></li> <li>• -c3i3 <i>community3_ipaddr3_or_hstname</i></li> <li>• -cn <i>contact_name</i></li> <li>• -l <i>location</i></li> </ul>	snmp	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>
<b>SNMPv1 agent - enable</b>	Enables the management-module SNMPv1 agent.	<p>snmp -a -on</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>
<b>SNMPv1 agent - disable</b>	Disables the management-module SNMPv1 agent.	<p>snmp -a -off</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>

Table 16. snmp commands (continued)

Function	What it does	Command	Valid targets
<b>SNMPv3 agent - enable</b>	Enables the management-module SNMPv3 agent.	snmp -a3 -on  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where <i>x</i> is the primary management module bay number.
<b>SNMPv3 agent - disable</b>	Disables the management-module SNMPv3 agent.	snmp -a3 -off  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where <i>x</i> is the primary management module bay number.
<b>SNMP traps - enable</b>	Enables the management-module SNMP traps.	snmp -t -on  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where <i>x</i> is the primary management module bay number.
<b>SNMP traps - disable</b>	Disables the management-module SNMP traps.	snmp -t -off  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where <i>x</i> is the primary management module bay number.
<b>SNMP community 1 name - set</b>	Sets the name of community 1.	snmp -c1 <i>name</i>  where <i>name</i> is a descriptive name of community 1.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where <i>x</i> is the primary management module bay number.

Table 16. snmp commands (continued)

Function	What it does	Command	Valid targets
<b>SNMP community 1 first host name or IP address - set</b>	Checks syntax and sets the first host name or IP address of community 1.	snmp -c1i1 <i>hostname/ip_address</i>  where <i>hostname/ip_address</i> is the first host name or IP address of community 1.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>SNMP community 1 second host name or IP address - set</b>	Checks syntax and sets the second host name or IP address of community 1.	snmp -c1i2 <i>hostname/ip_address</i>  where <i>hostname/ip_address</i> is the second host name or IP address of community 1.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>SNMP community 1 third host name or IP address - set</b>	Checks syntax and sets the third host name or IP address of community 1.	snmp -c1i3 <i>hostname/ip_address</i>  where <i>hostname/ip_address</i> is the third host name or IP address of community 1.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>SNMPv3 community 1 view type - set</b>	Sets the SNMPv3 view type for community 1.	snmp -ca1 <i>type</i>  where <i>type</i> is get, set, or trap.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.

Table 16. snmp commands (continued)

Function	What it does	Command	Valid targets
<b>SNMP community 2 name - set</b>	Sets the name of community 2.	snmp -c2 <i>name</i>  where <i>name</i> is a descriptive name of community 2.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where <i>x</i> is the primary management module bay number.
<b>SNMP community 2 first host name or IP address - set</b>	Checks syntax and sets the first host name or IP address of community 2.	snmp -c2i1 <i>hostname/ip_address</i>  where <i>hostname/ip_address</i> is the first host name or IP address of community 2.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where <i>x</i> is the primary management module bay number.
<b>SNMP community 2 second host name or IP address - set</b>	Checks syntax and sets the second host name or IP address of community 2.	snmp -c2i2 <i>hostname/ip_address</i>  where <i>hostname/ip_address</i> is the second host name or IP address of community 2.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where <i>x</i> is the primary management module bay number.

Table 16. *snmp* commands (continued)

Function	What it does	Command	Valid targets
<b>SNMP community 2 third host name or IP address - set</b>	Checks syntax and sets the third host name or IP address of community 2.	<p><code>snmp -c2i3 hostname/ip_address</code></p> <p>where <i>hostname/ip_address</i> is the third host name or IP address of community 2.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>
<b>SNMPv3 community 2 view type - set</b>	Sets the SNMPv3 view type for community 2.	<p><code>snmp -ca2 type</code></p> <p>where <i>type</i> is get, set, or trap.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>
<b>SNMP community 3 name - set</b>	Sets the name of community 3.	<p><code>snmp -c3 name</code></p> <p>where <i>name</i> is a descriptive name of community 3.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>
<b>SNMP community 3 first host name or IP address - set</b>	Checks syntax and sets the first host name or IP address of community 3.	<p><code>snmp -c3i1 hostname/ip_address</code></p> <p>where <i>hostname/ip_address</i> is the first host name or IP address of community 3.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>

Table 16. snmp commands (continued)

Function	What it does	Command	Valid targets
<b>SNMP community 3 second host name or IP address - set</b>	Checks syntax and sets the second host name or IP address of community 3.	snmp -c3i2 <i>hostname/ip_address</i>  where <i>hostname/ip_address</i> is the second host name or IP address of community 3.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>SNMP community 3 third host name or IP address - set</b>	Checks syntax and sets the third host name or IP address of community 3.	snmp -c3i3 <i>hostname/ip_address</i>  where <i>hostname/ip_address</i> is the third host name or IP address of community 3.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>SNMPv3 community 3 view type - set</b>	Sets the SNMPv3 view type for community 3.	snmp -ca3 <i>type</i>  where <i>type</i> is get, set, or trap.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>SNMP contact name - set</b>	Sets the contact name.	snmp -cn <i>contact_name</i>  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.

Table 16. snmp commands (continued)

Function	What it does	Command	Valid targets
<b>SNMP location - set</b>	Sets the location.	snmp -l <i>hostname/ip_address</i>  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.

**Example:**

To view the SNMP configuration while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type

```
snmp
```

To enable the SNMP agent and SNMP traps while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type

```
snmp -a -on -t -on
```

The following example shows the information that is returned from these two commands:

```
system:mm[1]> snmp
-a Disabled
-t Disabled
-l No Location Configured
-cn No Contact Configured
-c1 com1
-c1i1 1.2.3.4
-c1i2
-c1i3
-c2 com2
-c2i1 1.2.3.4
-c2i2
-c2i3
-c3
-c3i1
-c3i2
-c3i3
```

```
system:mm[1]> snmp -a -on -t -on
```

Changes to the network settings will take effect after the next reset of the MM.

```
system:mm[1]>
```

## sol (serial over LAN) commands

These commands configure SOL functions and indicate SOL status.

Table 17. *sol* (serial over LAN) commands

Function	What it does	Command	Valid targets
<b>Display SOL status</b>	<p>Displays the SOL status for the targeted device:</p> <ul style="list-style-type: none"> <li>• When the command target is the primary management module, it displays the following values: <ul style="list-style-type: none"> <li>– <i>-status on/off</i> (global SOL status)</li> <li>– <i>-c retry_count</i></li> <li>– <i>-e CLI_key_sequence</i></li> <li>– <i>-i retry_interval</i></li> <li>– <i>-r reset_blade_key_seq</i></li> <li>– <i>-s send_threshold</i></li> <li>– <i>-t accumulate_timeout</i></li> <li>– <i>-v VLAN_id</i></li> </ul> </li> <li>• When the command target is a blade server, it displays the following: <ul style="list-style-type: none"> <li>– <i>-status on/off</i> (SOL status for the blade server)</li> <li>– Status of any SOL sessions for that blade server: <ul style="list-style-type: none"> <li>- There is no SOL session opening for that blade.</li> <li>- There is an SOL session opening for that blade.</li> <li>- There is an SOL session opening and it is connected to a telnet session.</li> </ul> </li> </ul> </li> </ul>	<p><i>sol</i></p>	<p>-T system:mm[x] -T system:blade[x]</p> <p>where <i>x</i> is the primary management module or blade server bay number.</p>
<b>SOL retry interval - set</b>	<p>Sets the SOL retry interval to the input value.</p>	<p><i>sol -i value</i></p> <p>where <i>value</i> is from 10 ms to 2550 ms, inclusive, in 10 ms increments. If you enter a value less than 10 ms, the retry interval will be set to 10 ms. If you enter a value greater than 2550 ms, the retry interval will be set to 2550 ms.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>



Table 17. sol (serial over LAN) commands (continued)

Function	What it does	Command	Valid targets
<b>SOL retry count - set</b>	Sets the SOL retry count to the input value.	<p>sol -c <i>value</i></p> <p>where <i>value</i> is from 0 to 7, inclusive. If you enter a value of 0, no retries will be attempted. If you enter a value greater than 7, an error will be displayed.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>
<b>SOL send threshold - set</b>	Sets the SOL send threshold to the input value. Setting the threshold value to 1 causes the blade server integrated system management processor to send an SOL packet as soon as the first character is received.	<p>sol -s <i>value</i></p> <p>where <i>value</i> is from 1 to 251, inclusive. If you enter a value outside this range, an error will be displayed.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>
<b>SOL accumulate timeout - set</b>	Sets the SOL accumulate timeout to the input value.	<p>sol -t <i>value</i></p> <p>where <i>value</i> is from 5 ms to 1275 ms, inclusive. If you enter a value less than 5 ms, the accumulate timeout will be set to 5 ms. If you enter a value greater than 1275 ms, an error will be displayed.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>
<b>SOL enable - global</b>	Enables SOL globally for the BladeCenter unit. The global SOL enable command does not affect the SOL session status for each blade server.	<p>sol -status on</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>

Table 17. sol (serial over LAN) commands (continued)

Function	What it does	Command	Valid targets
<b>SOL enable - blade server</b>	Enables SOL for the specified blade server.	sol -status on  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:blade[x]  where x is the blade server bay number.
<b>SOL disable - global</b>	Disables SOL globally for the BladeCenter unit. The global SOL disable command does not affect the SOL session status for each blade server.	sol -status off  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>SOL disable - blade server</b>	Disables SOL for the specified blade server.	sol -status off  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:blade[x]  where x is the blade server bay number.
<b>SOL VLAN ID - set</b>	Sets the SOL VLAN ID to the input value.	sol -v <i>value</i>  where <i>value</i> is from 1 to 4095, inclusive. If you enter a value outside this range, an error will be displayed.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.

Table 17. sol (serial over LAN) commands (continued)

Function	What it does	Command	Valid targets
<b>CLI key sequence - set</b>	Sets the key sequence that is used to enter the CLI while a Telnet session in SOL mode.	<p>sol -e <i>value</i></p> <p>where <i>value</i> is the key sequence. In this sequence, a ^ (the carat symbol) indicates a Ctrl that maps to control-key sequences; for example:</p> <ul style="list-style-type: none"> <li>• ^[ (the carat symbol followed by a left bracket) means Esc</li> <li>• ^M (the carat symbol followed by a capitol M) means carriage return.</li> </ul> <p>Refer to an ASCII-to-key conversion table for a complete listing of control-key sequences.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>
<b>Reset blade server key sequence - set</b>	Sets the key sequence that will reset a blade server while a Telnet session in SOL mode.	<p>sol -r <i>value</i></p> <p>where <i>value</i> is the key sequence. In this sequence, a ^ (the carat symbol) indicates a Ctrl that maps to control-key sequences; for example:</p> <ul style="list-style-type: none"> <li>• ^[ (the carat symbol followed by a left bracket) means Esc</li> <li>• ^M (the carat symbol followed by a capitol M) means carriage return.</li> </ul> <p>Refer to an ASCII-to-key conversion table for a complete listing of control-key sequences.</p> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>

### Example:

To set the SOL accumulate timeout to 25 ms while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type

```
sol -t 25
```

To set the reset blade server key sequence to Esc R Esc r Esc R while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type

```
sol -r ^[R^[r^[R
```

To display the SOL settings while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type

```
sol
```

The following example shows the information that is returned from these two commands:

```
system:mm[1]> sol -t 25
OK
system:mm[1]> sol
-status on
-c 0
-e ^[(
-i 250
-r ^[R^[r^[R
-s 250
-t 25
-v 4095
system:mm[1]>
```

## tcpcmdmode command

These commands display and change the timeout of the TCP command-mode sessions that are used by *IBM Director* software for out-of-band communication with the management module. This command is also used to enable or disable the TCP command-mode sessions.

Table 18. *tcpcmdmode* commands

Function	What it does	Command	Valid targets
<b>Display TCP command-mode session status and timeout</b>	Displays the TCP command-mode session status (on or off) and timeout.	tcpcmdmode	-T system:mm[x] where x is the primary management module bay number.

Table 18. *tcpcmdmode* commands (continued)

Function	What it does	Command	Valid targets
<b>Set TCP command-mode session timeout</b>	Sets the TCP command-mode session timeout value.	<code>tcpcmdmode -t <i>timeout</i></code>  where <i>timeout</i> is from 0 seconds (no timeout) to 4294967295 seconds, inclusive. If you enter a value outside this range, an error will be displayed.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>Enable TCP command-mode sessions</b>	Enables TCP command-mode sessions that are used by <i>IBM Director</i> software for out-of-band communication with the management module.	<code>tcpcmdmode -on</code>  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.
<b>Disable TCP command-mode sessions</b>	Disables TCP command-mode sessions that are used by <i>IBM Director</i> software for out-of-band communication with the management module.	<code>tcpcmdmode -off</code>  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.

**Example:**

To enable a TCP command-mode session for the primary management module while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type

```
tcpcmdmode -on
```

To set the TCP command-mode session timeout for the primary management module to 6 minutes while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type

```
tcpcmdmode -t 360
```

To display the TCP command-mode session status and timeout for the primary management module while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type

```
tcpcmdmode
```

The following example shows the information that is returned from these two commands:

```
system:mm[1]> tcpcmdmode -on
```

```

OK
system:mm[1]> tcpcmdmode -t 360
OK
system:mm[1]> tcpcmdmode
-on
-t 360
system:mm[1]>

```

## telnetcfg (Telnet configuration) command

These commands display and configure the telnet parameters of the primary management module.

Table 19. telnetcfg (Telnet configuration) commands

Function	What it does	Command	Valid targets
<b>Display telnet configuration</b>	Displays the telnet configuration of the primary management module.	telnetcfg	-T system:mm[x]  where x is the primary management module bay number.
<b>Display telnet timeout</b>	Displays the telnet timeout value, in seconds, of the primary management module.	telnetcfg -t	-T system:mm[x]  where x is the primary management module bay number.
<b>Set telnet timeout for primary management module</b>	Sets the telnet timeout value for the primary management module.	telnetcfg -t <i>timeout</i>  where <i>timeout</i> is from 0 seconds (no timeout) to 4294967295 seconds, inclusive. If you enter a value outside this range, an error will be displayed.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Network and Security Configuration</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.

### Example:

To set the telnet timeout for the primary management module to 6 minutes while management module 1 is set as the persistent command environment, at the system:mm[1]> prompt, type

```
telnetcfg -t 360
```

To display the telnet configuration for the primary management module while management module 1 is set as the persistent command environment, at the system:mm[1]> prompt, type

```
telnetcfg
```

The following example shows the information that is returned from these two commands:

```

system:mm[1]> telnetcfg -t 360
OK

```

```

system:mm[1]> telnetcfg
-t 360
system:mm[1]>

```

## users (management-module users) command

This command displays and configures user accounts of the primary management module.

Table 20. users (management-module users) command

Function	What it does	Command	Valid targets
<b>Display all user profiles</b>	Displays all 12 management-module user profiles. Returned values are: <ul style="list-style-type: none"> <li>• User name</li> <li>• Authority level</li> </ul>	users	-T system:mm[x]  where x is the primary management module bay number.
<b>Display single user profile</b>	Displays the specified management-module user profile. Returned values are: <ul style="list-style-type: none"> <li>• User name</li> <li>• Authority level</li> <li>• Context name</li> <li>• Authentication protocol</li> <li>• Privacy protocol</li> <li>• Access type</li> <li>• Hostname/IP address</li> </ul>	users - <i>user_number</i>  where <i>user_number</i> is a number from 1 to 12 that corresponds to the user number assigned in the "Display all user profiles" list.	-T system:mm[x]  where x is the primary management module bay number.
<b>Delete user profile</b>	Delete the specified management-module user profile.	users - <i>user_number</i> -clear  where <i>user_number</i> is a number from 1 to 12 that corresponds to the user number assigned in the "Display all user profiles" list. It is possible to delete an empty user profile.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• User Account Management</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.

Table 20. users (management-module users) command (continued)

Function	What it does	Command	Valid targets
<b>Create user profile</b>	<p>Create the specified management-module user profile.</p> <p>All fields must be specified when creating a user profile for the BladeCenter T management module.</p>	<pre>users -user_number -n user_name -p user_password -a user_authority -cn context_name -ap auth_protocol -pp privacy_protocol -ppw privacy_pwd -at access_type -i ip_addr/hostname</pre> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>user_number</i> is a number from 1 to 12 that corresponds to an unused user number in the “Display all user profiles” list.</li> <li>• <i>user_name</i> is a alphanumeric string up to 15 characters in length that can include periods ( . ) and underscores ( _ ). Each of the 12 user names must be unique.</li> <li>• <i>user_password</i> is a alphanumeric string up to 15 characters in length that can include periods ( . ) and underscores ( _ ), and must include at least one alphabetic and one non-alphabetic character.</li> <li>• <i>user_authority</i> is one of the following: <ul style="list-style-type: none"> <li>– ro (read-only)</li> <li>– super (Supervisor)</li> <li>– custom (see “Set user authority level” for information about custom authority levels)</li> </ul> </li> <li>• <i>context_name</i> is a string for SNMPv3 context that is up to 31 characters in length. Each of the 12 context names must be unique.</li> <li>• <i>auth_protocol</i> is an SNMPv3 authentication protocol of sha, md5, or blank (no entry) for none.</li> </ul> <p>(continued on next page)</p>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>



Table 20. users (management-module users) command (continued)

Function	What it does	Command	Valid targets
<p><b>Create user profile</b> (continued)</p>		<ul style="list-style-type: none"> <li>• <i>privacy_protocol</i> is an SNMPv3 privacy protocol of des or blank (no entry) for none. If the privacy protocol is set to none, no -ppw command option (privacy password) is required.</li> <li>• <i>privacy_pwd</i> is an SNMPv3 privacy password string of up to 31 characters in length. If the privacy protocol is set to none, the -ppw command option does not need to be used unless a privacy password is required.</li> <li>• <i>access_type</i> is an SNMPv3 access type of read, write, or traps.</li> <li>• <i>ip_addr/hostname</i> is a valid SNMPv3 static IP address or an alphanumeric hostname string up to 63 characters in length.</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• User Account Management</li> </ul>	
<p><b>Set user name</b></p>	<p>Sets a user name in the specified management-module user profile.</p>	<p><code>users -user_number -n user_name</code></p> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>user_number</i> is a number from 1 to 12 that corresponds to the user number assigned in the “Display all user profiles” list.</li> <li>• <i>user_name</i> is a alphanumeric string up to 15 characters in length that can include periods ( . ) and underscores ( _ ). Each of the 12 user names must be unique.</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>

Table 20. users (management-module users) command (continued)

Function	What it does	Command	Valid targets
<p><b>Set user password</b></p>	<p>Sets a user password in the specified management-module user profile.</p>	<p>users -<i>user_number</i> -p <i>user_password</i></p> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>user_number</i> is a number from 1 to 12 that corresponds to the user number assigned in the “Display all user profiles” list.</li> <li>• <i>user_password</i> is a alphanumeric string up to 15 characters in length that can include periods ( . ) and underscores ( _ ), and must include at least one alphabetic and one non-alphabetic character.</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where <i>x</i> is the primary management module bay number.</p>

Table 20. users (management-module users) command (continued)

Function	What it does	Command	Valid targets
<p><b>Set user authority level</b></p>	<p>Sets a user authority level in the specified management-module user profile.</p>	<p>users -<i>user_number</i> -a <i>user_authority</i></p> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>user_number</i> is a number from 1 to 12 that corresponds to the user number assigned in the “Display all user profiles” list.</li> <li>• <i>user_authority</i> is one of the following: <ul style="list-style-type: none"> <li>– ro (read-only)</li> <li>– super (Supervisor)</li> <li>– custom</li> </ul> </li> </ul> <p>The custom authority level parameter is specified using the following syntax:</p> <p>custom:<i>level1</i> <i>level2</i></p> <p>where the <i>levels</i> are one or more of the following authority levels, separated by a vertical bar (   ):</p> <ul style="list-style-type: none"> <li>• am (User Account Management Access)</li> <li>• rca (Blade Server Remote Console Access)</li> <li>• rcvma (Remote Console and Virtual Media Access)</li> <li>• pr (Blade and I/O Power Restart Access)</li> <li>• cel (Ability to Clear Event Logs)</li> <li>• bc (Basic Configuration Permission)</li> <li>• nsc (Network and Security Configuration Permission)</li> <li>• ac (Advanced Configuration)</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>

Table 20. users (management-module users) command (continued)

Function	What it does	Command	Valid targets
<b>Set SNMPv3 user context name</b>	<p>Sets an SNMPv3 context name in the specified management-module user profile.</p> <p>The context name defines the context the SNMPv3 user is working in. A context name can be shared by multiple users.</p>	<p>users <i>-user_number</i> -cn <i>context_name</i></p> <p>where:</p> <ul style="list-style-type: none"> <li><i>user_number</i> is a number from 1 to 12 that corresponds to the user number assigned in the “Display all user profiles” list.</li> <li><i>context_name</i> is a string up to 31 characters in length. Each of the 12 context names must be unique.</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>Supervisor</li> <li>User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>
<b>Set SNMPv3 user authentication protocol</b>	<p>Sets the SNMPv3 authentication protocol to be used for the specified management-module user profile.</p>	<p>users <i>-user_number</i> -ap <i>auth_protocol</i></p> <p>where:</p> <ul style="list-style-type: none"> <li><i>user_number</i> is a number from 1 to 12 that corresponds to the user number assigned in the “Display all user profiles” list.</li> <li><i>auth_protocol</i> is sha, md5, or blank (no entry) for none.</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>Supervisor</li> <li>User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>
<b>Set SNMPv3 user privacy protocol</b>	<p>Sets the SNMPv3 privacy protocol to be used for the specified management-module user profile.</p> <p>If the privacy protocol is set to none, no -ppw command option (privacy password) is required.</p>	<p>users <i>-user_number</i> -pp <i>privacy_protocol</i></p> <p>where:</p> <ul style="list-style-type: none"> <li><i>user_number</i> is a number from 1 to 12 that corresponds to the user number assigned in the “Display all user profiles” list.</li> <li><i>privacy_protocol</i> is des or blank (no entry) for none.</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>Supervisor</li> <li>User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>

Table 20. users (management-module users) command (continued)

Function	What it does	Command	Valid targets
<b>Set privacy password for SNMPv3 user</b>	Sets an SNMPv3 privacy password in the specified management-module user profile.	<p>users -<i>user_number</i> -ppw <i>privacy_pwd</i></p> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>user_number</i> is a number from 1 to 12 that corresponds to the user number assigned in the “Display all user profiles” list.</li> <li>• <i>privacy_pwd</i> is a string up to 31 characters in length.</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>
<b>Set access type for SNMPv3 user</b>	<p>Sets an SNMPv3 access type for the specified management-module user profile.</p> <p>This command supports the following access types:</p> <ul style="list-style-type: none"> <li>• read: the user can query Management Information Base (MIB) objects and receive traps.</li> <li>• write: the user can query and set MIB objects and receive traps.</li> <li>• traps: the user can only receive traps.</li> </ul>	<p>users -<i>user_number</i> -at <i>access_type</i></p> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>user_number</i> is a number from 1 to 12 that corresponds to the user number assigned in the “Display all user profiles” list.</li> <li>• <i>access_type</i> is read, write, or traps.</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>
<b>Set IP address or hostname for SNMPv3 trap receiver</b>	Sets the IP address or hostname that will receive SNMPv3 traps for the specified management-module user profile.	<p>users -<i>user_number</i> -i <i>ip_addr/hostname</i></p> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>user_number</i> is a number from 1 to 12 that corresponds to the user number assigned in the “Display all user profiles” list.</li> <li>• <i>ip_addr/hostname</i> is a valid static IP address or an alphanumeric hostname string up to 63 characters in length.</li> </ul> <p>Required authority level:</p> <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• User Account Management</li> </ul>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>

**Example:**

To create user number 3 with a user name of user3 who has supervisor rights while management module 1 is set as the persistent command environment, at the system:mm[1]> prompt, type

```
users -3 -n user3 -p passwd -a super -cn joe -ap md5 -pp des -ppw passwd  
-at read -I 192.168.70.129
```

**Note:** The entry beginning with users -3 -n... is shown with a line break after passwd. When this command is entered, the entire entry must all be on one line.

To display all users while management module 1 is set as the persistent command environment, at the system:mm[1]> prompt, type

```
users
```

The following example shows the information that is returned from these two commands:

```
system:mm[1]> users -3 -n user3 -p passwd -a super -cn joe -ap md5 -pp des  
-ppw passwd -at read -I 192.168.70.129  
OK  
system:mm[1]> users  
1. USERID      Read/Write  
2. <not used>  
3. user3       Read/Write  
4. <not used>  
5. <not used>  
6. <not used>  
7. <not used>  
8. <not used>  
9. <not used>  
10. <not used>  
11. <not used>  
12. <not used>  
system:mm[1]>
```

**Note:** The entry beginning with users -3 -n... is shown with a line break after -pp des. When this command is entered, the entire entry must all be on one line.

---

## Event-log commands

Use these commands to view and clear primary management-module event log entries:

- clearlog command
- displaylog command

### clearlog command

This command clears the management-module event log.

*Table 21. clearlog (clear management-module event log) commands*

Function	What it does	Command	Valid targets
<b>Clear management-module event log</b>	Clears the management-module event log and displays a message confirming that the event log was cleared.	clearlog  Required authority level: <ul style="list-style-type: none"><li>• Supervisor</li><li>• Ability to Clear Event Logs</li></ul>	-T system:mm[x]  where x is the primary management module bay number.

#### **Example:**

To clear the management-module event log while management module 1 is set as the persistent command environment, at the system:mm[1]> prompt, type

```
clearlog
```

The following example shows the information that is returned:

```
system:mm[1]> clearlog
OK
system:mm[1]>
```

## displaylog command

These commands display management-module event log entries.

Table 22. *displaylog (display management-module event log) commands*

Function	What it does	Command	Valid targets
<b>Display management-module event log entries</b>	Displays five entries from the management-module event log. The first time the command is executed, the five most recent log entries are displayed. Each subsequent time the command is issued, the next five entries in the log display.	displaylog	-T system:mm[x]  where x is the primary management module bay number.
<b>Display management-module event log entries (reset counter)</b>	Resets the counter and displays the first five entries in the management-module event log.	displaylog -f	-T system:mm[x]  where x is the primary management module bay number.

### Example:

To display the first five primary management-module event log entries while management module 1 is set as the persistent command environment, at the system:mm[1]> prompt, type

```
displaylog -f
```

To display the next five management-module event log entries, type (a second time)

```
displaylog
```

To display the next five management-module event log entries, type

```
displaylog
```

The following example shows the information that is returned from these three commands:

```
system:mm[1]> displaylog -f
1      I      SERVPROC      10/27/03      19:45:57      Remote
Login Successful. Login ID:''USERID' CLI authenticated from
192.168.70.231 (Telnet).'
2      E      SERVPROC      10/27/03      19:42:58      Failure
reading I2C device. Check devices on bus 4.
3      E      SERVPROC      10/27/03      19:42:58      Failure
reading I2C device. Check devices on bus 3.
4      E      SERVPROC      10/27/03      19:42:58      Failure
reading I2C device. Check devices on bus 2.
5      I      SERVPROC      10/27/03      19:41:54      Remote
Login Successful. Login ID:''USERID' from WEB browser at
IP@=192.168.70.231'
system:mm[1]> displaylog
6      E      SERVPROC      10/27/03      19:41:53      Blower 2
Fault Multiple blower failures
7      E      SERVPROC      10/27/03      19:41:53      Blower 1
Fault Single blower failure
8      I      SERVPROC      10/27/03      19:41:48
Ethernet[1] Link Established at 100Mb, Full Duplex.
9      I      SERVPROC      10/27/03      19:41:48
Ethernet[1] configured to do 100Mb/Full Duplex.
```



```

10      I      SERVPROC      10/27/03      19:41:48
Ethernet[1] MAC Address currently being used: 0x00-09-6B-CA-0C-81
system:mm[1]> displaylog
11      I      SERVPROC      10/27/03      19:41:48
Ethernet[0] Link Established at 100Mb, Full Duplex.
12      I      SERVPROC      10/27/03      19:41:48
Ethernet[0] configured to do Auto Speed/Auto Duplex.
13      I      SERVPROC      10/27/03      19:41:48
Ethernet[0] MAC Address currently being used: 0x00-09-6B-CA-0C-80
14      I      SERVPROC      10/27/03      19:41:48
Management Module Network Initialization Complete.
15      I      SERVPROC      10/27/03      19:41:46      ENET[1]
IP-Cfg:HstName=MM00096BCA0C81, IP0=192.168.70.126 ,GW0=0.0.0.0,
NetMsk=255.255.255.0
system:mm[1]>

```

The following example shows the information that is returned if the displaylog command is run after the event log is cleared:

```

system:mm[1]> displaylog -f
1      I      SERVPROC      10/27/03      19:53:02      System
log cleared.
(There are no more entries in the event log.)
system:mm[1]>

```

---

## Power-control commands

Use these commands to control operation of the BladeCenter unit, blade servers, and I/O (switch) modules:

- boot command
- power command
- reset command

### boot command

These commands reset blade servers with several different restart options.

Table 23. boot commands

Function	What it does	Command	Valid targets
<b>Reset blade server</b>	Performs an immediate reset and restart of the specified blade server.  This command will start a blade server that is turned off.	boot  Required authority level: • Supervisor • Blade and I/O Module Power/Restart Access	-T system:blade[x]  where x is the blade server bay number.

Table 23. boot commands (continued)

Function	What it does	Command	Valid targets
<b>Reset blade server to command console</b>	Resets the specified blade server, causing it to open a command console with an SOL session when it restarts.  This command will start a blade server that is turned off.	boot -c  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Blade and I/O Module Power/Restart Access and Blade Server Remote Console Access</li> <li>• Blade and I/O Module Power/Restart Access and Blade Server Remote Console and Virtual Media Access</li> </ul>	-T system:blade[x]  where x is the blade server bay number.
<b>Power cycle</b>	Cycles power for the specified blade server. If the blade server is off, it will turn on. If the blade server is on, it will turn off and then turn on.	boot -p powercycle  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Blade and I/O Module Power/Restart Access</li> </ul>	-T system:blade[x]  where x is the blade server bay number.
<b>Reset blade server</b>	Performs an immediate reset and restart of the specified blade server.  This command will start a blade server that is turned off.	boot -p reset  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Blade and I/O Module Power/Restart Access</li> </ul>	-T system:blade[x]  where x is the blade server bay number.

**Example:**

To boot the blade server in blade bay 3 while management module 1 is set as the persistent command environment, at the system:mm[1]> prompt, type

```
boot -T system:blade[3]
```

The following example shows the information that is returned:

```
system:mm[1]> boot -T system:blade[3]
OK
system:mm[1]>
```

## power command

These commands turn on and turn off blade servers and I/O (switch) modules.

Table 24. power commands

Function	What it does	Command	Valid targets
<b>Power on</b>	Turns on the specified blade server or I/O (switch) module.	power -on  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Blade and I/O Module Power/Restart Access</li> </ul>	-T system:blade[x] -T system:switch[x]  where x is the blade server or I/O (switch) module bay number.

Table 24. power commands (continued)

Function	What it does	Command	Valid targets
<b>Power on to command console</b>	Opens a command console with an SOL session when the specified blade server is turned on.	power -on -c  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Blade and I/O Module Power/Restart Access and Blade Server Remote Console Access</li> <li>• Blade and I/O Module Power/Restart Access and Blade Server Remote Console and Virtual Media Access</li> </ul>	-T system:blade[x]  where x is the blade server bay number.
<b>Power off</b>	Turns off the specified blade server or I/O (switch) module.	power -off  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Blade and I/O Module Power/Restart Access</li> </ul>	-T system:blade[x] -T system:switch[x]  where x is the blade server or I/O (switch) module bay number.
<b>Power cycle</b>	Cycles power for the specified blade server or I/O (switch) module. If the blade server or I/O (switch) module is off, it will turn on. If the blade server or I/O (switch) module is on, it will turn off and then turn on.	power -cycle  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Blade and I/O Module Power/Restart Access</li> </ul>	-T system:blade[x] -T system:switch[x]  where x is the blade server or I/O (switch) module bay number.
<b>Power cycle to command console</b>	Cycles power for the specified blade server. If the blade server is off, it opens a command console with an SOL session when it is turned on. If the blade server is on, it will turn off and then turn on.	power -cycle -c  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Blade and I/O Module Power/Restart Access and Blade Server Remote Console Access</li> <li>• Blade and I/O Module Power/Restart Access and Blade Server Remote Console and Virtual Media Access</li> </ul>	-T system:blade[x]  where x is the blade server bay number.
<b>Display power state</b>	Displays the current power state for the specified blade server or I/O (switch) module. Possible return values are on and off.	power -state	-T system:blade[x] -T system:switch[x]  where x is the blade server or I/O (switch) module bay number.

Table 24. power commands (continued)

Function	What it does	Command	Valid targets
<b>Display POST status for I/O (switch) module</b>	<p>Displays the POST status for the specified I/O (switch) module. If the command is run while POST is in progress, it returns the level of POST that is currently in process. If the command is run after POST is complete, it displays one of the following return values:</p> <ul style="list-style-type: none"> <li>• The POST results could not be read. message displays if there was an internal error during POST.</li> <li>• The POST results not complete: hex_code message displays if POST results are not available after POST completes.</li> <li>• If POST returns valid results, one of the following messages displays: <ul style="list-style-type: none"> <li>– hex_code: Base internal function failure detected.</li> <li>– hex_code: Internal interface failure detected.</li> <li>– hex_code: External interface failure detected.</li> <li>– hex_code: Module completed POST successfully.</li> <li>– hex_code: Cannot decode POST result code.</li> </ul> </li> <li>• The Invalid POST results. message displays if none of the above conditions is true.</li> </ul> <p>Where <i>hex_code</i> is a hexadecimal code. See the documentation that comes with your I/O module for information.</p> <p><b>Note:</b> This command option is not supported for serial concentrator I/O (switch) modules.</p>	power -state -post	-T system:switch[x]  where x is the I/O (switch) module bay number.

**Example:**

To display the power state for the blade server in blade bay 5 while this blade server is set as the persistent command environment, at the system:blade[5]> prompt, type

```
power -state
```

To turn on the blade server in blade bay 5 while this blade server is set as the persistent command environment, at the system:blade[5]> prompt, type

```
power -on
```

To display the power state for the blade server in blade bay 5 again while this blade server is set as the persistent command environment, at the `system:blade[5]>` prompt, type

```
power -state
```

The following example shows the information that is returned from these three commands:

```
system:blade[5]> power -state
Off
system:blade[5]> power -on
OK
system:blade[5]> power -state
On
system:blade[5]>
```

## reset command

These commands reset blade servers, blade server integrated system management processors, I/O (switch) modules, or the primary management module.

Table 25. reset commands

Function	What it does	Command	Valid targets
<b>Reset</b>	Performs an immediate reset and restart of the specified device. This command will not start a blade server that is turned off.	reset  Required authority level (blade server, I/O module, ISMP): <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Blade and I/O Module Power/Restart Access</li> </ul> Required authority level (management module): <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Advanced Configuration (MM, I/O module, Blades)</li> </ul>	-T system:blade[x] -T system:switch[x] -T system:blade[x]:sp -T system:mm[x]  where x is the blade server, I/O (switch) module, or primary management module bay number.
<b>Reset blade server to command console</b>	Opens a command console with an SOL session when the specified blade server is reset. This command will not start a blade server that is turned off.	reset -c  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Blade and I/O Module Power/Restart Access and Blade Server Remote Console Access</li> <li>• Blade and I/O Module Power/Restart Access and Blade Server Remote Console and Virtual Media Access</li> </ul>	-T system:blade[x]  where x is the blade server bay number.
<b>Reset management module with failover</b>	Resets the primary management module, enabling failover if a redundant management module is present. An error message is displayed if you try to enable failover when a redundant management module is not installed.	reset -f  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Advanced Configuration (MM, I/O module, Blades)</li> </ul>	-T system:mm[x]  where x is the primary management module bay number.

Table 25. reset commands (continued)

Function	What it does	Command	Valid targets
<b>Reset I/O (switch) module with standard diagnostics</b>	Performs an immediate reset and restart of the specified device, running standard diagnostics on the I/O (switch) module after it restarts.  Running the reset -std command gives the same result as running the reset command on a I/O (switch) module.	reset -std  Required authority level: • Supervisor • Blade and I/O Module Power/Restart Access	-T system:switch[x]  where x is the I/O (switch) module bay number.
<b>Reset I/O (switch) module with extended diagnostics</b>	Performs an immediate reset and restart of the specified device, running extended diagnostics on the I/O (switch) module after it restarts.	reset -exd  Required authority level: • Supervisor • Blade and I/O Module Power/Restart Access	-T system:switch[x]  where x is the I/O (switch) module bay number.
<b>Reset I/O (switch) module with full diagnostics</b>	Performs an immediate reset and restart of the specified device, running full diagnostics on the I/O (switch) module after it restarts.	reset -full  Required authority level: • Supervisor • Blade and I/O Module Power/Restart Access	-T system:switch[x]  where x is the I/O (switch) module bay number.

**Example:**

To reset the ISMP on the blade server in blade bay 5 while the BladeCenter unit is set as the persistent command environment, at the system> prompt, type  
reset

The following example shows the information that is returned:

```
system> reset -T blade[5]:sp
OK
system>
```

---

## Session commands

Use these commands to start an SOL connection to the command console of a specific blade server or to end a command console session:

- console command
- exit command

### console command

This command sets up a serial over LAN connection to the command console of a blade server.

To end an SOL session, press Esc followed by an open parenthesis:

Esc (

Table 26. console commands

Function	What it does	Command	Valid targets
<b>Create SOL session with blade server</b>	Creates an SOL connection to the specified blade server.	console  Required authority level: <ul style="list-style-type: none"><li>• Supervisor</li><li>• Blade Server Remote Console Access</li><li>• Blade Server Remote Console and Virtual Media Access</li></ul>	-T system:blade[x]  where x is the blade server bay number.
<b>Create override SOL session with blade server</b>	Creates an SOL connection to the specified blade server, with the override option enabled. This enables you to end an existing SOL session to that blade server and start a new one.	console -o  Required authority level: <ul style="list-style-type: none"><li>• Supervisor</li><li>• Blade Server Remote Console Access</li><li>• Blade Server Remote Console and Virtual Media Access</li></ul>	-T system:blade[x]  where x is the blade server bay number.

#### Example:

To start an SOL connection to the blade server in blade bay 14 while this blade server is set as the persistent command environment, at the `system:mm[x]>` prompt, type

```
sol -T system:blade[14]
```

### exit command

This command exits the command-line interface, terminating the current session.

Table 27. exit command

Function	What it does	Command	Valid targets
<b>Exit</b>	Terminates the current command-line interface session.	exit	Any installed device.

#### Example:

To terminate the current command-line interface session, type

```
exit
```

## System management commands (for BladeCenter T only)

Use these commands to manage alarms and thresholds for monitored parameters of the BladeCenter T unit:

- alarm command
- thres (alarm threshold) command

### alarm command

These commands display alarm information, acknowledge alarms, and clear alarms for the specified command target.

Table 28. alarm commands

Function	What it does	Command	Valid targets
<b>Display all alarms</b>	<p>Display all alerts generated by the target component. When directed to the BladeCenter unit, the command returns a summary of alarms for all BladeCenter components. When directed to a component installed in the BladeCenter unit, the command returns a detailed alarm listing for that component.</p> <p>Detailed alarm listings include an alarm key that can be used to acknowledge or clear an alarm.</p>	alarm	<p>-T system -T system:mm[x] -T system:blade[x] -T system:switch[x] -T system:power[x] -T system:blower[x]</p> <p>where x is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.</p>
<b>Display power alarms</b>	<p>Display all power related alerts generated by the target component. When directed to the BladeCenter unit, the command returns a summary of alarms for all BladeCenter components. When directed to a component installed in the BladeCenter unit, the command returns a detailed alarm listing for that component.</p> <p>Detailed alarm listings include an alarm key that can be used to acknowledge or clear an alarm.</p>	alarm -p	<p>-T system -T system:mm[x] -T system:blade[x] -T system:switch[x] -T system:power[x] -T system:blower[x]</p> <p>where x is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.</p>



Table 28. alarm commands (continued)

Function	What it does	Command	Valid targets
<b>Display alarm information (specified by alarm generator ID)</b>	Display information for alarm specified by the generator ID.	alarm -q -g <i>value</i>  where <i>value</i> is the generator ID.  Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Blade Server Remote Console Access</li> <li>• Blade Server Remote Console and Virtual Media Access</li> </ul>	-T system:mm[x] -T system:blade[x] -T system:switch[x] -T system:power[x] -T system:blower[x]  where <i>x</i> is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.
<b>Display alarm information (specified by alarm ID)</b>	Display information for alarm specified by the alarm ID.	alarm -q -a <i>value</i>  where <i>value</i> is the alarm ID.	-T system:mm[x] -T system:blade[x] -T system:switch[x] -T system:power[x] -T system:blower[x]  where <i>x</i> is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.
<b>Display detailed alarm information (specified by generator information)</b>	Display detailed information for alarm specified by the alarm generator information. Information returned includes the alarm description that is shown by the management module Web interface and other information such as the alarm severity, power source, software indicator, and an alarm key.	alarm -q -o <i>value</i>  where <i>value</i> is the generator information.	-T system:mm[x] -T system:blade[x] -T system:switch[x] -T system:power[x] -T system:blower[x]  where <i>x</i> is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.

Table 28. alarm commands (continued)

Function	What it does	Command	Valid targets
<b>Display alarm information (specified by complete alarm key)</b>	Display information for alarm specified by the complete alarm key.	alarm -q -k <i>m:g:o:a</i>  where <i>m:g:o:a</i> is the complete alarm key: <ul style="list-style-type: none"> <li>• <i>m</i> is the module ID</li> <li>• <i>g</i> is the generator ID</li> <li>• <i>o</i> is the generator information</li> <li>• <i>a</i> is the alarm ID</li> </ul>	-T system:mm[x] -T system:blade[x] -T system:switch[x] -T system:power[x] -T system:blower[x]  where <i>x</i> is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.
<b>Acknowledge alarm (specified by alarm generator ID)</b>	Acknowledge the alarm specified by the generator ID.	alarm -r -g <i>value</i>  where <i>value</i> is the generator ID. Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Basic Configuration (MM, I/O Modules, Blades)</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x] -T system:blade[x] -T system:switch[x] -T system:power[x] -T system:blower[x]  where <i>x</i> is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.
<b>Acknowledge alarm (specified by generator information)</b>	Acknowledge the alarm specified by the generator information.	alarm -r -o <i>value</i>  where <i>value</i> is the generator information. Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Basic Configuration (MM, I/O Modules, Blades)</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x] -T system:blade[x] -T system:switch[x] -T system:power[x] -T system:blower[x]  where <i>x</i> is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.

Table 28. alarm commands (continued)

Function	What it does	Command	Valid targets
<b>Acknowledge alarm (specified by alarm ID)</b>	Acknowledge the alarm specified by the alarm ID.	alarm -r -a <i>value</i>  where <i>value</i> is the alarm ID. Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Basic Configuration (MM, I/O Modules, Blades)</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x] -T system:blade[x] -T system:switch[x] -T system:power[x] -T system:blower[x]  where <i>x</i> is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.
<b>Acknowledge alarm (specified by complete alarm key)</b>	Acknowledge the alarm specified by the complete alarm key.	alarm -r -k <i>m:g:o:a</i>  where <i>m:g:o:a</i> is the complete alarm key: <ul style="list-style-type: none"> <li>• <i>m</i> is the module ID</li> <li>• <i>g</i> is the generator ID</li> <li>• <i>o</i> is the generator information</li> <li>• <i>a</i> is the alarm ID</li> </ul> Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Basic Configuration (MM, I/O Modules, Blades)</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x] -T system:blade[x] -T system:switch[x] -T system:power[x] -T system:blower[x]  where <i>x</i> is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.
<b>Clear alarm (specified by alarm generator ID)</b>	Clear the alarm specified by the generator ID.	alarm -c -g <i>value</i>  where <i>value</i> is the generator ID. Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Basic Configuration (MM, I/O Modules, Blades)</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x] -T system:blade[x] -T system:switch[x] -T system:power[x] -T system:blower[x]  where <i>x</i> is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.

Table 28. alarm commands (continued)

Function	What it does	Command	Valid targets
<b>Clear alarm (specified by generator information)</b>	Clear the alarm specified by the generator information.	alarm -c -o <i>value</i>  where <i>value</i> is the generator information. Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Basic Configuration (MM, I/O Modules, Blades)</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x] -T system:blade[x] -T system:switch[x] -T system:power[x] -T system:blower[x]  where <i>x</i> is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.
<b>Clear alarm (specified by alarm ID)</b>	Clear the alarm specified by the alarm ID.	alarm -c -a <i>value</i>  where <i>value</i> is the alarm ID. Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Basic Configuration (MM, I/O Modules, Blades)</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x] -T system:blade[x] -T system:switch[x] -T system:power[x] -T system:blower[x]  where <i>x</i> is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.
<b>Clear alarm (specified by complete alarm key)</b>	Clear the alarm specified by the complete alarm key.	alarm -c -k <i>m:g:o:a</i>  where <i>m:g:o:a</i> is the complete alarm key: <ul style="list-style-type: none"> <li>• <i>m</i> is the module ID</li> <li>• <i>g</i> is the generator ID</li> <li>• <i>o</i> is the generator information</li> <li>• <i>a</i> is the alarm ID</li> </ul> Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Basic Configuration (MM, I/O Modules, Blades)</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x] -T system:blade[x] -T system:switch[x] -T system:power[x] -T system:blower[x]  where <i>x</i> is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.

Table 28. alarm commands (continued)

Function	What it does	Command	Valid targets
<b>Set alarm</b>	Set an alarm for the specified target, including severity level and description.	alarm -s -l <i>level desc</i>  where <ul style="list-style-type: none"> <li><i>level</i> is the severity level: <ul style="list-style-type: none"> <li>– CRT (critical)</li> <li>– MJR (major)</li> <li>– MNR (minor)</li> </ul> </li> <li><i>desc</i> is a short text description of the alarm</li> </ul> Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Basic Configuration (MM, I/O Modules, Blades)</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	-T system:mm[x] -T system:blade[x] -T system:switch[x] -T system:power[x] -T system:blower[x]  where <i>x</i> is the primary management module bay number, blade server, I/O (switch) module bay number, power module bay number, or blower number.

**Example:**

To display the alarm status for the BladeCenter T unit while the BladeCenter T unit is set as the persistent command environment, at the system> prompt, type  
alarm

To display the power alarm status for the BladeCenter T unit while the BladeCenter T unit is set as the persistent command environment, at the system> prompt, type  
alarm -p

To display detailed power alarm status for the power module in power bay 2 while the BladeCenter T unit is set as the persistent command environment, at the system> prompt, type  
alarm -T system:power[2]

The following example shows the information that is returned from a series of alarm commands. This example assumes that the blade server in blade bay 3 has a major over-temperature fault and that the power module in power bay 2 has a critical fault.

```

system> alarm
Alarms Summary List
Module   Severity  Power    S/W
power[2] CRT        Yes      No
blade[3] MJR        No       No
system> alarm -p
Alarms Summary List
Module   Severity  Power    S/W
power[2] CRT        Yes      No
system> alarm -T system:power[2]
Alarms Detailed List
Severity  Power    S/W    Description      Key
CRT       Yes     No     Under Voltage    2:1:3:2
system> alarm -c -k 2:1:3:2 -T system:power[2]
Alarm Cleared
system> alarm -T system:power[2]

```

```

No Active Alarms
system> alarm
Alarms Summary List
Module   Severity   Power   S/W
blade[3] MJR         No      No
system> alarm -T system:blade[3]
Alarms Detailed List
Severity   Power   S/W   Description   Key
MJR        No      No     Over temperature  3:3:1:3
system> alarm -s -l CRT
OK
system> alarm -s -l MNR -p Investigate Watts -T system:blade[2]
OK
system> alarm -s -l CRT -p Under Voltage -T system:blade[2]
Failed. AlarmID is being used
system>

```

## thres (alarm threshold) command

These commands display and set alarm thresholds for the BladeCenter T unit.

Table 29. *thres* (alarm threshold) commands

Function	What it does	Command	Valid targets
<b>Display specified threshold settings</b>	Displays the current settings of threshold values for the specified source.	<pre>thres -q -source</pre> <p>where <i>source</i> is the set of threshold values to display:</p> <ul style="list-style-type: none"> <li>• MM (management module ambient temperature)</li> <li>• SYS (system temperature)</li> <li>• P12V (plus 12 voltage)</li> <li>• P5V (plus 5 voltage)</li> <li>• P3.3V (plus 3.3 voltage)</li> <li>• P2.5V (plus 2.5 voltage)</li> <li>• P1.8V (plus 1.8 voltage)</li> <li>• M5V (minus 5 voltage)</li> </ul>	<pre>-T system:mm[x]</pre> <p>where <i>x</i> is the primary management module bay number.</p>

Table 29. *thres* (alarm threshold) commands (continued)

Function	What it does	Command	Valid targets
<b>Display specified threshold setting</b>	Checks syntax and sets the specified threshold value.	<p><code>thres -s -source -type value</code></p> <p>where</p> <ul style="list-style-type: none"> <li>• <i>source</i> is a set of threshold values: <ul style="list-style-type: none"> <li>– MM (management module ambient temperature)</li> <li>– SYS (system temperature)</li> <li>– P12V (plus 12 voltage)</li> <li>– P5V (plus 5 voltage)</li> <li>– P3.3V (plus 3.3 voltage)</li> <li>– P2.5V (plus 2.5 voltage)</li> <li>– P1.8V (plus 1.8 voltage)</li> <li>– M5V (minus 5 voltage)</li> </ul> </li> <li>• <i>type</i> is a specific threshold to set for the indicated source: <ul style="list-style-type: none"> <li>– HCRT (high critical)</li> <li>– HMJR (high major)</li> <li>– HMNR (high minor)</li> <li>– LCRT (low critical)</li> <li>– LMJR (low major)</li> <li>– LMNR (low minor)</li> <li>– HCRTH (high critical hysteresis reset)</li> <li>– HMJRH (high major hysteresis reset)</li> <li>– HMNRH (high minor hysteresis reset)</li> <li>– LCRTH (low critical hysteresis reset)</li> <li>– LMJRH (low major hysteresis reset)</li> <li>– LMNRH (low minor hysteresis reset)</li> </ul> </li> </ul> <p><i>(continued on next page)</i></p>	<p>-T system:mm[x]</p> <p>where x is the primary management module bay number.</p>

Table 29. thres (alarm threshold) commands (continued)

Function	What it does	Command	Valid targets
<b>Display specified threshold setting (continued)</b>		<p>where</p> <ul style="list-style-type: none"> <li>• <i>value</i> is a threshold value or -DEFAULT to set the threshold to the factory preset value. The default threshold value is Disable (no setting), with the following exceptions: <ul style="list-style-type: none"> <li>– SYS HMNR: 60</li> <li>– SYS HMNRH: 55</li> <li>– MM HMNR: 39</li> <li>– MM HMNRH: 30</li> <li>– P1.8V LMNR: +1.62</li> <li>– P1.8V LMNRH: +1.74</li> <li>– P1.8V HMNR: +1.89</li> <li>– P1.8V HMNRH: +1.86</li> <li>– P2.5V LMNR: +2.25</li> <li>– P2.5V LMNRH: +2.42</li> <li>– P2.5V HMNR: +2.63</li> <li>– P2.5V HMNRH: +2.58</li> <li>– P3.3V LMNR: +3.00</li> <li>– P3.3V LMNRH: +3.20</li> <li>– P3.3V HMNR: +3.47</li> <li>– P3.3V HMNRH: +3.40</li> <li>– P5V LMNR: +4.50</li> <li>– P5V LMNRH: +4.85</li> <li>– P5V HMNR: +5.25</li> <li>– P5V HMNRH: +5.15</li> <li>– P12V LMNR: +10.80</li> <li>– P12V LMNRH: +11.64</li> <li>– P12V HMNR: +12.60</li> <li>– P12V HMNRH: +12.36</li> <li>– M5V LMNR: -5.50</li> <li>– M5V LMNRH: -5.15</li> <li>– M5V HMNR: -4.75</li> <li>– M5V HMNRH: -4.85</li> </ul> </li> </ul> <p>(continued on next page)</p>	



Table 29. thres (alarm threshold) commands (continued)

Function	What it does	Command	Valid targets
Display specified threshold setting (continued)		Required authority level: <ul style="list-style-type: none"> <li>• Supervisor</li> <li>• Basic Configuration (MM, I/O Modules, Blades)</li> <li>• Advanced Configuration (MM, I/O Modules, Blades)</li> </ul>	

**Example:**

To display the management-module ambient temperature thresholds for the BladeCenter T unit while management module 1 is set as the persistent command environment, at the `system:mm[1]>` prompt, type

```
thres -q -MM
```

To set the management-module ambient temperature low major threshold for the BladeCenter T unit while the BladeCenter T unit is set as the persistent command environment, at the `system>` prompt, type

```
thres -s -MM -LMJR 45
```

The following example shows the information that is returned from a series of `thres` commands:

```
system:mm[1]> thres -q -MM
Management Module Temperature Thresholds Detail in Centigrade
LCRT    LCRTH    LMJR     LMJRH    LMNR     LMNRH
=====
Disable  Disable  Disable  Disable  Disable  Disable

HMNRH    HMNR     HMJRH    HMJR     HCRTH    HCRT
=====
+55.00   +60.00   Disable  Disable  Disable  Disable
system:mm[1]> thres -s -MM -LMJR 45
OK
system:mm[1]> thres -q -MM
Management Module Temperature Thresholds Detail in Centigrade
LCRT    LCRTH    LMJR     LMJRH    LMNR     LMNRH
=====
Disable  Disable  +45.00   Disable  Disable  Disable

HMNRH    HMNR     HMJRH    HMJR     HCRTH    HCRT
=====
+55.00   +60.00   Disable  Disable  Disable  Disable
system:mm[1]>
```



---

## Chapter 4. Error messages

The command-line interface provides error messages specific to each command. The following topics list the common error messages that apply to all commands and command-specific error messages, along with their definitions. For ease of reference, the common error messages are repeated in the lists of error messages for those commands that also have command-specific error messages.

- “Common errors” on page 86
- “alarm command errors” on page 87
- “alertentries command errors” on page 88
- “boot command errors” on page 88
- “clear command errors” on page 88
- “clearlog command errors” on page 89
- “console command errors” on page 89
- “dhcpinfo command errors” on page 89
- “displaylog command errors” on page 89
- “dns command errors” on page 90
- “health command errors” on page 90
- “identify command errors” on page 90
- “ifconfig command errors” on page 91
- “info command errors” on page 93
- “list command errors” on page 93
- “power command errors” on page 93
- “reset command errors” on page 94
- “smtp command errors” on page 94
- “snmp command errors” on page 94
- “sol command errors” on page 95
- “tcpcmdmode command errors” on page 96
- “telnetcfg command errors” on page 96
- “thres command errors” on page 97
- “update command errors” on page 97
- “users command errors” on page 99

## Common errors

The following table lists error messages that apply to all commands. Each command that has unique errors will also have a list of command-specific error messages.

Table 30. Common errors

Error message	Definition
Command line contains extraneous arguments	Displays when extra command arguments are entered.
Duplicate option: <i>option</i> where <i>option</i> identifies the command option that was entered more than once.	Displays when a user tries to enter the same command option in a single command multiple times. For example, <code>dns -i 192.168.70.29 -i</code>
Each option can only be used once per command.	Displays when a user tries to enter the same command option in a single command multiple times. For example, <code>env -T system:blade[4] -T system:blade[5]</code> .
Error writing data for option <i>option</i> where <i>option</i> identifies the command option that is returning an error.	Displays when an internal error occurs while writing a command option value.
Illegal option: <i>option</i> where <i>option</i> identifies the illegal short command option that was entered.	Displays when an illegal short command option is entered.
Integer argument out of range ( <i>range - range</i> ) for <i>option: argument</i> where: <ul style="list-style-type: none"> <li>• <i>range</i> identifies the range limits</li> <li>• <i>option</i> identifies the command option</li> <li>• <i>argument</i> identifies the integer that is out of range</li> </ul>	Displays when an integer is entered that is out of range.
Invalid integer argument for <i>option: argument</i> where: <ul style="list-style-type: none"> <li>• <i>option</i> identifies the command option</li> <li>• <i>argument</i> identifies the invalid argument</li> </ul>	Displays when an invalid integer is entered.
Invalid option	Displays when an invalid command option is entered.
Invalid option argument for <i>option: argument</i> where: <ul style="list-style-type: none"> <li>• <i>option</i> identifies the command option</li> <li>• <i>argument</i> identifies the invalid argument</li> </ul>	Displays when an invalid argument for a command option is entered.
Invalid target path	Displays when a user tries to issue a command to a target that is not valid.
Long option <i>option</i> requires an argument where <i>option</i> identifies the long command option that is missing an argument.	Displays when a long command option is entered without a required argument.
Missing option name	Displays when a dash (-) is entered with out a command option name.
Read/write command error	Displays when an internal error occurs while executing the command.

Table 30. Common errors (continued)

Error message	Definition
Short option <i>option</i> requires an argument where <i>option</i> identifies the short command option that is missing an argument.	Displays when a short command option is entered without a required argument.
The target bay is empty.	Displays when the user tries to issue a command to an empty blade bay, blower bay, I/O-module bay, management-module bay, or power bay.
The target bay is out of range.	Displays when a user tries to issue a command to a target that is out of range for that target. For example, the <code>env -T system:blade[15]</code> command is out of range because the BladeCenter unit has only 14 blade bays.
Unrecognized long option: <i>option</i> where <i>option</i> identifies the illegal long command option that was entered.	Displays when an illegal long command option is entered.
User does not have the authority to issue this command	Displays when a user lacks the authority level necessary to execute a command.

## alarm command errors

The following table lists error messages for the alarm command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 31. alarm command errors

Error message	Definition
Alarm Description must be provided for setting an alarm.	Displays when the user tries to set an alarm without providing an alarm description.
Alarm ID must be from 1 to 255.	Displays when an invalid alarm ID is entered.
Generator ID must be from 1 to 255.	Displays when an invalid generator ID is entered.
Generator ID must be provided.	Displays when a generator information ID is provided without a generator ID.
Module ID must be from 1 to 255.	Displays when an invalid module ID is entered.
No active alarm.	Displays when no active alarm is found for the command target.
No matching alarm.	Displays when no matching alarm is found for the command target.
Severity level must be provided for setting an alarm.	Displays when the user tries to set an alarm without specifying the severity level.
Software Generator ID must be from 1 to 255.	Displays when an invalid generator information is entered.
The entered Alarm Key is not in proper format.	Displays when an invalid alarm key is entered.
Unable to acknowledge the requested alarm.	Displays when an internal error occurs while acknowledging an alarm.
Unable to clear the requested alarm.	Displays when an internal error occurs while clearing an alarm.
Unable to set the requested alarm.	Displays when an internal error occurs while setting an alarm.

---

## alertentries command errors

The following table lists error messages for the alertentries command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 32. alertentries command errors

Error message	Definition
An entry cannot be modified and deleted in the same command.	Displays when a user tries to modify an entry and delete it in the same command.
Arguments containing spaces must be enclosed in quotation marks.	Displays when a user tries to enter a string containing spaces that has an opening quotation mark without a closing quotation mark.
Invalid input. Angle brackets are not allowed in the name field.	Displays when a user tries to enter a string parameter containing < or > for the -n (name) command option.
Invalid option	Displays when an invalid command option is entered. This includes numeric options for the alert recipient that are not from 1 through 12.
Invalid parameter. Input must be numeric.	Displays when a user tries to enter a parameter value containing non-numeric characters for a command option requiring numeric input.
Syntax error. -e can only be used in conjunction with the email argument.	Displays when a user tries to enter an invalid e-mail address for the -e command option.
Syntax error. -i can only be used in conjunction with the director argument.	Displays when a user tries to enter an invalid IP address for the -i command option.
Syntax error. Type alertentries -h for help.	Displays when an alert entry number is entered without the leading dash ( - ).
The name must be less than 32 characters long.	Displays when a user tries to enter too many characters in an input field.
When creating a new entry, all options are required.	Displays when a required command option is missing when creating a user.

---

## boot command errors

There are no unique errors for the boot command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

---

## clear command errors

The following table lists error messages for the clear command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 33. clear command errors

Error message	Definition
Firmware update is in progress. Try again later.	Displays when the user tries to reset the management module to its default configuration during a firmware update. The error message displays and the management module configuration does not reset.
Internal error resetting to defaults.	Displays when an internal error occurs while resetting the management module to its default configuration. The error message displays and the management module configuration does not reset.

---

## clearlog command errors

The following table lists error messages for the clearlog command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 34. clearlog command errors

Error message	Definition
Error clearing the event log.	Displays when an internal error occurs while clearing the event log.

---

## console command errors

The following table lists error messages for the console command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 35. console command errors

Error message	Definition
Error entering console mode.	Displays when an internal error occurs while trying to establish an SOL connection.
Global SOL is not enabled	Displays when SOL is not enabled globally.
Internal Error	Displays when an internal error occurs while processing the command.
SOL is not ready	Displays when the blade server is not available, or when a socket needed to establish a connection to the blade server is not available.
SOL on blade is not enabled	Displays when SOL is not enabled on the blade server where the user is trying to start an SOL session.
SOL session is already active	Displays when the user cannot start an SOL session with a blade server because an SOL session with that blade server is already in progress.

---

## dhcpcinfo command errors

There are no unique errors for the dhcpcinfo command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

---

## displaylog command errors

The following table lists error messages for the displaylog command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 36. displaylog command errors

Error message	Definition
(There are no more entries in the event log.)	Displays when there are no more event log entries to display.

---

## dns command errors

The following table lists error messages for the dns command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 37. dns command errors

Error message	Definition
At least one address is required to enable DNS.	Displays when a user tries to enable DNS without configuring at least one address.
Invalid ip address	Displays when a user tries to set an invalid IP address.
-on and -off cannot both be used in the same command.	Displays when a user tries to enable and disable DNS in the same command.

---

## health command errors

There are no unique errors for the health command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

---

## identify command errors

The following table lists error messages for the identify command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 38. identify command errors

Error message	Definition
Delay value must be less than 60	Displays when a user tries to enter a -d value that is greater than 60 seconds.
Identify: Error accessing remote LED	Displays when an internal error occurs while processing the command.
Identify: error getting LED status	Displays when an internal error occurs while processing the command.
Identify: error setting Management Module LED	Displays when an internal error occurs while processing the command.
Identify: Error unknown command	Displays when an internal error occurs while processing the command.
Identify: LED status not supported	Displays when the user tries to get the status of an LED that is not supported by a blade server.
Identify: unknown LED state <i>state</i> where <i>state</i> identifies the LED state that was returned.	Displays when an LED state other than on, off, or blinking is returned.
Identify: Unknown return status <i>status</i> where the <i>status</i> value varies based on the problem that was encountered.	Displays when an internal error occurs while processing the command.
Syntax error.	Displays when the user tries to enter an invalid command option. Type <code>identify -h</code> for command help.



## ifconfig command errors

The following table lists error messages for the ifconfig command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 39. ifconfig command errors

Error message	Definition
Error reading gateway address.	Displays when an internal error occurs while reading the gateway address of a network interface (eth0 or eth1).
Error reading IP Address.	Displays when an internal error occurred while reading the IP address of the integrated system management processor on a blade server, or while reading the IP address of a network interface (eth0 or eth1).
Error reading the burned-in MAC address.	Displays when an internal error occurs while reading the burned-in MAC address of a network interface (eth0 or eth1).
Error reading the data rate.	Displays when an internal error occurs while reading the data rate setting of a network interface (eth0 or eth1).
Error reading the DHCP configuration.	Displays when an internal error occurs while reading the DHCP setting of a network interface (eth0).
Error reading the duplex setting.	Displays when an internal error occurs while reading the duplex setting of a network interface (eth0 or eth1).
Error reading the hostname.	Displays when an internal error occurs while reading the host name of a network interface (eth0).
Error reading the locally administered MAC address.	Displays when an internal error occurs while reading the locally administered MAC address of a network interface (eth0 or eth1).
Error reading the maximum transmission unit.	Displays when an internal error occurs while reading the maximum transmission unit (MTU) setting of a network interface (eth0 or eth1).
Error reading the subnet mask.	Displays when an internal error occurs while reading the subnet mask of a network interface (eth0 or eth1).
Error writing IP Address.	Displays when an internal error occurs while setting the IP address of the integrated system management processor on a blade server.
Invalid IP arg for <i>option</i> : <i>ip_address</i> . Each byte has to be in the range (0-255) where: • <i>option</i> identifies the command option • <i>ip_address</i> identifies the invalid IP address argument	Displays when the user tries to enter an IP address that is out of range. IP addresses must follow the standard format: <i>xxx.xxx.xxx.xxx</i> , where each <i>xxx</i> is a number from 0 to 255.
Invalid IP arg for <i>option</i> : <i>ip_address</i> . Enter 4 bytes separated by 3 dots where: • <i>option</i> identifies the command option • <i>ip_address</i> identifies the invalid IP address argument	Displays when the user tries to enter an IP address that is too long. IP addresses must follow the standard format: <i>xxx.xxx.xxx.xxx</i> , where each <i>xxx</i> is a number from 0 to 255.
Invalid IP arg for <i>option</i> : <i>ip_address</i> . Too few bytes where: • <i>option</i> identifies the command option • <i>ip_address</i> identifies the invalid IP address argument	Displays when the user tries to enter an IP address with too few bytes. IP addresses must follow the standard format: <i>xxx.xxx.xxx.xxx</i> , where each <i>xxx</i> is a number from 0 to 255.

Table 39. *ifconfig* command errors (continued)

Error message	Definition
<p>Invalid IP arg for <i>option</i>: <i>ip_address</i>. Too many bytes</p> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>option</i> identifies the command option</li> <li>• <i>ip_address</i> identifies the invalid IP address argument</li> </ul>	<p>Displays when the user tries to enter an IP address with too many bytes. IP addresses must follow the standard format: <i>xxx.xxx.xxx.xxx</i>, where each <i>xxx</i> is a number from 0 to 255.</p>
<p>Invalid hostname arg for <i>option</i>: <i>hostname</i>. Consecutive dots</p> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>option</i> identifies the command option</li> <li>• <i>hostname</i> identifies the invalid hostname argument</li> </ul>	<p>Displays when the user tries to enter consecutive periods ( . ) as part of a hostname.</p>
<p>Invalid hostname arg for <i>option</i>: <i>hostname</i>. Length has to be &lt; 64 characters</p> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>option</i> identifies the command option</li> <li>• <i>hostname</i> identifies the invalid hostname argument</li> </ul>	<p>Displays when the user tries to enter a hostname longer than 63 characters.</p>
<p>Invalid hostname arg for <i>option</i>: <i>hostname</i>. Only alphanumeric chars and . _ - allowed</p> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>option</i> identifies the command option</li> <li>• <i>hostname</i> identifies the invalid hostname argument</li> </ul>	<p>Displays when the user tries to enter a hostname that contains invalid characters. Valid characters that can be used in a hostname are letters, numbers, periods ( . ), dashes ( - ), and underscores ( _ ).</p>
<p>Invalid ip address.</p>	<p>Displays for one of the following errors:</p> <ul style="list-style-type: none"> <li>• A user tries to set the IP address of system:blade[1]:sp either to an invalid IP address, or an IP address whose last part is greater than 255 (the max number of blade servers).</li> <li>• A user tries to enter an invalid IP address for the -i (static IP address) command option.</li> </ul>
<p>Invalid MAC arg for <i>option</i>: <i>address</i>. Invalid syntax</p> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>option</i> identifies the command option</li> <li>• <i>address</i> identifies the invalid MAC address argument</li> </ul>	<p>Displays when the user tries to enter an invalid MAC address.</p>
<p>Invalid MAC arg for <i>option</i>: <i>address</i>. Multicast addresses not allowed</p> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>option</i> identifies the command option</li> <li>• <i>address</i> identifies the invalid MAC address argument</li> </ul>	<p>Displays when the user tries to enter a multicast address.</p>
<p>Invalid MAC arg for <i>option</i>: <i>address</i>. Too few bytes</p> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>option</i> identifies the command option</li> <li>• <i>address</i> identifies the invalid MAC address argument</li> </ul>	<p>Displays when the user tries to enter a MAC address with too few bytes.</p>
<p>Invalid MAC arg for <i>option</i>: <i>address</i>. Too many bytes</p> <p>where:</p> <ul style="list-style-type: none"> <li>• <i>option</i> identifies the command option</li> <li>• <i>address</i> identifies the invalid MAC address argument</li> </ul>	<p>Displays when the user tries to enter a MAC address with too many bytes.</p>
<p>Invalid parameter. Valid values for -c are dhcp, static, or dthens.</p>	<p>Displays when a user tries to enter an invalid parameter for the -c (Ethernet configuration method) command option.</p>

Table 39. *ifconfig* command errors (continued)

Error message	Definition
The target must be system:blade[1]:sp for this command	Displays when a user tries to issue the <code>ifconfig -i &lt;ip address&gt; -T system:blade[x]:sp</code> to a blade server other than blade[1].

---

## info command errors

The following table lists error messages for the `info` command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 40. *info* command errors

Error message	Definition
Device not found	Displays when no VPD is available for the targeted device.
Unknown device type.	Displays when the command is targeted to an unknown device type.

---

## list command errors

The following table lists error messages for the `list` command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 41. *list* command errors

Error message	Definition
The level must be non-zero.	Displays when the user tries to enter a level of depth for tree-structure display of 0.

---

## power command errors

The following table lists error messages for the `power` command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 42. *power* command errors

Error message	Definition
Invalid POST results.	Displays when the POST results are not valid.
POST results could not be read.	Displays when an internal error occurs during POST.
POST results not complete: <i>hex_code</i> where the <i>hex_code</i> value varies based on the problem that was encountered.	Displays when the POST results are not available. See the documentation that comes with the device that failed to respond correctly to the <code>power</code> command for information about the <i>hex_code</i> value.

---

## reset command errors

The following table lists error messages for the reset command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 43. reset command errors

Error message	Definition
An error occurred while disabling failover.	Displays when an internal error occurs while disabling failover.
An error occurred while enabling failover.	Displays when an internal error occurs while enabling failover.
Firmware update is in progress. Try again later.	Displays when the user tries to reset the management module during a firmware update. The error message displays and the management module does not reset.
There is no backup management module installed.	Displays when a user tries to enable failover on a management module reset and there is no back-up management module.

---

## smtp command errors

The following table lists error messages for the smtp command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 44. smtp command errors

Error message	Definition
Input length is greater than the maximum characters allowed.	Displays when a user tries to enter too many characters in an input field.
Invalid host name or ip address	Displays when a user tries to set the SMTP host name or IP address to an invalid value.
SMTP server host name or IP address is not set	Displays when a user tries to view the SMTP host name or IP address and the values are not set.

---

## snmp command errors

The following table lists error messages for the snmp command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 45. snmp command errors

Error message	Definition
Arguments containing spaces must be enclosed in quotation marks	Displays when a user tries to enter a string containing spaces that has an opening quotation mark without a closing quotation mark.
At least one configured community is required to enable SNMP.	Displays when a user tries to enable SNMP without configuring at least one community name.
Input length is greater than the maximum characters allowed.	Displays when a user tries to enter too many characters in an input field.
Invalid community name	Displays when a user tries to set a community name to an invalid value.
Invalid host name or ip address	Displays when a user tries to set the SNMP host name or IP address to an invalid value.

---

## sol command errors

The following table lists error messages for the sol command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 46. sol command errors

Error message	Definition
An error occurred while disabling SOL globally	Displays when an internal error occurs while disabling SOL globally.
An error occurred while disabling SOL on that blade	Displays when an internal error occurs while disabling SOL on a blade server.
An error occurred while enabling SOL globally	Displays when an internal error occurs while enabling SOL globally
An error occurred while enabling SOL on that blade	Displays when an internal error occurs while enabling SOL on a blade server.
An error occurred while reading the global SOL status	Displays when an internal error occurs while reading the global SOL status.
An error occurred while reading the SOL accumulate timeout	Displays when an internal error occurs while reading the SOL accumulate timeout.
An error occurred while reading the SOL retry count	Displays when an internal error occurs while reading the SOL retry count.
An error occurred while reading the SOL retry interval	Displays when an internal error occurs while reading the SOL retry interval.
An error occurred while reading the SOL send threshold	Displays when an internal error occurs while reading the SOL send threshold.
An error occurred while reading the SOL session status on that blade	Displays when an internal error occurs while reading the SOL session status on a blade server.
An error occurred while reading the SOL VLAN ID	Displays when an internal error occurs while reading the SOL VLAN ID.
An error occurred while setting the SOL accumulate timeout	Displays when an internal error occurs while setting the SOL accumulate timeout.
An error occurred while setting the SOL blade reset sequence	Displays when an internal error occurs while processing the command.
An error occurred while setting the SOL escape sequence	Displays when an internal error occurs while processing the command.
An error occurred while setting the SOL retry count	Displays when an internal error occurs while setting the SOL retry count.
An error occurred while setting the SOL retry interval	Displays when an internal error occurs while setting the SOL retry interval.
An error occurred while setting the SOL send threshold	Displays when an internal error occurs while setting the SOL send threshold.
An error occurred while setting the SOL vlan id	Displays when an internal error occurs while processing the command.
Invalid arg for -status. Must be on or off.	Displays if a user tries to enter an invalid argument for the -status command option.
Invalid parameter. The accumulate timeout must be between 1 and 1275 inclusive.	Displays when a user tries to enter a accumulate timeout that is outside of the valid range.
Invalid parameter. The retry count must be between 0 and 7, inclusive.	Displays when a user tries to enter a retry count that is outside of the valid range.

Table 46. sol command errors (continued)

Error message	Definition
Invalid parameter. The send threshold must be between 1 and 251 inclusive.	Displays when a user tries to enter a send threshold that is outside of the valid range.
Invalid parameter. The vlan id must be between 1 and 4095 inclusive.	Displayed if a user tries to enter a VLAN ID that is out of range.
Retry interval range is too large. Setting to 250.	Displays when a user tries to enter a retry interval that is greater than 250 ms. If the user tries to enter a retry interval greater than 250 ms, the retry interval will be set to 250 ms.
This blade does not support SOL	Displays if a user tries to issue the SOL command to a blade server that does not support SOL.

## tcpcmdmode command errors

The following table lists error messages for the tcpcmdmode command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 47. tcpcmdmode command errors

Error message	Definition
-on and -off cannot be used in the same command.	Displays when a user tries to enable and disable TCP command mode in the same command.
Error disabling tcpcmdmode	Displays when an internal error occurs while disabling TCP command mode.
Error enabling TCP command mode	Displays when an internal error occurs while enabling TCP command mode.
Invalid parameter. Input must be numeric.	Displays when a user tries to enter a parameter value for the -t (timeout) command option containing non-numeric characters. For example, tcpcmdmode -t 200m.
Invalid parameter. The timeout must be between 0 and 4294967295 seconds.	Displays when a user tries to enter a parameter value for the -t (timeout) command option that is outside of the valid range.

## telnetcfg command errors

The following table lists error messages for the telnetcfg command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 48. telnetcfg command errors

Error message	Definition
Invalid parameter. Input must be numeric.	Displays when a user tries to enter a Telnet timeout value containing non-numeric characters. For example, telnetcfg -t 200w.
Invalid parameter. The timeout must be between 0 and 4294967295 seconds.	Displays when a user tries to enter a Telnet timeout value that is out of range.

---

## thres command errors

The following table lists error messages for the thres command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 49. thres command errors

Error message	Definition
Invalid threshold value.	Displays when an invalid threshold value is entered.
Unable to query the threshold request.	Displays when an internal error occurs while processing the query threshold request.
Unable to set the requested threshold.	Displays when an internal error occurs while setting an threshold.

---

## update command errors

The following table lists error messages for the update command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 50. update command errors

Error message	Definition
Flash operation failed.	Displays when an internal error occurs during flash firmware update.
Flash operation failed status <i>percentage</i> where the <i>percentage</i> value varies based on when the problem was encountered.	Displays when an internal error occurs during flash firmware update.
Flash operation not in process or status unavailable.	Displays when an internal error occurs during flash firmware update.
Flash operation timed out <i>percentage</i> where the <i>percentage</i> value varies based on when the problem was encountered.	Displays when an internal error occurs during flash firmware update.
Flash preparation - error sending packet file <i>filename</i> where the <i>filename</i> value varies based on the file being updated.	Displays when an internal error occurs during flash firmware update.
Flash preparation error.Packet percent complete <i>percentage</i> . Flash percent complete <i>percentage</i> . where the <i>percentage</i> value varies based on when the problem was encountered.	Displays when an internal error occurs during flash firmware update.
Flash preparation error.Timeout on packet preparation operation <i>percentage</i> where the <i>percentage</i> value varies based on when the problem was encountered.	Displays when an internal error occurs during flash firmware update.
Flashing not supported on this target	Displays when a user targets the command to a I/O module that does not support flash firmware updates.

Table 50. update command errors (continued)

Error message	Definition
Invalid option	<p>Displays when an invalid command option is entered. For the update command, invalid command option errors include:</p> <ul style="list-style-type: none"> <li>• the -i (IP address) command option does not have an IP address parameter</li> <li>• the -i (IP address) command option specifies an invalid IP address</li> <li>• attempting to enter the -i (IP address) command option without the -n (filename) command option</li> <li>• the -n (filename) command option does not have a file name parameter</li> <li>• attempting to enter the -n (filename) command option without the -i (IP address) command option</li> <li>• attempting to enter the -v (verbose) command option without the -i (IP address) command option and -n (filename) command option</li> <li>• attempting to enter the -v (verbose) command option with the -a command option</li> </ul>
Management Module <i>bay_number</i> is not installed. where the <i>bay_number</i> value varies based on the problem that was encountered.	Displays when the command is targeted to a management-module bay where no management module is installed.
TFTP Error <i>error_code</i> where the <i>error_code</i> value varies based on the problem that was encountered.	Displays when an internal error occurs for the TFTP connection.
TFTP Error. Access violation.	Displays when an internal error occurs for the TFTP connection.
TFTP Error. Connection failure.	Displays when an internal error occurs for the TFTP connection.
TFTP Error. Disk full or allocation exceeded.	Displays when an internal error occurs for the TFTP connection.
TFTP Error. File already exists.	Displays when an internal error occurs for the TFTP connection.
TFTP Error. File error.	Displays when an internal error occurs for the TFTP connection.
TFTP Error. File not found.	Displays when an internal error occurs for the TFTP connection.
TFTP Error. Illegal option negotiation.	Displays when an internal error occurs for the TFTP connection.
TFTP Error. Illegal TFTP operation.	Displays when an internal error occurs for the TFTP connection.
TFTP Error. Unable to allocate memory.	Displays when an internal error occurs for the TFTP connection.
TFTP Error. Unknown transfer ID.	Displays when an internal error occurs for the TFTP connection.
TFTP Error. Unknown user.	Displays when an internal error occurs for the TFTP connection.
Unable to read blade server VPD bay <i>bay_number name</i> . where the <i>bay_number</i> and <i>name</i> values vary based on the problem that was encountered.	Displays when the command is specifies an empty bay or if an internal error occurs when reading the VPD.



Table 50. update command errors (continued)

Error message	Definition
Unable to read MM VPD bay <i>bay_number name</i> . where the <i>bay_number</i> and <i>name</i> values vary based on the problem that was encountered.	Displays when the command is specifies an empty bay or if an internal error occurs when reading the VPD.
Unable to read I/O Module VPD bay <i>bay_number name</i> . where the <i>bay_number</i> and <i>name</i> values vary based on the problem that was encountered.	Displays when the command is specifies an empty bay or if an internal error occurs when reading the VPD.
Unknown device type.	Displays when the command is targeted to an unknown device type.
Update error. Invalid destination.	Displays when a user tries to issue a command to a target that is not valid.

## users command errors

The following table lists error messages for the users command. See “Common errors” on page 86 for a list of error messages that apply to all commands.

Table 51. users command errors

Error message	Definition
An entry cannot be modified and deleted in the same command.	Displays when a user tries to modify and delete a user in the same command.
Arguments containing spaces must be enclosed in quotation marks.	Displays when a user tries to enter a context name containing spaces that does not have opening and closing quotation marks.
Error creating user	Displays when an internal error occurs while creating a user.
Error setting the access type	Displays when an internal error occurs while setting the access type.
Error setting the authentication protocol	Displays when an internal error occurs while setting the authentication protocol.
Error setting the authority level	Displays when an internal error occurs while setting the authority level.
Error setting the context name	Displays when an internal error occurs while setting the context name.
Error setting the hostname/IP address	Displays when an internal error occurs while setting the hostname or IP address.
Error setting the password	Displays when an internal error occurs while setting the password.
Error setting the privacy password	Displays when an internal error occurs while setting the privacy password.
Error setting the privacy protocol	Displays when an internal error occurs while setting the privacy protocol.
Error setting the username	Displays when an internal error occurs while setting the username.
Incorrect login permission option: <i>permission</i> where the <i>permission</i> value varies based on the problem that was encountered.	Displays when a user tries to specify an invalid login permission for the -a command option.

Table 51. users command errors (continued)

Error message	Definition
Invalid argument. Valid arguments for -at are read, write, and traps.	Displays when a user tries to set an invalid argument for the -at command option.
Invalid argument. Valid choices are des or <none>.	Displays when a user tries to set an invalid argument for the -pp command option.
Invalid argument. Valid choices are md5, sha, or <none>.	Displays when a user tries to set an invalid argument for the -ap command option.
Invalid authority level.	Displays for one of the following errors: <ul style="list-style-type: none"> <li>A user tries to set an authority level that is invalid.</li> <li>A user tries to set a custom authority level without specifying any customization information.</li> </ul>
Invalid hostname or ip address.	Displays when a user tries to set an invalid host name or IP address for the -i command option.
Invalid username. The username can only contain numbers, letters, dots, and underscores.	Displays when the user tries to enter an username that contains invalid characters. Valid characters that can be used in a username are letters, numbers, periods ( . ), and underscores ( _ ).
Syntax error. -a option must have an argument.	Displays when a user tries to attempt to enter the command with a -a command option that has no argument.
Syntax error. -at option must have an argument.	Displays when a user tries to attempt to enter the command with a -at command option that has no argument.
Syntax error. -cn option must have an argument.	Displays when a user tries to attempt to enter the command with a -cn command option that has no argument.
Syntax error. -i option must have an argument.	Displays when a user tries to attempt to enter the command with a -i command option that has no argument.
Syntax error. -n option must have an argument.	Displays when a user tries to attempt to enter the command with a -n command option that has no argument.
Syntax error. -ppw option must have an argument.	Displays when a user tries to attempt to enter the command with a -ppw command option that has no argument.
Syntax error. Multiple -a options found.	Displays when a user tries to enter the -a command option in a single command multiple times.
Syntax error. Multiple -ap options found.	Displays when a user tries to enter the -ap option flag in a single command multiple times.
Syntax error. Multiple -at options found.	Displays when a user tries to enter the -at option flag in a single command multiple times.
Syntax error. Multiple -cn options found.	Displays when a user tries to enter the -cn option flag in a single command multiple times.
Syntax error. Type users -h for help.	Displays when a user tries to set an invalid value for a command option.
Syntax error. Multiple -i options found.	Displays when a user tries to enter the -i option flag in a single command multiple times.
Syntax error. Multiple -n options found.	Displays when a user tries to enter the -n option flag in a single command multiple times.

Table 51. users command errors (continued)

Error message	Definition
Syntax error. Multiple -p options found.	Displays when a user tries to enter the -p option flag in a single command multiple times.
Syntax error. Multiple -pp options found.	Displays when a user tries to enter the -pp option flag in a single command multiple times.
Syntax error. Multiple -ppw options found.	Displays when a user tries to enter the -ppw option flag in a single command multiple times.
The context name must be less than 32 characters long.	Displays when a user tries to set a context name that is longer than 31 characters.
The password must be at least 5 characters long, but no more than 15 characters long.	Displays when the user tries to enter a password that is too short or too long.
The password must contain at least one alphabetic and one non-alphabetic character.	Displays when the user tries to enter a password that does not have at least one alphabetic and one non-alphabetic character.
The privacy password must also be set when setting the privacy protocol.	Displays if the user tries to set the privacy protocol to des without a specifying a privacy password (-ppw command option).
The privacy password must be less than 32 characters long.	Displays when a user tries to set a privacy password that is longer than 31 characters.
The username cannot be longer than 15 characters.	Displays when a user tries to set a user name that is longer than 15 characters.
When creating a new user, all options are required.	Displays when a user tries to create a new user without defining all command options and arguments.



---

## Appendix A. Getting help and technical assistance

If you need help, service, or technical assistance or just want more information about IBM products, you will find a wide variety of sources available from IBM to assist you. This appendix contains information about where to go for additional information about IBM and IBM products, what to do if you experience a problem with your BladeCenter system, and whom to call for service, if it is necessary.

---

### Before you call

Before you call, make sure that you have taken these steps to try to solve the problem yourself:

- Check all cables to make sure that they are connected.
- Check the power switches to make sure that the system is turned on.
- Use the troubleshooting information in your system documentation, and use the diagnostic tools that come with your system. Information about diagnostic tools is in the *Hardware Maintenance Manual and Troubleshooting Guide* on the IBM *BladeCenter Documentation* CD or at the IBM Support Web site.
- Go to the IBM Support Web site at <http://www.ibm.com/pc/support/> to check for technical information, hints, tips, and new device drivers.

You can solve many problems without outside assistance by following the troubleshooting procedures that IBM provides in the online help or in the publications that are provided with your system and software. The information that comes with your system also describes the diagnostic tests that you can perform. Most xSeries and IntelliStation® systems, operating systems, and programs come with information that contains troubleshooting procedures and explanations of error messages and error codes. If you suspect a software problem, see the information for the operating system or program.

---

### Using the documentation

Information about your IBM BladeCenter, xSeries, or IntelliStation system and preinstalled software, if any, is available in the documentation that comes with your system. That documentation includes printed books, online books, readme files, and help files. See the troubleshooting information in your system documentation for instructions for using the diagnostic programs. The troubleshooting information or the diagnostic programs might tell you that you need additional or updated device drivers or other software. IBM maintains pages on the World Wide Web where you can get the latest technical information and download device drivers and updates. To access these pages, go to <http://www.ibm.com/pc/support/> and follow the instructions. Also, you can order publications through the IBM Publications Ordering System at <http://www.elink.ibm.com/public/applications/publications/cgibin/pbi.cgi>.

---

### Getting help and information from the World Wide Web

On the World Wide Web, the IBM Web site has up-to-date information about IBM BladeCenter, xSeries, and IntelliStation products, services, and support. The address for IBM BladeCenter and xSeries information is <http://www.ibm.com/eserver/xseries/>. The address for IBM IntelliStation information is <http://www.ibm.com/pc/intellistation/>.

You can find service information for your IBM products, including supported options, at <http://www.ibm.com/pc/support/>.

---

## Software service and support

Through IBM Support Line, you can get telephone assistance, for a fee, with usage, configuration, and software problems with BladeCenter and xSeries servers, IntelliStation workstations, and appliances. For information about which products are supported by Support Line in your country or region, go to <http://www.ibm.com/services/sl/products/>.

For more information about Support Line and other IBM services, go to <http://www.ibm.com/services/>, or go to <http://www.ibm.com/planetwide/> for support telephone numbers. In the U.S. and Canada, call 1-800-IBM-SERV (1-800-426-7378).

---

## Hardware service and support

You can receive hardware service through IBM Integrated Technology Services or through your IBM reseller, if your reseller is authorized by IBM to provide warranty service. Go to <http://www.ibm.com/planetwide/> for support telephone numbers, or in the U.S. and Canada, call 1-800-IBM-SERV (1-800-426-7378).

In the U.S. and Canada, hardware service and support is available 24 hours a day, 7 days a week. In the U.K., these services are available Monday through Friday, from 9 a.m. to 6 p.m.

---

## Appendix B. Notices

This information was developed for products and services offered in the U.S.A.

IBM may not offer the products, services, or features discussed in this document in other countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

*IBM Director of Licensing  
IBM Corporation  
North Castle Drive  
Armonk, NY 10504-1785  
U.S.A.*

INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to non-IBM Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this IBM product, and use of those Web sites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

---

### Edition notice

**© Copyright International Business Machines Corporation 2004. All rights reserved.**

U.S. Government Users Restricted Rights — Use, duplication, or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

---

## Trademarks

The following terms are trademarks of International Business Machines Corporation in the United States, other countries, or both:

Active Memory	Predictive Failure Analysis
Active PCI	PS/2
Active PCI-X	ServeRAID
Alert on LAN	ServerGuide
BladeCenter	ServerProven
C2T Interconnect	TechConnect
Chipkill	ThinkPad
EtherJet	Tivoli
e-business logo	Tivoli Enterprise
@server	Update Connector
FlashCopy	Wake on LAN
IBM	XA-32
IBM (logo)	XA-64
IntelliStation	X-Architecture
NetBAY	Xcel4
Netfinity	XpandOnDemand
NetView	xSeries
OS/2 WARP	

Lotus, Lotus Notes, SmartSuite, and Domino are trademarks of Lotus Development Corporation and/or IBM Corporation in the United States, other countries, or both.

Intel, MMX, and Pentium are trademarks of Intel Corporation in the United States, other countries, or both.

Microsoft, Windows, and Windows NT are trademarks of Microsoft Corporation in the United States, other countries, or both.

Linux is a trademark of Linus Torvalds in the United States, other countries, or both.

Red Hat, the Red Hat "Shadow Man" logo, and all Red Hat-based trademarks and logos are trademarks or registered trademarks of Red Hat, Inc., in the United States and other countries.

UNIX is a registered trademark of The Open Group in the United States and other countries.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States, other countries, or both.

Other company, product, or service names may be trademarks or service marks of others.



---

# Index

## Special characters

! 15  
? 14

## A

accumulate timeout  
  set for SOL 51  
acknowledge alarms  
  alarm ID 77  
  complete alarm key 77  
  generator ID 76  
  generator information 76  
alarm 74  
  acknowledge (alarm ID) 77  
  acknowledge (complete alarm key) 77  
  acknowledge (generator ID) 76  
  acknowledge (generator information) 76  
  clear (alarm ID) 78  
  clear (complete alarm key) 78  
  clear (generator ID) 77  
  clear (generator information) 78  
  display (alarm ID) 75  
  display (all) 74  
  display (complete alarm key) 76  
  display (generator ID) 75  
  display (generator information) 75  
  display (power) 74  
  options  
    c, a 78  
    c, g 77  
    c, k 78  
    c, o 78  
    p 74  
    q, a 75  
    q, g 75  
    q, k 76  
    q, o 75  
    r, a 77  
    r, g 76  
    r, k 77  
    r, o 76  
    s, l 79  
  set 79  
alarm command 74  
alarm command errors 87  
alarm commands  
  example 79  
alert notification method, set 30  
alert recipient, create 28, 29  
alert recipient, delete 27  
alert recipient, set email address 31  
alert recipient, set hostname for alerts 31  
alert recipient, set IP address for alerts 31  
alert recipient, set name 29  
alert recipient, set status 29  
alert recipients, manage 26

alert type, filter 30  
alert type, set 30  
alertentries 26  
  options  
    1 through 12 26  
    create (n, status, f, t, e, i) 28  
    del 27  
    e 31  
    f 30  
    i 31  
    n 29  
    status 29  
    t 30  
alertentries command 26  
alertentries command errors 88  
alertentries commands  
  example 31  
alerts, display 18  
algorithms, encryption 8  
attributes, display for firmware 23  
authority, command 5

## B

blade server  
  boot 67, 68  
  boot (to console) 68  
  command target 12  
  cycle power 68, 69  
  display power state 69  
  power off 69  
  power on 68, 69  
  power on (to console) 69  
  reset 67, 68, 71  
  reset (to console) 68, 71  
  turn off 69  
  turn on 68, 69  
  turn on (to console) 69  
blade servers  
  set starting IP address 41  
BladeCenter T specific commands 74, 85  
BladeCenter unit  
  command target 12  
blink location LED 20  
boot 67  
  blade server 67, 68  
  options  
    -p powercycle 68  
    -p reset 68  
    c 68  
boot (to console)  
  blade server 68  
boot command errors 88  
boot commands 67  
  example 68  
built-in commands 12, 16

## C

- change command environment 11, 12
- clear
  - options
    - config 32, 33
- clear alarms
  - alarm ID 78
  - complete alarm key 78
  - generator ID 77
  - generator information 78
- clear command 32
- clear command errors 88
- clear commands
  - example 33
- clear event log
  - management module 65
- clear management module event log commands 65
  - example 65
- clearlog
  - example 65
- clearlog command errors 89
- clearlog commands 65
  - example 65
- CLI key sequence
  - set for SOL 53
- command
  - health 17, 18
  - system physical configuration 16
- command authority 5
- command environment selecting 4
- command history 15
- command redirect 11, 12
- command target 11, 12
  - blade server 12
  - BladeCenter unit 12
  - I/O module 13
  - integrated system management processor 13
  - management module 12
  - switch module 13
  - temporary 4
  - view 16
- command target selection 4
- command-line interface
  - guidelines 3
    - case sensitivity 3
    - command history 4
    - data types 3
    - delimiters 4
    - help 4
    - options 3
    - output format 4
    - strings 4
  - starting 8
  - using 3, 11
- commands
  - alarm 74, 79
  - alertentries 26, 31
  - boot 67, 68
  - built-in 12, 16
  - clear 32, 33
  - clear management module event log 65
- commands (*continued*)
  - clearlog 65
  - common 17, 25
  - configuration 26, 64
  - console 73
  - dhcpinfo 34
  - display management module event log 66
  - displaylog 66
  - dns 35, 36
  - environment 12, 13
  - event log, clear for management module 65
  - event log, display for management module 66
  - examples
    - alarm 79
    - alertentries 31
    - boot 68
    - clear 33
    - clear management module event log 65
    - clearlog 65
    - console 73
    - DHCP settings for management module 34
    - dhcpinfo 34
    - display management module event log 66
    - displaylog 66
    - DNS 36
    - env 13
    - environment 13
    - environment redirect 13
    - Ethernet network settings for management module 41
    - exit 73
    - health 18
    - help 14
    - history 15
    - identify 21
    - ifconfig 41
    - info 22
    - list 16
    - management module DHCP settings 34
    - management module DNS 36
    - management module Ethernet network settings 41
    - management module event log clear 65
    - management module event log display 66
    - management module SMTP settings 42
    - management module SNMP settings 49
    - management module telnet configuration 56
    - power 70
    - reset 72
    - Serial Over LAN 54
    - smtp 42
    - SMTP settings for management module 42
    - snmp 49
    - SNMP settings for management module 49
    - sol 54
    - syntax help 14
    - tcpcmdmode 55
    - telnetcfg 56
    - thres 83
    - update 24
    - users 64

- commands *(continued)*
  - exit 73
  - help 14
  - history 15
  - identify 20, 21
  - ifconfig 37, 41
  - info 22
  - list 16
  - management module event log 65, 67
  - power 68, 70
  - power control 67, 72
  - reset 71, 72
  - reset command 67, 72
  - Serial Over LAN 50, 54
  - session command 73, 74
  - smtp 42
  - snmp 43, 49
  - SOL 50, 54
  - system management command 74, 85
  - tpcmdmode 54, 55
  - telnet configuration 56
  - telnetcfg 56
  - thres 80, 83
  - update 23, 24
  - users 57, 64
- common commands 17, 25
- common errors 86
- communicating with IBM Director 54
- communication
  - out-of-band 54
- component information 22
- component information display 22
- configuration
  - view for management module 16
  - view tree for system 16
- configuration commands 26, 64
- configuration method
  - set for channel 0 of management module 38
- console 73
  - create override SOL session 73
  - create SOL session 73
  - options
    - o 73
- console command 73
- console command errors 89
- console commands
  - example 73
- create alert recipient 28, 29
- create override SOL session 73
- create SOL session 73
- create user 58, 59
- cycle power
  - blade server 68, 69
  - I/O module 69
  - switch module 69

**D**

- data rate
  - set for channel 0 of management module 38
- delete alert recipient 27
- delete user 57
- DHCP settings for management module commands
  - example 34
- dhcpinfo
  - options
    - eth0 34
- dhcpinfo command errors 89
- dhcpinfo commands 34
  - example 34
- disable
  - TCP command mode 55
- disable DNS
  - management module 35
- disable SNMP agent
  - management module (SNMPv1) 43
  - management module (SNMPv3) 44
- disable SNMP traps
  - management module 44
- disable SOL
  - global 52
- display
  - TCP command-mode session status 54
  - TCP command-mode session timeout 54
- display (reset counter) event log
  - management module 66
- display alarms
  - alarm ID 75
  - all 74
  - complete alarm key 76
  - generator ID 75
  - generator information 75
  - power 74
- display alert properties (all recipients) 26
- display alert properties (single recipient) 26
- display alerts 18
- display all users 57
- display component information 22
- display DNS configuration
  - management module 35
- display Ethernet channel 0 configuration
  - management module 37
- display Ethernet channel 0 DHCP configuration
  - management module 34
- display Ethernet channel 1 configuration
  - management module 39
- display event log
  - management module 66
- display firmware attributes 23
- display health status 17, 18
- display health status (tree) 17
- display management module event log commands 66
  - example 66
- display POST status
  - I/O module 70
  - switch module 70
- display power state
  - blade server 69
  - I/O module 69
  - switch module 69
- display single user 57

- display SMTP server host name
  - management module 42
- display SMTP server IP address
  - management module 42
- display SNMP configuration
  - management module 43
- display state
  - location LED 20
- display telnet configuration
  - management module 56
- display telnet timeout
  - management module 56
- display threshold (specific) 80
- displaylog 66
  - options
    - f 66
- displaylog command errors 89
- displaylog commands 66
  - example 66
- dns 35
  - options
    - i1 35
    - i2 35
    - i3 36
    - off 35
    - on 35
- DNS
  - disable for management module 35
  - enable for management module 35
- dns command errors 90
- dns commands 35
  - example 36
- DNS configuration
  - display for management module 35
- DNS first IP address
  - set for management module 35
- DNS second IP address
  - set for management module 35
- DNS third IP address
  - set for management module 36
- duplex mode
  - set for channel 0 of management module 39

## E

- enable
  - TCP command mode 55
- enable DNS
  - management module 35
- enable SNMP agent
  - management module (SNMPv1) 43
  - management module (SNMPv3) 44
- enable SNMP traps
  - management module 44
- enable SOL
  - global 51, 52
- encryption algorithms 8
- end session 73
- ending an SOL session 10, 73
- env 12

- env (*continued*)
  - options
    - blade 12, 13
    - switch 13
    - system (management module) 12
- env command errors 86
- env commands
  - example 13
- environment
  - blade server 12
  - BladeCenter unit 12
  - I/O module 13
  - integrated system management processor 13
  - management module 12
  - switch module 13
- environment commands 12
  - example 13
- errors
  - alarm command 87
  - alertentries command 88
  - boot command 88
  - clear command 88
  - clearlog command 89
  - common 86
  - console command 89
  - dhcpcfg command 89
  - displaylog command 89
  - dns command 90
  - env command 86
  - exit command 86
  - health command 90
  - help command 86
  - history command 86
  - identify command 90
  - ifconfig command 91
  - info command 93
  - list command 93
  - power command 93
  - reset command 94
  - smtp command 94
  - snmp command 94
  - sol command 95
  - tcpcmdmode command 96
  - telnetcfg command 96
  - thres command 97
  - update command 97
  - users command 99
- Ethernet channel 0 configuration
  - display for management module 37
- Ethernet channel 0 configuration method
  - set for management module 38
- Ethernet channel 0 data rate
  - set for management module 38
- Ethernet channel 0 DHCP configuration
  - display for management module 34
- Ethernet channel 0 duplex mode
  - set for management module 39
- Ethernet channel 0 gateway IP address
  - set for management module 37
- Ethernet channel 0 hostname
  - set for management module 38

- Ethernet channel 0 MAC address
  - set for management module 39
- Ethernet channel 0 MTU
  - set for management module 39
- Ethernet channel 0 static IP address
  - set for management module 37
- Ethernet channel 0 subnet mask
  - set for management module 38
- Ethernet channel 1
  - disable for management module 41
  - enable for management module 41
- Ethernet channel 1 configuration
  - display for management module 39
- Ethernet channel 1 gateway IP address
  - set for management module 40
- Ethernet channel 1 MAC address
  - set for management module 40
- Ethernet channel 1 static IP address
  - set for management module 40
- Ethernet channel 1 subnet mask
  - set for management module 40
- Ethernet network settings for management module
  - commands
    - example 41
- event log
  - clear for management module 65
  - display (reset counter) for management module 66
  - display for management module 66
- event log, clear for management module
  - commands 65
- event log, display for management module
  - commands 66
- exit 73
- exit command 73
- exit command errors 86
- exit commands
  - example 73

## F

- filter alert type 30
- firmware
  - display attributes 23
  - update 23
  - update (verbose) 24
- firmware requirements 2
- firmware update 23
- flash location LED 20

## G

- gateway IP address
  - set for channel 0 of management module 37
  - set for channel 1 of management module 40
- global disable
  - SOL 52
- global enable
  - SOL 51, 52
- guidelines
  - case sensitivity 3
  - command history 4

guidelines (*continued*)

- data types 3
- delimiters 4
- help 4
- options 3
- output format 4
- overview of 3
- strings 4

## H

- hardware requirements 2
- health 17
  - display status 17
  - display status (tree) 17
  - display status and alerts 18
  - options
    - f 18
    - l 17
- health command 17, 18
  - example 18
- health command errors 90
- help 11, 14
- help command 14
- help command errors 86
- help commands
  - example 14
- help for update command 23
- history 15
- history command 15
- history command errors 86
- history commands
  - example 15
- host name
  - set for channel 0 of management module 38

## I

- I/O module
  - command target 13
  - cycle power 69
  - display POST status 70
  - display power state 69
  - power off 69
  - power on 68, 69
  - reset 71
  - reset (extended diagnostics) 72
  - reset (full diagnostics) 72
  - reset (standard diagnostics) 72
  - reset configuration 33
  - turn off 69
  - turn on 69
- IBM Director
  - communication 54
- identify 20
  - options
    - blink 20
    - off 20
    - on 20, 21
    - s 20
- identify command 20

- identify command errors 90
- identify commands
  - example 21
- ifconfig
  - options
    - eth0 37
    - eth0, c 38
    - eth0, d 39
    - eth0, g 37
    - eth0, i 37
    - eth0, l 39
    - eth0, m 39
    - eth0, n 38
    - eth0, r 38
    - eth0, s 38
    - eth1 39
    - eth1, down 41
    - eth1, g 40
    - eth1, i 40
    - eth1, l 40
    - eth1, s 40
    - eth1, up 41
    - i 41
- ifconfig command errors 91
- ifconfig commands 37
  - example 41
- info 22
- info command 22
- info command errors 93
- info commands
  - example 22
- information about components 22
- information display, component 22
- integrated system management processor
  - command target 13
- IP address
  - set starting for blade servers 41
- ISMP
  - reset 71

## L

- LED (location), control 20
- light location LED 20
- light location LED (BladeCenter unit)
  - time period 21
- list 16
  - options
    - l 16
- list command
  - example 16
- list command errors 93
- location LED
  - blink 20
  - display state 20
  - flash 20
  - light 20
  - light (BladeCenter unit)
    - time period 21
  - turn off 20
- location LED control 20

## M

- MAC address
  - set for channel 0 of management module 39
  - set for channel 1 of management module 40
- manage alert recipients 26
- management module
  - clear event log 65
  - clear event log commands
    - example 65
  - command target 12
  - create alert recipient 28, 29
  - create user 58, 59
  - delete alert recipient 27
  - delete user 57
  - DHCP settings commands
    - example 34
  - dhcpinfo commands 34
  - disable DNS 35
  - disable Ethernet channel 1 41
  - disable SNMP agent (SNMPv1) 43
  - disable SNMP agent (SNMPv3) 44
  - disable SNMP traps 44
  - display (reset counter) event log 66
  - display alert properties (all recipients) 26
  - display alert properties (single recipient) 26
  - display all users 57
  - display DNS configuration 35
  - display Ethernet channel 0 configuration 37
  - display Ethernet channel 0 DHCP configuration 34
  - display Ethernet channel 1 configuration 39
  - display event log 66
  - display event log commands
    - example 66
  - display single user 57
  - display SMTP server host name 42
  - display SMTP server IP address 42
  - display SNMP configuration 43
  - dns commands 35, 36
    - example 36
  - enable DNS 35
  - enable Ethernet channel 1 41
  - enable SNMP agent (SNMPv1) 43
  - enable SNMP agent (SNMPv3) 44
  - enable SNMP traps 44
  - Ethernet network settings commands
    - example 41
  - filter alert type 30
  - IBM Director communication 54
  - ifconfig commands 37, 41
  - reset 71
  - reset (failover) 71
  - reset configuration 32
  - set alert notification method 30
  - set alert recipient email address 31
  - set alert recipient name 29
  - set alert recipient status 29
  - set alert type 30
  - set DNS first IP address 35
  - set DNS second IP address 35
  - set DNS third IP address 36
  - set Ethernet channel 0 configuration method 38

management module (*continued*)

- set Ethernet channel 0 data rate 38
- set Ethernet channel 0 duplex mode 39
- set Ethernet channel 0 gateway IP address 37
- set Ethernet channel 0 hostname 38
- set Ethernet channel 0 MAC address 39
- set Ethernet channel 0 MTU 39
- set Ethernet channel 0 static IP address 37
- set Ethernet channel 0 subnet mask 38
- set Ethernet channel 1 gateway IP address 40
- set Ethernet channel 1 MAC address 40
- set Ethernet channel 1 static IP address 40
- set Ethernet channel 1 subnet mask 40
- set hostname for alerts 31
- set IP address for alerts 31
- set privacy password (SNMPv3) 63
- set server host name 42
- set server IP address 42
- set SNMP community 1 first host name 45
- set SNMP community 1 IP address (first host) 45
- set SNMP community 1 IP address (second host) 45
- set SNMP community 1 IP address (third host) 45
- set SNMP community 1 name 44
- set SNMP community 1 second host name 45
- set SNMP community 1 third host name 45
- set SNMP community 1 view type (SNMPv3) 45
- set SNMP community 2 first host name 46
- set SNMP community 2 IP address (first host) 46
- set SNMP community 2 IP address (second host) 46
- set SNMP community 2 IP address (third host) 47
- set SNMP community 2 name 46
- set SNMP community 2 second host name 46
- set SNMP community 2 third host name 47
- set SNMP community 2 view type (SNMPv3) 47
- set SNMP community 3 first host name 47
- set SNMP community 3 IP address (first host) 47
- set SNMP community 3 IP address (second host) 48
- set SNMP community 3 IP address (third host) 48
- set SNMP community 3 name 47
- set SNMP community 3 second host name 48
- set SNMP community 3 third host name 48
- set SNMP community 3 view type (SNMPv3) 48
- set SNMP contact name 48
- set SNMP location 49
- set user access type (SNMPv3) 63
- set user authentication protocol (SNMPv3) 62
- set user authority level 61
- set user context name (SNMPv3) 62
- set user hostname (SNMPv3 traps) 63
- set user IP address (SNMPv3 traps) 63
- set user name 59
- set user password 60
- set user privacy protocol (SNMPv3) 62
- smtp commands 42
- SMTP settings commands
  - example 42
- snmp commands 43, 49

management module (*continued*)

- SNMP settings commands
  - example 49
- telnet configuration 56
- telnet timeout 56
- view configuration 16
- management module event log commands 65, 67
- management module telnet configuration commands
  - example 56
- management module, user accounts 57
- management-module firmware 2
- MTU
  - set for channel 0 of management module 39

## N

notification method, set for alerts 30

## O

online documentation 1

out-of-band communication, IBM Director 54

override persistent command environment 4

## P

persistent command environment
 

- override 4

persistent command target 4

POST status
 

- display for I/O module 70
- display for switch module 70

power
 

- options
  - cycle 69
  - cycle, c 69
  - off 69
  - on 68
  - on, c 69
  - state 69
  - state, post 70

power command errors 93

power commands 68
 

- example 70

power control commands 67, 72

power off
 

- blade server 69
- I/O module 69
- switch module 69

power on
 

- blade server 68, 69
- I/O module 68, 69
- switch module 68, 69

power on (to console)
 

- blade server 69

power state
 

- display for blade server 69
- display for I/O module 69
- display for switch module 69

primary management module 5



## R

- redirect command 11, 12
- redundant management modules 5
- required, firmware 2
- required, hardware 2
- reset 71
  - blade server 67, 68, 71
  - I/O module 71
  - ISMP 71
  - management module 71
  - options
    - c 71
    - exd 72
    - f 71
    - full 72
    - std 72
  - switch module 71
- reset (extended diagnostics)
  - I/O module 72
  - switch module 72
- reset (failover)
  - management module 71
- reset (full diagnostics)
  - I/O module 72
  - switch module 72
- reset (standard diagnostics)
  - I/O module 72
  - switch module 72
- reset (to console)
  - blade server 68, 71
- reset blade server key sequence
  - set for SOL 53
- reset command 67, 72
- reset command errors 94
- reset commands 71
  - example 72
- reset configuration
  - I/O module 33
  - management module 32
  - switch module 33
- reset default configuration 32
- retry count
  - set for SOL 51
- retry interval
  - set for SOL 50

## S

- secure command-line interface 8
- Secure Shell connection clients 8
- security 8
- selecting command environment 4
- selecting command target 4
- send threshold
  - set for SOL 51
- Serial Over LAN 9
- Serial Over LAN commands 50
  - example 54
- server host name
  - set for management module 42

- server IP address
  - set for management module 42
- session command 73, 74
- set
  - TCP command-mode session timeout 55
- set accumulate timeout
  - SOL 51
- set alarm 79
- set alert notification method 30
- set alert recipient email address 31
- set alert recipient name 29
- set alert recipient status 29
- set alert type 30
- set CLI key sequence
  - SOL 53
- set DNS first IP address
  - management module 35
- set DNS second IP address
  - management module 35
- set DNS third IP address
  - management module 36
- set Ethernet channel 0 configuration method
  - management module 38
- set Ethernet channel 0 data rate
  - management module 38
- set Ethernet channel 0 duplex mode
  - management module 39
- set Ethernet channel 0 gateway IP address
  - management module 37
- set Ethernet channel 0 hostname
  - management module 38
- set Ethernet channel 0 MAC address
  - management module 39
- set Ethernet channel 0 MTU
  - management module 39
- set Ethernet channel 0 static IP address
  - management module 37
- set Ethernet channel 0 subnet mask
  - management module 38
- set Ethernet channel 1 gateway IP address
  - management module 40
- set Ethernet channel 1 MAC address
  - management module 40
- set Ethernet channel 1 static IP address
  - management module 40
- set Ethernet channel 1 subnet mask
  - management module 40
- set hostname for alerts 31
- set IP address for alerts 31
- set privacy password (SNMPv3) 63
- set reset blade server key sequence
  - SOL 53
- set retry count
  - SOL 51
- set retry interval
  - SOL 50
- set send threshold
  - SOL 51
- set server host name
  - management module 42



- set server IP address
  - management module 42
- set SNMP community 1 first host name
  - management module 45
- set SNMP community 1 IP address (first host)
  - management module 45
- set SNMP community 1 IP address (second host)
  - management module 45
- set SNMP community 1 IP address (third host)
  - management module 45
- set SNMP community 1 name
  - management module 44
- set SNMP community 1 second host name
  - management module 45
- set SNMP community 1 third host name
  - management module 45
- set SNMP community 1 view type (SNMPv3)
  - management module 45
- set SNMP community 2 first host name
  - management module 46
- set SNMP community 2 IP address (first host)
  - management module 46
- set SNMP community 2 IP address (second host)
  - management module 46
- set SNMP community 2 IP address (third host)
  - management module 47
- set SNMP community 2 name
  - management module 46
- set SNMP community 2 second host name
  - management module 46
- set SNMP community 2 third host name
  - management module 47
- set SNMP community 2 view type (SNMPv3)
  - management module 47
- set SNMP community 3 first host name
  - management module 47
- set SNMP community 3 IP address (first host)
  - management module 47
- set SNMP community 3 IP address (second host)
  - management module 48
- set SNMP community 3 IP address (third host)
  - management module 48
- set SNMP community 3 name
  - management module 47
- set SNMP community 3 second host name
  - management module 48
- set SNMP community 3 third host name
  - management module 48
- set SNMP community 3 view type (SNMPv3)
  - management module 48
- set SNMP contact name
  - management module 48
- set SNMP location
  - management module 49
- set starting IP address
  - blade servers 41
- set telnet timeout
  - management module 56
- set threshold 81, 82, 83
- set user access type (SNMPv3) 63
- set user authentication protocol (SNMPv3) 62
- set user authority level 61
- set user context name (SNMPv3) 62
- set user hostname (SNMPv3 traps) 63
- set user IP address (SNMPv3 traps) 63
- set user name 59
- set user password 60
- set user privacy protocol (SNMPv3) 62
- set VLAN ID
  - SOL 52
- smtp 42
  - options
    - s 42
- smtp command errors 94
- smtp commands 42
  - example 42
- SMTP server host name
  - display for management module 42
- SMTP server IP address
  - display for management module 42
- SMTP settings for management module commands
  - example 42
- snmp 43
  - options
    - a, off 43
    - a, on 43
    - a3, off 44
    - a3, on 44
    - c1 44
    - c1i1 45
    - c1i2 45
    - c1i3 45
    - c2 46
    - c2i1 46
    - c2i2 46
    - c2i3 47
    - c3 47
    - c3i1 47
    - c3i2 48
    - c3i3 48
    - ca1 45
    - ca2 47
    - ca3 48
    - cn 48
    - l 49
    - t, off 44
    - t, on 44
- SNMP agent
  - disable for management module (SNMPv1)
    - SNMPv1 43
  - disable for management module (SNMPv3)
    - SNMPv3 44
  - enable for management module (SNMPv1)
    - SNMPv1 43
  - enable for management module (SNMPv3)
    - SNMPv3 44
- snmp command errors 94
- snmp commands 43
  - example 49
- SNMP community 1 first host name
  - set for management module 45

- SNMP community 1 IP address (first host)
  - set for management module 45
- SNMP community 1 IP address (second host)
  - set for management module 45
- SNMP community 1 IP address (third host)
  - set for management module 45
- SNMP community 1 name
  - set for management module 44
- SNMP community 1 second host name
  - set for management module 45
- SNMP community 1 third host name
  - set for management module 45
- SNMP community 1 view type
  - set for management module (SNMPv3) 45
- SNMP community 2 first host name
  - set for management module 46
- SNMP community 2 IP address (first host)
  - set for management module 46
- SNMP community 2 IP address (second host)
  - set for management module 46
- SNMP community 2 IP address (third host)
  - set for management module 47
- SNMP community 2 name
  - set for management module 46
- SNMP community 2 second host name
  - set for management module 46
- SNMP community 2 third host name
  - set for management module 47
- SNMP community 2 view type
  - set for management module (SNMPv3) 47
- SNMP community 3 first host name
  - set for management module 47
- SNMP community 3 IP address (first host)
  - set for management module 47
- SNMP community 3 IP address (second host)
  - set for management module 48
- SNMP community 3 IP address (third host)
  - set for management module 48
- SNMP community 3 name
  - set for management module 47
- SNMP community 3 second host name
  - set for management module 48
- SNMP community 3 third host name
  - set for management module 48
- SNMP community 3 view type
  - set for management module (SNMPv3) 48
- SNMP configuration
  - display for management module 43
- SNMP contact name
  - set for management module 48
- SNMP location
  - set for management module 49
- SNMP settings for management module commands
  - example 49
- SNMP traps
  - disable for management module 44
  - enable for management module 44
- SNMPv3
  - community 1 view type 45
  - community 2 view type 47
  - community 3 view type 48
- SNMPv3 (*continued*)
  - privacy password 63
  - trap receiver IP address or hostname 63
  - user access type 63
  - user authentication protocol 62
  - user context name 62
  - user privacy protocol 62
- sol 50
  - options
    - c 51
    - e 53
    - i 50
    - r 53
    - s 51
    - status 51, 52
    - t 51
    - v 52
- SOL 9, 10, 73
  - global disable 52
  - global enable 51, 52
  - set accumulate timeout 51
  - set CLI key sequence 53
  - set reset blade server key sequence 53
  - set retry count 51
  - set retry interval 50
  - set send threshold 51
  - set VLAN ID 52
  - status 50
- sol command errors 95
- sol commands
  - example 54
- SOL commands 50
- SOL session
  - ending 10, 73
  - starting 9
- SSH clients 8
- SSH connection 9
- starting a session using SSH 9
- starting a session using Telnet 8
- starting an SOL session 9
- starting command-line interface 8
- static IP address
  - set for channel 0 of management module 37
  - set for channel 1 of management module 40
- status
  - SOL 50
- subnet mask
  - set for channel 0 of management module 38
  - set for channel 1 of management module 40
- switch module
  - command target 13
  - cycle power 69
  - display POST status 70
  - display power state 69
  - power off 69
  - power on 68, 69
  - reset 71
  - reset (extended diagnostics) 72
  - reset (full diagnostics) 72
  - reset (standard diagnostics) 72
  - reset configuration 33

- switch module *(continued)*
  - turn off 69
  - turn on 68, 69
- syntax help 14
- syntax help commands
  - example 14
- system
  - view configuration tree 16
- system management command 74, 85
- system physical configuration command 16

## T

- target 11, 12
- TCP command mode
  - disable 55
  - enable 55
- TCP command-mode session status
  - display 54
- TCP command-mode session timeout
  - display 54
  - set 55
- tcpcmdmode 54
  - options
    - off 55
    - on 55
    - t 55
- tcpcmdmode command errors 96
- tcpcmdmode commands 54
  - example 55
- telnet configuration
  - display for management module 56
- telnet configuration commands 56
- Telnet connection 8
- telnet timeout
  - display for management module 56
  - set for management module 56
- telnetcfg 56
  - options
    - t 56
- telnetcfg command errors 96
- telnetcfg commands 56
  - example 56
- temporary command target 4
- terminate session 73
- thres
  - options
    - q 80
    - s 81, 82, 83
- thres command 80
- thres command errors 97
- thres commands
  - example 83
- threshold
  - display (specific) 80
  - set 81, 82, 83
- threshold command 80
- trademarks 106
- turn off
  - blade server 69
  - I/O module 69

- turn off *(continued)*
  - switch module 69
- turn off location LED 20
- turn on
  - blade server 68, 69
  - I/O module 68, 69
  - switch module 68, 69
- turn on (to console)
  - blade server 69

## U

- update 23
  - options
    - a 23
    - i, n 23, 24
- update command 23
- update command errors 97
- update command help 23
- update commands
  - example 24
- update firmware 23
- update firmware (verbose) 24
- users 57
  - options
    - 1 through 12 57
    - a 61
    - ap 62
    - at 63
    - clear 57
    - cn 62
    - create (n, p, a, cn, ap, pp, ppw, at, i) 58
    - i 63
    - n 59
    - p 60
    - pp 62
    - ppw 63
- users command 57
- users command errors 99
- users commands
  - example 64
- users, create 58, 59
- users, delete 57
- users, display (all) 57
- users, display (single) 57
- users, management module 57
- users, set access type (SNMPv3) 63
- users, set authentication protocol (SNMPv3) 62
- users, set authority level 61
- users, set context name (SNMPv3) 62
- users, set hostname (SNMPv3 traps) 63
- users, set IP address (SNMPv3 traps) 63
- users, set name 59
- users, set password 60
- users, set privacy password (SNMPv3) 63
- users, set privacy protocol (SNMPv3) 62
- using the command-line interface 3

## V

- view command target 16

VLAN ID  
set for SOL 52





Part Number: 25K9161

Printed in USA

(1P) P/N: 25K9161

