
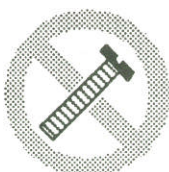


KENWOOD TS-850S

EXPANDED RF M/C

1. Disconnect the power and antenna.
2. Remove the 16 screws top and bottom covers from the radio. Be careful not to break the speaker wires.
3. Remove the top and bottom screws from each side of the front panel assembly.
4. Pull the front panel forward to expose the Digital board.
5. Locate and cut the lead from diode D11.
6. Reassemble the radio.
7. Reset the microprocessor by holding the [A=B] Key while turning the power on.

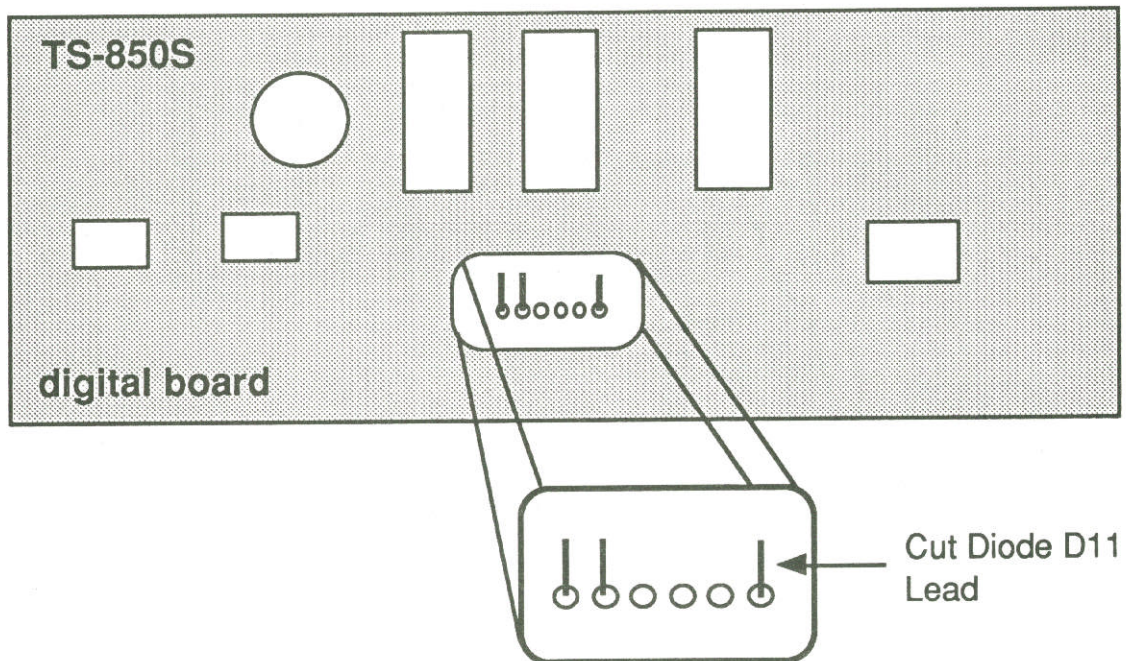

Caution

These modifications have not been tested. The Author, Publisher and all other parties takes NO responsibility or liability for any damage or violation resulting from these modifications. Performing any modification may be a Violation of FCC Rules and will void the warranty of the radio. Use of any modified radio may be a violation of FCC rules. If you have any doubts, DO NOT PERFORM THIS MODIFICATION.

© 1991 artsci inc. all rights reserved. (818) 843-4080 Fax: (818) 846-2298