

## Errata

**Title & Document Type:** 1205B Dual Trace Oscilloscope Operating and Service Manual

**Manual Part Number:** 01205-90903

**Revision Date:** July 1982

### About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

### HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, life sciences, and chemical analysis businesses are now part of Agilent Technologies. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A. We have made no changes to this manual copy.

### Support for Your Product

Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:

[www.agilent.com](http://www.agilent.com)

Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.




**Agilent Technologies**

HP 1205B

OPERATING AND SERVICE MANUAL

# DUAL TRACE OSCILLOSCOPE

1205B

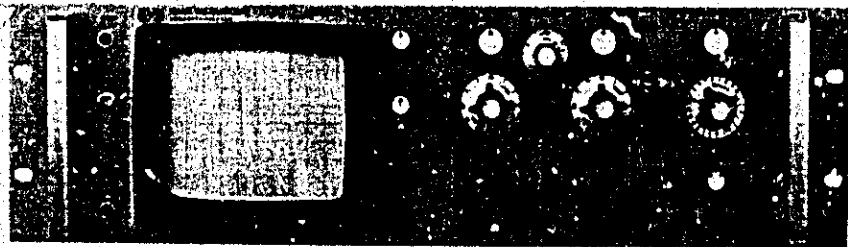

 **HEWLETT  
PACKARD**

HP 1205B

## **SAFETY**

*This product has been designed and tested according to International Safety Requirements. To ensure safe operation and to keep the product safe, the information, cautions, and warnings in this manual must be heeded. Refer to Section I and the Safety Summary for general safety considerations applicable to this product.*

## **CERTIFICATION**

*Hewlett-Packard Company certifies that this product met its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.*

## **WARRANTY**

This Hewlett-Packard product is warranted against defects in material and workmanship for a period of one year from date of shipment. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

The cathode-ray tube (CRT) in the instrument and any replacement CRT purchased from HP are also warranted against electrical failure for a period of one year from the date of shipment from Colorado Springs. **BROKEN TUBES AND TUBES WITH PHOSPHOR OR MESH BURNS, HOWEVER, ARE NOT INCLUDED UNDER THIS WARRANTY.**

For warranty service or repair, this product must be returned to a service facility designated by HP. However, warranty service for products installed by HP and certain other products designated by HP will be performed at Buyer's facility at no charge within the HP service travel area. Outside HP service travel areas, warranty service will be performed at Buyer's facility only upon HP's prior agreement and Buyer shall pay HP's round trip travel expenses.

For products returned to HP for warranty service, Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

### **LIMITATION OF WARRANTY**

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or interfacing, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

**NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. HP SPECIFICALLY DISCLAIMS THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.**

### **EXCLUSIVE REMEDIES**

**THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.**

## **ASSISTANCE**

*Product maintenance agreements and other customer assistance agreements are available for Hewlett-Packard products.*

*For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.*



## OPERATING AND SERVICE MANUAL

# MODEL 1205B DUAL TRACE OSCILLOSCOPE

### SERIAL NUMBERS

This manual applies directly to instruments with serial numbers prefixed 2248S.

With changes described in Section VII, this manual also applies to instruments with serial numbers prefixed 1944S.

HEWLETT-PACKARD COMPANY/COLORADO SPRINGS DIVISION  
1800 GARDEN OF THE GODS ROAD, COLORADO SPRINGS, COLORADO, U.S.A.

Manual Part Number 01205-90903  
Microfiche Part Number 01205-90803

PRINTED: JUL 1982

## **SAFETY SUMMARY**

*The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards of design, manufacture, and intended use of the instrument. Hewlett-Packard Company assumes no liability for the customer's failure to comply with these requirements.*

### **GROUND THE INSTRUMENT.**

To minimize shock hazard, the instrument chassis and cabinet must be connected to an electrical ground. The instrument is equipped with a three-conductor ac power cable. The power cable must either be plugged into an approved three-contact electrical outlet or used with a three-contact to two-contact adapter with the grounding wire (green) firmly connected to an electrical ground (safety ground) at the power outlet. The power jack and mating plug of the power cable meet International Electrotechnical Commission (IEC) safety standards.

### **DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE.**

Do not operate the instrument in the presence of flammable gases or fumes. Operation of any electrical instrument in such an environment constitutes a definite safety hazard.

### **KEEP AWAY FROM LIVE CIRCUITS.**

Operating personnel must not remove instrument covers. Component replacement and internal adjustments must be made by qualified maintenance personnel. Do not replace components with power cable connected. Under certain conditions, dangerous voltages may exist even with the power cable removed. To avoid injuries, always disconnect power and discharge circuits before touching them.

### **DO NOT SERVICE OR ADJUST ALONE.**

Do not attempt internal service or adjustment unless another person, capable of rendering first aid and resuscitation, is present.

### **USE CAUTION WHEN EXPOSING OR HANDLING THE CRT.**

Breakage of the Cathode-ray Tube (CRT) causes a high-velocity scattering of glass fragments (implosion). To prevent CRT implosion, avoid rough handling or jarring of the instrument. Handling of the CRT shall be done only by qualified maintenance personnel using approved safety mask and gloves.

### **DO NOT SUBSTITUTE PARTS OR MODIFY INSTRUMENT.**

Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modification to the instrument. Return the instrument to a Hewlett-Packard Sales and Service Office for service and repair to ensure that safety features are maintained.

### **DANGEROUS PROCEDURE WARNINGS.**

Warnings, such as the example below, precede potentially dangerous procedures throughout this manual. Instructions contained in the warnings must be followed.

**WARNING**

**Dangerous voltages, capable of causing death, are present in this instrument.  
Use extreme caution when handling, testing, and adjusting.**

## TABLE OF CONTENTS

Section	Page	Section	Page
<b>I GENERAL INFORMATION</b> .....	1-1	5-26	Trigger Point and Slope.....5-4
1-1 Introduction.....	1-1	5-27	Sweep Time.....5-5
1-3 Instrument Description.....	1-1	5-28	Sweep Vernier.....5-5
1-5 General.....	1-1	5-29	Magnified Sweep.....5-5
1-8 Vertical Circuits.....	1-1	5-30	Single Sweep.....5-5
1-12 Horizontal Circuits.....	1-1	5-31	Horizontal Amplifier Gain.....5-5
1-18 Cathode-Ray Tube.....	1-1	5-32	Horizontal Vernier.....5-6
1-21 Options.....	1-2	5-33	Horizontal Bandwidth.....5-6
1-23 Instruments Covered by Manual.....	1-2	5-34	Adjustment Procedure.....5-7
<b>II INSTALLATION</b> .....	2-1	5-38	Preliminary Setup.....5-7
2-1 Introduction.....	2-1	5-40	Low Voltage Power Supply.....5-7
2-3 Initial Inspection.....	2-1	5-41	High Voltage Power Supply.....5-7
2-5 Power Cords and Receptacles.....	2-1	5-42	Astigmatism.....5-8
2-7 Power Requirements.....	2-1	5-43	Intensity Limit.....5-8
2-10 Repacking for Shipment.....	2-1	5-44	Horizontal Gain.....5-9
<b>III OPERATION</b> .....	3-1	5-45	Horizontal Vernier Balance.....5-9
3-1 Introduction.....	3-1	5-46	Horizontal Attenuator Compensation.....5-9
3-3 Controls and Connectors.....	3-1	5-47	Auto Triggering.....5-9
3-21 Operating Instructions.....	3-2	5-48	Horizontal Position Centering.....5-9
3-23 Applying Input Signals.....	3-2	5-49	Magnifier Centering.....5-10
3-25 Trigger Signal Requirements.....	3-2	5-50	Sweep Time Calibration.....5-10
3-28 Operating Procedures.....	3-3	5-51	Vertical Vernier and Vertical Amplifier Balance.....5-10
<b>IV PRINCIPLES OF OPERATION</b> .....	4-1	5-52	Preamplifier Output Voltage.....5-11
4-1 Introduction.....	4-1	5-53	Output Amplifier Gain.....5-11
4-3 General Theory.....	4-1	5-54	Input Capacitance and Attenuator Compensation.....5-12
4-7 Vertical Preamplifier Modules.....	4-1	<b>VI REPLACEABLE PARTS</b> .....	6-1
4-13 Horizontal Module.....	4-1	6-1	Introduction.....6-1
4-27 Output Module.....	4-2	6-3	Ordering Information.....6-1
4-36 Power Supply Modules.....	4-3	<b>VII MANUAL CHANGES</b> .....	7-1
4-39 Detailed Circuit Theory.....	4-3	7-1	Introduction.....7-1
4-41 Vertical Preamplifier Modules.....	4-3	7-3	Manual Changes.....7-1
4-53 Horizontal Module.....	4-5	7-5	Option 006.....7-2
4-94 Output Module.....	4-9	<b>VIII SCHEMATICS AND TROUBLESHOOTING</b> .....	8-1
4-113 Power Supply Modules.....	4-12	8-1	Introduction.....8-1
<b>V PERFORMANCE CHECK AND ADJUSTMENTS</b> .....	5-1	8-3	Schematics.....8-1
5-1 Introduction.....	5-1	8-10	Component Location.....8-1
5-3 Test Equipment.....	5-1	8-13	Troubleshooting.....8-1
5-5 Performance Check.....	5-1	8-15	Front-Panel Controls.....8-1
5-9 Preliminary Control Settings.....	5-1	8-17	Performance Check.....8-1
5-10 Preliminary Check.....	5-1	8-19	Troubleshooting Table.....8-1
5-12 Intensity.....	5-1	8-26	Visual Checks.....8-2
5-13 Focus.....	5-1	8-28	Waveforms and Voltages.....8-2
5-14 Trace Align.....	5-1	8-33	Final Checks.....8-2
5-15 Amplifier Balance.....	5-1	8-35	Repair and Replacement.....8-2
5-16 Vertical Positioning.....	5-2	8-37	Servicing Etched Circuit Boards.....8-2
5-17 Beam Finder.....	5-2	8-39	Semiconductor Replacement.....8-2
5-18 Calibrator.....	5-2	8-42	CRT Removal and Replacement.....8-3
5-19 Vertical Amplifier Gain.....	5-2	8-45	Vertical Preamplifier Module Removal and Replacement.....8-4
5-20 Vertical Vernier.....	5-3	8-48	Horizontal Module Removal and Replacement.....8-4
5-21 Vertical Bandwidth.....	5-3	8-51	Dual Channel Output Board Removal and Replacement.....8-4
5-22 Common Mode Rejection Ratio.....	5-3		
5-23 A vs B Phase Shift.....	5-3		
5-24 Channel Isolation.....	5-4		
5-25 Trigger Amplitude.....	5-4		



## LIST OF TABLES

Table	Title	Page
1-1	Specifications .....	1-3
3-1	Trigger Signal Requirements .....	3-3
5-1	Recommended Test Equipment .....	5-0
5-2	Vertical Amplifier Gain .....	5-2
5-3	Vertical Amplifier Gain .....	5-3
5-4	Sweep Timing .....	5-5
5-5	Horizontal Gain .....	5-6
5-6	Low Voltage Power Supply Outputs .....	5-7
6-1	Abbreviations for Replaceable Parts List .....	6-1
6-2	Replaceable Parts .....	6-2
7-1	Manual Changes .....	7-1
7-2	Option 006 Replaceable Parts .....	7-2
8-1	Troubleshooting Tips .....	8-5
8-2	Schematic Notes .....	8-7
8-3	Dual Channel Output Amplifier Measurement Conditions .....	8-14
8-4	Multivibrator Measurement Conditions .....	8-16
8-5	Trigger Generator and Horizontal Amplifier Measurement Conditions .....	8-20
8-6	Sweep Generator Measurement Conditions .....	8-22



## SECTION I

### GENERAL INFORMATION

#### 1-1 INTRODUCTION.

1-2. This section contains complete instrument specifications, a description of features, warranty information, and data for manual and instrument identification.

#### 1-3. INSTRUMENT DESCRIPTION.

1-4. In the following paragraphs, key features of the instrument are described, both in general and according to circuit location.

#### 1-5. GENERAL.

1-6. Hewlett-Packard Model 1205B is a dual-trace, 500 kHz general purpose oscilloscope. Designed primarily for rack mounting, the Model 1205B uses only 5-1/4 vertical inches of rack space and has front-panel handles for portability.

1-7. Since all circuitry is solid state, power consumption is only about 45 watts, and a cooling fan is not needed. Complete specifications are given in Table 1-1.

#### 1-8. VERTICAL CIRCUITS.

1-9. The instrument contains two identical vertical amplifiers for single or dual channel operation. Either single-ended or differential signals can be applied with a choice of direct or capacitive coupling. Common-mode rejection for differential input signals is from 50 dB at 5 mV/div to 30 dB at 20 V/div. Maximum safe vertical input potential (dc plus peak ac) is 400 volts.

1-10. Twelve calibrated switch settings provide a deflection factor range of 5 mV/div to 20 V/div in a 1, 2, 5 sequence. A vertical vernier permits continuous adjustment between calibrated steps and extends the least sensitive deflection factor setting to 50 V/div.

1-11. With the dual trace feature, displays can be obtained of either channel alone, both channels together or one channel versus the other for X-Y comparison. Simultaneous display of two signals is possible in either a chop or alternate mode of operation. During chop, channels are switched at about a 100 kHz rate during each sweep. In the alternate mode of operation, the signal applied to each channel is displayed on alternate sweeps. Sweep is triggered by the channel A signal in the A, ALT, and CHOP modes and by the channel B signal in the B mode when using an internal trigger source. In X-Y operation, the signal connected to channel A is applied to the vertical deflection plates, and the channel B signal is

applied to the horizontal deflection plates. Since phase shift between channels is less than 1 degree up to 100 kHz, phase differences between the two signals can be measured accurately.

#### 1-12. HORIZONTAL CIRCUITS.

1-13. Vertical input signals can be displayed either versus an internally generated time base or an externally applied horizontal signal. Horizontal amplifier bandwidth is dc to 300 kHz (low frequency cut-off is 1.6 Hz when ac coupled), and maximum safe input is  $\pm 350V$ , dc plus peak ac. Four calibrated sensitivity settings provide a deflection factor range of 0.1 V/div to 1.0 V/div. A vernier permits continuous adjustment between steps and can be used to extend the minimum sensitivity to 2.5 V/div.

1-14. When the time base generator is used, sweep can be synchronized to a vertical display signal, a power-line signal or an external signal up to 1 MHz. Trigger level, slope, coupling and sweep mode are also selectable.

1-15. Sweep speed settings from 1 usec/div to 5 sec/div are available in twenty-one calibrated steps in a 1, 2, 5 sequence. A vernier control provides continuous adjustment between steps and extends the slowest sweep speed to at least 12.5 sec/div. Using the direct readout sweep magnifier, fastest sweep speed can be expanded to 0.1 usec/div.

1-16. By operating in automatic, a bright time base is displayed even in the absence of a trigger input signal. When a trigger signal above 50 Hz is applied, it overrides the automatic circuit and controls the sweep. Free-run operation provides a non-synchronized baseline that is not affected by incoming trigger signals.

1-17. Single sweep operation can be used with any type of display and is particularly useful for viewing or photographing transient waveforms. One sweep is displayed, and then the sweep circuits must be manually reset to operate again. By pressing a pushbutton, the circuits are immediately reset, and the time delay needed for slow sweep to end is eliminated.

#### 1-18. CATHODE-RAY TUBE.

1-19. The instrument uses a mono-accelerator CRT with a non-glare, rectangular faceplate. An internal graticule is located on the same plane as the display to eliminate parallax errors. The tube has a 3000V accelerating potential, identical

vertical and horizontal deflection factors, and eight-vertical by ten-horizontal divisions (one division equals one centimeter) of display.

1-20. A type P31 phosphor is standard, however, other types are optional. Special graticules, no graticule, or external graticules are also available by special order.

#### NOTE

Due to phosphor burn sensitivity, instruments with a P11 phosphor do not have the beam finder intensification feature.

### 1-21. OPTIONS.

1-22. Options are modifications installed on HP instruments at the factory and are available on request. The following options extend the usefulness of the 1205B:

#### NOTE

Replaceable parts for options covered by this manual are provided in Section VI except for Option 006 which is covered in Section VII.

**OPTION 002:** The standard instrument with a special CRT has P2 phosphor.

**OPTION 004:** CRT has P4 phosphor and an internal graticule.

**OPTION 006:** Provides three rear panel connectors in parallel with front panel input connectors. Refer to Section VII for details and parts list.

**OPTION 007:** CRT has P7 phosphor. An amber contrast filter is also supplied.

**OPTION 011:** Has aluminized CRT with P11 phosphor. Also, a special A6 assembly in this option disables the intensification feature of the BEAM FINDER because P11 phosphor is easily burned by high-intensity displays.

**OPTION 015 (not covered in this manual):** Vertical channel outputs through rear panel connectors.

**OPTION 602:** CRT has P2 phosphor and no graticule.

**OPTION 607:** CRT has P7 phosphor and no graticule.

**OPTION 611:** CRT has P11 phosphor, is aluminized, and has no graticule. Also, a special A6 assembly in this option disables the intensification feature of the BEAM FINDER because P11 phosphor is easily burned by high-intensity displays.

**OPTION 631:** CRT has P31 phosphor and no graticule.

### 1-23. INSTRUMENTS COVERED BY MANUAL.

1-24. Attached to the instrument is a serial number plate. The serial number is in the form: 0000S00000. It is in two parts; the first four digits and the letter are the serial prefix and the last five digits are the suffix. The prefix is the same for all identical instruments; it changes only when a change is made to the instrument. The suffix however, is assigned sequentially and is different for each instrument. The contents of this manual apply to instruments with the serial number prefix(es) listed under SERIAL NUMBERS on the title page.

1-25. An instrument manufactured after the printing of this manual may have a serial number prefix that is not listed on the title page. This unlisted serial number prefix indicates the instrument is different from those described in this manual. The manual for this newer instrument is accompanied by a yellow Manual Changes supplement. This supplement contains "change information" that explains how to adapt the manual to the newer instrument.

1-26. In addition to change information, the supplement may contain information for correcting errors in the manual. To keep this manual as current and accurate as possible, Hewlett-Packard recommends that you periodically request the latest Manual Changes supplement. The supplement for this manual is identified with the manual print date and part number, both of which appear on the manual title page. Complimentary copies of the supplement are available from Hewlett-Packard.

1-27. For information concerning a serial number prefix that is not listed on the title page or in the Manual Changes supplement, contact your nearest Hewlett-Packard office.

Table 1-1. Specifications

**VERTICAL AMPLIFIERS****DEFLECTION FACTOR:**

Ranges: From 5 mV/div to 20 V/div (12 positions) in 1, 2, 5 sequence.  $\pm 3\%$  accuracy with Vernier in calibrated position.

Vernier: Continuously variable between all ranges; extends maximum deflection factor to at least 50 V/div.

**BANDWIDTH:** Dc to 500 kHz with a maximum risetime of 0.7 usec. 2 Hz to 500 kHz when ac coupled.

**INPUT:** Differential or single-ended on all ranges, selectable by front-panel control.

**COMMON MODE:**

Frequency: Dc to 10 kHz on all ranges.

Rejection Ratio: At least 50 dB with dc input coupling on 5 mV/div to 0.2 V/div ranges. CMRR is at least 30 dB on the 0.5 V/div to 20 V/div ranges.

Signal maximum:  $\pm 3V$  (dc + pk ac) on 5 mV/div to 0.2 V/div ranges;  $\pm 300V$  (dc + pk ac) on all other ranges.

**INPUT COUPLING:** Front-panel selection of DC, AC, or OFF for both + and - inputs.

**INPUT RC:** 1 megohm shunted by 45 pF; constant on all ranges.

**MAXIMUM INPUT:**  $\pm 400V$  (dc + pk ac).

**DISPLAY:** Channel A. Channel B. Channels A and B (either Chop or Alternate). Channels A and B vs. horizontal input (Chop only). Channel A vs. B (A-vertical, B-horizontal). Chop frequency is approximately 100 kHz.

**INTERNAL TRIGGER:** By channel A signal for A, Chop, and Alternate displays. Channel B signal for B display.

**ISOLATION:** Greater than 80 dB between channels at 500 kHz with input connectors shielded.

**PHASE SHIFT:** (For Channel A vs. B) Less than  $1^\circ$  to 100 kHz (Verniers in calibrated position).

**TIME BASE****SWEEP:**

Ranges: From 1 usec/div to 5 sec/div (21 positions) in 1, 2, 5 sequence.  $\pm 3\%$  accuracy with Vernier in calibrated position.

Vernier: Continuously variable between ranges; extends slowest sweep to at least 12.5 sec/div.

**X10 MAGNIFIER:** indicates magnified sweep time/division directly with  $\pm 5\%$  accuracy.

**AUTOMATIC TRIGGERING:** Baseline is displayed in absence of an input signal.

Internal: 50 Hz to above 500 kHz on most signals causing 0.5 division or more vertical deflection. Triggering on line frequency also selectable.

External: 50 Hz to above 1 MHz on most signals at least 0.2V p-p.

Trigger Slope: Positive or negative slope on internal, external or line trigger signals.

**AMPLITUDE SELECTION TRIGGERING:**

Internal: Dc to above 500 kHz on signals causing 0.5 division or more vertical deflection.

External: Dc to 1 MHz on signals at least 0.2V p-p. Input impedance is 1 megohm shunted by approximately 20 pF.

Trigger Level and Slope: Internal, any point on vertical waveform displayed; or continuously variable from +100V to -100V on either slope of the external trigger signal.

Trigger Coupling: Dc or ac for external, line, or internal triggering. Lower ac cutoff is 1.6 Hz for external; 5 Hz for internal.

**SINGLE SWEEP:** Selectable by front-panel switch, reset pushbutton with armed indicator light.

**FREE RUN:** Selectable by front-panel switch.

**MAXIMUM INPUT:**  $\pm 350V$  (dc + pk ac).

**HORIZONTAL AMPLIFIER**

**BANDWIDTH:** Dc to 300 kHz. With input ac coupled, low frequency cutoff is 1.6 Hz.

**DEFLECTION FACTOR:**

Ranges: 0.1 V/div, 0.2 V/div 0.5 V/div, and 1 V/div.

Vernier: Continuously variable between ranges; extends maximum deflection factor to at least 2.5 V/div.

**INPUT:** Single-ended.

**INPUT RC:** 1 megohm shunted by approximately 20 pF.

**MAXIMUM INPUT:**  $\pm 350V$  (dc + pk ac).

**GENERAL****CATHODE-RAY TUBE.**

Type: Mono-accelerator, 3000V accelerating potential; P31 phosphor standard; etched safety glass face-plate reduces glare.

Graticule: 8 x 10 divisions; parallax-free internal graticule; 0.2 subdivision markings on horizontal and vertical major axes, 1 div = 1 cm.

Intensity Modulation: +2V signal blanks trace of normal intensity; +8V signal blanks any intensity. Dc coupled input on rear panel; amplifier risetime approximately 200 ns; input resistance is 5 kilohms.

**CALIBRATOR:**

Type: Line frequency square wave.


Output:  $1V \pm 1.5\%$ , front-panel connector.

**BEAM FINDER:** Pushbutton to locate beam on CRT screen regardless of setting of vertical, horizontal, and intensity controls.

**DIMENSIONS:**

Refer to outline drawing.

**NOTE:**  
DIMENSIONS IN  
MILLIMETRES  
AND (INCHES)

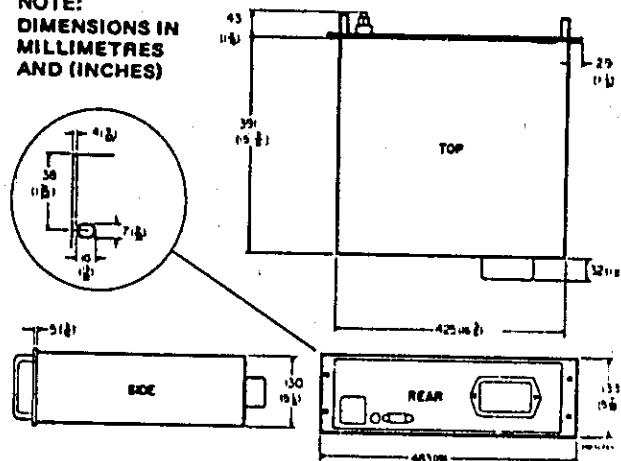**WEIGHT:**

Net, 22-1/2 lb (10,2 kg); shipping, 35 lb (15,8 kg).

**POWER:** 115 or 230V  $\pm 10\%$ ; 47 to 440 Hz; approximately 45W.

## SECTION II INSTALLATION

### 2-1. INTRODUCTION.

2-2. This section contains information and instructions necessary for installing and interfacing the Model 1205B Dual Trace Oscilloscope. Included are initial inspection procedures, power and grounding requirements, installation instructions, and procedures for repacking the instrument for shipment.

### 2-3. INITIAL INSPECTION.

2-4. This instrument was carefully inspected both mechanically and electrically before shipment. It should be free of marks or scratches and in perfect electrical order upon receipt. To confirm this, the instrument should be inspected for physical damage incurred in transit. If the instrument was damaged in transit, file a claim with the carrier. Test the electrical performance of the instrument using the performance test procedures outlined in Section V. If there is damage or deficiency, see the warranty in the front of this manual.

**WARNING**

Read the Safety Summary at the front of the manual before installing or operating the instrument.

### 2-5. POWER CORDS AND RECEPTACLES.

2-6. Figure 2-1 illustrates standard configurations used for HP power cords. The number directly above each drawing is the HP part number for a power cord equipped with a connector of that configuration. If the appropriate power cord is not included with the instrument, notify the nearest HP Sales and Service Office and a replacement cord will be provided.

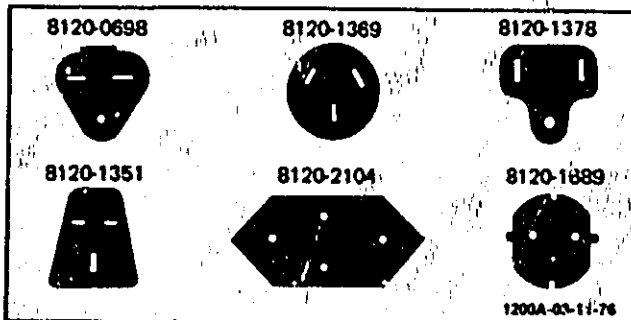


Figure 2-1. Model 1205B Power Cable Configurations

### 2-7. POWER REQUIREMENTS.

2-8. Model 1205B can be operated from any power source supplying 115 V or 230 V,  $\pm 10\%$ , 47 to 460 Hz. Power dissipation is approximately 45W.

**CAUTION**

Instrument damage may result if the line-voltage selection switch is not correctly set for the proper input power source.


2-9. The instrument is normally set at the factory for 115-volt or 230-volt operation depending on destination. To operate the instrument, proceed as follows:

- a. Verify that power cable is not connected to any input power source.
- b. Verify line voltage SELECTOR switch on rear panel is correctly set.
- c. Use 1.5-ampere line FUSE (F1) for 115-volt or 0.8-ampere fuse for 230-volt operation.
- d. Connect input power cable to the ac power source.

### 2-10. REPACKING FOR SHIPMENT.

2-11. If the instrument is to be shipped to a Hewlett-Packard Sales/Service Office for service or repair, attach a tag showing owner (with address), complete instrument serial number, and a description of the service required.

2-12. Use the original shipping carton and packing material. If the original packing material is not available, the Hewlett-Packard Sales/Service Office will provide information and recommendations on materials to be used.

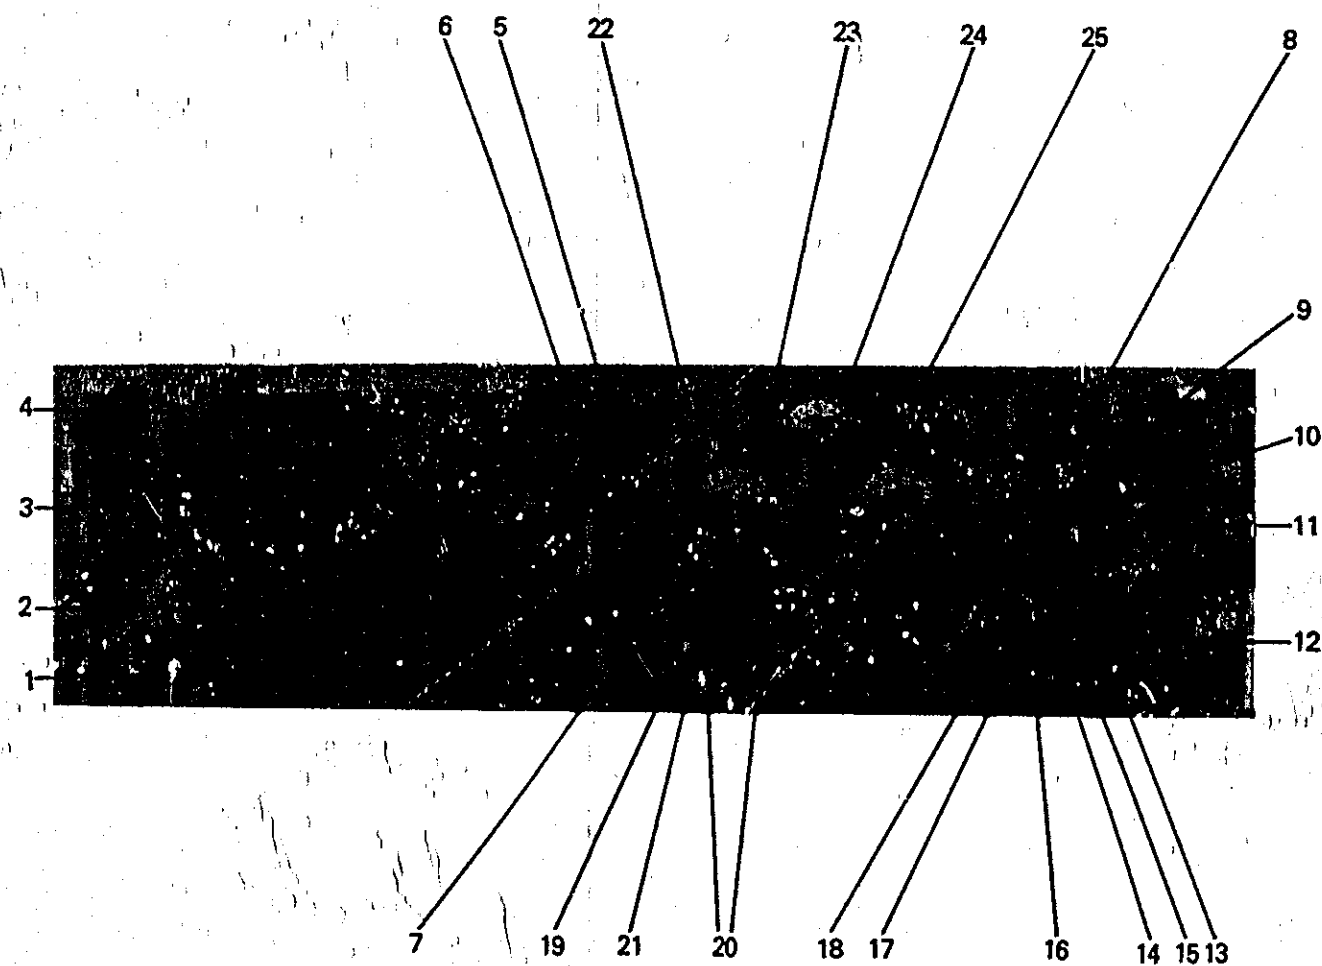

1. POWER. Applies primary power to instrument.
2. Indicator. Lights when power is applied.
3. TRACE ALIGN. Aligns trace with horizontal axis.
4. FIND BEAM. When pressed, returns offset beam to CRT screen.
5. INTENSITY. Adjusts brightness of CRT display.
6. FOCUS. Adjusts sharpness of display.
7. CAL. Provides 1V pk-pk, line frequency, square wave test signal at front panel jack.
8. POSITION. Adjusts horizontal position of display.
9. SWEEP/EXT HORIZ. In SWEEP, turns on sweep generator and allows magnification of sweep. In EXT HORIZ, determines deflection factor of external signal applied to TRIG & HORIZ INPUT jack.
10. Time/Division. Selects horizontal sweep speed.
11. Horizontal Vernier. Provides continuous adjustment of horizontal deflection factor between ranges of EXT HORIZ switch or of sweep time between ranges of Time/Division switch.
12. SOURCE. Selects origin of trigger signal that starts sweep.
13. COUPLING. In AC position, selected input signal is capacitively coupled. In DC position, input signal is direct coupled.
14. TRIG & HORIZ INPUT. Jack for applying external trigger signals to sweep generator or external horizontal signal to horizontal amplifiers.
15. TRIGGER LEVEL. Selects point on trigger waveform that starts sweep. In AUTO position, automatic triggers are generated at about a 40 Hz rate.
16. SLOPE. Selects positive or negative-going slope of trigger signal to start sweep.
17. RESET. In SINGLE mode, pressing the push-button resets sweep to zero, and releasing it arms circuit preparatory to receipt of trigger. Indicator lamp glows when sweep circuit is armed.
18. MODE. In NORM, sweep is periodically started by incoming trigger signal. In SINGLE, sweep is triggered only once, then must be manually reset. In FREE RUN, sweep cycles continuously and is not affected by trigger signals.
19. Vertical Coupling. Selects capacitive (AC) or direct (DC) coupling of vertical input signals. In OFF, vertical amplifier input circuit is grounded and INPUT jacks disconnected.
20. INPUT. Jacks connect either single-ended or differential input signals to respective vertical amplifiers.
21. BAL. Adjustment to minimize trace shift when changing Volts/Division ranges.
22. Volts/Division. Selects vertical amplifier deflection factor in seventeen calibrated steps.
23. Vertical Vernier. Provides continuous adjustment of vertical deflection factor between calibrated ranges of Volts/Division switch. In CAL detent, vertical deflection is selected by Volts/Division switch position.
24. DISPLAY. Selects single channel, chop, alternate or A vs B CRT display.
25. POSITION. Adjusts vertical position of display.

Figure 3-1. Controls and Connectors.

## SECTION III OPERATION

### 3-1. INTRODUCTION.

3-2. Front-panel control operation and typical instrument application instructions are presented in this section.

### 3-3. CONTROLS AND CONNECTORS.

3-4. Figure 3-1 shows the instrument front panel with a brief description of control and connector applications. Since the channel A and B controls are identical, only those for channel A are described in the figure. For a more detailed explanation of control and connector use, refer to the following paragraphs.

3-5. The TRACE ALIGN screwdriver adjustment is used to position the trace parallel to the horizontal graticule lines. Since external magnetic fields may shift the trace, check alignment each time the instrument is moved to a new location, and readjust when necessary.

3-6. Pressing the FIND BEAM pushbutton increases intensity and reduces amplifier gain enough to return a displaced beam on screen. This enables the operator to locate the beam and determine the action necessary to center a display (examples: reduce input signal amplitude, change coupling, adjust deflection factor, trigger level, dc balance, position controls, or intensity). When centered properly, the beam remains on screen when the pushbutton is released.

#### NOTE

Due to phosphor burn sensitivity, instruments with a P11 phosphor do not have the beam finder intensification feature.

3-7. The CAL 1 volt jack provides a 1V pk-pk square wave signal, at power line frequency, to calibrate vertical deflection or compensate a divider probe. Signal amplitude is accurate to  $\pm 1.5\%$ .

3-8. The SWEEP/EXT HORIZ switch is used to select either of two modes of horizontal circuit operation. In the SWEEP X1 or MAG position, a sweep signal is generated to establish a time base reference for vertical signals. Selecting MAG increases horizontal amplifier gain and, sweep speed, by a factor of 10.

#### NOTE

In either the X1 or MAG position, sweep speed is read directly from the Time/Division dial, and no calculations are required.

3-9. In the EXT HORIZ position, the switch disables the sweep generator and applies external input signals to the horizontal amplifiers. Four switch settings provide calibrated horizontal deflection factors from 0.1 to 1 volt/division when the Horizontal Vernier is in the CAL detent.

3-10. The Time/Division switch controls the time required for one horizontal division of sweep. Sweep speed settings from 1 usec/div to 5 sec/div are available in twenty-one calibrated steps in a 1, 2, 5 sequence. A vernier control provides continuous adjustment between steps and extends the slowest sweep speed to at least 12.5 sec/div. Using the direct readout sweep magnifier, fastest sweep speed can be expanded to 0.1 usec/div.

3-11. The Horizontal Vernier has two uses: one for each function of the SWEEP/EXT HORIZ switch. In the SWEEP mode, the vernier provides continuous adjustment of sweep speed between the calibrated positions of the Time/Division switch and extends the 5 sec/div range to at least 12.5 sec/div. In the EXT HORIZ mode, it provides continuous adjustment of horizontal deflection factor between the calibrated positions of the EXT HORIZ switch and extends the 1 V/div deflection factor to at least 2.5 V/div. When this control is rotated fully clockwise to CAL detent, time per division and horizontal deflection factors are calibrated to the front panel control settings.

3-12. The trigger SOURCE switch selects trigger signal origin. In the LINE position a signal at the frequency of the power line is used for triggering. When the INT setting is selected, the channel A vertical deflection signal triggers the sweep during A, ALT or CHOP display; the channel B signal is the trigger for a B display. To trigger with an external signal, set the switch to the EXT position and apply a trigger to the TRIG & HORIZ INPUT jack.

3-13. The point on a trigger signal that starts the sweep is selected by the LEVEL control. This point can be chosen over a  $-100V$  to  $+100V$  range when triggering by an external signal or at any point on the displayed waveform when triggering by the internal signal. Set

SLOPE to positive (+) to trigger on the positive-going portion of a signal or negative (-) to trigger on the negative-going portion.

3-14. By setting the LEVEL control to AUTO (fully counterclockwise detent), the instrument is automatically triggered at a 40 Hz rate with no signal applied. In AUTO, however, if a trigger signal greater than about 50 Hz is applied, it overrides the automatic circuitry and triggers the sweep.

3-15. The MODE switch selects the type of sweep operation to be used. In the FREE RUN position, the sweep generator runs free at a rate controlled by the Time/Division switch. In the NORM position, input trigger signals (internal or external) produce a sweep on the CRT. In the SINGLE position, an incoming trigger signal produces one horizontal sweep cycle. The sweep generator must then be manually reset before the next trigger signal will produce another sweep cycle. To reset and arm the sweep generator, press and release the RESET pushbutton. The indicator lamp in the RESET pushbutton will glow when the sweep generator is armed and extinguish when the sweep cycle is completed.

3-16. The + and -INPUT jacks are used to apply an external signal up to  $\pm 400\text{V}$  (dc + peak ac) to the vertical deflection circuits. For a single-ended signal, use either connector, depending on the direction of deflection desired. Signals applied to the +INPUT jack are displayed in-phase on the CRT, and signals applied to the -INPUT jack are inverted. Use both connectors to apply a differential input signal. The amplitudes of the two input signals are algebraically subtracted. As a result, one waveform is displayed on the CRT, and common mode (in-phase) components of the signal are rejected.

3-17. The Volts/Division (channel A or B) switch selects the vertical deflection factor of the display in mV/div or V/div. Twelve settings provide calibrated steps from 5 mV/div to 20 V/div in a 1, 2, 5 sequence. When the Vertical Vernier control is in the CAL detent, multiply the number of vertical divisions of deflection by the Volts/Division switch setting to determine input signal peak-to-peak amplitude. If a divider probe is used, multiply this product by the division ratio. For example: if 3.5 vertical divisions are deflected when Volts/Division is set to 20 and a signal is applied to the vertical input connector via a 10:1 divider probe, then  $3.5 \times 20 \times 10 =$  an input signal of 700V pk-pk.

3-18. When the Vertical Vernier (channel A or B) is set to the fully clockwise CAL detent, vertical deflection is calibrated to the Volts/Division switch. By rotating the Vertical Vernier from the CAL detent, vertical deflection factors are continuously adjustable and the 20 V/div setting can be extended to at least 50 V/div, however, vertical deflection is calibrated to the Volts/Division switch only when the Vertical Vernier is in the CAL detent.

3-19. The five-position DISPLAY switch selects the type of display presented on the CRT. Input signals can be displayed singly or simultaneously, as explained below.

a. Position A: presents a display of the vertical input signal applied to the channel A input jacks.

b. Position B: presents a display of the vertical input signal applied to the channel B input jacks.

c. Position A vs B: presents an X-Y display of the signals applied to the input jacks of both channels. The channel A signal is applied to the vertical deflection plates, and the channel B signal is applied to the horizontal deflection plates.

d. Position ALT: presents a separate display of each channel input signal on alternate sweep cycles. In the INT position of the trigger SOURCE switch, the channel A signal is selected to trigger the sweep generator.

e. Position CHOP: presents a separate display of each channel input signal during each sweep cycle. Channels are switched at about a 100 kHz rate. Sweep is triggered by the channel A signal when the trigger SOURCE switch is set to INT.

3-20. The Z-AXIS INPUT terminal, located on the rear panel, is normally grounded through a shorting link. External intensity modulation signals applied to this terminal are fed directly to the gate amplifier. About +2 volts are required to blank a trace of normal intensity; +8 volts blank a trace of any intensity.

### 3-21. OPERATING INSTRUCTIONS.

3-22. Before attempting to operate the Model 1205B, refer to the following paragraphs for detailed operating instructions.

### 3-23. APPLYING INPUT SIGNALS.

3-24. For measurements requiring low amplifier deflection factors and high impedance levels, a shielded input connection is desirable. An adapter (Model 10111A) that provides a shielded banana post-to-female-BNC is available for this purpose. For differential input operation, two adapters can be used. Also available is a frequency-compensated divider probe (Model 10001A) to provide a higher input impedance and reduce circuit loading effects.

### 3-25. TRIGGER SIGNAL REQUIREMENTS.

3-26. Sweep triggering requires application of a signal that will start the sweep at the same point on the displayed waveform during each sweep. Synchronous triggering is necessary to obtain a stable (jitter-free) display of a repetitive waveform. To observe two different waveforms simultaneously, the signals must have time-related repetition rates, otherwise the one not harmonically related



to the trigger signal will be non-synchronous with the display.

3-27. Table 3-1 shows the trigger signal requirements with various control setting combinations. The table provides frequency range, amplitude required and trigger point information for each possible trigger condition.

**3-28. OPERATING PROCEDURES.**

3-29. Paragraphs 3-30 through 3-39 contain step-by-step operating procedures. Due to the versatility of the instrument, numerous applications exist. However, only the basic operating techniques are explained in the procedures. Most of these can then be modified or combined to fulfill a wide variety of unique requirements.

**CAUTION**

The CRT has a plexiglass safety faceplate for operator protection. To clean the faceplate, use a soft cloth or tissue. Never use coarse or abrasive tissues because they will scratch the plexiglass.

3-30. Initial Turn-on Procedure. To turn on the 1205B, proceed as follows:

- a. Set INTENSITY fully counterclockwise.
- b. Set Vertical POSITION (A and B) to mid-range.

Table 3-1. Trigger Signal Requirements

Mode	Slope	Source	Trigger Level	Coupling	Required Signal		
					Frequency	Amplitude	
NORM or SINGLE	+ or -	LINE	Selectable	DC or AC	Line Frequency	Internally Connected	
			AUTO				
		INT	Selectable (Any point that can be displayed.)	DC	DC to 500 kHz	At least 0.5 div of deflection	
				AC	5 Hz to 500 kHz		
			AUTO	DC or AC	50 Hz to 500 kHz		
		EXT	Selectable +100V to -100V	DC	DC to 1 MHz	0.2V to 350V pk-pk (dc plus peak ac)	
	AC			1.6 Hz to 1 MHz			
	AUTO		DC or AC	50 Hz to 1 MHz			
	FREE RUN	Provides a non-synchronous display.					

- c. Set DISPLAY to CHOP.
- d. Set Volts/Division (A and B) to 20 V/DIV.
- e. Set Vertical Vernier (A and B) to CAL detent.
- f. Set + and - Vertical Coupling (A and B) to OFF.
- g. Set Horizontal POSITION to midrange.
- h. Set SWEEP/EXT HORIZ to X1.
- i. Set Time/Division to 2 mSEC/DIV.
- j. Set Horizontal Vernier to CAL detent.
- k. Set MODE to FREE RUN.
- l. Set SOURCE to INT.

m. Apply operating power (refer to power requirements paragraph in Section II), turn on POWER switch (note that indicator lights), and allow at least 15 minutes for warmup.

n. Adjust INTENSITY and FOCUS for two sharp and just visible traces.

**3-31. Trace Alignment and Amplifier Balance.** To adjust the display for proper trace alignment and amplifier balance, proceed as follows:

- a. Do initial turn-on procedure in paragraph 3-30.
- b. Using Vertical POSITION controls, set traces on horizontal graticule lines.
- c. Adjust TRACE ALIGN so that traces are aligned parallel to horizontal graticule lines.
- d. Turn channel A Volts/Division switch from 20 V/DIV to 5 mV/DIV.
- e. If channel A trace shifts, adjust channel A BAL until trace remains stationary when Volts/Division switch is turned.
- f. Repeat steps d and e for channel B.

**3-32. Free-run Sweep Mode.** The following procedure explains how to obtain a free-run mode display of the 1-volt p-p calibrator signal on channel A:

- a. Do initial turn-on procedure in paragraph 3-30.
- b. Set DISPLAY to A.
- c. Set channel A Volts/Division to 0.2 V/DIV.
- d. Set channel A + Vertical Coupling to AC.
- e. Connect Cal 1 VOLT signal to channel A + INPUT jack.
- f. Note free-running (unsynchronized) display, 5 vertical divisions in amplitude, of calibrator signal.

**3-33. Normal Sweep Mode.** The following procedure explains how to obtain a normal mode display of the 1-volt p-p calibrator signal on channel A:

- a. Do initial turn-on procedure in paragraph 3-30.
- b. Repeat steps b through e for free-run operation.
- c. Set MODE to NORM.
- d. Adjust TRIGGER LEVEL (or set to AUTO), and note stable display, 5 vertical divisions in amplitude, of calibrator signal.

**3-34. Single Sweep Mode.** To initiate a single sweep display, proceed as follows:

- a. Do steps a and b of normal sweep mode operation (paragraph 3-33), and set TRIGGER LEVEL to midrange.
- b. Set MODE to SINGLE and channel A + Vertical Coupling to OFF.
- c. Press and release RESET pushbutton. Note that RESET indicator lights to signify sweep circuits are armed.

#### NOTE

Pressing RESET will immediately reset sweep without normal delay for sweep termination.

d. When sweep is armed, the first trigger input (in this case the trigger is applied internally since SOURCE is set to INT) will initiate one sweep cycle. Set + Vertical Coupling to AC and note a display. After the sweep cycle, the indicator goes out until the sweep is manually reset again (step c).

**3-35. External Horizontal Input.** In this type of operation, the horizontal circuits perform as an amplifier instead of a sweep generator. Proceed as follows:

- a. Turn on POWER, and allow at least 15 minutes for warmup.
- b. Set SWEEP/EXT HORIZ to EXT HORIZ position at desired sensitivity.
- c. Set Horizontal COUPLING to either DC (direct) or AC (capacitive).
- d. Connect signal to TRIG & HORIZ INPUT jack.
- e. Set INTENSITY, FOCUS, DISPLAY, POSITION, and Horizontal Vernier for required display.

**3-36. Single Channel Operation.** To obtain a display on only one channel, proceed as follows:

- a. Do initial turn-on procedure in paragraph 3-30, except set DISPLAY to A or B.
- b. Set Vertical Coupling to AC (capacitive) or DC (direct).

c. Set Volts/Division for required deflection factor.

d. Connect single-ended input signals between + or -INPUT jack and ground jack (signals applied to +INPUT are displayed in-phase on CRT; signals applied to -INPUT are displayed inverted on CRT). To display differential signal, connect between + and -INPUT jacks (ground jack not used).

e. Adjust other controls to meet specific requirements.

**3-37. Dual Channel Operation.** To obtain displays for both channels, proceed as follows:

a. Do steps a through e of single channel operation for channel A and B, and connect input signals to both channel A and B INPUT jacks.

b. Set DISPLAY to either CHOP or ALT.

c. ALT operation is preferable for use with fast sweep speeds; slow sweep speeds will make the display flicker. CHOP operation is usually best for use with slow sweep speeds; fast sweep speeds will cause a dotted trace. Set DISPLAY to CHOP when using EXT HORIZ.

**3-38. A vs B Operation.** To obtain one trace which is the signal applied to one vertical amplifier displayed against the signal applied to the other vertical amplifier, proceed as follows:

a. Do initial turn-on procedure in paragraph 3-30.

b. Set DISPLAY to A vs B.

c. Set channel A and B Volts/Division as required.

d. Set channel A and B Vertical Coupling (one side ground for single-ended signals) to AC (capacitive) or DC (direct).

e. Connect desired vertical signal to channel A INPUT jacks.

f. Connect desired horizontal signal to channel B INPUT jacks.

g. Adjust channel A POSITION for desired vertical position of display.

h. Adjust channel B POSITION for desired horizontal position of display.

**3-39. X-Y Operation.** To obtain trace(s) which display channel A and/or channel B on an externally supplied horizontal time base, proceed as follows:

a. Set up vertical amplifier(s) for either single or dual channel operation as explained in paragraphs 3-36 or 3-37.

b. Set up horizontal amplifier for external horizontal input operations as explained in paragraph 3-35.

## SECTION IV

### PRINCIPLES OF OPERATION

#### 4-1. INTRODUCTION.

4-2. This section contains both an overall and detailed explanation of circuit theory. Refer to the overall block diagram and figures in this section and the schematics in Section VIII while reading the text.

#### 4-3. GENERAL THEORY.

4-4. Following is an overall explanation of circuit operation based on the block diagram in Figure 4-10. This data is presented to create a basic understanding of the instrument in preparation for the detailed theory that follows.

4-5. For simplicity, the block diagram is drawn for function and doesn't necessarily show all details of the schematics.

4-6. This instrument consists of a CRT and seven modules: two independent vertical preamplifiers, a horizontal amplifier/sweep generator, a dual channel output amplifier, a low voltage power supply, and a high voltage regulator and rectifier. These function as follows:

#### 4-7. VERTICAL PREAMPLIFIER MODULES.

4-8. Since operation of the channel A and B vertical preamplifiers is identical, the following text is applicable to either.

4-9. Incoming signals, single-ended or differential, are connected to the front panel jacks and applied to three-position coupling switches for either direct (DC) or capacitive (AC) coupling to the attenuators. A third alternative is to switch to OFF. In this setting, the incoming signal is disconnected internally, and the attenuator input is grounded. This can be done to set a 0-volt reference without removing the incoming signal from the input jack.

4-10. The incoming signal is attenuated before being applied to the preamplifiers when the Volts/Division switch is set to one of the six least sensitive positions (0.5 to 20 V/div). In the remaining six switch settings, the incoming signal is applied without attenuation direct to the preamplifier input.

4-11. In addition to amplifying the incoming signal, the preamplifier rejects common mode signals. Other features include an interstage attenuator controlled by the Volts/Division switch, and a front panel BAL adjustment to keep the CRT trace from shifting when the deflection factor is changed.

4-12. Two signals are taken from the output of the preamplifiers: a single-ended signal is applied, via the DISPLAY switch, to the horizontal preamplifier for use as an internal trigger, and a differential signal is applied to the vertical amplifier in the output module for eventual application to the CRT vertical deflection plates.

#### 4-13. HORIZONTAL MODULE.

4-14. The horizontal module can operate in either of two ways: as a horizontal amplifier or as a sweep generator. Each mode of operation is explained separately in the following paragraphs.

4-15. HORIZONTAL AMPLIFIER. When the SWEEP/EXT HORIZ switch is in one of the four EXT HORIZ positions, the horizontal module acts as an amplifier. In this mode, the SOURCE switch is bypassed, and incoming signals applied to the TRIG & HORIZ INPUT jack are applied to a coupling switch for either direct or capacitive coupling.

4-16. The signal is attenuated on one of four steps determined by the setting of the SWEEP/EXT HORIZ switch and applied to the horizontal amplifier.

4-17. The preamplifier amplifies the incoming signal and then applies it to the first horizontal amplifier stage for further amplification. At this point in the circuitry, a POSITION control is provided to move the CRT beam horizontally.

4-18. The single-ended output signal from the horizontal amplifier is next applied to the output module for further amplification, conversion to a differential signal and, finally, application to the CRT horizontal deflection plates.

4-19. SWEEP GENERATOR. When the SWEEP/EXT HORIZ switch is set to SWEEP, the horizontal module acts as a sweep generator. Two sweep settings can be selected with the SWEEP/EXT HORIZ switch: X1 or MAG. In the MAG setting, sweep rate and length are magnified (increased) by X10; however, in either setting, sweep rate is read directly from the Time/Division switch.

4-20. Sweep can be triggered or it can run-free, depending on the setting of the MODE switch. A negative control voltage is applied to the sweep generator and it runs free at a rate set by the Time/Division switch when FREE RUN is selected. However, the sweep generator must be triggered when the MODE switch is set to NORM or SINGLE.

4-21. A sweep signal is generated each time a trigger signal is applied when NORM is selected. In the SINGLE position of the MODE switch, operation is similar to NORM except that an incoming trigger signal produces only one horizontal sweep cycle. The sweep generator must then be manually reset before the next trigger signal can produce another sweep cycle.

4-22. Three trigger choices can be selected by the SOURCE switch: an external signal applied to the TRIG & HORIZ INPUT jack, a signal taken from the vertical preamplifiers, or a power-line-frequency signal taken from the low voltage power supply.

4-23. A selected trigger signal is coupled, either direct or capacitively, to the horizontal preamplifier and is then amplified and applied to the trigger generator. Upon reception of the incoming signal, the trigger generator produces a fast-rise, negative-going step. This voltage step triggers the sweep generator to produce three output signals: a sweep signal, an unblanking gate, and a trigger for alternate channel display.

4-24. The sweep signal is amplified in the output module and is then applied to the CRT's horizontal deflection plates to set a time-base reference for vertical display signals. The unblanking gate is applied to an amplifier in the high voltage power supply and is used to unblank the CRT during sweep time. In the ALT display mode, the trigger from the sweep generator is used to activate the multivibrator in the output module.

4-25. Controls in the trigger and sweep generator circuits permit selection of either the positive or negative-going slope of the incoming signal for triggering, selection of the voltage level on the incoming signal that will activate the trigger generator, and variable sweep speed calibrated to the CRT graticule.

4-26. When the TRIGGER LEVEL control is set to the AUTO detent, trigger signals are automatically generated at about a 40 Hz rate to present a baseline even in the absence of a trigger input signal. However, if a trigger input signal 50 Hz or greater is applied, it overrides the automatic trigger signals and initiates the sweep cycle.

#### 4-27. OUTPUT MODULE.

4-28. A display switching arrangement in the output module allows presentation of five types of display: channel A signal, channel B signal, channel A and B signals during alternate sweep cycles, channel A and B signals alternately switched on and off at a 100 kHz rate, and channel A signal vertically versus channel B signal horizontally.

4-29. The output module's vertical and horizontal amplifiers are controlled by current sources. When the DISPLAY switch is set to A, a negative voltage is applied to the A side of the multivibrator. The multivibrator then operates as a switch to turn on current source A. As a

result, vertical amplifier A is turned on, the channel A signal is amplified, applied to the vertical output amplifier for further amplification, and then applied to the CRT's vertical deflection plates. During this time, a sweep signal is produced by the sweep generator, amplified by the horizontal output circuits, and applied to the CRT's horizontal deflection plates. On the CRT, the channel A signal is then displayed versus a time-base reference.

4-30. When the DISPLAY switch is set to B, operation is identical except that the channel A current source is turned off, and the channel B current source is turned on. Then, only the channel B signal is amplified and applied to the CRT's vertical deflection plates.

4-31. In the A vs. B setting, the multivibrator turns on current source A and vertical amplifier A. In addition, the current source that normally turns on the horizontal amplifier is coupled through the DISPLAY switch and turns on vertical amplifier B. Thus, the channel A signal from the preamplifier is amplified by vertical amplifier A and the vertical output amplifier and then applied to the CRT's vertical deflection plates. Instead of a sweep signal, the channel B signal is amplified by the horizontal output amplifiers and applied to the CRT's horizontal deflection plates for an X-Y type presentation.

4-32. When the DISPLAY switch is set to ALT, the multivibrator is triggered by a signal from the sweep generator and it operates in a bistable state. The multivibrator then turns on channel A during one sweep cycle and channel B during the next sweep cycle. Switching is at a rate determined by the setting of the Time/Division switch. Thus, the channel A and B signals are alternately applied to the vertical deflection plates while a sweep signal is applied to the horizontal deflection plates. In this way, the CRT display is of a different channel's signal during each successive sweep cycle, and the result is a dual-signal presentation on a time-shared basis.

4-33. A negative voltage applied to both the A and B sides of the multivibrator causes it to become unstable when the DISPLAY switch is set to CHOP. In this mode, the multivibrator free-runs at a 100 kHz rate. In turn, the current sources switch on and off at the same rate. The channel A and B signals are amplified and applied to the CRT's vertical deflection plates via the same paths used during ALT operation. However, instead of being displayed separately during alternate sweep cycles, the vertical display is switched between channels at a 100 kHz rate during each sweep cycle.

4-34. Each channel has a POSITION control to vertically position the signal on the CRT, and a Vernier to adjust sensitivity between the calibrated settings of the Volts/Division switch. Pressing the FIND BEAM pushbutton switch reduces the current applied to the vertical and horizontal amplifiers so that an offset display can be located and returned to the viewing area.

4-35. Except when the DISPLAY switch is set to B, the internal trigger signal taken from the vertical preamplifiers and applied to the horizontal module is always the channel A display signal.

#### 4-36. POWER SUPPLY MODULES.

4-37. **LOW VOLTAGE POWER SUPPLY.** Either 115 or 230 Vac, 47 to 440 Hz, can be applied to the input of the low voltage power supply as operating power. This voltage is then stepped-up or down by a transformer, rectified, filtered, and regulated to produce operating voltages for the various circuits of the instrument. In addition, the low voltage power supply module produces two other voltages. A line sync signal is applied to the horizontal module so that the sweep signal can be synchronized to the power-line frequency, if desired. Also, a 1V pk-pk line frequency square wave is applied to the front panel for use as a calibrating reference.

4-38. **HIGH VOLTAGE POWER SUPPLY.** An oscillator, controlled by a regulator, and a step-up transformer are used in the high voltage power supply modules to generate high voltage for the CRT. Further, a gate amplifier in the high voltage supply is pulsed to unblank the CRT during sweep time. Chop blanking signals are also applied to the gate amplifier to eliminate switching cross-over, and external signals can be applied, via the Z-AXIS INPUT, to intensity modulate the CRT. The high voltage power supply also contains circuitry to adjust CRT focus, astigmatism, intensity and other characteristics.

#### 4-39. DETAILED CIRCUIT THEORY.

4-40. The following detailed theory is sub-divided according to module type and referenced to fold-out schematics in Section VIII. Each schematic is numbered and indexed in the appropriate text for easy location. Also included is a separate detailed block diagram for each circuit function.

#### 4-41. VERTICAL PREAMPLIFIER MODULES.

4-42. Operation of the channel A and B vertical preamplifiers is identical. Therefore, although the following theory describes only the channel A preamplifier, it is applicable to either channel. Refer to Figure 4-1 and Schematic 1 in Section VIII, while reading the following text.

4-43. **ATTENUATORS.** Either single-ended or differential signals can be applied to the vertical amplifier's INPUT jacks. A single-ended signal applied between the positive (J3) and ground (J2) input jacks results in an in-phase display on the CRT. Conversely, single-ended signals applied between the negative (J1) and ground (J2) input jacks are displayed inverted on the CRT. To display a differential signal, use only the positive and negative jacks.

4-44. From the input jacks, incoming signals are applied to three-position Coupling switches (A1S1 for signals

applied to J1 and A1S2 for signals applied to J3). When DC coupling is selected, both the dc and ac components of the incoming signal are direct coupled to the attenuators. Only the ac signal component is coupled through capacitors A1C1A or A1C1B when AC coupling is selected. A third alternative is to switch A1S1 or A1S2 to OFF. In this setting, the incoming signal is disconnected internally, and the attenuator input is grounded. This can be done to set a 0-volt reference without removing the incoming signal from the input jack.

4-45. Signal attenuation is determined by the Volts/Division switch setting. When the switch is set to any of the six settings from 5 mV/div to 0.2 V/div, the attenuator is bypassed and the incoming signal is applied direct to the preamplifier input. In the six least sensitive settings (0.5 to 20 V/div) of the Volts/Division switch, the incoming signal is attenuated by a  $\div 100$  factor before being applied to the preamplifiers.

4-46. The attenuator network is essentially a frequency compensated voltage divider used to control the input level to the preamplifier. Since the resistance of A1A2R2 approximately equals one-hundredth the total resistance of A1A2R1 plus A1A2R2, the attenuator is a  $\div 100$  voltage divider. However, to maintain a constant 100:1 division ratio over a broad frequency range, capacitors A1A2C2 and A1A2C3 are selected with a capacitive reactance equal to the same proportion as the resistors. Capacitor A1A2C2 is a high frequency compensation capacitor, and it is adjusted for an optimum square wave response (since a square wave is multi-harmonic) to assure a constant attenuation ratio over a wide frequency range. Input capacitance is set by A1A2C1 and A1A2C4.

4-47. **INPUT AMPLIFIERS.** When the input signal is applied direct to the preamplifier without attenuation, A1A1C1 and A1A1C3 determine the input capacitance. Input resistance is set by A1A1R1 and A1A1R2, and input current is limited by A1A1R3 and A1A1R4 during overload.

4-48. Voltage at the preamplifier input is limited to about  $\pm 12V$  by a diode clamp circuit consisting of A1A1CR1-CR4 and associated components. If the voltage at either input exceeds the voltage at the junction of A1A1R26/R27 or A1A1R28/R29 one of the diodes will become forward biased to bypass the excessive current to ground and limit input voltage.

4-49. The input amplifier is a two-stage feedback amplifier with an emitter follower included in the feedback loop. Field-effect transistor A1A1Q1A/Q1B provides the amplifier with a high input impedance to prevent loading of the circuit under test.

4-50. Gain of the feedback amplifier is determined by the amount of resistance switched into the feedback circuit by interstage attenuator A1A2R5-R10. BAL adjustment A1A2R15 equalizes the dc voltage across the interstage attenuator for all positions of the Volts/Division switch

so that the position of the trace does not shift when the value of the feedback resistance is changed.

4-51. The main current for the amplifier is that which flows through input transistor A1A1Q1A/Q1B and feedback resistors A1A1R15 and A1A1R16. The output voltage is set by A1A1R9A and is equal to the source

voltage of the FET plus the voltage drop across the feedback resistor. Vernier balance voltage is set by A1A1R9B.

4-52. The differential signal from emitter followers A1A1Q4/Q5 is coupled to the vertical amplifier in the output module. Also, a single ended internal trigger signal is coupled from A1A1Q5 to the DISPLAY switch in the output module.

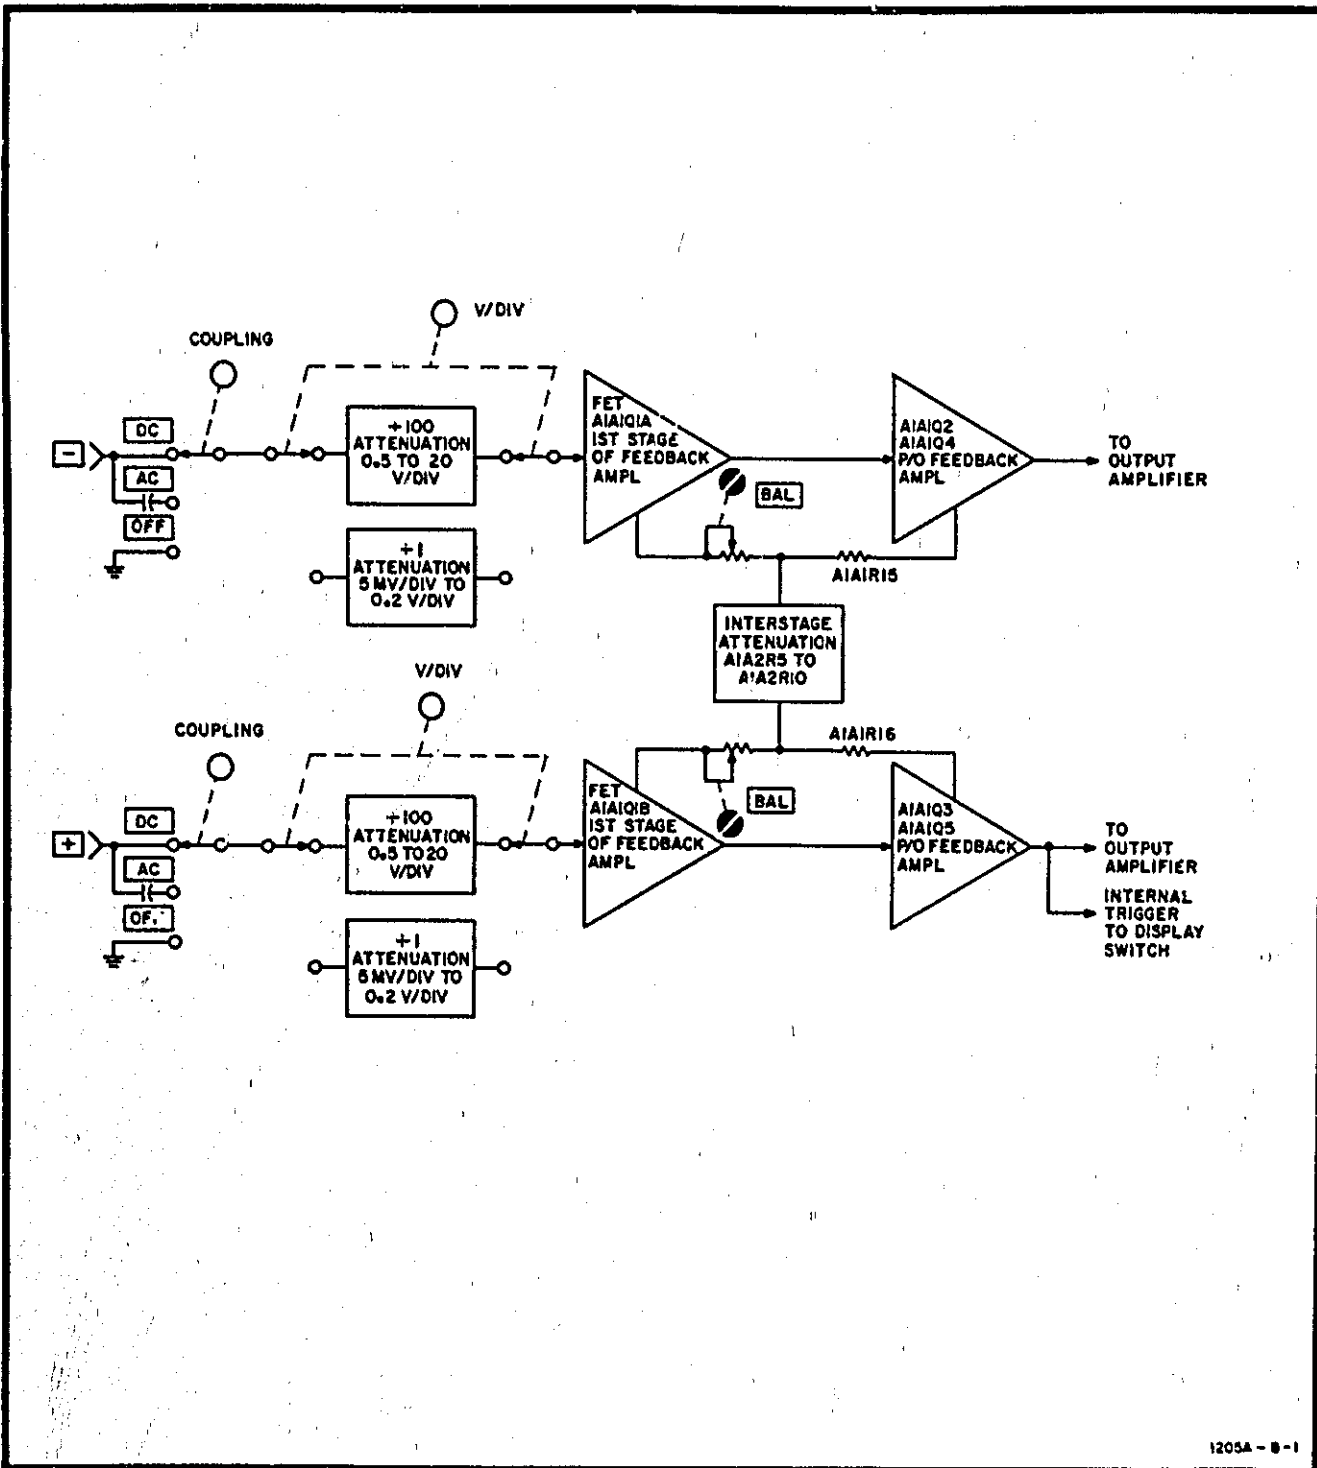


Figure 4-1. Channel A Attenuator and Preamplifier Block Diagram

## 4-53. HORIZONTAL MODULE.

4-54. Depending on the setting of the SWEEP/EXT HORIZ switch, the horizontal module can operate either as a horizontal amplifier or time-base generator. To simplify the theory, each mode is explained separately, from input to output, in the following text.

4-55. HORIZONTAL AMPLIFIER. See Figure 4-2 and Schematic 5 in Section VIII. The horizontal module serves as an amplifier when SWEEP/EXT HORIZ switch A4A2S1 is in one of the four EXT HORIZ settings (0.1 to 1 V/DIV). SOURCE switch A4S1 is bypassed, and incoming signals connected to the TRIG & HORIZ INPUT jack (J7) are applied to an attenuator network. The attenuator consists of resistors A4R2 and A4A2R1-R4, compensated by capacitors A4C1 and A4A2C2/C3. Total resistance of the divider is about 1 megohm, and signal attenuation is determined by the tap-off point between resistors. For example: when the SWEEP/EXT HORIZ switch is set to 1 V/DIV the combination of A4R2 and A4A2R1-R3 (about 1 megohm) is in series with the incoming signal, and A4A2R4 (10 kilohms) is in parallel. Thus, attenuation ratio is 100:1. Ratio of the voltage divider is 50:1 at 0.5 V/DIV, 20:1 at 0.2 V/DIV and 10:1 at 0.1 V/DIV.

4-56. In addition to being attenuated, the incoming signal can be direct or capacitively coupled. In the AC setting of COUPLING switch A4S2, capacitor A4A2C1 is in series with the attenuator, and the signal is capacitively coupled.

When the switch is set to DC, the capacitor is shorted, and the incoming signal is direct coupled to the horizontal preamplifier.

4-57. The horizontal preamplifier consists of a three-stage amplifier and a trigger level control circuit. Two things happen when the SWEEP/EXT HORIZ switch (A4A2S1) is set to the EXT HORIZ position: TRIGGER LEVEL potentiometer A4R3 is disconnected, and the short is removed from the Horizontal Vernier potentiometer.

4-58. Input impedance is high and, if no signal is applied, A4A1Q1 base potential is 0V. Consequently, A4A1Q2 emitter voltage is about  $-1.2V$ . Voltage at the emitter of A4A1Q5 is also about  $-1.2V$  when vernier balance adjustment A4A1R10A is properly set. Since the voltage on both sides of A4A1R3 and A4A2R5A is equal, no bias current flows through these resistors, and the circuit is balanced. In addition, current passing through the combination of A4A1R2/R4/R5 is sufficient to create a 1.2V drop across A4A1R4. This voltage drop opposes the voltage at the emitter of A4A1Q2 to produce a quiescent output voltage of about 0V. Thus, with no signal applied, the amplifier is balanced and no output is produced.

4-59. Amplifier gain is primarily determined by the ratio of A4A1R4 to the sum of A4A1R3 and A4A2R5A. Horizontal Vernier A4A2R5A adjusts gain to provide continuous adjustment of the horizontal deflection factor between settings of the SWEEP/EXT HORIZ switch. When

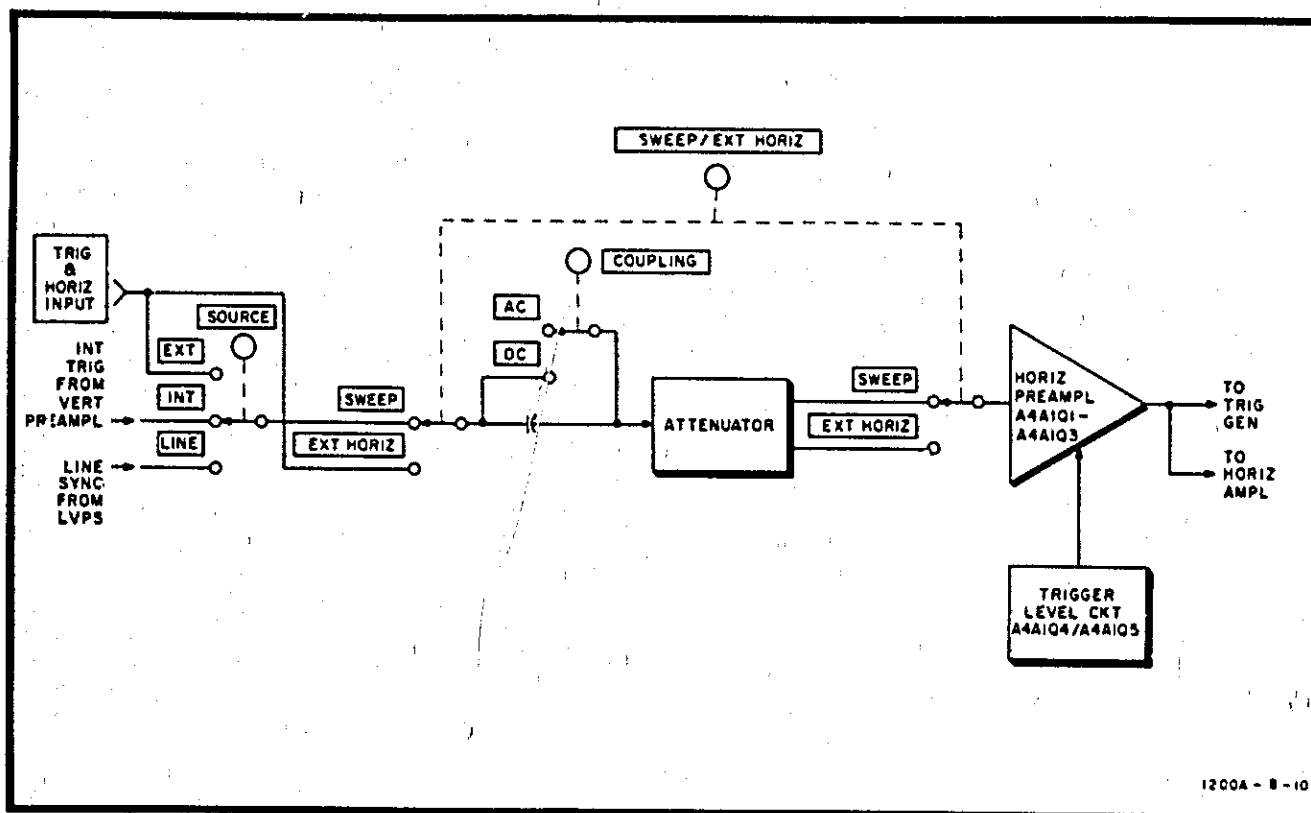


Figure 4-2. Horizontal Preamplifier Block Diagram



the control is set to CAL, or when operating in the sweep mode, the Horizontal Vernier control is shorted. At high frequencies, A4A1C1 provides additional base drive to A4A1Q2. Due to a low A4A1Q1/Q2 base current, dc drift is reduced. Degenerative feedback from the collector of A4A1Q3 to the emitter of A4A1Q2 increases amplifier bandwidth and creates a low output impedance to drive the input of the following stages. Temperature compensation is provided by A4A1Q4/Q5.

4-60. The signal from the preamplifier is next applied through the SWEEP/EXT HORIZ switch (see Figure 4-3 and Schematic 6), A4A2S1, to the horizontal amplifier circuit, A4A1Q10/Q11. Incoming signals are limited to about  $\pm 0.6V$  by diodes A4A1CR5/CR6 at the base of emitter follower A4A1Q10. Dc bias on the base of A4A1Q10 is varied by POSITION control A4R4, via emitter follower A4A2Q1 and the SWEEP/EXT HORIZ switch. A portion of the amplified signal at the collector of A4A1Q11 is applied to the base of A4A1Q10, via A4A1R38, as degenerative feedback. Potentiometer A4A1R36 is used to horizontally center the CRT trace at mid-screen when the POSITION control is at mid-range. The amplified signal at the collector of A4A1Q11 is applied to the output module for further amplification and eventual application to the CRT's horizontal deflection plates.

4-61. **TIME BASE GENERATOR.** When the SWEEP/EXT HORIZ switch is set to SWEEP, the horizontal module generates a sweep signal to provide a time-base reference on the CRT's horizontal axis.

4-62. **Horizontal Preamplifier.** See Figure 4-2 and Schematic 6. Input trigger signals can be selected from three sources by A4S1: external (EXT), internal (INT) or power-line (LINE). External trigger signals are applied at the front panel TRIG & HORIZ INPUT jack, internal trigger signals are taken from the vertical preamplifiers, and line trigger signals are power-line frequency signals taken from the low voltage power supply. The SWEEP/EXT HORIZ and SOURCE switches are interconnected so that the selected trigger signal is applied to A4S2, and the two remaining signals are grounded to prevent interference.

4-63. In the sweep mode of operation, the attenuator network is bypassed and the selected trigger signal is capacitively (AC) or direct (DC) coupled by A4S2 to the input of the horizontal preamplifier. Diodes A4A2CR1/CR2 limit the amplitude of the incoming signal to  $\pm 0.6V$  and, thus, permit triggering over an extended range of input signals.

4-64. The horizontal preamplifier consists of a trigger level circuit and a three stage amplifier with a high input impedance, low output impedance and high current gain. Horizontal Vernier A4A2R5A is shorted and TRIGGER LEVEL potentiometer A4R3 is connected in the sweep mode. Transistors A4A1Q4/Q5 provide temperature

compensation for the amplifier to limit drift and, in addition, provide a high-input-to-low-output impedance for trigger level current.

4-65. TRIGGER LEVEL potentiometer A4R3 selects the point on the incoming signal that will trigger the sweep. When the potentiometer is varied, so is the amount of current through A4A1Q4/Q5. Level range is determined by voltage divider A4A1R7/R8.

4-66. Due to the differential connection of the trigger level and input amplifier circuits, the output voltage at the collector of A4A1Q3 changes in accordance with the setting of the TRIGGER LEVEL control. This voltage is then applied to the input of the trigger generator circuit as a composite of the level and input signals. A variable hold-off level is also taken from the circuit, at the top of A4A1R7, and applied to the sweep generator circuit.

4-67. **Trigger Generator.** The trigger generator can either be triggered by the signal from the horizontal preamplifier, or it can operate automatically. Each type of operation is explained separately in the following paragraphs.

4-68. See Figure 4-3 and Schematic 6. When the TRIGGER LEVEL control is not set to the fully counterclockwise AUTO detent, capacitors A4C2 and A4C3 are shorted from the circuit. In this case, the signal from the horizontal preamplifier is applied direct to the SLOPE switch (A4S4). According to the setting of the SLOPE switch, either the positive or negative-going portion of the incoming signal is used to trigger the sweep cycle.

4-69. The base of A4A1Q6 is grounded, and the incoming signal is applied to the base of A4A1Q7 when the positive slope is selected. During the negative alternation of the incoming signal, the base-to-emitter junction of A4A1Q7 is reverse biased, and the transistor is cut-off. However, when the positive-going alternation of the incoming signal reaches sufficient amplitude, A4A1Q7 conducts with a resultant negative-going collector voltage.

4-70. When the SLOPE switch is set to the negative position, the base of A4A1Q7 is grounded, and the incoming signal is applied to the base of A4A1Q6. During the positive alternation of the incoming signal, A4A1Q6 conducts and cuts off A4A1Q7. The result is no output. However, when the negative alternation of the incoming signal reaches a sufficient amplitude, A4A1Q6 cuts off and A4A1Q7 conducts enough to produce a negative-going collector voltage. Thus, either the positive or negative alternation of the incoming signal can be selected by the SLOPE switch to produce an output at the collector of A4A1Q7.

4-71. The negative-going signal at the collector of A4A1Q7 is amplified and inverted by A4A1Q8. Normally, tunnel diode A4A1CR4 is in the low voltage state. However, as the collector of A4A1Q8 rises in a positive

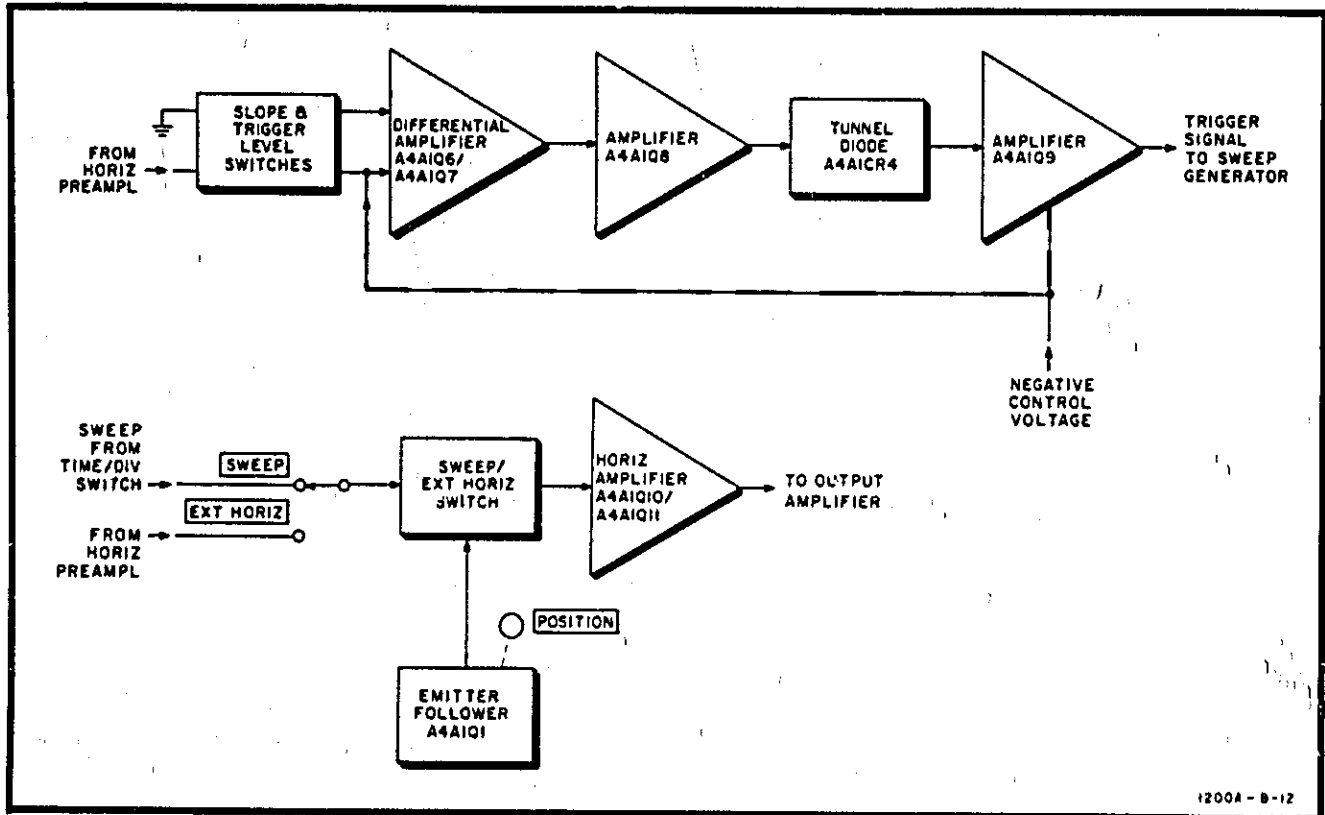


Figure 4-3. Trigger Generator and Horizontal Amplifier Block Diagram

direction, more current flows through the tunnel diode until it finally switches to the high voltage state. This increase in voltage, combined with the pre-bias voltage from the combination of A4A1R25-R28, is sufficient to turn on A4A1Q9. As a result, a fast-rise, negative-going step is produced at the collector of A4A1Q9.

4-72. When the TRIGGER LEVEL control is set fully counterclockwise to the AUTO detent, the trigger generator automatically generates triggers at about a 40-Hz rate to present a horizontal time base even in the absence of an incoming horizontal signal. However, incoming signals of the proper amplitude and frequency override the automatic trigger pulses and start the sweep cycle.

4-73. During automatic operation, capacitors A4C2 and A4C3 are switched into the input of the differential amplifier. Thus, the low resistance (ground) dc reference for the bases of A4A1Q6/Q7 is removed. The base of A4A1Q6 is held near ground potential by A4A1R15, but the base of A4A1Q7 is free to follow an auto feedback signal from the collector of A4A1Q9.

4-74. Automatic triggering rate is determined by the RC time constant of A4A1R31/C15 and is about 40 Hz. If an incoming signal of sufficient amplitude and greater than 50 Hz is applied, it will override the automatic operation. Since capacitors A4C2-C3 are inserted in the circuit, the TRIGGER LEVEL control is ineffective, and the voltage level at which overriding signals control the circuit is not selectable.

4-75. Sweep Generator. See Figure 4-4 and Schematic 7. Depending on the setting of the MODE switch (A4S5), the sweep generator can:

- a. continuously be triggered to generate sweep signals (normal sweep mode).
- b. generate only one sweep when triggered (single sweep mode). The sweep generator must then be manually reset before further trigger signals can produce additional sweep signals.
- c. run-free (free-run sweep mode).

4-76. Normal Sweep. Transistors A4A1Q12/Q13 form a complementary trigger Schmitt circuit; that is, both transistors either conduct or don't conduct, simultaneously. The base of A4A1Q12 is armed (set to about 0 volt) by control Schmitt A4A1Q20's emitter when the MODE switch (A4S5) is set to NORM. However, with no input trigger, the trigger Schmitt transistors are cut off.

4-77. When a negative-going trigger signal is applied, it is differentiated by the input resistance/capacitance and applied, via A4A1CR7, to the emitter of A4A1Q12. Transistor A4A1Q12 then conducts, and the voltage drop at the collector turns on A4A1Q13. The voltage at the emitter of A4A1Q13 then turns-on A4A1Q14, and a negative-going voltage pulse is developed at the emitter.

4-78. The negative-going pulse at the emitter of A4A1Q14 is applied to three places:

- a. to the multivibrator in the output module for alternate channel switching.
- b. to the gate amplifier in the high voltage power supply to unblank the CRT during sweep time.
- c. to the emitter of A4A1Q15 and the anode of A4A1CR15.

4-79. Before the negative-going pulse is applied to the emitter of A4A1Q15, the transistor conducts heavily. As a result, a large voltage is dropped across collector load resistor A4A1R52, and the collector becomes positive enough to forward bias diodes A4A1CR9-CR11. The potential at the gate of source follower A4A1Q16 is then about +5.4V. Amplifier A4A1Q16/Q17/Q18 conducts and A4A1Q15/Q23 form a comparator to drive the emitter of A4A1Q18 to about +5.4V. Since both sides of the selected sweep timing capacitor (either A4A2C5 or A4A2C6, depending on the setting of Time/Division) are equal (about +5.4V), the capacitor has no charge.

4-80. When a trigger signal is applied to the input of the sweep generator, a negative-going gate signal is coupled to the emitter of A4A1Q15 and the anode of A4A1CR15. Both of these devices are reverse biased and neither conducts. With no A4A1Q15 current, the collector moves toward the -50V supply potential and reverse biases diodes A4A1CR9-CR11. Timing capacitor A4A2C5 or A4A2C6 then starts to charge via the following long time

constant path: through the timing resistance (A4A2R12-R18), A4A2C5/C6, A4A1R58 and emitter follower A4A1Q18. At the same time, A4A1Q17 and A4A1Q18 decrease conduction, and the emitter voltage of A4A1Q18 moves toward the +50V supply potential at a rate determined by the time constant of the sweep timing capacitance and resistance. Since current through the timing capacitor is constant, the linear ramp portion of the sweep signal is produced.

4-81. The rising ramp at the emitter of A4A1Q18 is applied through the Time/Division switch (Schematic 8) to the output module. By changing the sweep charge time and charge potential, ramp slope can be altered for the various sweep speeds. Ramp slope can be varied between settings of the Time/Division switch by Sweep Vernier potentiometer A4A2R58 to allow discrete adjustment of the CRT display. The Time/Division switch settings are calibrated on the front panel only when A4A2R5B is set fully clockwise to the CAL detent. Emitter follower A4A1Q26 is a voltage source for the sweep timing resistors, and A4A1R10B/C/D are sweep timing adjustments.

4-82. See Figure 4-4 and Schematic 7. The rising ramp at the emitter of A4A1Q18 is also applied to the hold-off discharge, ramp control and control Schmitt circuits. As the ramp rises, A4A1Q24 turns on and discharges the hold-off capacitor (A4A2C7-C9, selected by the Time/Division switch). When the ramp voltage rises enough to overcome the forward bias on A4A1Q21, the transistor turns off and consequently turns off A4A1Q20.

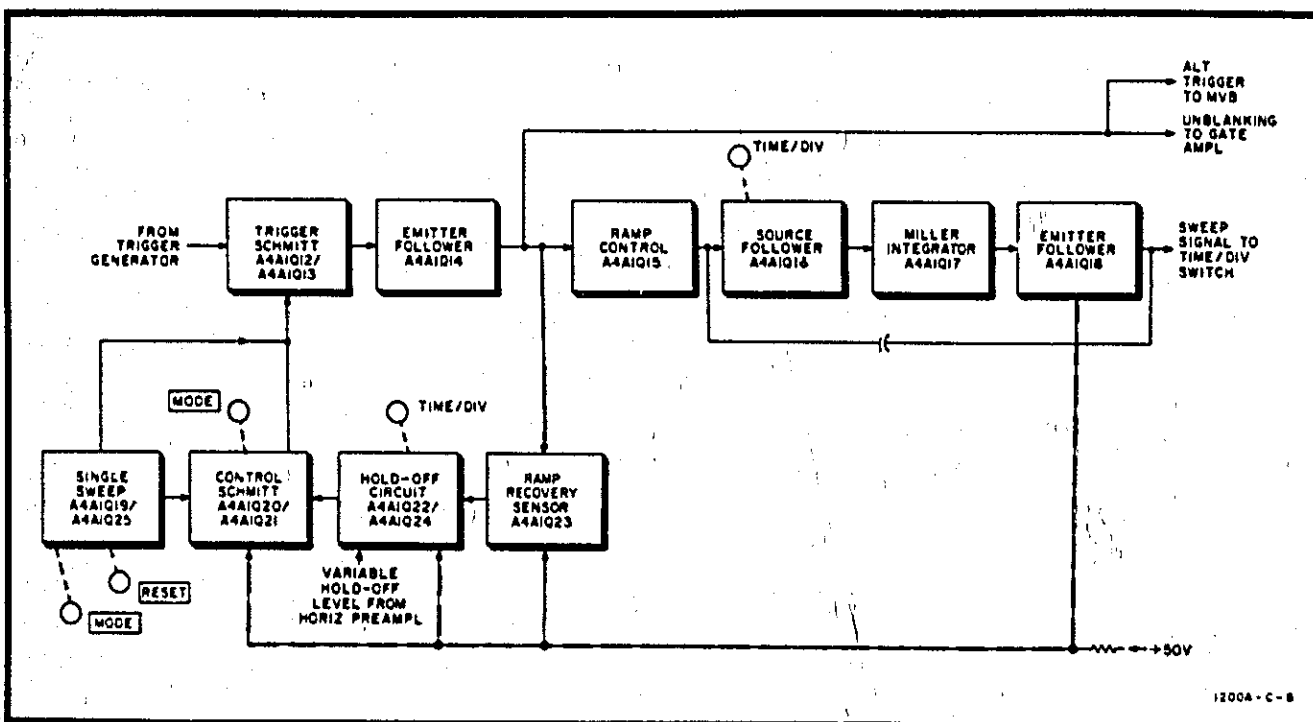


Figure 4-4. Sweep Generator Block Diagram

4-83. When the control Schmitt turns off, it removes the arming voltage applied to the base of A4A1Q12. Emitter follower A4A1Q14 then turns off, and the resulting positive-going voltage step at the emitter is applied to the gate amplifier in the high voltage power supply to blank the CRT. This positive-going voltage step also turns on ramp control transistor A4A1Q15. The ramp control transistor's collector voltage then moves in a positive direction and forward biases diodes A4A1CR9-CR11. Transistors A4A1Q17 and A4A1Q18 then conduct heavily, and the sweep timing capacitor discharges through the relatively fast path consisting of: through A4A1Q18 collector to emitter, A4A1R58, A4A2C5/C6, A4A1CR9-CR11, and into the collector of A4A1Q15. This action generates the flyback portion of the sweep signal.

4-84. The positive-going voltage step applied to the emitter of A4A1Q15 just prior to the timing capacitor's discharge also forward biases A4A1CR15. However, A4A1Q23 is still turned off by the ramp voltage. When the ramp falls to its minimum value, A4A1Q23 turns on and charges the hold-off capacitor (A4A2C7-C9). Hold-off time is defined as the minimum time between the end of the flyback portion of the sweep signal and the beginning of the next ramp. A positive-going hold-off ramp is produced as the hold-off capacitor charges. This ramp is applied to A4A1Q21 by emitter follower A4A1Q22. Also, a trigger level signal is applied to the base of A4A1Q22 to allow stable triggering of complex waveforms.

4-85. When the hold-off ramp potential is sufficient to forward bias A4A1Q21, it conducts and turns on A4A1Q20. Once again the control Schmitt circuit provides an arming voltage to the base of trigger Schmitt A4A1Q12, and it then stands by to initiate another sweep cycle upon reception of a trigger signal from the trigger generator.

4-86. Single Sweep. When the MODE switch is set to the SINGLE position, an incoming trigger signal produces one horizontal sweep cycle. The sweep generator must then be manually reset before the next trigger signal can produce another sweep cycle.

4-87. The main difference between single sweep and normal sweep is that the control Schmitt doesn't re-arm the trigger Schmitt circuit following the completion of a sweep ramp. This makes it impossible to start a new sweep cycle until the RESET (A4S6) pushbutton is pressed.

4-88. When the RESET pushbutton switch is pressed, the voltage across A4A1R81 increases to about +28V. This voltage, applied to the base of A4A1Q21, turns off the control Schmitt regardless of ramp condition. As a result, the trigger Schmitt is not armed, and the sweep is terminated.

4-89. During this time, the ramp recovery and hold-off circuits operate but are unable to turn the control Schmitt back on to arm the trigger Schmitt. Capacitors A4A1C30

and A4A1C31 charge to the +28V potential across A4A1R81, and arming delay transistor A4A1Q25 turns on. Current flowing from A4A1Q25 passes through A4A1R77 and A4A1R43, creating a voltage drop that reverse biases A4A1CR7. This prevents incoming trigger signals from reaching the trigger Schmitt circuit.

4-90. When the RESET pushbutton switch is released, A4A1C30 discharges and maintains the reverse bias on A4A1CR7 for about 0.5 second. Capacitor A4A1C31 discharges through A4A1R81 and A4A1R84, and the voltage drop across A4A1R84 then turns on A4A1Q21. The base of A4A1Q20 then goes positive, and the transistor conducts to provide 0 volt at the base of A4A1Q12 and arms the trigger Schmitt. When the 0.5-second arming delay ends, A4A1Q25 turns off. This removes the reverse bias from A4A1CR7 and allows incoming trigger signals to be applied to the trigger Schmitt. In addition, lamp A4DS1 lights to indicate that the circuit is armed.

4-91. The first incoming trigger signal applied to the trigger Schmitt after the circuit is armed initiates a sweep cycle as previously explained in the normal sweep mode, with the following exception. The control Schmitt circuit senses the maximum ramp voltage, turns off, and terminates the sweep ramp. Both the recovery sense and hold-off circuits function normally but are unable to overcome a fixed bias set by A4A1R84. Therefore, the control Schmitt doesn't turn on and re-arm the trigger Schmitt unless the RESET pushbutton switch is pressed again.

4-92. Free-Run Sweep. When the MODE switch is set to the FREE RUN position, the sweep generator runs-free at a rate determined by the Time/Division switch and can't be controlled by an incoming trigger signal.

4-93. Resistor A4A1R77 is connected to the -50V supply by the MODE switch during free-run operation. The voltage drop across A4A1R77 then drives the emitter of A4A1Q12 so far negative that the trigger Schmitt changes state each time it receives an arming signal from the control Schmitt circuit. Thus, an incoming signal from the trigger generator is not needed to start a sweep cycle.

#### 4-94. OUTPUT MODULE.

4-95. The output module consists of multivibrator-switched current sources and vertical and horizontal output amplifiers.

4-96. MULTIVIBRATOR. See Figure 4-5 and Schematic 4. Operation of multivibrator A3Q15/Q16 is set by DISPLAY switch A3S1. The multivibrator is:

- a. a switch (one side on and the other off) for A, B, and A vs. B displays.
- b. bistable for ALT (alternate) channel displays.

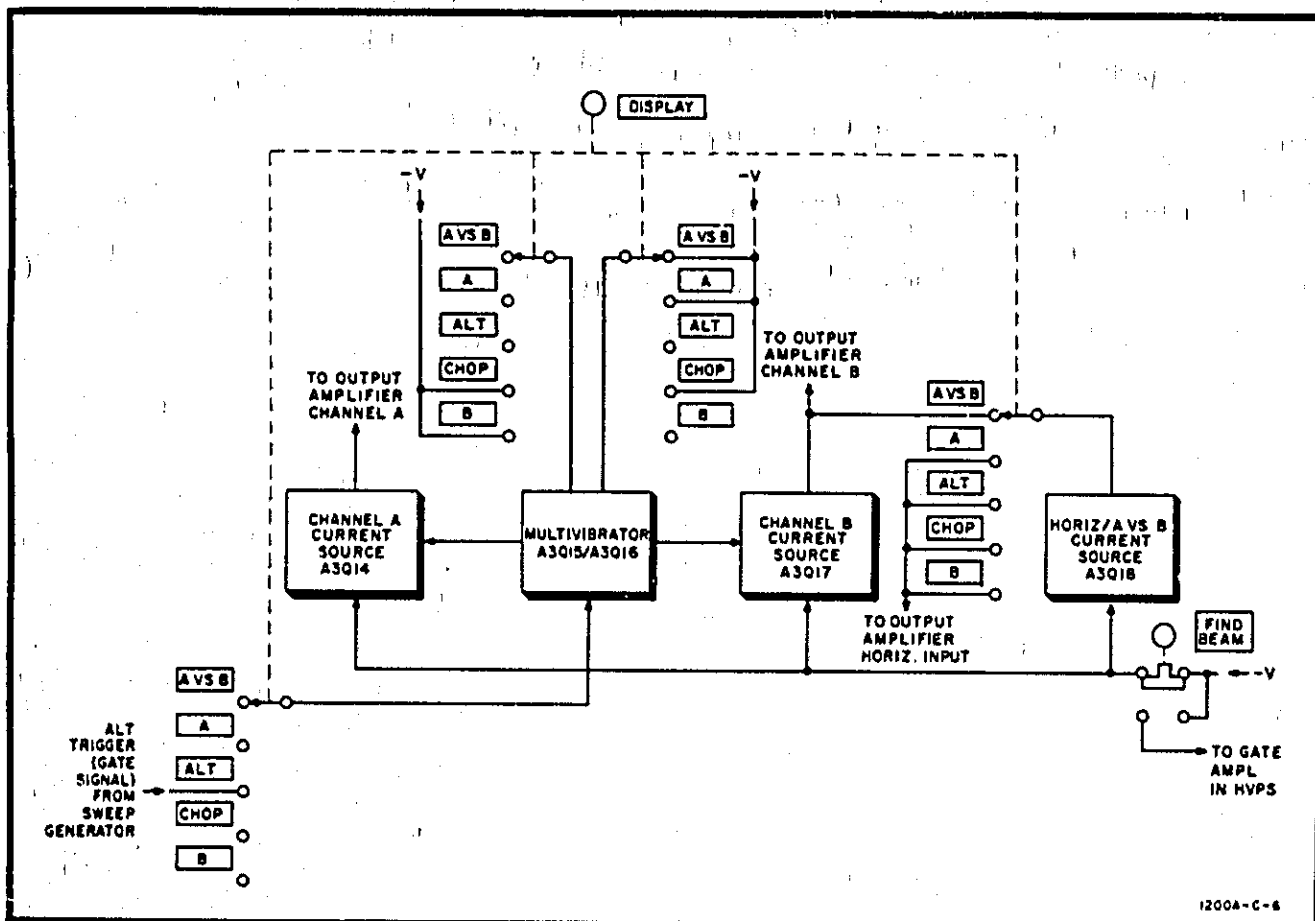


Figure 4-5. Multivibrator Block Diagram

c. astable at about 100 kHz for CHOP (mixed) displays.

4-97. In the A vs. B setting,  $-50V$  is applied through the DISPLAY switch (A3S1) and A3R46 to the base of A3Q15. As a result, A3Q15 turns on and the collector moves in a positive direction. This positive-going voltage ensures that A3Q16 won't conduct, and it forward biases the base-to-emitter junction of A3Q14. Current source A3Q14 then conducts to supply current to the channel A vertical amplifier (Schematic 3). When the DISPLAY switch is set to A, operation is the same, and current is again supplied to the channel A vertical amplifier.

4-98. The  $-50V$  is disconnected from the base of A3Q15 and applied to the base of A3Q16, via A3R44, when the DISPLAY switch is set to B. Transistor A3Q16 then conducts, ensuring no A3Q15 conduction, and forward biases the base-to-emitter junction of A3Q17. Current source A3Q17 then conducts to supply current to the channel B vertical amplifier.

4-99. When the DISPLAY switch is set to ALT, neither A3R44 or A3R46 is connected to the  $-50V$  supply, and the alt trigger (unblanking pulse) from the sweep generator is applied to the anodes of A3CR25 and A3CR26. The

multivibrator then operates in a bistable mode, turning current sources A (A3Q14) and B (A3Q17) alternately on and off at the rate of the unblanking pulse. Thus, channel A current is supplied during one sweep and channel B current is supplied during the succeeding sweep.

4-100. The unblanking pulse is disconnected and  $-50V$  is applied through A3R44/R46 to the bases of both A3Q15/Q16 when the DISPLAY switch is set to CHOP. In this mode, the multivibrator is astable, and it free-runs at about a 100 kHz rate. When A3Q15 turns on, it turns off A3Q16 and turns on A3Q14 to supply channel A current for the vertical amplifier. Then the cycle reverses. Transistor A3Q16 turns on, turning off A3Q15 and turning on A3Q17 to supply channel B current for the vertical amplifier. Unlike ALT operation, the channels switch independent of the sweep signal at about a 100 kHz rate.

4-101. Current source A3Q18 always conducts. When the DISPLAY switch is set to A vs. B, it supplies current to the channel B vertical amplifier while A3Q14 supplies current to the channel A vertical amplifier. In all other setting of the DISPLAY switch, A3Q18 supplies current to the horizontal amplifier.

4-102. Current is normally supplied to the current sources from the -50V power supply, via the FIND BEAM pushbutton switch (S2) and A3R61. When the FIND BEAM switch is pressed, A3R61 is disconnected. Current is then supplied from the filtered -50V supply, via A3R58. Since the resistance of A3R58 is greater than that of A3R61, the current sources supply less current to the output amplifiers. And, since less current is supplied to the output amplifiers, vertical and horizontal deflection is

decreased. The -50V that was connected to A3R61 is now applied to the gate amplifier in the high voltage power supply by the FIND BEAM switch. As a result, the CRT is unblanked. An offset CRT display can thus be returned to the viewing area.

4-103. Emitter follower A3Q13 is used to apply a chop blanking signal to the gate amplifier in the high voltage power supply when CHOP is selected by the DISPLAY

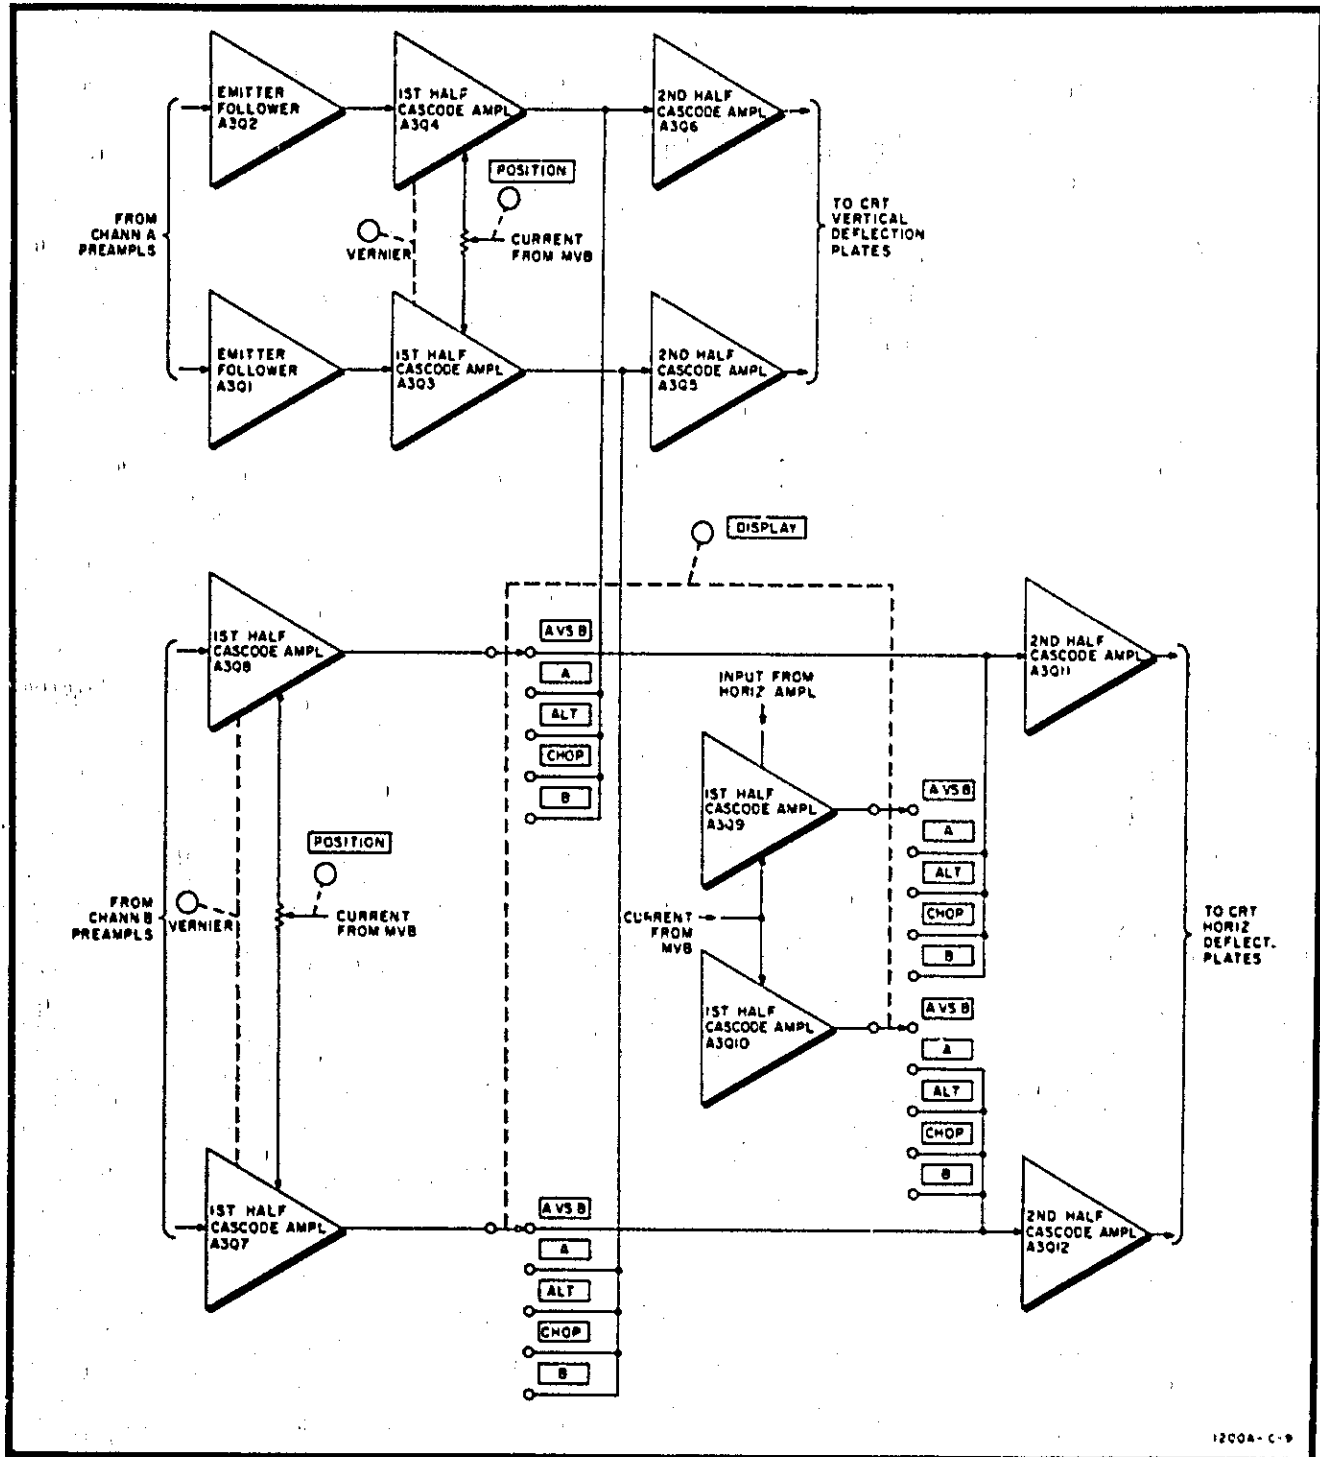


Figure 4-6. Output Amplifier Block Diagram

switch. This signal, taken from the multivibrator, blanks the CRT during switching time between channels.

4-104. Either the channel A or B display signal from the vertical preamplifiers can be applied as an internal trigger signal to the horizontal preamplifier. Except when the DISPLAY switch is set to B, the internal trigger signal is always taken from the channel A preamplifier.

4-105. **OUTPUT AMPLIFIER.** See Figure 4-6 and Schematic 3. Channel A signals are applied to the bases of A3Q1 and A3Q2 from the vertical preamplifiers. These two emitter followers isolate the preamplifier from chop and alt signals present in the emitters of A3Q3 and A3Q4. This isolation is needed to prevent interaction with the channel A trigger signal.

4-106. The channel B signal is applied to the bases of A3Q7 and A3Q8 from the channel B preamplifier. Isolation transistors are not needed because the channel B signal isn't used for triggering in the chop or alt modes.

4-107. Only operation of the channel A amplifier is explained in detail in the following paragraphs. The channel B and horizontal amplifiers are similar.

4-108. Diodes A3CR3-CR6 allow fast recovery of the amplifiers if they are driven into saturation. Protection diodes A3CR7 and A3CR8 prevent A3Q3 and A3Q4 emitter breakdown if the amplifier is overdriven. The input is neutralized by A3C1 and A3C2 to prevent coupling between channels when both are connected to A3Q5/Q6, as is the case in the alt or chop modes.

4-109. Output amplifier gain is about 40 when Vernier potentiometer A1A2R16 is set to the CAL detent. Since the vertical output stage is a differential cascode amplifier, gain is approximately equal to the ratio of A3R12 or A3R13 to one-half of the resistance between the emitters of A3Q3 and A3Q4.

4-110. Whether the channel A or B amplifiers are turned on or off is determined by the current sources applied to the arm of the POSITION potentiometers (R6 for channel A and R7 for channel B). Either channel (A or B) or both, at a 100 kHz rate (CHOP) or alternating at the sweep rate (ALT), can be applied to the second half of the output cascode amplifier (A3Q5/Q6), depending on the setting of the DISPLAY switch. Output signals are then applied to the CRT's vertical deflection plates.

4-111. Operation of the horizontal output amplifier is similar to that of the vertical output amplifier. The horizontal signal or sweep signal (depending on the SWEEP/EXT HORIZ switch setting) is applied to the base of A3Q9, converted to a differential signal, amplified and then applied to the CRT's horizontal deflection plates.

4-112. Current is supplied to the emitters of A3Q9 and A3Q10 from the multivibrator circuit at all settings of the

DISPLAY switch except A vs. B. In this setting, the horizontal signal is disconnected from the second half of the cascode amplifier (A3Q11/Q12), and the channel B signal from the vertical amplifier is applied instead.

#### 4-113. POWER SUPPLY MODULES.

4-114. There are two power supplies in this instrument: a low voltage supply and a high voltage supply. Each is explained separately in the following text.

4-115. **LOW VOLTAGE SUPPLY.** See Figure 4-8 and Schematic 9. Line voltage is transformed, rectified and filtered into two regulated outputs (+50V and -50V) and one unregulated output (+180V). In addition, 6.3 Vac is applied to the CRT filament, a calibrating signal is generated, and a power-line frequency sync signal is provided for the horizontal circuits.

4-116. **Primary Power.** Either 115 or 230 Vac ( $\pm 10\%$ , single phase, 47 to 440 Hz) can be applied as operating power, depending on the voltage selector switch setting. When POWER switch S1 is turned on, lamp DS1 lights to indicate the presence of primary power, and fuse F1 prevents excessive input current from damaging the instrument. Since the instrument is fully transistorized (except for the CRT), no fan is needed, and cooling is by convection.

4-117. If 115 Vac is used as primary power, one side of the line voltage is applied to pins 1 and 3 of T1, and the other side is connected to pins 2 and 4. Thus, the two primary windings are in parallel. This is done so that primary power is divided between the two windings, and neither is as susceptible to breakdown.

4-118. When T1 is wired to accept 230 Vac, windings 1 to 2 and 3 to 4 are connected in series. This decreases the transformer step-up ratio by a factor of 50% so that secondary voltages remain the same as when 115 Vac is applied.

4-119. **Basic Regulated Power Supply.** A simplified block diagram of the type regulator used in the low voltage power supply is shown in Figure 4-7. In effect, this circuit

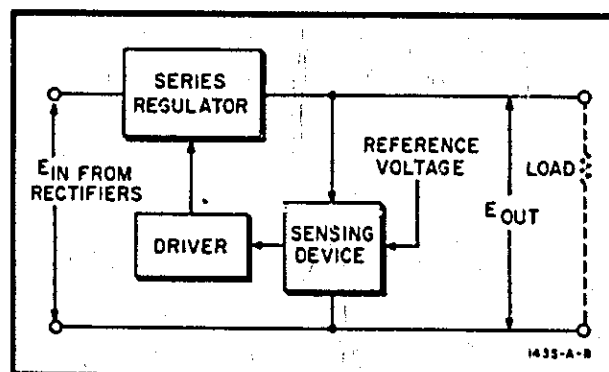


Figure 4-7. Regulated Power Supply Block Diagram

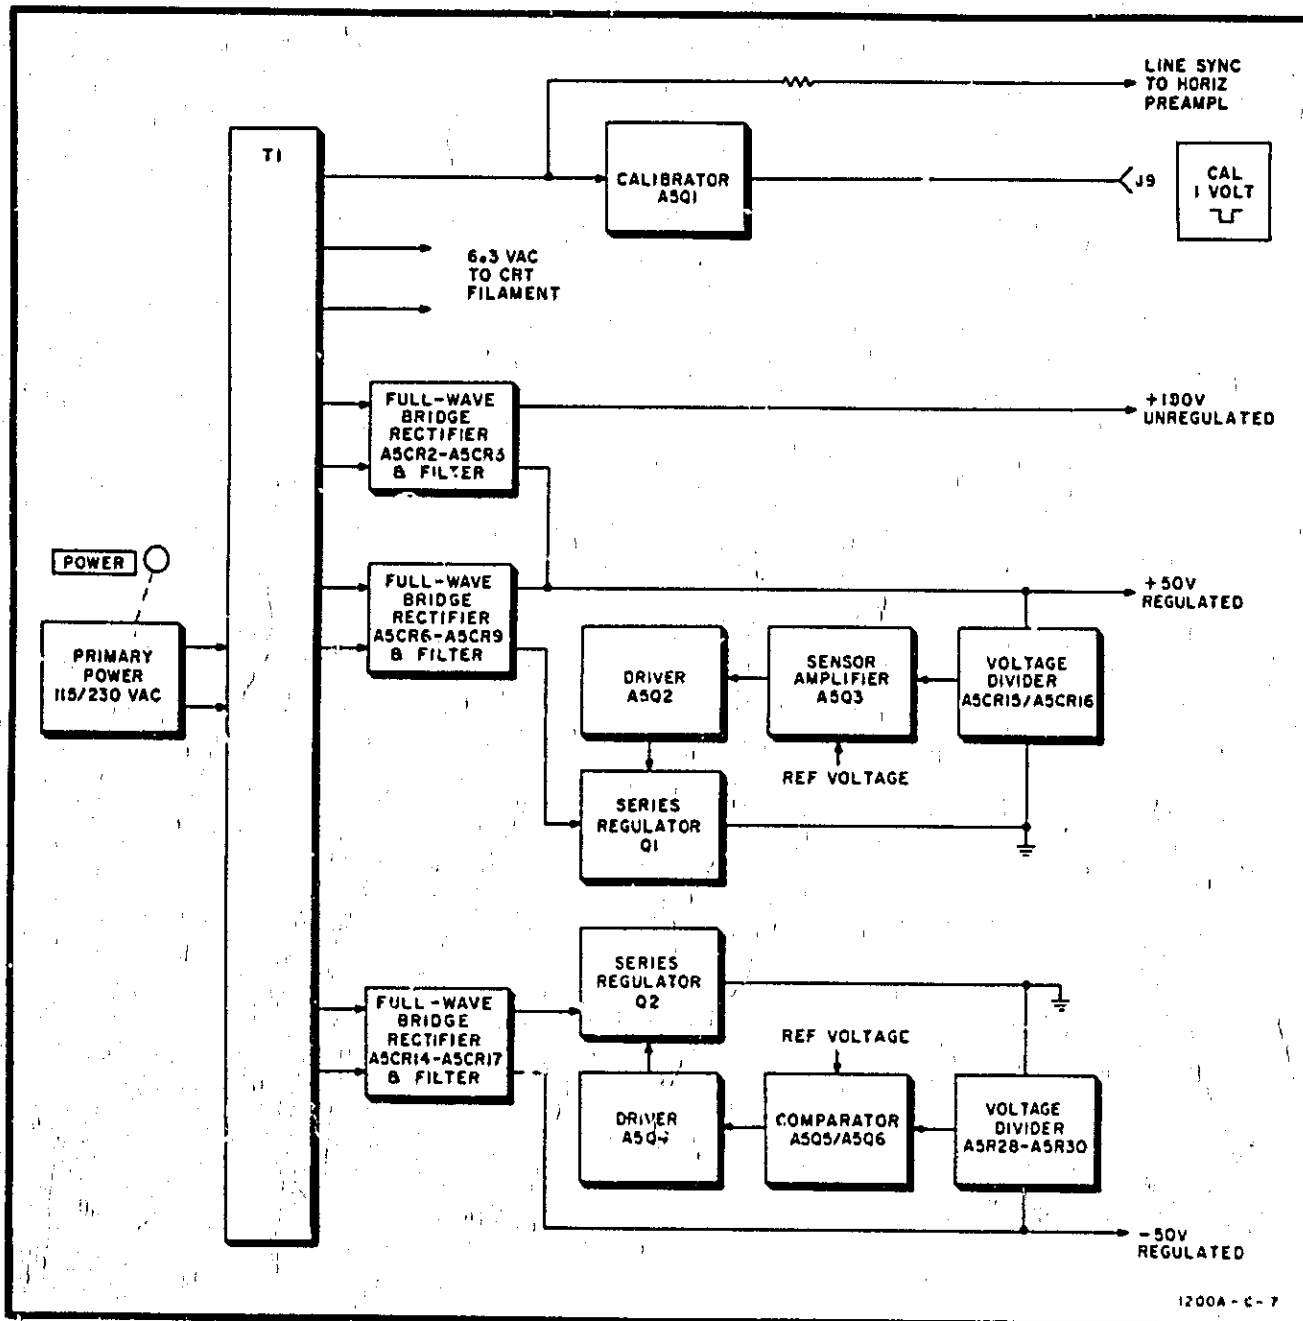


Figure 4-8. Low Voltage Power Supply Block Diagram

is simply a self-adjusting voltage divider. Its purpose is to keep output voltage constant.

4-120. Input voltage, from the rectifiers, is dropped proportionately across the series regulator and the parallel combination of load and sensing device. Changes in output voltage are detected by the sensing device (either a comparator or common emitter amplifier) and are then compared against a reference voltage. If sensor voltage doesn't agree with the reference voltage, a difference voltage is created and applied to the driver.

4-121. The driver, in turn, controls series regulator bias. Since the series regulator acts as a variable resistance, it

either increases or decreases conduction. The resulting voltage drop opposes the output voltage change and, thus, output voltage remains at a constant level.

4-122. Secondary Power. AC voltage across each secondary winding (except calibrator and CRT filament voltages) is full-wave rectified by a bridge circuit. The resulting dc voltages are filtered and applied to the following circuits for regulation. Since the -50V supply acts as a reference for the other supplies, it is explained first.

4-123. -50 Volt Supply. From pins 9 and 10 of T1, secondary ac voltage is full-wave bridge rectified by



A5CR14-CR17. The resulting dc voltage, pulsating at 120 Hz, is filtered primarily by A5C5. Resistor A5R18 is a bleeder placed at the input as a protective device to discharge A5C5 if fuse A5F3 opens. Current is limited by A5R17 and, in case A5F3 opens, A5CR21 protects A5C9 from reverse charging.

4-124. Output voltage is sampled at voltage divider A5R28/R29/R30 and applied to the comparator, A5Q5/Q6. This voltage, applied to the base of A5Q6, is compared against a reference voltage set by A5VR4 at the base of A5Q5. A voltage difference is then amplified and applied to the driver, A5Q4. In turn, the driver changes the bias applied to series regulator Q2. This, in effect, changes the resistance of the regulator and keeps output voltage constant.

4-125. In case the -50V supply output is shorted to ground, A5VR3 protects the series regulator by turning on and causing A5Q2 to draw enough current to open fuse A5F3. RC network A5C6 and A5R21 is a high frequency roll-off path for frequencies above 10 kHz, and A5C7 bypasses noise caused by zener diode A5VR4. Diodes A5CR18-CR20 are protection diodes.

4-126. +50 Volt Supply. The +50V supply functions similar to the -50V supply. Sensor amplifier A5Q3 is

referenced to the -50V supply. A voltage variation in the +50V supply output is sensed at the base of A5Q3, amplified and applied to the series regulator by driver A5Q2. The series regulator (Q1) then compensates with more or less series resistance and restores output voltage to the original level.

4-127. Bias for the driver is provided by A5VR2, and A5VR1 protects the series regulator. Diodes A5CR11 and A5CR12 are emitter-to-base protection diodes, and A5CR13 protects A5C2 and A5C4 by preventing the supply voltage from going negative. Frequencies above 10 kHz are rolled off by A5C3 and A5R12.

4-128. +180 Volt Supply. This supply consists of an unregulated +130V supply added onto the +50V supply. Input voltage is full-wave rectified by A5CR2-CR5, fused by A5F1, and filtered by A5C1. Resistor A5R6 is a bleeder. Since the supply is not regulated, output voltage may vary with the line voltage or load changes.

4-129. Calibrator. This circuit produces a 1V pk-pk power-line frequency square wave. Transistor A5Q1 operates as a switch. During the negative alternation of the power-line frequency signal taken from T1 pin 6, the transistor saturates, and output voltage at the front panel calibrator jack (J9) is 0V. The transistor cuts off during

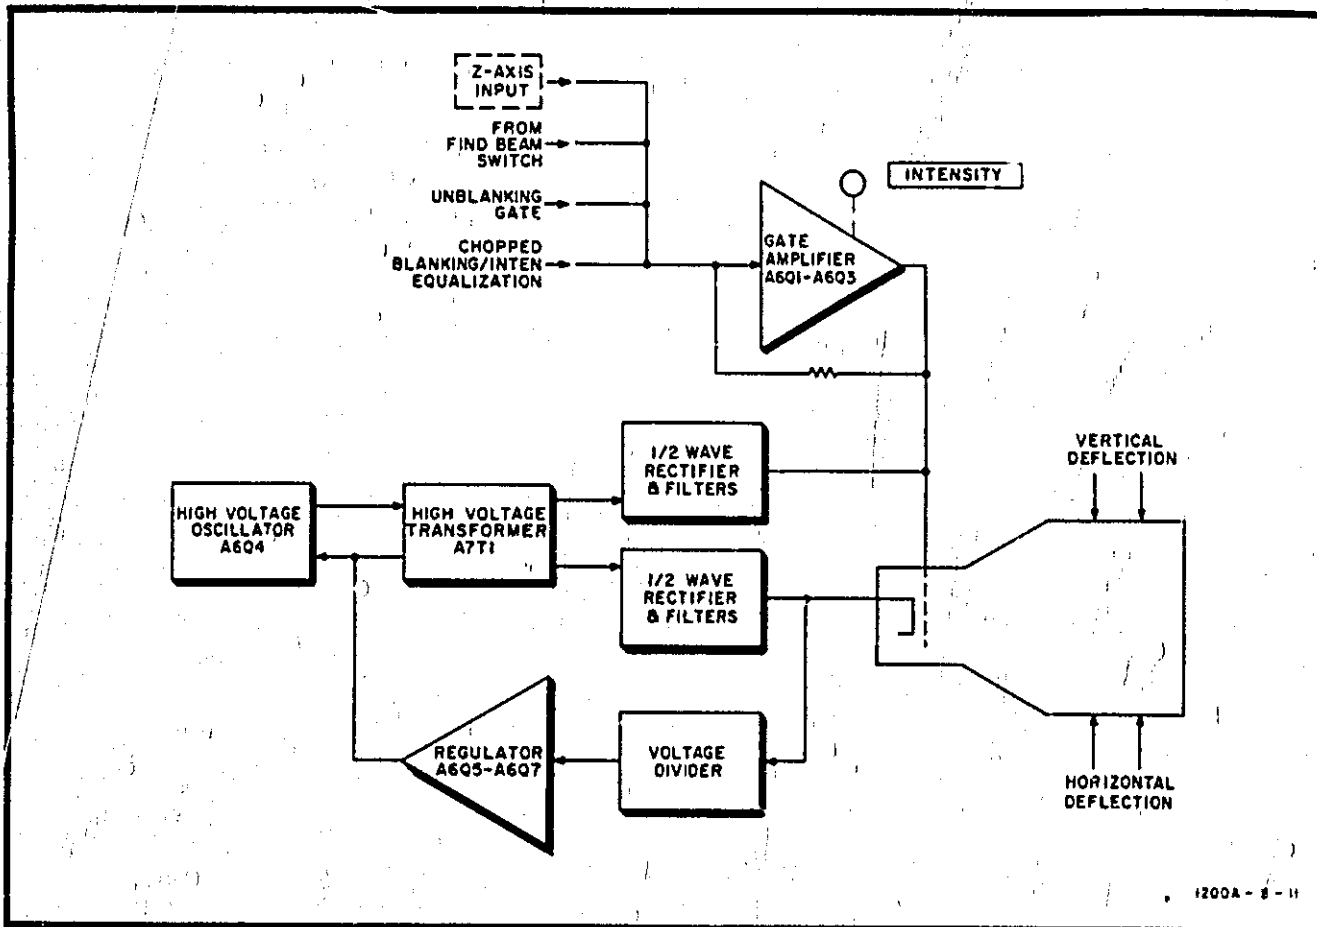


Figure 4-9. High Voltage Power Supply Block Diagram

the positive alternation of the input signal, and output voltage is set to -1V by voltage divider A5R3-R5. The signal that drives the calibrator is also attenuated by A5R1 and applied to the horizontal module for use as a power-line frequency sync signal.

4-130. HIGH VOLTAGE SUPPLY. See Figure 4-9 and Schematic 10. The high voltage power supply consists of three circuits: a high voltage regulator, high voltage rectifiers, and a gate amplifier. Each of these is explained separately, as follows.

4-131. High Voltage Regulator. High voltage oscillator A6Q4 produces a 50 kHz, 100V pk-pk, sine wave. To sustain oscillations, regenerative feedback is coupled from collector to base via the mutual inductance of A7T1. This signal is then stepped up in amplitude by the transformer and later rectified and filtered by the secondary circuits.

4-132. High voltage is regulated as follows. Half-wave rectified and filtered high voltage from A7CR2 is fed back to high-input-impedance field effect transistor A6Q7 by A6R27. In combination with A6R26 and A6R17B, resistor A6R27 forms a 45:1 (approximately) voltage divider. Since the top end of A6R26 is connected to the +50V supply, the gate of A6Q7 is close to ground potential. Bias for A6Q7 is set by A6R17B. Since this adjustment sets the bias of the input transistor, it also controls the conducting levels of A6Q5 and A6Q6 and sets the bias of the high voltage oscillator.

4-133. A variation in feedback voltage at the gate of A6Q7 is amplified by A6Q5-Q7 and applied to the base of A6Q4 to reestablish output voltage.

4-134. High Voltage Rectifiers. CRT cathode voltage is derived from the bottom secondary winding of A7T1. This ac voltage is half-wave rectified by A7CR2 and filtered by a capacitive input pi-filter network. A portion of this high voltage is returned to the high voltage regulator by means of A6R27 to provide a regulated -2915V CRT cathode potential.

4-135. In combination with A6R28-R32, FOCUS control R4 forms a voltage divider connected to the -2915V supply and provides CRT focusing potential.

4-136. CRT grid voltage is developed by the voltage divider string across the top secondary winding of high voltage transformer A7T1. The ac voltage is half-wave rectified by A7CR1 and filtered by A7C1 and A7R1 before it is applied to the voltage divider. Intensity Limit adjustment A6R14 is used to adjust current through the

divider and, thus, limit the range of INTENSITY potentiometer R3. Both intensity potentiometers adjust CRT beam intensity by changing the grid-to-cathode bias.

4-137. CRT grid potential is normally about -2955V. Since grid potential is normally about 50V more negative than the cathode, the CRT beam is turned off. Neon bulbs A6VR2 and A6VR3 protect A6CR8. The grid is prevented from becoming excessively positive with respect to the cathode by A6CR8/R37.

4-138. Astigmatism, roundness of the spot, is adjusted by A6R17A, and R2 is used to align the trace with the CRT graticule.

4-139. Gate Amplifier. The gate amplifier, A6Q1-Q3, is a current-fed operational amplifier. Inputs to the base of A6Q1 are from the following sources:

- a. INTENSITY potentiometer R3.
- b. the unblanking gate from the sweep generator.
- c. chopped blanking/intensity equalization from the sweep generator.
- d. Z-axis signals from TB1.
- e. BEAM FINDER S2.
- f. feedback current through A6C3/R12.

4-140. These input currents are summed at the base of A6Q1, converted to a voltage, amplified by A6Q3 and applied to the CRT's grid as bias. Output voltage at the collector of A6Q3 is approximately equal to the current through A6C3 multiplied by the resistance of A6R12.

4-141. Transistor A6Q2 is a constant current source at low frequencies and an active pull-up at high frequencies. If the current through A6C3 increases, feedback current through A6C3/R12 increases, and less current is available for A6Q3. The collector voltage of A6Q3 then moves in a positive direction, reducing CRT grid bias and increasing CRT conduction. When a less negative signal is applied to the cathode of A6CR3, feedback current decreases and the current through A6Q3 increases. Thus, the collector of A6Q3 moves in a negative direction to increase CRT bias and decrease CRT conduction.

4-142. Diodes A6CR1/CR2/CR4 prevent the amplifier from being overdriven, and A6CR5 prevents the collectors of A6Q2/Q3 from being more positive than 50.6V. Due to the feedback current, amplifier gain is stable.

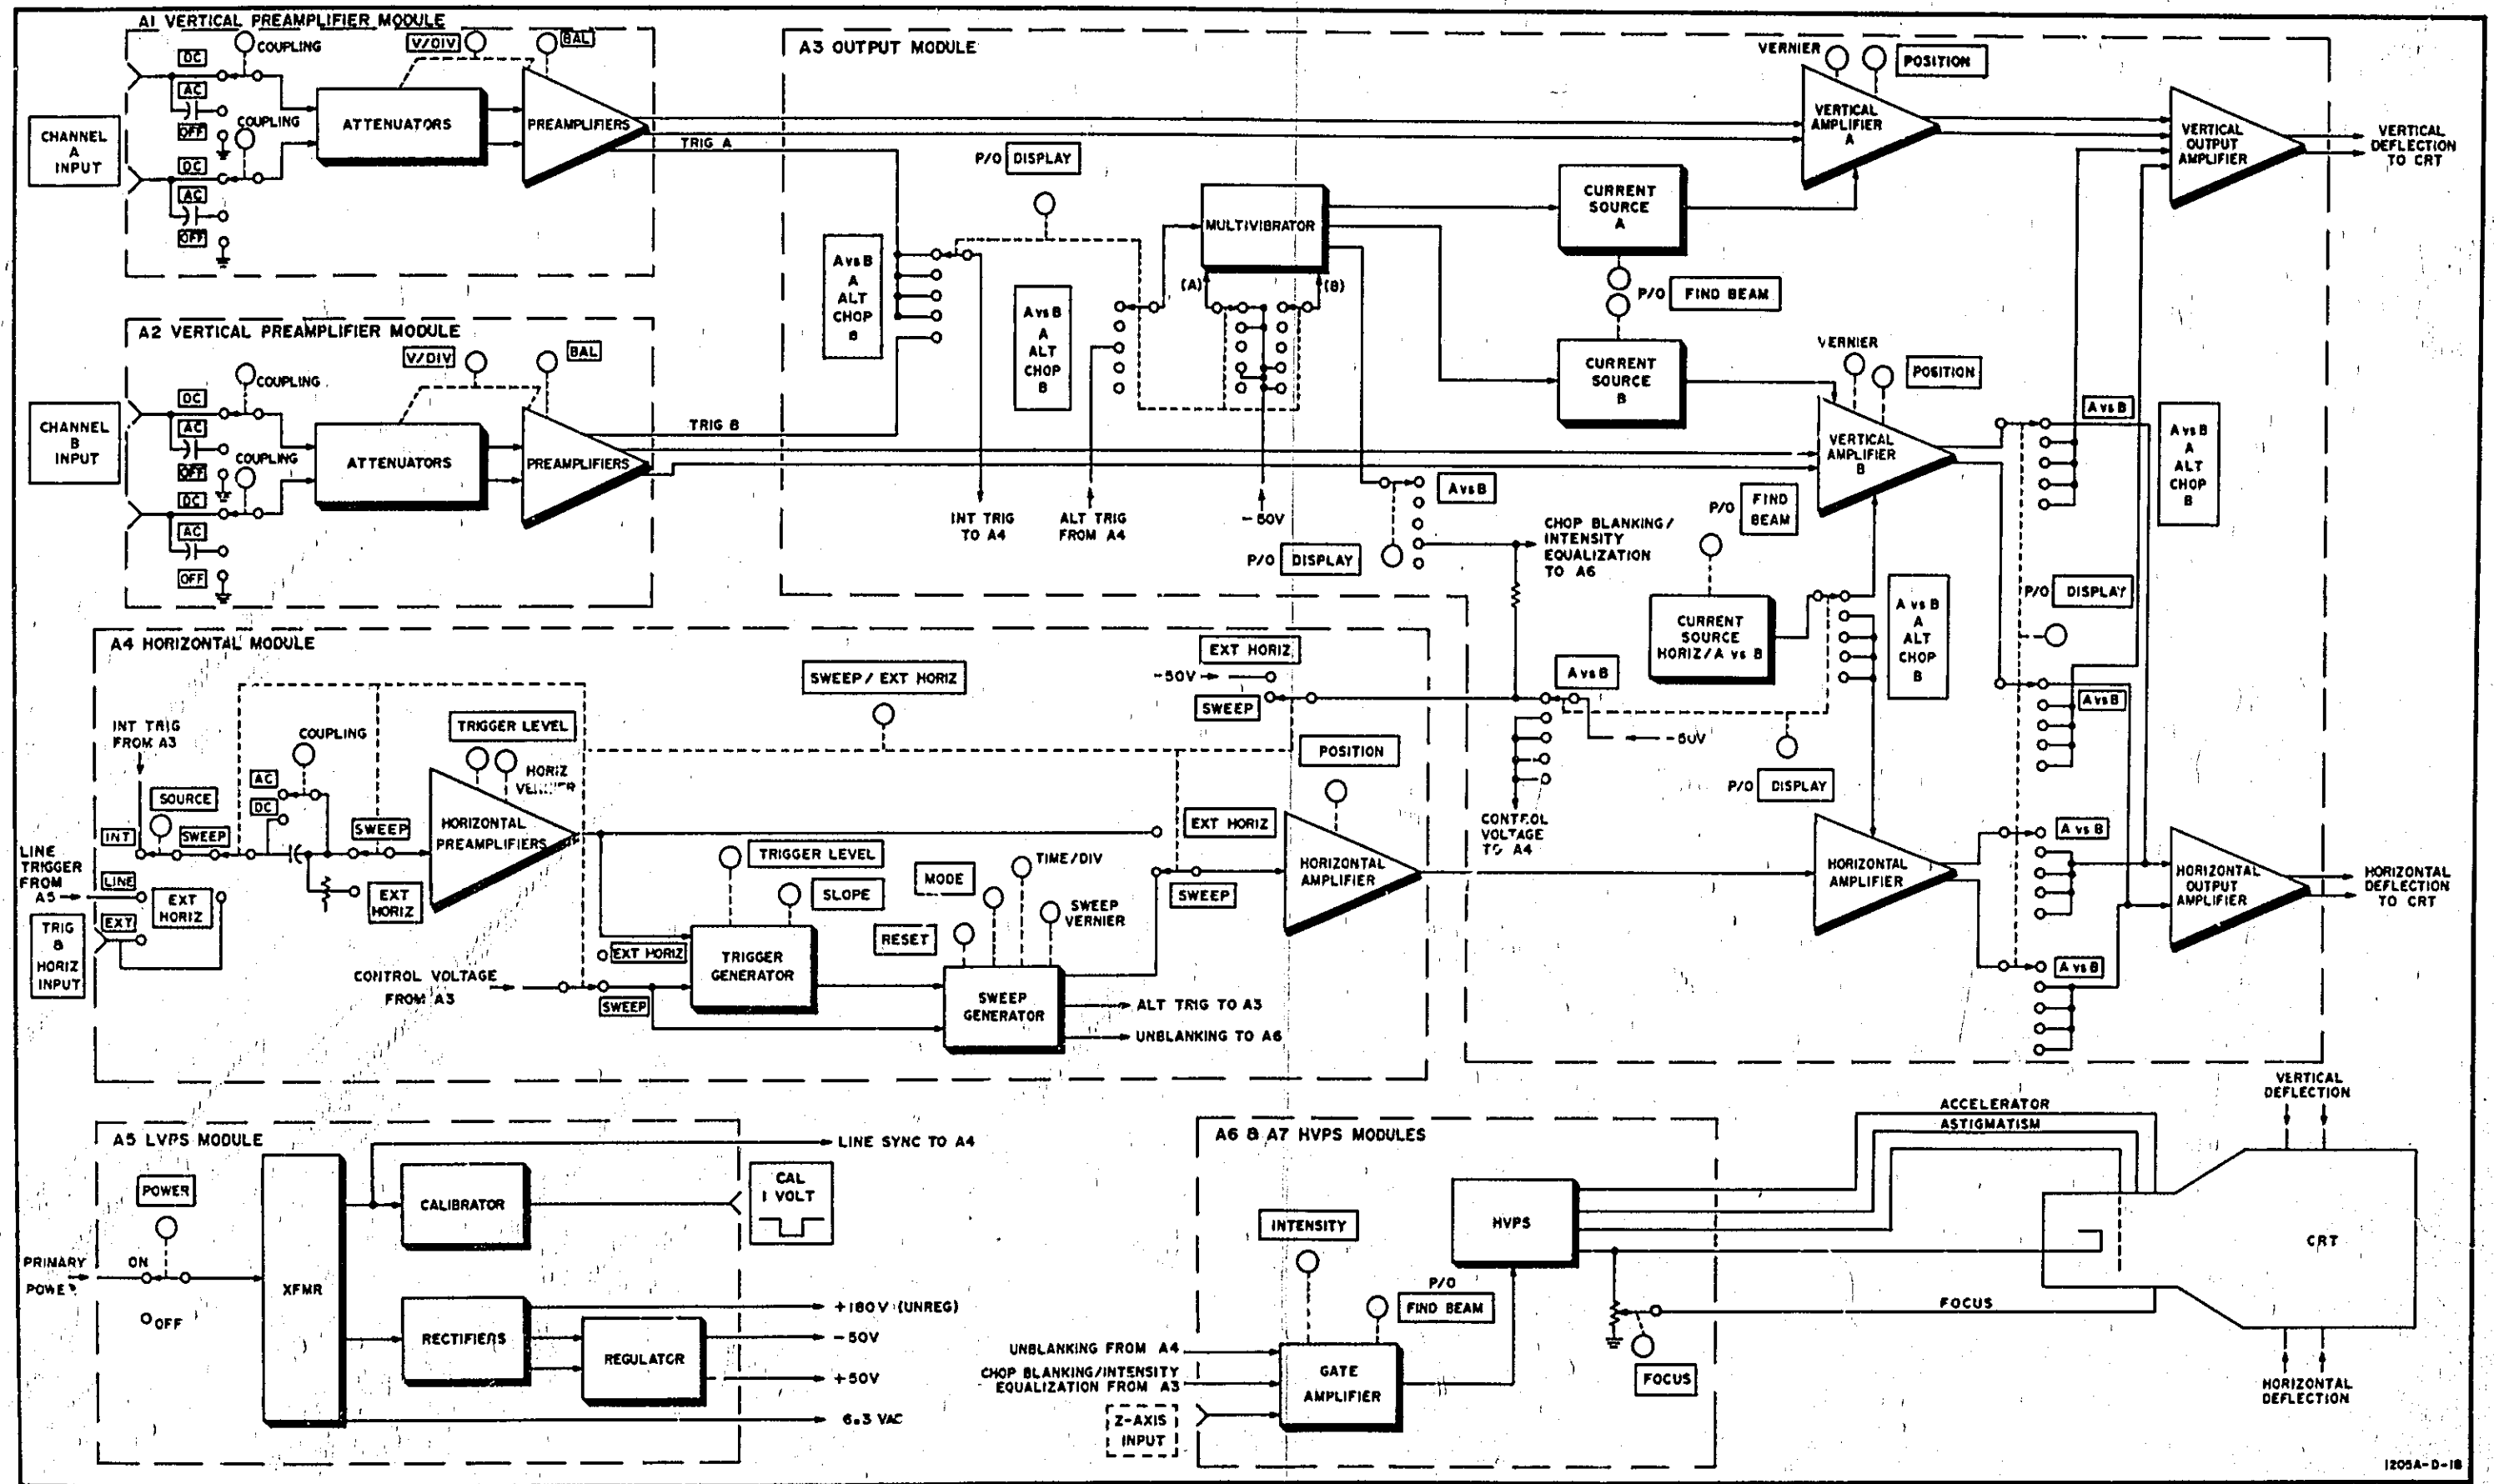


Figure 4-10. Overall Block Diagram

Table 5-1. Recommended Test Equipment

Recommended Instrument		Required Characteristics	Required for
Type	Model		
Voltmeter Calibrator	User's Selection	0.5 mV to 100 V pk-pk, ±0.2%	Calibrator Check Vert. Ampl. Gain Check Vert. Vernier Check Trig. Point & Slope Check Horiz. Ampl. Gain Check Horiz. Vernier Check Horiz. Ampl. Gain Adj. Output Ampl. Gain Adj.
Oscillator	HP Model 651B	50 Hz to 500 kHz; up to 8.0V pk-pk at 500 kHz; 20V pk-pk at 10 kHz.	Vert. Positioning Check Vert. Bandwidth Check CMR Check A vs. B Phase Shift Check Channel Isolation Check Trig. Amplitude Check Trig. Point & Slope Check Horiz. Bandwidth Check
Time-mark Generator	User's Selection	markers from 1 usec to 5 sec.	Sweep Time Check Sweep Vernier Check Mag. Sweep Check Single Sweep Check Sweep Time Adj.
Digital DC Voltmeter	HP Model 3465A	±50V; ±0.05% ±165V; ±0.05%	L.V.P.S. Adj. H.V.P.S. Adj.
High Voltage 1000:1 Divider Probe	HP Model 34111A	-3000 Vdc.	H.V.P.S. Adj.
L-C Meter	HP Model 4332A	45 pF ±3%	Input Cap Adj. Atten. Comp. Adj.
Square Wave Generator	User's Selection	4.5V pk-pk at 1 kHz; risetime approx. 0.5 usec	Horiz. Atten. Comp. Adj. Input Cap Adj. Atten. Comp. Adj.
Frequency Compensated Divider Probe	HP Model 10001A	10:1; dc to 30 MHz; 10 megohms; 10 pF; 2%; 600V.	L.V.P.S. Adj. H.V.P.S. Adj.
Test Oscilloscope	HP Model 1200A/B	100 mV sensitivity; 100 kHz bandwidth	L.V.P.S. Adj. H.V.P.S. Adj.
AC Voltmeter	HP Model 427A	10V; +2% accurate 50 kHz to 500 kHz	Vert. Bandwidth Check Horiz. Bandwidth Check
BNC-to-binding- post adapter quantity: 2	HP Model 10111A	shielded	Channel Isolation Check

## SECTION V

### PERFORMANCE CHECK AND ADJUSTMENTS

#### 5-1. INTRODUCTION.

5-2. This section contains step-by-step procedures required to check and maintain specified instrument performance. Photographs of all internal adjustments are also included; follow-up troubleshooting information and schematics are in Section VIII.

#### 5-3. TEST EQUIPMENT.

5-4. Recommended test equipment is listed in Table 5-1. Equivalent test equipment may be substituted, provided it has the required characteristics stated in the table. For proper results, use only recently calibrated test equipment.

#### 5-5. PERFORMANCE CHECK.

5-6. The purpose of the performance check is to indicate whether or not the instrument is operating within the specifications stated in Table 1-1. This check can be used as part of an incoming quality assurance inspection, as a periodic operational test, or to check calibration after repairs or adjustments are made. If the result of a performance check is unsatisfactory, refer to the indicated adjustment step (when given). If, after doing the appropriate adjustment, performance is still unsatisfactory, refer to Section VIII for detailed troubleshooting information.

5-7. It is preferable to do the performance check in the given sequence since succeeding steps depend on the control settings and results of earlier steps. However, steps may be done individually or out of sequence by referring to the preliminary control settings and the steps prior to the desired one.

5-8. Enter the results of the initial performance check on the Performance Check Record at the end of the procedure. Then remove the forms from the manual and file them for future reference (be sure to include the instrument serial number for identification).

#### 5-9. PRELIMINARY CONTROL SETTINGS.

- a. Set:
  - INTENSITY ..... ccw
  - FOCUS ..... midrange
  - Volts/Division (A and B) ..... 20 V/DIV
  - Vertical Vernier (A and B) ..... CAL
  - Vertical POSITION (A and B) ..... midrange
  - +Vertical Coupling (A and B) ..... OFF
  - Vertical Coupling (A and B) ..... OFF
  - DISPLAY ..... CHOP

- Horizontal POSITION ..... midrange
- SWEEP/EXT HORIZ ..... X1
- Time/Division ..... 1 MSEC/DIV
- Horizontal Vernier ..... CAL
- MODE ..... FREE RUN
- SLOPE ..... +
- TRIGGER LEVEL ..... AUTO
- SOURCE ..... INT
- Horizontal COUPLING ..... DC

b. Apply operating power (refer to power requirements paragraph in Section II), turn on POWER switch and allow at least 15 minutes for warm-up.

#### 5-10. PRELIMINARY CHECK.

5-11. Paragraphs 5-12 through 5-17 contain preliminary operational checks of performance characteristics not specified in Table 1-1. Since these characteristics are not specified, stated results are approximate.

#### 5-12. INTENSITY.

- a. Turn INTENSITY control from stop to stop.
- b. Note that intensity of traces varies smoothly from extinguished to brighter than normal.
- c. Refer to Paragraph 5-43. for adjustment information, if required.

#### 5-13. FOCUS.

- a. Adjust INTENSITY for visible traces.
- b. Turn FOCUS control from stop to stop.
- c. Note that traces are focused when FOCUS is set to approximately midrange.

#### 5-14. TRACE ALIGN.

- a. Using POSITION controls, set traces on horizontal graticule lines.
- b. Adjust TRACE ALIGN, and note that traces can be aligned parallel to horizontal axis.

#### 5-15. AMPLIFIER BALANCE.

- a. Turn channel A Volts/Division from 20 V/DIV to 5 MV/DIV, and adjust front panel BAL (channel A) screwdriver adjustment.

b. Note that channel A trace can be prevented from shifting when turning Volts/Division.

c. Repeat steps a and b for channel B.

**5-16. VERTICAL POSITIONING.**

a. Set:  
 +Vertical Coupling (A and B) . . . . . AC  
 Volts/ Division (A and B) . . . . . 0.1 V/DIV  
 MODE . . . . . NORM  
 Time/Division . . . . . 5 USEC/DIV

b. Connect 100-kHz signal from oscillator to channel A +INPUT jack.

c. Adjust oscillator for 8 divisions vertical deflection.

d. Turn channel A Vertical POSITION fully cw.

e. Note that channel A display moves upward until offset from graticule.

f. Turn channel A Vertical POSITION fully ccw.

g. Note that channel A display moves downward until offset from graticule.

h. Repeat steps b through g for channel B.

i. Disconnect oscillator.

**5-17. BEAM FINDER.**

a. Remove traces from screen by turning vertical and horizontal POSITION controls.

b. Set INTENSITY fully ccw.

c. Press FIND BEAM pushbutton.

d. Note that bright, defocused traces return to screen.

e. Readjust INTENSITY and POSITION controls to return traces to screen.

**5-18. CALIBRATOR.**

a. Set Time/Division to 5 MSEC/DIV.

b. Connect 400-Hz, 1V pk-pk signal from voltmeter calibrator to channel A +INPUT jack.

c. Set channel A Vertical Vernier for 8 divisions vertical deflection.

d. Disconnect voltmeter calibrator, and connect CAL 1 VOLT signal to channel A +INPUT jack.

e. Note display of 8 vertical divisions  $\pm 0.12$  minor division.

f. Disconnect CAL 1 VOLT signal.

**5-19. VERTICAL AMPLIFIER GAIN.**

a. Set:  
 DISPLAY . . . . . A  
 +Vertical Coupling (A and B) . . . . . DC  
 Time/Division . . . . . 1 MSEC/DIV

b. Connect 400-Hz signal from voltmeter calibrator output to channel A +INPUT jack.

c. Set voltmeter calibrator output and channel A Volts/Division according to Table 5-2.

d. Observe vertical deflection specified in Table 5-2.

Table 5-2. Vertical Amplifier Gain

Voltmeter Calibrator Volts (pk-pk)	Volts/Division	Vertical Deflection (divisions)
100V	20V	5 $\pm$ 0.15
50V	10V	5 $\pm$ 0.15
30V	5V	6 $\pm$ 0.18
10V	2V	5 $\pm$ 0.15
5V	1V	5 $\pm$ 0.15
3V	0.5V	6 $\pm$ 0.18
1V	0.2V	5 $\pm$ 0.15
0.5V	0.1V	5 $\pm$ 0.15
0.3V	50 mV	6 $\pm$ 0.18
0.1V	20 mV	5 $\pm$ 0.15
50 mV	10 mV	5 $\pm$ 0.15
30 mV	5 mV	6 $\pm$ 0.18

e. Set:  
 +Vertical Coupling A . . . . . OFF  
 -Vertical Coupling A . . . . . DC

f. Connect 400-Hz signal from voltmeter calibrator output to channel A -INPUT jack.

g. Set voltmeter calibrator output and channel A Volts/Division according to Table 5-3.

h. Observe vertical deflection specified in Table 5-3.

Table 5-3. Vertical Amplifier Gain

Voltmeter Calibrator Volts (pk-pk)	Volts/Division	Vertical Deflection (divisions)
3V	0.5V	6 ± 0.18
1V	0.2V	5 ± 0.15

- i. Set DISPLAY to B.
- j. Repeat steps b through d for channel B.
- k. Set:
  - +Vertical Coupling B ..... OFF
  - Vertical Coupling B ..... DC
- l. Repeat steps f through h for channel B.
- m. Refer to Paragraph 5-53 for adjustment information.

**5-20. VERTICAL VERNIER.**

- a. Set channel B Volts/Division to 20 V/DIV.
- b. Connect 400-Hz, 200V pk-pk signal from voltmeter calibrator output to channel B -INPUT jack.
- c. Set channel B Vertical Vernier fully ccw.
- d. Note 4 divisions or less vertical deflection.
- e. Set DISPLAY to A.
- f. Repeat steps a through d for channel A.
- g. Disconnect voltmeter calibrator.

**5-21. VERTICAL BANDWIDTH.**

- a. Set:
  - Vertical Vernier (A and B) ..... CAL
  - Volts/Division (A and B) ..... 1 V/DIV
- b. Connect 1-kHz signal from oscillator output to channel A -INPUT jack.
- c. Monitor oscillator output with ac voltmeter.
- d. Adjust oscillator for 8 divisions vertical deflection, and note ac voltmeter indication.
- e. Adjust oscillator frequency for 500-kHz signal.
- f. Adjust signal amplitude for same voltage indication noted in step d.
- g. Note 5.7 or more divisions of vertical deflection.

- h. Set:
  - +Vertical Coupling A ..... DC
  - Vertical Coupling A ..... OFF
- i. Connect 1-kHz signal from oscillator to channel A +INPUT jack.
- j. Repeat steps c through g.
- k. Set DISPLAY to B.
- l. Connect 1-kHz signal from oscillator to channel B -INPUT jack.
- m. Repeat steps c through g.
- n. Set:
  - +Vertical Coupling B ..... DC
  - Vertical Coupling B ..... OFF
- o. Connect 1-kHz signal from oscillator to channel B +INPUT jack.
- p. Repeat steps c through g.
- q. Disconnect oscillator and ac voltmeter.
- r. Refer to Paragraph 5-54 for adjustment information, if required.

**5-22. COMMON MODE REJECTION RATIO.**

- a. Set:
  - DISPLAY ..... A
  - +Vertical Coupling (A and B) ..... DC
  - Vertical Coupling (A and B) ..... DC
  - Volts/Division (A and B) ..... 5 MV/DIV
- b. Connect 10-kHz, 6V pk-pk signal from oscillator to channel A + and -INPUT jacks (jacks shorted together).
- c. Note 3.8 divisions or less vertical deflection.
- d. Set DISPLAY to B.
- e. Disconnect oscillator from channel A and connect to channel B + and -INPUT jacks (jacks shorted together).
- f. Note 3.8 divisions or less vertical deflection.
- g. Disconnect oscillator.

**5-23. A vs. B PHASE SHIFT.**

- a. Set:
  - DISPLAY ..... A vs B
  - Volts/Division (A and B) ..... 0.2 V/DIV
  - Vertical Coupling (A and B) ..... OFF
- b. Connect 100-kHz sine wave signal from oscillator output to channel A and B +INPUT jacks.

c. Adjust signal amplitude to obtain 8 divisions vertical deflection.

d. Note that minor diameter of elliptical display (display may appear as straight, diagonal line) is 0.1 division or less.

e. Set Volts/Division (A and B) to 0.5 V/DIV.

f. Repeat steps c and d.

5-24. CHANNEL ISOLATION.

a. Set:

DISPLAY .....	ALT
Volts/Division A .....	20 V/DIV
Volts/Division B .....	5 MV/DIV
+Vertical Coupling (A and B) .....	DC
-Vertical Coupling (A and B) .....	DC
Time/Division .....	1 USEC/DIV

b. Connect shielded BNC-to-binding-post adapters from channel B + and -INPUT jacks to ground jack.

c. Connect 500-kHz signal from oscillator output to channel A + and -INPUT jacks (ground jack not used).

d. Adjust oscillator for 1 division channel A vertical deflection.

e. Note less than 0.4 division of channel B vertical deflection.

f. Set:

Volts/Division A .....	5 MV/DIV
Volts/Division B .....	20 V/DIV

g. Repeat steps b through e with signal applied to channel B.

h. Disconnect oscillator and input adapters.

5-25. TRIGGER AMPLITUDE.

a. Set:

DISPLAY .....	A
+Vertical Coupling A .....	DC
-Vertical Coupling A .....	OFF
Volts/Division A .....	1 V/DIV
Time/Division .....	5 MSEC/DIV

b. Connect 50-Hz signal from oscillator output to channel A +INPUT jack.

c. Adjust oscillator for 0.5 division vertical deflection.

d. Adjust TRIGGER LEVEL or set to AUTO detent, and note stable display.

e. Set Time/Division to 1 USEC/DIV.

f. Adjust oscillator frequency for 500-kHz signal.

g. Repeat steps c and d.

h. Set:

SOURCE .....	EXT
Volts/Division A .....	50 MV/DIV

i. Connect 500-kHz signal from oscillator output to channel A +INPUT and TRIG & HORIZ INPUT jacks.

j. Adjust oscillator for 4 divisions vertical deflection.

k. Adjust TRIGGER LEVEL or set to AUTO detent, and note stable display.

l. Set Time/Division to 5 MSEC/DIV.

m. Adjust oscillator for 50-Hz signal.

n. Repeat steps j and k.

5-26. TRIGGER POINT AND SLOPE.

a. Set SOURCE to INT.

b. Adjust oscillator for 8 divisions vertical deflection.

c. Adjust TRIGGER LEVEL through its range.

d. Note stable display as trigger point moves smoothly along positive slope of waveform.

e. Set SLOPE to -.

f. Adjust TRIGGER LEVEL through its range.

g. Note stable display as trigger point moves smoothly along negative slope of waveform.

h. Disconnect oscillator.

i. Set

Volts/Division A .....	20 V/DIV
Time/Division .....	0.5 MSEC/DIV
SOURCE .....	EXT

j. Connect 400-Hz signal from voltmeter calibrator to channel A +INPUT and TRIG & HORIZ INPUT jacks.

k. Set channel A Vertical Vernier for 8 divisions vertical deflection.

l. Adjust TRIGGER LEVEL through its range.

m. Note stable display as trigger point moves smoothly along negative slope of waveform.

n. Set SLOPE to +.

- o. Adjust TRIGGER LEVEL through its range.
- p. Note stable display as trigger point moves smoothly along positive slope of waveform.
- q. Disconnect voltmeter calibrator.

**5-27. SWEEP TIME.**

- a. Set SLOPE to + and SOURCE to INT.
- b. Connect time-mark generator to channel A +INPUT jack.

Table 5-4. Sweep Timing

Time-mark Generator	Time/Division
5 sec	5 SEC/DIV
2 sec	2 SEC/DIV
1 sec	1 SEC/DIV
500 msec	0.5 SEC/DIV
200 msec	0.2 SEC/DIV
100 msec	0.1 SEC/DIV
50 msec	50 MSEC/DIV
20 msec	20 MSEC/DIV
10 msec	10 MSEC/DIV
5 msec	5 MSEC/DIV
2 msec	2 MSEC/DIV
1 msec	1 MSEC/DIV
500 usec	0.5 MSEC/DIV
200 usec	0.2 MSEC/DIV
100 usec	0.1 MSEC/DIV
50 usec	50 USEC/DIV
20 usec	20 USEC/DIV
10 usec	10 USEC/DIV
5 usec	5 USEC/DIV
2 usec	2 USEC/DIV
1 usec	1 USEC/DIV

c. Set time-mark generator and Time/Division according to Table 5-4. Adjust TRIGGER LEVER for stable display, and adjust INTENSITY and channel A Volts/Division as required to obtain 3 to 5 divisions vertical deflection.

d. Adjust Horizontal POSITION to align first marker with left edge of graticule.

e. Note that 11th marker is within 0.3 division of right edge of graticule.

f. Refer to Paragraph 5-50 for adjustment information, if required.

**5-28. SWEEP VERNIER.**

- a. Set time-mark generator for 1-msec markers.
- b. Set Time/Division to 0.1 MSEC/DIV, and turn Horizontal Vernier fully ccw.
- c. Adjust TRIGGER LEVEL for stable display.
- d. Note that any two markers are displayed in less than 4 horizontal divisions.

**5-29. MAGNIFIED SWEEP.**

- a. Set:
 

SWEEP/EXT HORIZ .....	MAG
Time/Division .....	0.1 MSEC/DIV
Horizontal Vernier .....	CAL

b. Set time-mark generator for 100msec markers.

c. Adjust TRIGGER LEVEL for stable display.

d. Adjust Horizontal POSITION to align first marker with left edge of graticule.

e. Note that second marker is within 0.5 division of right edge of graticule.

**5-30. SINGLE SWEEP.**

- a. Set:
 

SWEEP/EXT HORIZ .....	X1
Time/Division .....	0.1 SEC/DIV
MODE .....	SINGLE
TRIGGER LEVEL .....	AUTO

b. Set time-mark generator for 100-msec markers.

c. Press RESET pushbutton; note that indicator lights, and one sweep cycle is displayed. Indicator goes out at end of sweep cycle.

d. Disconnect time-mark generator.

**5-31. HORIZONTAL AMPLIFIER GAIN.**

- a. Set SWEEP/EXT HORIZ to 1 V/DIV.



b. Connect 400-Hz signal from voltmeter calibrator to TRIG & HORIZ INPUT jack.

c. Set voltmeter calibrator output and EXT HORIZ V/DIV according to Table 5-5.

Table 5-5. Horizontal Gain

Voltmeter Calibrator Volts (pk-pk)	Ext Horiz V/DIV	Horizontal Deflection (divisions)
10V	1V	10 ± 0.3
5V	0.5V	10 ± 0.3
2V	0.2V	10 ± 0.3
1V	0.1V	10 ± 0.3

d. Observe horizontal deflection specified in Table 5-5.

e. Refer to Paragraph 5-44 for adjustment information, if required.

#### 5-32. HORIZONTAL VERNIER.

a. Set EXT HORIZ to 1 V/DIV.

b. Set voltmeter calibrator output for 10V.

c. Set Horizontal Vernier fully ccw.

d. Note 4 or less divisions of horizontal deflection.

e. Disconnect voltmeter calibrator.

#### 5-33. HORIZONTAL BANDWIDTH.

a. Set Horizontal Vernier to CAL detent.

b. Connect 1-kHz signal from oscillator to TRIG & HORIZ INPUT jack.

c. Monitor oscillator output with ac voltmeter.

d. Adjust oscillator for 10 divisions horizontal deflection, and note ac voltmeter indication.

e. Adjust oscillator frequency for 300-kHz signal.

f. Adjust signal amplitude for same voltage indication noted in step c.

g. Note 7 or more divisions horizontal deflection.

h. Disconnect oscillator and ac voltmeter.

i. Refer to Paragraph 5-46 for adjustment information, if required.

PERFORMANCE CHECK RECORD

Serial No. \_\_\_\_\_

REFERENCE STEP	DESCRIPTION	RESULTS		
		MIN	ACTUAL	MAX
5-12b	INTENSITY	extinguished	_____	brighter than normal
5-13c	FOCUS	focuses at midrange	_____	
5-14b	TRACE ALIGN	horizontal traces	_____	
5-15b, c	AMPLIFIER BALANCE	stationary trace	A    B _____	
5-16e, h	VERTICAL POSITIONING	display moves upward off graticule	A    B _____	
5-16g, h		display moves downward off graticule	_____	
5-17d	BEAM FINDER (P1; CRT not intensified)	bright defocused traces	_____	
5-18e	CALIBRATOR	7.88 div.	_____	8.12 div.

**PERFORMANCE CHECK RECORD**

Serial No. \_\_\_\_\_

REFERENCE STEP	DESCRIPTION	RESULTS					
		MIN	ACTUAL	MAX			
5-19d, j	VERTICAL AMPLIFIER GAIN  20 V/DIV 10 V/DIV 5 V/DIV 2 V/DIV 1 V/DIV 0.5 V/DIV 0.2 V/DIV 0.1 V/DIV 50 MV/DIV 20 MV/DIV 10 MV/DIV 5 MV/DIV	4.85 div.	_____	_____	5.15 div.		
		4.85 div.	_____	_____	5.15 div.		
		5.82 div.	_____	_____	6.18 div.		
		4.85 div.	_____	_____	5.15 div.		
		4.85 div.	_____	_____	5.15 div.		
		5.82 div.	_____	_____	6.18 div.		
		4.85 div.	_____	_____	5.15 div.		
		4.85 div.	_____	_____	5.15 div.		
		5.82 div.	_____	_____	6.18 div.		
		4.85 div.	_____	_____	5.15 div.		
		4.85 div.	_____	_____	5.15 div.		
		5.82 div.	_____	_____	6.18 div.		
		5-19h, l	0.5 V/DIV 0.2 V/DIV	5.82 div.	_____	_____	6.18 div.
				4.85 div.	_____	_____	5.15 div.
5-20d, f	VERTICAL VERNIER		A	B	4 div.		
			_____	_____			
5-21g, j, m, p	VERTICAL BANDWIDTH 500-kHz check	5.7 div.	A	B			
				_____		_____	
5-22c, f	COMMON MODE REJECTION RATIO  10-kHz signal		A	B	3.8 div.		
				_____		_____	

PERFORMANCE CHECK RECORD

Serial No. \_\_\_\_\_

REFERENCE STEP	DESCRIPTION	RESULTS		
		MIN	ACTUAL	MAX
5-23d	A vs. B PHASE SHIFT 0.2 V/DIV		_____	0.1 div.
5-23f	0.5 V/DIV		_____	0.1 div.
5-24e, g	CHANNEL ISOLATION		A B _____	0.4 div.
5-25d	TRIGGER AMPLITUDE internal; 50-Hz signal	stable display	_____	
5-25g	internal; 500-kHz signal	stable display	_____	
5-25k	external; 500-kHz signal	stable display	_____	
5-25n	external; 50-Hz signal	stable display	_____	
5-26d	TRIGGER POINT AND SLOPE internal; positive slope	stable display	_____	
5-26g	internal; negative slope	stable display	_____	
5-26m	external; negative slope	stable display	_____	
5-26p	external; positive slope	stable display	_____	
5-27e	SWEEP TIME 5 SEC/DIV 2 SEC/DIV 1 SEC/DIV 0.5 SEC/DIV 0.2 SEC/DIV 0.1 SEC/DIV 50 MSEC/DIV 20 MSEC/DIV 10 MSEC/DIV 5 MSEC/DIV 2 MSEC/DIV	11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div.	_____	11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div.

PERFORMANCE CHECK RECORD

Serial No. \_\_\_\_\_

REFERENCE STEP	DESCRIPTION	RESULTS		
		MIN	ACTUAL	MAX
	<b>SWEEP TIME (Cont'd.)</b> 1 MSEC/DIV 0.5 MSEC/DIV 0.2 MSEC/DIV 0.1 MSEC/DIV 50 USEC/DIV 20 USEC/DIV 10 USEC/DIV 5 USEC/DIV 2 USEC/DIV 1 USEC/DIV	11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div. 11 in 9.7 div.	_____ _____ _____ _____ _____ _____ _____ _____ _____ _____	11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div. 11 in 10.3 div.
5-28d	SWEEP VERNIER		_____	2 in 4 div.
5-29e	MAGNIFIED SWEEP	2 in 9.5 div.	_____	2 in 10.5 div.
5-30c	SINGLE SWEEP	Indicator lights; one sweep cycle; indicator goes out	_____	same as minimum
5-31d	<b>HORIZONTAL AMPLIFIER GAIN</b> 1 V/DIV 0.5 V/DIV 0.2 V/DIV 0.1 V/DIV	9.7 div. 9.7 div. 9.7 div. 9.7 div.	_____ _____ _____ _____	10.3 div. 10.3 div. 10.3 div. 10.3 div.
5-32d	HORIZONTAL VERNIER		_____	4 div.
5-33g	HORIZONTAL BANDWIDTH	7 div.	_____	

**5-34. ADJUSTMENT PROCEDURE.**

5-35. Procedures to calibrate the instrument so that it will perform as specified in Table 1-1 are presented in the following paragraphs. It is preferable to do the adjustment procedure in the given sequence since succeeding steps depend on the control settings and results of earlier steps. However, steps can be done individually by referring to the steps prior to the desired one.

5-36. Physical location of all internal adjustments is shown in Figures 5-1 through 5-5. Only channel A vertical attenuator and preamplifier adjustments are shown in Figure 5-4. To find the corresponding channel B adjustments, change the A1 prefix to A2.

5-37. Use a non-metallic screwdriver and only calibrated test equipment with characteristics as specified in Table 5-1. After adjustments are completed, check operation by doing the performance check in the previous paragraphs.

**5-38. PRELIMINARY SETUP.**

5-39. Remove top and bottom covers. Apply power, and allow at least 15 minutes for warm-up.

**5-40. LOW VOLTAGE POWER SUPPLY.**

a. Connect digital voltmeter to output of -50V supply (any violet wire on A5).

b. Adjust A5R29 (Figure 5-1) for output of -50V ±25 mV.

**NOTE**

Only the -50V supply is adjustable. All other supply voltages are dependent on its adjustment.

c. Check power supply output voltages and maximum ripple according to Table 5-6.

Table 5-6. Low Voltage Power Supply Outputs

Supply	Voltage	Ripple
-50V	-50V ± 25 mV	2 mV pk-pk
+50V	+50V ± 1V	2 mV pk-pk
+180V(unreg)	+150V to +200V	150 mV pk-pk

**5-41. HIGH VOLTAGE POWER SUPPLY.**

a. Connect digital voltmeter via 1000:1 divider probe, to output of -50V supply (any violet wire on A5).

b. Note voltage reading.

c. Multiply result of step b by 58.30.

d. Monitor high voltage supply output (white-green-gray wire between A6 and A7) with digital voltmeter and divider probe.

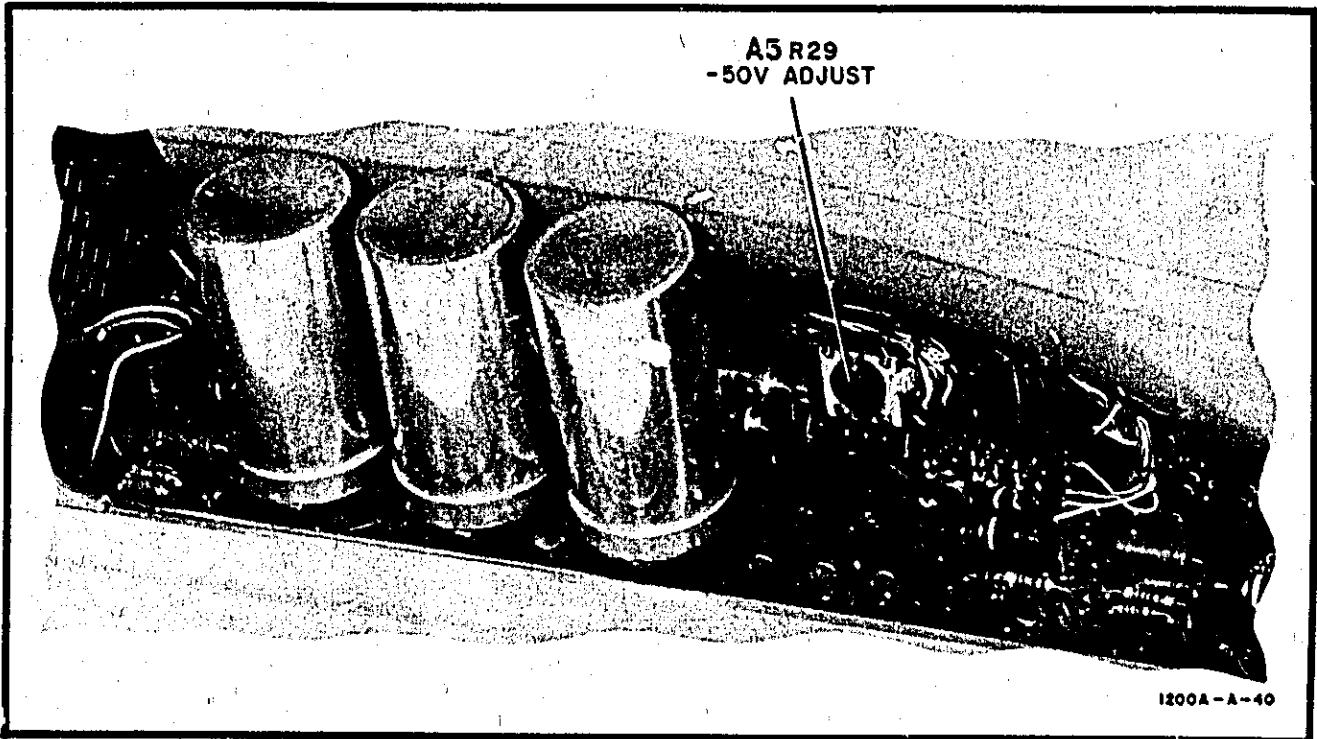


Figure 5-1. Low Voltage Power Supply Adjustment

**WARNING**

Voltages present in the high voltage power supply are dangerous to life.

e. Adjust A6R17B (Figure 5-2) for same voltage calculated in step c (-2,915V ±5V discounting probe attenuation).

**NOTE**

Divider probe inaccuracy is eliminated by this procedure.

f. Disconnect digital voltmeter.

**5-42. ASTIGMATISM.**

a. Set:  
FOCUS ..... ccw

DISPLAY ..... A  
Volts/Division A ..... 1 V/DIV  
SWEEP/EXT HORIZ ..... 1 V/DIV

b. Set INTENSITY and vertical and horizontal POSITION controls to center low intensity dot on CRT graticule.

c. Adjust A6R17A (Figure 5-2) for largest, roundest dot possible.

d. Adjust FOCUS for smallest, sharply focused dot. Astigmatism is properly adjusted if dot remains round when focused.

**5-43. INTENSITY LIMIT.**

- a. Set FOCUS fully ccw.
- b. Set INTENSITY to 10 o'clock.
- c. Adjust A6R14 (Figure 5-2) until dot just disappears.

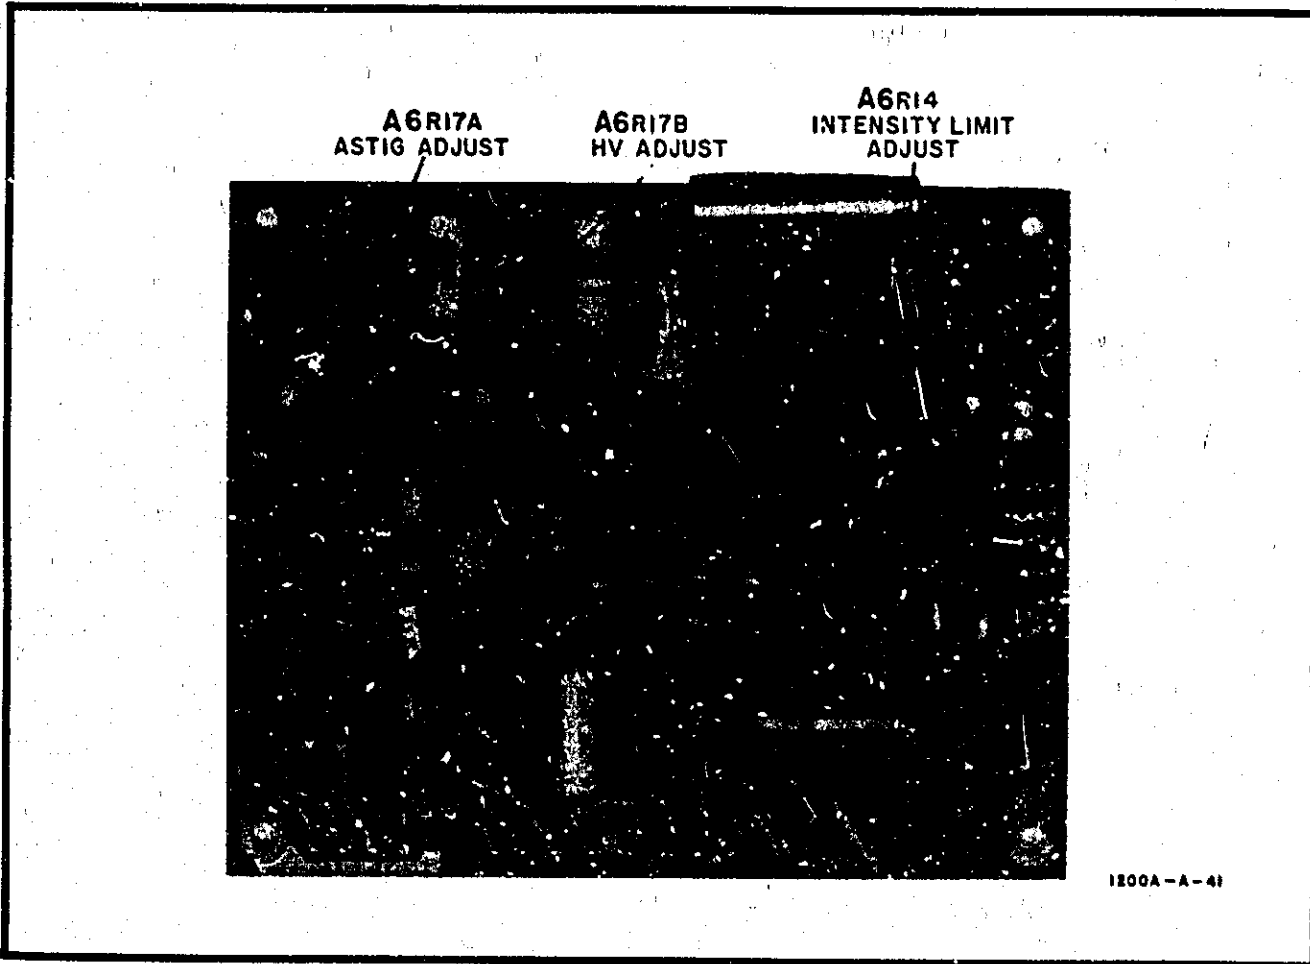


Figure 5-2. High Voltage Power Supply Adjustments

**5-44. HORIZONTAL GAIN.**

- a. Set:  
SWEEP/EXT HORIZ ..... 0.1 V/DIV  
Horizontal COUPLING ..... DC
- b. Connect 400-Hz, 1V pk-pk signal from voltmeter calibrator to TRIG & HORIZ INPUT jacks.
- c. Adjust INTENSITY, FOCUS, and vertical and horizontal POSITION controls for midscreen trace.
- d. Adjust A3R4D (Figure 5-5) for 10 divisions horizontal deflection.
- e. Disconnect voltmeter calibrator.

**5-45. HORIZONTAL VERNIER BALANCE.**

- a. Set Horizontal POSITION to center dot on screen.
- b. Set Horizontal Vernier fully ccw.
- c. Note horizontal position of dot.
- d. Set Horizontal Vernier to CAL detent.
- e. Set Horizontal POSITION to move dot to opposite side of center an amount equal to result of step c.
- f. Adjust A4A1R10A (Figure 5-3) to center dot on screen.
- g. Repeat steps b through f until dot remains stationary when Horizontal Vernier is turned.

**5-46. HORIZONTAL ATTENUATOR COMPENSATION.**

- a. Connect 1-kHz signal from square-wave generator to TRIG & HORIZ INPUT jacks.
- b. Set square-wave generator output for 9 divisions horizontal deflection (two dots 9 div apart).

- c. Adjust A4C1 (Figure 5-3) for minimum overshoot (observed as two well-defined dots 9 div apart). Be sure the intensity is temporarily increased to observe overshoot.

- d. Disconnect square-wave generator.

**5-47. AUTO TRIGGERING.**

- a. Set:  
DISPLAY ..... A  
+Vertical Coupling A ..... AC  
-Vertical Coupling A ..... OFF  
Volts/Division A ..... 0.2 V/DIV  
TRIGGER LEVEL ..... AUTO  
Time/Division ..... 5 MSEC/DIV  
Horizontal Vernier ..... CAL  
SWEEP/EXT HORIZ ..... X1

- b. Connect CAL 1 VOLT signal to channel A +INPUT jacks.

- c. Set A4A1R21 (Figure 5-3) to midrange.

- d. Adjust A4A1R34B (Figure 5-3) cw until sweep free runs; then adjust it ccw until sweep stops. Center between these points.

- e. Set channel A Volts/Division to 5 V/DIV.

- f. Adjust A4A1R21 (Figure 5-3) to obtain triggering on both + and - setting of SLOPE switch.

- g. Disconnect CAL 1 VOLT signal.

**5-48. HORIZONTAL POSITION CENTERING.**

- a. Set channel A Volts/Division to 1 V/DIV.

- b. Adjust A4A1R33 (Figure 5-3) so that beginning and end of trace are equidistant from graticule center when Horizontal POSITION is set fully cw or ccw.

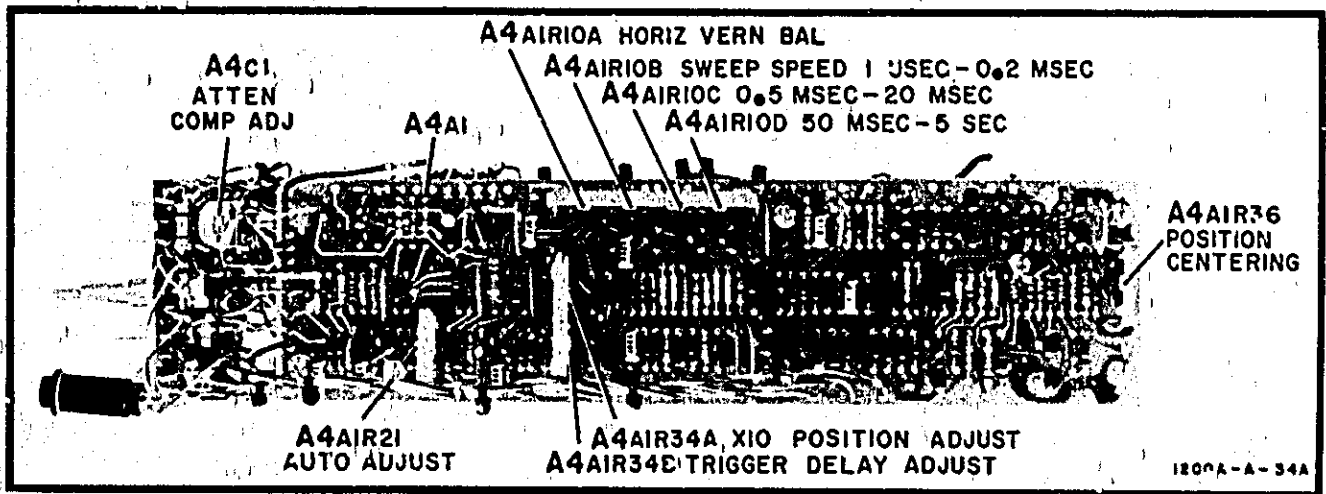


Figure 5-3. Horizontal Module Adjustments



**5-49. MAGNIFIER CENTERING.**

- a. Set Horizontal POSITION to align beginning of trace with graticule center.
- b. Set SWEEP/EXT HORIZ to MAG.
- c. Adjust A4A1R34A (Figure 5-3) to align beginning of trace with graticule center.

**5-50. SWEEP TIME CALIBRATION.**

- a. Set:
 

SOURCE .....	INT
MODE .....	NORM
Horizontal COUPLING .....	A3
SLOPE .....	+
SWEEP/EXT HORIZ .....	X1
Time/Division .....	5 USEC/DIV
Horizontal Vernier .....	CAL
- b. Connect 5-usec time marks from time-mark generator to channel A +INPUT jacks.
- c. Set TRIGGER LEVEL for stable display.
- d. Adjust Horizontal POSITION to align 1st marker with left edge of graticule.
- e. Adjust A4A1R10B (Figure 5-3) to obtain one time mark per division.
- f. Set Time/Division to 0.5 MSEC/DIV and apply 0.5-msec time marks.

- g. Set TRIGGER LEVEL for stable display.
- h. Adjust A4A1R10C (Figure 5-3) to obtain one time mark per division.
- i. Set Time/Division to 50 MSEC/DIV and apply 50-msec time marks.
- j. Set TRIGGER LEVEL for stable display.
- k. Adjust A4A1R10D (Figure 5-3) to obtain one time mark per division.
- l. Disconnect time-mark generator.

**5-51. VERTICAL VERNIER AND VERTICAL AMPLIFIER BALANCE.**

- a. Set:
 

DISPLAY .....	CHOP
Volts/Division (A and B) .....	5 MV/DIV
+Vertical Coupling (A and B) .....	OFF
- Vertical Coupling (A and B) .....	OFF
Vertical Vernier (A and B) .....	CAL
Time/Division .....	1 MSEC/DIV
MODE .....	FREE RUN
- b. Set Vertical POSITION A and B to align channel A and B traces with horizontal graticule lines.
- c. Turn Vertical Vernier A ccw and check for channel A trace shift.
- d. Adjust A1A1R9B (Figure 5-4) until trace remains stationary when Vertical Vernier is turned.

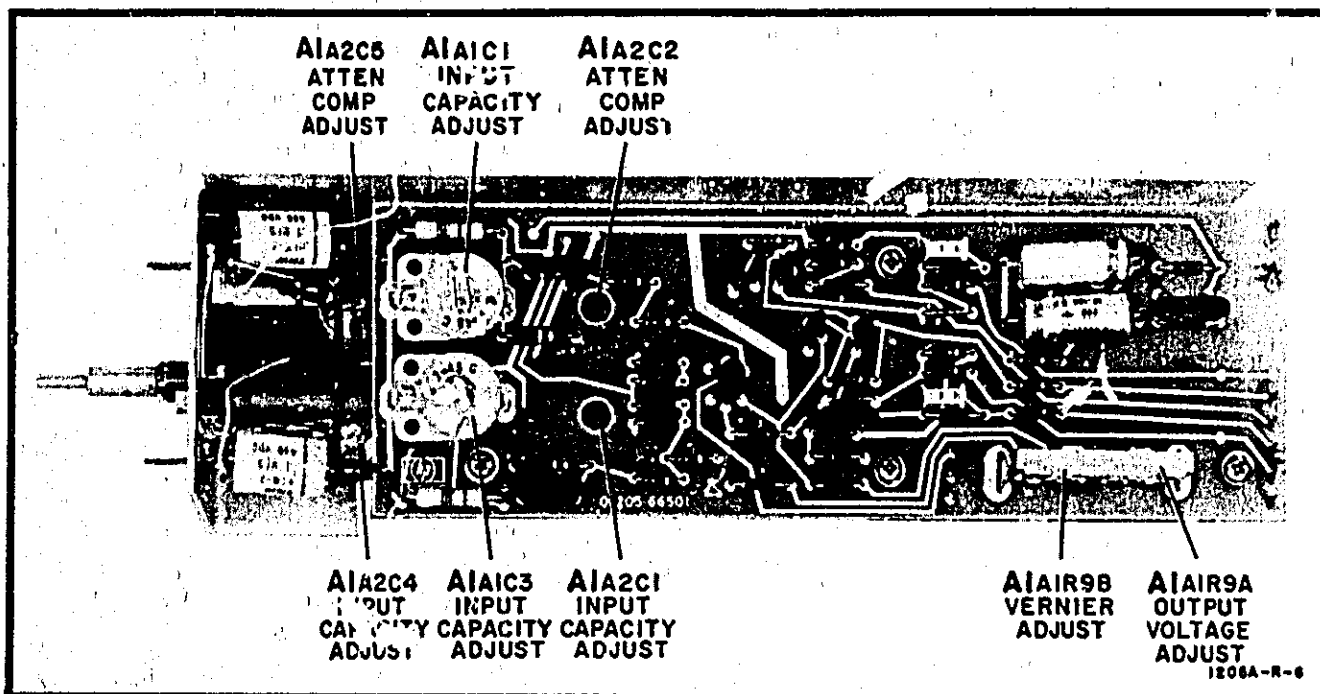


Figure 5-4. Vertical Preamplifier Module Adjustments

- e. Set Vertical Vernier A to CAL detent.
- f. Repeat steps c through e for channel B, except adjust A2A1R9B (Figure 5-4) for stationary trace.
- g. Turn Volts/Division A from 0.2 V/DIV to 5 MV/DIV, and check for channel A trace shift.
- h. Adjust channel A BAL (front panel) until trace remains stationary when Volts/Division is turned.

**5-52. PREAMPLIFIER OUTPUT VOLTAGE.**

- a. Use DC Voltmeter to monitor output of channel A preamplifier (white wire or green wire on A1A1).
- b. Adjust A1A1R9A (Figure 5-4) for Voltmeter indication of 21.5 volts.
- c. Repeat steps a and b for channel B, except monitor channel B preamplifier output on A2A1 in step a and adjust A2A1R9A in step b.

**5-53. OUTPUT AMPLIFIER GAIN.**

- a. Set:
 

DISPLAY .....	A
Volts/Division (A and B) .....	1 V/DIV
+Vertical Coupling (A and B) .....	DC

- Vertical Coupling (A and B) .....
- Vertical Vernier (A and B) .....
- Time/Division .....
- SLOPE .....
- TRIGGER LEVEL .....
- Horizontal COUPLING .....
- SOURCE .....
- MODE .....

- b. Connect 400-Hz, 5V pk-pk signal from voltmeter calibrator to channel A +INPUT jacks.
- c. Adjust A3R4A (Figure 5-5) for 5 divisions vertical deflection.
- d. Set DISPLAY to A vs. B.
- e. Connect 400-Hz, 5V pk-pk signal from voltmeter calibrator to channel B +INPUT jacks.
- f. Adjust A3R4B (Figure 5-5) for 5 divisions horizontal deflection.
- g. Set DISPLAY to B.
- h. Adjust A3R4C (Figure 5-5) for 5 divisions vertical deflection.
- i. Disconnect voltmeter calibrator.

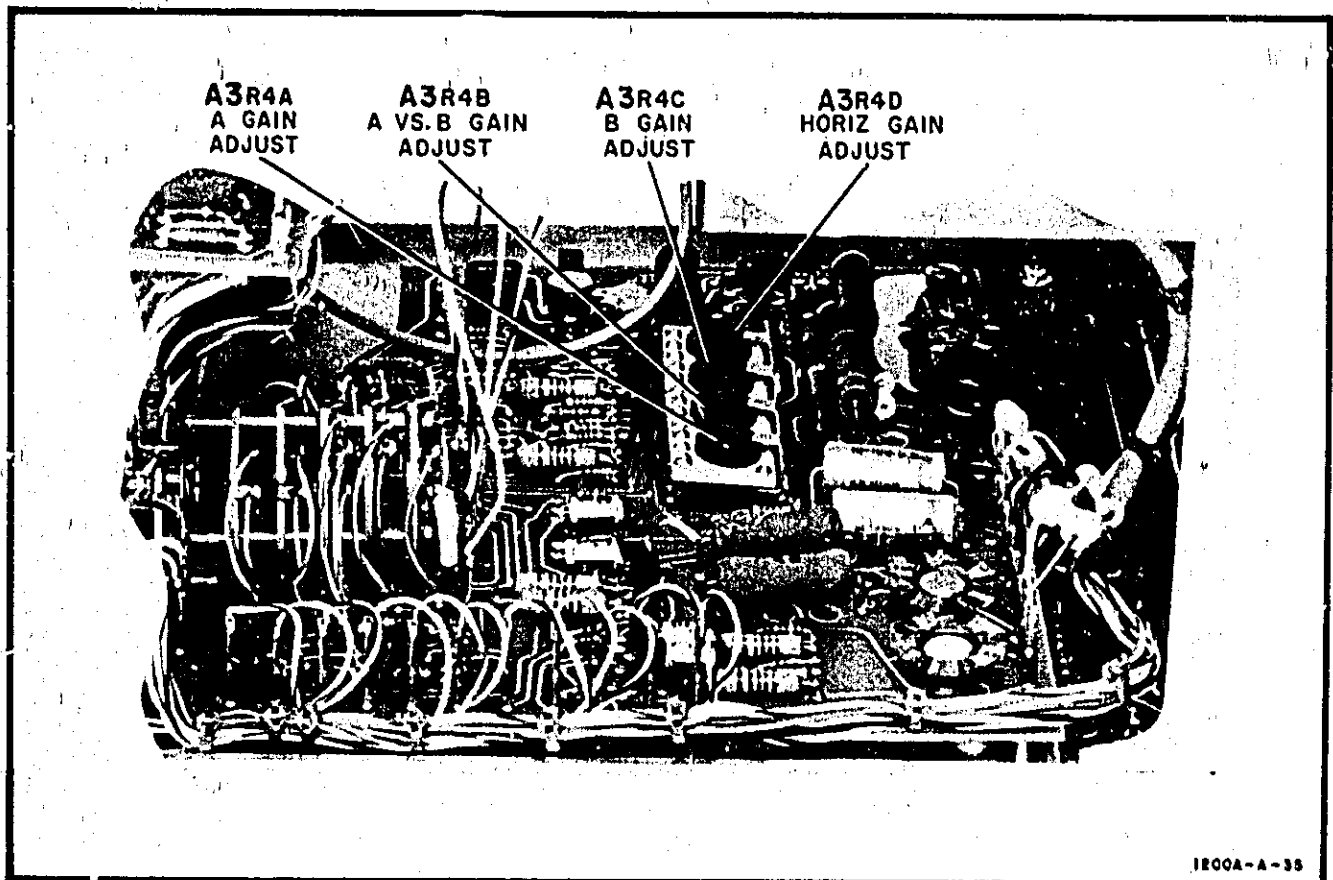


Figure 5-5. Dual Channel Output Amplifier Adjustments

**5-54. INPUT CAPACITANCE AND ATTENUATOR COMPENSATION.**

- a. Set:  
 DISPLAY ..... ALT  
 Volts/Division (A and B) ..... 0.2 V/DIV  
 Time/Division ..... 0.2 MSEC/DIV
- b. Connect LC meter between channel A +INPUT and ground jacks.
- c. Adjust A1A1C3 (Figure 5-4) for indication on LC meter.
- d. Set:  
 +Vertical Coupling A ..... OFF  
 -Vertical Coupling A ..... DC
- e. Connect LC meter between channel A -INPUT and ground jacks.
- f. Adjust A1A1C1 (Figure 5-4) for 45-pF indication on LC meter.
- g. Connect LC meter between channel B +INPUT and ground jacks.
- h. Adjust A2A2C3 (Figure 5-4) for 45-pF indication on LC meter.
- i. Set:  
 +Vertical Coupling B ..... OFF  
 -Vertical Coupling B ..... DC
- j. Connect LC meter between channel B -INPUT and ground jacks.
- k. Adjust A2A1C1 (Figure 5-4) for 45-pF indication on LC meter.
- l. Disconnect LC meter.
- m. Set Volts/Division (A and B) to 0.5 V/DIV.
- n. Connect 1-kHz signal from square-wave generator to channel A -INPUT jacks.
- o. Set square-wave generator for 6 divisions vertical deflection.
- p. Adjust A1A2C2 (Figure 5-4) for best square-wave response.
- q. Set:  
 +Vertical Coupling A ..... DC  
 -Vertical Coupling A ..... OFF

- r. Connect 1-kHz signal from square-wave generator to channel A +INPUT jacks.
- s. Adjust A1A2C5 (Figure 5-4) for best square-wave response.
- t. Connect 1-kHz signal from square-wave generator to channel B -INPUT jacks.
- u. Adjust A2A2C2 (Figure 5-4) for best square-wave response.
- v. Set:  
 +Vertical Coupling B ..... DC  
 -Vertical Coupling B ..... OFF
- w. Connect 1-kHz signal from square-wave generator to channel B +INPUT jacks.
- x. Adjust A2A2C5 (Figure 5-4) for best square-wave response.
- y. Disconnect square-wave generator.
- z. Connect LC meter between channel A +INPUT and ground jacks.
- aa. Adjust A1A2C4 (Figure 5-4) for 45-pF indication on LC meter.
- bb. Set:  
 +Vertical Coupling A ..... OFF  
 -Vertical Coupling A ..... DC
- cc. Connect LC meter between channel A -INPUT and ground jacks.
- dd. Adjust A1A2C1 (Figure 5-4) for 45-pF indication on LC meter.
- ee. Connect LC meter between channel B +INPUT and ground jacks.
- ff. Adjust A2A2C4 (Figure 5-4) for 45-pF indication on LC meter.
- gg. Set:  
 +Vertical Coupling B ..... OFF  
 -Vertical Coupling B ..... DC
- hh. Connect LC meter between channel B -INPUT and ground jacks.
- ii. Adjust A2A2C1 (Figure 5-4) for 45-pF indication on LC meter.
- jj. Disconnect LC meter.

## SECTION VI REPLACEABLE PARTS

### 6-1. INTRODUCTION.

6-2. This section contains information for ordering replacement parts. The abbreviations used in the parts list are described in Table 6-1. Table 6-2 lists the parts in alphanumeric order.

### 6-3. ORDERING INFORMATION.

6-4. To obtain replacement parts from Hewlett-Packard, address order or inquiry to the nearest Hewlett-Packard Sales/Service Office and supply the following information:

- a. Instrument model and serial number.
- b. HP Part Number of item(s).
- c. Quantity of part(s) desired.
- d. Reference designator of part(s).

6-5. To order a part not listed in the table, provide the following information:

- a. Instrument model and serial number.
- b. Description of the part, including function and location in the instrument.
- c. Quantity desired.

Table 6-1. Abbreviations for Replaceable Parts List

A	= ampere(s)	GRD	= ground(ed)	NFO	= negative positive zero (zero temperature coefficient)	RWV	= reverse working voltage
ASSY	= assembly	H	= henry(ies)	NPN	= negative-positive-negative	S-B	= slow-blow
BD	= board(s)	HG	= mercury	NSR	= not separately replaceable	SCR	= silicon controlled rectifier
BH	= binder head	HP	= Hewlett-Packard	OBD	= order by description	SE	= selenium
BP	= bandpass	HZ	= hertz	OH	= oval head	SEC	= second(s)
C	= centi (10 <sup>-2</sup> )	IF	= intermediate freq.	OX	= oxide	SECT	= section(s)
CAR	= carbon	IMPG	= impregnated	P	= peak	SI	= silicon
CCW	= counterclockwise	INCD	= incandescent	PC	= printed (etched) circuit(s)	SIL	= silver
CER	= ceramic	INCL	= include(s)	PF	= picofarads	SL	= slide
CMO	= cabinet mount only	INS	= insulation(ed)	PHL	= Phillips	SP	= single pole
COAX	= coaxial	INT	= internal	PIV	= peak inverse voltage(s)	SPL	= special
COEF	= coefficient	K	= kilo (10 <sup>3</sup> )	PNP	= positive-negative-positive	ST	= single throw
COMP	= composition	KG	= kilogram	P/O	= part of	STD	= standard
CONN	= connector(s)	LB	= pound(s)	PORC	= porcelain	TA	= tantalum
CRT	= cathode-ray tube	LH	= left hand	POS	= position(s)	TD	= time delay
CW	= clockwise	LIN	= linear taper	POT	= potentiometer(s)	TFL	= teflon
D	= deci (10 <sup>-1</sup> )	LOG	= logarithmic taper	P-P	= peak-to-peak	TGL	= toggle
DEPC	= deposited carbon	LVR	= lever	PRGM	= program	THYR	= thyristor
DP	= double pole	M	= milli (10 <sup>-3</sup> )	PS	= polystyrene	TI	= titanium
DT	= double throw	MEG	= mega (10 <sup>6</sup> )	PWV	= peak working voltage	TNLDIO	= tunnel diode(s)
ELECT	= electrolytic	MET FILM	= metal film	RECT	= rectifier(s)	TOL	= tolerance
ENCAP	= encapsulated	MET OX	= metal oxide	RF	= radio frequency	TRIM	= trimmer
EXT	= external	MFR	= manufacturer	RFI	= radio frequency interference	U	= micro (10 <sup>-6</sup> )
F	= farad(s)	MINAT	= miniature	RH	= round head or right hand	V	= volts
FET	= field-effect transistor(s)	MOM	= momentary	RMO	= rack mount only	VAR	= variable
FH	= flat head	MTG	= mounting	RMS	= root mean square	VDCW	= dc working volt(s)
FIL H	= filister head	MY	= mylar			W	= watt(s)
FXD	= fixed	N	= nano (10 <sup>-9</sup> )			W/	= with
G	= giga (10 <sup>9</sup> )	N/C	= normally closed			WIV	= working inverse voltage
GE	= germanium	NE	= neon			W/O	= without
GL	= glass	N/O	= normally open			WW	= wirewound

Table 6-2. Replaceable Parts

Reference Designation	HP Part No.	Description #	Note
A1	01205-63502	A: CHANNEL A PREAMPLIFIER MODULE	
A1A1	01205-66501	A: 5 MV PREAMPLIFIER SUBASSEMBLY	
A1A2	01205-61902	A: 5 MV ATTENUATOR SWITCH ASSEMBLY	
A1C1	0160-0917	C: FXD MY 0.1 UF 20% 600VDCW MATCHED PAIR	
A1MP2	01200-60603	SHIELD: AMPLIFIER	
A1MP3	01200-23704	SHAFT: BAL POT	
A1S1	3100-1376	SWITCH: LEVER (-COUPLING)	
A1S2	3100-1376	SWITCH: LEVER (+ COUPLING)	
A1A1	01205-66501	A: 5 MV PREAMPLIFIER SUB ASSEMBLY	
A1A1C1	0121-0045	C: FXD CER 7-45 PF 500VDCW	
A1A1C2	0150-0012	C: FXD CER 0.01 UF 20% 1000VDCW	
A1A1C3	0121-0045	C: FXD CER 7-45 PF 500VDCW	
A1A1C4	0150-0012	C: FXD CER 0.01 UF 20% 1000VDCW	
A1A1C5	0160-2249	C: FXD CER 4.7 PF 500VDCW	
A1A1C6	0160-2249	C: FXD CER 4.7 PF 500VDCW	
A1A1C7	0180-0091	C: FXD ELECT 10 UF +50-10% 100VDCW	
A1A1C8	0180-0091	C: FXD ELECT 10 UF +50-10% 100VDCW	
A1A1C9	0150-0121	C: FXD CER 0.1 UF +80-20% 50VDCW	
A1A1C10	0150-0121	C: FXD CER 0.1 UF +80-20% 50VDCW	
A1A1CR1	1901-0376	DIODE: SILICON 35V	
A1A1CR2	1901-0376	DIODE: SILICON 35V	
A1A1CR3	1901-0376	DIODE: SILICON 36V	
A1A1CR4	1901-0376	DIODE: SILICON 35V	
A1A1CR5	1901-0040	DIODE: SILICON 30MA 30WV	
A1A1CR6	1901-0040	DIODE: SILICON 30MA 30WV	
A1A1E1	1200-0475	SOCKET PINS: TRANSISTOR (6) - USED FOR A1A1Q1	
A1A1Q1	1855-0085	Q: FET SILICON DUAL	
A1A1Q2	1853-0098	Q: SI PNP	
A1A1Q3	1853-0098	Q: SI PNP	
A1A1Q4	1853-0036	Q: SI PNP	
A1A1Q5	1853-0036	Q: SI PNP	
A1A1R1	0757-0059	R: FXD MET FLM 1 MEGOHM 1% 1/2W	
A1A1R2	0757-0059	R: FXD MET FLM 1 MEGOHM 1% 1/2W	
A1A1R3	0687-1041	R: FXD COMP 100K OHM 10% 1/2W	
A1A1R4	0687-1041	R: FXD COMP 100K OHM 10% 1/2W	
A1A1R5	0684-3321	R: FXD COMP 3300 OHM 10% 1/4W	
A1A1R6	0684-3321	R: FXD COMP 3300 OHM 10% 1/4W	
A1A1R7	0684-3321	R: FXD COMP 3300 OHM 10% 1/4W	
A1A1R8	0684-3321	R: FXD COMP 3300 OHM 10% 1/4W	
A1A1R9A	2100-3210	R: VAR 10K OHM 10% 1/2W	
A1A1R9B	2100-0564	R: VAR 500 OHM 10% 1/2W	
A1A1R10	0698-3136	R: FXD MET FLM 17.8K OHM 1% 1/8W	
A1A1R11		NOT ASSIGNED	

# See Introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part No.	Description #	Note
A1A1R12	0698-3136	R:FXD MET FLM 17.8K OHM 1% 1/8W	
A1A1R13	0684-3311	R:FXD COMP 330 OHM 10% 1/4W	
A1A1R14	0757-0398	R:FXD MET FLM 75 OHM 1% 1/8W	
A1A1R15	0757-0447	R:FXD MET FLM 16.2K OHM 1% 1/8W	
A1A1R16	0757-0447	R:FXD MET FLM 16.2K OHM 1% 1/8W	
A1A1R17	0684-2731	R:FXD COMP 27K OHM 10% 1/4W	
A1A1R18	0684-2731	R:FXD COMP 27K OHM 10% 1/4W	
A1A1R19	0684-1031	R:FXD COMP 10K OHM 10% 1/4W	
A1A1R20	0684-1031	R:FXD COMP 10K OHM 10% 1/4W	
A1A1R21	0684-2211	R:FXD COMP 220 OHM 10% 1/4W	
A1A1R22	0684-2211	R:FXD COMP 220 OHM 10% 1/4W	
A1A1R23	0684-2211	R:FXD COMP 220 OHM 10% 1/4W	
A1A1R24	0684-6801	R:FXD COMP 68 OHM 10% 1/4W	
A1A1R25	0684-6801	R:FXD COMP 68 OHM 10% 1/4W	
A1A1R26	0757-0440	R:FXD MET FLM 7.50K 1% 1/8W	
A1A1R27	0757-0435	R:FXD FLM 3920 OHM 1% 1/8W	
A1A1R28	0757-0440	R:FXD MET FLM 7.50K 1% 1/8W	
A1A1R29	0757-0431	R:FXD MET FLM 2.43K OHM 1% 1/8W	
A1A2	01205-61902	A: 5 MV ATTENUATOR SWITCH ASSEMBLY	
A1A2C1	0130-0001	C:VAR CER 7-45PF 500VDCW	
A1A2C2	0130-0003	C:VAR CER 1.5-7 PF NPO	
A1A2C3	0140-0090	C:FXD MICA 200 PF 5%	
A1A2C4	0130-0001	C:VAR CER 7-45PF 500VDCW	
A1A2C5	0130-0003	C:VAR CER 1.5-7 PF NPO	
A1A2C6	0140-0090	C:FXD MICA 200 PF 5%	
A1A2R1	0698-8502	R:FXD MET FLM 990K OHM 1% 1/2W	
A1A2R2	0698-3109	R:FXD MET FLM 10.1K OHM 1% 1/8W	
A1A2R3	0698-8502	R:FXD MET FLM 990K OHM 1% 1/2W	
A1A2R4	0698-3109	R:FXD MET FLM 10.1K OHM 1% 1/8W	
A1A2R5	0698-4492	R:FXD FLM 32.4K OHM 1% 1/8W	
A1A2R6	0698-8742	R:FXD FLM 10.8K OHM 1% 1/8W	
A1A2R7	0698-3155	R:FXD MET FLM 4.64K 1% 1/8W	
A1A2R8	0698-6735	R:FXD FLM 1.71K OHM 1% 1/8W	
A1A2R9	0698-6736	R:FXD FLM 831 OHM 1% 1/8W	
A1A2R10	0698-3122	R:FXD MET FLM 412 OHM 1% 1/8W	
A1A2R11- A1A2R14		NOT ASSIGNED	
A1A2R15	2100-2622	R:VAR COMP 200 OHM 30% LIN 3/10W	
A1A2R16	2100-2617	R:VAR COMP 4K OHM 10% 10 CCLOG 1/4W	
A1A2S1	3100-2524	SWITCH:ROTARY 6 SECT 12 POSITION	
A2	01205-63502	A: CHANNEL B PREAMPLIFIER MODULE	
A2A1	01205-66501	A: 5 MV PREAMPLIFIER SUBASSEMBLY	
A2A2	01205-61902	A: 5 MV ATTENUATOR SWITCH ASSEMBLY	
A2C1	0160-0917	C: FXD MY 0.1 UF 20% 600VDCW MATCHED PAIR	
A2MP1		NOT ASSIGNED	

# See Introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part No.	Description #	Note
A2MP2 A2MP3	01200-60603 01200-23704	SHIELD:AMPLIFIER SHAFT:BAL PUT	
A2S1	3100-1376	SWITCH: LEVER (- COUPLING)	
A2S2	3100-1376	SWITCH: LEVER (+ COUPLING)	
A2A1	01205-66501	A: 5 MV PREAMPLIFIER SUBASSEMBLY	
A2A1C1	0121-0045	C:FXD CER 7-45 PF 500VDCW	
A2A1C2	0150-0012	C:FXD CER 0.01 UF 20% 100VDCW	
A2A1C3	0121-0045	C:FXD CER 7-45 PF 500VDCW	
A2A1C4	0150-0012	C:FXD CER 0.01 UF 20% 100VDCW	
A2A1C5	0160-2249	C:FXD CER 4.7-0.25 PF 500VDCW	
A2A1C6	0160-2249	C:FXD CER 4.7-0.25 PF 500VDCW	
A2A1C7	0180-0091	C:FXD ELECT 10 UF +50-10% 100VDCW	
A2A1C8	0180-0091	C:FXD ELECT 10 UF +50-10% 100VDCW	
A2A1C9	0150-0121	C:FXD CER 0.1 UF +80-20% 50VDCW	
A2A1C10	0150-0121	C:FXD CER 0.1 UF +80-20% 50VDCW	
A2A1CR1	1901-0376	DIODE:SILICON 35V	
A2A1CR2	1901-0376	DIODE: SILICON 35V	
A2A1CR3	1901-0376	DIODE: SILICON 35V	
A2A1CR4	1901-0376	DIODE: SILICON 35V	
A2A1CR5	1901-0040	DIODE: SILICON 30MA 30WV	
A2A1CR6	1901-0040	DIODE: SILICON 30MA 30WV	
A2A1E1	1200-0475	SOCKET PINS: TRANSISTOR (8) - USED FOR A2A1Q1	
A2A1O1	1855-0085	Q: FET SILICON DUAL	
A2A1Q2	1853-0098	Q: SI PNP	
A2A1Q3	1853-0098	Q: SI PNP	
A2A1Q4	1853-0036	Q: SI PNP	
A2A1Q5	1853-0036	Q: SI PNP	
A2A1R1	0757-0059	R:FXD MET FLM 1 MEGOHM 1% 1/2W	
A2A1R2	0757-0059	R:FXD MET FLM 1 MEGOHM 1% 1/2W	
A2A1R3	0687-1041	R:FXD COMP 100K OHM 10% 1/2W	
A2A1R4	0687-1041	R:FXD COMP 100K OHM 10% 1/2W	
A2A1R5	0684-3321	R:FXD COMP 3300 OHM 10% 1/4W	
A2A1R6	0684-3321	R:FXD COMP 3300 OHM 10% 1/4W	
A2A1R7	0684-3321	R: FXD COMP 3300 OHM 10% 1/4W	
A2A1R8	0684-3321	R: FXD COMP 3300 OHM 10% 1/4W	
A2A1R9A	2100-3210	R: VAR 10K OHM 10% 1/2W	
A2A1R9B	2100-0664	R: VAR 500 OHM 10% 1/2W	
A2A1R10	0688-3136	R: FXD MET FLM 17.8K OHM 1% 1/8W	
A2A1R11		NOT ASSIGNED	
A2A1R12	0698-3136	R:FXD MET FLM 17.8K OHM 1% 1/8W	
A2A1R13	0684-3311	R:FXD COMP 330 OHM 10% 1/4W	
A2A1R14	0757-0398	R:FXD MET FLM 75 OHM 1% 1/8W	
A2A1R15	0757-0447	R:FXD MET FLM 16.2K OHM 1% 1/8W	
A2A1R16	0757-0447	R:FXD MET FLM 16.2K OHM 1% 1/8W	

# See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part No.	Description #	Note
A2A1R17	0684-2731	R:FXD COMP 27K OHM 10% 1/4W	
A2A1R18	0684-2731	R:FXD COMP 27K OHM 10% 1/4W	
A2A1R19	0684-1031	R:FXD COMP 10K OHM 10% 1/4W	
A2A1R20	0684-1031	R:FXD COMP 10K OHM 10% 1/4W	
A2A1R21	0757-2211	R:FXD COMP 220 OHM 10% 1/4W	
A2A1R22	0684-2211	R:FXD COMP 220 OHM 10% 1/4W	
A2A1R23	0684-2211	R:FXD COMP 220 OHM 10% 1/4W	
A2A1R24	0684-6801	R:FXD COMP 68 OHM 10% 1/4W	
A2A1R25	0684-6801	R:FXD COMP 68 OHM 10% 1/4W	
A2A1R26	0757-0440	R:FXD MET FLM 7.50K 1% 1/8W	
A2A1R27	0757-0435	R:FXD FLM 3920 OHM 1% 1/8W	
A2A1R28	0757-0440	R:FXD MET FLM 7.50K 1% 1/8W	
A2A1R29	0757-0431	R:FXD MET FLM 2.43K OHM 1% 1/8W	
A2A2	01205-61902	A: 5 MV ATTENUATOR SWITCH ASSEMBLY	
A2A2C1	0130-0001	C:VAR CER 7-45PF 500VDCW	
A2A2C2	0130-0003	C:VAR CER 1.5-7 PF NPO	
A2A2C3	0140-0090	C:FXD MICA 200 PF 5%	
A2A2C4	0130-0001	C:VAR CER 7-45PF 500VDCW	
A2A2C5	0130-0003	C:VAR CER 1.5-7 PF NPO	
A2A2C6	0140-0090	C:FXD MICA 200 PF 5%	
A2A2R1	0698-8502	R:FXD MET FLM 990K OHM 1% 1/2W	
A2A2R2	0698-3109	R:FXD MET FLM 10.1K OHM 1% 1/8W	
A2A2R3	0698-8502	R:FXD MET FLM 990K OHM 1% 1/2W	
A2A2R4	0698-3109	R:FXD MET FLM 10.1K OHM 1% 1/8W	
A2A2R5	0698-4492	R:FXD FLM 32.4K OHM 1% 1/8W	
A2A2R6	0698-8742	R:FXD FLM 10.8K OHM 1% 1/8W	
A2A2R7	0698-3155	R:FXD MET FLM 4.64K 1% 1/8W	
A2A2R8	0698-6735	R:FXD FLM 1.71K OHM 1% 1/8W	
A2A2R9	0698-6736	R:FXD FLM 831 OHM 1% 1/8W	
A2A2R10	0698-3122	R:FXD MET FLM 412 OHM 1% 1/8W	
A2A2R11-			
A2A2R14		NOT ASSIGNED	
A2A2R15	2100-2622	R:VAR COMP 200 OHM 30% LIN 3/10W	
A2A2R16	2100-2617	R:VAR COMP 4K OHM 10% 10 CCLOG 1/4W	
A2A2S1	3100-2524	SWITCH:ROTARY 6 SECT 12 POSITION	
A3	01200-66504	A: DUAL CHANNEL OUTPUT AMPLIFIER	
A3C1	0160-2240	C:FXD CER 2.0 PF 500VDCW	
A3C2	0160-2240	C:FXD CER 2.0 PF 500VDCW	
A3C3	0160-2240	C:FXD CER 2.0 PF 500VDCW	
A3C4	0160-2240	C:FXD CER 2.0 PF 500VDCW	
A3C5	0160-2237	C:FXD CER 1.2 PF 500VDCW	
A3C6	0160-2913	C:FXD CER 0.01 UF +85-20% 500VDCW	
A3C7	0140-0205	C:FXD MICA 62 PF 5%	
A3C8	0140-0205	C:FXD MICA 270 PF 5%	
A3C9	5081-7647	C:FXD MICA 270 PF 5% 500 WVDC (matched pair-includes A3C12)	
A3C10	0160-2203	C:FXD MICA 91 PF 5%	

# See Introduction to this section for ordering information



Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part No.	Description #	Note
A3C11	0160-2203	C: FXD MICA 91 PF 5%	
A3C12	5081-7647	C: FXD MICA 270 PF 5% 500 WDCV (matched pair-includes A3C9)	
A3C13	0160-2930	C: FXD CER 0.01 UF +80-20% 100VDCW	
A3C14	0180-0091	C: FXD ELECT 10 UF +50-10% 100VDCW	
A3C15	0180-0091	C: FXD ELECT 10 UF +50-10% 100VDCW	
A3CR1	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR2	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR3	1901-0050	DIODE: SILICON 75V	
A3CR4	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR5	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR6	1901-0050	DIODE: SILICON 75V	
A3CR7	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR8	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR9	1901-0050	DIODE: SILICON 75V	
A3CR10	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR11	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR12	1901-0050	DIODE: SILICON 75V	
A3CR13	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR14	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR15	1901-0050	DIODE: SILICON 75V	
A3CR16	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR17	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR18	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR19	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR20	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR21	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR22	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR23	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR24	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR25	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR26	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR27	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR28	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR29	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR30	1901-0040	DIODE: SILICON 30MA 30MV	
A3CR31	1901-0040	DIODE: SILICON 30MA 30MV	
A3L1	9140-0137	COIL: FXD RF 1000 UH 5%	
A3L2	9140-0137	COIL: FXD RF 1000 UH 5%	
A3L3	9140-0137	COIL: FXD RF 1000 UH 5%	
A3L4	9140-0137	COIL: FXD RF 1000 UH 5%	
A3MP1	01200-01201	BRACKET: MODE SWITCH MTG.	
A3MP2	1205-0095	HEAT SINK: TRANSISTOR	
A301	1853-0098	Q: SI PNP	
A302	1853-0098	Q: SI PNP	
A303	1854-0215	Q: SI NPN	
A304	1854-0215	Q: SI NPN	
A305	1854-0234	Q: SI NPN	

# See Introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part No.	Description #	Note
A306	1854-0234	Q:SI NPN	
A307	1854-0215	Q:SI NPN	
A308	1854-0215	Q:SI NPN	
A309	1854-0215	Q:SI NPN	
A3010	1854-0215	Q:SI NPN	
A3011	1854-0234	Q:SI NPN	
A3012	1854-0234	Q:SI NPN	
A3013	1854-0022	Q:SI NPN	
A3014	1854-0022	Q:SI NPN	
A3015	1853-0036	Q:SI PNP	
A3016	1853-0036	Q:SI PNP	
A3017	1854-0022	Q:SI NPN	
A3018	1854-0022	Q:SI NPN	
A3R1	0757-0416	R:FXD MET FLM 511 OHM 1% 1/8W	
A3R2	0684-8221	R:FXD COMP 8200 OHM 10% 1/4W	
A3R3	0698-3447	R:FXD MET FLM 422 OHM 1% 1/8W	
A3R4	2100-2578	R:VAR COMP 4 X 1.5K OHM 30% LIN 1/4W	
A3R5	0684-8221	R:FXD COMP 8200 OHM 10% 1/4W	
A3R6	0684-2211	R:FXD COMP 220 OHM 10% 1/4W	
A3R7	0684-2211	R:FXD COMP 220 OHM 10% 1/4W	
A3R8	0683-3935	R:FXD COMP 39K OHM 5% 1/4W	
A3R9	0683-3935	R:FXD COMP 39K OHM 5% 1/4W	
A3R10	0757-0822	R:FXD FLM 1.30K OHM 1% 1/2W	
A3R11	0757-0822	R:FXD FLM 1.30K OHM 1% 1/2W	
A3R12	0767-0008	R:FXD MET OX FLM 10K OHM 5% 3W	
A3R13	0767-0008	R:FXD MET OX FLM 10K OHM 5% 3W	
A3R14	0757-0416	R:FXD MET FLM 511 OHM 1% 1/8W	
A3R15	0757-0416	R:FXD MET FLM 511 OHM 1% 1/8W	
A3R16	0698-3447	R:FXD MET FLM 422 OHM 1% 1/8W	
A3R17	0683-3935	R:FXD COMP 39K OHM 5% 1/4W	
A3R18	0683-3935	R:FXD COMP 39K OHM 5% 1/4W	
A3R19	0757-0822	R:FXD FLM 1.30K OHM 1% 1/2W	
A3R20	0757-0822	R:FXD FLM 1.30K OHM 1% 1/2W	
A3R21	0757-0442	R:FXD MET FLM 10.0K 1% 1/8W	
A3R22	0683-3935	R:FXD COMP 39K OHM 5% 1/4W	
A3R23	0757-0274	R:FXD MET FLM 1.21K OHM 1% 1/8W	
A3R24	0757-0274	R:FXD MET FLM 1.21K OHM 1% 1/8W	
A3R25	0757-0445	R:FXD FLM 13K OHM 1% 1/8W	
A3R26	0757-0416	R:FXD MET FLM 511 OHM 1% 1/8W	
A3R27	0698-3447	R:FXD MET FLM 422 OHM 1% 1/8W	
A3R28	0757-0822	R:FXD FLM 1.30K OHM 1% 1/2W	
A3R29	0757-0822	R:FXD FLM 1.30K OHM 1% 1/2W	
A3R30	0767-0008	R:FXD MET OX FLM 10K OHM 5% 3W	
A3R31	0767-0008	R:FXD MET OX FLM 10K OHM 5% 3W	
A3R32	0757-0401	R:FXD MET FLM 100 OHM 1% 1/8W	
A3R33	0757-0456	R:FXD MET FLM 43.2K OHM 1% 1/8W	
A3R34	0684-1051	R:FXD COMP 1MEGOHM 10% 1/4W	
A3R35	0757-0442	R:FXD MET FLM 10.0K 1% 1/8W	

# See Introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part No.	Description #	Note
A3R36	0757-0486	R: FXD MET FLM 750K OHM 1% 1/8W	
A3R37	0698-3457	R: FXD MET FLM 316K OHM 1% 1/8W	
A3R38	0684-1541	R: FXD COMP 150K OHM 10% 1/4W	
A3R39	0757-0428	R: FXD MET FLM 1.62K OHM 1% 1/8W	
A3R40	0757-0751	R: FXD MET FLM 7.6K OHM 1% 1/4W	
A3R41	0757-0438	R: FXD MET FLM 5.11K 1% 1/8W	
A3R42	0757-0433	R: FXD MET FLM 3.32K OHM 1% 1/8W	
A3R43	0757-0458	R: FXD MET FLM 51.1K OHM 1% 1/8W	
A3R44	0757-0467	R: FXD MET FLM 121K OHM 1% 1/8W	
A3R45	0698-5102	R: FXD COMP 1.2 MEGOHM 10% 1/4W	
A3R46	0757-0467	R: FXD MET FLM 121K OHM 1% 1/8W	
A3R47	0698-5102	R: FXD COMP 1.2 MEGOHM 10% 1/4W	
A3R48	0757-0443	R: FXD MET FLM 11.0K OHM 1% 1/8W	
A3R49	0757-0458	R: FXD MET FLM 51.1K OHM 1% 1/8W	
A3R50	0757-0438	R: FXD MET FLM 5.11K 1% 1/8W	
A3R51	0757-0433	R: FXD MET FLM 3.32K OHM 1% 1/8W	
A3R52	0757-0441	R: FXD MET FLM 8.25K 1% 1/8W	
A3R53	0757-0428	R: FXD MET FLM 1.62K OHM 1% 1/8W	
A3R54	0757-0751	R: FXD MET FLM 7.6K OHM 1% 1/4W	
A3R55	0684-1541	R: FXD COMP 150K OHM 10% 1/4W	
A3R56	0757-0413	R: FXD FLM 392 OHM 1% 1/8W	
A3R57	0757-0414	R: FXD FLM 432 OHM 1% 1/8W	
A3R58	0684-4711	R: FXD COMP 470 OHM 10% 1/4W	
A3R59	0698-0085	R: FXD MET FLM 2.61K OHM 1% 1/8W	
A3R60	0757-0289	R: FXD MET FLM 13.3K OHM 1% 1/8W	
A3R61	0757-0394	R: FXD MET FLM 51.1 OHM 1% 1/8W	
A3R62	0757-0397	R: FXD MET FLM 68.1 OHM 1% 1/8W	
A3S1	3100-1377	SWITCH: ROTARY 5 SECTION 5 POSITION	
A3W1	01200-61603	CABLE ASSY: COAX	
A4	01200-63503	A: HORIZONTAL MODULE	
A4A1	01200-66508	A: SWEEP CIRCUIT	
A4A2	01200-61902	A: SWEEP TIME SWITCH	
A4C1	0130-0016	C: VAR CER 5-25 PF NPO	
A4C2	0180-0155	C: FXD ELECT 2.2 UF 20% 20VDCW	
A4C3	0180-0155	C: FXD ELECT 2.2 UF 20% 20VDCW	
A4DS1		DS: NSR P/O A4S6	
A4L1	9140-0179	COIL: FXD RF 22UH 10%	
A4MP1	01200-60602	SHIELD: SWEEP ASSY	
A4R1	01200-61501	RESISTOR: MODIFIED	
A4R2	0757-0350	R: FXD MET FLM 908K OHM 1% 1/4W	
A4R3	2100-2613	R: VAR CARBON 100K OHM 20% LIN 1/5W	
A4R4	2100-1509	R: VAR 20K OHM 20% LIN 1/3W	
A4S1	3100-1375	SWITCH: LEVER (SOURCE)	
A4S2	3100-1374	SWITCH: LEVER (COUPLING)	
A4S3		SWITCH: (TRIGGER LEVEL) NSR P/O A4R3	
A4S4	3100-1373	SWITCH: LEVER (SLOPE)	
A4S5	3100-1372	SWITCH: LEVER (MODE)	
A4S6	3101-2431	SWITCH: PUSHBUTTON SP ST W/LT	
A4W1	01200-61607	LEAD: TWIN OUTPUT	

# See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part No.	Description #	Note
A4A1	01200-66508	A: SWEEP CIRCUIT	
A4A1C1	0160-2959	C:FXD CER 1000 PF +100-0% 600VDCW	
A4A1C2	0160-2917	C:FXD CER 0.05 UF +80-20% 100VDCW	
A4A1C3	0160-2917	C:FXD CER 0.05 UF +80-20% 100VDCW	
A4A1C4	0160-2917	C:FXD CER 0.05 UF +80-20% 100VDCW	
A4A1C5	0160-2917	C:FXD CER 0.05 UF +80-20% 100VDCW	
A4A1C6	0160-2917	C:FXD CER 0.05 UF +80-20% 100VDCW	
A4A1C7	0180-0155	C:FXD ELECT 2.2 UF 20% 20VDCW	
A4A1C8	0160-2258	C:FXD CER 11 PF 5% 500VDCW	
A4A1C9	0160-2258	C:FXD CER 11 PF 5% 500VDCW	
A4A1C10	0140-0190	C:FXD MICA 200 PF 5%	
A4A1C11	0160-2917	C:FXD CER 0.05 UF +80-20% 100VDCW	
A4A1C12	0160-2258	C:FXD CER 11 PF 5% 500VDCW	
A4A1C13	0160-2917	C:FXD CER 0.05 UF +80-20% 100VDCW	
A4A1C14	0160-2959	C:FXD CER 1000 PF +100-0% 600VDCW	
A4A1C15	0180-0155	C:FXD ELECT 2.2 UF 20% 20VDCW	
A4A1C16	0150-0115	C:FXD CER 27 PF 10% 500VDCW	
A4A1C17	0160-2917	C:FXD CER 0.05 UF +80-20% 100VDCW	
A4A1C18	0160-2917	C:FXD CER 0.05 UF +80-20% 100VDCW	
A4A1C19	0160-2258	C:FXD CER 11 PF 5% 500VDCW	
A4A1C20	0160-2258	C:FXD CER 11 PF 5% 500VDCW	
A4A1C21	0140-0198	C:FXD MICA 200 PF 5%	
A4A1C22	0150-0115	C:FXD CER 27 PF 10% 500VDCW	
A4A1C23	0140-0198	C:FXD MICA 200 PF 5%	
A4A1C24	0150-0115	C:FXD CER 27 PF 10% 500VDCW	
A4A1C25	0160-2913	C:FXD CER 0.01 UF +85-20% 500VDCW	
A4A1C26	0140-0198	C:FXD MICA 200 PF 5%	
A4A1C27	0140-0207	C:FXD MICA 330 PF 5%	
A4A1C28	0160-2917	C:FXD CER 0.05 UF +80-20% 100VDCW	
A4A1C29	0140-0207	C:FXD MICA 330 PF 5%	
A4A1C30	0160-2917	C:FXD CER 0.05 UF +80-20% 100VDCW	
A4A1C31	0160-2913	C:FXD CER 0.01 UF +85-20% 500VDCW	
A4A1C32	0150-0115	C:FXD CER 27 PF 10% 500VDCW	
A4A1CR1	1901-0040	DIODE:SILICON 30MA 30WV	
A4A1CR2	1901-0040	DIODE:SILICON 30MA 30WV	
A4A1CR3	1901-0040	DIODE:SILICON 30MA 30WV	
A4A1CR4	1912-0009	DIODE TUNNEL:GERMANIUM 1N3712	
A4A1CR5	1901-0040	DIODE:SILICON 30MA 30WV	
A4A1CR6	1901-0040	DIODE:SILICON 30MA 30WV	
A4A1CR7	1901-0040	DIODE:SILICON 30MA 30WV	
A4A1CR8	1901-0040	DIODE:SILICON 30MA 30WV	
A4A1CR9	1901-0376	DIODE:SILICON 35V	
A4A1CR10	1901-0040	DIODE:SILICON 30MA 30WV	
A4A1CR11	1901-0040	DIODE:SILICON 30MA 30WV	

# See Introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part No.	Description #	Note
A4A1CR12	1901-0040	DIODE:SILICON 30MA 30WV	
A4A1CR13	1910-0016	DIODE:GERMANIUM 100MA/0.85V 60PIV	
A4A1CR14	1901-0040	DIODE:SILICON 30MA 30WV	
A4A1CR15	1901-0040	DIODE:SILICON 30MA 30WV	
A4A1CR16	1901-0040	DIODE:SILICON 30MA 30WV	
A4A1CR17	1901-0040	DIODE:SILICON 30MA 30WV	
A4A101	1854-0539	Q:SI NPN	
A4A102	1854-0539	Q:SI NPN	
A4A103	1853-0036	Q:SI PNP	
A4A104	1854-0539	Q:SI NPN	
A4A105	1854-0539	Q:SI NPN	
A4A106	1854-0071	Q:SI NPN	
A4A107	1854-0071	Q:SI NPN	
A4A108	1853-0036	Q:SI PNP	
A4A109	1854-0215	Q:SI NPN	
A4A1010	1854-0071	Q:SI NPN	
A4A1011	1853-0036	Q:SI PNP	
A4A1012	1854-0071	Q:SI NPN	
A4A1013	1853-0036	Q:SI PNP	
A4A1014	1853-0036	Q:SI PNP	
A4A1015	1853-0036	Q:SI PNP	
A4A1016	1855-0090	Q:FET N-CHANNEL	
A4A1017	1854-0071	Q:SI NPN	
A4A1018	1853-0036	Q:SI PNP	
A4A1019	1853-0036	Q:SI PNP	
A4A1020	1854-0071	Q:SI NPN	
A4A1021	1853-0036	Q:SI PNP	
A4A1022	1854-0071	Q:SI NPN	
A4A1023	1853-0036	Q:SI PNP	
A4A1024	1854-0071	Q:SI NPN	
A4A1025	1854-0071	Q:SI NPN	
A4A1026	1853-0036	Q:SI PNP	
A4AIR1	0698-5092	R:FXD FLM 160K OHM 1% 1/8W	
A4AIR2	0757-0976	R:FXD FLM 150K OHM 2% 1/8W	
A4AIR3	0757-0427	R:FXD MET FLM 1.5K 1% 1/8W	
A4AIR4	0757-0289	R:FXD MET FLM 13.3K OHM 1% 1/8W	
A4AIR5	0687-1531	R:FXD COMP 15K OHM 10% 1/2W	
A4AIR6	0757-0443	R:FXD MET FLM 11.0K OHM 1% 1/8W	
A4AIR7	0757-0959	R:FXD FLM 30K OHM 2% 1/8W	
A4AIR8	0757-0914	R:FXD FLM 390 OHM 2% 1/8W	
A4AIR9	0757-0964	R:FXD FLM 47K OHM 2% 1/8W	
A4AIR10	2100-0347	R:VAL COMP 4 X 25K OHM 30% LIN 1/4W	
A4AIR11	0684-2231	R:FXD COMP 22K OHM 10% 1/4W	
A4AIR12	0698-3640	R:FXD MET OX 1800 OHM 5% 2W	
A4AIR13	0684-2201	R:FXD COMP 22 OHM 10% 1/4W	
A4AIR14	0684-2231	R:FXD COMP 22K OHM 10% 1/4W	
A4AIR15	0684-2231	R:FXD COMP 22K OHM 10% 1/4W	

# See Introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part No.	Description #	Note
A4A1R16	0684-2211	R:FXD COMP 220 OHM 10% 1/4W	
A4A1R17	0684-2211	R:FXD COMP 220 OHM 10% 1/4W	
A4A1R18	0684-4741	R:FXD COMP 470K OHM 10% 1/4W	
A4A1R19	0757-0924	R:FXD MET FLM 1K OHM 2% 1/8W	
A4A1R20	0757-0952	R:FXD FLM 15K OHM 2% 1/8W	
A4A1R21	2100-0554	R:VAR 500 OHM 10% 1/2W	
A4A1R22	0698-6814	R:FXD FLM 10K OHM 2% 1/4W	
A4A1R23	0684-2231	R:FXD COMP 22K OHM 10% 1/4W	
A4A1R24	0757-0935	R:FXD FLM 3K OHM 2% 1/8W	
A4A1R25	0757-0928	R:FXD COMP 22K OHM 2% 1/8W	
A4A1R26	0757-0914	R:FXD FLM 390 OHM 2% 1/8W	
A4A1R27	0757-0962	R:FXD FLM 39K OHM 2% 1/8W	
A4A1R28	0684-2211	R:FXD COMP 220 OHM 10% 1/4W	
A4A1R29	0760-0028	R:FXD METOX 8.2K OHM 2% 1W	
A4A1R30	0757-0928	R:FXD FLM 1.5K OHM 2% 1/8W	
A4A1R31	0684-2231	R:FXD COMP 22K OHM 10% 1/4W	
A4A1R32	0684-2241	R:FXD COMP 220K OHM 10% 1/4W	
A4A1R33	0684-2211	R:FXD COMP 220 OHM 10% 1/4W	
A4A1R34A	2100-0558	R:VAR 20K OHM 10% 1/2W	
A4A1R34B	2100-0558	R:VAR 20K OHM 10% 1/2W	
A4A1R35	0684-2211	R:FXD COMP 220 OHM 10% 1/4W	
A4A1R36	2100-0381	R:VAR COMP 25K OHM 30% LIN 1/4W	
A4A1R37	0757-0972	R:FXD FLM 100K OHM 2% 1/8W	
A4A1R38	0757-0457	R:FXD MET FLM 47.5K OHM 1% 1/8W	
A4A1R39	0684-3331	R:FXD COMP 33K OHM 10% 1/4W	
A4A1R40	0684-1041	R:FXD COMP 100K OHM 10% 1/4W	
A4A1R41	0684-2211	R:FXD COMP 220 OHM 10% 1/4W	
A4A1R42	0684-3331	R:FXD COMP 33K OHM 10% 1/4W	
A4A1R43	0757-0928	R:FXD FLM 1.5K OHM 2% 1/8W	
A4A1R44	0757-0972	R:FXD FLM 100K OHM 2% 1/8W	
A4A1R45	0757-0964	R:FXD FLM 47K OHM 2% 1/8W	
A4A1R46	0698-3155	R:FXD MET FLM 4.64K 1% 1/8W	
A4A1R47	0757-0453	R:FXD MET FLM 30.1K OHM 1% 1/8W	
A4A1R48	0757-0449	R:FXD FLM 20K OHM 1% 1/8W	
A4A1R49	0757-0914	R:FXD FLM 390 OHM 2% 1/8W	
A4A1R50	0698-6816	R:FXD FLM 6.2K OHM 2% 1/4W	
A4A1R51	0757-0931	R:FXD MET FLM 2K OHM 2% 1/8W	
A4A1R52	0757-0972	R:FXD FLM 100K OHM 2% 1/8W	
A4A1R53	0757-0952	R:FXD FLM 15K OHM 2% 1/8W	
A4A1R54	0684-4741	R:FXD COMP 470K OHM 10% 1/4W	
A4A1R55	0684-3331	R:FXD COMP 33K OHM 10% 1/4W	
A4A1R56	0757-0288	R:FXD MET FLM 9.09K 1% 1/8W	
A4A1R57	0684-2201	R:FXD COMP 22 OHM 10% 1/4W	
A4A1R58	0684-2201	R:FXD COMP 22 OHM 10% 1/4W	
A4A1R59	0757-0924	R:FXD MET FLM 1K OHM 2% 1/8W	
A4A1R60	0684-1041	R:FXD COMP 100K OHM 10% 1/4W	
A4A1R61	0684-1041	R:FXD COMP 100K OHM 10% 1/4W	
A4A1R62	0757-0935	R:FXD FLM 3K OHM 2% 1/8W	
A4A1R63	0757-0972	R:FXD FLM 100K OHM 2% 1/8W	
A4A1R64	0757-0964	R:FXD FLM 47K OHM 2% 1/8W	

# See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part No.	Description #	Note
A4A1R65	0757-0757	R:FXD MET FLM 15K OHM 1% 1/4W	
A4A1R66	0757-0281	R:FXD MET FLM 2.74K OHM 1% 1/8W	
A4A1R67	0698-6814	R:FXD FLM 10K OHM 2% 1/4W	
A4A1R68	0757-0944	R:FXD FLM 6.8K OHM 2% 1/8W	
A4A1R69	0698-3450	R:FXD MET FLM 42.2K OHM 1% 1/8W	
A4A1R70	0684-1051	R:FXD COMP 1MEG OHM 10% 1/4W	
A4A1R71	0757-0952	R:FXD FLM 15K OHM 2% 1/8W	
A4A1R72	0757-0289	R:FXD MET FLM 13.3K OHM 1% 1/8W	
A4A1R73	0684-2231	R:FXD COMP 22K OHM 10% 1/4W	
A4A1R74	0757-0976	R:FXD FLM 150K OHM 2% 1/8W	
A4A1R75	0757-0959	R:FXD FLM 30K OHM 2% 1/8W	
A4A1R76	0757-0095	R:FXD MET OX 5100 OHM 2% 1/2W	
A4A1R77	0757-0950	R:FXD FLM 12K OHM 2% 1/8W	
A4A1R78	0757-0928	R:FXD FLM 1.5K OHM 2% 1/8W	
A4A1R79	0757-0930	R:FXD FLM 1.8K OHM 2% 1/8W	
A4A1R80	0698-4815	R:FXD FLM 1.8K OHM 2% 1/4W	
A4A1R81	0757-0944	R:FXD FLM 6.8K OHM 2% 1/8W	
A4A1R82	0757-0940	R:FXD MET FLM 4.7K OHMS 2% 1/8W	
A4A1R83	0757-0956	R:FXD FLM 22K OHM 2% 1/8W	
A4A1R84	0757-0930	R:FXD FLM 1.8K OHM 2% 1/8W	
A4A1R85	0684-2211	R:FXD COMP 220 OHM 10% 1/4W	
A4A1R86	0698-3155	R:FXD MET FLM 4.64K 1% 1/8W	
A4A1R87	0698-3155	R:FXD MET FLM 4.64K 1% 1/8W	
A4A1VR1	1902-0025	DIODE,BREAKDOWN:10.0V 5% 400 MW	
A4A1VR2	1902-0055	DIODE BREAKDOWN:14.7V 10%	
A4A1VR3	1902-0049	DIODE:BREAKDOWN 6.19V 5%	
A4A2	01200-61902	A: SWEEP TIME SWITCH	
A4A2C1	0170-0022	C:FXD MY 0.1UF 20% 600VDCW	
A4A2C2	0160-2204	C:FXD MICA 100PF 5%	
A4A2C3	0160-2258	C:FXD CER 11 PF 5% 500VDCW	
A4A2C4	0150-0093	C:FXD CER 0.01 UF +80-20% 100VDCW	
A4A2C5	0160-3133	C:FXD MY 2 UF 10% 100VDCW	
A4A2C6	0170-0063	C:FXD MY .02 UF 10% 400VDCW	
A4A2C7	0160-0168	C:FXD MICA 0.1 UF 10% 200VDCW	
A4A2C8	0160-0194	C:FXD MY 0.015 UF 10%	
A4A2C9	0160-0155	C:FXD MY 3300 PF 10%	
A4A2CR1	1901-0040	DIODE:SILICON 30MA 30MV	
A4A2CR2	1901-0040	DIODE:SILICON 30MA 30MV	
A4A2HP1	3130-0038	COUPLER:SWITCH SST U-SHAPED	
A4A2HP2	01200-01203	BRACKET:SWEEP SWITCH MOUNTING	
A4A2Q1	1854-0358	Q:SI NPN	

# See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part No.	Description #	Note
A4A2R1	0698-4009	R:FXD FLM 50K OHM 1% 1/8W	
A4A2R2	0757-0453	R:FXD MET FLM 30.1K OHM 1% 1/8W	
A4A2R3	0757-0442	R:FXD MET FLM 10.0K 1% 1/8W	
A4A2R4	0757-0442	R:FXD MET FLM 10.0K 1% 1/8W	
A4A2R5	2100-2616	R:VAR COMP 7K/25K OHM 30/203 LIN	
A4A2R6	0698-5092	R:FXD FLM 100K OHM 1% 1/8W	
A4A2R7	0757-0959	R:FXD FLM 30K OHM 2% 1/8W	
A4A2R8	0757-0124	R:FXD MET FLM 39.2K OHM 1% 1/8W	
A4A2R9	0757-0479	R:FXD MET FLM 392K OHM 1% 1/8W	
A4A2R10	0757-0471	R:FXD MET FLM 182K OHM 1% 1/8W	
A4A2R11	0698-4482	R:FXD FLM 17.4K OHM 1% 1/8W	
A4A2R12	0757-0472	R:FXD MET FLM 200K OHM 1% 1/8W	
A4A2R13	0757-0465	R:FXD MET FLM 100K 1% 1/8W	
A4A2R14	0698-5675	R:FXD FLM 30 MEGOHM 1% 1W	
A4A2R15	0698-7091	R:FXD MET FLM 10 MEGOHM 1% 1/2W	
A4A2R16	0698-7091	R:FXD MET FLM 10 MEGOHM 1% 1/2W	
A4A2R17	0757-0344	R:FXD MET FLM 1.00 MEGOHM 1% 1/4W	
A4A2R18	0757-0344	R:FXD MET FLM 1.00 MEGOHM 1% 1/4W	
A4A2R19	0757-0950	R:FXD MET FLM 12K 2% 1/8W	
A4A2S1	3100-1378	SWITCH:ROTARY DUAL, CETENT	
A4A2W1	01200-61628	CABLE:SWEET SWITCH	
A5	01200-66514	ASSY:LOW VOLTAGE POWER SUPPLY	
A5C1	0180-2138	C:FXD ELECT 150 UF +50-10% 250VDCW	
A5C2	0180-2159	C:FXD ELECT 300 UF +75-10% 150VDCW	
A5C3	0160-0168	C:FXD MICA 0.1 UF 10% 200VDCW	
A5C4	0180-2134	C:FXD ELECT 20 UF +50-10% 100VDCW	
A5C5	0180-2159	C:FXD ELECT 300 UF +75-10% 150VDCW	
A5C6	0160-0168	C:FXD MICA 0.1 UF 10% 200VDCW	
A5C7	0180-0155	C:FXD ELECT 2.2 UF 20% 20VDCW	
A5C8	0180-1731	C:FXD ELECT 4.7 UF 10% 50VDCW	
A5C9	0180-2134	C:FXD ELECT 20 UF +50-10% 100VDCW	
A5CR1	1901-0040	DIODE:SILICON 30MA 30mV	
A5CR2	1901-0028	DIODE:SILICON 0.75A 400PIV	
A5CR3	1901-0028	DIODE:SILICON 0.75A 400PIV	
A5CR4	1901-0028	DIODE:SILICON 0.75A 400PIV	
A5CR5	1901-0028	DIODE:SILICON 0.75A 400PIV	
A5CR6	1901-0026	DIODE:SILICON 0.75A 200PIV	
A5CR7	1901-0026	DIODE:SILICON 0.75A 200PIV	
A5CR8	1901-0026	DIODE:SILICON 0.75A 200PIV	
A5CR9	1901-0026	DIODE:SILICON 0.75A 200PIV	
A5CR10	1901-0040	DIODE:SILICON 30MA 30mV	
A5CR11	1901-0040	DIODE:SILICON 30MA 30mV	

# See Introduction to this section for ordering information



Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HPPart No.	Description #	Note
A5CR12	1901-0040	DIODE:SILICON 30MA 30MV	
A5CR13	1901-0026	DIODE:SILICON 0.75A 200PIV	
A5CR14	1901-0026	DIODE:SILICON 0.75A 200PIV	
A5CR15	1901-0026	DIODE:SILICON 0.75A 200PIV	
A5CR16	1901-0026	DIODE:SILICON 0.75A 200PIV	
A5CR17	1901-0026	DIODE:SILICON 0.75A 200PIV	
A5CR18	1901-0040	DIODE:SILICON 30MA 30MV	
A5CR19	1901-0040	DIODE:SILICON 30MA 30MV	
A5CR20	1901-0040	DIODE:SILICON 30MA 30MV	
A5CR21	1901-0026	DIODE:SILICON 0.75A 200PIV	
A5F1	2110-0004	FUSE:CARTRIDGE 1/4 AMP 250V	
A5F2	2110-0269 2110-0012	CLIP:FUSE 0.250" DIA FUSE:CARTRIDGE 0.5A(230V OPERATION)	
A5F3	2110-0269 2110-0012 2110-0269	CLIP:FUSE 0.250" DIA FUSE:CARTRIDGE 0.5A(230V OPERATION) CLIP:FUSE 0.250" DIA	
A5Q1	1853-0020	Q:SI PNP(SELECTED FROM 2N3702)	
A5Q2	1854-0071	Q:SI NPN(SELECTED FROM 2N3704)	
A5Q3	1853-0036	Q:SI PNP	
A5Q4	1854-0022	Q:SI NPN	
A5Q5	1854-0071	Q:SI NPN(SELECTED FROM 2N3704)	
A5Q6	1854-0071	Q:SI NPN(SELECTED FROM 2N3704)	
A5K1	U684-2251	R:FXD COMP 2.2 MEGOHM 10% 1/4W	
A5R2	0684-1031	R:FXD COMP 10K OHM 10% 1/4W	
A5R3	0698-6734	R:FXD FLM 28.6K OHM 0.5% 1/8W	
A5R4	0698-6218	R:FXD FLM 20K OHM 0.5% 1/8W	
A5R5	0698-4055	R:FXD FLM 1K OHM 0.25% 1/8W	
A5R6	0684-1041	R:FXD COMP 100K OHM 10% 1/4W	
A5R7	0684-1041	R:FXD COMP 100K OHM 10% 1/4W	
A5R8	0698-3605	R:FXD MET OX 15 OHM 5% 2W	
A5R9	0684-1021	R:FXD COMP 1000 OHM 10% 1/4W	
A5R10	0757-0456	R:FXD MET FLM 43.2K OHM 1% 1/8W	
A5R11	0764-0043	R:FXD MET OX 2.7K OHM 5% 2W	
A5R12	0757-0392	R:FXD MET FLM 43.2 OHM 1% 1/8W	
A5R13	0757-0450	R:FXD MET FLM 22.1K OHM 1% 1/8W	
A5R14	0757-0401	R:FXD MET FLM 100 OHM 1% 1/8W	
A5R15	0757-0110	R:FXD MET FLM 12.8K OHM 1% 1/4W	
A5R16	0698-7142	R:FXD FLM 12.3K OHM 1% 1/4W	
A5R17	0698-3605	R:FXD MET OX 15 OHM 5% 2W	
A5R18	0684-1041	R:FXD COMP 100K OHM 10% 1/4W	
A5R19	0684-1021	R:FXD COMP 1000 OHM 10% 1/4W	
A5R20	0684-5631	R:FXD COMP 56K OHM 10% 1/4W	
A5R21	0698-3443	R:FXD MET FLM 287 OHM 1% 1/8W	
A5R22	0757-0750	R:FXD MET FLM 6810 OHM 1% 1/4W	
A5R23	0684-3331	R:FXD COMP 33K OHM 10% 1/4W	
A5R24	0684-4741	R:FXD COMP 470K OHM 10% 1/4W	
A5R25	0757-0757	R:FXD MET FLM 15K OHM 1% 1/4W	

# See introduction to this section for ordering information.

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part No.	Description #	Note
A5R26	0684-4741	R:FXD COMP 470K OHM 10% 1/4W	
A5R27	0757-0389	R:FXD MET FLM 33.2 OHM 1% 1/8W	
A5R28	0757-0433	R:FXD MET FLM 3.32K OHM 1% 1/8W	
A5R29	2100-0935	R:VAR COMP 1K OHM 20% LIN 1/4W	
A5R30	0698-3264	R:FXD FLM 11.8K OHM 1% 1/8W	
A5R31	0684-3321	R:FXD COMP 3300 OHM 10% 1/4W	
A5VR1	1902-3357	DIODE BREAKDOWN:56.2V 5%	
A5VR2	1902-0034	DIODE:5.76V 10%	
A5VR3	1902-3357	DIODE BREAKDOWN:56.2V 5%	
A5VR4	1902-0018	DIODE BREAKDOWN:11.7V 5%	
A6	01200-66615	BOARD ASSY: HV REGULATOR (STANDARD)	
A6	01200-66619	BOARD ASSY: HV REGULATOR (OPTIONS 011 and 611)	
A6C1	0150-0096	C:FXD CER 0.05 UF +80-20% 100VDCM	
A6C2	0160-0163	C:FXD MY 0.033 UF 10% 200VDCM	
A6C3	0160-2234	C:FXD CER 0.51 PF 500VDCM	
A6C4	0150-0098	C:FXD CER 0.05 UF +80-20% 100VDCM	
A6C5	0180-0109	C:FXD ELECT 18 UF 100VDCM	
A6C6	0160-5380	C:FXD CER 4700 PF 20% 4K VDCM	
A6C7	0160-5380	C:FXD CER 4700 PF 20% 4K VDCM	
A6C8	0160-5379	C:FXD CER 4700 PF 20% 4K VDCM	
A6C9	0160-5379	C:FXD CER 4700 PF 20% 4K VDCM	
A6C10	0160-5379	C:FXD CER 4700 PF 20% 4K VDCM	
A6C11	0160-0165	C:FXD MY 0.056 UF 10% 200VDCM	
A6C12	0160-2056	C:FXD MY 0.22 UF 20% 200VDCM	
A6C13	0160-2403	C:FXD CER 1500 PF 20% 5K VDCM	
A6C14	0160-0165	C:FXD MY 0.056 UF 10% 200VDCM	
A6C15	0140-0091	C:FXD ELECT 10 UF +50-10% 100VDCM	
A6CR1	1901-0040	DIODE:SILICON 30MA 30MV	
A6CR2	1901-0040	DIODE:SILICON 30MA 30MV	
A6CR3	1901-0040	DIODE:SILICON 30MA 30MV	
A6CR4	1901-0040	DIODE:SILICON 30MA 30MV	
A6CR5	1901-0045	DIODE:SILICON 0.75A 100PIV	
A6CR6	1901-0049	DIODE:SILICON 0.75A 50PIV	
A6CR7	1901-0040	DIODE:SILICON 30MA 30MV	
A6CR8	1901-0033	DIODE:SILICON 100MA 180MV	
A6L1	9140-0118	COIL:FXD 500 UH 5%	
A6L2	9140-0179	COIL/CHOKE 22.0 UH 10%	
A6MP1	0340-0451	WASHER:INSULATED, TRANSISTOR	
A6MP2	01201-01101	HEAT SINK: TRANSISTOR (Q4)	
A601	1854-0071	Q:SI NPN (SELECTED FROM 2N3704)	
A602	1853-0037	Q:SI PNP	
A603	1854-0022	Q:SI NPN	
A604	1854-0330	Q:SI NPN	
A605	1854-0071	Q:SI NPN (SELECTED FROM 2N3704)	

# See Introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part No.	Description #	Note
A606	1853-0036	Q:SI PNP	
A607	1855-0057	Q:SI FET N-CHAN	
A6R1	0698-3200	R:FXD FLM 8K OHM 1% 1/8W	
A6R2	0757-0424	R: FXD MET FLM 1.10K OHM 1% 1/8W	
A6R3	0757-0941	R: FXD FLM 5.1K OHM 2% 1/8W	
A6R4	0684-4731	R: FXD COMP 47K OHM 10% 1/4W (STANDARD)	
A6R5	0757-0439	R: FXD MET FLM 6.81K OHM 1% 1/8W	
A6R6	0698-3158	R: FXD MET FLM 23.7K OHM 1% 1/8W	
A6R7	0687-1211	R: FXD COMP 120 OHM 10% 1/2W	
A6R8	0698-8397	R: FXD MET FLM 4.32K OHM 1% 1W	
A6R9	0698-8398	R: FXD MET FLM 4.75K OHM 1% 1W	
A6R10	0757-0280	R: FXD MET FLM 1K OHM 1% 1/8W	
A6R11	0757-0757	R: FXD MET FLM 15K OHM 1% 1/4W	
A6R12	0757-0456	R: FXD MET FLM 43.2K OHM 1% 1/8W	
A6R13	0757-0411	R: FXD MET FLM 332 OHM 1% 1/8W	
A6R14	2100-2692	R: VAR CERMENT 1 MEGOHM 20% TYPE V 1/2W	
A6R15	0698-8427	R: FXD FLM 29 MEGOHM 10% 1W	
A6R16	0684-1061	R: FXD COMP 1MEGOHM 1% 1/4W	
A6R17	2100-2580	R:VAR COMP 2X100K/250K OHM 30% LIN 1/4W	
A6R18	0687-5631	R:FXD COMP 56K OHM 10% 1/2W	
A6R19	0698-3417	R:FXD MET FLM 23.7K OHM 1% 1/2W	
A6R20	0698-4935	R:FXD MET FLM 41.2K OHM 1% 1/2W	
A6R21	0684-1511	R:FXD COMP 150 OHM 10% 1/4W	
A6R22	0684-2211	R: FXD COMP 220 OHM 10% 1/4W	
A6R23	0757-0465	R: FXD MET FLM 100K 1% 1/8W	
A6R24	0757-0463	R: FXD MET FLM 82.5K 1% 1/8W	
A6R25	0684-1241	R: FXD COMP 120K OHM 10% 1/4W	
A6R26	0757-0791	R: FXD MET FLM 619K OHM 1% 1/4W	
A6R27	0698-8018	R: FXD COND PLASTIC 30 MEGOHM 1% 3W	
A6R28	0687-3351	R: FXD COMP 3.3 MEGOHM 10% 1/2W	
A6R29	0693-6851	R: FXD COMP 6.8 MEGOHM 10% 2W	
A6R30	0693-6851	R: FXD COMP 6.8 MEGOHM 10% 2W	
A6R31	0693-6851	R: FXD COMP 6.8 MEGOHM 10% 2W	
A6R32	0693-6851	R:FXD COMP 6.8 MEGOHM 10% 2W	
A6R33	0698-3643	R:FXD MET OX 4.3K OHM 5% 2W	
A6R34	0687-1001	R:FXD COMP 10 OHM 10% 1/2W	
A6R35	0684-1021	R:FXD COMP 1000 OHM 10% 1/4W	
A6R36	0757-0124	R:FXD MET FLM 39.2K OHM 1% 1/8W	
A6R37	0687-2221	R: FXD COMP 220 OHM 10% 1/2W	
A6R38	0757-0407	R: FXD MET FLM 200 OHM 1% 1/8W	
A6R39	0757-0407	R: FXD MET FLM 200 OHM 10% 1/8W	
A6VR1	1902-0041	DIODE: BREAKDOWN 5.11V 5X	
A6VR2	2140-0013	VR: NEON	
A6VR3	2140-0013	VR: NEON	
A7	01200-66505	HV RECTIFIER ASSY	
A7C1	0160-5379	C:FXD CER 4700 PF 20% 4K VDC	
A7C2	0160-5380	C:FXD CER 4700 PF 20% 4K VDC	
A7CR1	1901-0673	DIODE: SILICON 10KV PIV	
A7CR2	1901-0683	DIODE: SILICON 10KV PIV	
A7R1	0684-2231	R:FXD COMP 22K OHM 10% 1/4W	
A7R2	0684-1531	R:FXD COMP 15K OHM 10% 1/4W	
A7T1	01200-61101	TRANSFORMER:HIGH VOLTAGE	

# See introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part No.	Description #	Note
<b>CHASSIS PARTS</b>			
A1	01205-63502	A: CHANNEL A 5 MV PREAMPLIFIER MODULE	
A2	01205-63502	A: CHANNEL B 5 MV PREAMPLIFIER MODULE	
A3	01200-66504	A: DUAL CHANNEL OUTPUT AMPLIFIER	
A4	01200-63503	A: HORIZONTAL MODULE	
A5	01200-66514	A: LOW VOLTAGE POWER SUPPLY	
A6	01200-66515	A: HIGH VOLTAGE REGULATOR	
A7	01200-66505	A: HIGH VOLTAGE RECTIFIER	
DS1	1450-0419	DS: NEON (POWER INDICATOR)	
F1	2110-0059	FUSE: CARTRIDGE 1-1/2A SLO-BLO (115V OPERATION)	
F1	2110-0020	FUSE: 0.8A 125V SLOW-BLOW (237 OPERATION)	
J1	1510-0084	BINDING POST ASSY: RED (CHANNEL A -INPUT)	
J2	1510-0087	BINDING POST ASSY: BLACK (CHANNEL A GROUND)	
J3	1510-0084	BINDING POST ASSY: RED (CHANNEL A +INPUT)	
J4	1510-0084	BINDING POST ASSY: RED (CHANNEL B -INPUT)	
J5	1510-0087	BINDING POST ASSY: BLACK (CHANNEL B GROUND)	
J6	1510-0084	BINDING POST ASSY: RED (CHANNEL B +INPUT)	
J7	1510-0084	BINDING POST ASSY: RED (TRIGGER AND HORIZONTAL INPUT)	
J8	1510-0087	BINDING POST ASSY: BLACK (GROUND)	
J9	1251-0463	CONNECTOR: FEMALE, BANANA TYPE BLACK (CAL 1 VOLT)	
J10	1251-2357	CONNECTOR: POWER	
L1	01200-66001	COIL ASSY: ALIGNMENT	
MP1		INSULATOR: BINDING POST, BLACK (CONSISTS OF 1510-0087, 0340-0732 AND 0340-0749)	
MP2		INSULATOR: BINDING POST, RED (CONSISTS OF 1510-0084, 0340-0732, AND 0340-0749)	
MP3	0340-0450	WASHER: TRANSISTOR INSULATOR (FOR Q1 AND Q2)	
MP4	0370-0432	KNOB: BLACK LEVER	
MP5	0370-0453	KNOB: W/DUAL INDEX (SWEEP TIME SWITCH)	
MP6	0510-0097	RETAINER: PUSH-ON (POWER INDICATOR)	
MP7	0905-0016	STRIP: FELT FOR CRT	
MP8	1410-0052	BUSHING: POTENTIOMETER (TRACE ALIGNMENT CONTROL)	
MP9	1431-0039	SHAFT: STL 8.187+/-0.03" LG. (DISPLAY SWITCH)	
MP10	1490-0841	COUPLING: SHAFT 0.127" ID (DISPLAY SWITCH)	

# See Introduction to this section for ordering information

Table 6-2. Replaceable Parts (Cont'd)

Reference Designation	HP Part No.	Description #	Note
MP11	5020-0476	BEZEL: CRT	
MP12	5020-0510	FILTER: CRT CLEAR	
MP13	5020-0530	FILTER: CRT AMBER (USED ONLY WITH P7 PHOSPHOR)	
MP14	5040-0444	SHIELD: LIGHT BLACK NYLON	
MP15	5040-0453	COVER: POTENTIOMETER (FOCUS CONTROL)	
MP16	00180-01218	BRACKET: ALIGNMENT COIL	
MP17	00180-67402	KNOB: BLACK W/ARROW (INTENSITY/FOCUS CONTROLS)	
MP18	01701-04108	COVER: CRT	
MP19	01200-44701	SUPPORT: CRT	
MP20	01200-44702	SUPPORT: CIRCUIT BOARD	
MP21	01200-44703	SUPPORT: CRT SHIELD	
MP22	01200-44704	SPACER: KNOB (TRIGGER LEVEL CONTROL)	
MP23	01200-60605	SHIELD: CRT	
MP24	01205-67401	ASSY: KNOB (VOLTS/DIVISION SWITCH)	
MP25	01200-67402	ASSY: KNOB (SWEEP TIME SWITCH)	
MP26	01200-67403	ASSY: KNOB (DISPLAY SWITCH)	
MP27	01200-67404	ASSY: KNOB WITH ARROW (POSITION CONTROLS)	
MP28	01821-67401	KNOB: +/- W/ARROWS (TRIGGER LEVER CONTROL)	
MP29	01821-67403	KNOB: CAL W/ ARROW (VERNIER CONTROLS)	
MP30	5020-0522	HANDLE: 5-1/4"	
MP31	01205-00206	PANEL: FRONT	
MP32	01200-00604	SHIELD: HIGH VOLTAGE POWER SUPPLY	
MP33	01200-04101	COVER: TOP	
MP34	01200-04102	COVER: BOTTOM	
MP35	01200-60605	ASSY: FRAME	
MP36	01710-04103	COVER: TRANSFORMER	
P1		P: POWER (N.S.K. PART OF M1)	
Q1	1853-0079	Q: SI PNP	
Q2	1854-0320	Q: SI NPN	
R1	0684-4731	R: FXD COMP 47K OHM 10% 1/4W	
R2	2100-0013	R: VAR COMP 50K OHM LIN 1/2W	
R3	2100-2663	R: VAR WW 5K OHM 10% LIN 4W	
R4	2100-2563	R: VAR COMP 5 MEGOHM 20% LIN 1/2W	
R5		NOT ASSIGNED	
R6	2100-2594	R: VAR COMP 2500 OHM 10% LIN 1/2W	
R7	2100-2594	R: VAR COMP 2500 OHM 10% LIN 1/2W	
R8	0684-1041	R: FXD COMP 100K OHM 10% 1/4W	

# See Introduction to this section for ordering information

Table 6-2. Replaceable Parts in Reference Designation Order (Cont'd)

Reference Designation	Part No.	Description #	Note
S1	3101-0036	SWITCH: TOG SPST 3 AMP 250 V (POWER)	
S2	3101-1310	SWITCH: PUSHBUTTON SPDT (FIND BEAM)	
S3	3101-1234	SWITCH: SLIDE, DPDT	
T1	9100-1125	TRANSFORMER: POWER	
T81	0360-0104	STRIP: TERMINAL SCREW TYPE CATCH (Z AXIS INPUT)	
V1	5083-1853	V: cathode ray tube, P31 phosphor, nonaluminized, internal graticule (standard)	
V1	5083-1823	V: cathode ray tube, P2 phosphor, nonaluminized, internal graticule (option 002)	
V1	5083-1862	V: cathode ray tube, P4 phosphor, nonaluminized, internal graticule (option 004)	
V1	5083-1833	V: cathode ray tube, P7 phosphor, nonaluminized, internal graticule (option 007)	
V1	5083-1842	V: cathode ray tube, P11 phosphor, nonaluminized, internal graticule (option 011)	
V1	5083-1820	V: cathode ray tube, P2 phosphor, aluminized, internal graticule (option 602)	
V1	5083-1830	V: cathode ray tube, P7 phosphor, nonaluminized, no graticule (option 607)	
V1	5083-1841	V: cathode ray tube, P11 phosphor, nonaluminized, no graticule (option 611)	
V1	5083-1850	V: cathode ray tube, P31 phosphor, nonaluminized, no graticule (option 631)	
W1	8120-1378	CABLE ASSY: 7.5' POWER CORD	
W7	01200-61601	CABLE: MAIN	
XF1	2110-0564 2110-0565 2110-0569	FUSEHOLDER- BODY FUSE-CARRIER NUT-MOUNTING	
XQ1	5060-0585	CABLE: FOR Q1	
XQ2	5060-0585	CABLE: FOR Q2	
XV1	1200-0037	SOCKET: CRT	

# See introduction to this section for ordering information

## SECTION VII MANUAL CHANGES

### 7-1 INTRODUCTION.

7-2. This section contains information required to backdate this manual for a specific instrument. Descriptions of special and standard options are also provided in this section.

### 7-3. MANUAL CHANGES.

7-4. This manual applies directly to instruments having the same serial prefix shown on the manual title page. If the serial prefix of your instrument is not the same as the one on the title page, find your serial prefix in table 7-1 and make all changes to the manual that are listed for that serial prefix. When making changes listed in table 7-1, make the change with the highest number first. For example, if backdating changes 1, 2, and 3 are required for your serial prefix, do change 3 first, then change 2, and finally change 1. If the serial prefix of the instrument is not listed either on the title page or in table 7-1, refer to the enclosed MANUAL CHANGES sheet for updating information. Also, if a MANUAL CHANGES sheet is supplied, make all indicated ERRATA corrections.

#### CHANGE 1

Table 6-2. Replaceable Parts.  
A4S6: Change HP Part No to 3101-0944

#### CHANGE 2

Table 6-2. Replaceable Parts.  
A6C6, A6C7, A7C2: Change HP Part No to 0160-3008.  
A6C8, A6C9, A7C1: Change HP Part No to 0160-3007.  
A4A1P21: Change HP Part No to 2100-0940, R: Var Comp.  
500 ohm 20% Lin 1/4W  
Delete: A4A1R34A, A4A1R34B  
Add: A4A1R34, HP Part No 2100-2581, R: Var Comp. 2 x  
20K ohm 20% Lin 1/4W

#### CHANGE 3

Table 6-2. Replaceable Parts  
Delete: A1A1R9A, A1A1R9B, A2A1R9A, A2A1R9B  
Add: A1A1R9, A2A1R9, HP Part No 2100-2577, R: Var  
Comp 10K/500 ohm 30% Lin 1/4W.

Table 7-1. Manual Changes

Serial Prefix	Make Changes
1944S00101 thru 1944S00247	3, 2, 1
1944S00248 thru 1944S00277	3, 2
1944S00278 thru 1944S00294	3
1944S00295 thru 1944S Prefix	None

**7-5. OPTION 006.**

7-6. This option is available for Model 1205B. Three rear panel connectors are added in parallel to front panel inputs: one each for CHANNEL A and CHANNEL B INPUTS; and one for TRIG & HORIZ INPUT. The input impedance specification is changed as follows:

**VERTICAL:** 1 megohm shunted by approximately 100 pF for all ranges.

**HORIZONTAL:** 1 megohm shunted by approximately 75 pF.

Replaceable parts for Option 006 are listed in table 7-2 and schematic connections are shown in figure 7-1.

*Table 7-2. Option 006 Replaceable Parts*

Item	HP Part No.	TQ	Description
1.	1250-0063	2	Connector Hood, RF (part of associated cable assy)
2.	1250-0083	1	BNC connector, female (HORIZ rear panel connector)
3.*	1251-0038	2	Connector, 3-pin, male
4.	1251-0039	2	Connector, 3-pin, female (part of VERT A and VERT B cable assy)
5.*	1251-0236	2	Connector, cable clamp
6	01200-61620	1	Cable assembly, Horiz
7.	01200-61621		Cable assembly, VERT A (includes items 1, 4, 6, and 8)
8.	01200-61622		Cable assembly, VERT B (includes items 1, 4, 7, and 8)

\*Items 3 and 5 are external cabling mating connector hardware for item 4.



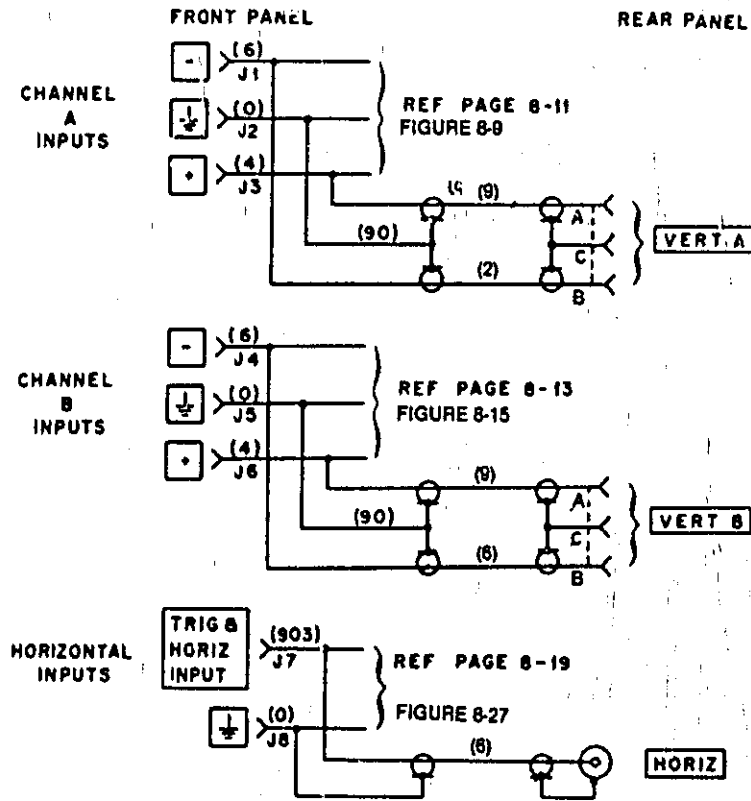


Figure 7-1. Option 006 Schematic Connections

## SECTION VIII

## SCHEMATICS AND TROUBLESHOOTING

**8-1. INTRODUCTION.**

8-2. This section contains schematics and component location photographs along with troubleshooting, repair and replacement information.

**8-3. SCHEMATICS.**

8-4. All schematics are on fold-out pages to allow reference to the text and figures in other sections. To find one by circuit name, refer to the List of Illustrations at the front of the manual. The schematics are drawn to show electronic function, and any one may include all or part of several different physical assemblies. Symbols and conventions are defined in Table 8-2.

8-5. For ready reference, a block diagram of each schematic is on the adjacent page. An overall block diagram of the entire instrument is in Section IV.

8-6. Each schematic is identified by a circled number in the lower right-hand corner. These numbers make it easy to find a point of reference. For example, the trigger signal from A1A1Q5 on Schematic 1 is referred to A3S1 on Schematic 4. On Schematic 4, the trigger input signal to A3S1 is referred back to A1A1Q5 on Schematic 1.

8-7. To find a component on the schematics, first check the reference designation boxes. These are located in the lower right-hand corner whenever compatible with circuit layout and indicate which components are on a particular schematic.

8-8. Components within the shaded areas of the schematics are physically located on an etched circuit board. Subassembly components, other than those on a circuit board, are shown within a shaded border for better distinction.

8-9. All component reference designators are complete on the schematics. Do not add any additional prefixes to these designators.

**8-10. COMPONENT LOCATION.**

8-11. All adjustments are shown in Section V, and mechanical parts are shown on exploded-view drawings in this section. For ready reference, assembly photographs are given adjacent to the appropriate schematics.

8-12. Circuit board assembly photographs are subdivided by a grid, and components within each subdivision are

indexed to a table below the photograph. Thus, a component can be easily found on the photograph by first referring to the table. However, reference designators are not complete on assembly photographs. For the complete reference designator, add the assembly number (and subassembly number, if any) stated in the photograph to each component designator.

**8-13. TROUBLESHOOTING.**

8-14. Troubleshooting is easier if more than one symptom of a trouble is evident. Observe the instrument, and note all indications of faulty operation. If symptoms indicate more than one trouble, treat each problem individually and locate one trouble at a time. Don't waste time making random checks. Follow the procedure presented here, and refer to other areas of information in this manual if necessary.

**8-15. FRONT-PANEL CONTROLS.**

8-16. Equipment troubles are frequently due simply to improper front-panel control settings. Refer to the operating instructions in Section III for a complete explanation of each control's function along with typical operating instructions if in doubt. Use the controls as a guide to help isolate a trouble to a specific area of the instrument.

**8-17. PERFORMANCE CHECK.**

8-18. Make a thorough check of instrument performance. A complete procedure is given in Section V, and forms are included to record results. A trouble, such as incorrect vertical gain or sweep speed, may be due to lack of calibration. If a performance check result can be adjusted, the last step of the check refers to the appropriate adjustment procedure.

**8-19. TROUBLESHOOTING TABLE.**

8-20. Troubleshooting tips are given in Table 8-1. The table is not intended as a fool-proof tool for pin-pointing every possible trouble; only some of the most common symptoms and probable faults are given. Before doing the checks, be sure that the symptom is valid by checking control settings. For example, what may at first appear as no display may really be a no sweep problem.

8-21. To check the vertical circuits for an unbalance, measure the vertical preamplifier output voltages (white and green wires at module rear).

8-22. The unbalance is in the output amplifier if these voltages are equal. If the voltages are unequal, either the preamplifier or output amplifier may be defective.

8-23. To further isolate the trouble source, disconnect the preamplifier output leads, and measure the voltages again. Check the preamplifier for an unbalance if the voltages are unequal; check the output amplifier for an unbalance if the voltages are equal.

8-24. Measure the dc voltage at symmetrical points on each half of the differential amplifiers to detect a defective stage. Voltages should be the same, as indicated on the schematics.

8-25. The vertical preamplifier modules can also be checked by exchanging output connections. If the inoperative channel is then O.K., the module originally connected to that channel is defective.

#### 8-26. VISUAL CHECKS.

8-27. After localizing a trouble to a specific area of the instrument, make a good visual check of that area. Check for burned or broken components, loose wires or circuit board connections, faulty switch contacts, or any similar condition suggesting a source of trouble. If everything appears normal, proceed to the next step.

#### 8-28. WAVEFORMS AND VOLTAGES.

8-29. Let the instrument warm up for about 15 minutes before taking any measurements. Conditions for measuring waveforms and dc voltages are stated adjacent to each schematic. These conditions must be observed to obtain the proper results.

8-30. A triangle with an enclosed number is shown at key locations throughout the schematics. These are waveform measurement points and are referenced to the waveform photographs adjacent to each schematic.

8-31. Waveforms can be used to measure gain, locate a differential amplifier unbalance, or pin-point a defective stage.

8-32. DC voltages are shown on the schematics near active components such as transistors. As an aid to locating measurement points, a small dot is etched on the circuit boards near the emitter of transistors, source of field-effect transistors, cathode of diodes and positive lead of electrolytic capacitors. Use a needle-tip probe to avoid creating a short circuit.

#### 8-33. FINAL CHECKS.

8-34. Read the theory of operation in Section IV to learn how a circuit should operate. With the aid of this

information, it will be easier to discover why a defective circuit is inoperative. Finally, make resistance checks to uncover a faulty component. If it appears necessary to calibrate the instrument, refer to Section V for the correct procedures.

### 8-35. REPAIR AND REPLACEMENT.

8-36. The following paragraphs contain recommended procedures for repair and replacement of defective components. A complete list of components, with Hewlett-Packard part numbers and ordering information, is in Section VI. Contact the nearest HP Sales/Service Office listed at the rear of this manual if satisfactory repair or operation cannot be achieved.

#### 8-37. SERVICING ETCHED CIRCUIT BOARDS.

8-38. Circuit boards in this instrument have plated-through holes with conductive surfaces on both sides. Components can be removed or replaced by unsoldering from either side of a board. When removing a large component, such as a potentiometer, rotate the soldering iron from lead-to-lead while pulling upward on the part. The following extract from HP Service Note M-20E contains further etched circuit board repair information:

a. Don't apply excessive heat. Use a 37- to 48-watt soldering iron.

b. Clip the leads of the damaged component. Remove the component, and then unsolder the leads from the board.

c. Use a toothpick or other pointed object to clean the circuit board holes while heating with a soldering iron.

d. Shape the leads of replacement components to fit the circuit board holes. Don't use force.

e. If the metal-plated conductive surface lifts from the board, cement it back with a small amount of quick-drying, acetate-base cement with good insulating properties. Or, solder a wire along the damaged area.

#### 8-39. SEMICONDUCTOR REPLACEMENT.

8-40. Semiconductor devices are available in a wide variety of shapes and sizes. This can make it confusing to identify the leads. Examples of some of the most common configurations are shown in Figure 8-1.

8-41. When removing a semiconductor, use a pair of long nose pliers as a heat sink between the device and the soldering iron. And, when replacing a semiconductor, ensure sufficient lead length to dissipate soldering heat by using the same length of exposed lead as used for the original part.

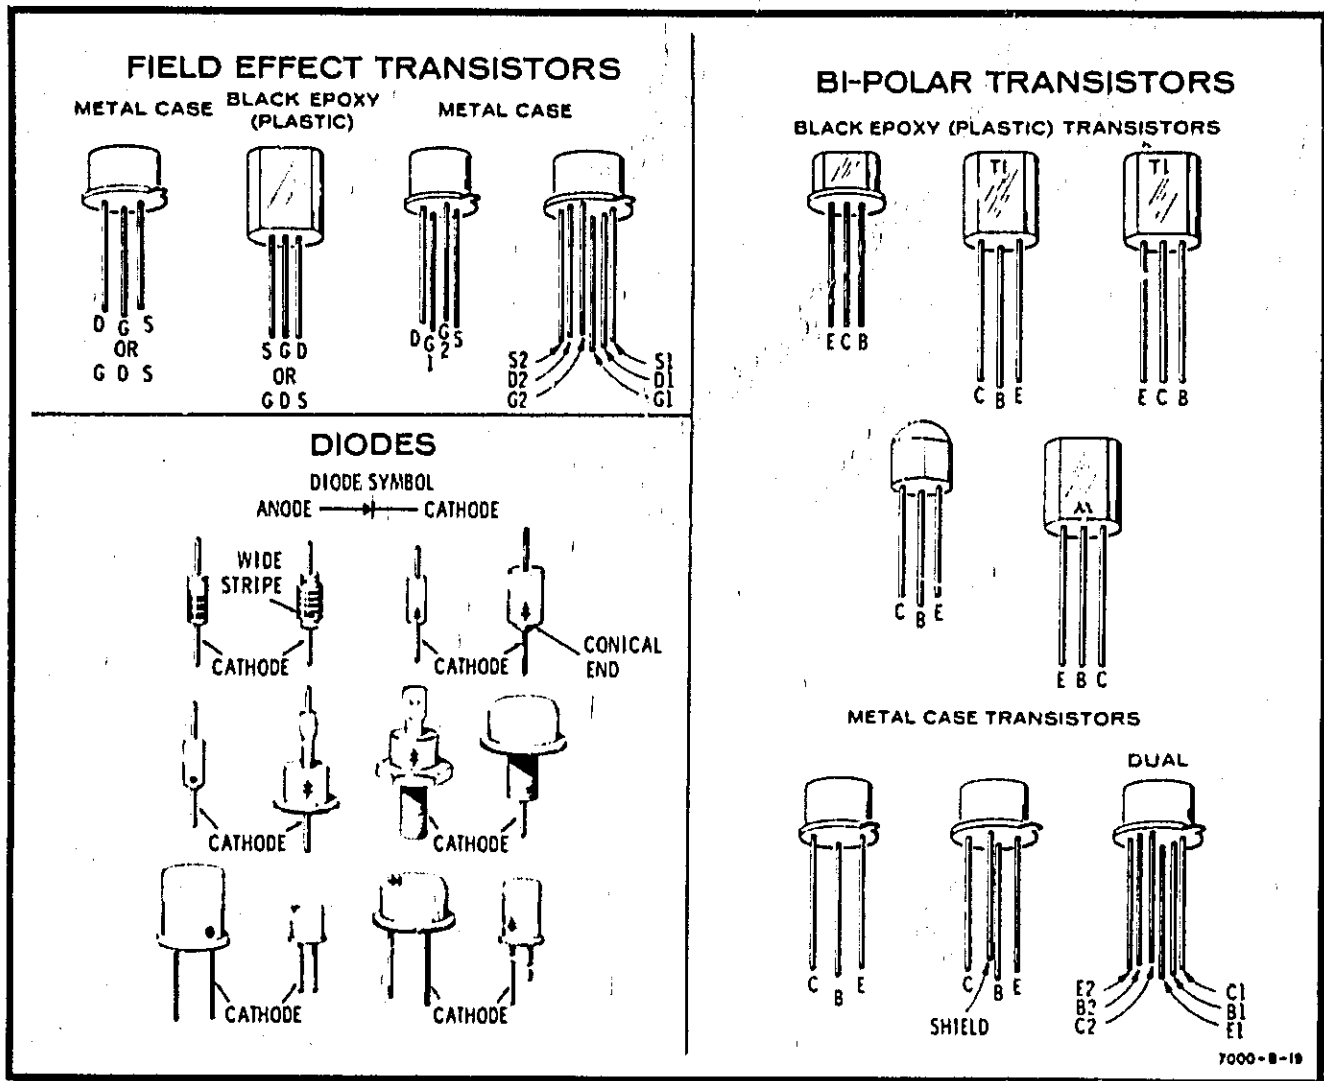


Figure 8-1. Semiconductor Identification

**8-42. CRT REMOVAL AND REPLACEMENT.**

8-43. Remove the CRT as follows:

**WARNING**

To prevent personal injury, always wear a face mask or goggles when handling the CRT. Wear protective gloves and handle carefully.

- a. Remove Model 1205B bottom cover by first removing four retaining screws.
- b. Remove rear-panel CRT socket cover by first removing two retaining screws.

c. Remove front-panel CRT light shield by squeezing at mid-point, top and bottom.

d. Remove CRT bezel by first removing four retaining screws.

e. Carefully remove CRT socket.

f. Loosen screw at bottom of CRT clamp (an access hole is provided at rear of Model 1205B side panel).

g. Put one hand on CRT face; use other hand to slide CRT forward and out of instrument.

8-44. To install a CRT, do the reverse of the above procedure. If a new CRT is installed, also do the adjustment procedure given in Section V.

**8-45. VERTICAL PREAMPLIFIER MODULE REMOVAL AND REPLACEMENT.**

8-46. Remove the vertical preamplifier modules as follows (see Figure 8-3 for exploded-view drawings):

**NOTE**

To remove the Model 1205B channel A preamplifier module, first remove the channel B module to provide clearance.

- a. Remove knobs from Vertical Vernier, Volts/Division, and + and -Vertical Coupling switches (lever-switch knobs pull off).
- b. Remove nut from attenuator shaft.
- c. Disconnect wires from square-pin connectors (note locations for replacement).
- d. Slide module about 1/4 inch to rear, and lift out.

8-47. To install the module, do the reverse of the above procedure. Wire colors are shown in the appropriate component identification photograph in this section. When sliding the module forward, be sure that the bottom slots catch on the retaining clips.

**8-48. HORIZONTAL MODULE REMOVAL AND REPLACEMENT.**

8-49. Remove the horizontal module as follows (see Figure 8-3 for exploded-view drawings):

- a. Remove all knobs from horizontal section of front panel (lever-switch knobs pull off).
- b. Remove nut from SWEEP/EXT HORIZ switch shaft and RESET lamp mounting nut.
- c. Disconnect wires from square-pin connectors (note locations for replacement). A yellow coaxial cable con-

nected between module and dual channel output board cannot be disconnected until module is partially removed.

- d. Slide module about 1/4 inch to rear, and lift out.

8-50. To install the module, do the reverse of the above procedure. Wire colors are shown in the appropriate component identification photograph in this section. When sliding the module forward, be sure that the bottom slots catch on the retaining clips.

**8-51. DUAL CHANNEL OUTPUT BOARD REMOVAL AND REPLACEMENT.**

8-52. Remove the dual channel output board as follows (see Figure 8-3 for exploded-view drawing):

- a. Remove four power transformer screws, and temporarily move transformer to gain access to board.
- b. Disconnect wires from square-pin connectors (note locations for replacement).
- c. Remove DISPLAY switch coupler shaft. To do this, slightly spread vertical preamplifier modules, and insert a long Allen driver. Loosen two Allen set screws on either end of shaft, turning DISPLAY switch as required to reach screws.

**CAUTION**

To avoid damaging the instrument, spread the vertical preamplifier modules only enough to insert the Allen driver.

- d. Remove three support screws from board.
- e. Slide board toward rear of instrument, and lift out.
















8-53. To install the board, do the reverse of the above procedure. Wire colors are shown in the appropriate component identification photograph in this section.


Symptom	Check
No display, both channels	<ol style="list-style-type: none"> <li>1. Press FIND BEAM.</li> <li>2. If display returns: adjust INTENSITY, POSITION controls, and BAL. Check vertical and horizontal amplifiers for an unbalance (refer to paragraphs 8-21 thru 8-25).</li> <li>3. If display doesn't return check: gate amplifier, low and high voltages, and CRT.</li> </ol>
No display, one channel	<ol style="list-style-type: none"> <li>1. Adjust vertical POSITION and BAL of defective channel.</li> <li>2. Select another mode of vertical coupling to check input path (switch could also be defective).</li> <li>3. Turn Volts/Division through its range.</li> <li>4. If no display only from 0.5V to 20 V/DIV, check <math>\div 100</math> attenuator path.</li> <li>5. If no display only from 5 MV to 0.2 V/DIV, check unattenuated attenuator path.</li> <li>6. Check current source A3Q14 or A3Q17 for, respectively, no channel A or B display.</li> <li>7. Check vertical preamplifier and amplifiers of defective channel for an unbalance (refer to paragraphs 8-21 thru 8-25).</li> </ol>
No alt display	<ol style="list-style-type: none"> <li>1. Check alt trigger from sweep generator to multivibrator.</li> <li>2. Check A3S1, A3Q15 and A3Q16.</li> </ol>
No chop display	<ol style="list-style-type: none"> <li>1. Check A3S1, A3Q15 and A3Q16.</li> </ol>
No A vs. B display	<ol style="list-style-type: none"> <li>1. Check A3S1 and A3Q18.</li> </ol>
Unstable display	<ol style="list-style-type: none"> <li>1. Check horiz. preamplifier.</li> <li>2. Check trigger generator.</li> <li>3. Check hold-off circuit.</li> <li>4. If no LINE triggering, check signal from L.V.P.S. to horiz. preampl.</li> <li>5. If no INT triggering, check signal from vert. preampl. to horiz. preampl.</li> <li>6. If no EXT triggering, check signal from J7 to horiz. preampl.</li> </ol>

Symptom	Check
Poor CMRR	<ol style="list-style-type: none"> <li>1. Check vertical preamplifier.</li> <li>2. Check for unsymmetrical gain on each side of vertical differential amplifiers.</li> </ol>
No sweep	<ol style="list-style-type: none"> <li>1. Set SWEEP/EXT HORIZ to EXT HORIZ. and apply signal to J7.</li> <li>2. If no horizontal deflection, check horiz. preamplifier and amplifiers.</li> <li>3. If horizontal deflection, check trigger and sweep generators.</li> </ol>
No norm sweep	<ol style="list-style-type: none"> <li>1. Check input signal from input of horiz. preampl. to trigger generator (A4A1Q6/Q7).</li> <li>2. Check A4S5.</li> </ol>
No auto sweep	<ol style="list-style-type: none"> <li>1. Check feedback loop from A4A1Q9 collector to A4A1Q7 base.</li> <li>2. Check A4S3, A4C2 and A4C3.</li> </ol>
No single sweep	<ol style="list-style-type: none"> <li>1. Check A4S5.</li> <li>2. Check A4S6.</li> <li>3. Check A4A1Q25 and associated components.</li> </ol>
No free run sweep	<ol style="list-style-type: none"> <li>1. Check A4S5, -50V applied to A4S5, and A4A1R77.</li> </ol>
No magnified sweep	<ol style="list-style-type: none"> <li>1. Check A4A2S1.</li> <li>2. Check A4A2Q1 and associated components.</li> </ol>

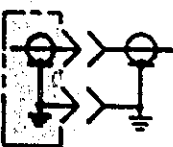
Table 8-2. Schematic Notes

Refer to MIL-STD-15-1A for schematic symbols not listed in this table.


-  = Etched circuit board
-  = Front-panel marking
-  = Rear-panel marking
-  = Front-panel control
-  = Screwdriver adjustment
- P/O = Part of
- CW = Clockwise end of variable resistor
- NC = No connection
-  = Waveform test point (with number)
-  = Common electrical point (with letter) not necessarily ground
-  = Single-pin connector on board
-  = Pin of a plug-in board (with letter or number)
-  = Coaxial cable connected to snap-on jack
-  = Coaxial cable connected directly to board
-  = Wire connected to pressure-fit socket on board
-  = Main signal path
-  = Primary feedback path
-  = Secondary feedback path




= Field-effect transistor (P-type base)




= Field-effect transistor (N-type base)




= Breakdown diode (voltage regulator)



= Tunnel diode



= Step-recovery diode

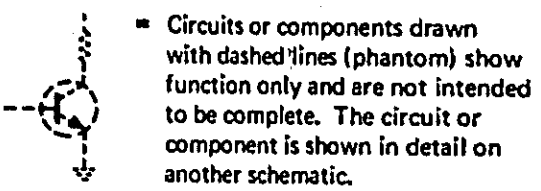


= Circuits or components drawn with dashed lines (phantom) show function only and are not intended to be complete. The circuit or component is shown in detail on another schematic.

(925) = Wire colors are given by numbers in parentheses using the resistor color code [ (925) is wht-red-grn ].

- 0 - Black
- 1 - Brown
- 2 - Red
- 3 - Orange
- 4 - Yellow
- 5 - Green
- 6 - Blue
- 7 - Violet
- 8 - Gray
- 9 - White

Switch wafers are identified as follows:

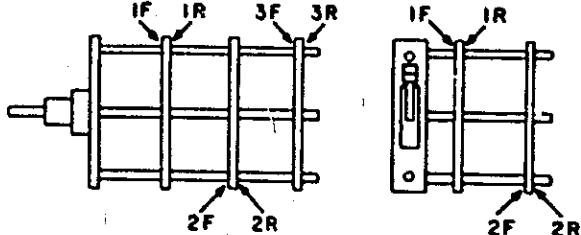

\* = Optimum value selected at factory, typical value shown; part may have been omitted.

Unless otherwise indicated:  
resistance in ohms  
capacitance in picofarads  
inductance in microhenries



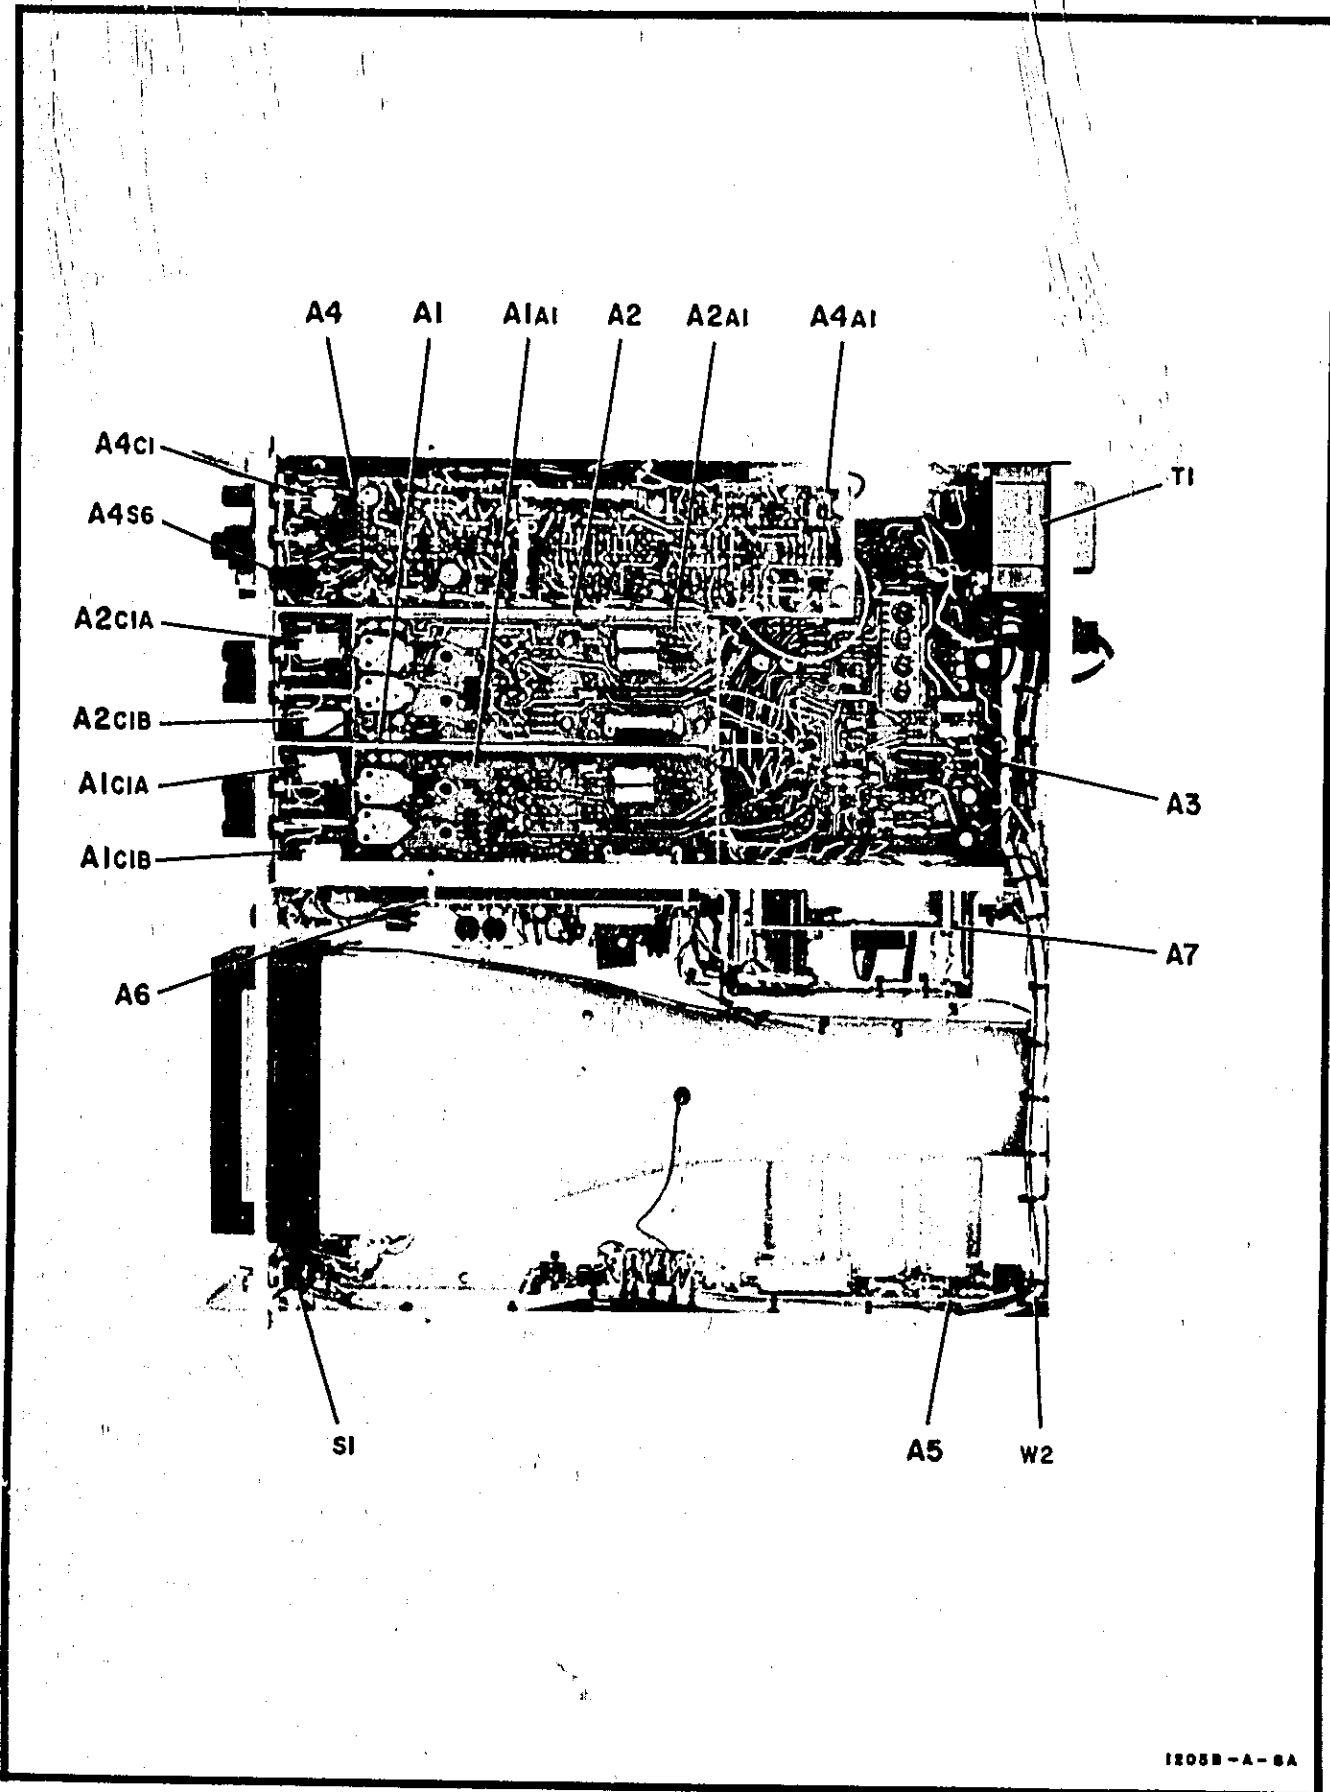


Figure 8-2. Model 1205B Bottom View

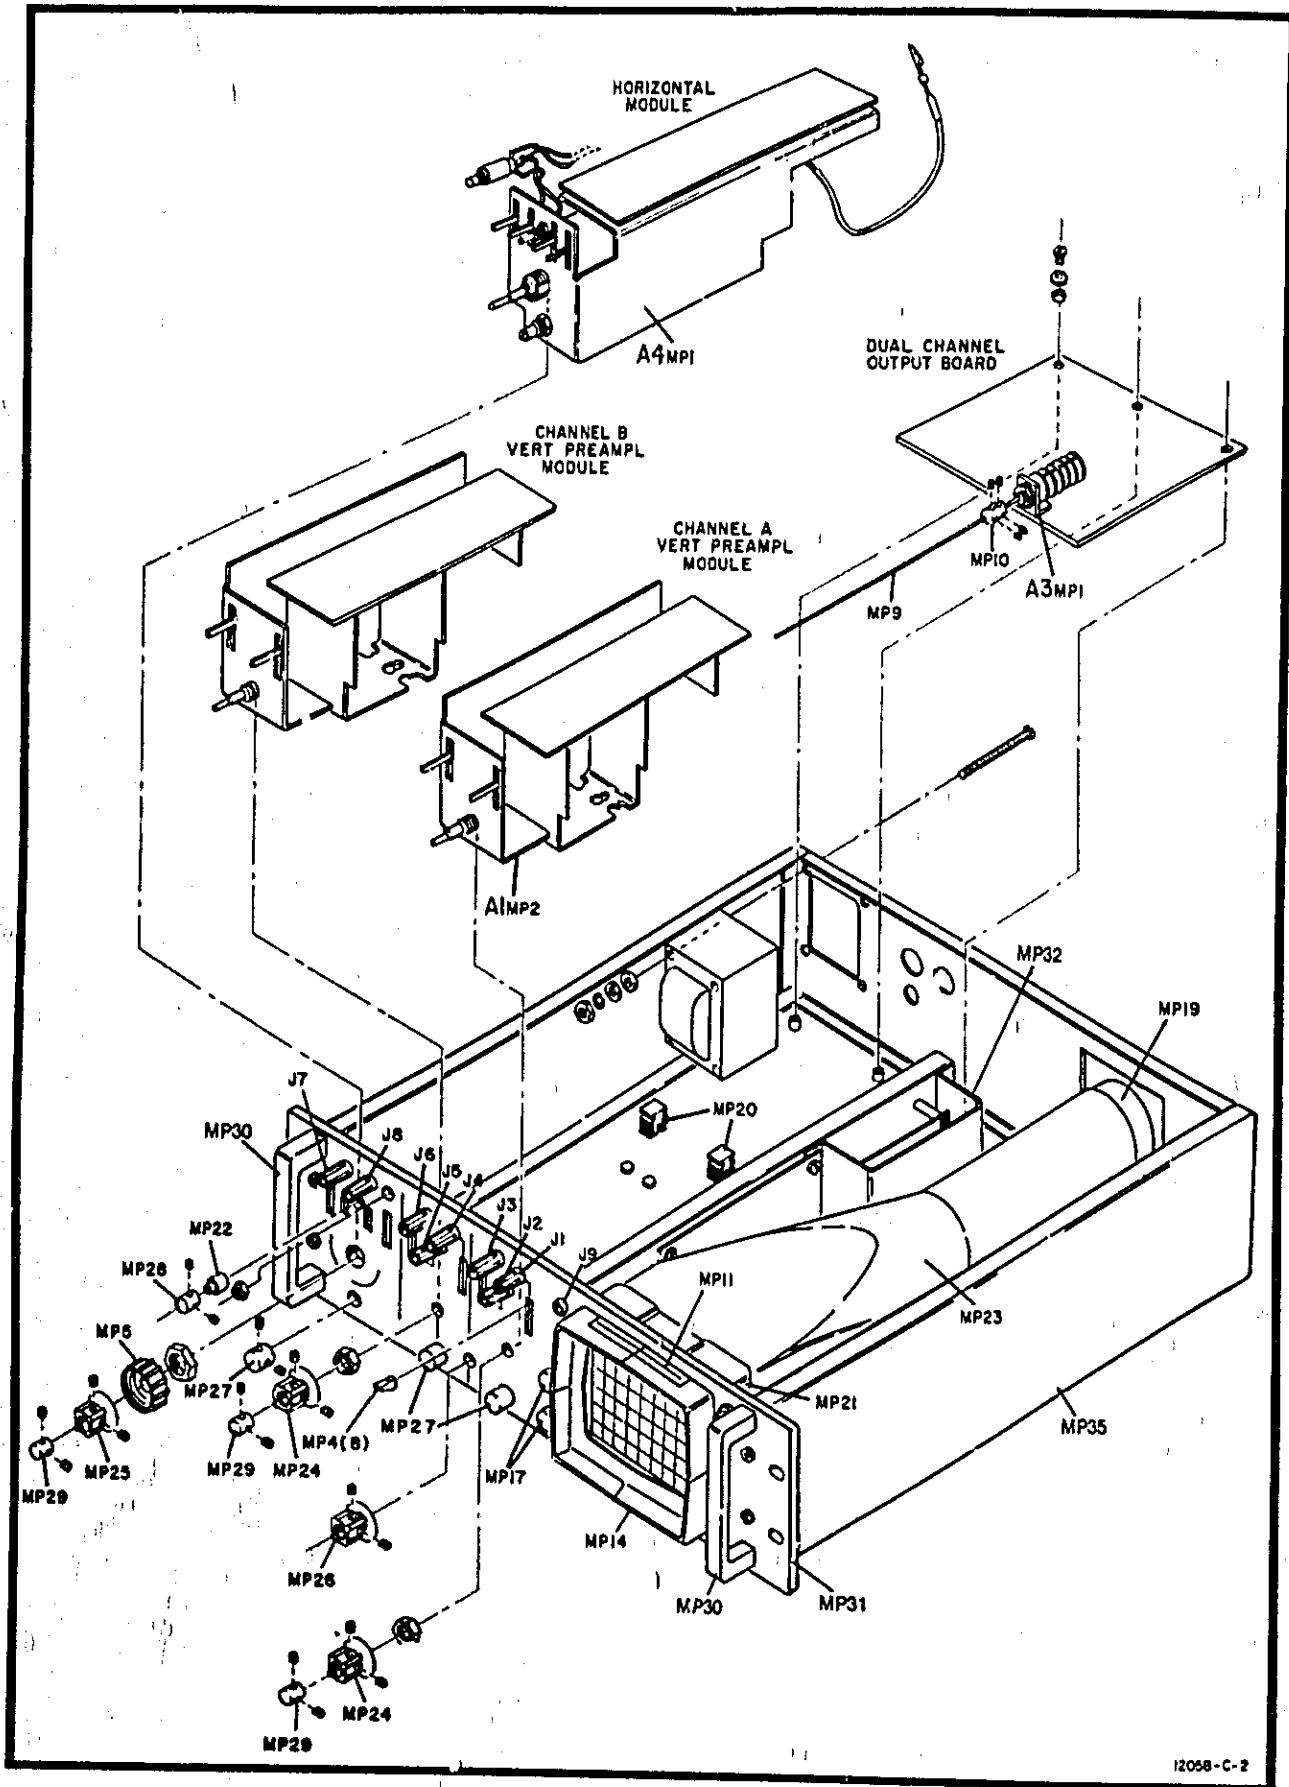


Figure 8-3. Model 1205B Exploded View

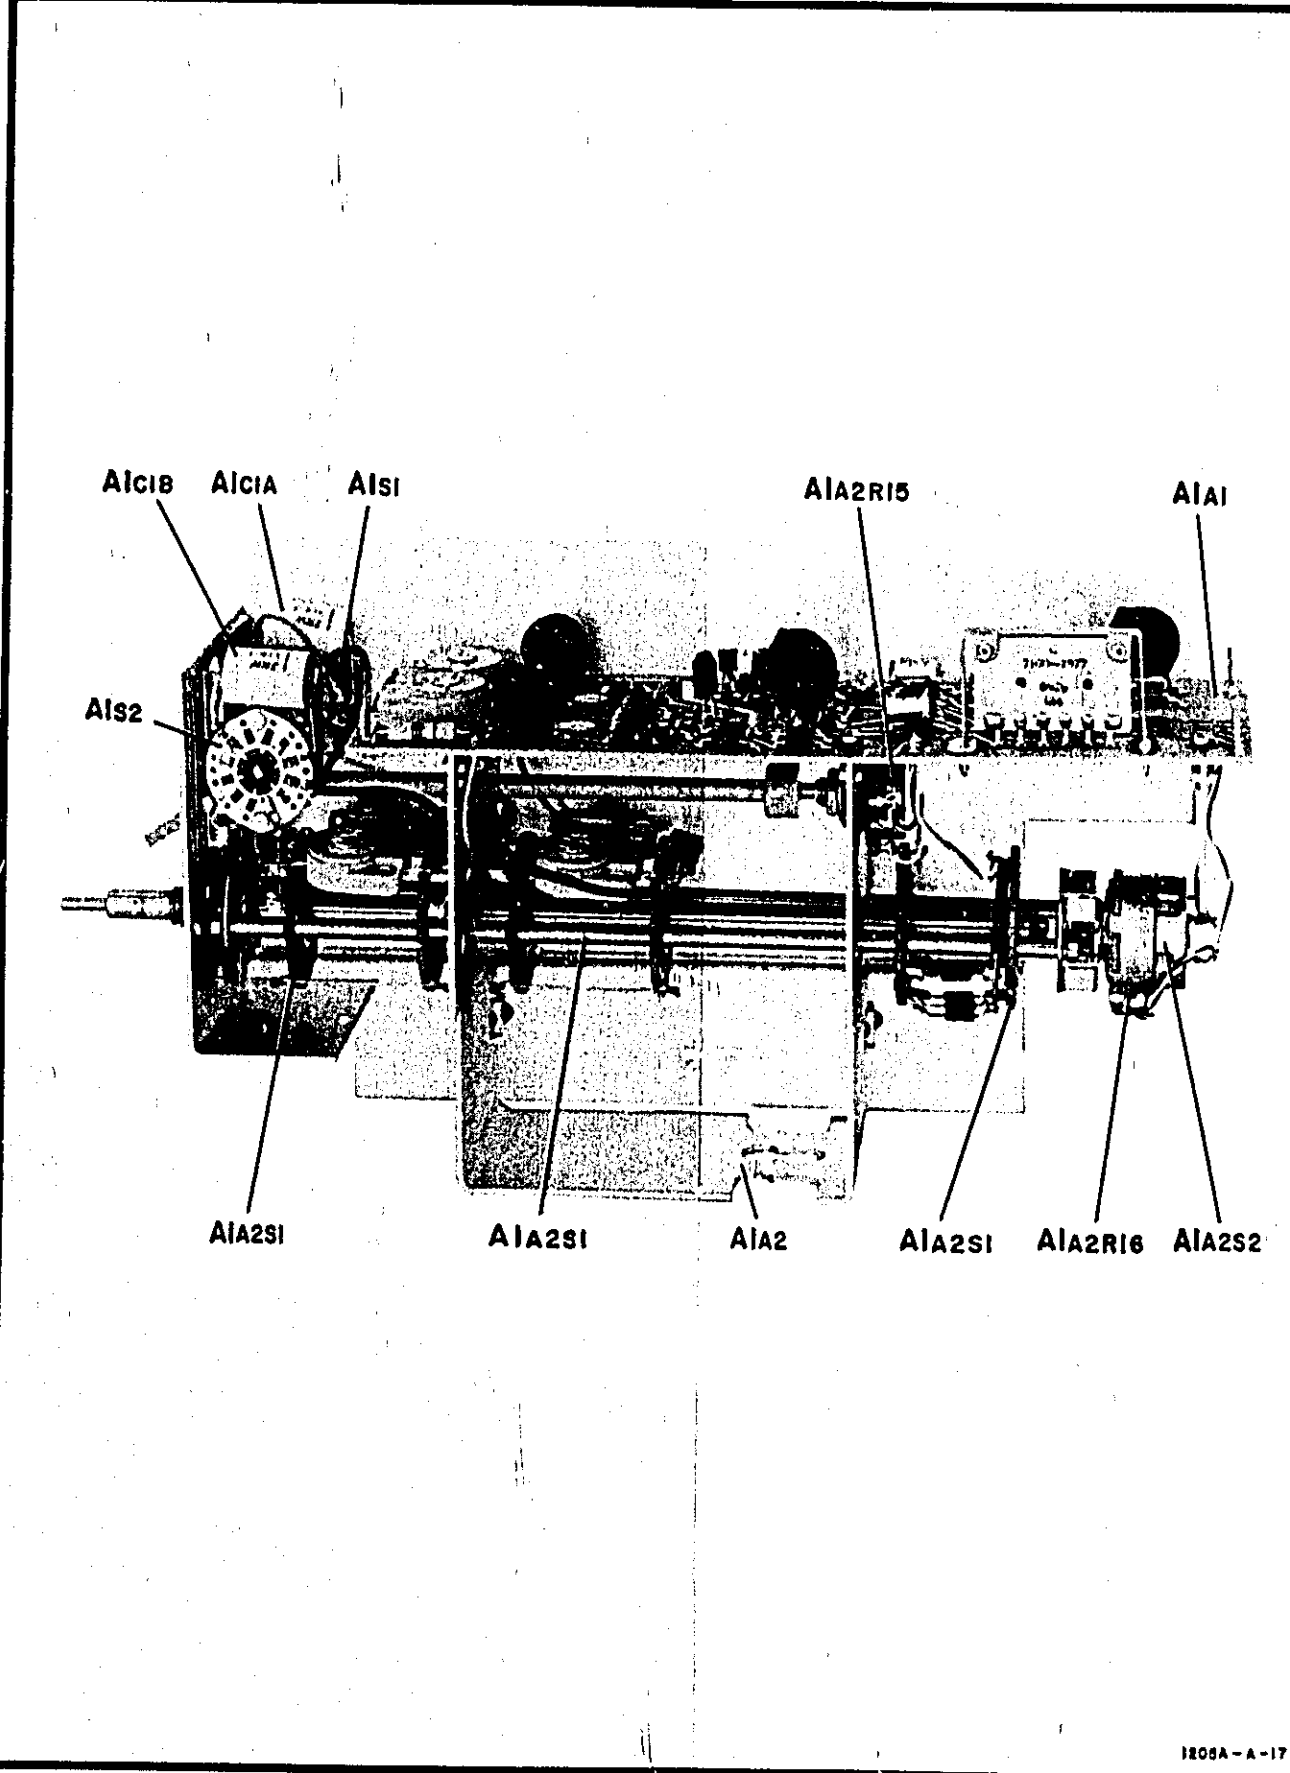


Figure 8-4. 5 mV Preamp Module, A1 Component Identification

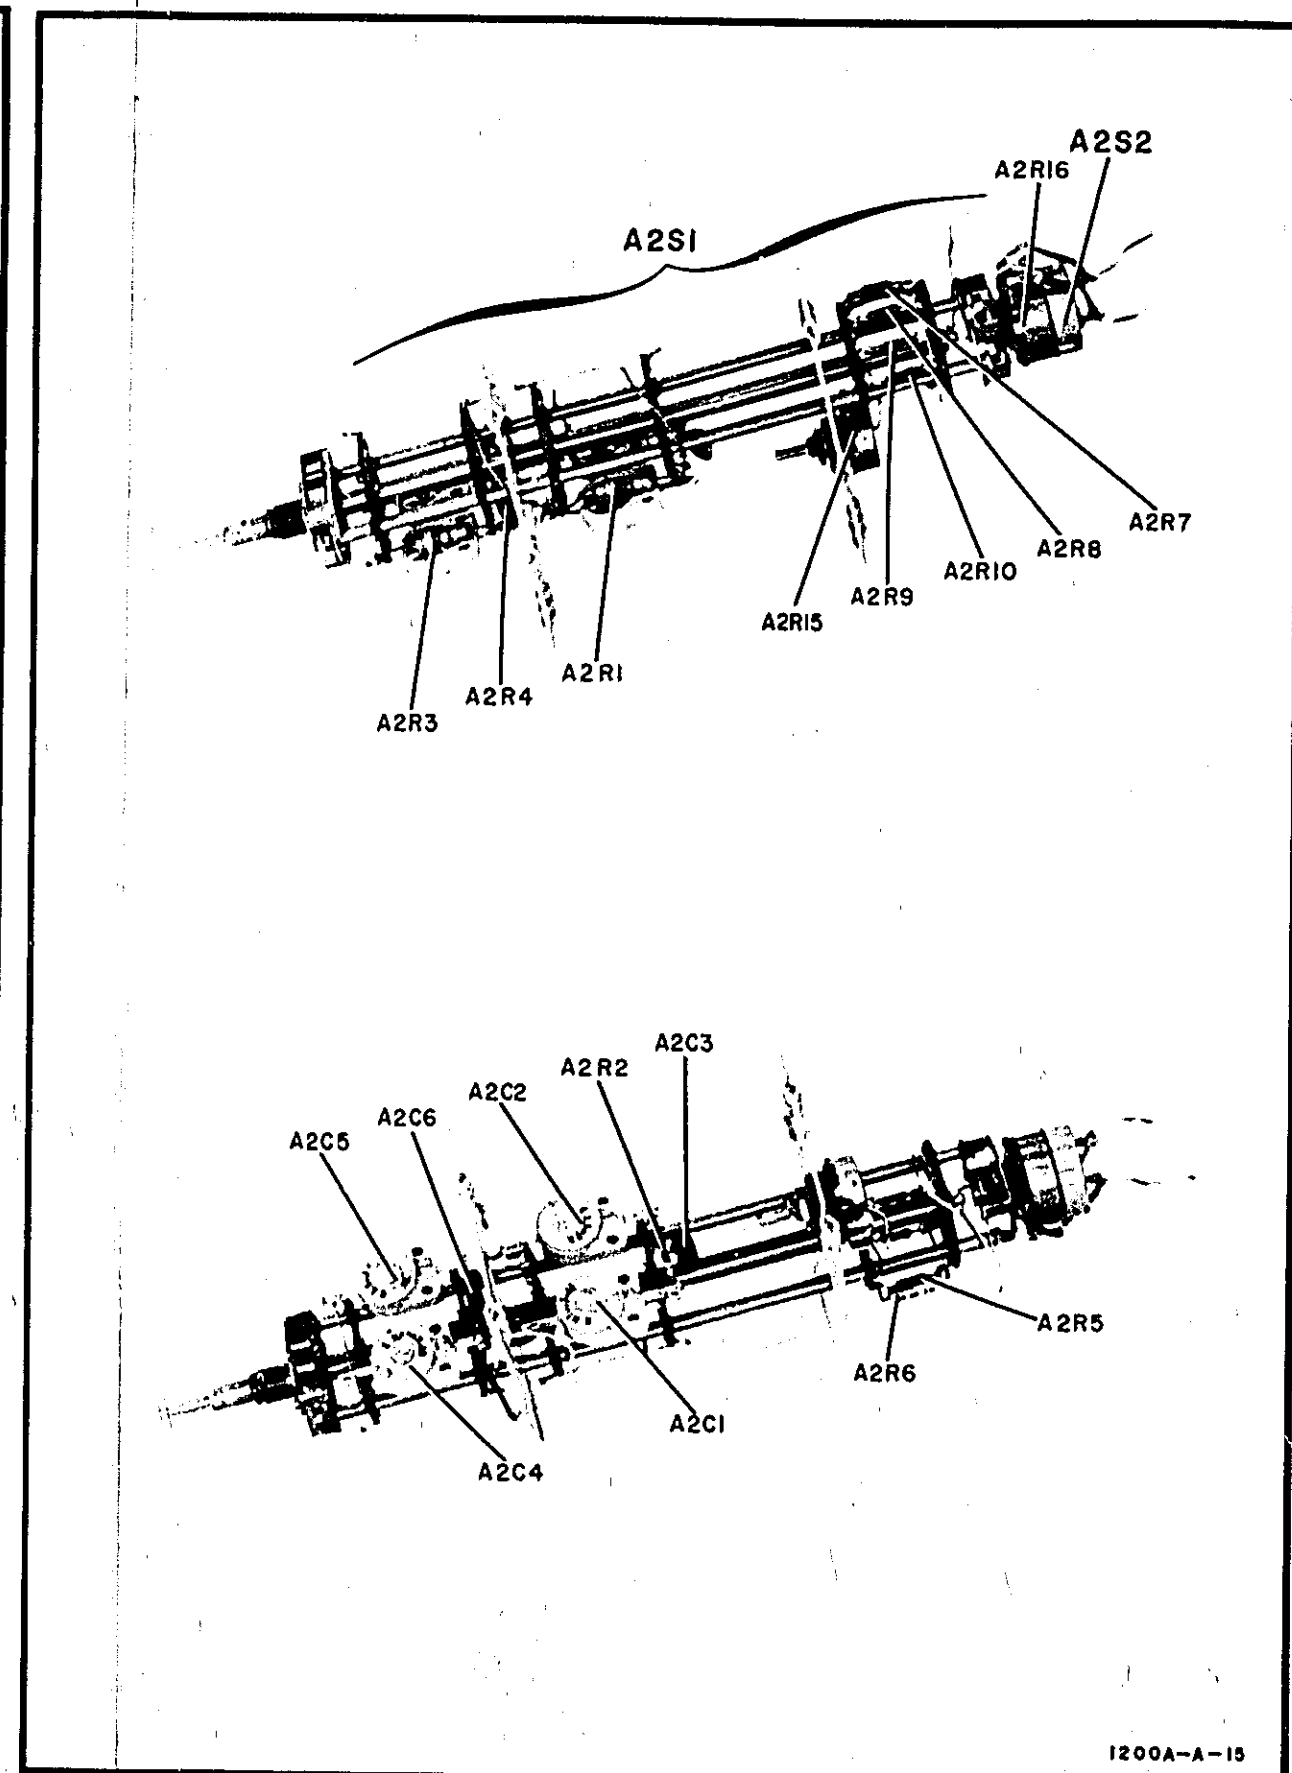


Figure 8-5. Volts/Division Switch, A1A2, Component Identification

	A	B	C	D	E	F	
1							1
2							2
3							3
4							4
5							5
6							6

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	A-3	C8	E-3	CR5	D-3	R1	A-2	R8	C-4	R16	D-3	R23	E-3
C2	B-3	C9	F-3	CR6	D-3	R2	A-4	R9	E-3	R17	C-2	R24	E-3
C3	A-3	C10	F-3	Q1	C-3	R3	B-3	R10	C-4	R18	D-3	R25	E-3
C4	B-4	CR1	B-3	Q2	C-3	R4	B-4	R12	D-4	R19	D-2	R26	D-3
C5	D-2	CR2	B-3	Q3	C-3	R5	B-3	R13	D-2	R20	D-3	R27	D-4
C6	D-3	CR3	B-3	Q4	C-2	R6	B-4	R14	C-3	R21	D-3	R28	F-3
C7	E-2	CR4	B-3	Q5	D-3	R7	B-3	R15	D-3	R22	D-3	R29	F-2

Figure 8-6. Vertical Preamp, A1A1, Component Identification

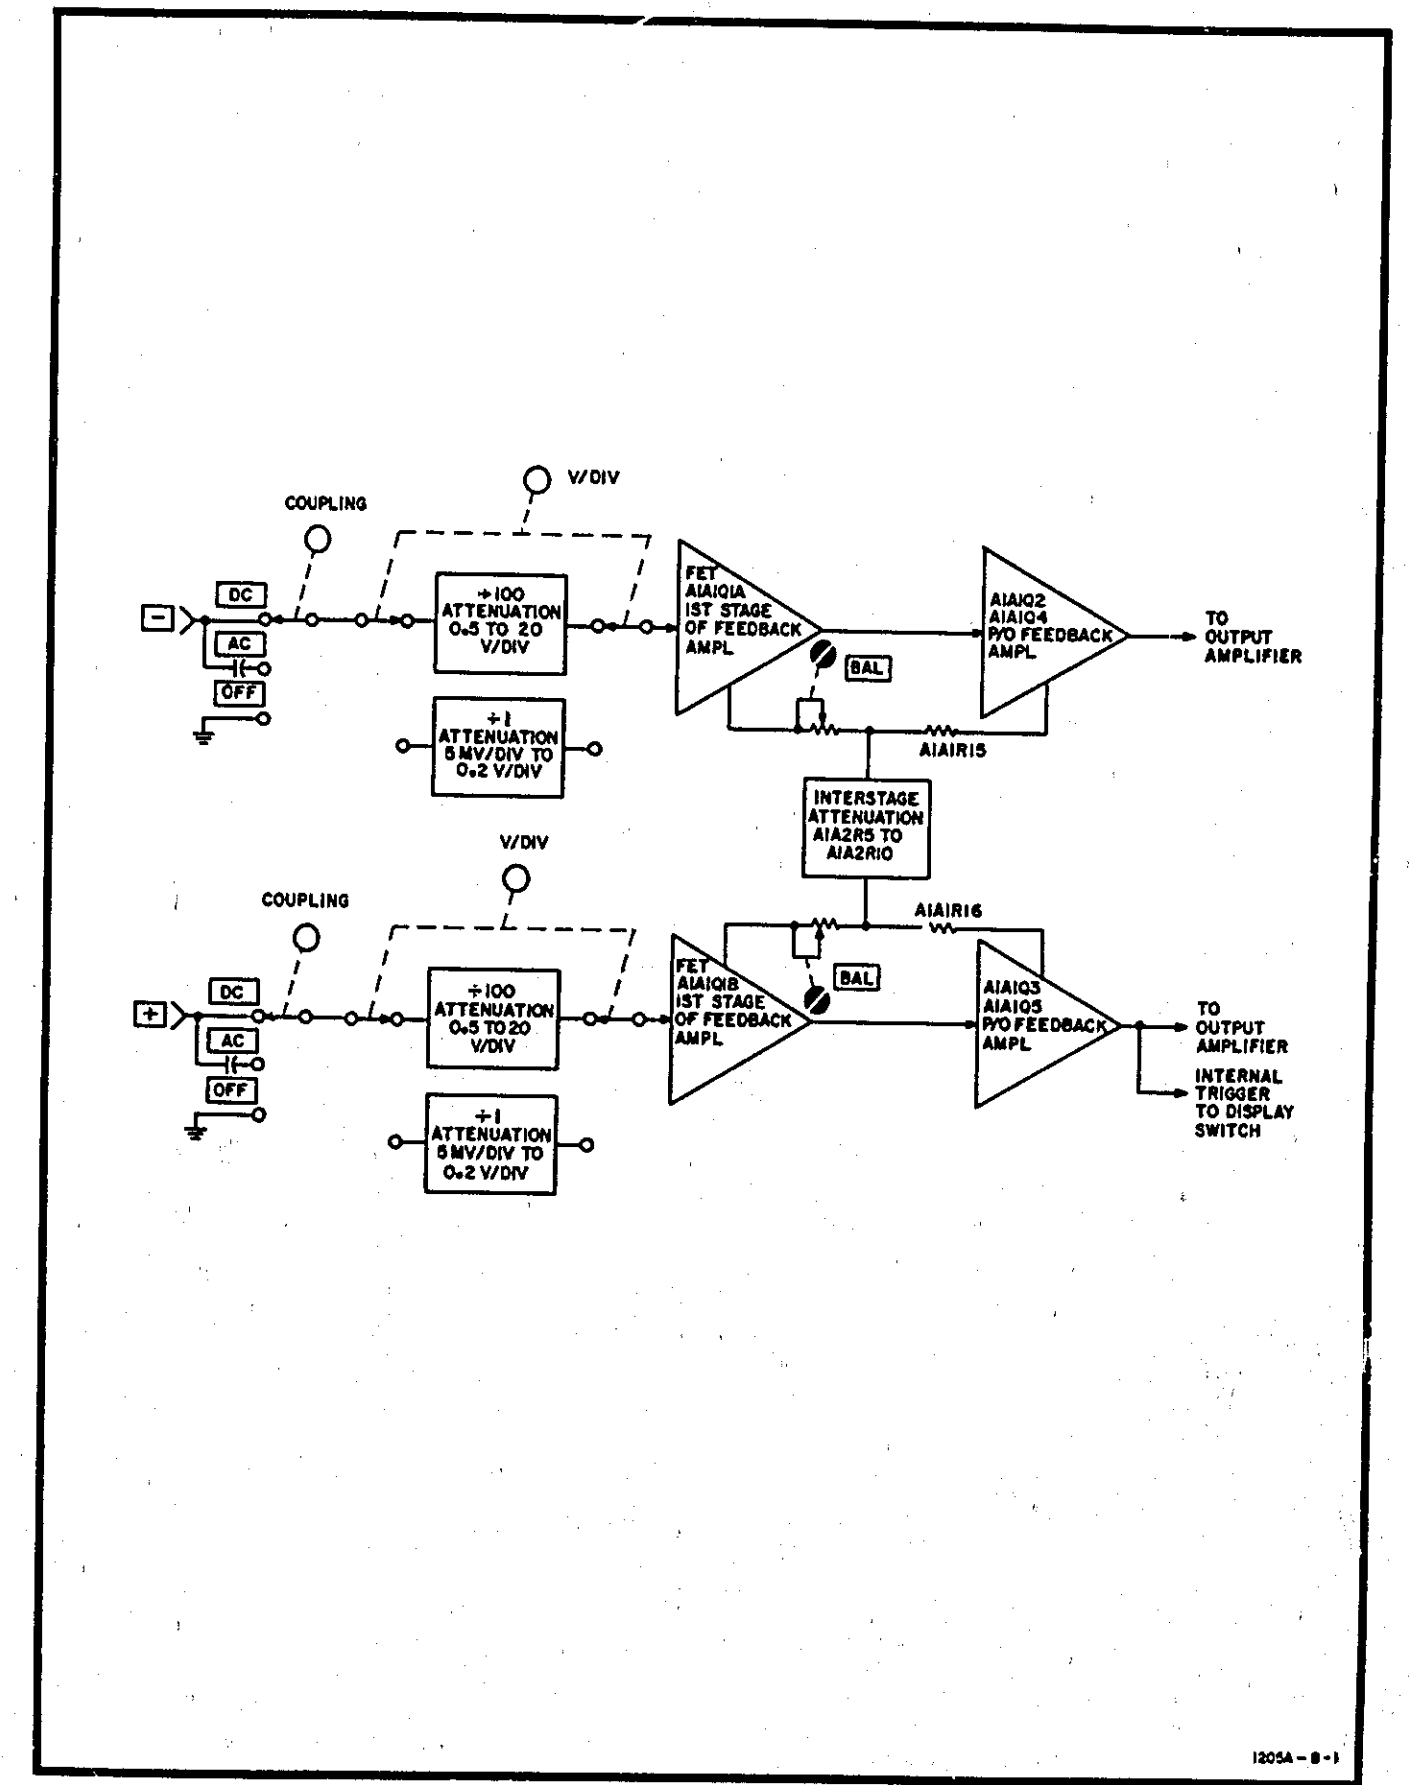


Figure 8-7. Channel A Attenuator and Preamp Block Diagram



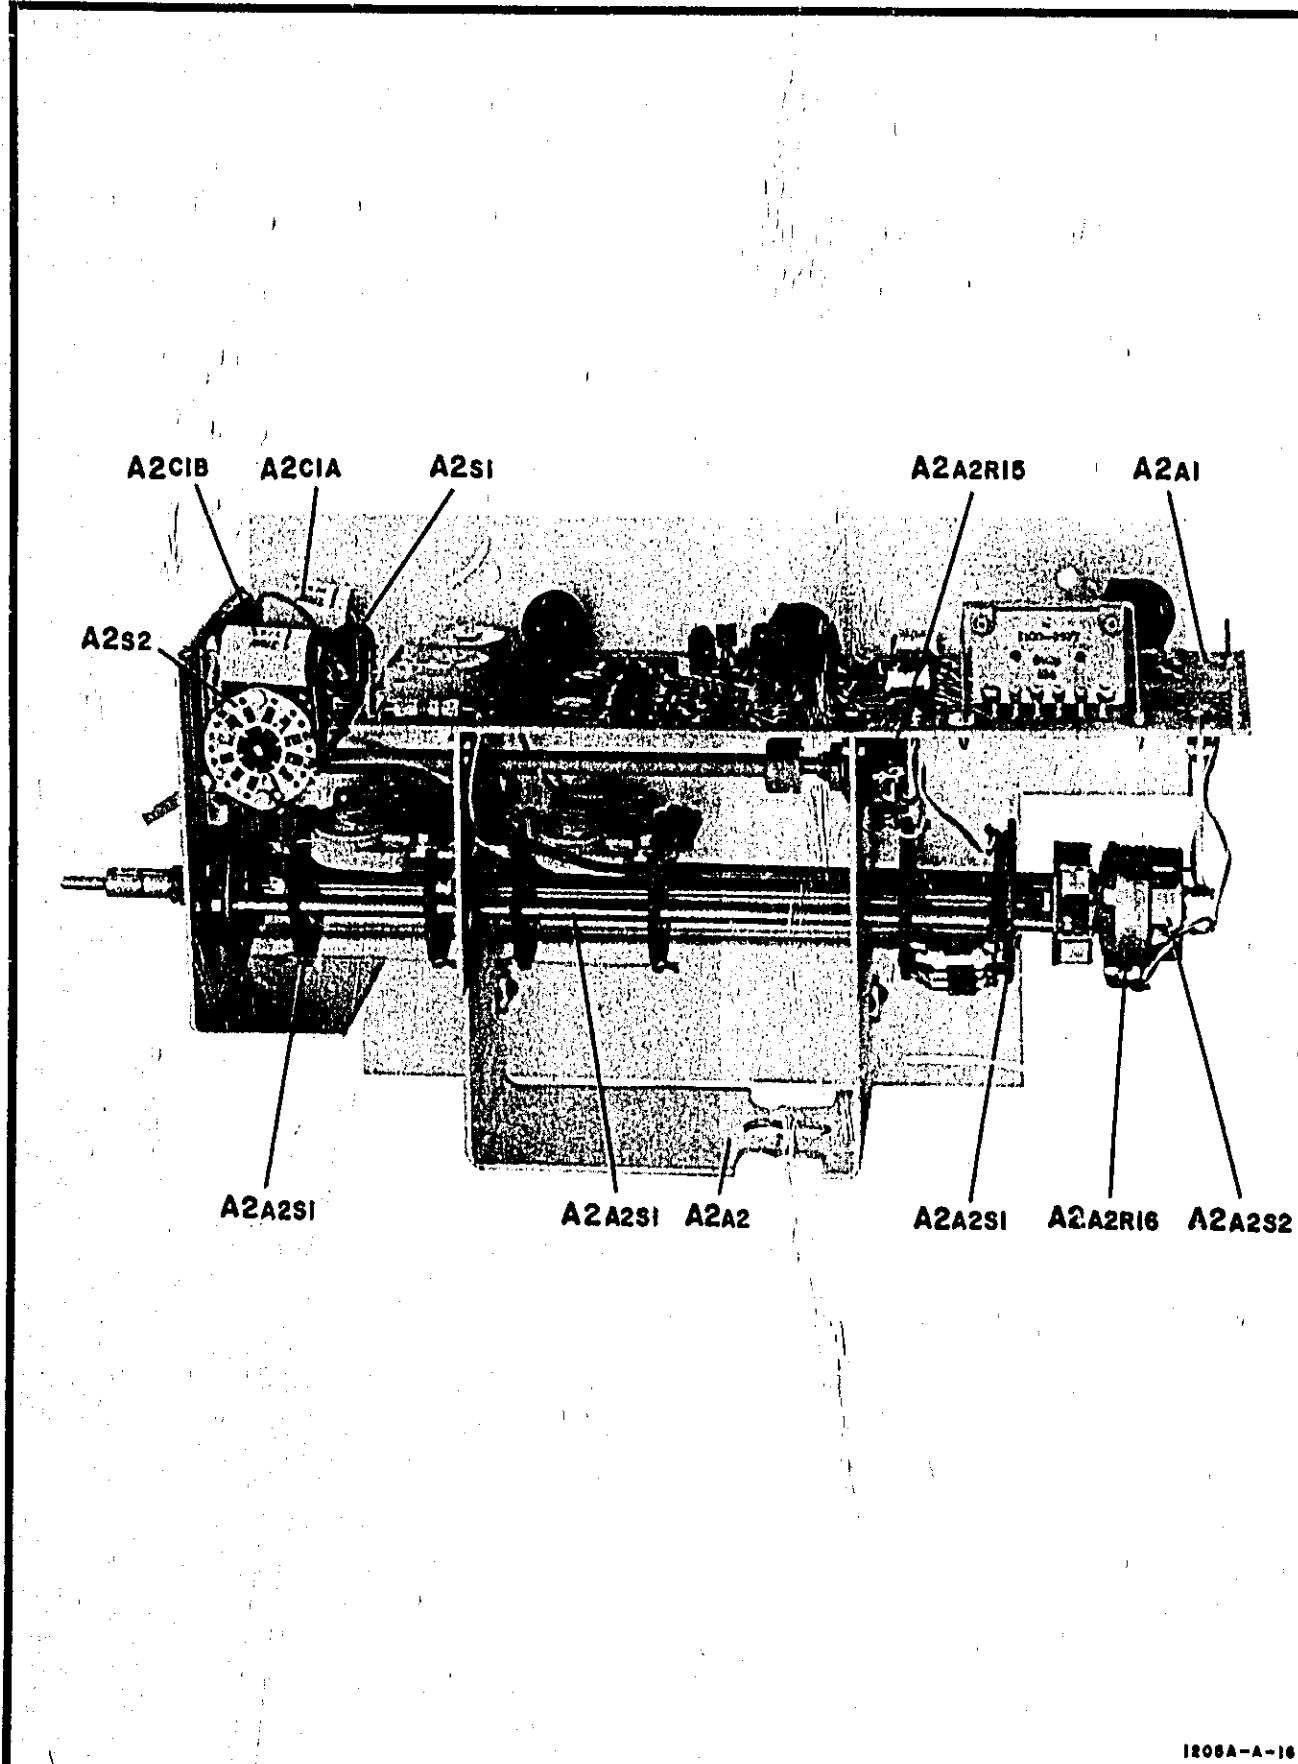


Figure 8-10. 5 mV Preamp Module, A2, Component Identification

1205A-A-16


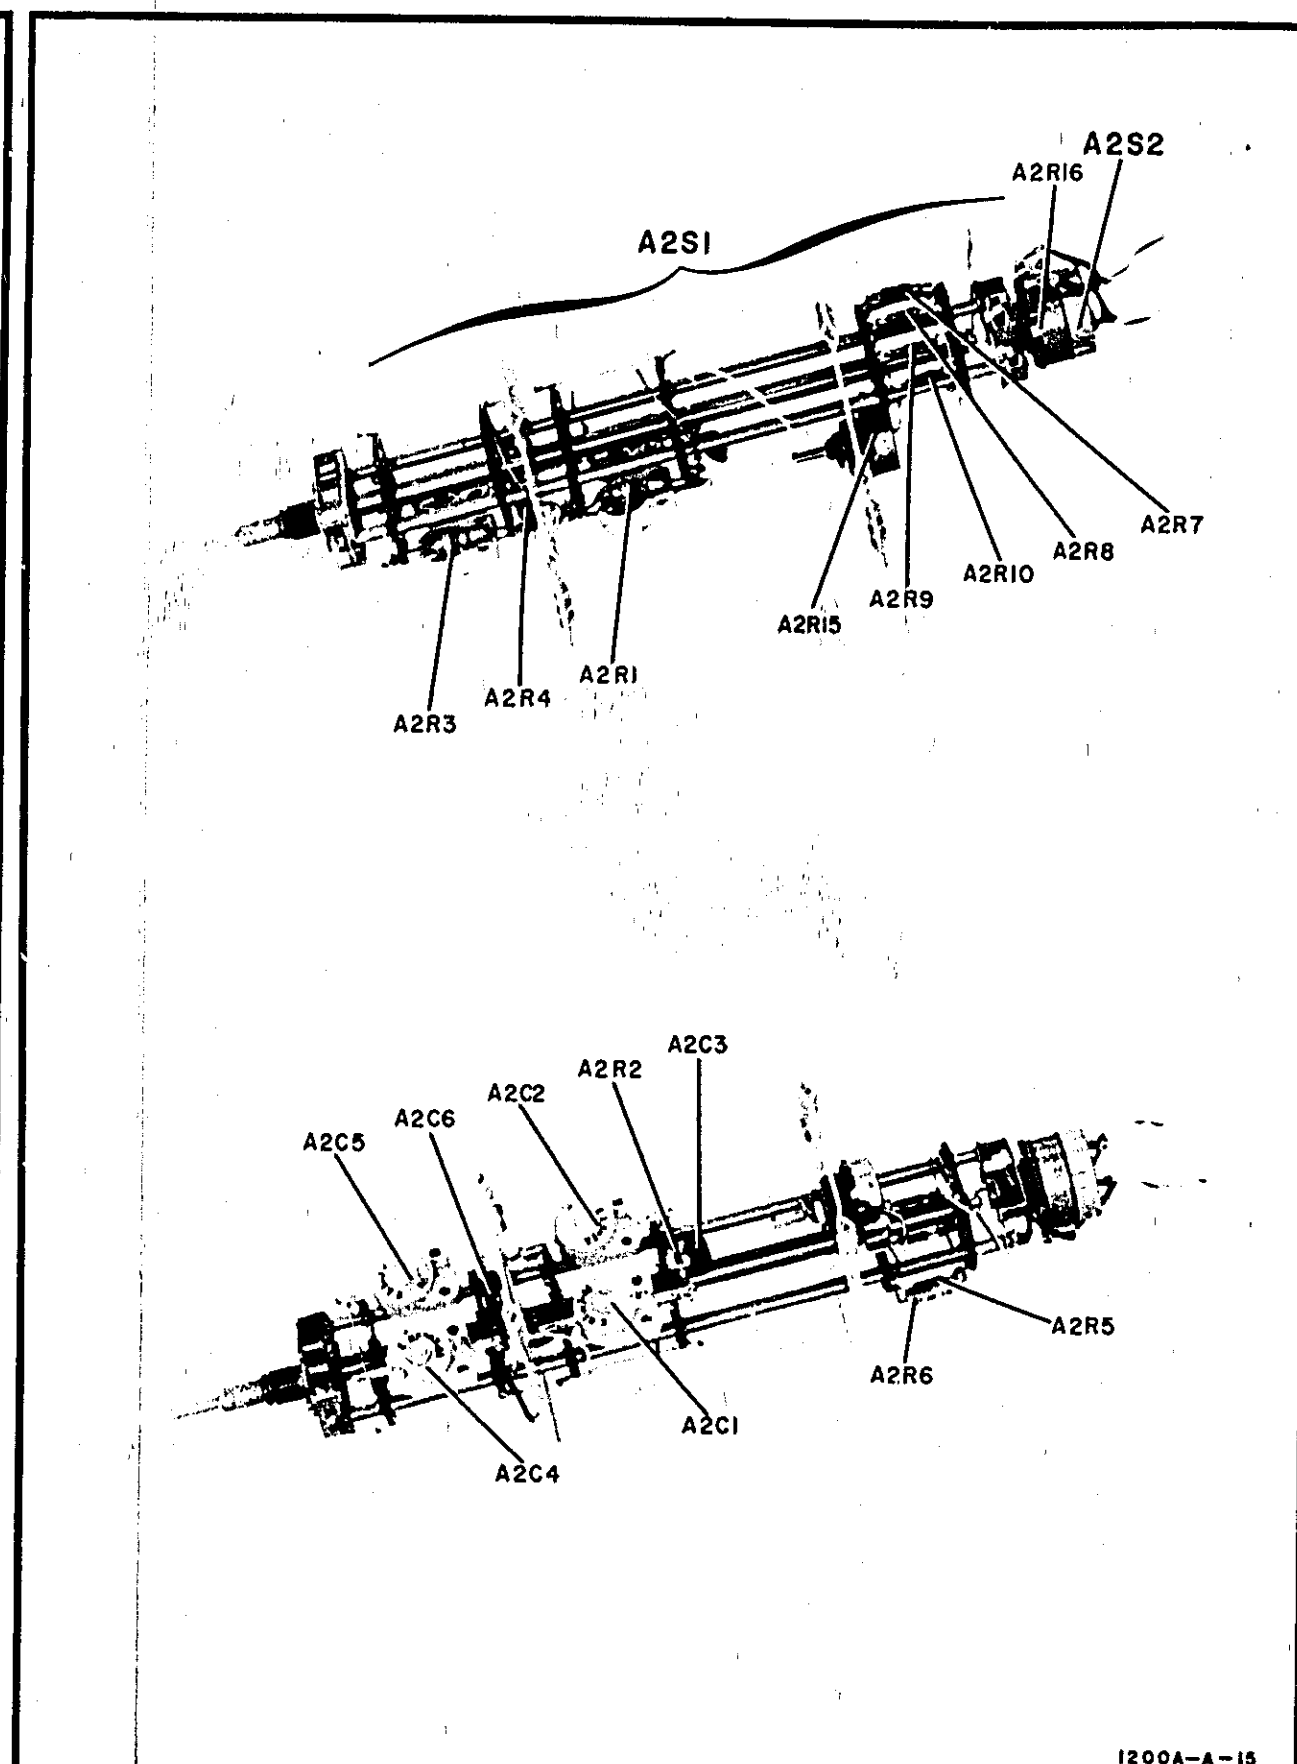


Figure 8-11. Volts/Division Switch, A2A2, Component Identification

1200A-A-15

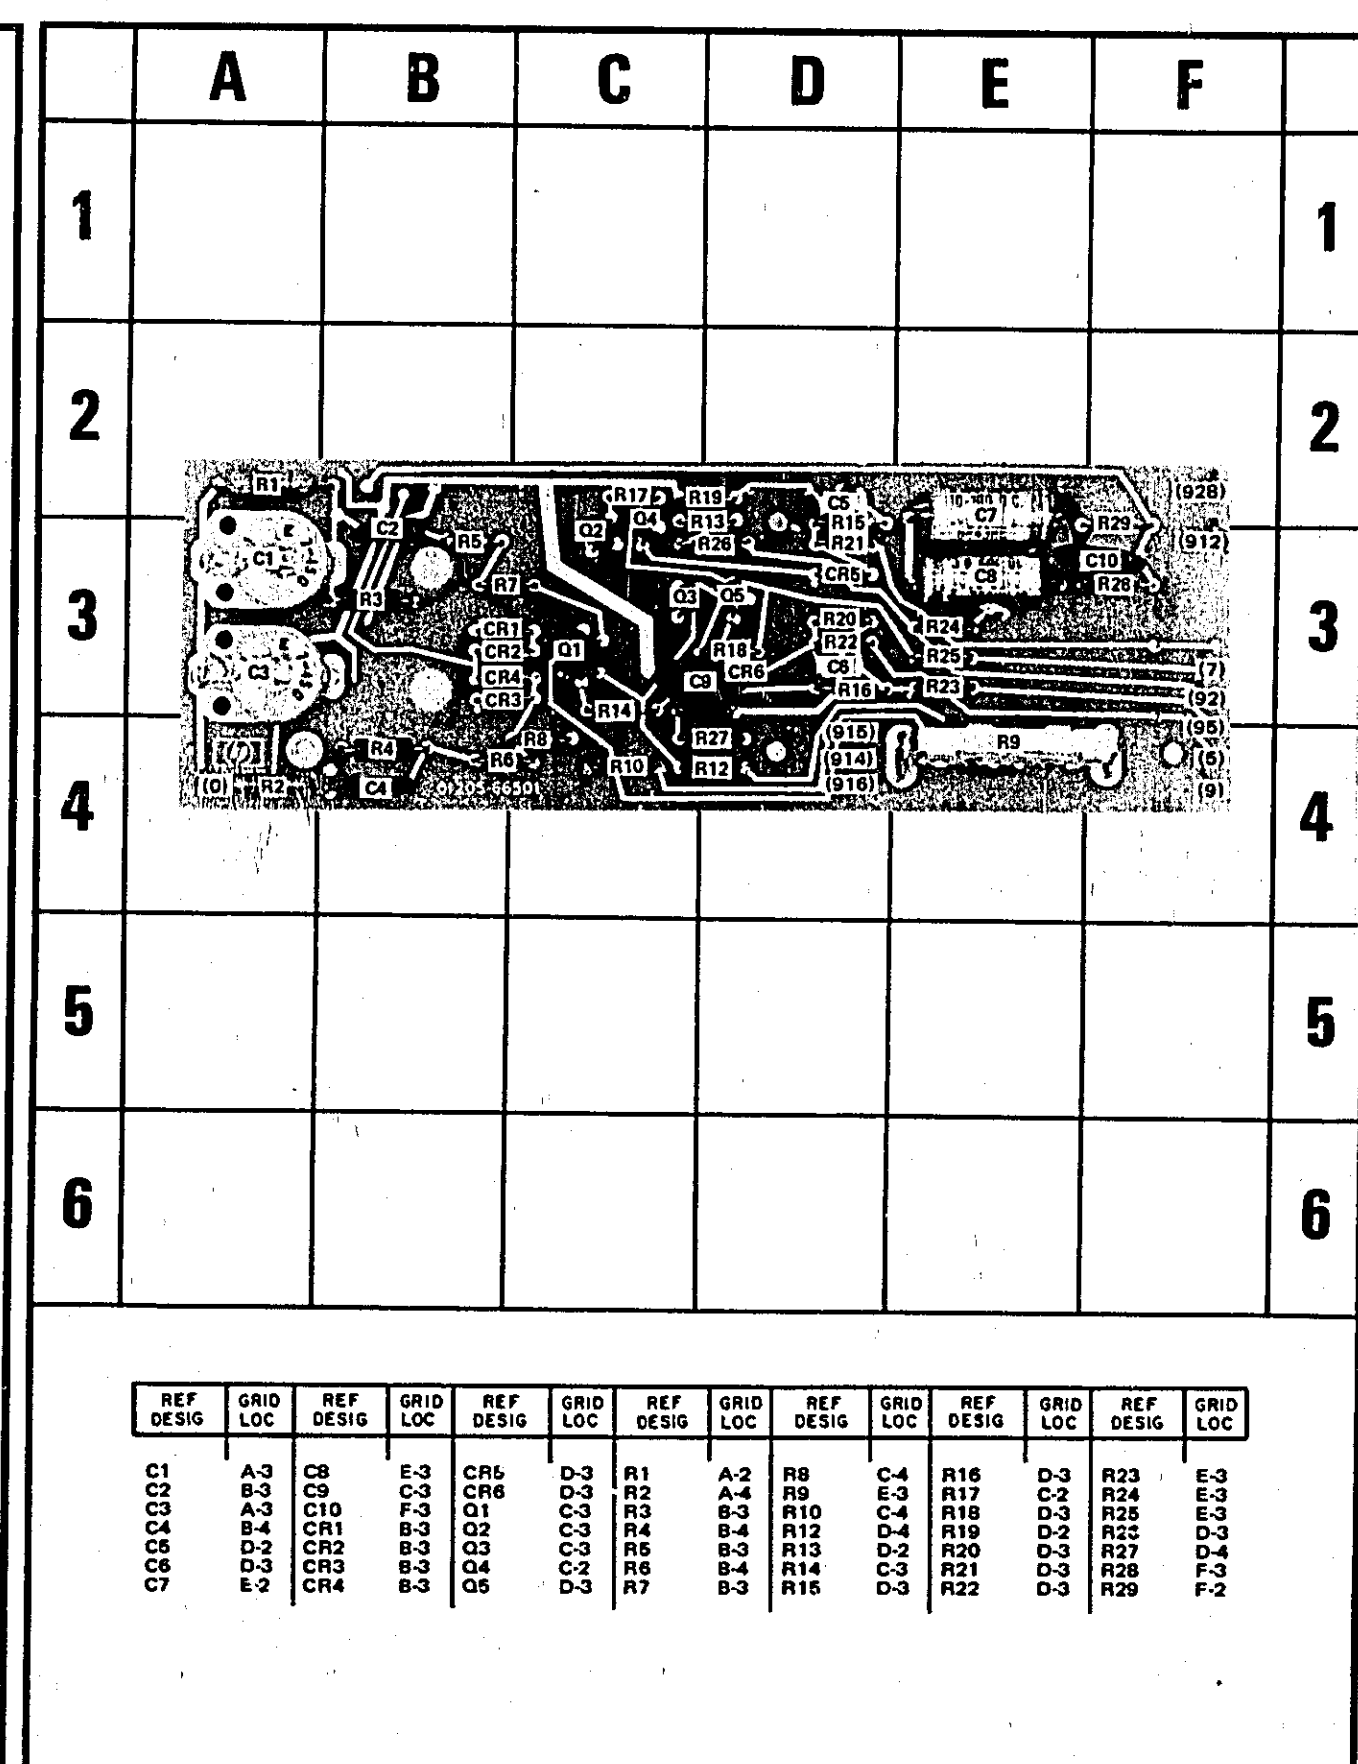

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	A-3	C8	F-3	CR6	D-3	R1	A-2	R8	C-4	R16	D-3	R23	E-3
C2	B-3	C9	C-3	CR7	D-3	R2	A-4	R9	E-3	R17	C-2	R24	E-3
C3	A-3	C10	F-3	Q1	C-3	R3	B-3	R10	C-4	R18	D-3	R25	E-3
C4	B-4	CR1	B-3	Q2	C-3	R4	B-4	R11	D-4	R19	D-2	R26	D-3
C5	D-2	CR2	B-3	Q3	C-3	R5	B-3	R12	D-2	R20	D-3	R27	D-4
C6	D-3	CR3	B-3	Q4	C-3	R6	B-4	R13	D-2	R21	D-3	R28	F-3
C7	E-2	CR4	B-3	Q5	D-3	R7	B-3	R14	C-3	R22	D-3	R29	F-2

Figure 8-12. Vertical Preamp, A2A1, Component Identification

1205A-A-19

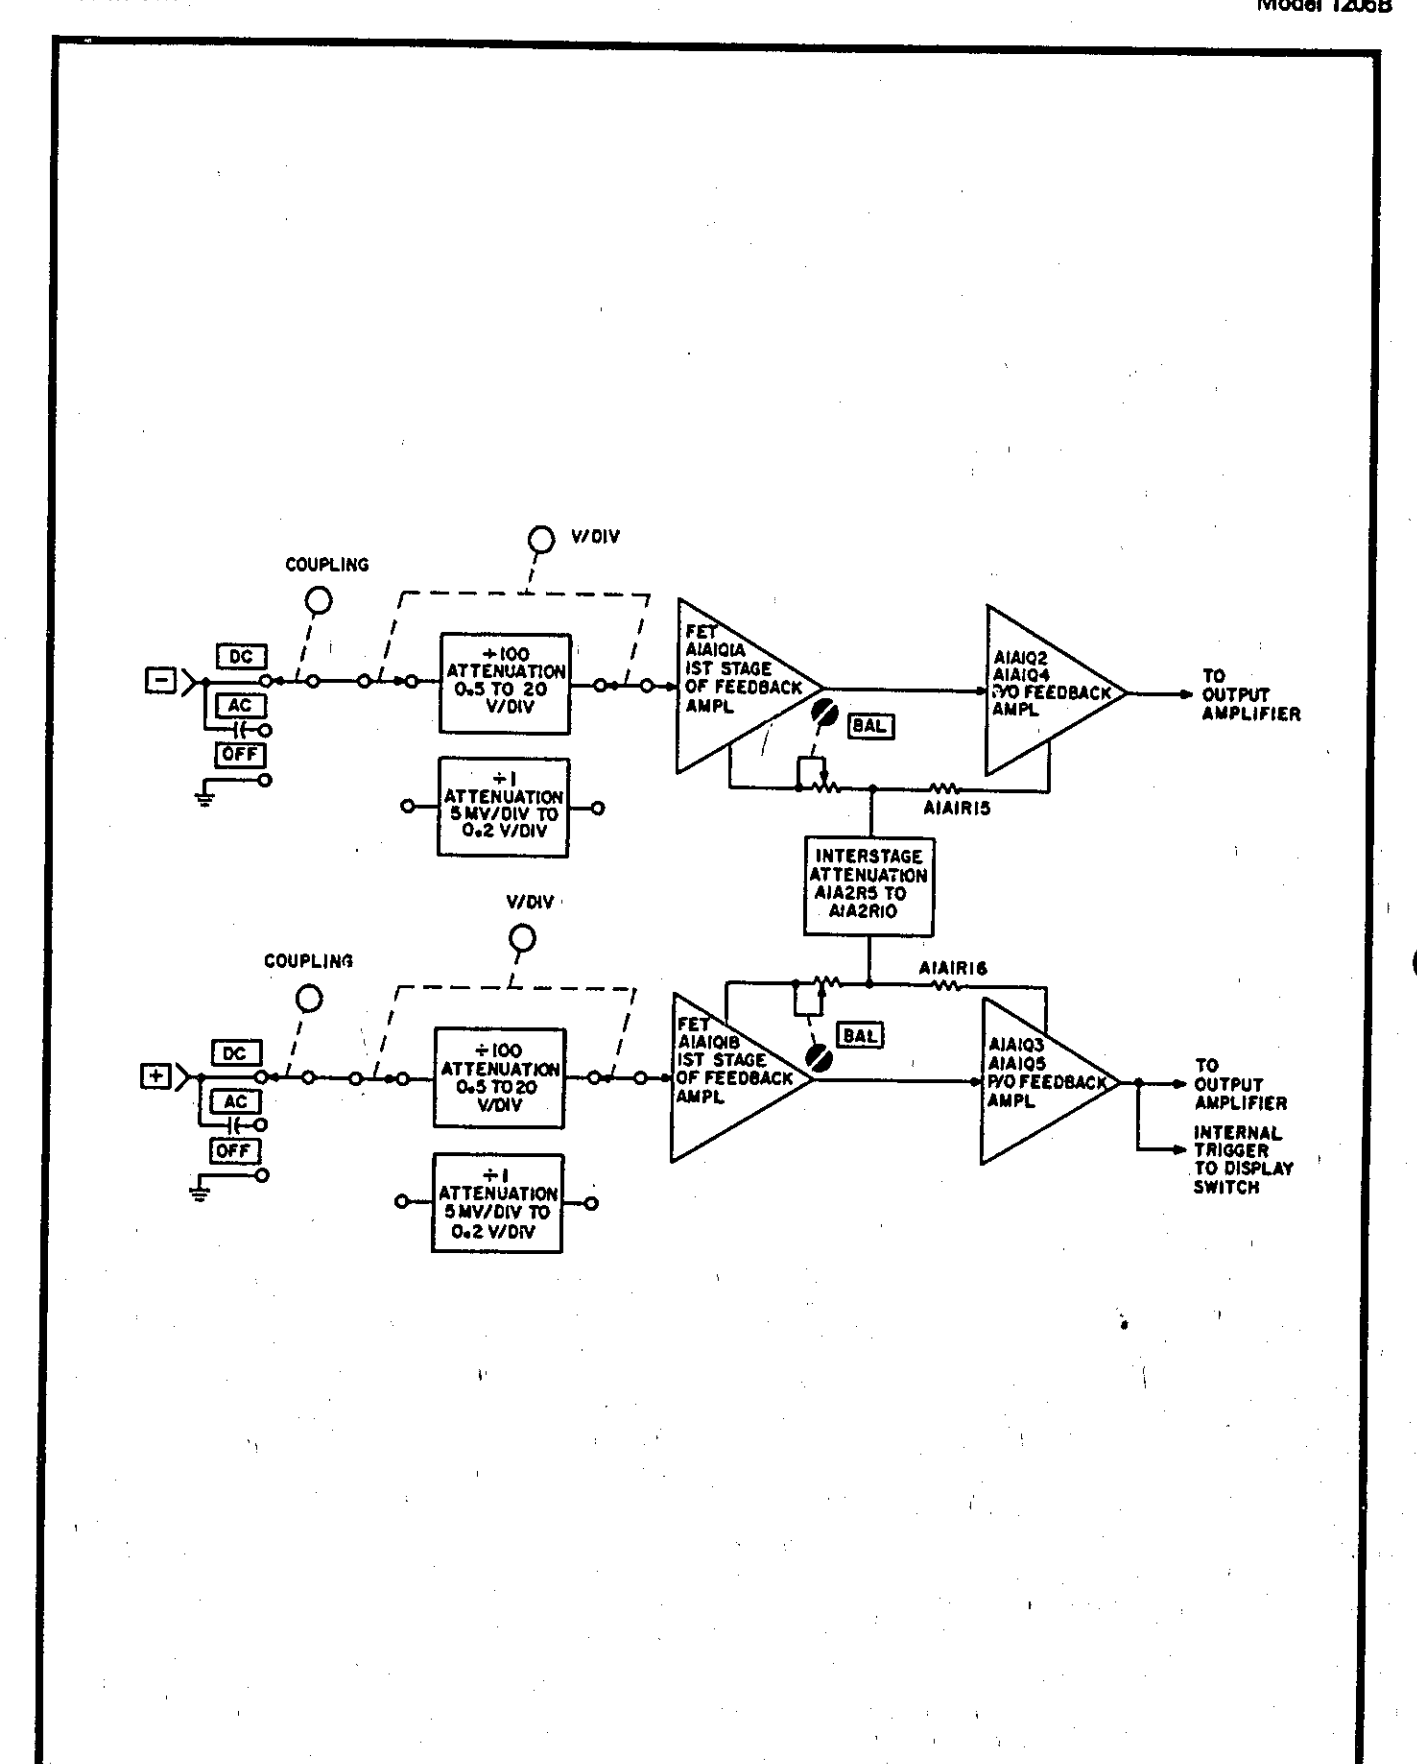


Figure 8-13. Channel B Attenuator and Preamp Block Diagram

1205A-B-1




**DC VOLTAGE MEASUREMENT CONDITIONS**

- Set:
  - Volts/Division B ..... 1 V/DIV
  - +Vertical Coupling B ..... OFF
  - Vertical Coupling B ..... OFF
- Voltagess are referenced to chassis ground. All indications are approximate and may vary slightly from instrument to instrument.


**WAVEFORM MEASUREMENT CONDITIONS**

- Set:
  - Volts/Division B ..... 1 V/DIV
  - +Vertical Coupling B ..... AC
  - Vertical Coupling B ..... OFF
- Connect a 5V pk-pk, 1 kHz sine wave to channel B +INPUT jack.
- All waveforms are referenced to chassis ground. Monitor oscilloscope's vertical sensitivity (using a 1:1 probe) and sweep speed settings are shown below each waveform photograph.

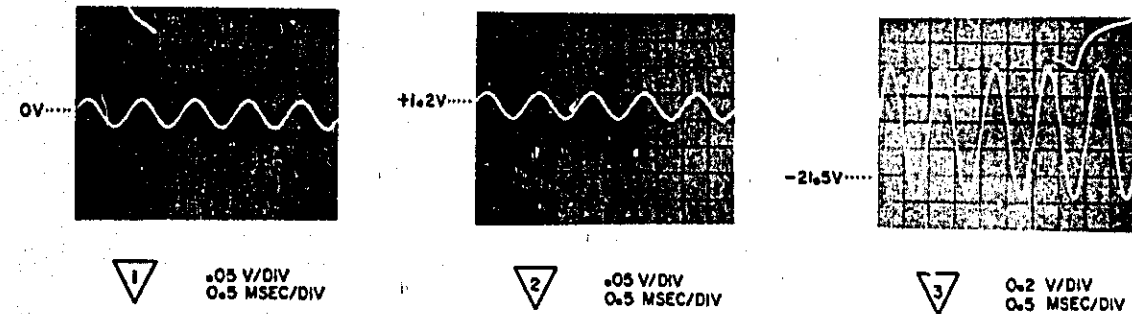

P/O 1200A-8-3A

Figure 8-14. Channel B Preamp Module Measurement Conditions and Waveforms

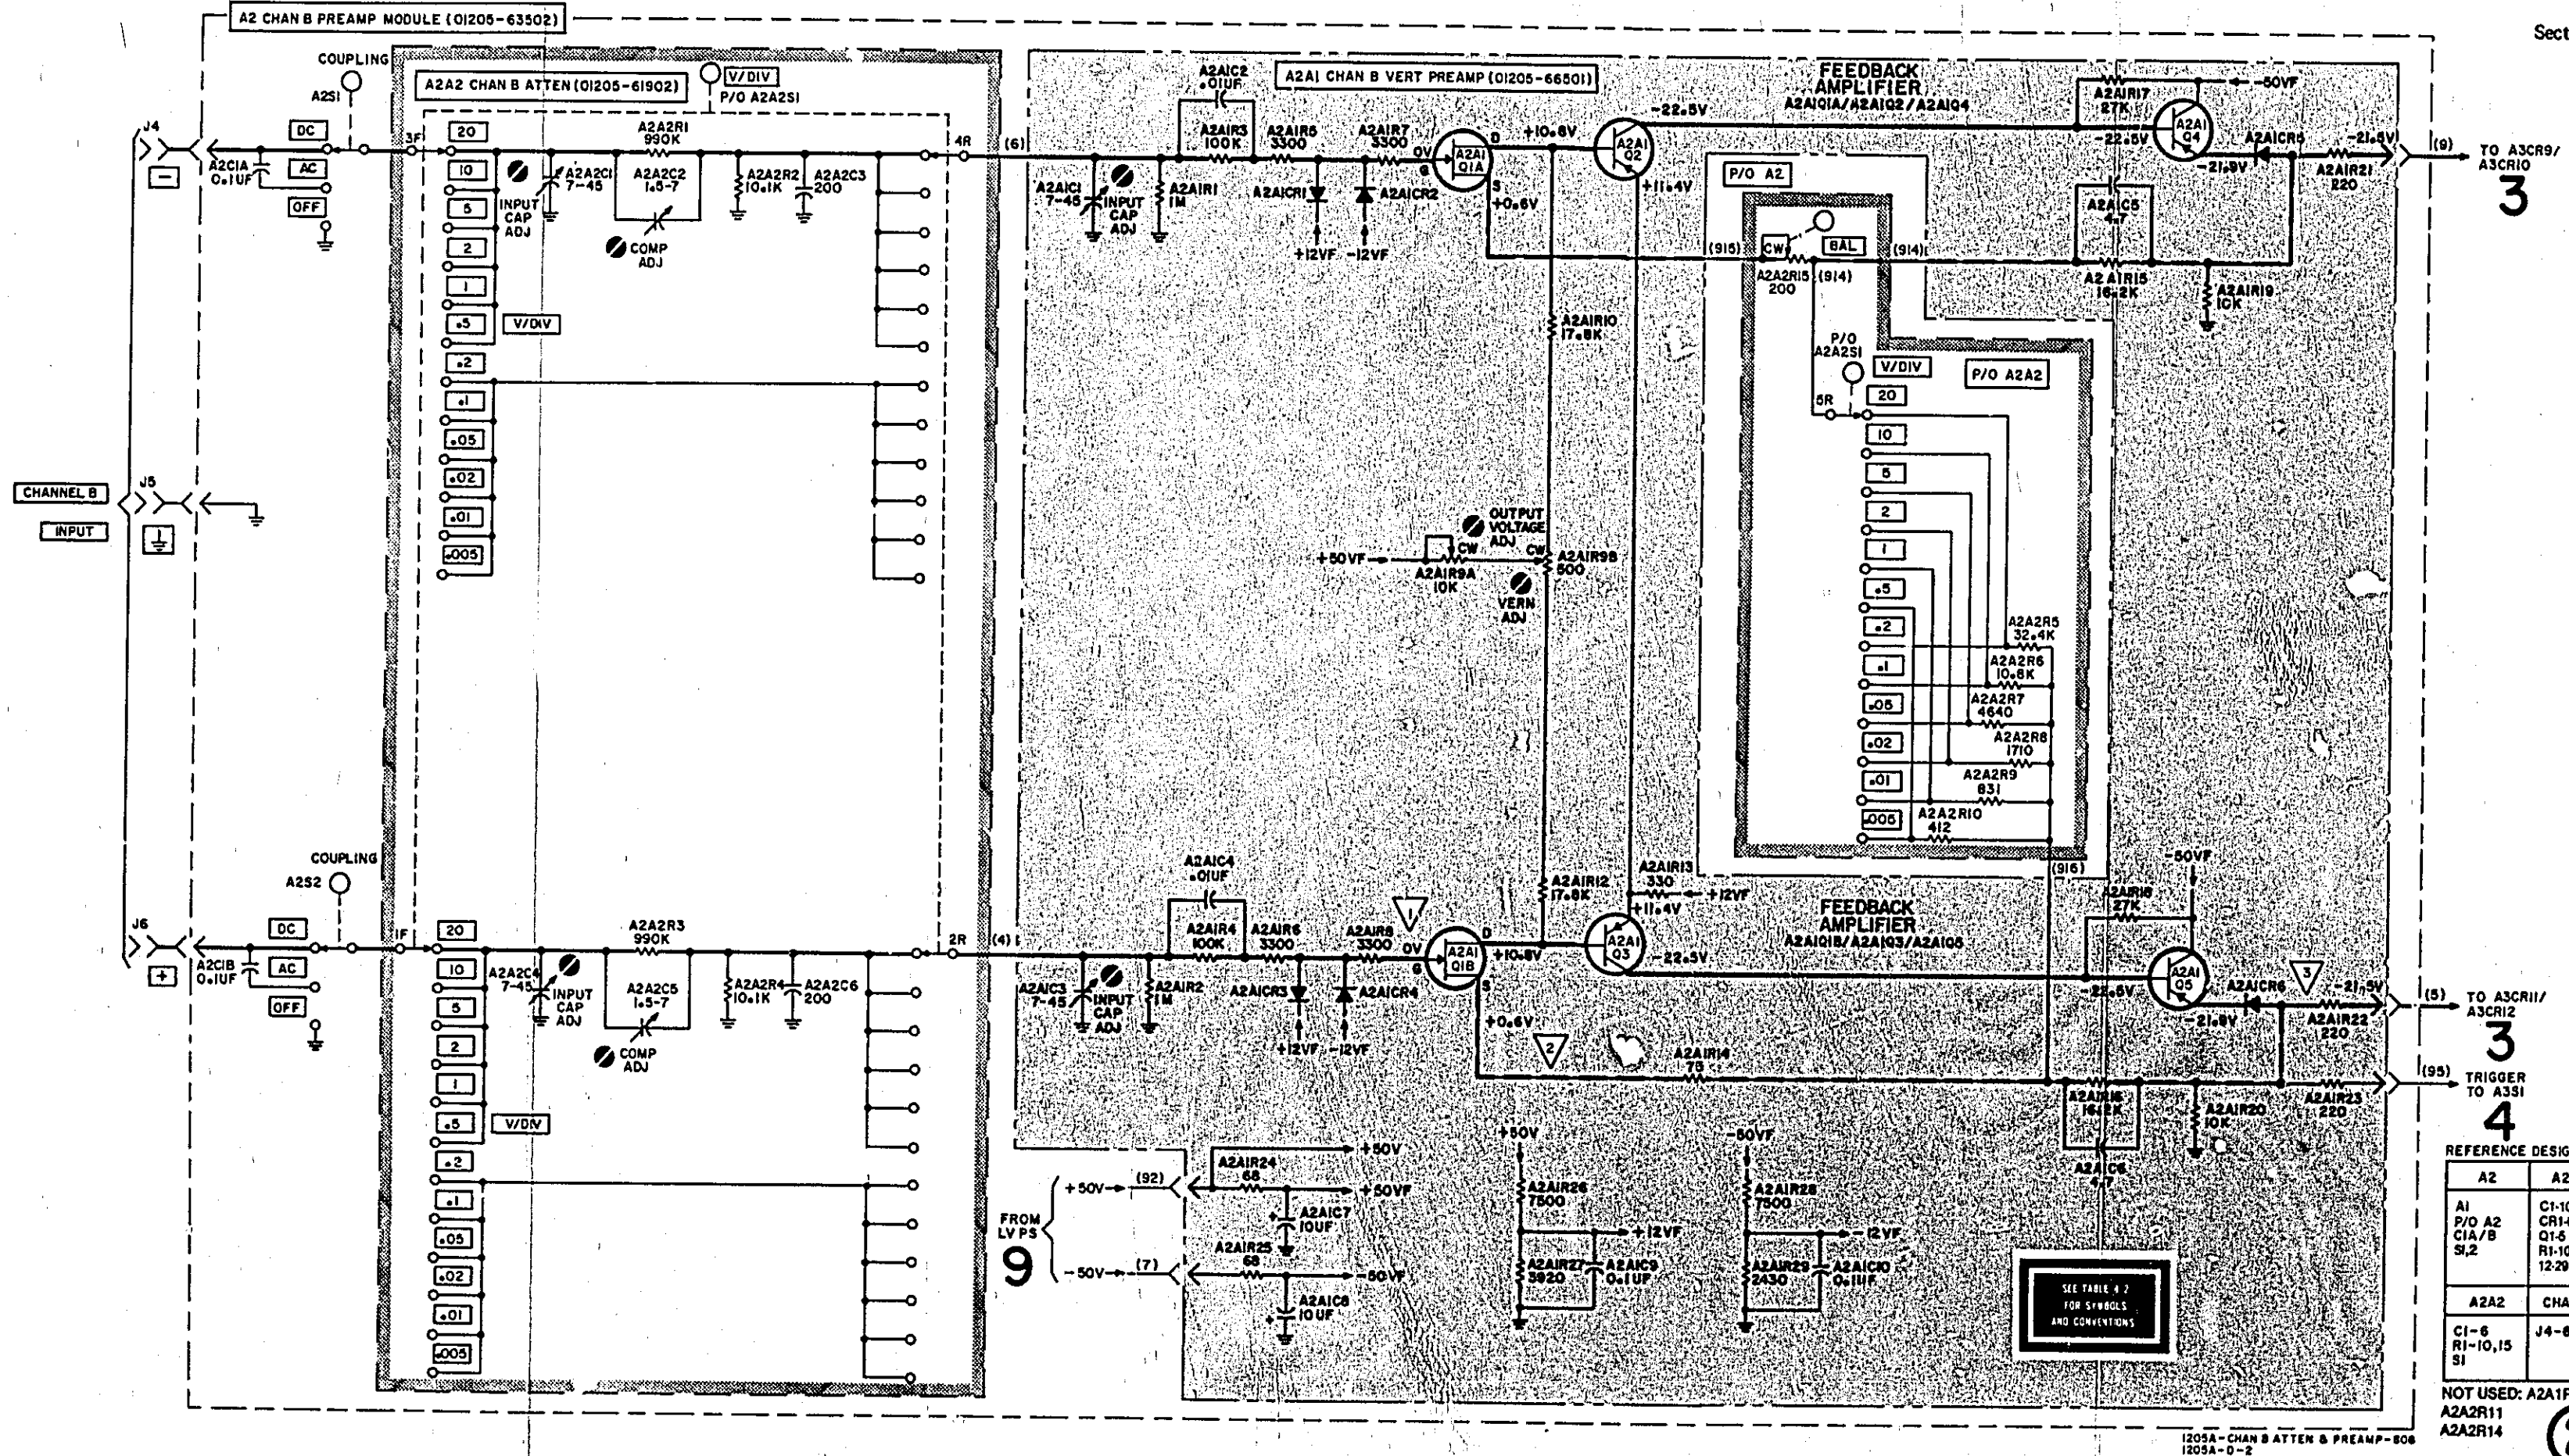

REFERENCE DESIGNATIONS

AZ	AZAI
A1	C1-10
P/O A2	C11-6
C1A/B	C15
S1,2	R1-10,
	12-20
AZ A2	CHASSIS
C1-6	J4-6
R1-10,15	
S1	

NOT USED: AZA1R11, AZA2R11, AZA2R14

1205A-CHAN B ATTEN & PREAMP-508  
1205A-0-2

Figure 8-15. Channel B Preamp Module Schematic

②

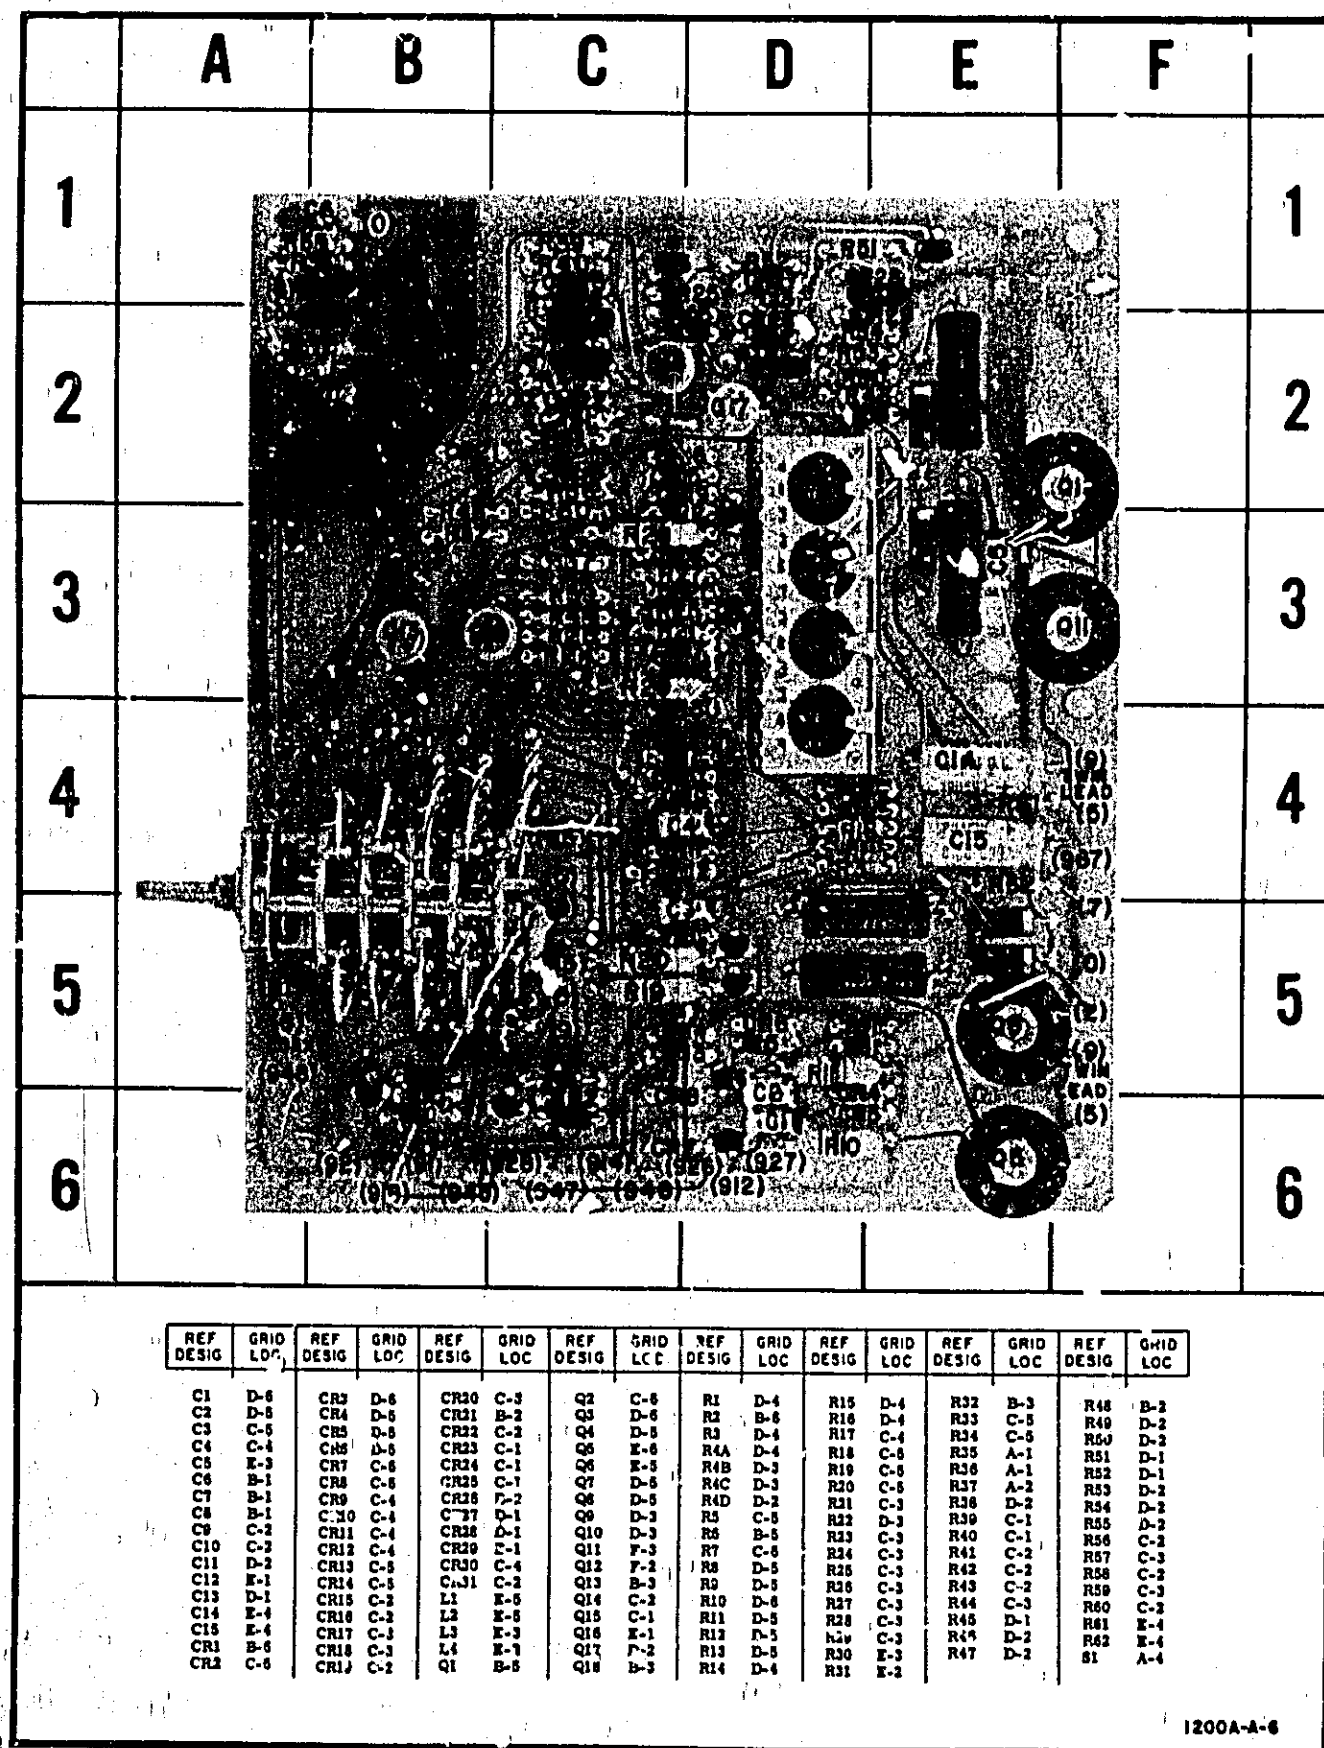


Figure 8-16. Dual Channel Output Amplifier, A3, Component Identification

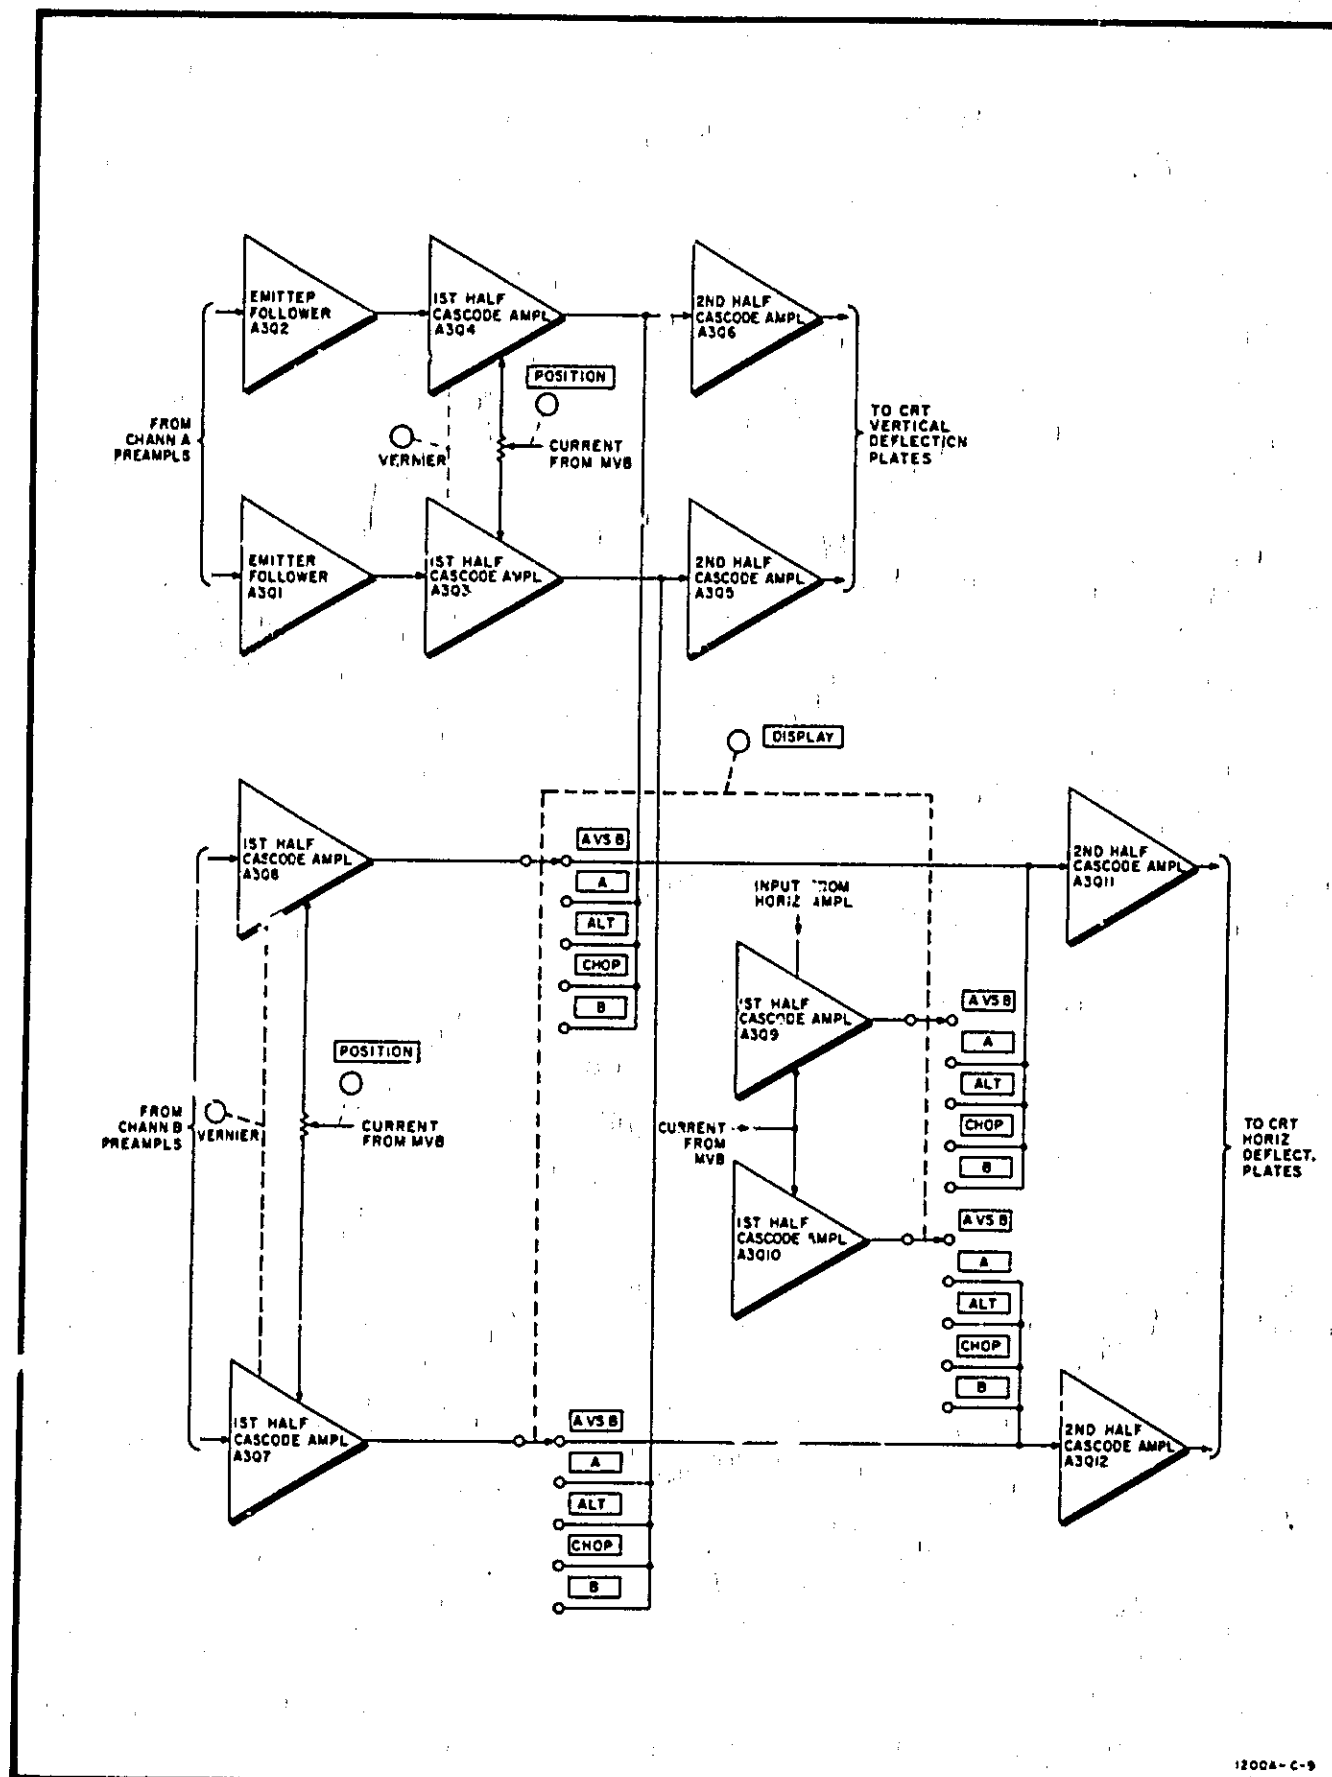


Figure 8-17. Dual Channel Output Amplifier Block Diagram

Table 8-3. Dual Channel Output Amplifier Measurement Conditions

DC VOLTAGE MEASUREMENT CONDITIONS	
1. Set:	Horizontal POSITION ..... midrange
DISPLAY ..... A	SWEEP/EXT HORIZ ..... 1 V/DIV
Vertical POSITION (A and B) ..... midrange	
Vertical Vernier (A and B) ..... CAL	2. Voltages are referenced to chassis ground. All indications are approximate and may vary slightly from instrument to instrument.
Volts/Division (A and B) ..... 1 V/DIV	
+Vertical Coupling (A and B) ..... OFF	3. *To measure voltages with an asterisk, set DISPLAY to A vs B.
-Vertical Coupling (A and B) ..... OFF*	
WAVEFORM MEASUREMENT CONDITIONS	
1. Set:	TRIGGER LEVEL ..... AUTO
DISPLAY ..... A	Horizontal COUPLING ..... DC
Vertical POSITION (A and B) ..... midrange	SOURCE ..... INT
Volts/Division (A and B) ..... 1 V/DIV	
Vertical Vernier (A and B) ..... CAL	2. Connect a 5V pk-pk, 1 kHz sine wave to channel A +INPUT jack.
+Vertical Coupling A ..... AC	
-Vertical Coupling A ..... OFF	
+Vertical Coupling B ..... AC	3. * To measure these waveforms, connect a 5V pk-pk, 1 kHz sine wave to both channel A and B +INPUT jacks. Set the controls as indicated in step 1, except set DISPLAY to A vs B.
-Vertical Coupling B ..... OFF	
Horizontal POSITION ..... midrange	
SWEEP/EXT HORIZ ..... x1	
Time/Division ..... 0.2 MSEC/DIV	
Horizontal Vernier ..... CAL	4. All waveforms are referenced to chassis ground. Monitor oscilloscope's vertical sensitivity (using a 1:1 probe) and sweep speed settings are shown below each waveform photograph.
SLOPE ..... +	
MODE ..... NORM	



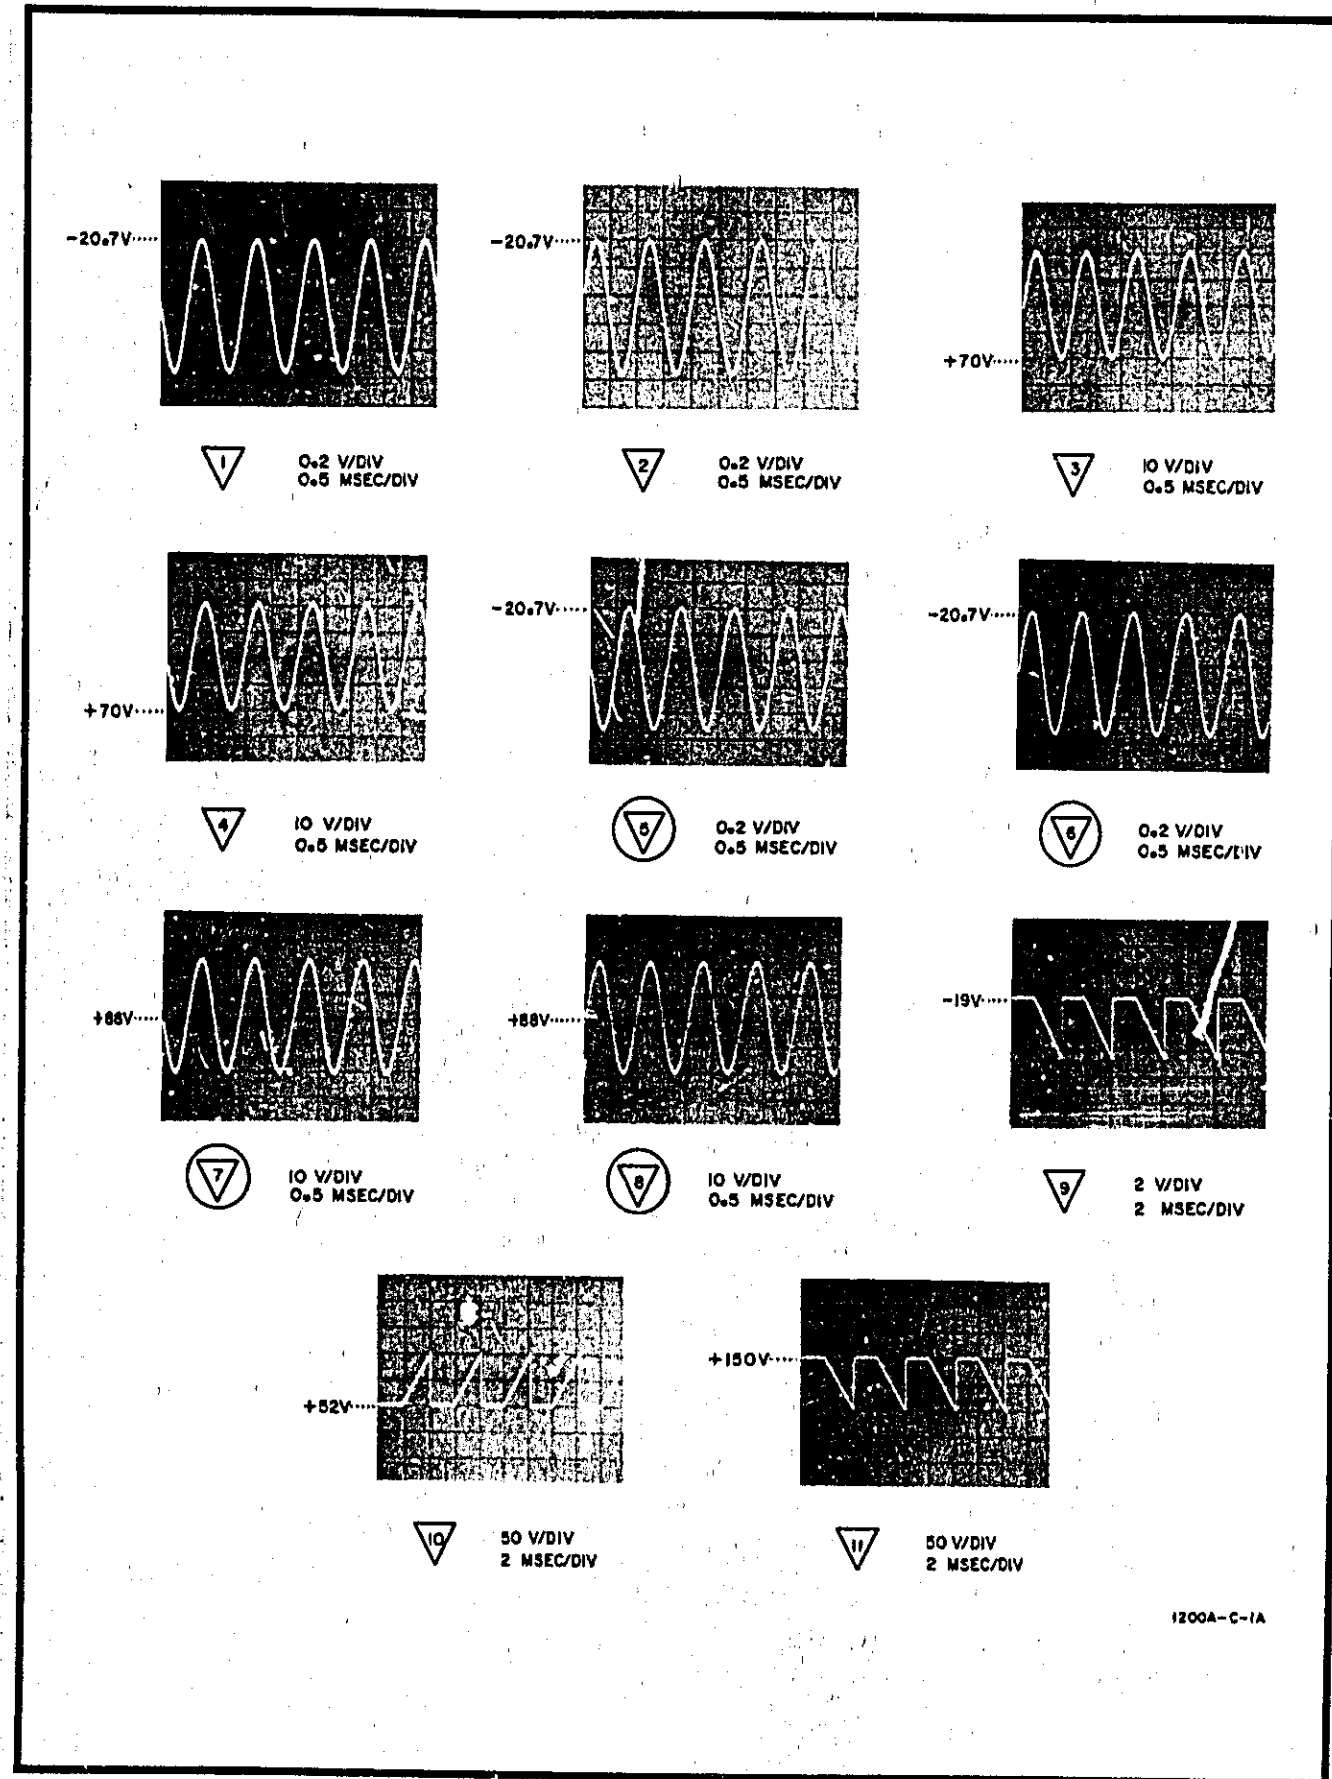


Figure 8-18. Dual Channel Output Amplifier Waveforms

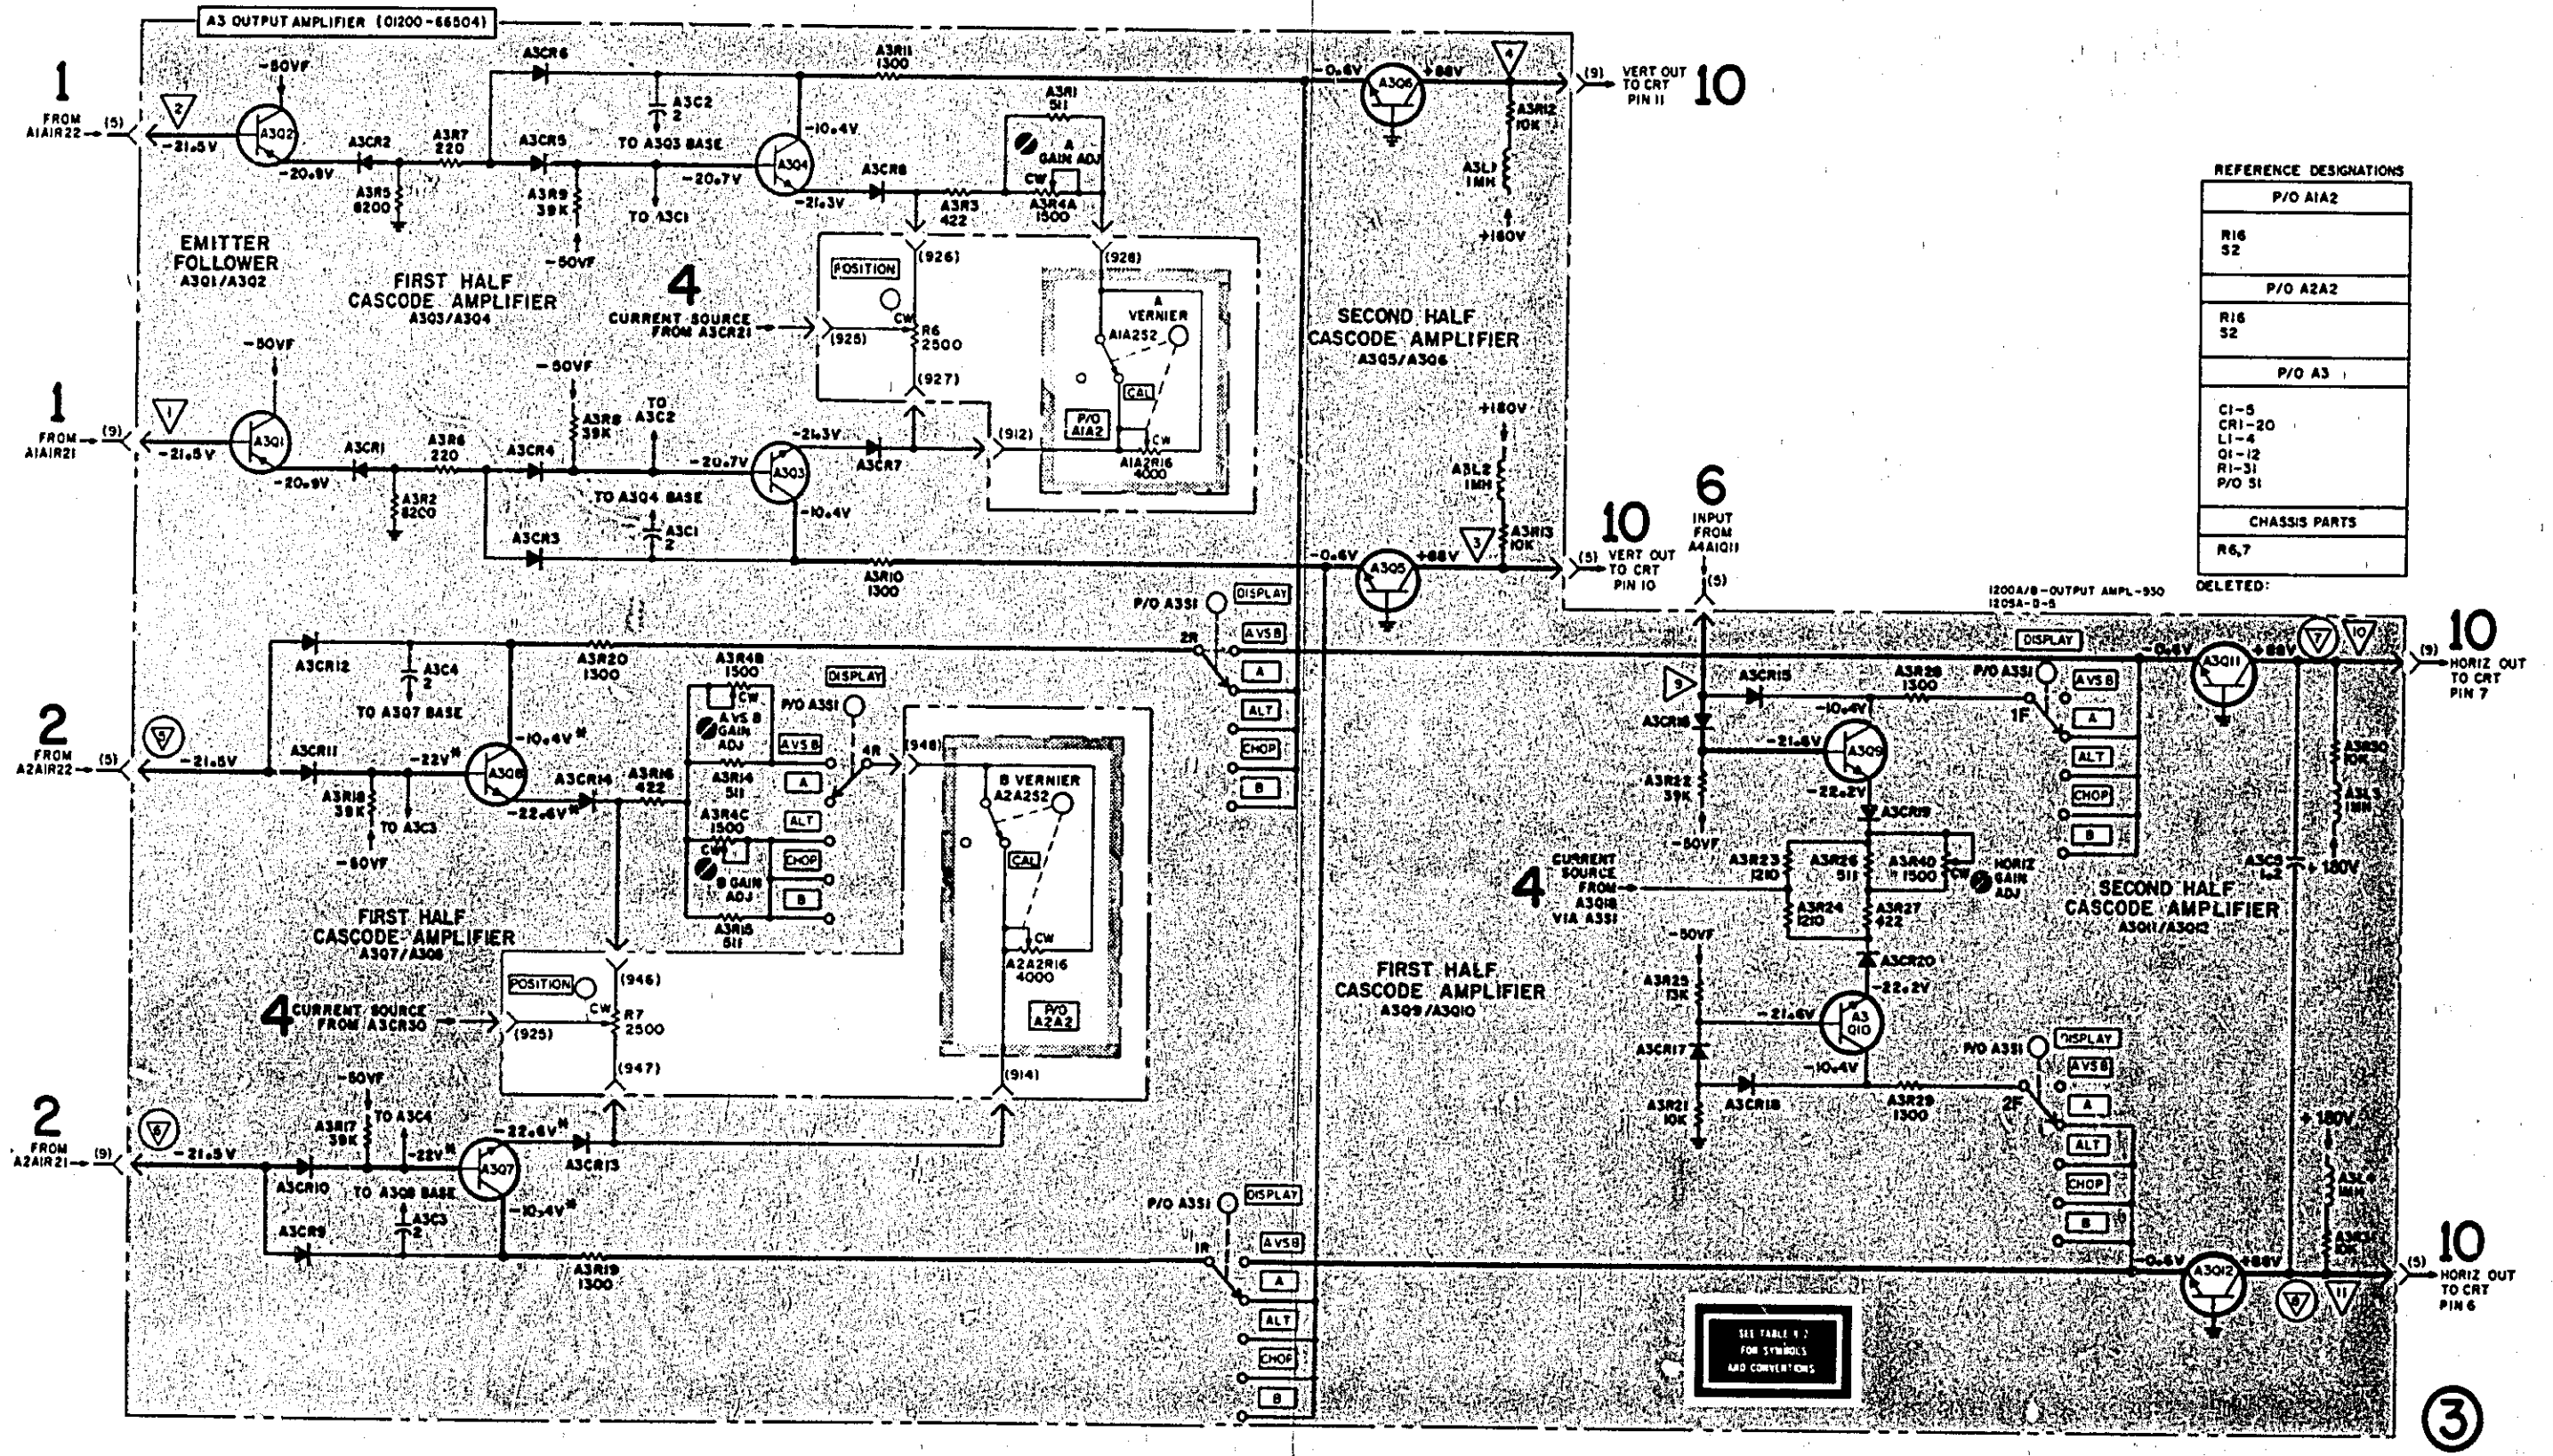


Figure 8-19. Dual Channel Output Amplifier Schematic 8-15



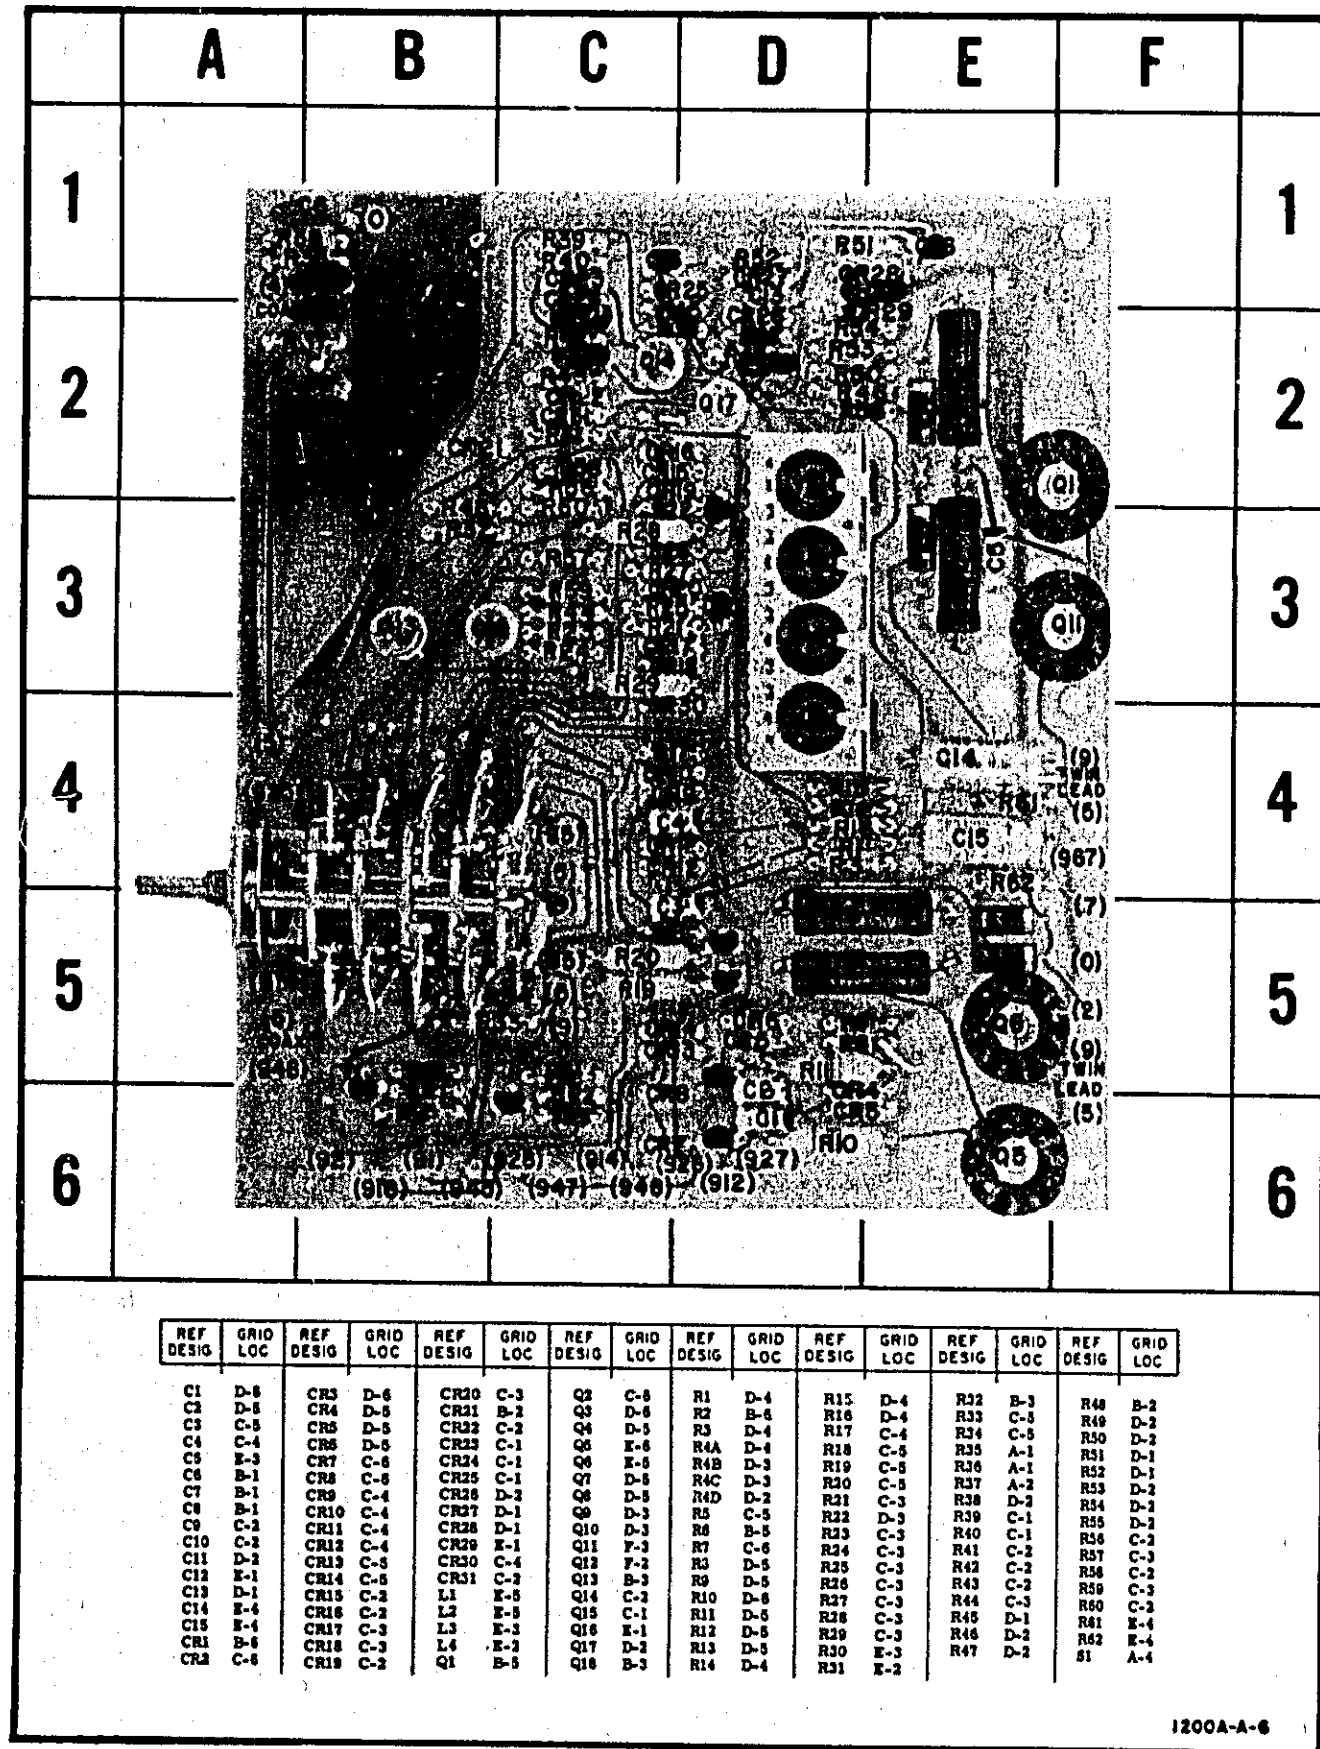


Figure 8-20. Multivibrator, A3, Component Identification

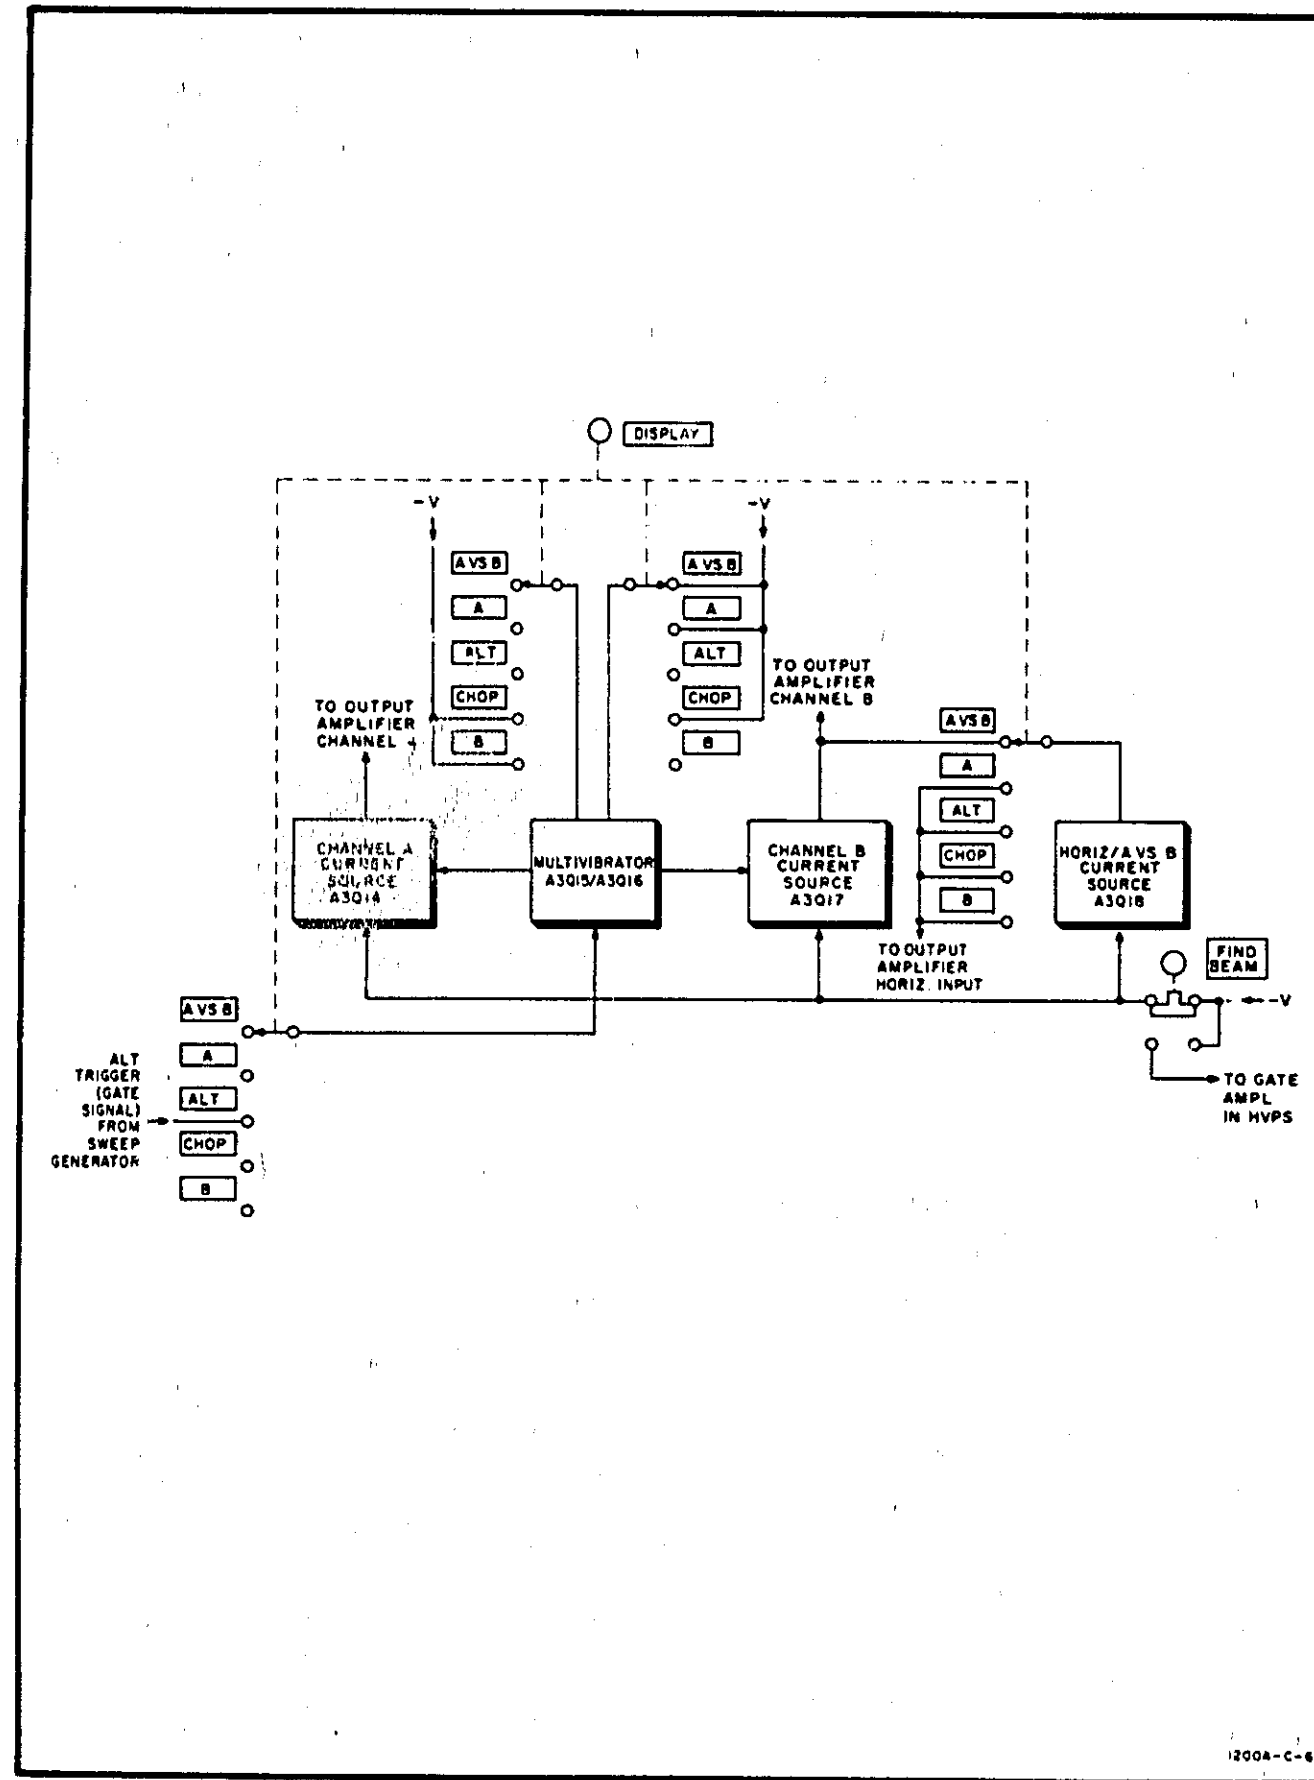


Figure 8-21. Multivibrator Block Diagram

Table 8-4. Multivibrator Measurement Conditions

**DC VOLTAGE MEASUREMENT CONDITIONS**

- Set:
  - DISPLAY ..... A
  - Vertical POSITION (A and B) ..... midrange
  - Horizontal POSITION ..... midrange
- Voltages are referenced to chassis ground. All indications are approximate and may vary slightly from instrument to instrument.

**WAVEFORM MEASUREMENT CONDITIONS**

- Set:
  - DISPLAY ..... CHOP
  - Vertical POSITION (A and B) ..... midrange
  - Horizontal POSITION ..... midrange
- All waveforms are referenced to chassis ground. Monitor oscilloscope's vertical sensitivity (using a 1:1 probe) and sweep speed settings are shown below each waveform photograph.

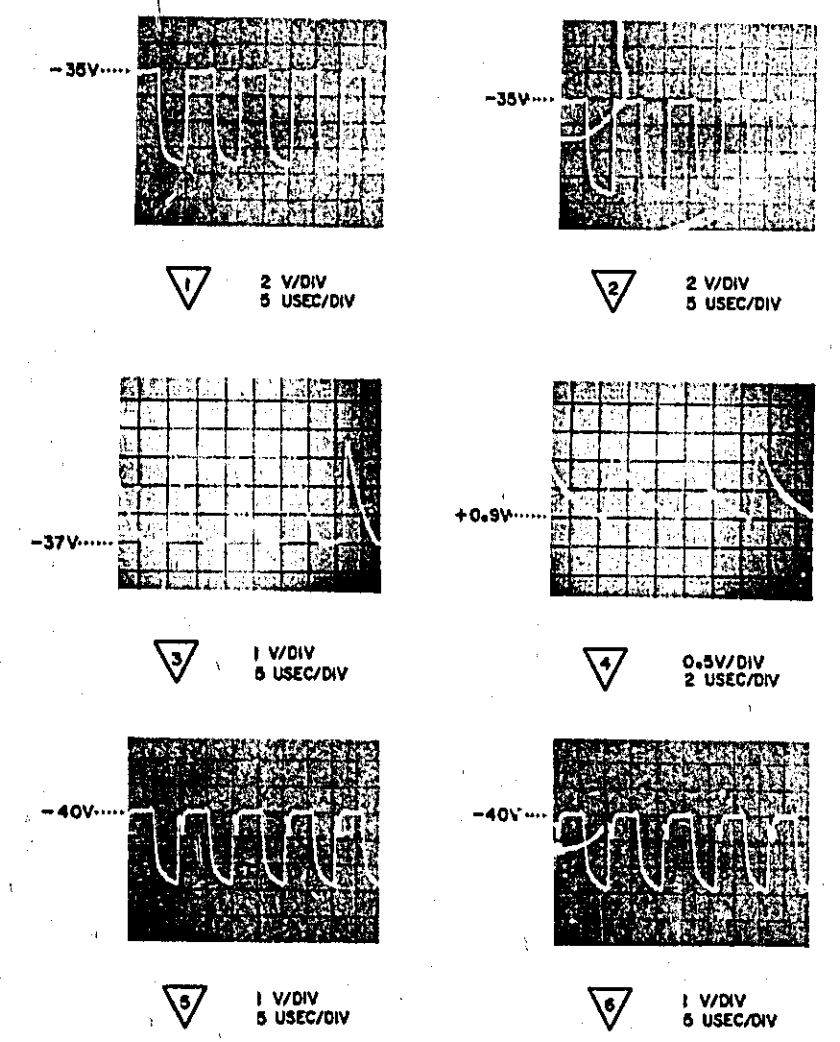


Figure 8-22. Multivibrator Waveforms

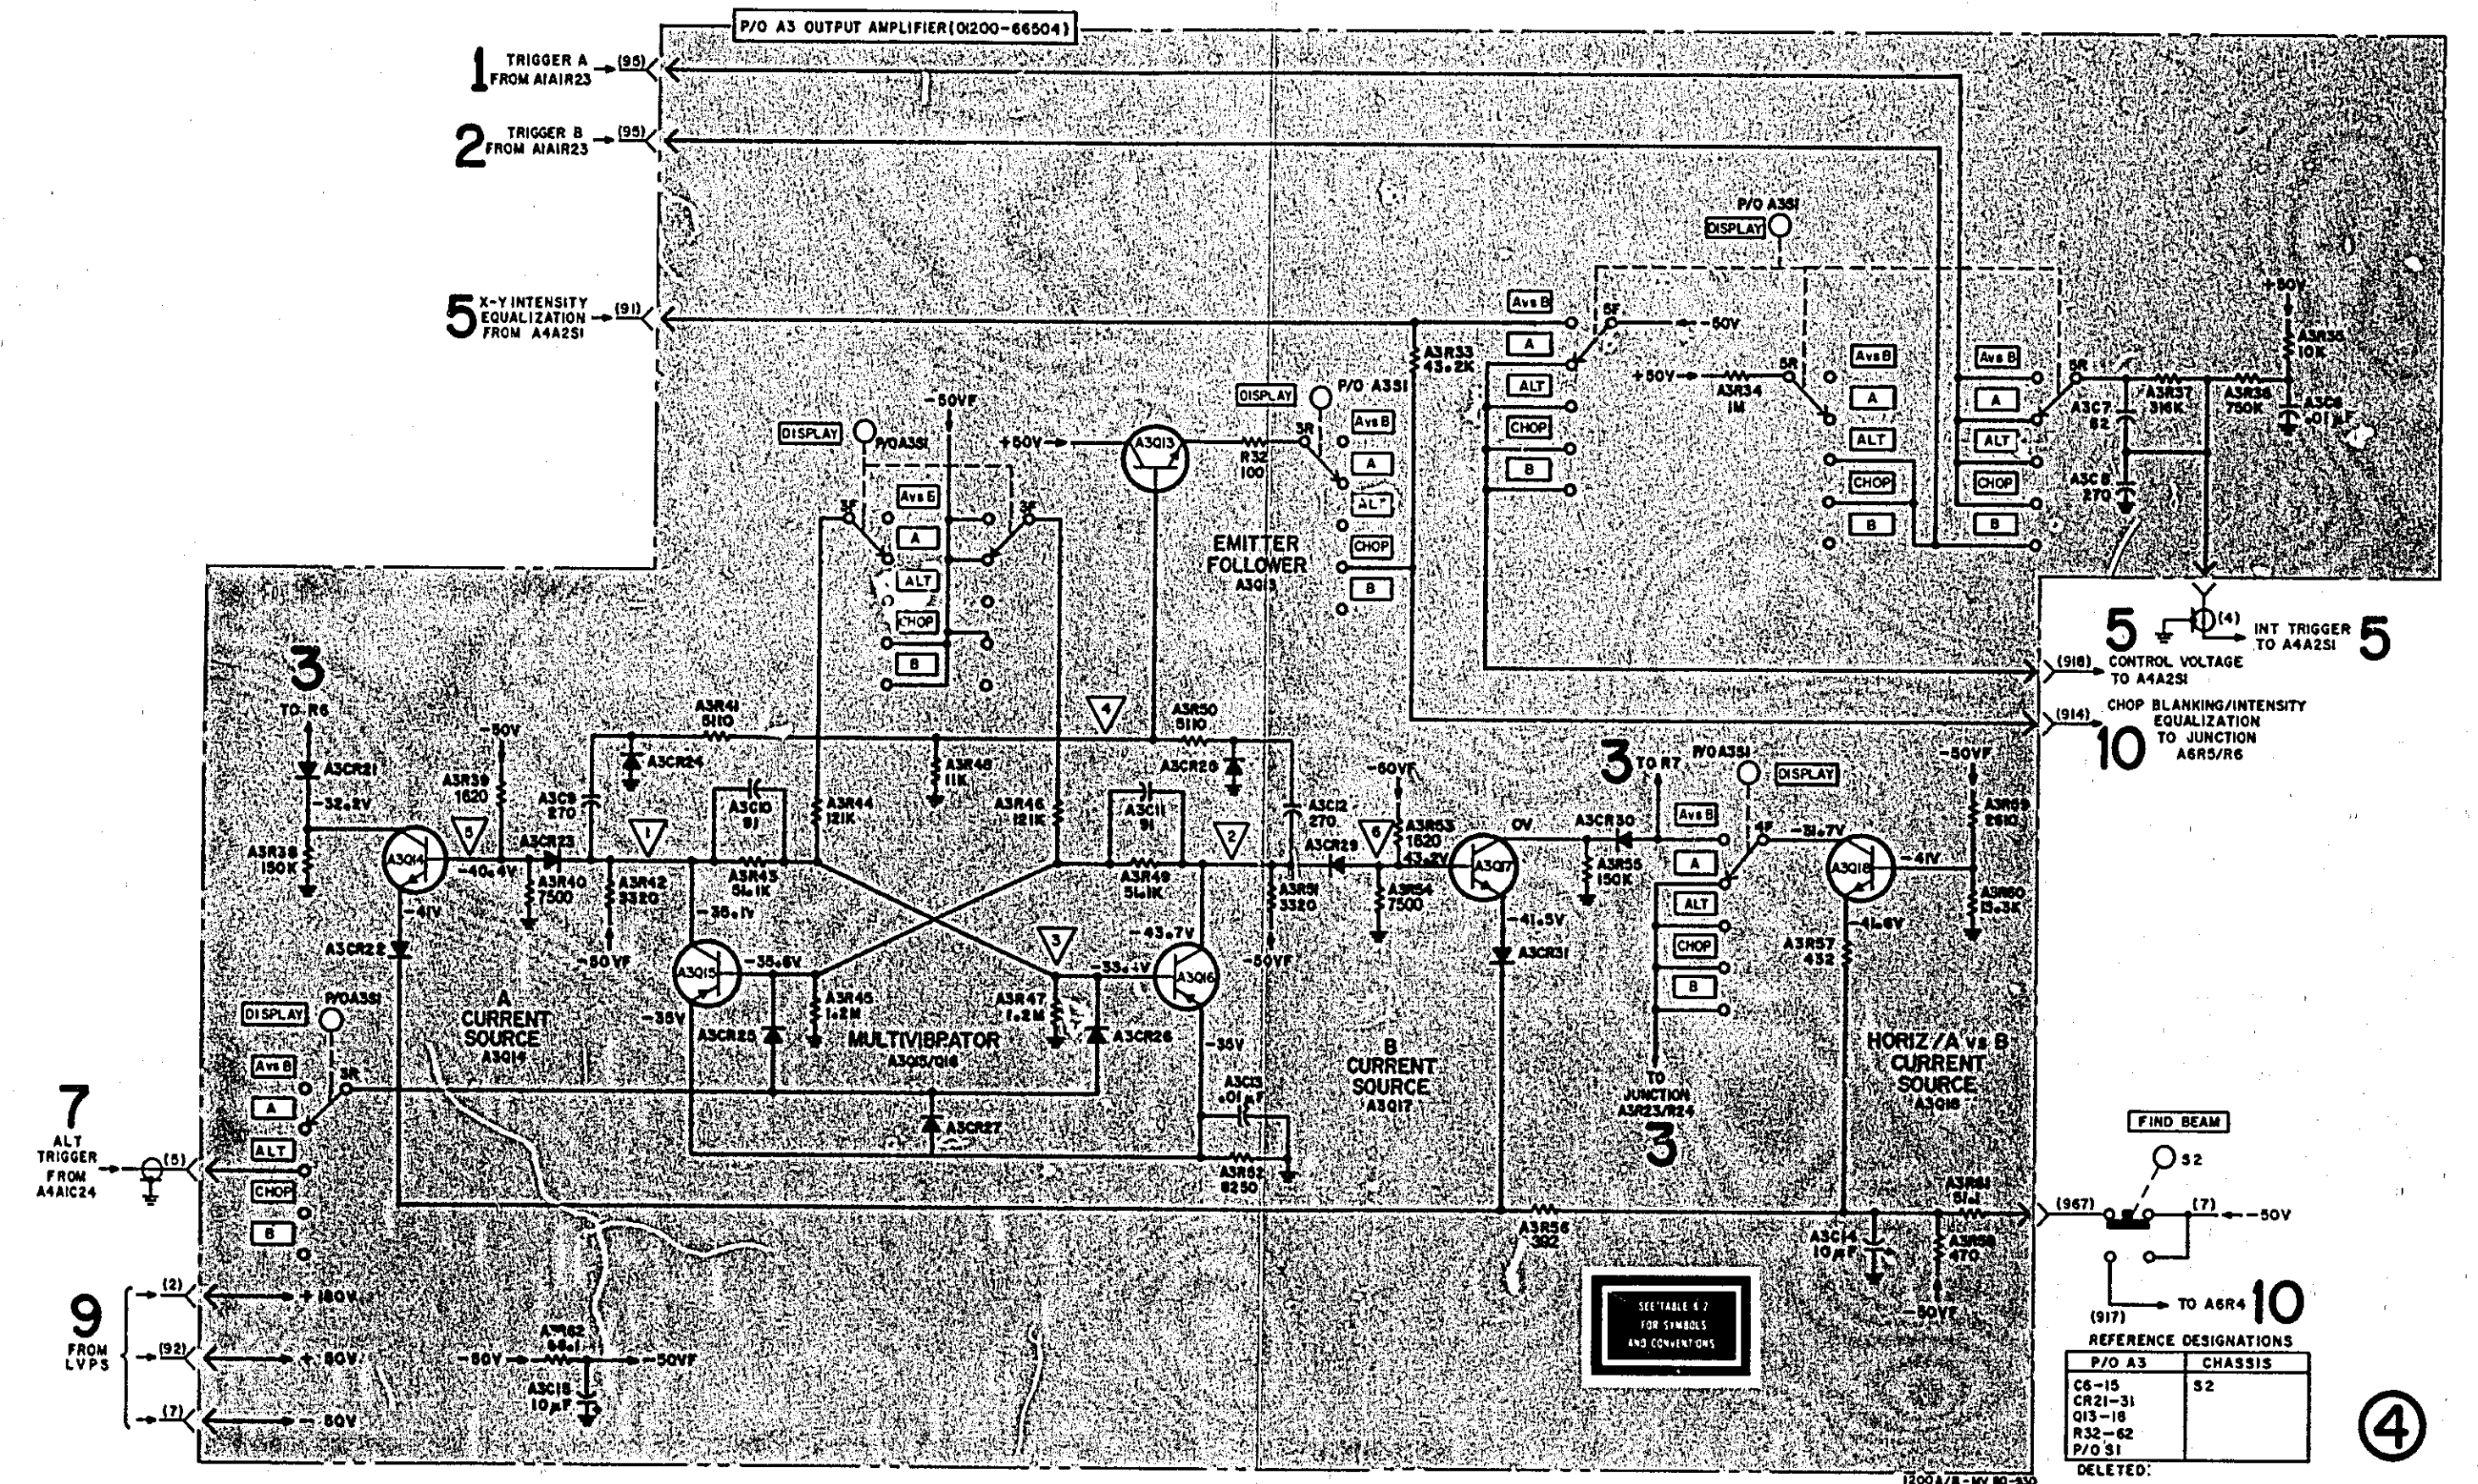


Figure 8-23. Multivibrator Schematic 8-17

	A	B	C	D	E	F	G	H	J	K	L	
1												1
2												2
3												3
4												4

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	I-2	C23	J-2	CR12	J-4	Q16	K-2	R10B	E-2	R29	F-4	R70	H-2
C2	H-3	C24	G-2	CR13	J-3	Q17	K-2	R10C	E-2	R30	F-3	R71	H-2
C3	G-2	C25	G-4	CR14	J-3	Q18	K-2	R10I	F-2	R31	C-4	R72	H-3
C4	D-2	C26	F-3	CR15	H-2	Q19	F-4	R11	D-3	R32	C-3	R73	H-3
C5	C-3	C27	H-3	CR16	G-4	Q20	H-4	R12	C-3	R33	F-3	R74	H-2
C6	C-2	C28	G-2	CR17	H-4	Q21	H-3	R13	D-3	R34	D-3	R75	J-2
C7	H-4	C29	H-3	Q1	H-2	Q22	J-2	R14	A-3	R34B	D-4	R76	H-3
C8	A-4	C30	F-4	Q2	H-2	Q23	H-2	R15	A-3	R35	K-3	R77	F-4
C9	H-4	C31	H-3	Q3	C-2	Q24	J-2	R16	A-4	R36	K-3	R78	F-4
C10	H-4	C32	J-3	Q4	H-2	Q25	G-3	R17	H-4	R37	K-3	R79	G-3
C11	C-4	CR1	H-4	Q5	H-2	Q26	F-2	R18	H-3	R38	K-3	R80	G-4
C12	C-4	CR2	H-3	Q6	H-4	Q7	H-4	R19	C-4	R39	K-3	R81	G-4
C13	F-4	CR3	C-3	Q7	H-4	Q8	F-3	R20	H-3	R40	K-3	R82	H-4
C14	F-4	CR4	D-4	Q8	F-3	Q9	F-4	R21	H-4	R41	K-4	R83	H-4
C15	H-3	CR5	K-3	Q9	F-4	R4	H-2	R22	C-4	R42	F-4	R84	H-4
C16	H-2	CR6	J-3	Q10	K-4	R5	C-3	R23	D-4	R43	F-4	R85	K-3
C17	H-3	CR7	F-3	Q11	K-4	R6	C-2	R24	D-4	R44	F-3	R86	F-3
C18	K-2	CR8	F-3	Q12	F-2	R7	A-2	R25	D-4	R45	F-3	R87	F-3
C19	F-4	CR9	G-3	Q13	F-2	R8	A-3	R26	D-4	R46	F-3	VR1	C-2
C20	F-3	CR10	G-3	Q14	F-2	R9	H-3	R27	F-4	R47	F-3	VR2	K-4
C21	F-3	CR11	H-4	Q15	H-2	R10A	D-2	R28	F-3	R48	F-3	VR3	G-3

Note: For complete reference designation, prefix component designators with A4A1.

1200A-B-2

Figure 8-24. Horizontal Circuits, A4A1, Component Identification

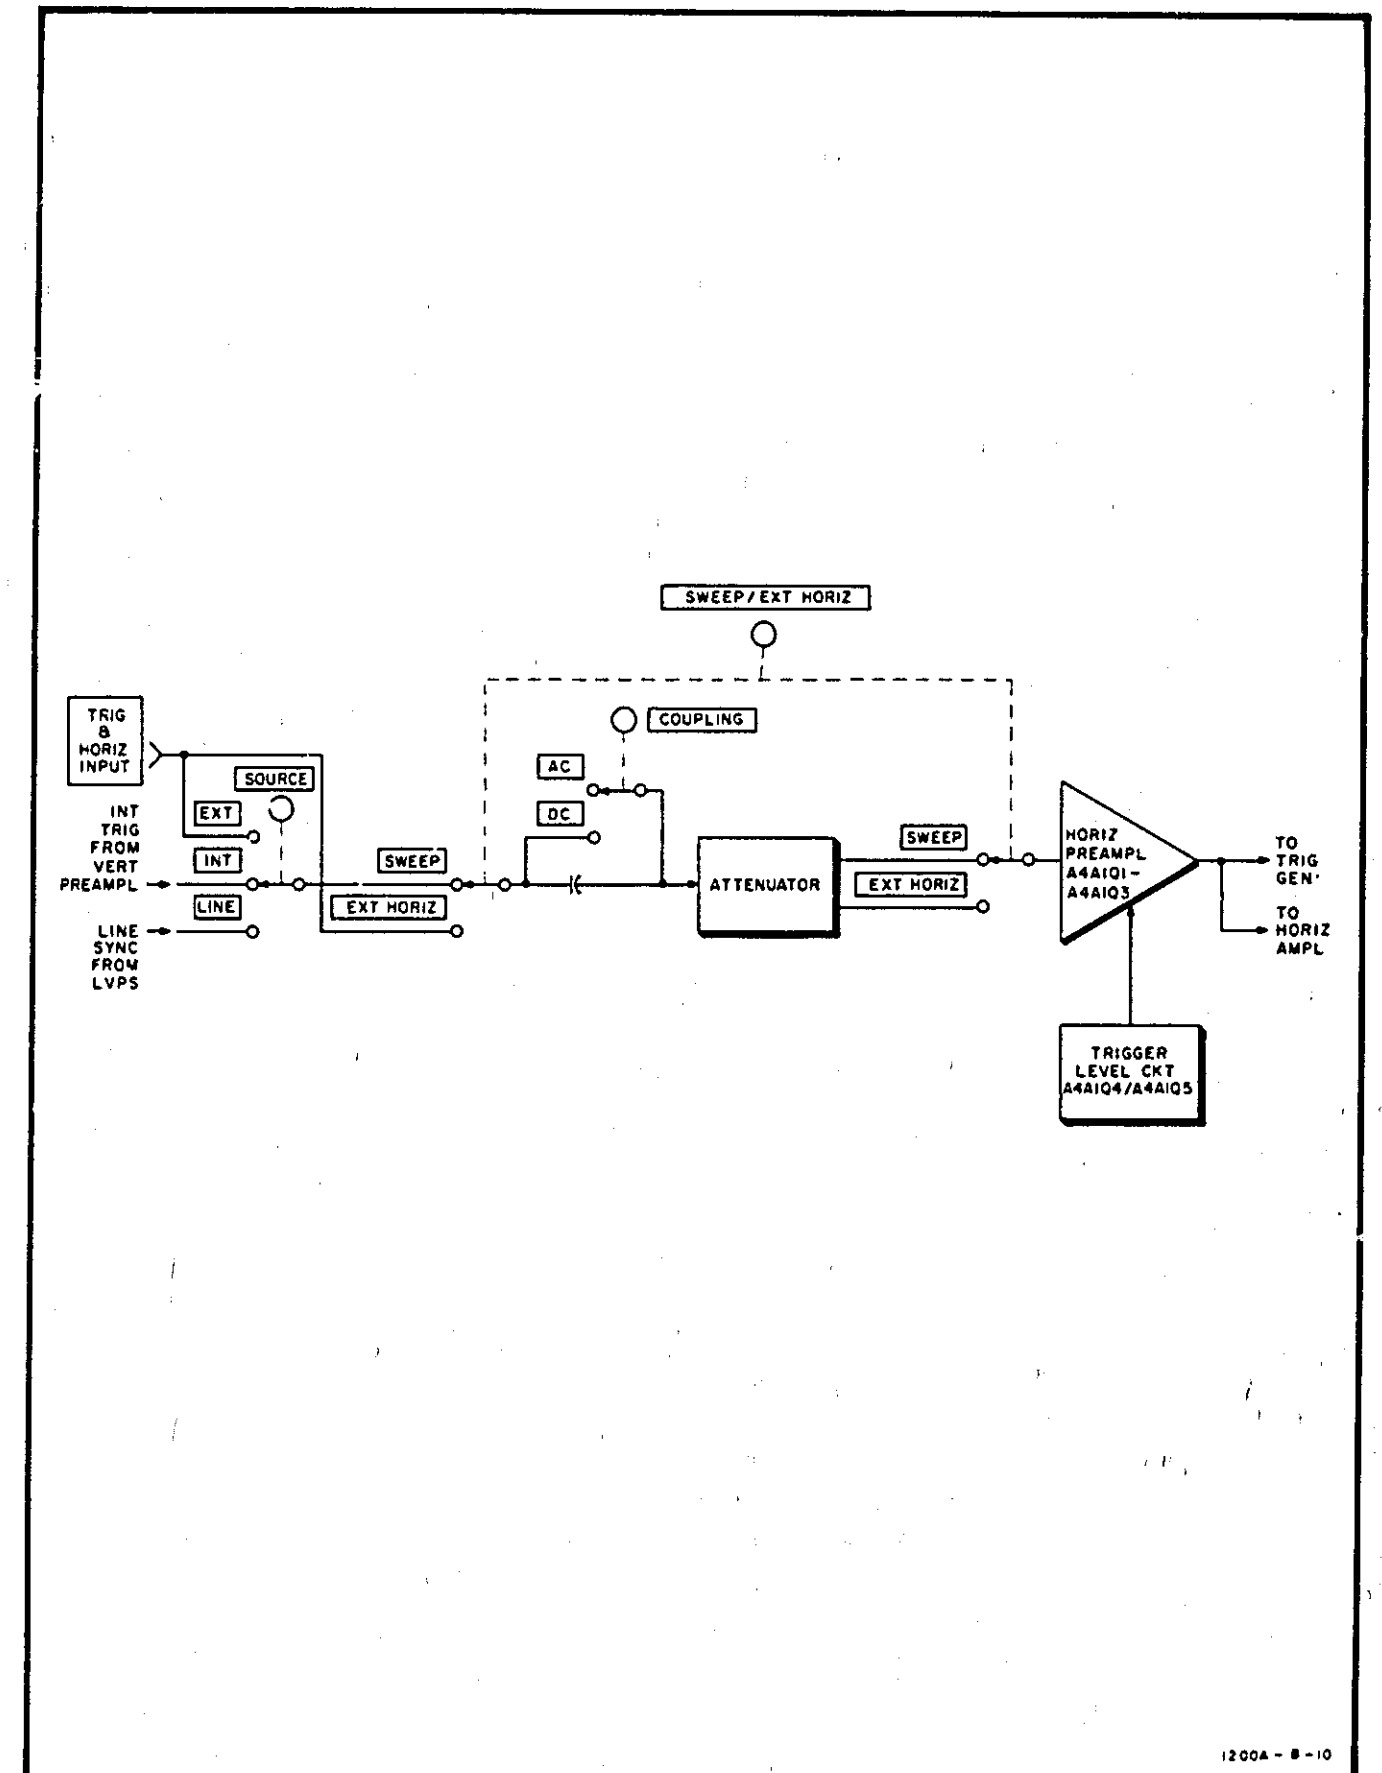


Figure 8-25. Horizontal Pre-amplifier Block Diagram



**DC VOLTAGE MEASUREMENT CONDITIONS**

1. Set:
- a. Condition 1 (for trigger circuit testing).
  - SWEEP/EXT HORIZ ..... X1
  - Horizontal VERNIER ..... CAL
  - TRIGGER LEVEL ..... AUTO
  - SOURCE ..... INT
  - Horizontal COUPLING ..... DC
  - SLOPE ..... +
  - MODE ..... NORM
  - No signal applied
- b. Condition 2 (for horizontal amplifier testing).
- SWEEP/EXT HORIZ ..... 1 V/DIV
  - Horizontal VERNIER ..... CAL
  - Horizontal POSITION ..... midrange
  - No signal applied

2. Voltages are referenced to chassis ground. All indications are approximate and may vary slightly from instrument to instrument.


3. Voltages in parenthesis are for Condition 2.

**WAVEFORM MEASUREMENT CONDITIONS**


1. Set:
- DISPLAY ..... A
  - Vertical POSITION A ..... midrange
  - Volts/Division A ..... 1 V/DIV
  - Vertical Vernier A ..... CAL
  - +Vertical Coupling A ..... AC
  - Vertical Coupling A ..... OFF
  - Horizontal POSITION ..... midrange
  - SWEEP/EXT HORIZ ..... X1
  - Time/Division ..... 0.2 MSEC/DIV
  - Horizontal Vernier ..... CAL
  - SLOPE ..... +
- MODE ..... NORM
- TRIGGER LEVEL ..... AUTO
- Horizontal COUPLING ..... DC
- SOURCE ..... INT

2. Connect a 5V pk-pk, 1 kHz sine wave to channel A +INPUT jack.

3. All waveforms are referenced to chassis ground. Monitor oscilloscope's vertical sensitivity (using a 1:1 probe) and sweep speed settings are shown below each waveform photograph.

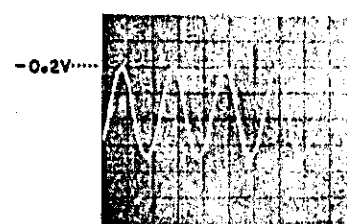


1 0.5 V/DIV  
0.5 MSEC/DIV

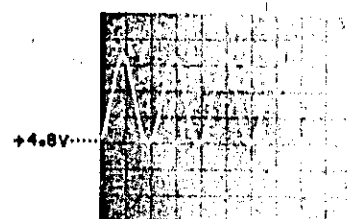

2 0.5 V/DIV  
0.5 MSEC/DIV

1800A-B-8A

Figure 8-26. Horizontal Preampifier Measurement Conditions and Waveforms

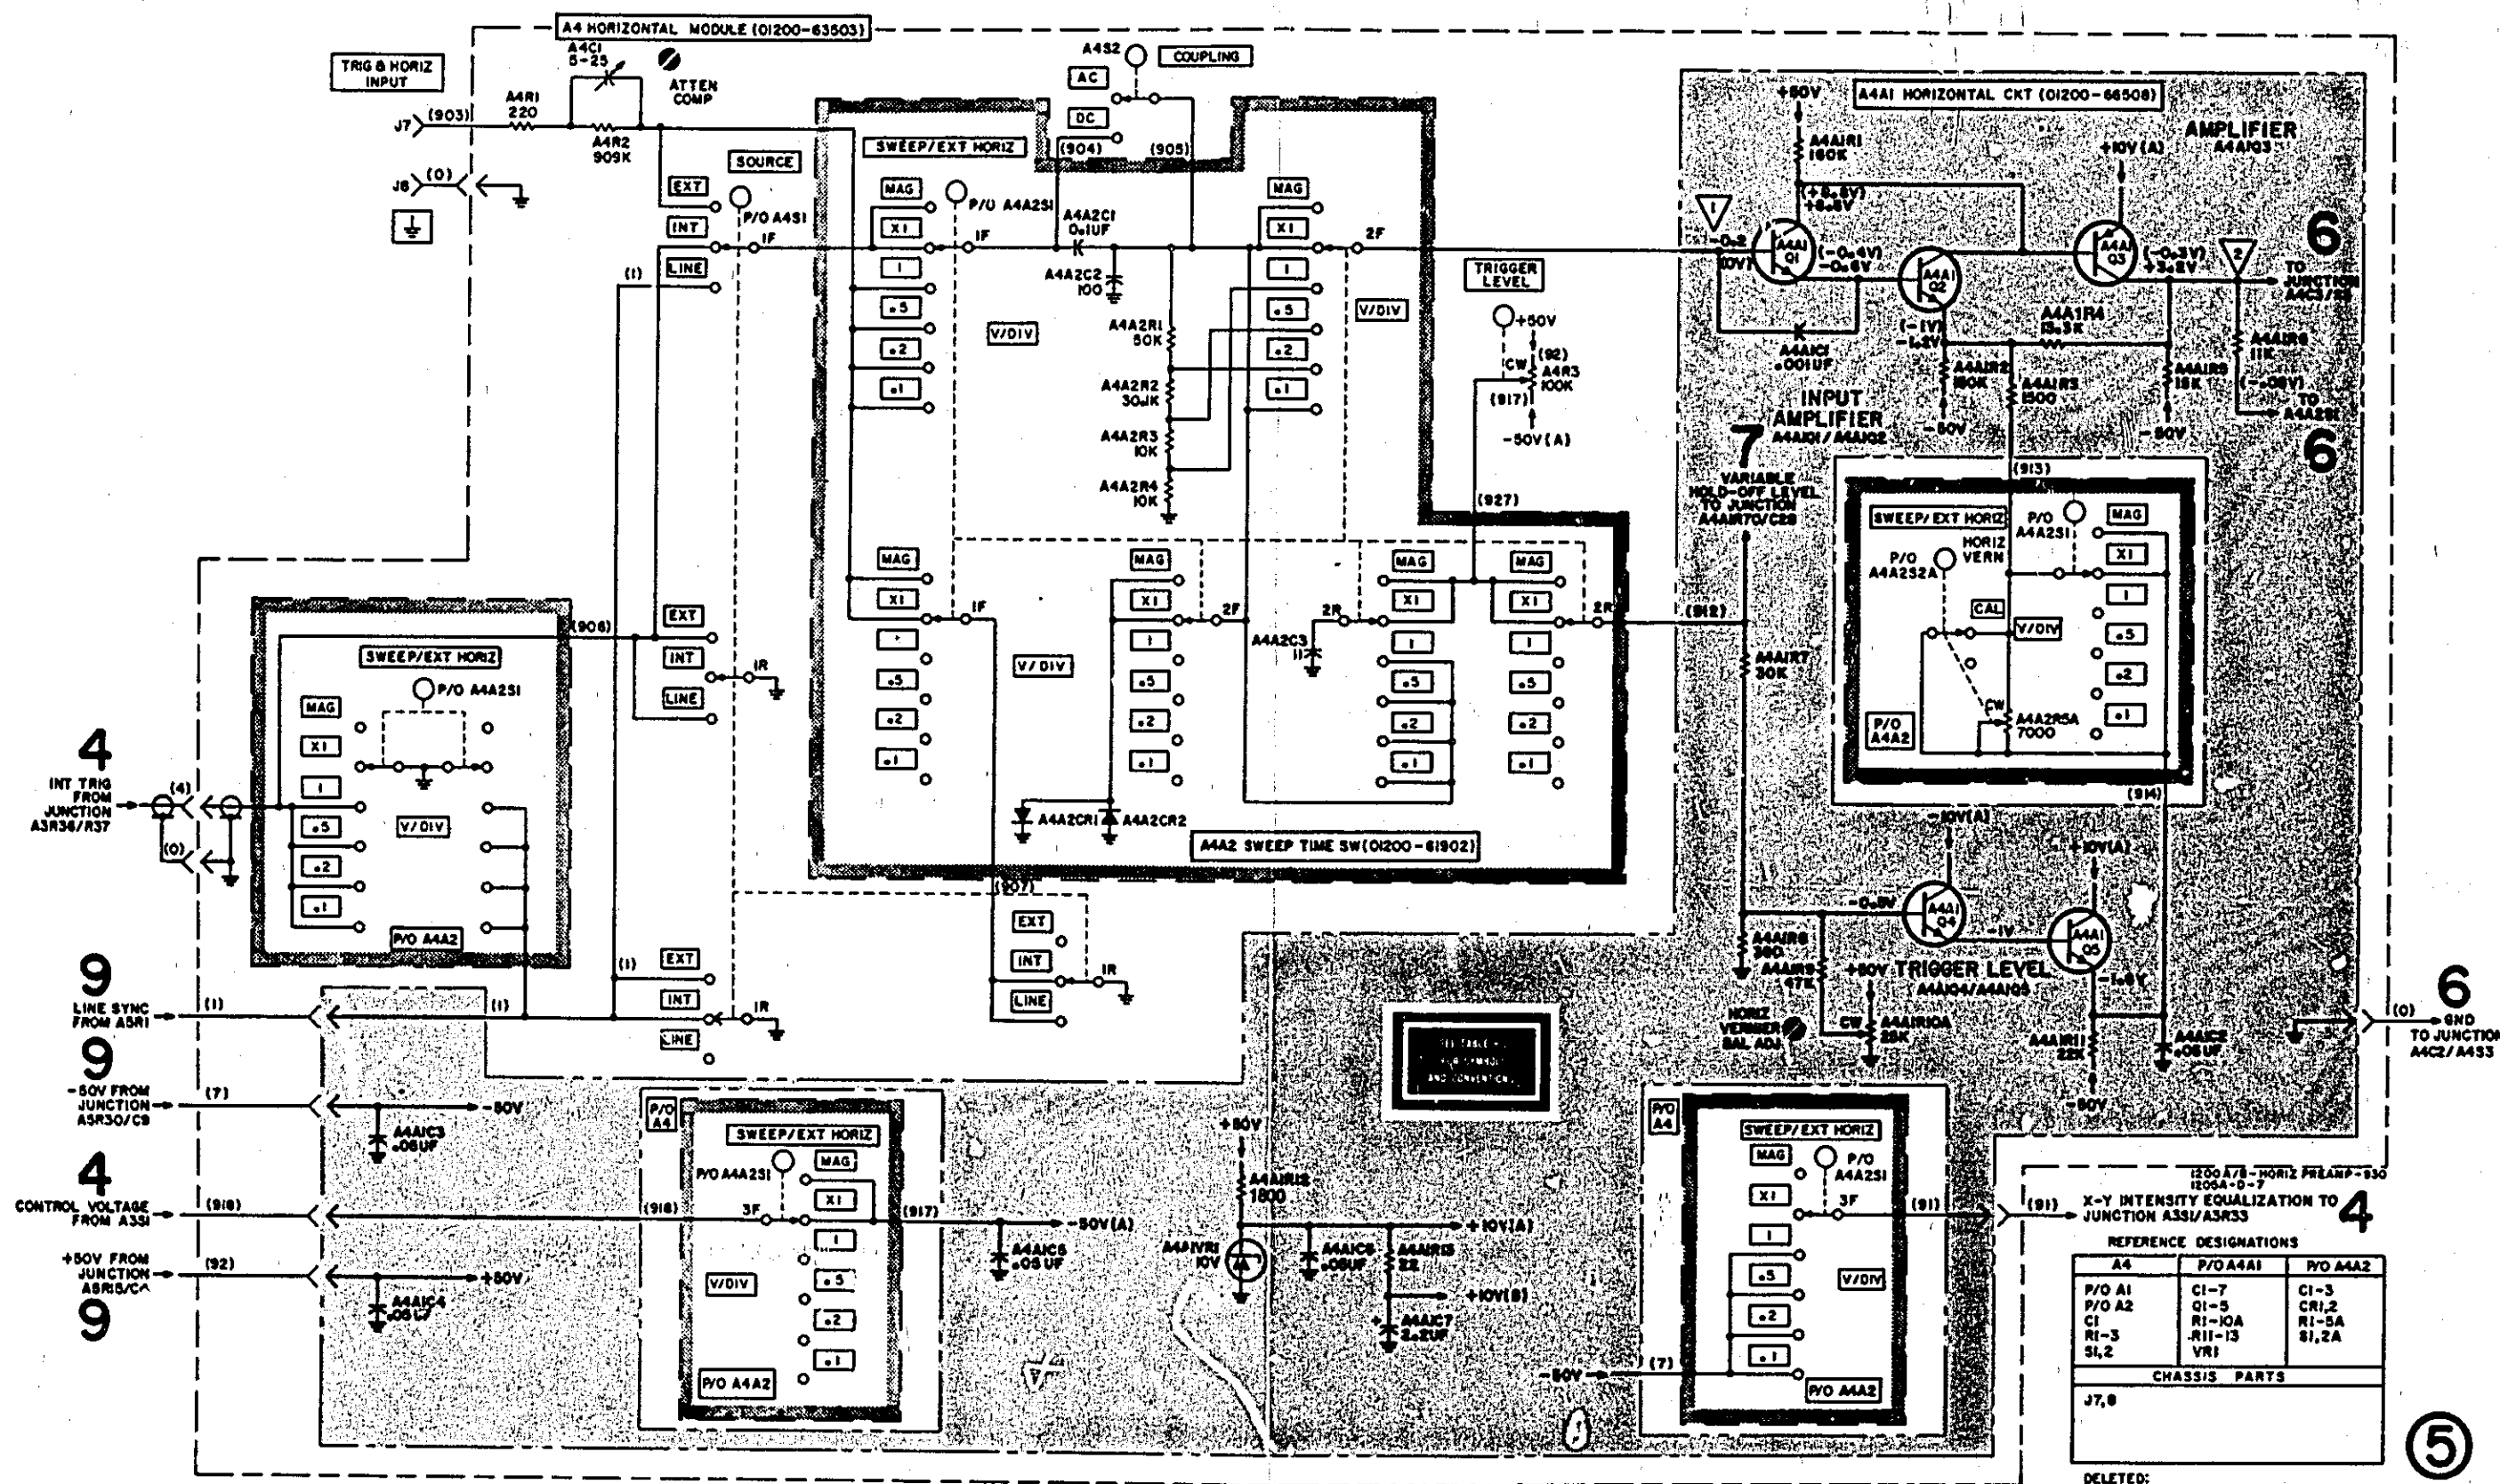

1200A7B - HORIZ PREAMP - 830  
1200A-7-7

X-Y INTENSITY EQUALIZATION TO JUNCTION A331/A3R33

A4	P/O A4A1	P/O A4A2
P/O A1	C1-7	C1-5
P/O A2	Q1-5	CR1,2
C1	R1-10A	R1-5A
R1-3	R11-13	R1,2A
Sl,2	VRI	

CHASSIS PARTS

J7,8

DELETED:

Figure 8-27. Horizontal Preampifier Schematic 8-19

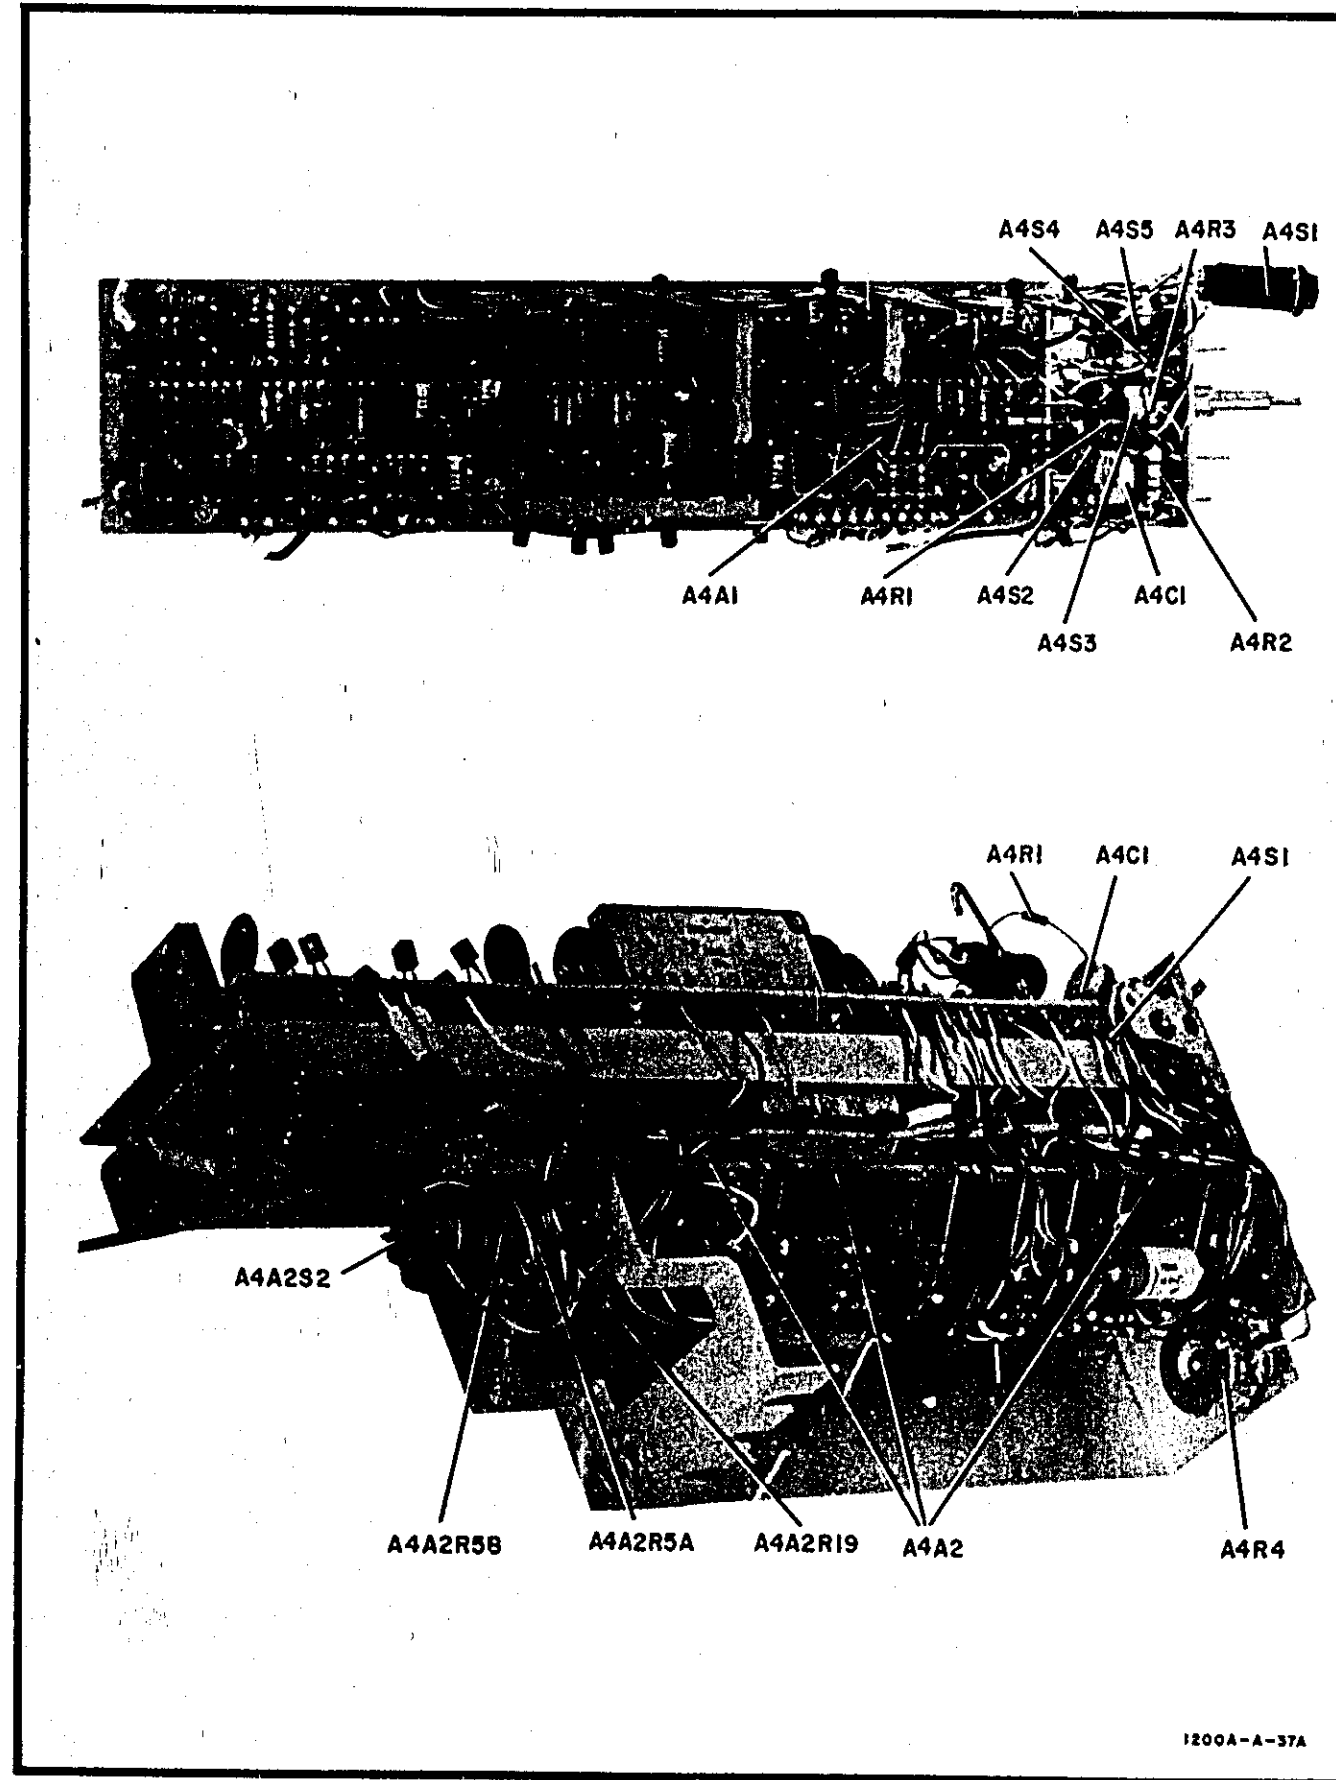


Figure 8-28. Horizontal Module, A4, Component Identification

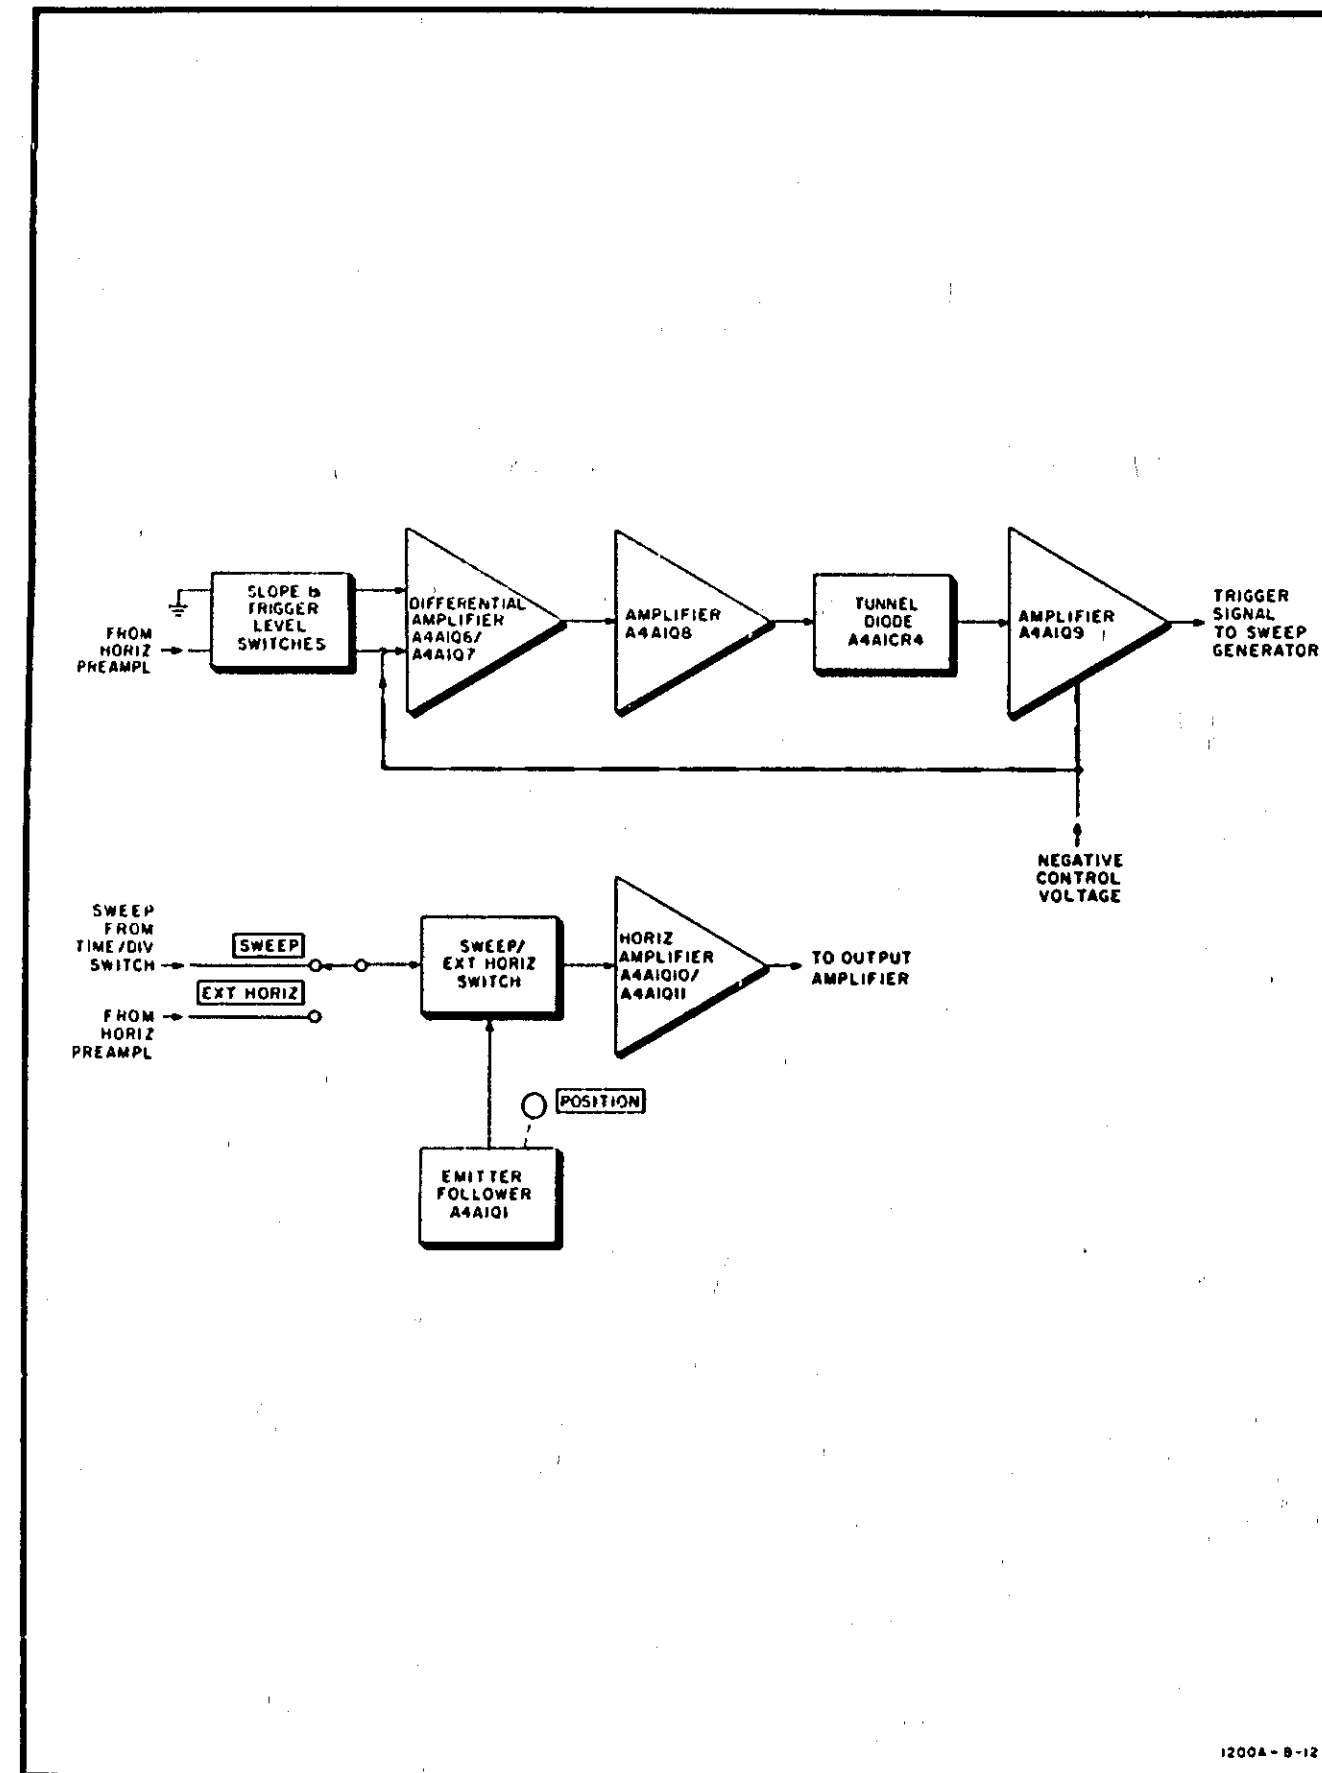


Figure 8-29. Trigger Generator and Horizontal Amplifier Block

**DC VOLTAGE MEASUREMENT CONDITIONS**

1. Set:

a. Condition 1 (for trigger circuit testing).	b. Condition 2 (for horizontal amplifier testing).
SWEEP/EXT HORIZ ..... X1	SWEEP/EXT HORIZ ..... 1 V/DIV
Horizontal VERNIER ..... CAL	Horizontal VERNIER ..... CAL
TRIGGER LEVEL ..... AUTO	Horizontal POSITION ..... midrange
SOURCE ..... INT	No signal applied
Horizontal COUPLING ..... DC	
SLOPE ..... +	
MODE ..... NORM	
No signal applied	

2. Voltages are referenced to chassis ground. All indications are approximate and may vary slightly from instrument to instrument.

3. Voltages in parenthesis are for Condition 2.

**WAVEFORM MEASUREMENT CONDITIONS**

1. Set:

DISPLAY ..... A	Horizontal COUPLING ..... DC
Vertical POSITION A ..... midrange	SOURCE ..... INT
Volts/Division A ..... 1 V/DIV	
Vertical Vernier A ..... CAL	
+Vertical Coupling A ..... AC	
-Vertical Coupling A ..... OFF	
Horizontal POSITION ..... midrange	
SWEEP/EXT HORIZ ..... X1	
Time/Division ..... 0.2 MSEC/DIV	
Horizontal Vernier ..... CAL	
SLOPE ..... +	
MODE ..... NORM	
TRIGGER LEVEL ..... AUTO	

2. Connect a 5V pk-pk, 1 kHz sine wave to channel A +INPUT jack.

3. Ⓢ To measure this waveform, connect a 5V pk-pk, 1 kHz sine wave to the TRIG & HORIZ INPUT jack. Set the controls as indicated in step 1, except set SWEEP/EXT HORIZ to 0.5 V/DIV.

4. All waveforms are referenced to chassis ground. Monitor oscilloscope's vertical sensitivity (using a 1:1 probe) and sweep speed settings are shown below each waveform photograph.

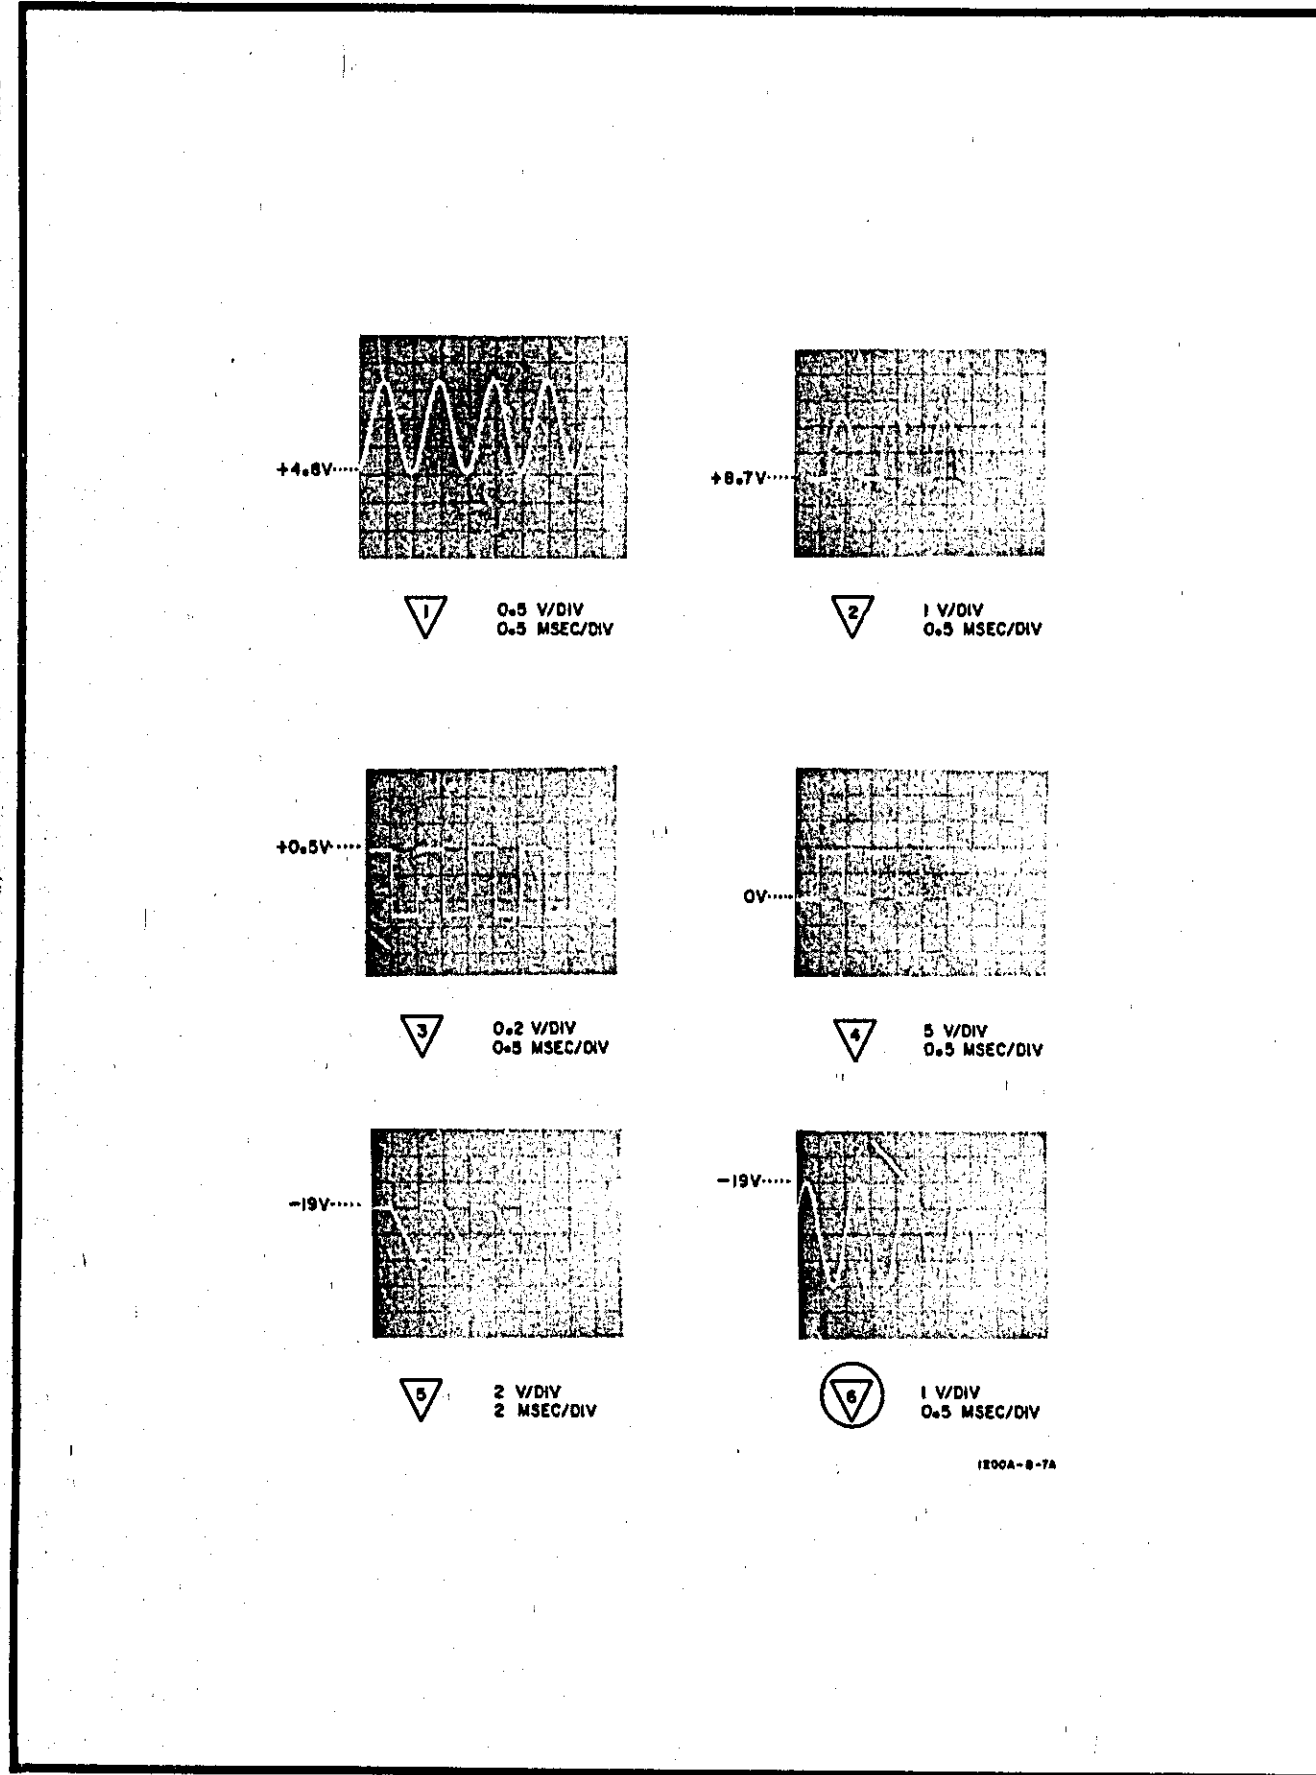


Figure 8-30. Trigger Generator and Horizontal Amplifier Waveforms

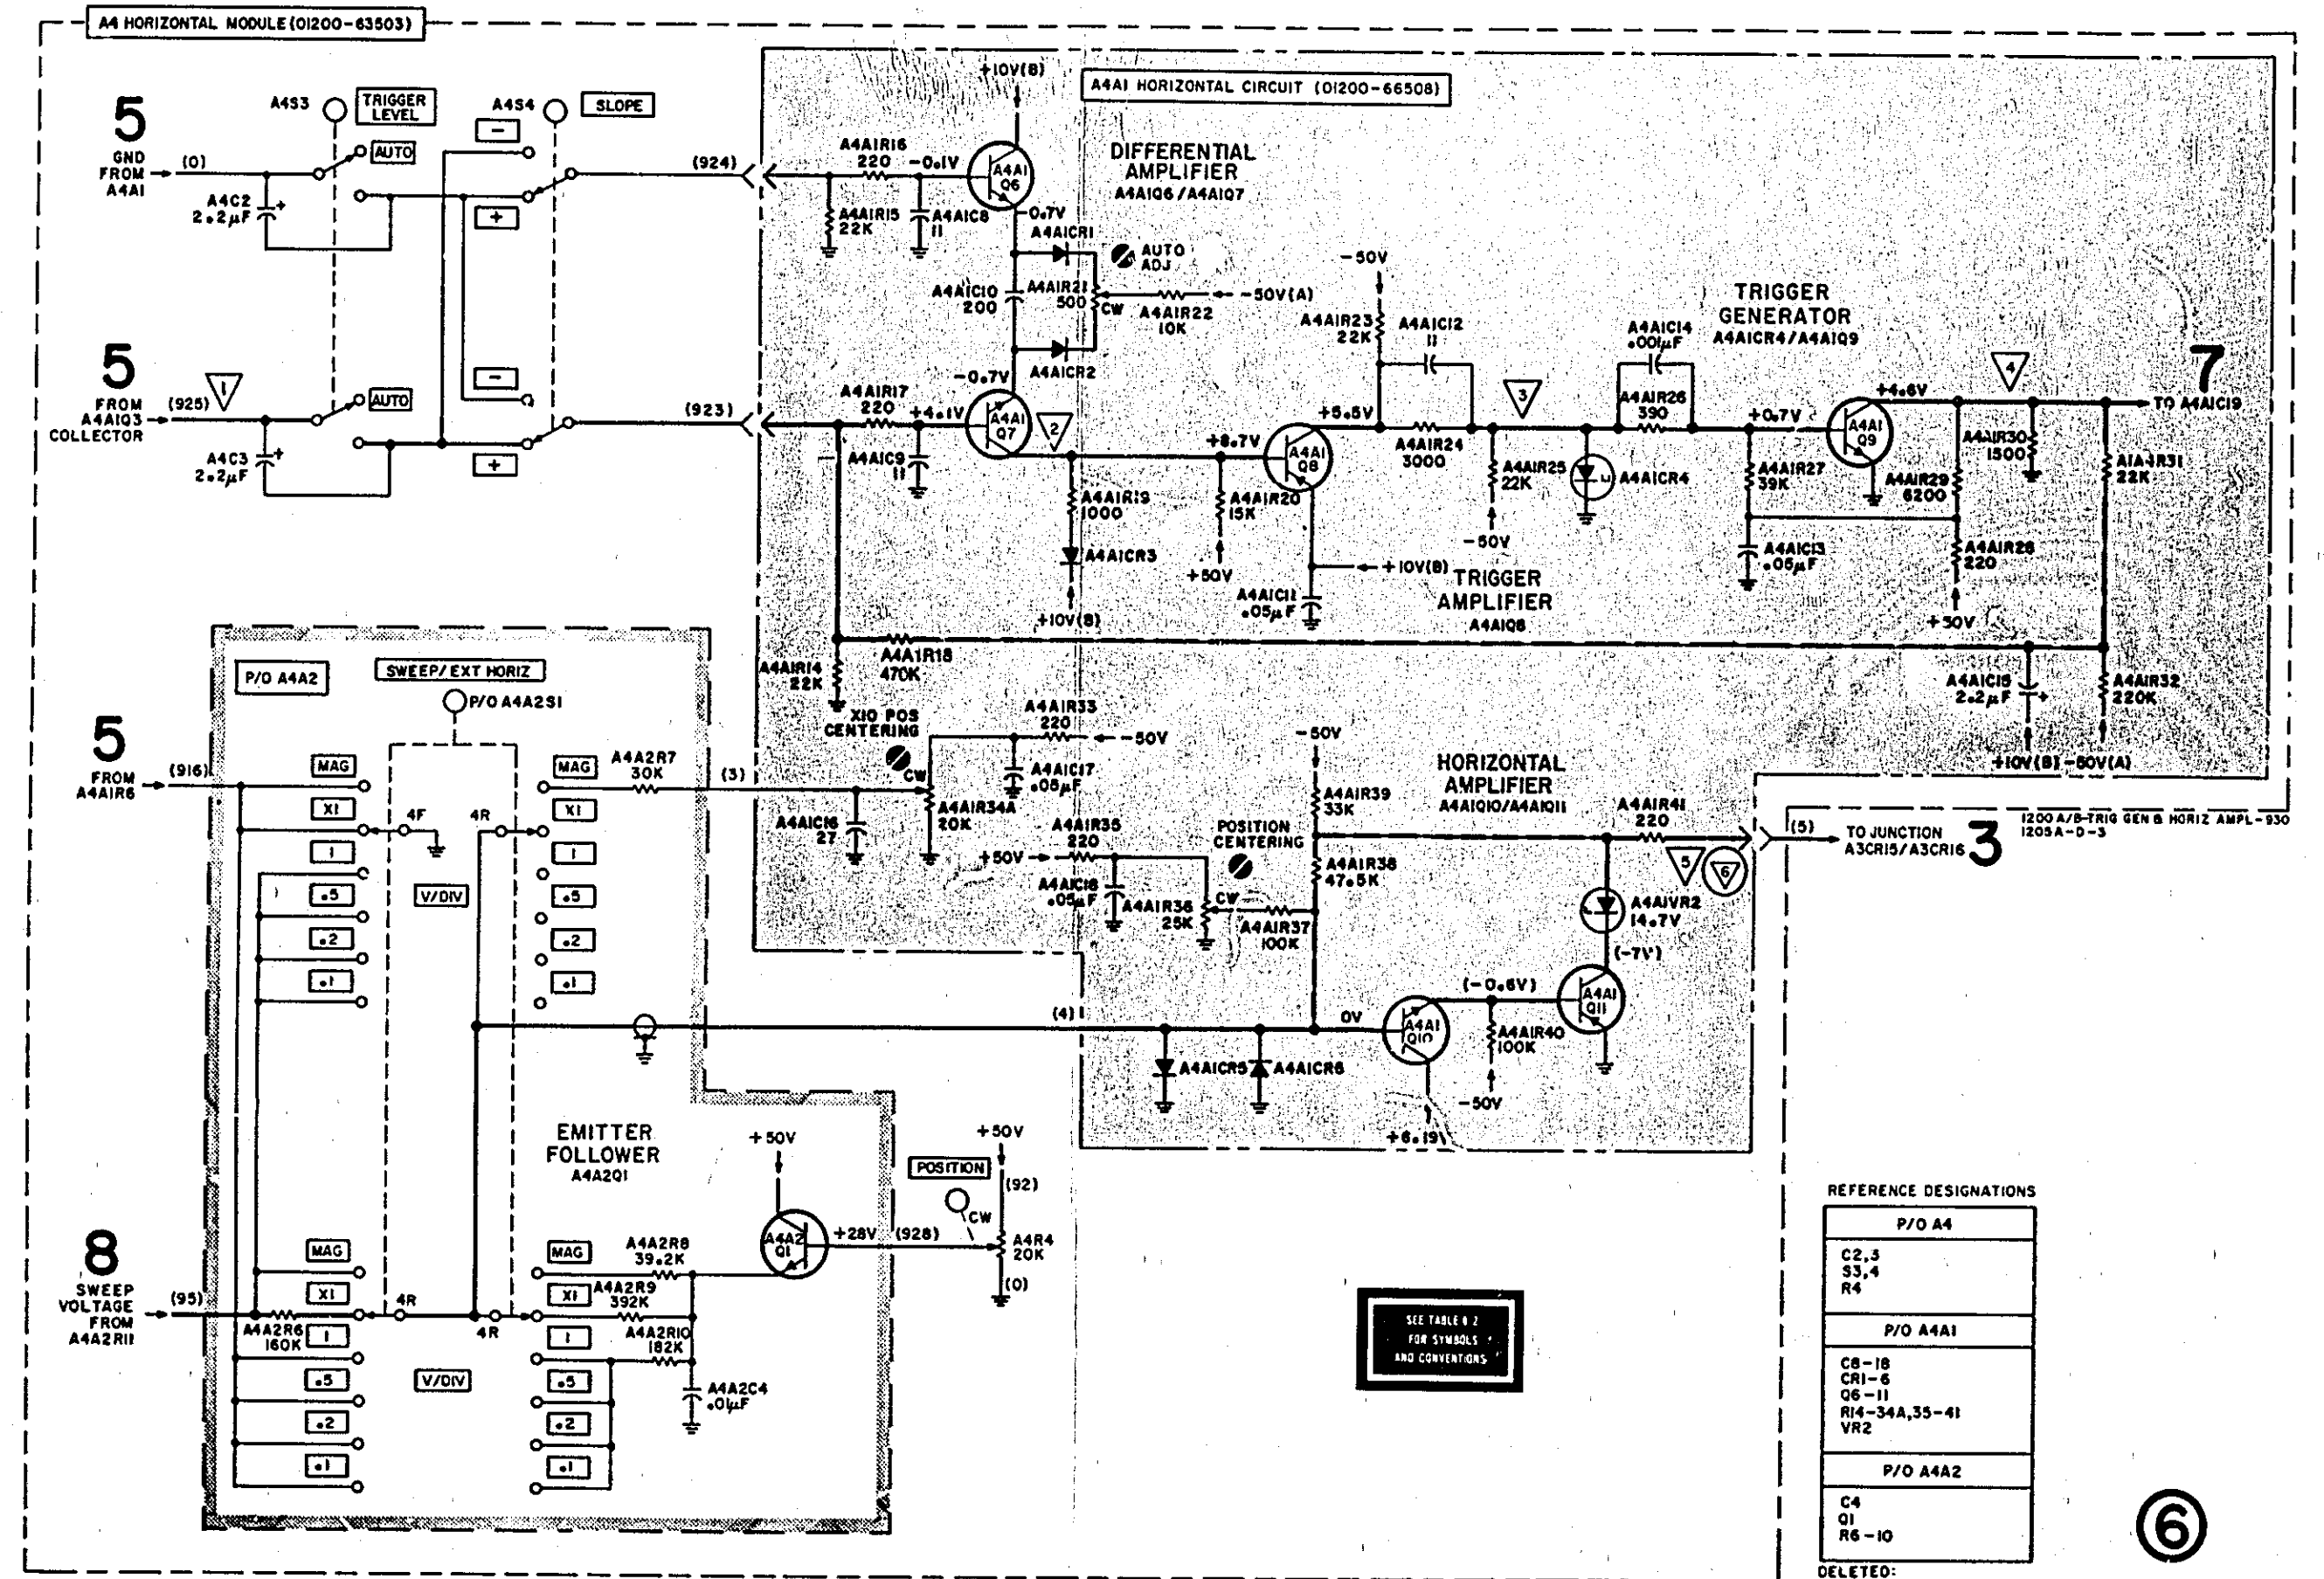


Figure 8-31. Trigger Generator and Horizontal Amplifier Schematic

6

Table 8-6. Sweep Generator Measurement Conditions

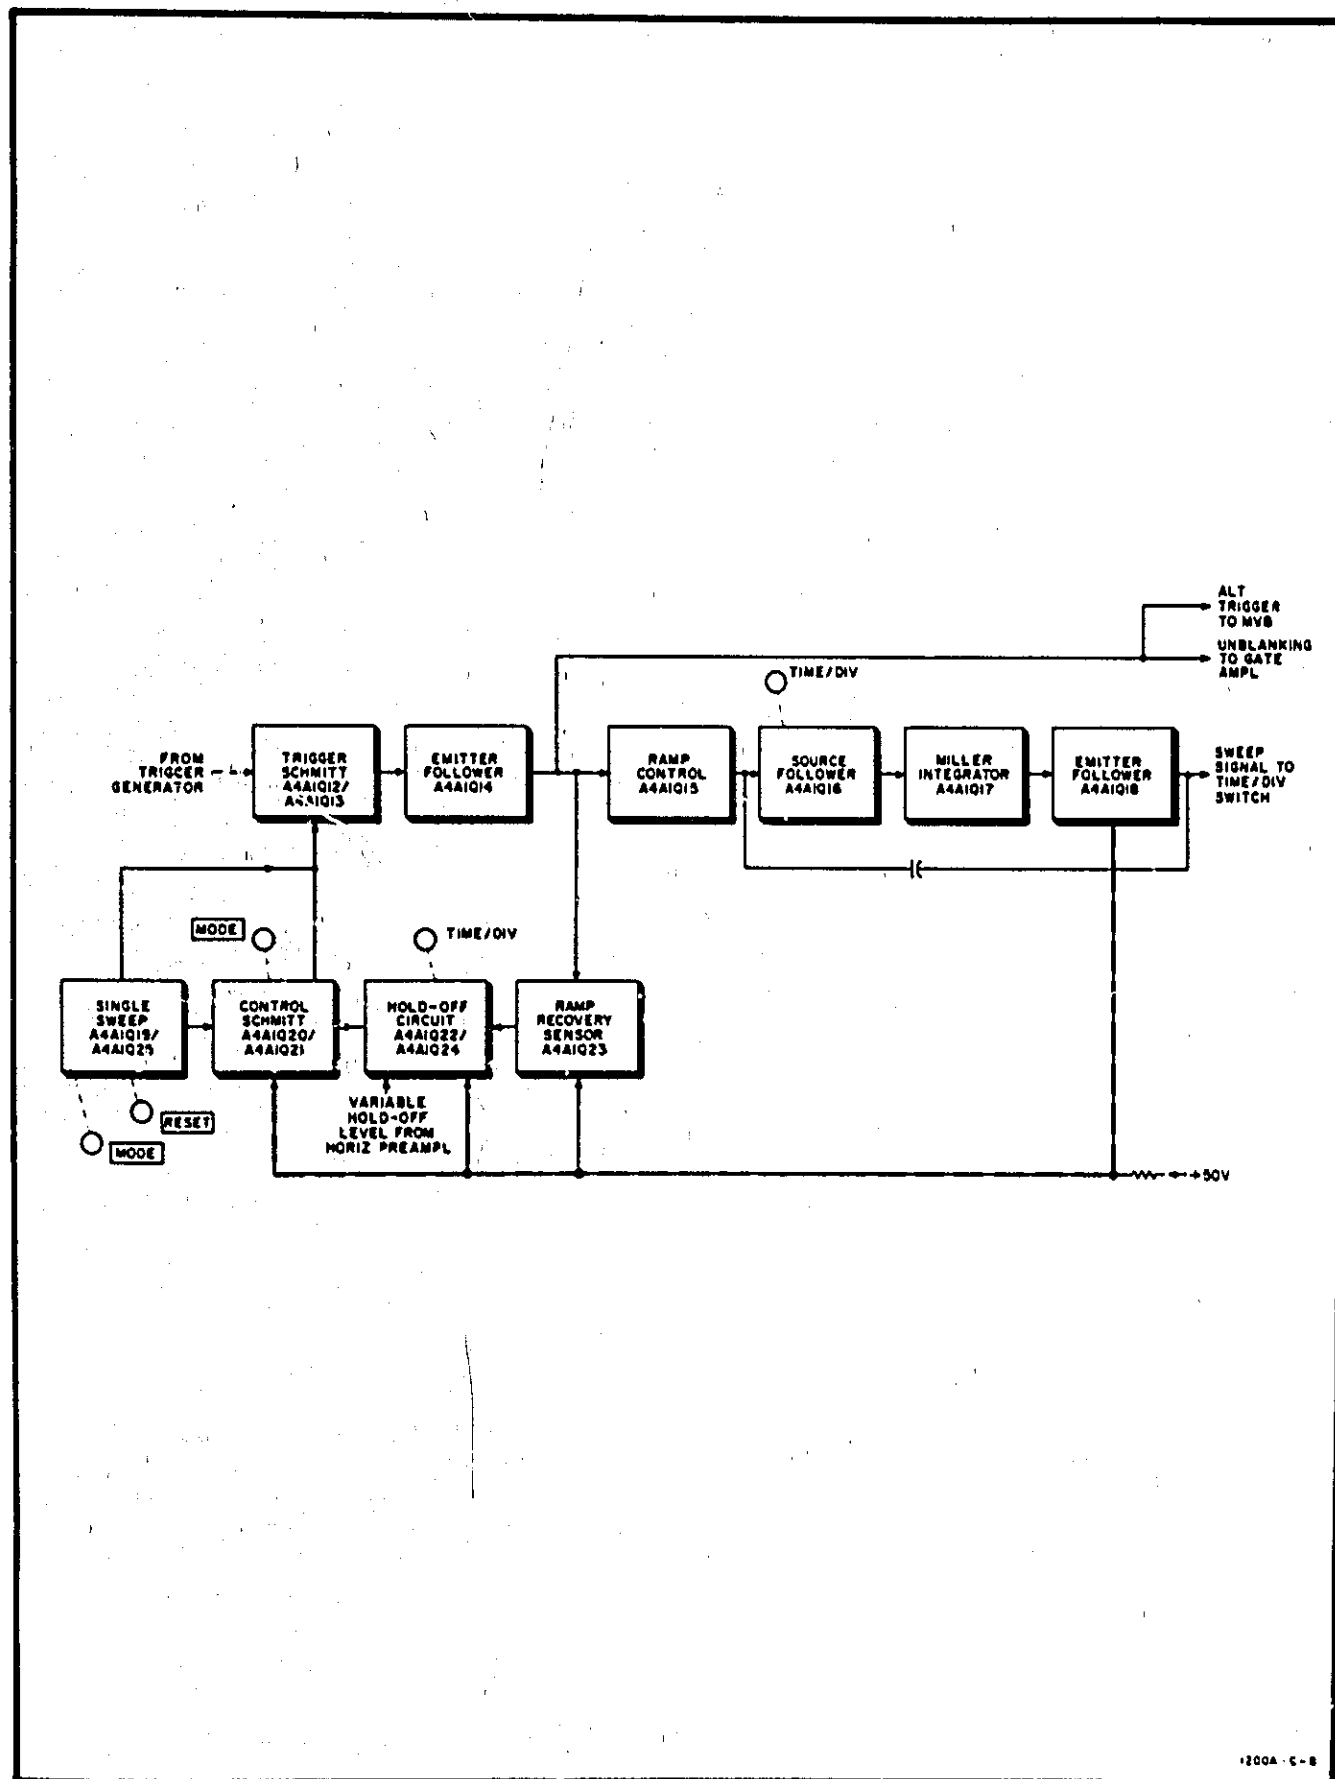


Figure 8-32. Sweep Generator Block Diagram

## DC VOLTAGE MEASUREMENT CONDITIONS

- |                           |              |                   |
|---------------------------|--------------|-------------------|
| 1. Set:                   | SOURCE ..... | INT               |
| Horizontal POSITION ..... | RESET .....  | armed (light on)* |
| SWEEP/EXT HORIZ .....     |              |                   |
| Time/Division .....       |              |                   |
| Horizontal Vernier .....  |              |                   |
| MODE .....                |              |                   |
| SLOPE .....               |              |                   |
| TRIGGER LEVEL .....       |              |                   |
2. \*Measure voltages in parenthesis with RESET pressed. Measure all other voltages with the sweep generator armed (light on).
3. Voltages are referenced to chassis ground. All indications are approximate and may vary slightly from instrument to instrument.

## WAVEFORM MEASUREMENT CONDITIONS

- |                            |                           |      |
|----------------------------|---------------------------|------|
| 1. Set:                    | TRIGGER LEVEL .....       | AUTO |
| DISPLAY .....              | Horizontal COUPLING ..... | DC   |
| Vertical POSITION A .....  | SOURCE .....              | INT  |
| Volts/Division A .....     |                           |      |
| Vertical Vernier A .....   |                           |      |
| +Vertical Coupling A ..... |                           |      |
| -Vertical Coupling A ..... |                           |      |
| Horizontal POSITION .....  |                           |      |
| SWEEP/EXT HORIZ .....      |                           |      |
| Time/Division .....        |                           |      |
| Horizontal Vernier .....   |                           |      |
| SLOPE .....                |                           |      |
| MODE .....                 |                           |      |
2. Connect a 5V pk-pk, 1 kHz sine wave to channel A +INPUT jack.
3. Ⓢ To measure this waveform, change the vertical input frequency to 50 kHz.
4. All waveforms are referenced to chassis ground. Monitor oscilloscope's vertical sensitivity (using a 1:1 probe) and sweep speed settings are shown below each waveform photograph.



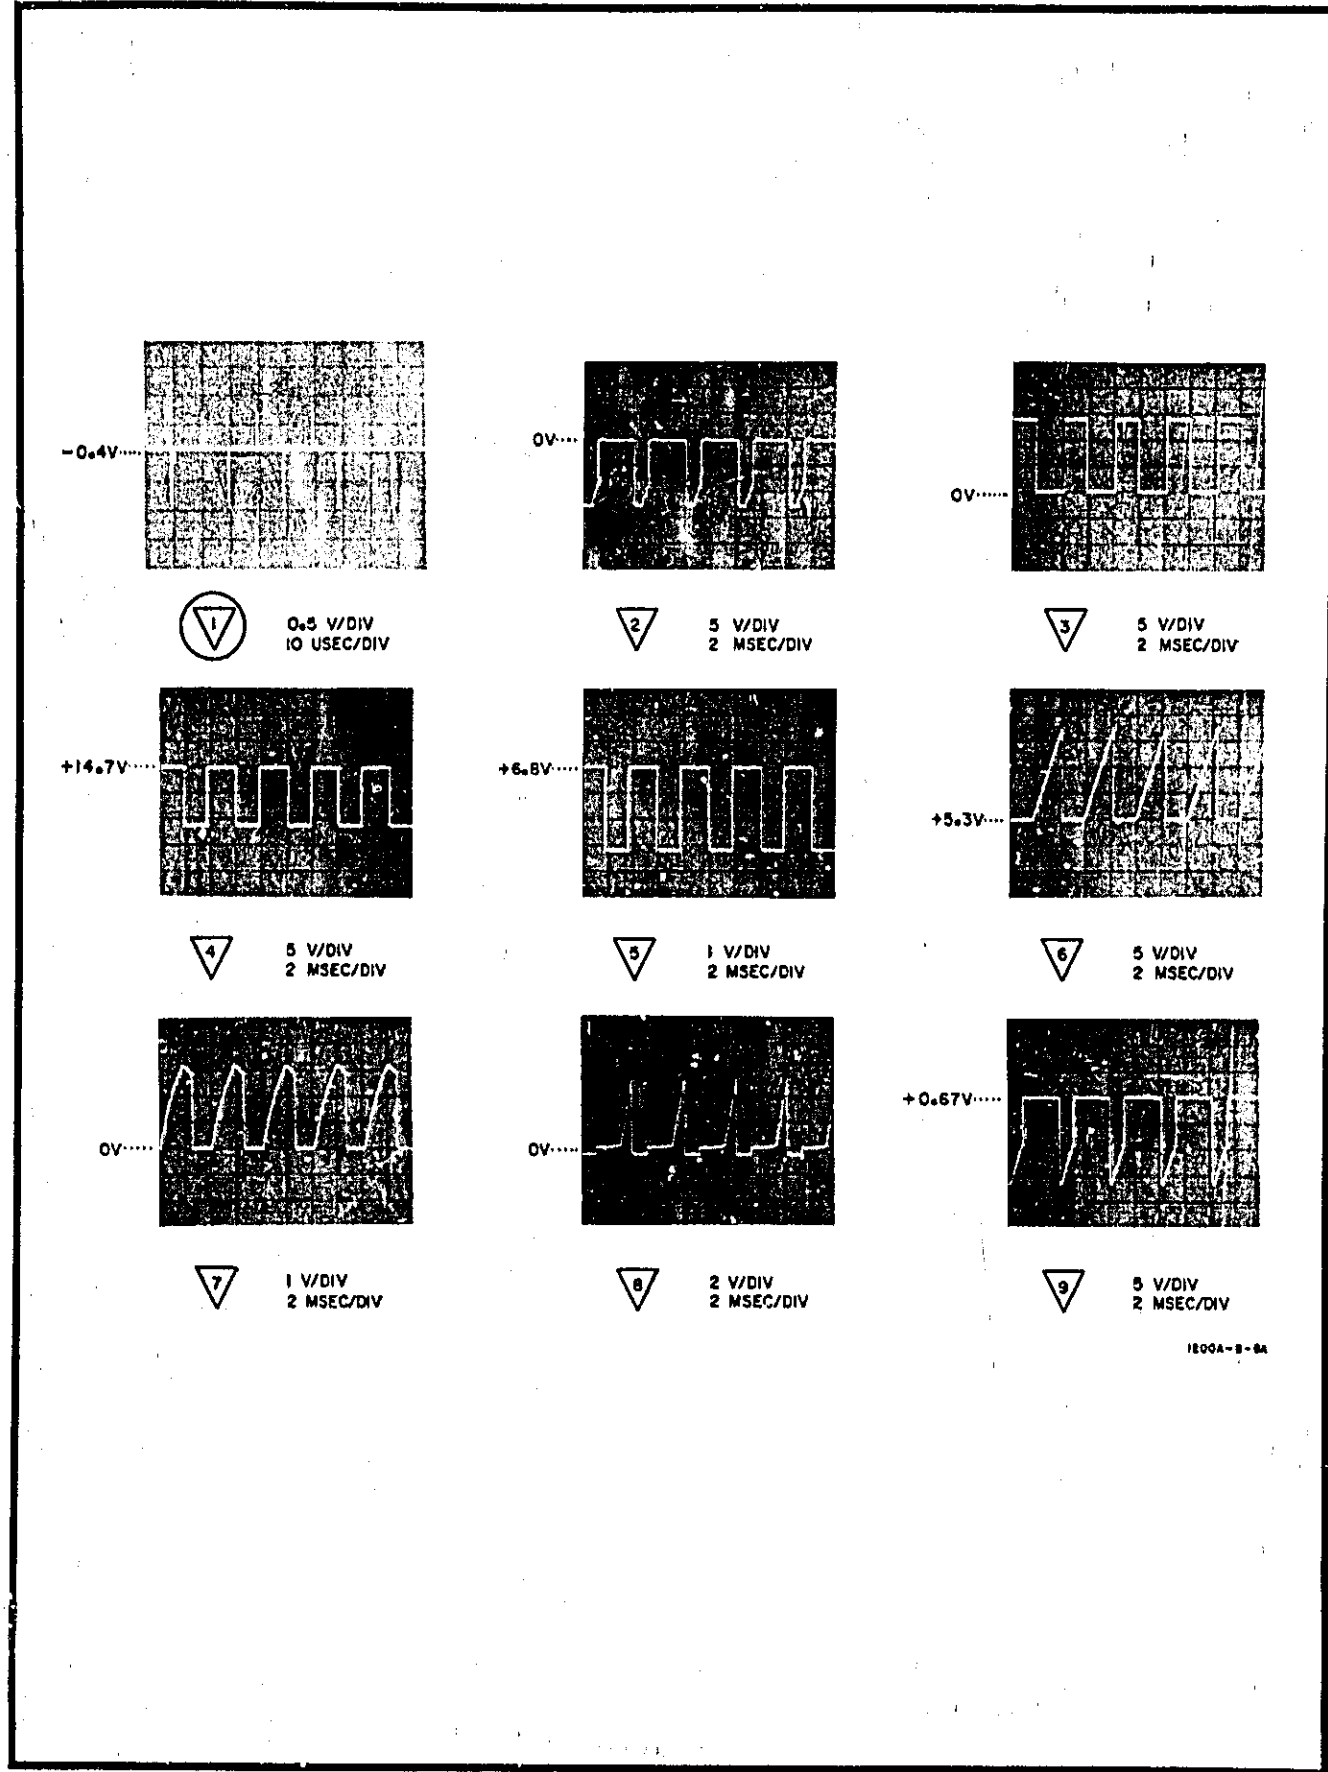


Figure 8-33. Sweep Generator Waveforms

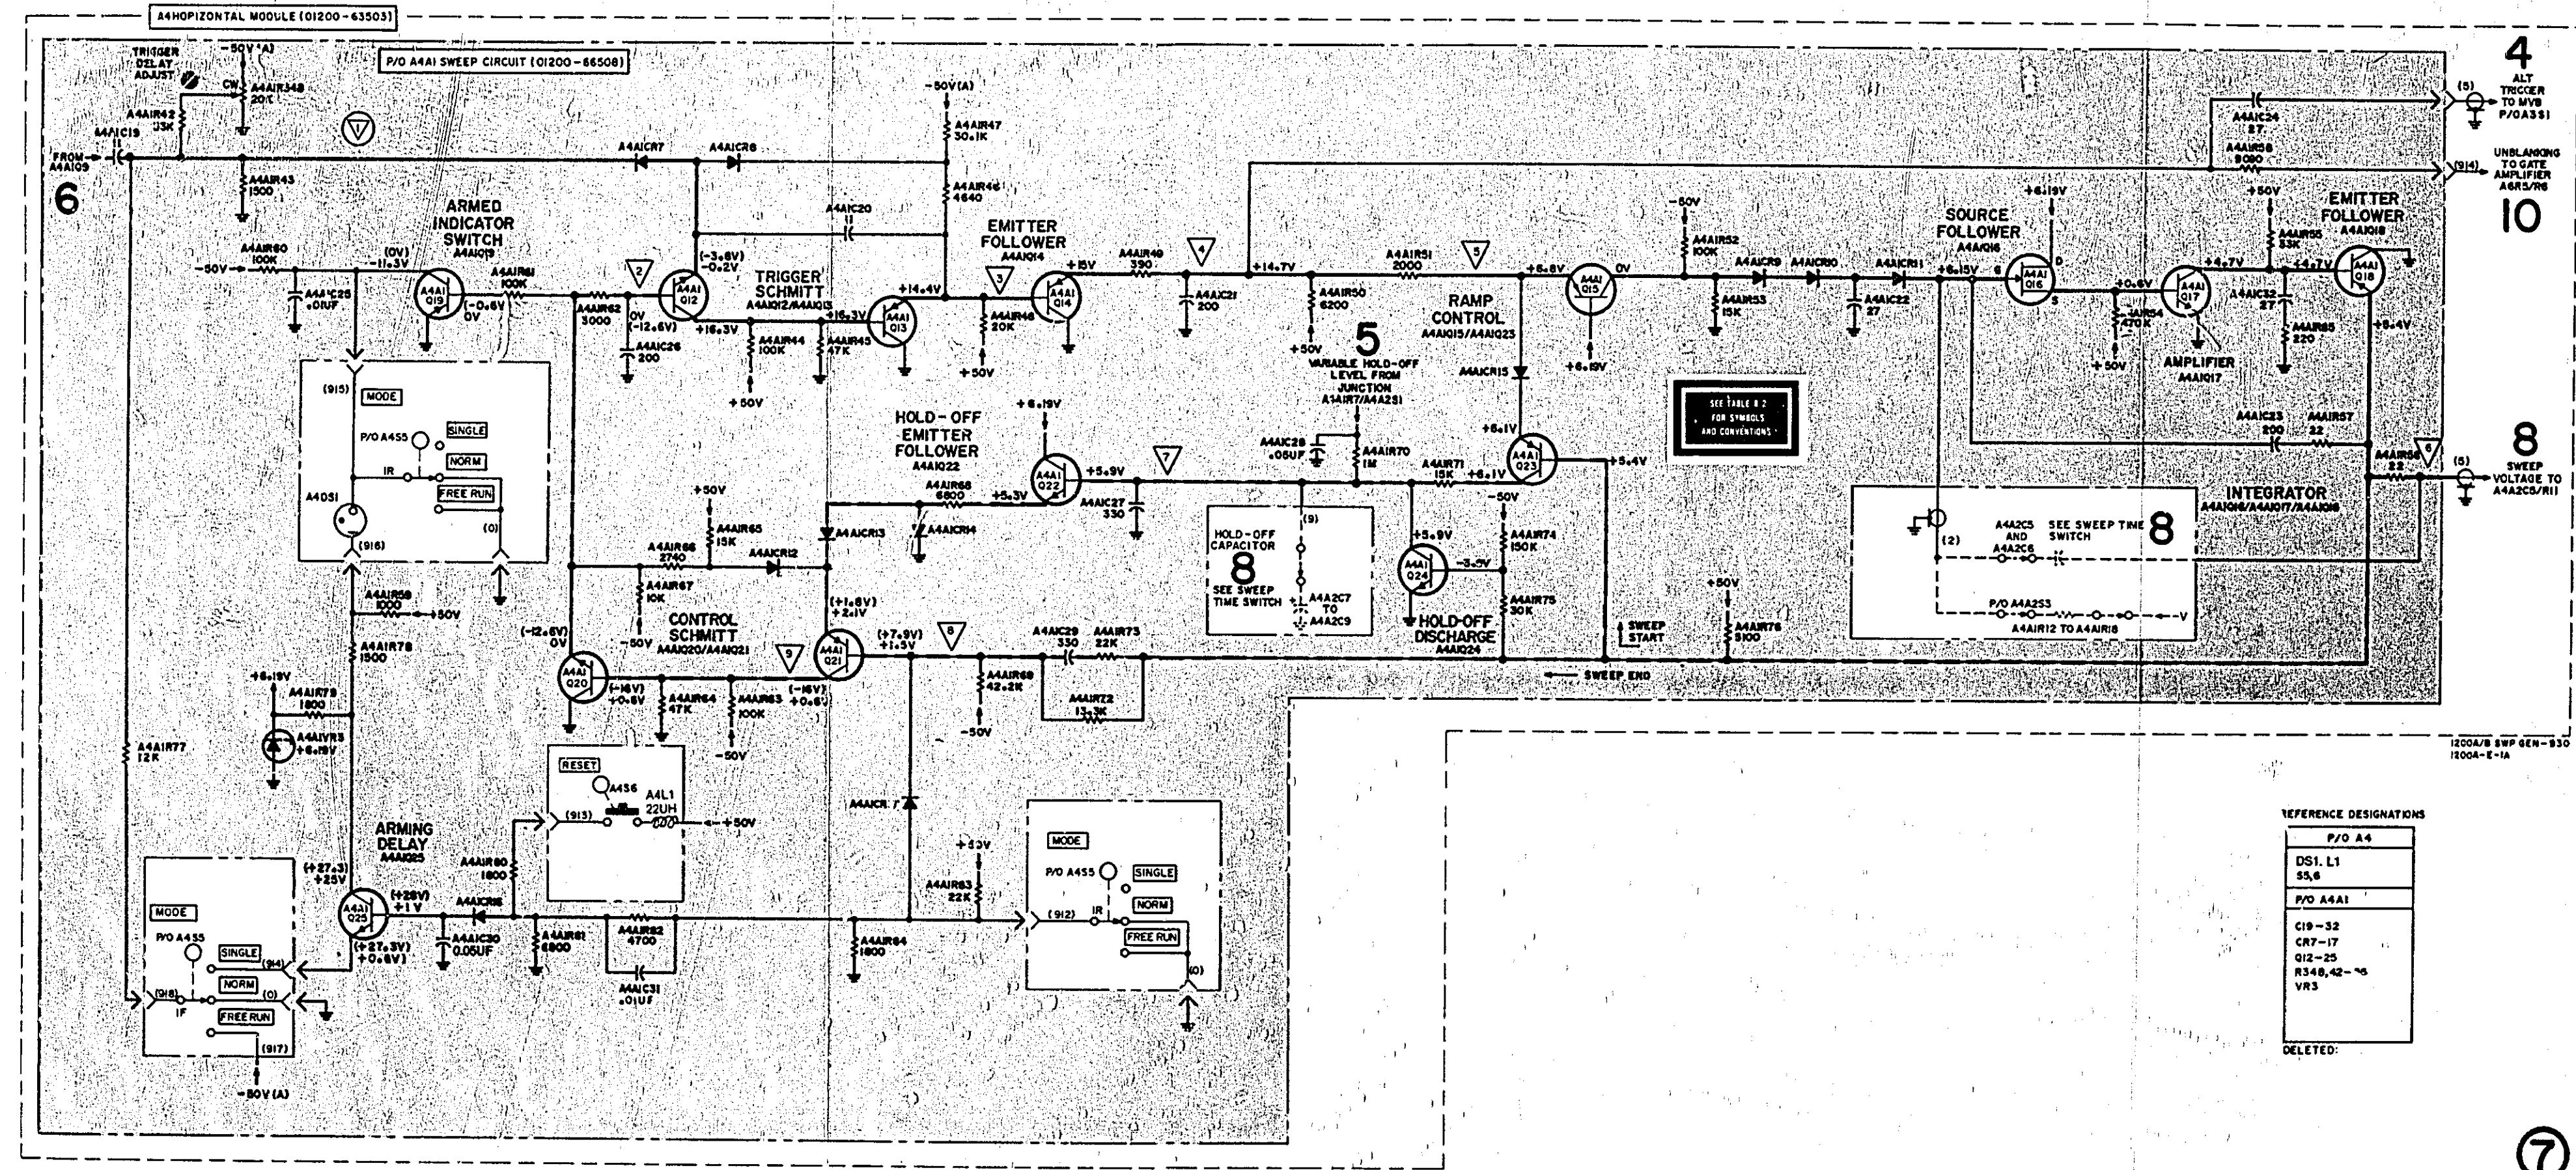


Figure 8-34. Sweep Generator Schematic 8-23/8-24




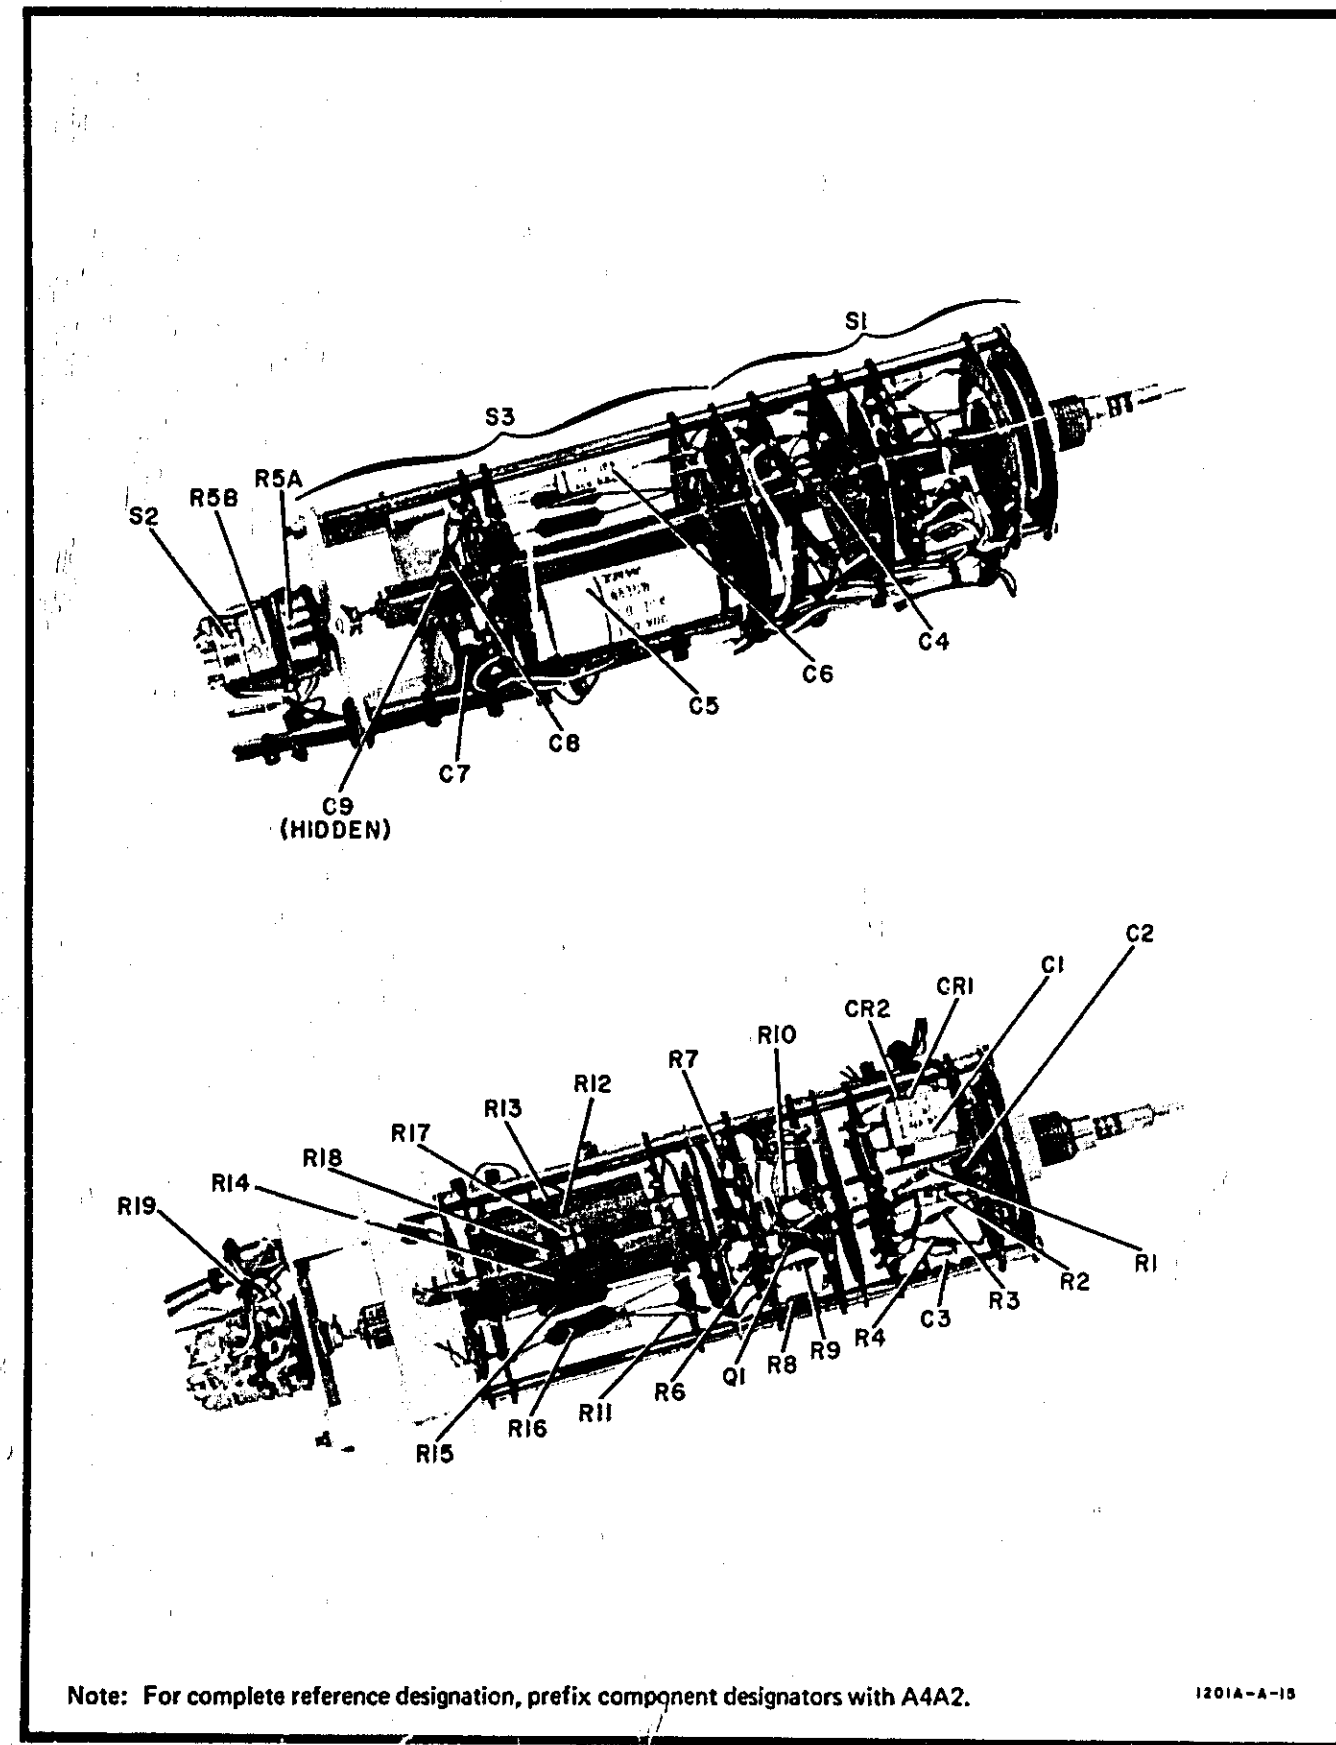


Figure 8-35. Time/Division Switch, A4A2, Component Identification

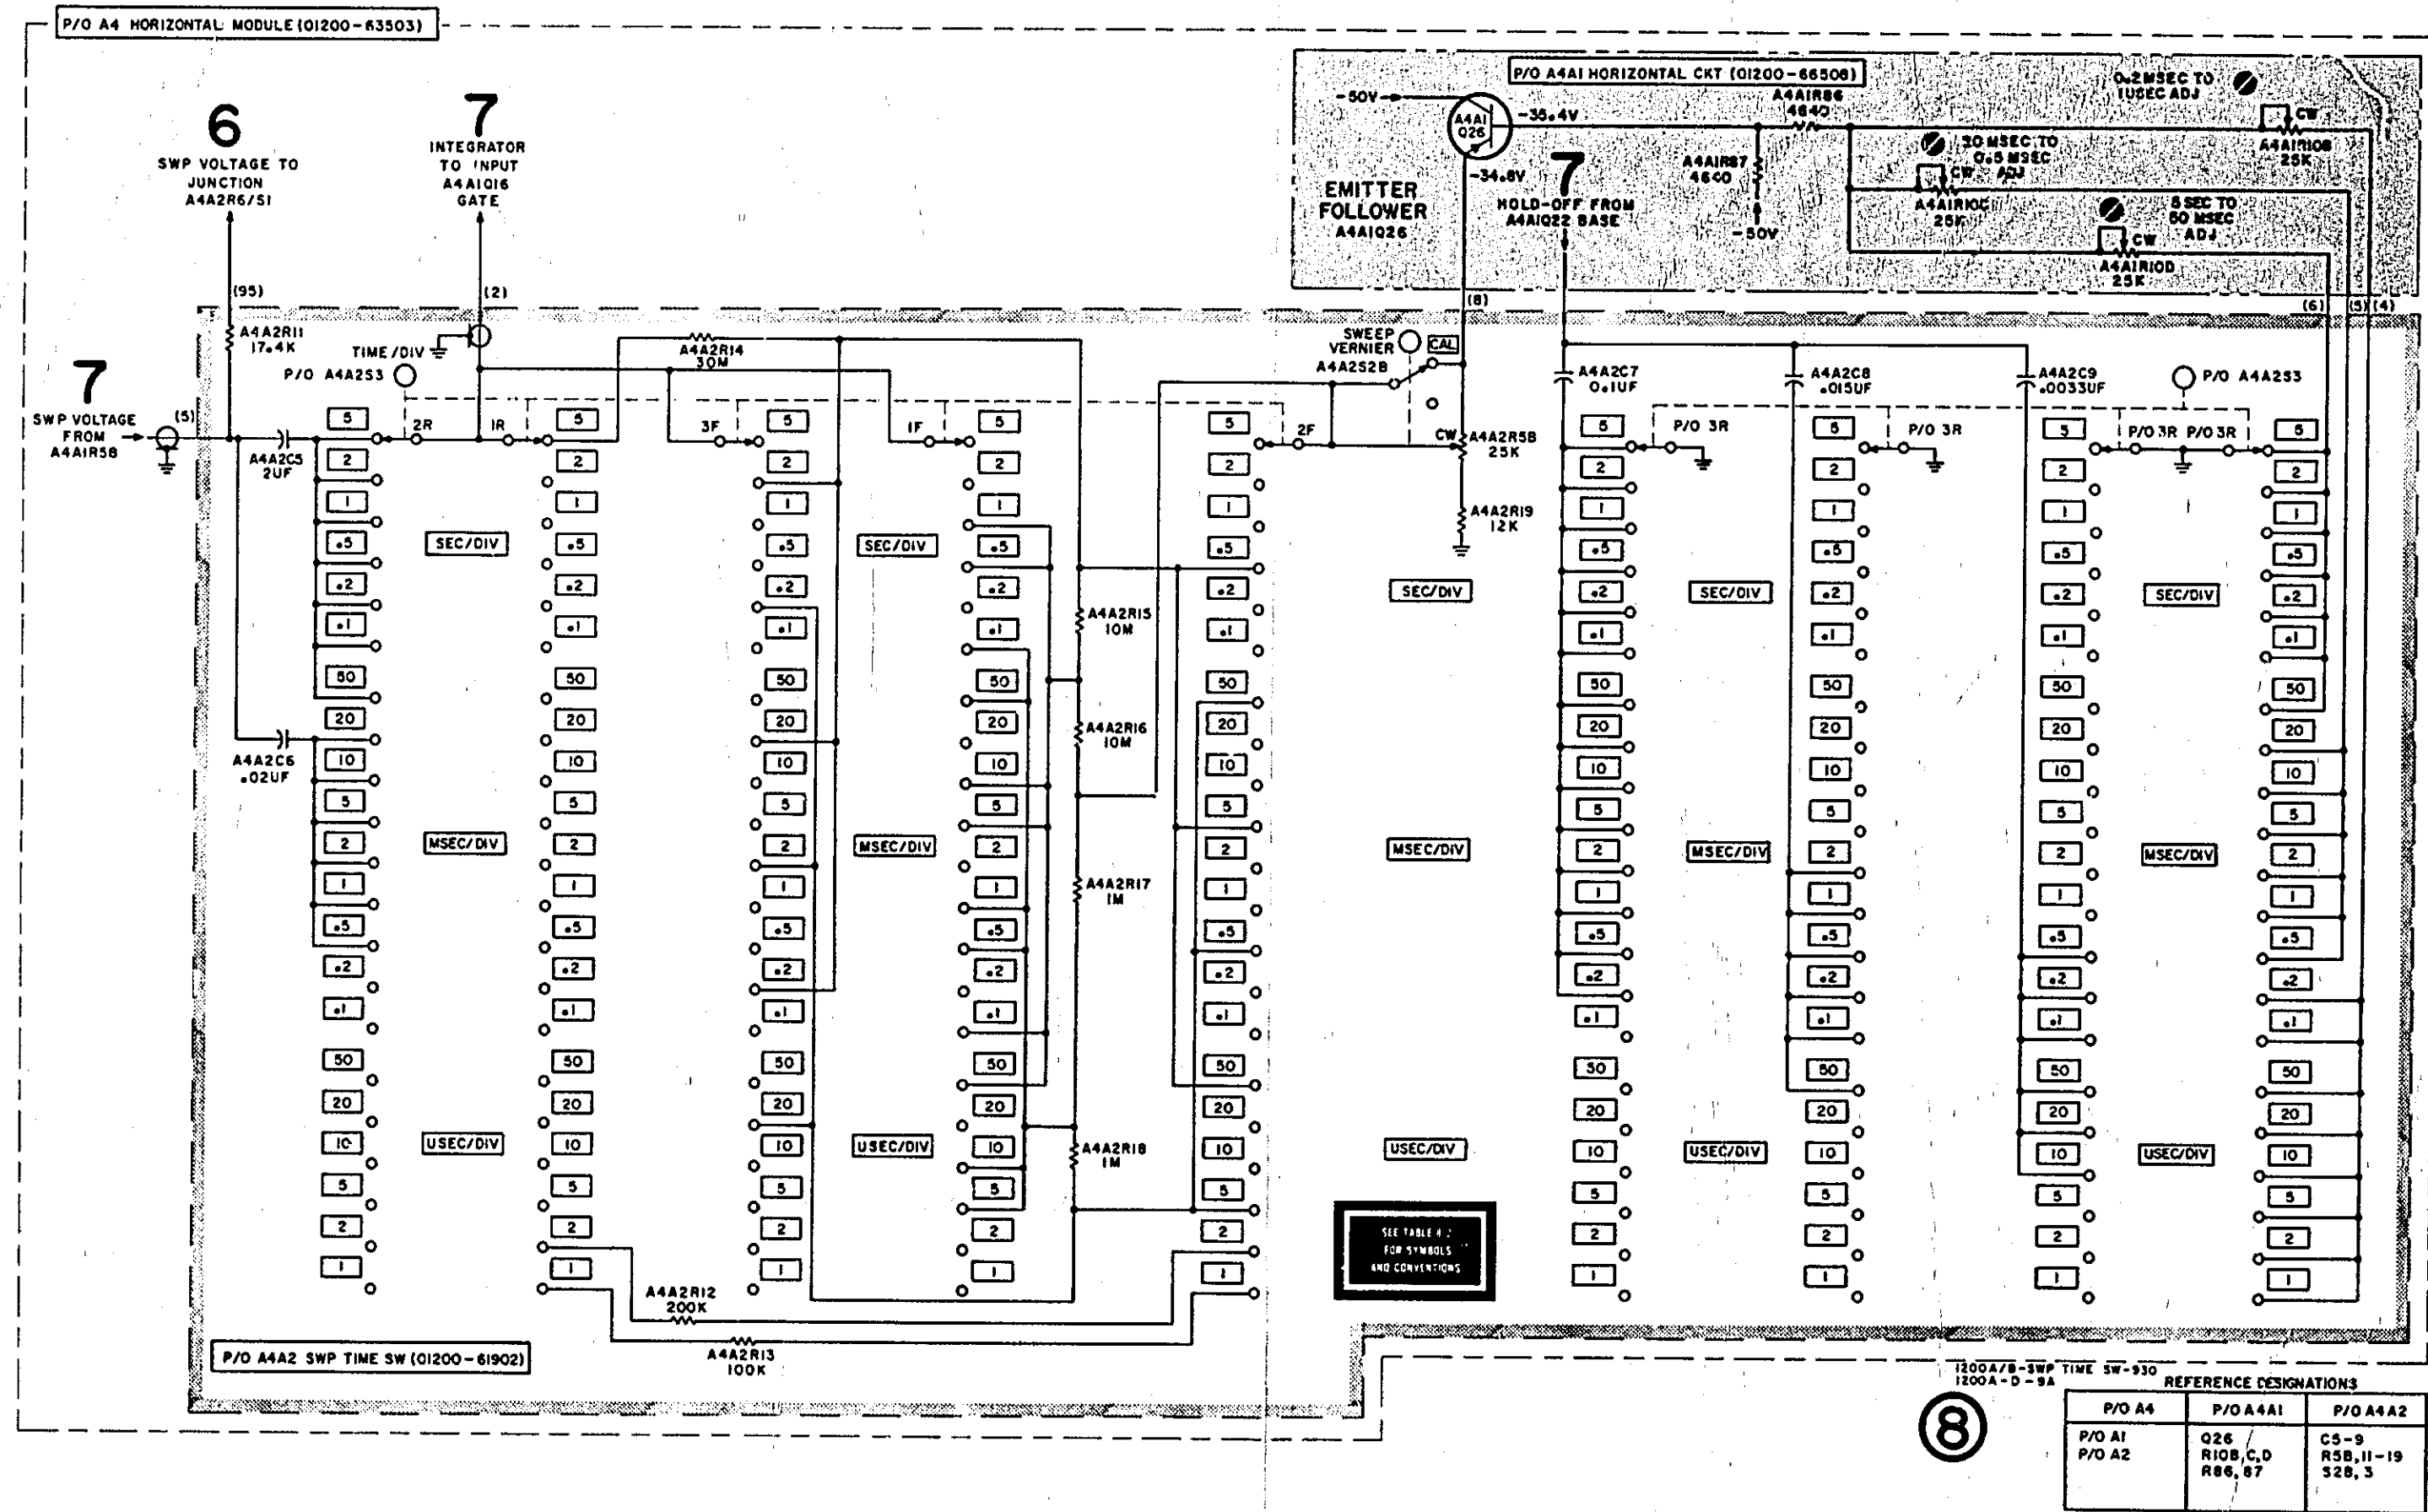

8

Figure 8-36  
Time/Division Switch Schematic  
8-25

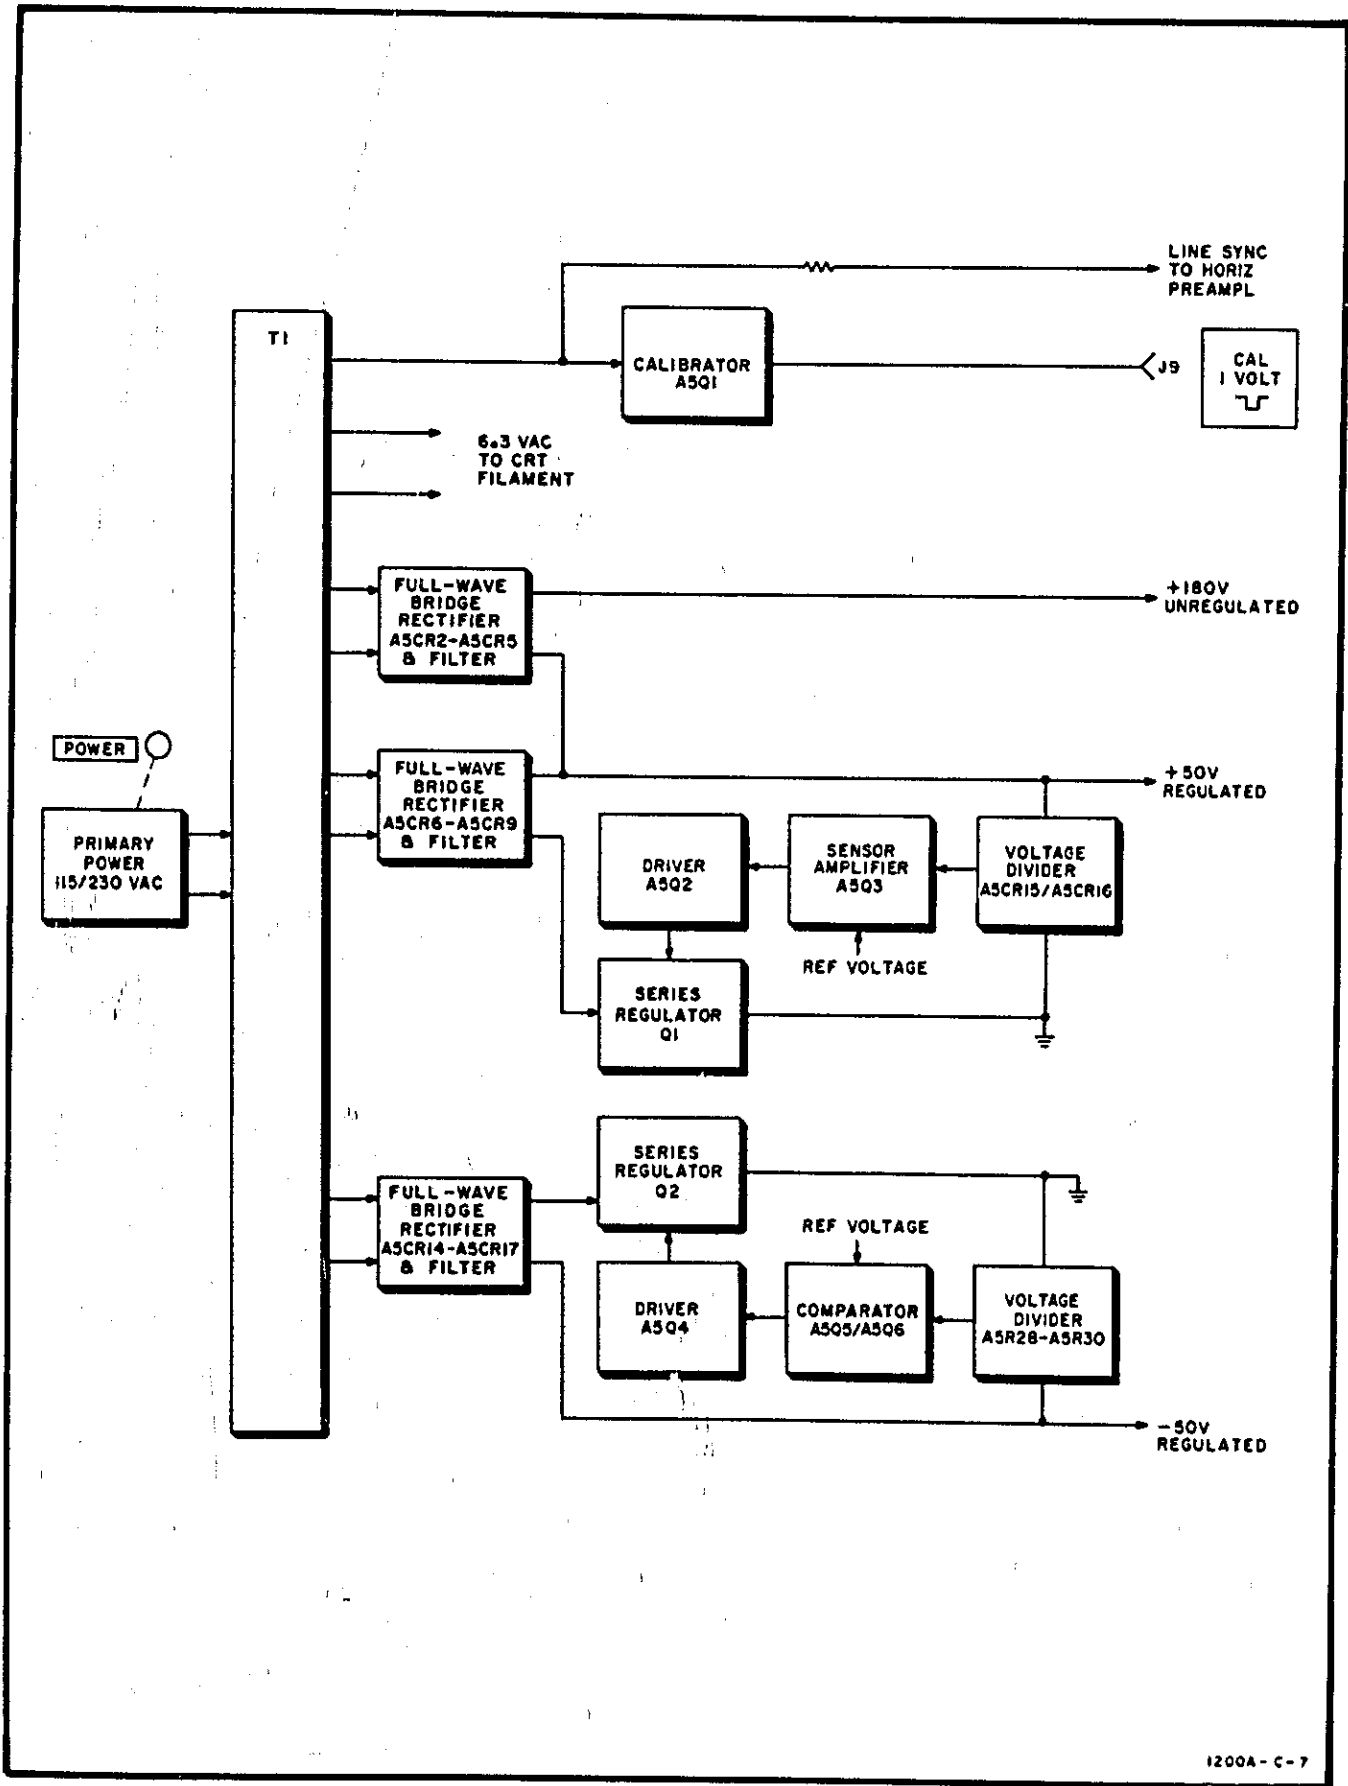


Figure 8-37. Low Voltage Power Supply Block Diagram

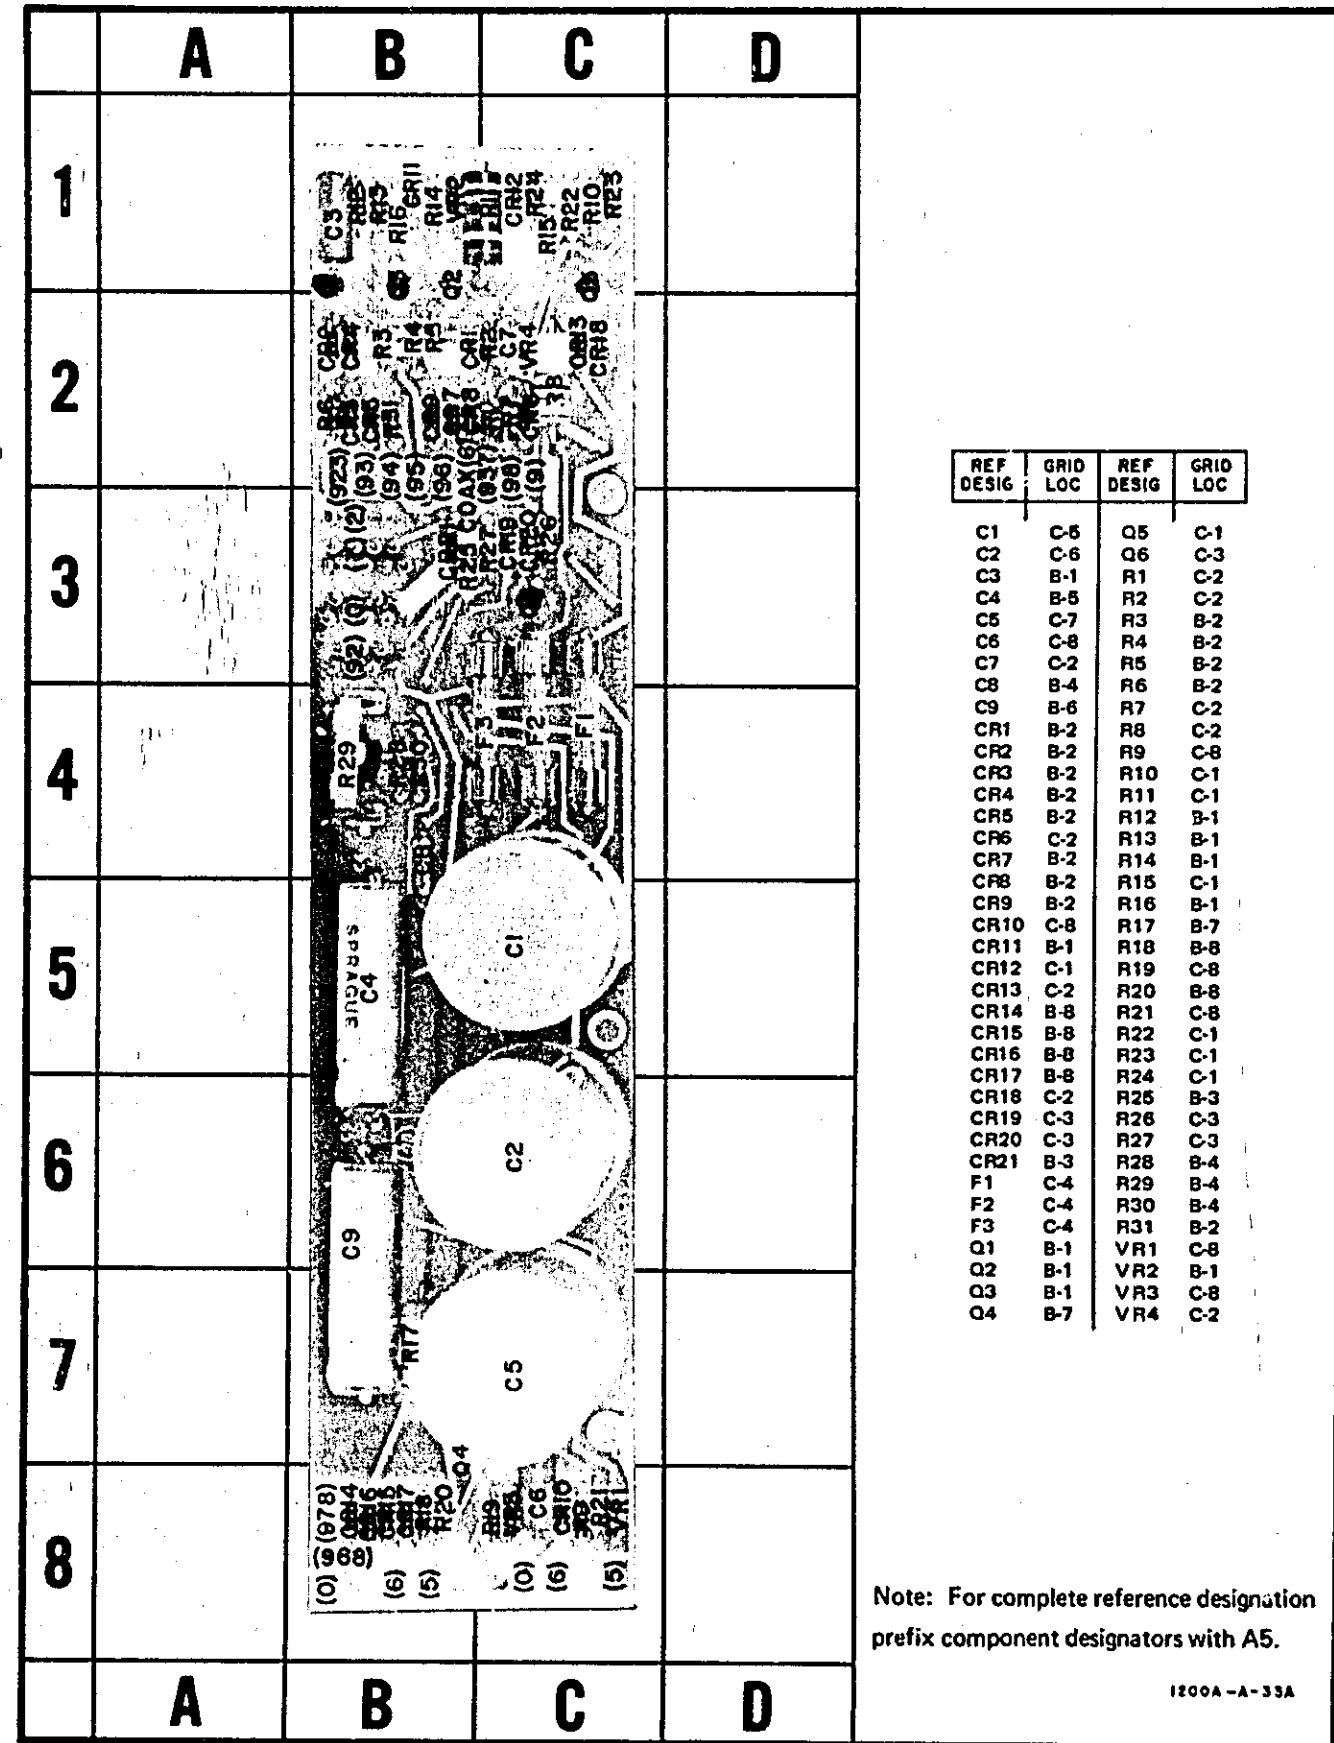


Figure 8-38. Low Voltage Power Supply, A5, Component Identification


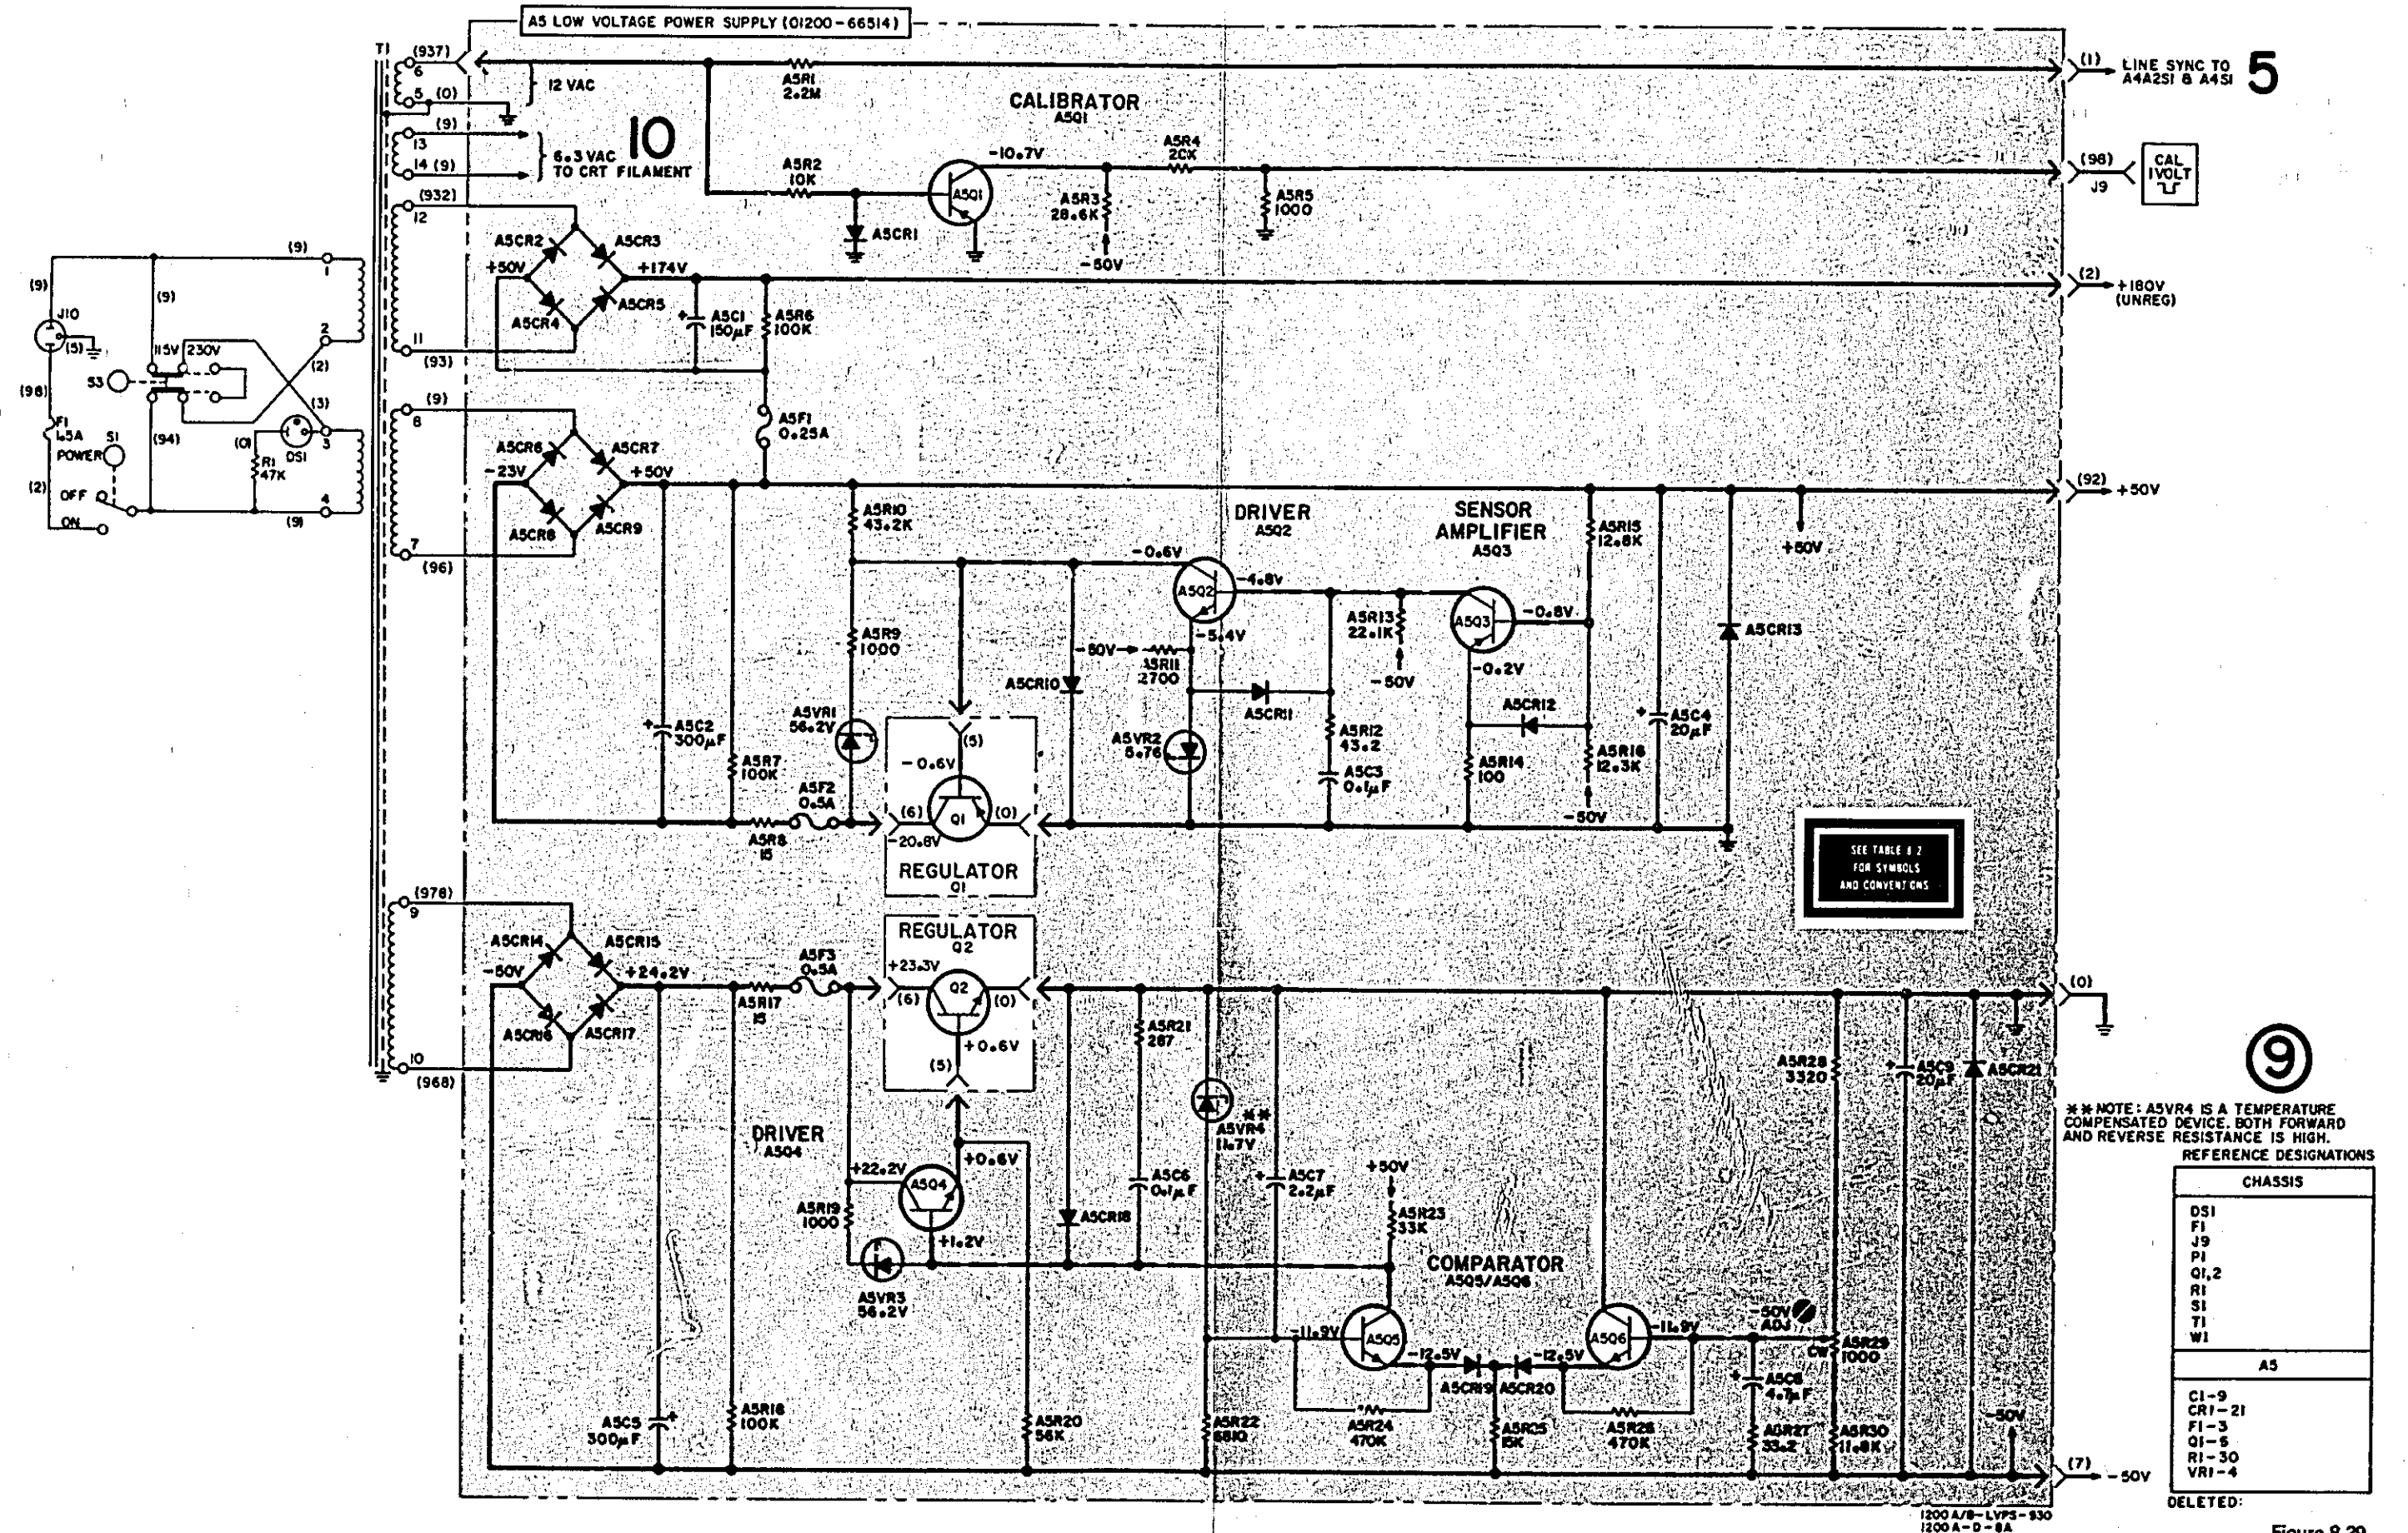



Figure 8-39. Low Voltage Power Supply Schematic 8-27

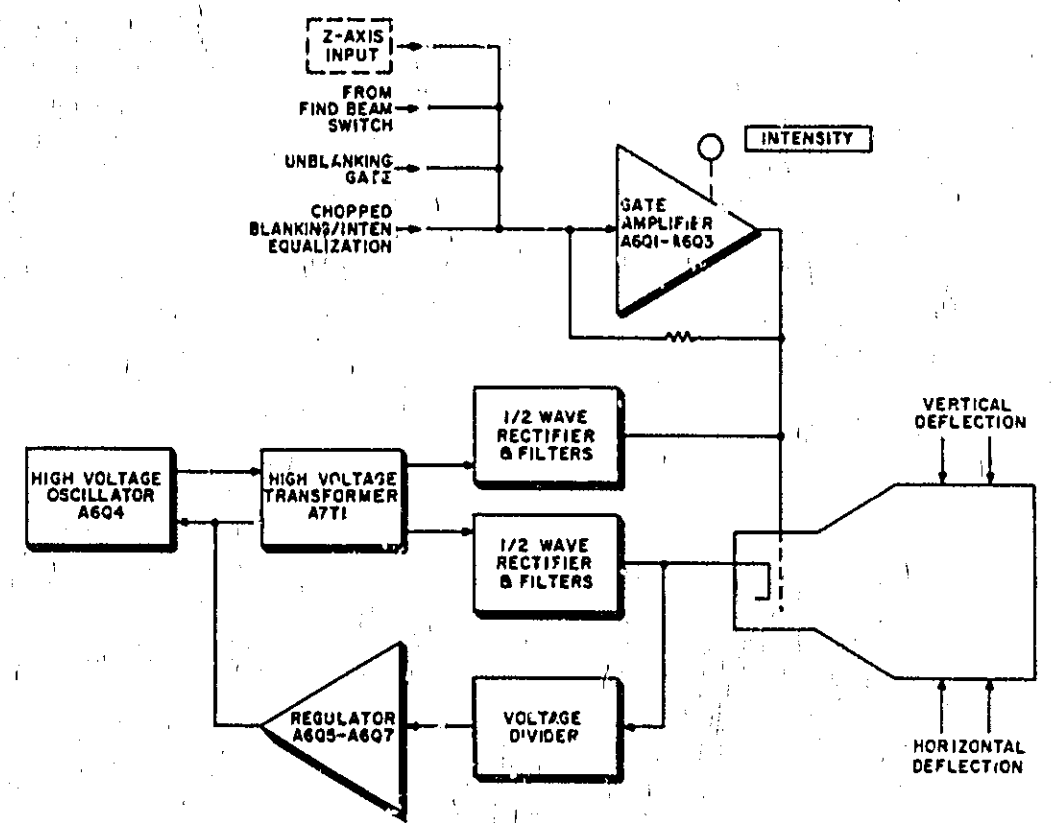

1200A-B-12

Figure 8-40. High Voltage Power Supply Block Diagram

	A	B	C	D	E	F	G	H	I	J	K	L	M	
1														1
2														2
3														3
4														4
5														5
6														6

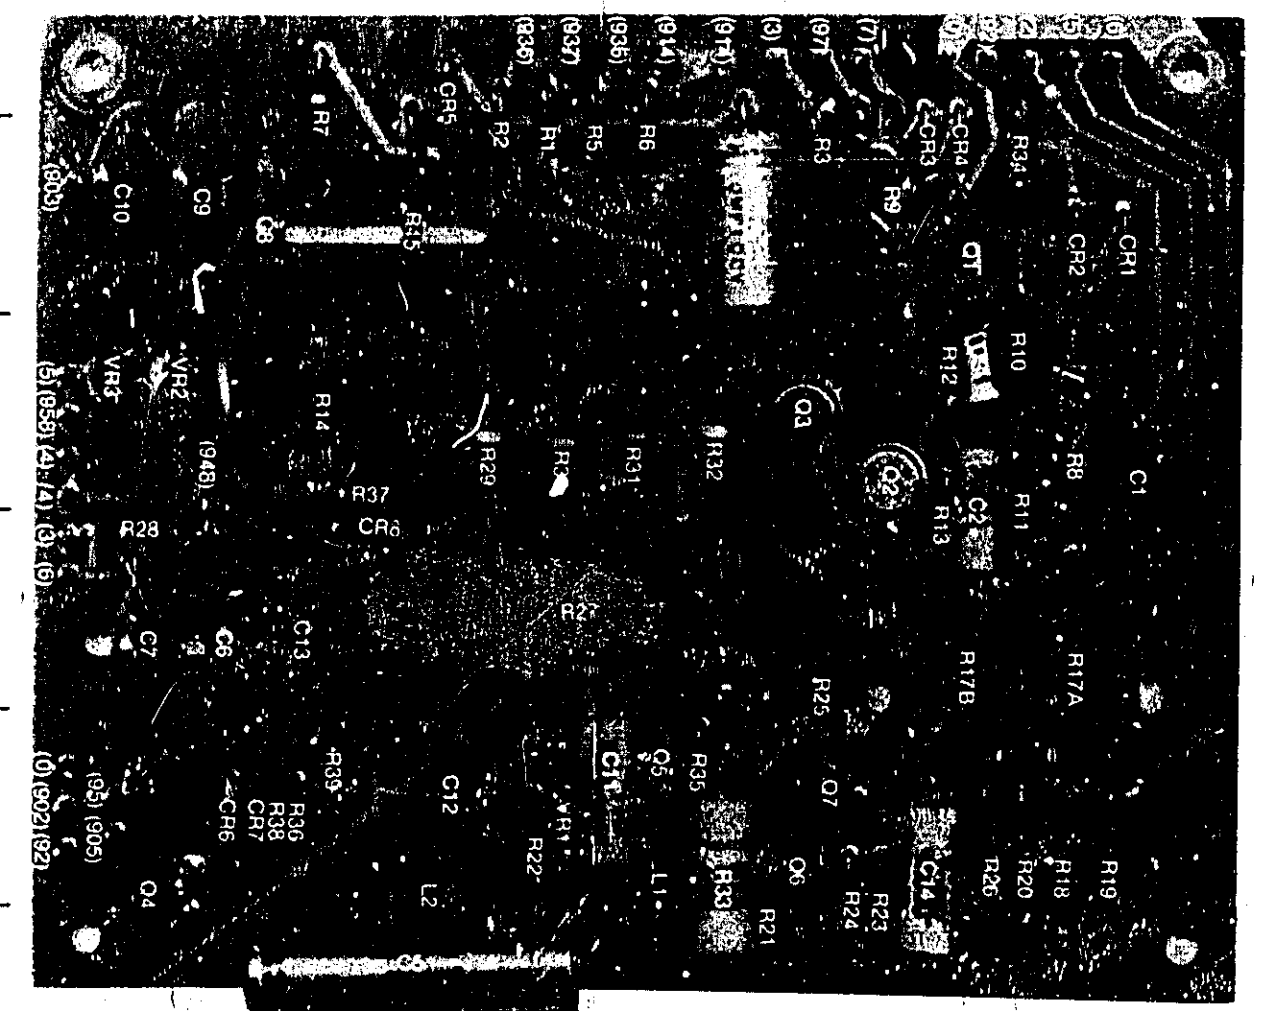

REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC	REF DESIG	GRID LOC
C1	J-3	C11	G-5	CR5	F-1	Q6	H-5	R8	I-3	R17A	I-4	R25	H-4	R34	I-2
C2	I-3	C12	F-5	CR6	E-5	Q7	H-5	R9	H-2	R17B	I-4	R26	I-5	R35	G-5
C3	I-3	C13	E-7	CR7	E-5	R1	F-1	R10	I-2	R18	I-5	R27	F-4	R36	E-5
C4	I-3	C14	I-5	CR8	F-7	R2	F-1	R11	I-3	R19	J-5	R28	D-4	R37	E-3
C5	F-4	C15	H-2	Q1	I-2	R3	H-1	R12	H-2	R20	J-5	R29	F-3	R38	E-5
C6	F-4	CR1	J-2	Q2	H-3	R4	H-1	R13	I-3	R21	H-6	R30	G-3	R39	E-5
C7	D-4	CR2	I-2	Q3	H-3	R5	H-1	R14	E-3	R22	F-5	R31	F-5	L1	G-5
C8	D-4	CR3	I-1	Q4	D-5	R6	G-1	R15	E-2	R23	H-5	R32	H-5	L2	F-5
C9	D-2	CR4	I-1	Q5	D-5	R7	E-1	R16	E-2	R24	H-5	R33	H-5	VR1	G-6
C10	D-2													VR2	D-3
														VR3	D-3

Note: For complete reference designation, prefix component designators with A6.

1200A-B-12

Figure 8-41. High Voltage Regulator, A6, Component Identification



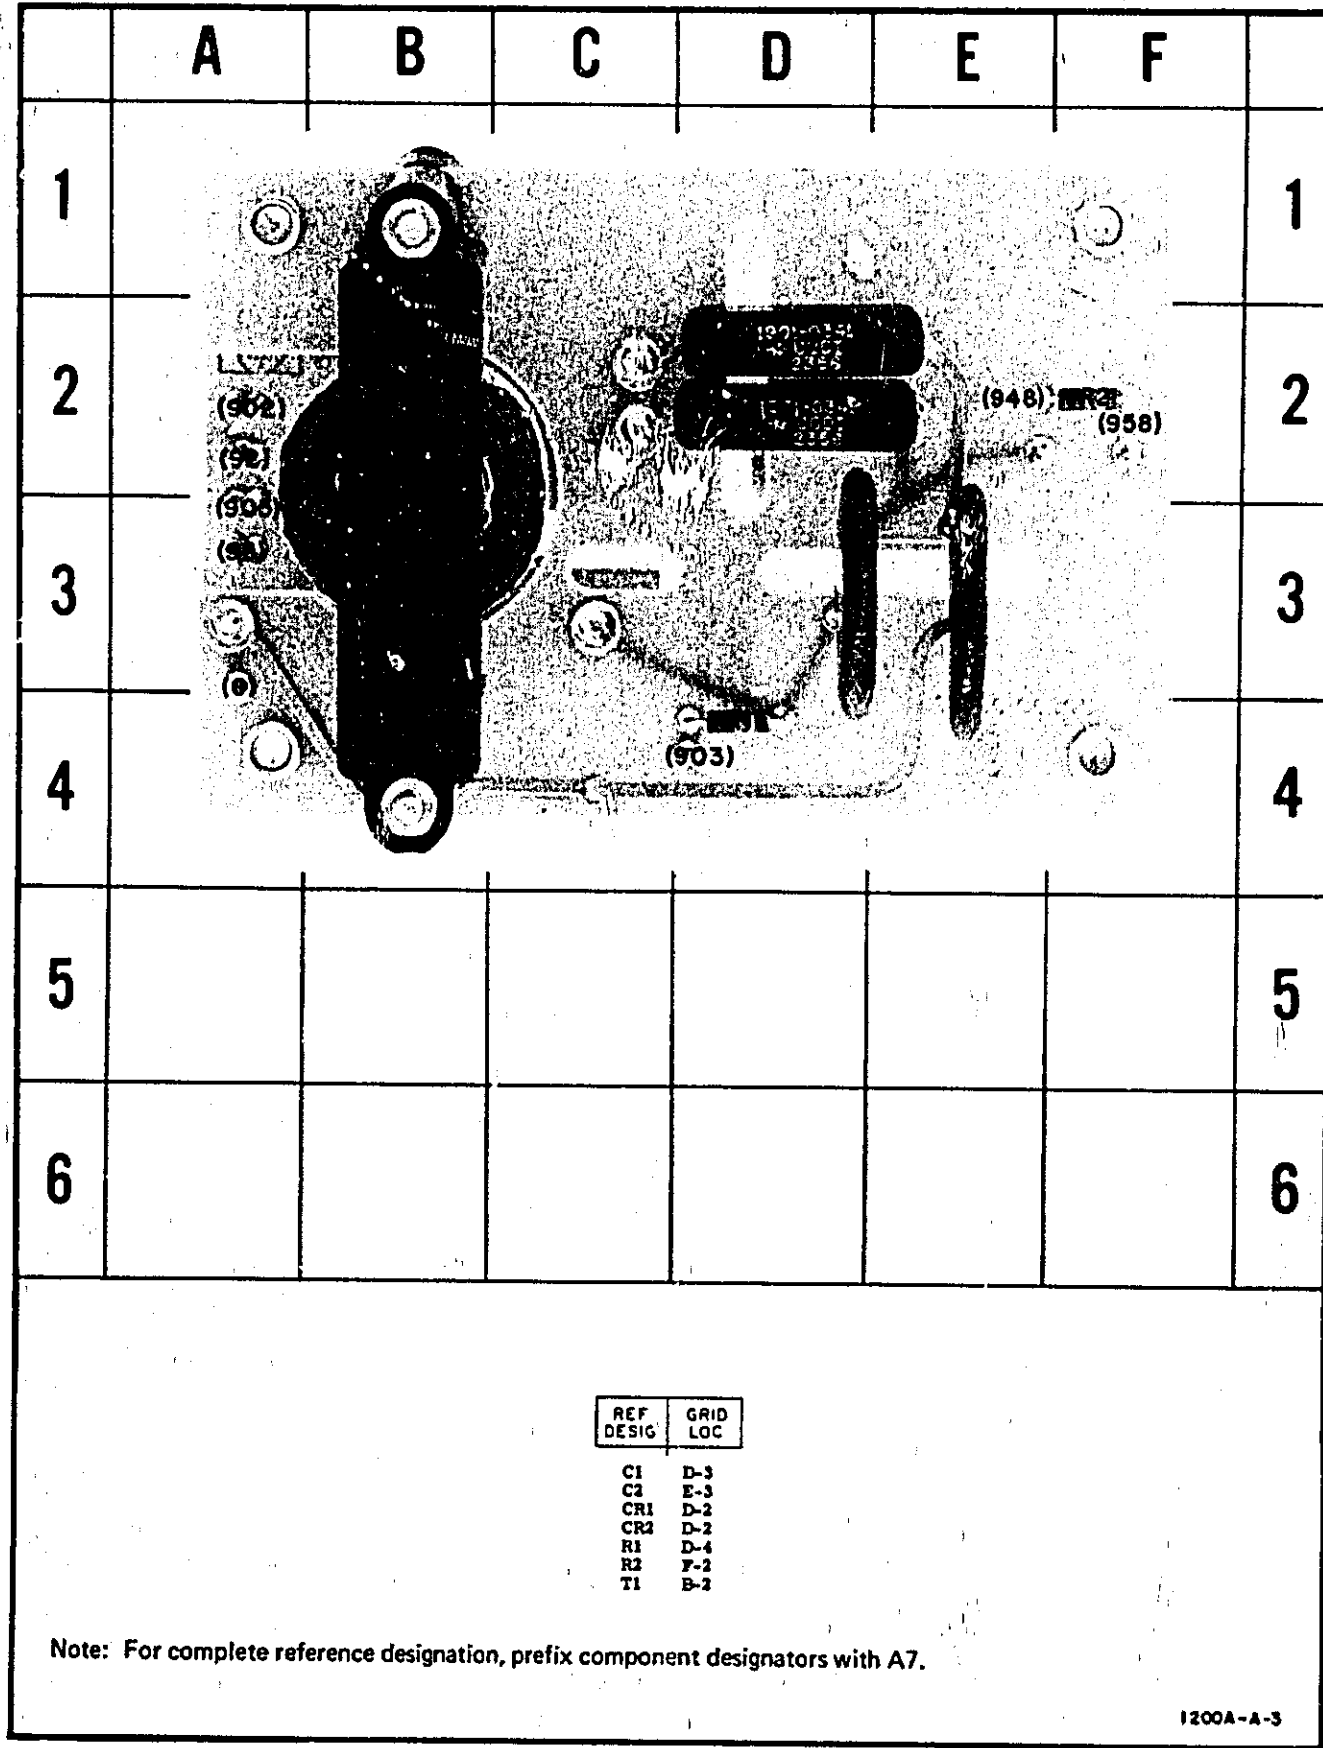


Figure 8-42. High Voltage Rectifier, A7, Component Identification

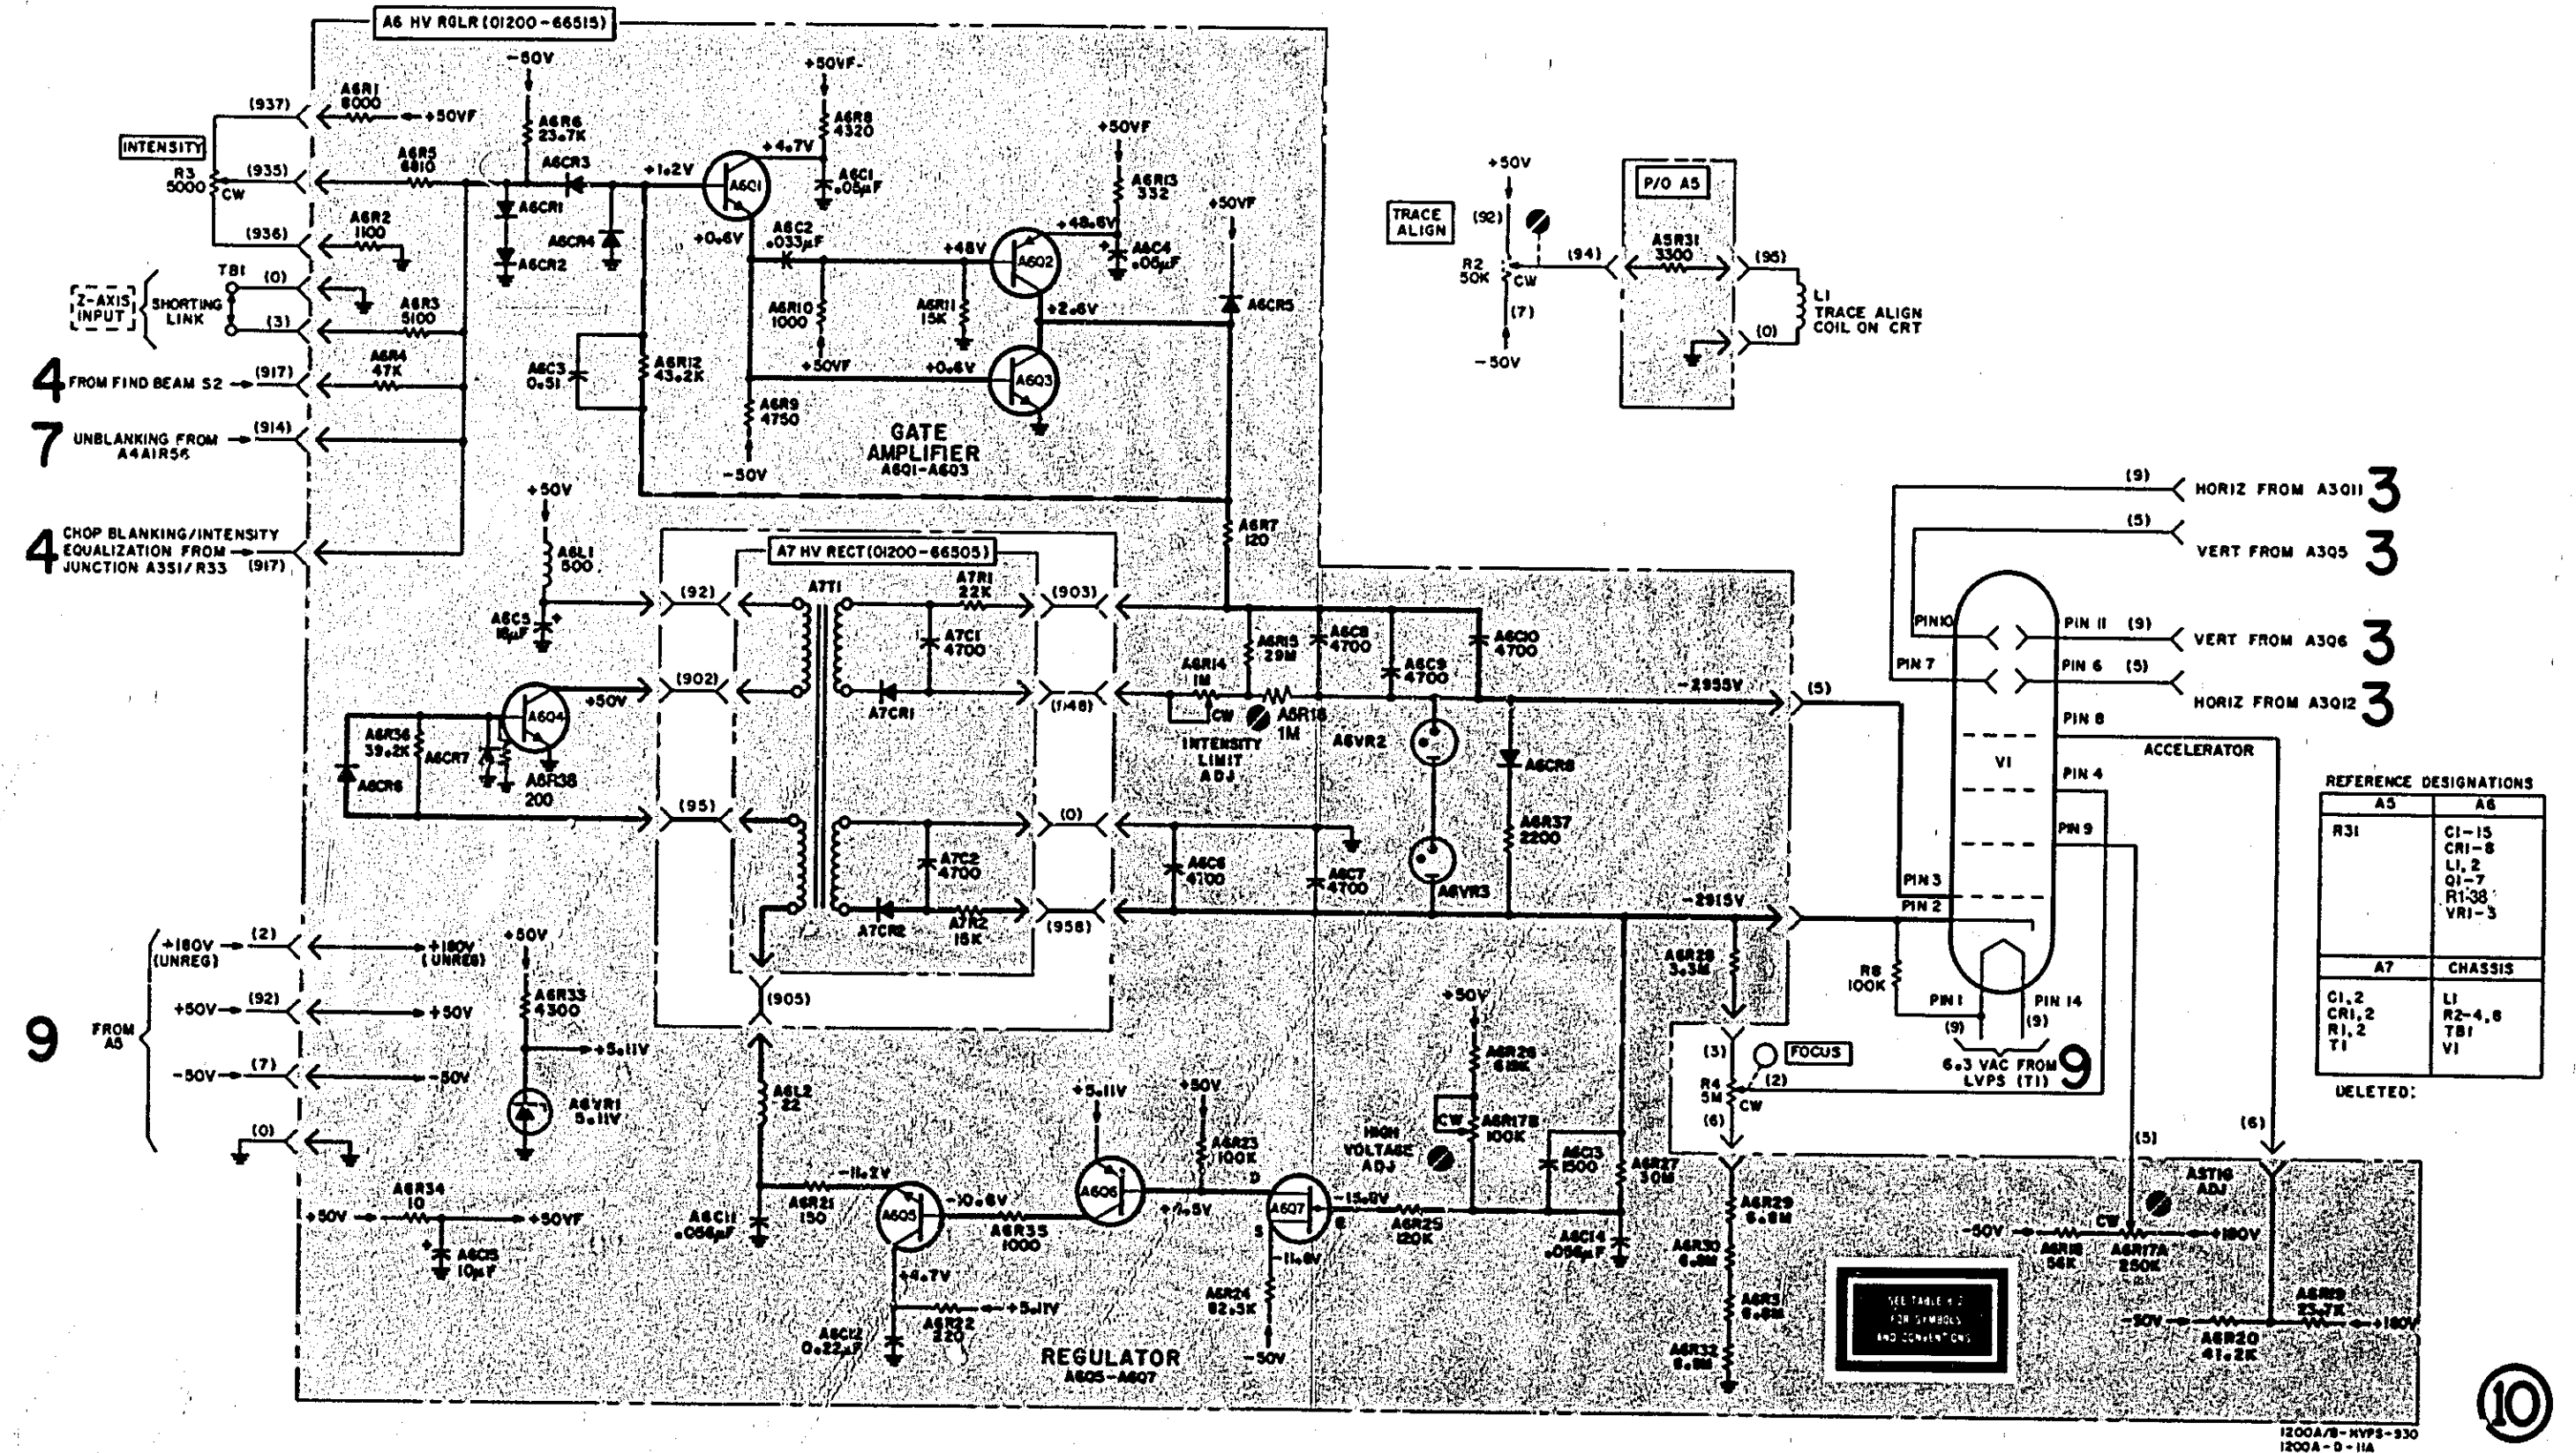


Figure 8-43. High Voltage Power Supply Schematic 8-29/8-30