



Manual Updating Supplement

Supplement HP Part Number: 08590-90109

Supplement Print Date: November 1988

This supplement updates the following document:

HP 8590A Portable RF Spectrum Analyzer Support Manual

Manual HP Part Number: 08590-90096

Manual Print Date: August 1988

What Are Manual Updating Supplements?

A Manual Updating Supplement keeps your manual up-to-date. The supplement, which consists of a cover page and various replacement and/or additional pages for your manual, is shipped with the manual that it updates.

SELECTING THE PAGES TO BE ADDED

The following information helps you select the applicable pages to add supplement information to your manual.

Serial Prefix or Firmware Version

Check the serial prefix or firmware version information on the pages. If there are several versions of a page, select the version that applies to your instrument. For example, your instrument has a serial prefix of 2825A, and the supplement has two versions of one page: *Serial Prefix 2731A and Above*, and *Serial Prefix 2829A and Above*. In this example *Serial Prefix 2731A and Above* applies to your instrument.

Supplement Revision Date

If there are two copies of a page with the same page number and serial prefix, but different revision dates (e.g., Rev. 12JUL87 and Rev. 28AUG87), select the page with the latest revision date.

If there is an All Serials version of a particular piece of information on a page *and* a version identified by a serial prefix that applies to your instrument, select the version with the latest revision date on the bottom of the page. If there are two such pages with different changes, (bars at different places), use both (incorporate one with the other).

If the page already in your manual has a revision date that is *later* than the applicable page in the supplement, keep the page currently in your manual; the manual already may have been updated.

COVER PAGE

The cover page of each Manual Updating Supplement gives the supplement part number and its print date. The supplement print date corresponds to the revision date of the supplement (e.g., Rev. 12JUL87) found at the bottom of the cover page.

The revision date of the supplement is updated each time the supplement changes, but the supplement part number stays the same. For each manual part number there is only one Manual Updating Supplement part number. For example, the manual with HP Part Number 70700-90001 will always have a Manual Updating Supplement with HP Part Number 70700-90047; however, there will be different revision dates of that supplement.

REPLACEMENT OR ADDITIONAL PAGES

A replacement page has the same page number as the page being replaced. Additional pages have page numbers with a decimal number. For example, if one additional page is added between pages 6-5 and 6-6, it will be numbered 6-5.1.

The revision date appearing in the bottom margin each page is the date that the new page was *originally* added to the supplement.

Replacement pages may contain several different types of information:

- new information that was not supplied in the original document
- change information that documents changes to the product that have occurred since the original printing of the manual
- error information (errata) that corrects errors that were present in the original manual

Location of new or changed information is marked with a vertical bar in the outside margin of each replacement.

New and change information is usually tied to a serial prefix or firmware version change; however, information that applies to *all* serials or *all* firmware versions may also be included in the supplement.

The applicable serial prefix or firmware version is printed on each page. If the information applies to all serial numbers of the instrument, the page will contain the notation *All Serials*. Similarly, if a replacement page contains error-correction information, it will contain the notation *Errata*.

INSERTING THE REPLACEMENT AND ADDITIONAL PAGES

After you have selected applicable pages, discard each old page for which you have a new version. Insert the new version of the page. Each replacement page will have the exact page number as the old version.

Additional pages have page numbers with a decimal number. These pages are added to the manual without removing any old pages. For example, if there is one additional page numbered 6-5.1, it should be added between pages 6-5 and 6-6.



**HP 8590A Portable RF Spectrum Analyzer
Support Manual
Volume I**

(Including Options 001, 021, 022,
023, 030, 040, 908, and 915)

SERIAL NUMBERS

This manual applies directly to instruments serial prefixed 2839A. The Manual Backdating Supplement covers instruments serial prefixed 2618A through 2837A.

For additional important information about serial numbers, see **INSTRUMENTS COVERED BY MANUAL** in the Installation Manual.

COPYRIGHT © 1988 by Hewlett-Packard Company
1212 Valley House Drive, Rohnert Park, CA 94928-4999



Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|--------|-----|--------------------------------------|----------|-----------------|
| A1 | 08590-60004 | 5 | 1 | KEYBOARD BOARD ASSEMBLY | 28480 | 08590-60004 |
| A1J1 | 1252-1065 | 5 | 1 | CONN-POST TYPE .100-PIN-SPCG 24-CONT | 28480 | 1252-1065 |
| A1J2 | 1251-7678 | 6 | 2 | CONN-POST TYPE .100-PIN-SPCG 5-CONT | 28480 | 1251-7678 |
| A1J3 | 1251-7678 | 6 | | CONN-POST TYPE .100-PIN-SPCG 5-CONT | 28480 | 1251-7678 |
| A1MP1 | 08590-20004 | 1 | 1 | BD-KEYBOARD | 28480 | 08590-20004 |
| | 08590-68004 | 1 | 1 | PC KIT CNTR SET | 28480 | 08590-68004 |
| A2 | 0950-1813 | 0 | 1 | OEM CRT DATA DISPLAY; 75 X 102 MM | 28480 | 0950-1813 |
| A3 | 0955-0453 | 2 | 1 | ATTENUATOR, PROGRAMMABLE 0-60 | 28480 | 0955-0453 |

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|--------|-----|---|----------|----------------------|
| A4 | 08590-60047 | 6 | 1 | 1ST CONVERTER ASSEMBLY | 28480 | 08590-60047 |
| A4J1 | 1250-1796 | 5 | 4 | CONNECTOR-RF SMA FEM SGL-HOLE-RR 50-OHM | 28480 | 1250-1796 |
| A4J2 | 1250-1796 | 5 | | CONNECTOR-RF SMA FEM SGL-HOLE-RR 50-OHM | 28480 | 1250-1796 |
| A4J3 | 1250-1796 | 5 | | CONNECTOR-RF SMA FEM SGL-HOLE-RR 50-OHM | 28480 | 1250-1796 |
| A4J4 | 1250-1796 | 5 | | CONNECTOR-RF SMA FEM SGL-HOLE-RR 50-OHM | 28480 | 1250-1796 |
| A4NP1 | 08558-00052 | 7 | 1 | GASKET 1ST CONV | 28480 | 08558-00052 |
| A4NP2 | 08590-20023 | 4 | 1 | COVER-1ST CONV | 28480 | 08590-20023 |
| A4NP3 | 08590-20022 | 3 | 1 | MOUNT-1ST CONV | 28480 | 08590-20022 |
| A4R1 | 0888-7212 | 9 | 1 | RESISTOR 100 1% .05W F TC=0+-100 | 24548 | C3-1/8-T0-100R-F |
| A4R2 | 0889-2033 | 4 | 1 | RESISTOR 237 1% .05W F TC=0+-100 | 91837 | CHF-50-21 |
| A4R3 | 0889-2032 | 3 | 2 | RESISTOR 147 1% .05W F TC=0+-100 | 91837 | CHF-50-21 |
| A4R4 | 0889-1947 | 7 | 1 | RESISTOR 38.3 1% .05W F TC=0+-100 | 91837 | CHF-50-21 |
| A4R5 | 0889-2032 | 3 | | RESISTOR 147 1% .05W F TC=0+-100 | 91837 | CHF-50-21 |
| A4U1 | 5062-0785 | 5 | 1 | DIODE ASSY | 28480 | 5062-0785 |
| | 5021-6800 | 1 | 1 | DIODE MOUNT | 28480 | 5021-6800 |
| | | | | MISCELLANEOUS PARTS | | |
| | 2190-0067 | 4 | 4 | WASHER-LK INTL T 1/4 IN .256-IN-ID | 28480 | 2190-0067 |
| | 2200-0188 | 9 | 18 | SCREW-MACH 4-40 .438-IN-LG 82 DEG | 00000 | ORDER BY DESCRIPTION |

See introduction to this section for ordering information
 *Indicates factory selected value

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|----------------------|
| AS | 08580-80174 | 0 | 1 | 2ND CONVERTER ASSEMBLY | 28480 | 08580-80174 |
| ASC1 | 0160-3036 | 8 | 2 | CAPACITOR-FDTHRU 5000PF +80 -20% 200V | 28480 | 0160-3036 |
| ASC2 | 0160-3036 | 8 | 2 | CAPACITOR-FDTHRU 5000PF +80 -20% 200V | 28480 | 0160-3036 |
| ASC3 | 0160-5435 | 5 | 1 | CAPACITOR-FDTHRU 8.5PF 8% 200V CER | 28480 | 0160-5435 |
| ASC4 | 0140-0075 | 7 | 1 | CAPACITOR-FDTHRU 22PF 10% 500V NICA | 72982 | 686-053-01A0-220K |
| ASCR1 | 1901-0950 | 2 | 1 | DIODE-SM SIG SCHOTTKY | 28480 | 1901-0950 |
| ASJ1 | 1250-1157 | 2 | 1 | CONNECTOR-RF SMA FEM THD-HOLE 50-OHM | 28480 | 1250-1157 |
| ASJ2 | 1250-1435 | 3 | 1 | CONN:RF: 500 OHM: SMC | 28480 | 1250-1435 |
| ASJ3 | 1250-0691 | 7 | 2 | CONNECTOR-RF SMB M SGL-HOLE-FR 50-OHM | 28480 | 1250-0691 |
| ASJ4 | 1250-0691 | 7 | 2 | CONNECTOR-RF SMB M SGL-HOLE-FR 50-OHM | 28480 | 1250-0691 |
| ASL3 | 08565-80003 | 5 | 1 | COIL 2ND CONV | 28480 | 08565-80003 |
| ASL4 | 9100-2255 | 4 | 1 | INDUCTOR RF-CH-PLD 470NH 10% | 28480 | 9100-2255 |
| ASHP1 | 08565-20067 | 5 | 1 | BLOCK CAVITY | 28480 | 08565-20067 |
| ASHP2 | 08565-20092 | 6 | 1 | CAP DIELECTRIC | 28480 | 08565-20092 |
| ASHP3 | 2200-0151 | 0 | 1 | SCREW-MACH 4-40 .75-IN-LG PAN-HD-POZI | 00000 | ORDER BY DESCRIPTION |
| ASHP4 | 08565-20068 | 5 | 1 | CAP INNER ELEMENT | 28480 | 08565-20068 |
| ASHP5 | 08565-00152 | 7 | 1 | MTG TAB FOR DIO | 28480 | 08565-00152 |
| ASHP5 | 2200-0171 | 4 | 1 | SCREW-MACH 4-40 .75-IN-LG 82 DEG | 00000 | ORDER BY DESCRIPTION |
| ASHP7 | 3030-0397 | 6 | 4 | SCREW-SET 10-32 1-IN-LG FLAT-PT BR5 | 00000 | ORDER BY DESCRIPTION |
| ASHP8 | 3030-0397 | 6 | 4 | SCREW-SET 10-32 1-IN-LG FLAT-PT BR5 | 00000 | ORDER BY DESCRIPTION |
| ASHP9 | 3030-0397 | 6 | 4 | SCREW-SET 10-32 1-IN-LG FLAT-PT BR5 | 00000 | ORDER BY DESCRIPTION |
| ASHP10 | 3030-0397 | 6 | 4 | SCREW-SET 10-32 1-IN-LG FLAT-PT BR5 | 00000 | ORDER BY DESCRIPTION |
| ASHP11 | 0390-0573 | 8 | 1 | STANDOFF-HEX .625-IN-LG 10-32-THD | 28480 | 0390-0573 |
| ASHP11 | 2740-0001 | 3 | 3 | NUT-HEX-DBL-CHAM 10-32-THD .109-IN-THK | 00000 | ORDER BY DESCRIPTION |
| ASHP12 | 2740-0001 | 3 | 3 | NUT-HEX-DBL-CHAM 10-32-THD .109-IN-THK | 00000 | ORDER BY DESCRIPTION |
| ASHP13 | 2740-0001 | 3 | 3 | NUT-HEX-DBL-CHAM 10-32-THD .109-IN-THK | 00000 | ORDER BY DESCRIPTION |
| ASHP14 | 2950-0078 | 9 | 1 | NUT-HEX-DBL-CHAM 10-32-THD .067-IN-THK | 28480 | 2950-0078 |
| ASHP22 | 08558-20074 | 5 | 1 | INSUL CPLG POST | 28480 | 08558-20074 |
| ASR3 | 0757-0348 | 2 | 1 | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0348 |
| | 0160-0118 | 1 | 1 | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 1500885X8035B2 |
| | 0160-0228 | 6 | 1 | CAPACITOR-FXD 22UF+-10% 15VDC TA | 56289 | 150D228X9015B2 |
| | 0380-0002 | 6 | 1 | TERMINAL-SLDR LUG PL-MTG FOR-82-SCR | 28480 | 0380-0002 |
| | 0380-0043 | 5 | 1 | TERMINAL-SLDR LUG PL-MTG FOR-80-SCR | 28480 | 0380-0043 |
| | 0520-0173 | 2 | 1 | SCREW-MACH 2-56 .188-IN-LG PAN-HD-POZI | 00000 | ORDER BY DESCRIPTION |
| | 0520-0174 | 3 | 2 | SCREW-MACH 2-56 .25-IN-LG PAN-HD-POZI | 00000 | ORDER BY DESCRIPTION |
| | 08558-00034 | 5 | 1 | CPLG LOOP INPUT | 28480 | 08558-00034 |
| | 08558-60028 | 3 | 1 | BD 2ND CONV OSC | 28480 | 08558-60028 |
| | 08565-00153 | 8 | 2 | CPLG LOOP FILTER | 28480 | 08565-00153 |
| | 08590-00014 | 1 | 1 | CVR-OSC HOUSING | 28480 | 08590-00014 |
| | 08590-20020 | 1 | 1 | COVER-2ND CONV | 28480 | 08590-20020 |
| | 08590-80033 | 0 | 1 | CBL ASSY ANL PUR | 28480 | 08590-80033 |
| | 08590-80037 | 4 | 1 | CBL AY-CRT INTEN | 28480 | 08590-80037 |
| | 2190-0124 | 4 | 1 | WASHER-LK INTL T NO. 10 .195-IN-ID | 28480 | 2190-0124 |
| | 2190-0587 | 7 | 3 | WASHER-LK INTL T NO. 10 .195-IN-ID | 78189 | 1210-06-00-0551 |
| | 2190-0572 | 6 | 6 | WASHER-LK HLCL NO. 0 .092-IN-ID .1-IN-OO | 28480 | 2190-0572 |
| | 2200-0105 | 4 | 2 | SCREW-MACH 4-40 .312-IN-LG PAN-HD-POZI | 00000 | ORDER BY DESCRIPTION |
| | 2200-0107 | 6 | 18 | SCREW-MACH 4-40 .375-IN-LG PAN-HD-POZI | 00000 | ORDER BY DESCRIPTION |
| | 2200-0119 | 0 | 8 | SCREW-MACH 4-40 1-IN-LG PAN-HD-POZI | 00000 | ORDER BY DESCRIPTION |
| | 3030-0400 | 2 | 6 | SCREW-SKT HD CAP 0-80 .094-IN-LG SST | 00000 | ORDER BY DESCRIPTION |
| | 3050-0003 | 3 | 1 | WASHER-FL NY NO. 6 .141-IN-ID .375-IN-OO | 28480 | 3050-0003 |
| | 3050-0176 | 1 | 4 | WASHER-FL NYLC NO. 8 .188-IN-ID | 11045 | AA-0107-2SS |
| | 3050-0945 | 2 | 1 | WASHER-FL NYLC NO. 10 .2-IN-ID .33-IN-OO | 28480 | 3050-0945 |
| | 6040-0454 | 0 | 1 | THERMAL COMPOUND | 28480 | 6040-0454 |
| | 8090-0807 | 2 | 1 | SOLDER WIRE 361-DE* F .036-W-DIA | 28480 | 8090-0807 |
| ASA1R1 | 0683-4705 | 8 | 1 | RESISTOR 47 5% .25W CF TC=0-400 | 01121 | CB4705 |
| ASA1R2 | 0683-2715 | 6 | 1 | RESISTOR 270 5% .25W CF TC=0-400 | 01121 | CB2715 |

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|--------|-----|--|----------|-----------------|
| A6 | 0955-0330 | 4 | 1 | YIG OSCILLATOR | 28480 | 0955-0330 |
| ABNP1 | 08590-00009 | 4 | 1 | SHIELD-YIG | 28480 | 08590-00009 |
| ABNP2 | 08590-00010 | 7 | 1 | COVER-SHLD-YIG | 28480 | 08590-00010 |
| ABA1 | 08590-60029 | 4 | 1 | YIG BOARD ASSEMBLY | 28480 | 08590-60029 |
| ABA1J1 | 1251-7683 | 3 | 1 | CONN-POST TYPE .100-PIN-SPCG 10-CONT | 00779 | 87227-5 |
| ABA1NP2 | 1251-3172 | 7 | 1 | CONNECTOR-SGL CONT SKT .03-IN-BSC-SZ RND | 28480 | 1251-3172 |
| ABA1NP3 | 1251-2313 | 6 | 1 | CONNECTOR-SGL CONT SKT .04-IN-BSC-SZ RND | 28480 | 1251-2313 |
| ABA1VR1 | 1902-3224 | 1 | 1 | DIODE-ZNR 17.8V 8% DO-35 PD=0.4W | 28480 | 1902-3224 |
| ABA1VR2 | 1902-0049 | 2 | 1 | DIODE-ZNR 8.18V 8% DO-35 PD=0.4W | 28480 | 1902-0049 |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|---------------------------------------|----------|---------------------|
| A14Q11 | 1854-0019 | 3 | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q12 | 1853-0015 | 7 | | TRANSISTOR PNP SI PD=200MW FT=500MHZ | 28480 | 1853-0015 |
| A14Q13 | 1854-0019 | 3 | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q14 | 1854-0019 | 3 | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q15 | 1854-0019 | 3 | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q16 | 1854-0019 | 3 | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q17 | 1854-0019 | 3 | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q18 | 1854-0019 | 3 | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q19 | 1854-0019 | 3 | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q20 | 1854-0019 | 3 | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q21 | 1854-1030 | 0 | 1 | TRANSISTOR-DUAL NPN PD=750MW | 28480 | 1854-1030 |
| A14Q22 | 1854-0404 | 0 | 2 | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0404 |
| A14Q24 | 1854-0404 | 0 | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0404 |
| A14Q25 | 1854-0019 | 3 | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14R1 | 0757-0317 | 7 | 1 | RESISTOR 1.33K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1331-F |
| A14R2 | 0757-0280 | 3 | 8 | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R3 | 0898-0094 | 9 | 1 | RESISTOR 2.15K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2151-F |
| A14R4 | 0898-3430 | 5 | 1 | RESISTOR 21.5 1% .125W F TC=0+-100 | 03888 | PM55-1/8-T0-2185-F |
| A14R5 | 0757-0443 | 0 | 1 | RESISTOR 11K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1102-F |
| A14R6 | 0757-0442 | 9 | 4 | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A14R7 | 0757-0465 | 6 | 1 | RESISTOR 100K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1003-F |
| A14R8 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A14R9 | 0898-3450 | 9 | 1 | RESISTOR 42.2K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-4222-F |
| A14R10 | 2100-2633 | 5 | 1 | RESISTOR-TMR 1K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR1K |
| A14R11 | 0898-0188 | | | RESISTOR 3.83K | | |
| A14R12 | 0757-0458 | 7 | 2 | RESISTOR 51.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A14R13 | 0757-0401 | 0 | 8 | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A14R14 | 0757-0460 | 1 | 1 | RESISTOR 81.9K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-8192-F |
| A14R15 | 0757-0458 | 7 | 1 | RESISTOR 51.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A14R16 | 0757-0180 | 2 | 1 | RESISTOR 31.6 1% .125W F TC=0+-100 | 28480 | 0757-0180 |
| A14R17 | 0757-0484 | 5 | 1 | RESISTOR 90.8K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-9092-F |
| A14R18 | 0898-3136 | 8 | 2 | RESISTOR 17.8K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1782-F |
| A14R19 | 0757-0123 | 3 | 1 | RESISTOR 34.8K 1% .125W F TC=0+-100 | 28480 | 0757-0123 |
| A14R20 | 0898-0083 | 8 | 2 | RESISTOR 1.98K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1981-F |
| A14R21 | 2100-2489 | 9 | 2 | RESISTOR-TMR 5K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR5K |
| A14R22 | 0898-3453 | 2 | 1 | RESISTOR 198K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1983-F |
| A14R23 | 2100-2514 | 1 | 1 | RESISTOR-TMR 20K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR20K |
| A14R24 | 0757-0274 | 5 | 3 | RESISTOR 1.21K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1211-F |
| A14R25 | 0757-0274 | 5 | | RESISTOR 1.21K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1211-F |
| A14R26 | 0757-0274 | 6 | | RESISTOR 1.21K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1211-F |
| A14R27 | 2100-2489 | 9 | | RESISTOR-TMR 5K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR5K |
| A14R28 | 0757-0346 | 2 | 14 | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R29 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R30 | 2100-2522 | 1 | 3 | RESISTOR-TMR 10K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR10K |
| A14R31 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R32 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R33 | 2100-2522 | 1 | | RESISTOR-TMR 10K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR10K |
| A14R34 | 2100-2521 | 0 | 1 | RESISTOR-TMR 2K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR2K |
| A14R35 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R36 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R37 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A14R38 | 0898-3151 | 7 | 1 | RESISTOR 2.87K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2871-F |
| A14R39 | 2100-2520 | 9 | 1 | RESISTOR-TMR 50 20% C SIDE-ADJ 1-TRN | 73138 | 82PAR50 |
| A14R40 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A14R41 | 0757-0290 | 5 | 1 | RESISTOR 6.19K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-6191-F |
| A14R42 | 0757-0200 | 7 | 1 | RESISTOR 5.62K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5621-F |
| A14R43 | 0757-0447 | 4 | 1 | RESISTOR 18.2K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1822-F |
| A14R44 | 0757-0420 | 3 | 1 | RESISTOR 750 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-751-F |
| A14R45 | 0898-3444 | 1 | 8 | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R46 | 0898-3156 | 2 | 1 | RESISTOR 14.7K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1472-F |
| A14R47 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R48 | 0898-3150 | 6 | 4 | RESISTOR 2.37K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2371-F |
| A14R49 | 0898-3132 | 4 | 1 | RESISTOR 261 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2610-F |
| A14R50 | 0757-0279 | 0 | 4 | RESISTOR 3.16K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3161-F |

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|---------------------------------------|----------|---------------------|
| A14R51 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 29480 | 0757-0346 |
| A14R52 | 0698-3444 | 1 | | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R53 | 0757-0444 | 1 | 6 | RESISTOR 12.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1212-F |
| A14R54 | 0757-0444 | 1 | | RESISTOR 12.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1212-F |
| A14R55 | 0757-0440 | 7 | 7 | RESISTOR 7.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-7501-F |
| A14R56 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A14R57 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R58 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 29480 | 0757-0346 |
| A14R59 | 0698-3150 | 6 | | RESISTOR 2.37K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2371-F |
| A14R60 | 0698-3444 | 1 | | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R61 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R62 | 0757-0444 | 1 | | RESISTOR 12.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1212-F |
| A14R63 | 0757-0444 | 1 | | RESISTOR 12.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1212-F |
| A14R64 | 0757-0440 | 7 | | RESISTOR 7.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-7501-F |
| A14R65 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A14R66 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R67 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 29480 | 0757-0346 |
| A14R68 | 0698-8958 | 2 | 1 | RESISTOR 511K 1% .125W F TC=0+-100 | 28480 | 0698-8958 |
| A14R69 | 2100-2892 | 6 | 1 | RESISTOR-TMR 1M 20% C SIDE-ADJ 1-TRN | 73138 | 82PAR1M |
| A14R70 | 0698-3444 | 1 | | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R71 | 0757-0279 | 0 | | RESISTOR 3.16K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3161-F |
| A14R72 | 0757-0444 | 1 | | RESISTOR 12.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1212-F |
| A14R73 | 0757-0444 | 1 | | RESISTOR 12.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1212-F |
| A14R74 | 0757-0440 | 1 | | RESISTOR 7.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-7501-F |
| A14R75 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A14R76 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R77 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 29480 | 0757-0346 |
| A14R78 | 0698-3150 | 6 | | RESISTOR 2.37K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2371-F |
| A14R79 | 0698-3444 | 1 | | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R80 | 0757-0280 | 2 | 8 | RESISTOR 13.3K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-1332-F |
| A14R81 | 0757-0280 | 2 | | RESISTOR 13.3K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-1332-F |
| A14R82 | 0757-0440 | 7 | | RESISTOR 7.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-7501-F |
| A14R83 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A14R84 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R85 | 0757-0279 | 0 | | RESISTOR 3.16K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3161-F |
| A14R86 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 29480 | 0757-0346 |
| A14R87 | 0698-3444 | 1 | | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R88 | 2100-2522 | 1 | | RESISTOR-TMR 10K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR10K |
| A14R89 | 0757-0440 | 7 | | RESISTOR 7.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-7501-F |
| A14R90 | 0757-0403 | 2 | 2 | RESISTOR 121 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-121R-F |
| A14R91 | 0757-0280 | 2 | | RESISTOR 13.3K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-1332-F |
| A14R92 | 0757-0280 | 2 | | RESISTOR 13.3K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-1332-F |
| A14R93 | 0698-3153 | 9 | 2 | RESISTOR 3.83K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3831-F |
| A14R94 | 0698-3150 | 6 | | RESISTOR 2.37K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2371-F |
| A14R95 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 29480 | 0757-0346 |
| A14R96 | 0698-3444 | 1 | | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R97 | 0757-0280 | 2 | | RESISTOR 13.3K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-1332-F |
| A14R98 | 0757-0280 | 2 | | RESISTOR 13.3K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-1332-F |
| A14R99 | 0757-0440 | 7 | | RESISTOR 7.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-7501-F |
| A14R100 | 0757-0403 | 2 | | RESISTOR 121 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-121R-F |
| A14R101 | 0698-3153 | 9 | | RESISTOR 3.83K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3831-F |
| A14R102 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 29480 | 0757-0346 |
| A14R103 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A14R104 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A14R105 | 0698-3444 | 1 | | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R106 | 0757-0417 | 8 | 1 | RESISTOR 562 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-562R-F |
| A14R107 | 0757-0199 | 3 | 1 | RESISTOR 21.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2152-F |
| A14R108 | 0698-3434 | 9 | 1 | RESISTOR 34.9 1% .125W F TC=0+-100 | 28480 | 0698-3434 |
| A14R109 | 0757-0400 | 9 | 1 | RESISTOR 90.9 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-909R-F |
| A14R110 | 0757-0418 | 9 | 2 | RESISTOR 619 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-619R-F |
| A14R111 | 0698-3440 | 7 | 1 | RESISTOR 196 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-196R-F |
| A14R112 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R113 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R114 | 0698-3138 | 8 | | RESISTOR 17.9K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1792-F |
| A14R115 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|--------|-----|--------------------------------------|----------|-------------------|
| A21 | 08590-60012 | 5 | 1 | RS-232 I/O BOARD ASSEMBLY | 28480 | 08590-60012 |
| A21C1 | 0160-4835 | 7 | 6 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28490 | 0160-4835 |
| A21C2 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28490 | 0160-4835 |
| A21C3 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28490 | 0160-4835 |
| A21C4 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28490 | 0160-4835 |
| A21C5 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28490 | 0160-4835 |
| A21C6 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28490 | 0160-4835 |
| A21C7 | 0180-0118 | 1 | 1 | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 1500685X903582 |
| A21J1 | 1252-1489 | 3 | 1 | CONN-POST TYPE .100-PIN-SPCG 40-CONT | 00779 | 103292-2 |
| A21J2 | 1252-1036 | 0 | 1 | CONN-POST TYPE .100-PIN-SPCG 26-CONT | 28480 | 1252-1036 |
| A21R1 | 0757-0438 | 3 | 3 | RESISTOR 5.11K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-S111-F |
| A21R2 | 0757-0438 | 3 | | RESISTOR 5.11K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-S111-F |
| A21R3 | 0757-0438 | 3 | | RESISTOR 5.11K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-S111-F |
| A21U1 | 1820-3823 | 0 | 1 | IC-ASYNCHRONOUS COMM.INTERFACE | 27014 | INS8250AN |
| A21U2 | 1820-3322 | 6 | 1 | IC DRVR DTL COMM EIA RS-232C QUAD | 04713 | MC1488P |
| A21U3 | 1820-1112 | 8 | 1 | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN74LS74AN |
| A21U4 | 1820-3321 | 6 | 1 | IC RCVR DTL COMM EIA RS-232C QUAD | 04713 | MC1489AP |
| A21U5 | 1820-1200 | 5 | 1 | IC INV TTL LS HEX | 01295 | SN74LS05N |
| A21U6 | 1820-2024 | 3 | 1 | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN74LS244N |
| A21U7 | 1820-1208 | 3 | 1 | IC GATE TTL LS OR QUAD 2-INP | 01295 | SN74LS32N |
| A21U8 | 1826-0300 | 8 | 1 | IC V RGLTR TO-39 | 07283 | 79M12HC |
| A22 | 08590-60019 | 2 | 1 | RS 232 CONNECTOR ASSY | 28480 | 08590-60019 |

See introduction to this section for ordering information
 *Indicates factory selected value

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|---------------------------------------|----------|-------------------|
| A23 | 08590-60013 | 6 | 1 | HP-1L I/O BOARD ASSEMBLY | 28480 | 08590-60013 |
| A23C1 | 0180-0374 | 3 | 1 | CAPACITOR-FXD 10UF+-10% 20VDC TA | 56289 | 150D106X902082 |
| A23C2 | 0160-4835 | 7 | 3 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A23C3 | 0160-4800 | 6 | 1 | CAPACITOR-FXD 120PF +-5% 100VDC CER | 28480 | 0160-4800 |
| A23C4 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A23C5 | 0160-4835 | 7 | | CAPACITOR-FXD 1.UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A23J1 | 1252-1469 | 3 | 1 | CONN-POST TYPE .100-PIN-SPCG 40-CONT | 00779 | 103292-2 |
| A23J2 | 1252-1287 | 3 | 1 | CONN-POST TYPE .100-PIN-SPCG 10-CONT | 28480 | 1252-1287 |
| A23L1 | 9100-1631 | 8 | 1 | INDUCTOR RF-CH-MLD 56UH 5% | 28480 | 9100-1631 |
| A23R1 | 0757-0442 | 9 | 1 | RESISTOR 10K 1% .125W F TC+0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A23U1 | 1L83-0003 | 8 | 1 | HP-1L CHIP | 28480 | 1L83-0003 |
| A23U2 | 1820-1208 | 3 | 1 | IC GATE TTL LS OR QUAD 2-INP | 01295 | SN74LS32N |
| A23U3 | 1820-2024 | 3 | 1 | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN74LS244M |
| A23U4 | 1810-0651 | 7 | 1 | NETWORK-RDC 10 PIN SIP; R1=R2=15K+-5% | 28480 | 1810-0651 |
| A23U5 | 9100-4226 | 3 | 1 | TRANSFORMER | 28480 | 9100-4226 |
| A24 | 08590-60020 | 5 | 1 | HP-1L CBL CONNECTOR ASSY | 28480 | 08590-60020 |
| A25 | 0955-0454 | 3 | 1 | YIG OSCILLATOR 2-4 GHz | 28480 | 0955-0454 |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|------------------------------|
| CHASSIS PARTS | | | | | | |
| | 08590-60010 | 3 | 1 | COVER ASSY INSTRUMENT | 28480 | 08590-60010 |
| | 08590-00004 | 9 | 1 | COVER INSTRUMENT | 28480 | 08590-00004 |
| | 08590-40002 | 1 | 2 | SPACER FOOT-REAR | 28480 | 08590-40002 |
| | 0900-0024 | 8 | 4 | O-RING .145-IN-ID .07-IN-XSECT-DIA SIL | 51833 | AS568-007 (SILICONE-60 DURO) |
| | 1460-2164 | 8 | 2 | SPRING COMPRESSION | 28480 | 1460-2164 |
| | 2190-0587 | 3 | 4 | WASHER-LK HLCL 5.0 MM 5.1-MM-ID | 28480 | 2190-0587 |
| | 5001-8728 | 4 | 2 | PLATE BACKUP | 28480 | 5001-8728 |
| | 5021-6332 | 4 | 1 | PLATE HANDLE | 28480 | 5021-6332 |
| | 5021-6343 | 7 | 2 | GEAR PING | 28480 | 5021-6343 |
| | 5021-6344 | 8 | 2 | SOCKET-GEAR | 28480 | 5021-6344 |
| | 5041-3937 | 1 | 2 | FOOT REAP | 28480 | 5041-3937 |
| | 5041-3990 | 6 | 1 | HANDLE | 28480 | 5041-3990 |
| | 5041-3991 | 7 | 2 | TRIM CAP-HANDLE | 28480 | 5041-3991 |
| | 08590-60031 | 8 | 1 | PAD ASSY-MATCHING 75 OHM | 28480 | 08590-60031 |
| | 08590-60080 | 8 | 1 | PAD ASSY-MATCHING | 28480 | 08590-60080 |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|---|----------|-----------------|
| | | | | CABLES (SEE FIGURE 3-2) | | |
| A3W1 | 08590-60034 | 1 | 1 | CABLE ASSY, ATTENUATOR | 28480 | 08590-60034 |
| A5W1 | 08590-60033 | 0 | 1 | CABLE ASSY, ANALOG POWER | 28480 | 08590-60033 |
| A6W1 | 08590-60035 | 2 | 1 | CABLE ASSY, YIG POWER | 28480 | 08590-60035 |
| A20W1 | 08590-60016 | 9 | 1 | CABLE ASSY, LINE POWER | 28480 | 08590-60016 |
| W1 | 08590-60024 | 9 | 1 | CABLE ASSY 1 LO OUTPUT | 28480 | 08590-60024 |
| W2 | 08590-60026 | 1 | 1 | CABLE ASSY, CAL OUTPUT | 28480 | 08590-60026 |
| W2 | 08590-60028 | 3 | 1 | CABLE ASSY, CAL OUT | 28480 | 08590-60028 |
| W3 | 08590-60065 | 8 | 1 | CABLE ASSY, PROBE POWER | 28480 | 08590-60065 |
| W4 | 08590-60023 | 8 | 1 | CABLE ASSY, RF INPUT | 28480 | 08590-60023 |
| W5 | 5061-9026 | 3 | 1 | WIRING ASSY, RPG | 28480 | 5061-9026 |
| W6 | 08590-60014 | 7 | 1 | CABLE ASSY, RIBBON 24C | 28480 | 08590-60014 |
| W7 | 08590-60021 | 6 | 1 | CABLE ASSY, VIDEO | 28480 | 08590-60021 |
| W8 | 08590-20151 | 9 | 1 | CABLE ASSY, YIG TO FIRST CONV | 28480 | 08590-20151 |
| W9 | 08590-20059 | 6 | 1 | CABLE ASSY, LPF TO 2ND CONV. | 28480 | 08590-20059 |
| W10 | 08590-20007 | 4 | 1 | CABLE ASSY, RF ATTEN - 1ST | 28480 | 08590-20007 |
| W11 | 08590-60022 | 7 | 1 | CABLE ASSY, DC POWER | 28480 | 08590-60022 |
| W12 | 8120-4823 | 7 | 36 | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W13 | 8120-4823 | 7 | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W14 | 8120-4823 | 7 | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W15 | 08590-60025 | 0 | 1 | CABLE ASSY, SECOND CONV-SEC. IF | 28480 | 08590-60025 |
| W16 | 08590-60027 | 2 | 1 | CABLE ASSY, 2ND IF TO 3RD MIXER | 28480 | 08590-60027 |
| W17 | | | | SEE A18, A21 & A23 | | |
| W18 | 8120-4823 | 7 | | P/O REMOTE I/O ASSYS CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W19 | 8120-4823 | 7 | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W20 | 8120-4823 | 7 | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W22 | 08590-20058 | 5 | 1 | CABLE ASSY, FIRST CONV TO LPF | 28480 | 08590-20058 |
| W23 | 08590-60041 | 0 | 1 | CABLE ASSY, INTENSITY POT | 28480 | 08590-60041 |
| W24 | 5062-0784 | 4 | 1 | CABLE ASSY, LINE SWITCH | 28480 | 5062-0784 |
| W25 | 08590-60017 | 0 | 1 | CABLE ASSY, LINE SELECT | 28480 | 08590-60017 |
| W26 | 08590-60037 | 4 | | CABLE ASSY, CRT INTENSITY | 28480 | 08590-60037 |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|--------|-----|--|----------|------------------------------|
| CHASSIS PARTS | | | | | | |
| | 08590-60010 | 3 | 1 | COVER ASSY INSTRUMENT | 28480 | 08590-60010 |
| | 08590-00004 | 9 | 1 | COVER INSTRUMENT | 28480 | 08590-00004 |
| | 08590-40002 | 1 | 2 | SPACER FOOT-REAR | 28480 | 08590-40002 |
| | 0900-0024 | 8 | 4 | O-RING .145-IN-ID .07-IN-XSECT-DIA SIL | 51633 | AS568-007 (SILICONE-60 DURO) |
| | 1460-2164 | 8 | 2 | SPRING COMPRESSION | 28480 | 1460-2164 |
| | 2190-0587 | 3 | 4 | WASHER-LK HLCL 5.0 MT 5.1-MM-ID | 28480 | 2190-0587 |
| | 5001-8728 | 4 | 2 | PLATE BACKUP | 28480 | 5001-8728 |
| | 5021-6332 | 4 | 1 | PLATE HANDLE | 28480 | 5021-6332 |
| | 5021-6343 | 7 | 2 | GEAR PING | 28480 | 5021-6343 |
| | 5021-6344 | 8 | 2 | SOCKET-GEAR | 28480 | 5021-6344 |
| | 5041-3937 | 1 | 2 | FOOT REAR | 28480 | 5041-3937 |
| | 5041-3990 | 8 | 1 | HANDLE | 28480 | 5041-3990 |
| | 5041-3991 | 7 | 2 | TRIM CAP-HANDLE | 28480 | 5041-3991 |
| | 08590-60031 | 9 | 1 | PAD ASSY-MATCHING 75 OMI | 28480 | 08590-60031 |
| | 08590-60080 | 8 | 1 | PAD ASSY-MATCHING | 28480 | 08590-60080 |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C | D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|---|---|-----|---|----------|-----------------|
| | | | | | CABLES (SEE FIGURE 3-2) | | |
| A3W1 | 08590-60034 | 1 | | 1 | CABLE ASSY, ATTENUATOR | 28480 | 08590-60034 |
| A5W1 | 08590-60033 | 0 | | 1 | CABLE ASSY, ANALOG POWER | 28480 | 08590-60033 |
| A6W1 | 08590-60035 | 2 | | 1 | CABLE ASSY, YIG POWER | 28480 | 08590-60035 |
| A20W1 | 08590-60016 | 9 | | 1 | CABLE ASSY, LINE POWER | 28480 | 08590-60016 |
| W1 | 08590-60024 | 9 | | 1 | CABLE ASSY 1 LO OUTPUT | 28480 | 08590-60024 |
| W2 | 08590-60026 | 1 | | 1 | CABLE ASSY, CAL OUTPUT | 28480 | 08590-60026 |
| W2 | 08590-60028 | 3 | | 1 | CABLE ASSY, CAL OUT | 28480 | 08590-60028 |
| W3 | 08590-60065 | 8 | | 1 | CABLE ASSY, PROBE POWER | 28480 | 08590-60065 |
| W4 | *08590-60023 | 8 | | 1 | CABLE ASSY, RF INPUT* | 28480 | 08590-60023 |
| W5 | 5061-9026 | 3 | | 1 | WIRING ASSY, RPG | 28480 | 5061-9026 |
| W6 | 08590-60014 | 7 | | 1 | CABLE ASSY, RIBBON 24C | 28480 | 08590-60014 |
| W7 | 08590-60021 | 6 | | 1 | CABLE ASSY, VIDEO | 28480 | 08590-60021 |
| W8 | 08590-20151 | 9 | | 1 | CABLE ASSY, ISOLATOR TO FIRST CONV | 28480 | 08590-20151 |
| W9 | 08590-20059 | 6 | | 1 | CABLE ASSY, LPF TO 2ND CONV. | 28480 | 08590-20059 |
| W10 | 08590-20007 | 4 | | 1 | CABLE ASSY, RF ATTEN - 1ST | 28480 | 08590-20007 |
| W11 | 08590-60022 | 7 | | 1 | CABLE ASSY, DC POWER | 28480 | 08590-60022 |
| W12 | 8120-4823 | 7 | | 36 | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W13 | 8120-4823 | 7 | | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W14 | 8120-4823 | 7 | | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W15 | 08590-60015 | 8 | | 1 | CABLE ASSY, SECOND CONV-SEC. IF | 28480 | 08590-60015 |
| W16 | 08590-60027 | 2 | | 1 | CABLE ASSY, 2ND IF TO 3RD MIXER | 28480 | 08590-60027 |
| W17 | | | | | SEE A18, A21 & A23 P/O REMOTE I/O ASSYS | | |
| W18 | 8120-4823 | 7 | | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W19 | 8120-4823 | 7 | | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W20 | 8120-4823 | 7 | | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W22 | 08590-20058 | 5 | | 1 | CABLE ASSY, FIRST CONV TO LPF | 28480 | 08590-20058 |
| W23 | 08590-60041 | 0 | | 1 | CABLE ASSY, INTENSITY POT | 28480 | 08590-60041 |
| W24 | 5062-1998 | 4 | | 1 | CABLE ASSY, LINE SWITCH | 28480 | 5062-1998 |
| W25 | 08590-60017 | 0 | | 1 | CABLE ASSY, LINE SELECT | 28480 | 08590-60017 |
| W26 | 08590-60037 | 4 | | | CABLE ASSY, CRT INTENSITY | | |
| | | | | | * NOTE: OPTIONS H07 AND H51 RF INPUT CABLE ASSEMBLY IS HP PART NUMBER 08590-20156 | | |

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|--------|-----|--|----------|-------------------------------|
| CHASSIS PARTS | | | | | | |
| | 08590-60010 | 3 | 1 | COVER ASSY INSTRUMENT | 28480 | 08590-60010 |
| | 08590-00004 | 9 | 1 | COVER INSTRUMENT | 28480 | 08590-00004 |
| | 08590-40002 | 1 | 2 | SPACER FOOT-REAR | 28480 | 08590-40002 |
| | 0900-0024 | 6 | 4 | O-RING .145-IN-ID .07-IN-XSECT-DIA SIL | 51633 | ASS568-007 (SILICONE-60 DURO) |
| | 1460-2164 | 8 | 2 | SPRING COMPRESSION | 29480 | 1460-2164 |
| | 2190-0587 | 3 | 4 | WASHER-LK HLCL 5.0 MM 5.1-MM-ID | 29480 | 2190-0587 |
| | 5001-8728 | 4 | 2 | PLATE BACKUP | 28480 | 5001-8728 |
| | 5021-6332 | 4 | 1 | PLATE HANDLE | 28480 | 5021-6332 |
| | 5021-6343 | 7 | 2 | GEAR PING | 28480 | 5021-6343 |
| | 5021-6344 | 8 | 2 | SOCKET-GEAR | 28480 | 5021-6344 |
| | 5041-3937 | 1 | 2 | FOOT REAP | 28480 | 5041-3937 |
| | 5041-3990 | 6 | 1 | HANDLE | 28480 | 5041-3990 |
| | 5041-3991 | 7 | 2 | TRIM CAP-HANDLE | 28480 | 5041-3991 |
| | 08590-60031 | 8 | 1 | PAD ASSY-MATCHING 75 OHM | 28480 | 08590-60031 |
| | 08590-60080 | 9 | 1 | PAD ASSY-MATCHING | 28480 | 08590-60080 |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|---|----------|------------------|
| | | | | | CABLES | (SEE FIGURE 3-2) |
| | | | | CABLES (SEE FIGURE 3-2) | | |
| A3W1 | 08590-60034 | 1 | 1 | CABLE ASSY, ATTENUATOR | 28480 | 08590-60034 |
| ASW1 | 08590-60033 | 0 | 1 | CABLE ASSY, ANALOG POWER | 28480 | 08590-60033 |
| AGW1 | 08590-60035 | 2 | 1 | CABLE ASSY, YIG POWER | 28480 | 08590-60035 |
| A20W1 | 08590-60016 | 9 | 1 | CABLE ASSY, LINE POWER | 28480 | 08590-60016 |
| W1 | 08590-60024 | 9 | 1 | CABLE ASSY 1 LO OUTPUT | 28480 | 08590-60024 |
| W2 | 08590-60026 | 1 | 1 | CABLE ASSY, CAL OUTPUT | 28480 | 08590-60026 |
| W2 | 08590-60028 | 3 | 1 | CABLE ASSY, CAL OUT | 28480 | 08590-60028 |
| W3 | 08590-60065 | 8 | 1 | CABLE ASSY, PROBE POWER | 28480 | 08590-60065 |
| W4 | 08590-60023 | 8 | 1 | CABLE ASSY, RF INPUT* | 28480 | 08590-60023 |
| W5 | 5061-9026 | 3 | 1 | WIRING ASSY, RPG | 28480 | 5061-9026 |
| W6 | 08590-60014 | 7 | 1 | CABLE ASSY, RIBBON 24C | 28480 | 08590-60014 |
| W7 | 08590-60021 | 6 | 1 | CABLE ASSY, VIDEO | 28480 | 08590-60021 |
| W8 | 08590-20057 | 4 | 1 | CABLE ASSY, ISOLATOR TO FIRST CONV | 28480 | 08590-20057 |
| W9 | 08590-20059 | 6 | 1 | CABLE ASSY, LPF TO 2ND CONV. | 28480 | 08590-20059 |
| W10 | 08590-20007 | 4 | 1 | CABLE ASSY, RF ATTEN - 1ST | 28480 | 08590-20007 |
| W11 | 08590-60022 | 7 | 1 | CABLE ASSY, DC POWER | 28480 | 08590-60022 |
| W12 | 8120-4823 | 7 | 36 | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W13 | 8120-4823 | 7 | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W14 | 8120-4823 | 7 | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W15 | 08590-60015 | 8 | 1 | CABLE ASSY, SECOND CONV-SEC. IF | 28480 | 08590-60015 |
| W16 | 08590-60027 | 2 | 1 | CABLE ASSY, 2ND IF TO 3RD MIXER | 28480 | 08590-60027 |
| W17 | | | | SEE A18, A21 & A23 P/O REMOTE I/O ASSYS | | |
| W18 | 8120-4823 | 7 | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W19 | 8120-4823 | 7 | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W20 | 8120-4823 | 7 | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| W21 | 08590-20056 | 3 | 1 | CABLE ASSY, YIG TO ISOLATOR | 28480 | 08590-20056 |
| W22 | 08590-20058 | 5 | 1 | CABLE ASSY, FIRST CONV TO LPF | 28480 | 08590-20058 |
| W23 | 08590-60041 | 0 | 1 | CABLE ASSY, INTENSITY POT | 28480 | 08590-60041 |
| W24 | 5062-0784 | 4 | 1 | CABLE ASSY, LINE SWITCH | 28480 | 5062-0784 |
| W25 | 08590-60017 | 0 | 1 | CABLE ASSY, LINE SELECT | 28480 | 08590-60017 |
| W26 | 08590-60037 | 4 | | CABLE ASSY, CRT INTENSITY | | |
| | | | | * NOTE: OPTIONS H07 AND H51 RF INPUT CABLE ASSEMBLY IS HP PART NUMBER 08590-20156 | | |

See introduction to this section for ordering information.
* Indicates factory selected value.



**HP 8590A Portable RF Spectrum Analyzer
Support Manual
Volume II**

(Including Options 001, 021, 022,
023, 030, 040, 908, and 915)

SERIAL NUMBERS

This support manual applies directly to instruments serial prefixed 2839A. The Manual Backdating Supplement covers instruments serial prefixed 2618A through 2837A.

For additional important information about serial numbers, see INSTRUMENTS COVERED BY MANUAL in the Installation Manual.

COPYRIGHT © 1988 by Hewlett-Packard Company
1212 Valley House Drive, Rohnert Park, CA 94928-4999

)

)

)

LIST OF FIGURES

| | | |
|----------------------|--|-------|
| <i>Figure 5-31.</i> | <i>Log Amplifier Block Diagram</i> | 5-81 |
| <i>Figure 5-32.</i> | <i>Log Mode Operation, Simplified Schematic</i> | 5-83 |
| <i>Figure 5-33.</i> | <i>Unity Gain Operation in Linear Mode, Simplified Schematic</i> | 5-85 |
| <i>Figure 5-34.</i> | <i>10 dB Gain Operation in Linear Mode, Simplified Schematic</i> | 5-85 |
| <i>Figure 5-35.</i> | <i>Log Amp Component Locations</i> | 5-87 |
| <i>Figure 5-36.</i> | <i>Log Amplifier Assembly (A14) Schematic Diagram</i> | 5-89 |
| <i>Figure 5-37.</i> | <i>IF Motherboard Component Locations</i> | 5-94 |
| <i>Figure 5-38.</i> | <i>IF Motherboard Assembly (A15) Schematic Diagram</i> | 5-95 |
| <i>Figure 5-39.</i> | <i>Processor A/D Block Diagram</i> | 5-107 |
| <i>Figure 5-40.</i> | <i>Processor A/D Component Locations</i> | 5-109 |
| <i>Figure 5-40.1</i> | <i>A1 Keyboard Assembly Schematic</i> | 5-110 |
| <i>Figure 5-41.</i> | <i>Processor A/D Assembly (A16) Schematic Diagram</i> | 5-111 |
| <i>Figure 5-42.</i> | <i>Video Board Block Diagram</i> | 5-123 |
| <i>Figure 5-43.</i> | <i>Video Board Component Locations</i> | 5-125 |
| <i>Figure 5-44.</i> | <i>Video Assembly (A17) Schematic Diagram</i> | 5-127 |
| <i>Figure 5-45.</i> | <i>HP-IB I/O Option Block Diagram</i> | 5-130 |
| <i>Figure 5-46.</i> | <i>RS-232C I/O Option Block Diagram</i> | 5-132 |
| <i>Figure 5-47.</i> | <i>HP-IL I/O Option Block Diagram</i> | 5-134 |
| <i>Figure 5-48.</i> | <i>HP-IB I/O Component Locations</i> | 5-135 |
| <i>Figure 5-49.</i> | <i>HP-IB I/O Option Assembly (A18) Schematic Diagram</i> | 5-137 |
| <i>Figure 5-50.</i> | <i>RS-232C I/O Option Component Locations</i> | 5-139 |
| <i>Figure 5-51.</i> | <i>RS-232C I/O Option Assembly (A21) Schematic Diagram</i> | 5-141 |
| <i>Figure 5-52.</i> | <i>HP-IL I/O Options Component Location Diagram</i> | 5-143 |
| <i>Figure 5-53.</i> | <i>HP-IL I/O Option (A23) Schematic Diagram</i> | 5-145 |

LIST OF TABLES

| | | |
|-------------------|---|-------|
| <i>Table 5-3.</i> | <i>Correspondence of RAM and CRTC Addresses</i> | 5-119 |
|-------------------|---|-------|

SAFETY SYMBOLS

The following safety symbols are used throughout this manual and in the instrument. Familiarize yourself with each of the symbols and its meaning before operating this instrument.



Instruction manual symbol. The instrument will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect the instrument against damage. Location of pertinent information within the manual is indicated by use of this symbol in the table of contents.



Indicates dangerous voltages are present. Be extremely careful.



The CAUTION sign denotes a hazard. It calls attention to a procedure that, if not correctly performed or adhered to, could result in damage to or destruction of the instrument. Do not proceed beyond a CAUTION sign until the indicated conditions are fully understood and met.



WARNING

The WARNING sign denotes a hazard. It calls attention to a procedure that, if not correctly performed or adhered to, could result in injury or loss of life. Do not proceed beyond a WARNING sign until the indicated conditions are fully understood and met.

GENERAL SAFETY CONSIDERATIONS



WARNING

BEFORE THIS INSTRUMENT IS SWITCHED ON, make sure it has been properly grounded through the protective conductor of the ac power cable to a socket outlet provided with the protective earth contact. Any interruption of the protective (grounding) conductor, inside or outside the instrument, or disconnection of the protective earth terminal, can result in personal injury.



WARNING

There are voltages at many points in the instrument that can, if contacted, cause personal injury. Be extremely careful! Any adjustments or service procedures that require operation of the instrument with protective covers removed should be performed only by trained service personnel.

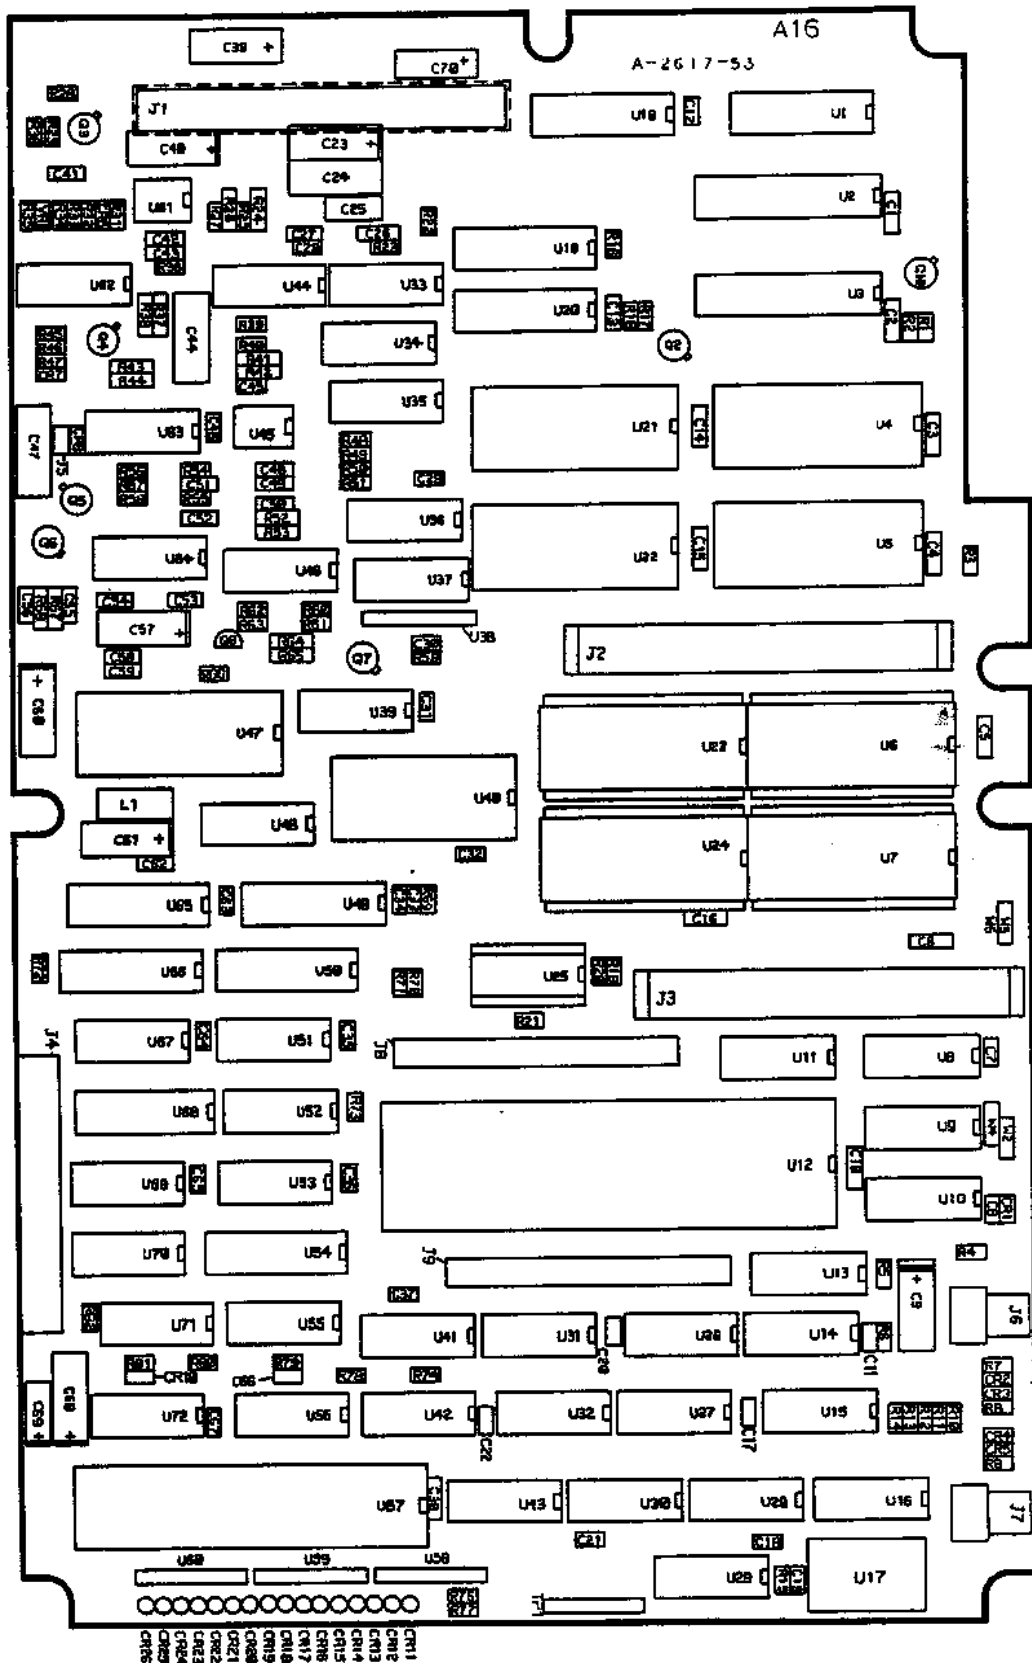


Figure 5-40. Processor A/D Component Locations

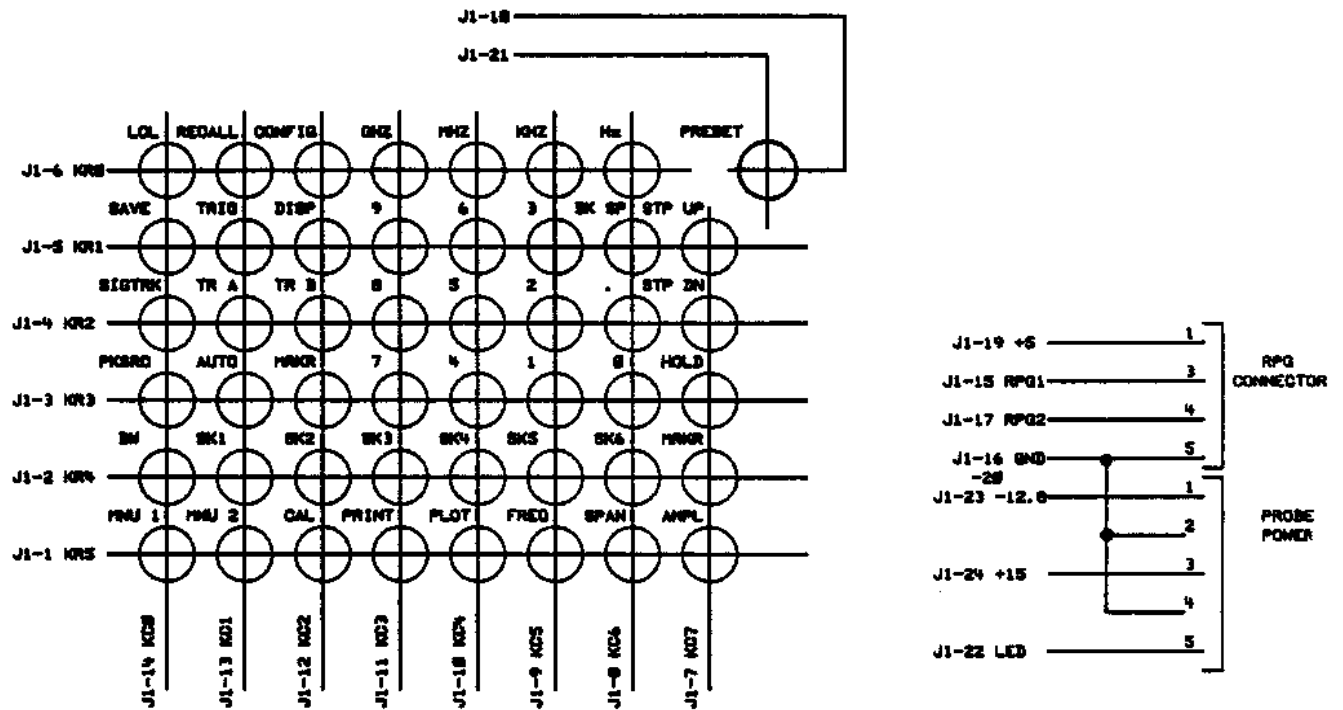


Figure 5-40.1 A1 Keyboard Assembly Schematic

CHAPTER 6

MANUAL BACKDATING CHANGES

6-1. INTRODUCTION

6-2. This manual has been written for and applies directly to instruments with serial numbers prefixed 2737A. Earlier versions of the instrument (serial number prefixes lower than the one indicated) may be slightly different in design or appearance. The purpose of this section of the manual is to document these differences. With the information provided in this section, this manual can be corrected so it applies to instruments with serial numbers prefixed 2618A through 2816A. If your instrument is in this range, use the pages in this section to replace the corresponding pages in Chapters 1 through 5.

Serial Prefix or Firmware Version

Check the serial prefix or firmware version information on the pages. If there are several versions of a page, select the version that applies to your instrument. For example, your instrument has a serial prefix of 2825A, and the supplement has two versions of one page: *Serial Prefix 2731A and Above, and Serial Prefix 2829A and Below*. In this example, *Serial Prefix 2829A and Below* applies to your instrument.

Inserting the Replacement Pages

After you have selected applicable pages, discard each page for which you have a different version. Insert the version of the page that applies to your instrument.

Each replacement page will have the exact page number as the discarded version

Later versions of the instrument (serial number prefixes higher than the one indicated on the title page) are documented in Manual Updating supplements. Complimentary copies of relevant supplements can be obtained from your nearest Hewlett-Packard office.

)

)

)



HP 8590A Portable RF Spectrum Analyzer Support Manual Volume I

(Including Options 001, 021, 022,
023, 030, 040, 908, and 915)

SERIAL NUMBERS

This manual applies directly to instruments serial prefixed 2837A. The Manual Backdating Supplement covers instruments serial prefixed 2618A through 2816A.

For additional important information about serial numbers, see **INSTRUMENTS COVERED BY MANUAL** in the Installation Manual.

**COPYRIGHT © 1988 by Hewlett-Packard Company
1212 Valley House Drive, Rohnert Park, CA 94928-4999**

)

)

)

HP 8590A Documentation Description

Manuals shipped with your Instrument:

Installation Manual, HP Part Number 08590-90003

- Tells you how to install the spectrum analyzer.
- Tells you what to do in case of a failure.

Operating Manual, HP Part Number 08590-90005

- Tells you how to make measurements with your spectrum analyzer.
- Describes spectrum analyzer features.

Options:

Support Manual (Option 915), HP Part Number 08590-90096

(Option includes extra copy of *Installation Manual*, HP Part Number 08590-90003)

- Describes troubleshooting and repair of the spectrum analyzer.

Programming Manuals, HP Part Numbers:

HP-IB 08590-90011 (Option 021)
HP-IL 08590-90013 (Option 022)
RS-232 08590-90015 (Option 023)

- Describes spectrum analyzer operation via a remote controller (computer).

How to Use This Manual

The support package (Option 915) for the Hewlett-Packard 8590A Spectrum Analyzer comprises this two volume Support Manual and the accompanying documentation package. The Support Manual references instrument specifications and operational tests described in the Installation Manual.

You will use the support manual, which is designed for service personnel who have a basic understanding of spectrum analyzer theory and operation, for:

- Performance tests
- Adjustment procedures
- Replaceable parts
- Troubleshooting and repairs

In Volume I, to verify proper performance and calibration of the analyzer, refer to the performance tests in Chapter 1. Calibration adjustments are described in Chapter 2. Part numbers for all replaceable parts are listed in Chapter 3. Chapter 4 provides troubleshooting hints and repair information. Descriptions of major assemblies in the analyzer are presented in Chapter 5; assemblies A3 through A13 are in Volume I.

Chapter 5 continues in Volume II, with descriptions of assemblies A14 through A24. Chapter 6, Manual Backdating, covers additional information for instruments prefixed below 2837A, and provides a convenient archive for manual pages replaced by future Manual Updating supplements. Appendix A provides monitor servicing instructions, and Appendix B discusses using the analyzer with the HP 82913A monitor.

A Table of Contents in each volume directs you to particular topics.

TABLE OF CONTENTS

| | |
|---|-----|
| HP 8590A Documentation Description | iii |
| How to Use This Manual | iv |
| Safety Symbols | ix |
| General Safety Considerations | ix |
| Electrostatic Discharge Information | xi |

Volume I

| | |
|--|------------|
| 1. Performance Verification | 1-1 |
| Introduction | 1-1 |
| Sweep Time Accuracy Test | 1-6 |
| Noise Sideband Test | 1-9 |
| Spurious Response Test | 1-11 |
| Residual Response Test | 1-16 |
| Reference Level Accuracy Test | 1-17 |
| Scale Fidelity Test | 1-20 |
| Frequency Drift Test | 1-24 |
| Resolution Bandwidth Switching Test | 1-26 |
| Gain Compression Test | 1-28 |
| 2. Adjustments | 2-1 |
| Introduction | 2-1 |
| Second Converter LO and Bandpass Adjustments | 2-3 |
| Third Converter LO and CAL Output Adjustments | 2-6 |
| Second IF Bandpass Amplifier and Bandpass Filter Adjustments | 2-8 |
| Step Gain Assembly IF Gain Adjustment | 2-10 |
| Step Amplifier Gain Adjustment | 2-12 |
| Log Amplifier Log and Linear Adjustments | 2-15 |
| Crystal and LC Bandwidth Filter Adjustments | 2-19 |
| 3 dB Bandwidth Check | 2-26 |
| 3. Replaceable Parts | 3-1 |
| Introduction | 3-1 |

| | |
|--|------------|
| 4. Troubleshooting | 4-1 |
| Introduction | 4-1 |
| Understanding Error Messages | 4-4 |
| Troubleshooting from the Front Panel | 4-7 |
| Locating RF/IF Problems | 4-12 |
| Troubleshooting a Dead Analyzer | 4-15 |
| Calibration Data Problems | 4-17 |
| | |
| 5. Assembly Descriptions | 5-1 |
| Introduction | 5-1 |
| Overview | 5-2 |
| Attenuator Assembly A3 | 5-9 |
| First Converter Assembly A4 | 5-9 |
| Second Converter Assembly A5 | 5-11 |
| First Local Oscillator A6 | 5-13 |
| Analog Interface A7 | 5-19 |
| Third Converter Assembly A9 | 5-51 |
| Second IF Assembly A10 | 5-54 |
| First and Second Bandwidth Filters A11 and A13 | 5-63 |
| Step Gain Amplifier Assembly A12 | 5-75 |

Volume II

| | |
|--|-------------|
| 5. Assembly Descriptions (cont'd) | 5-81 |
| 6. Manual Backdating | 6-1 |
| Appendix A | A-1 |
| Appendix B | B-1 |

LIST OF FIGURES

| | | |
|-------------------|---|------|
| <i>Figure 1-1</i> | <i>Sweep Time Accuracy Setup</i> | 1-7 |
| <i>Figure 1-2</i> | <i>Noise Sideband Test Setup</i> | 1-10 |
| <i>Figure 1-3</i> | <i>Spurious Response – Second Harmonic Distortion Test Setup</i> | 1-12 |
| <i>Figure 1-4</i> | <i>Spurious Response – Third-order Intermodulation Distortion</i> | 1-14 |
| <i>Figure 1-5</i> | <i>Spurious Response – Intermodulation Distortion Products</i> | 1-15 |
| <i>Figure 1-6</i> | <i>Reference Level Accuracy Test Setup</i> | 1-18 |
| <i>Figure 1-7</i> | <i>Scale Fidelity Test Setup</i> | 1-21 |
| <i>Figure 1-8</i> | <i>Frequency Drift Test Setup</i> | 1-25 |
| <i>Figure 1-9</i> | <i>Gain Compression Test Setup</i> | 1-30 |
| <i>Figure 2-1</i> | <i>Second Converter LO and Bandpass Adjustment</i> | 2-4 |
| <i>Figure 2-2</i> | <i>Third Converter LO and CAL Output Adjustment</i> | 2-7 |
| <i>Figure 2-3</i> | <i>Second IF Bandpass and Bandpass Filter Adjustment</i> | 2-9 |
| <i>Figure 2-4</i> | <i>Step Gain Assembly RF Gain Adjustment Test Setup</i> | 2-11 |
| <i>Figure 2-5</i> | <i>Step Amplifier Gain Adjustment Test Setup</i> | 2-13 |
| <i>Figure 2-6</i> | <i>Log Amplifier Log and Linear Adjustment</i> | 2-16 |
| <i>Figure 2-7</i> | <i>Crystal Short Configuration</i> | 2-19 |
| <i>Figure 2-8</i> | <i>Crystal and LC Bandwidth Filter Adjustments</i> | 2-20 |
| <i>Figure 2-9</i> | <i>Adjusting Crystal Symmetry and Crystal Centering</i> | 2-21 |
| <i>Figure 3-1</i> | <i>Main IPB</i> | 3-43 |
| <i>Figure 3-2</i> | <i>Cabling Diagram</i> | 3-45 |
| <i>Figure 3-3</i> | <i>Front Panel Assembly</i> | 3-47 |
| <i>Figure 3-4</i> | <i>Rear Panel Assembly</i> | 3-49 |
| <i>Figure 3-5</i> | <i>RF Section IPB</i> | 3-51 |
| <i>Figure 4-1</i> | <i>Normal Oscilloscope or CRT and CAL Data Displays</i> | 4-9 |
| <i>Figure 4-2</i> | <i>Displays of Residual FM</i> | 4-14 |
| <i>Figure 4-3</i> | <i>Explanation of Calibration Data Displays</i> | 4-20 |
| <i>Figure 4-4</i> | <i>Troubleshooting Block Diagram</i> | 4-25 |
| <i>Figure 5-1</i> | <i>Analyzer Simplified Block Diagram</i> | 5-7 |
| <i>Figure 5-2</i> | <i>First Converter Block Diagram</i> | 5-10 |
| <i>Figure 5-3</i> | <i>Second Converter Block Diagram</i> | 5-12 |
| <i>Figure 5-4</i> | <i>First Converter (A4) Component Locations</i> | 5-14 |
| <i>Figure 5-5</i> | <i>Second Converter Component Locations</i> | 5-15 |
| <i>Figure 5-6</i> | <i>RF Sections Schematic</i> | 5-17 |
| <i>Figure 5-7</i> | <i>Main Coil Driver Simplified Schematics</i> | 5-21 |
| <i>Figure 5-8</i> | <i>Analog Interface (A7) Block Diagram</i> | 5-44 |
| <i>Figure 5-9</i> | <i>Analog Interface (A7) Component Locations</i> | 5-46 |

| | | |
|-----------------------|---|------|
| <i>Figure 5-10.</i> | <i>Analog Interface Assembly (A7) Schematic Diagram</i> | 5-47 |
| <i>Figure 5-11.</i> | <i>Third Converter Block Diagram</i> | 5-51 |
| <i>Figure 5-12.</i> | <i>Second IF Block Diagram</i> | 5-54 |
| <i>Figure 5-13.</i> | <i>Third Converter, Second IF Component Locations</i> | 5-56 |
| <i>Figure 5-14.</i> | <i>Third converter (A9)</i> | 5-57 |
| <i>Figure 5-14.1.</i> | <i>Third Converter (A9), Option 001</i> | 5-59 |
| <i>Figure 5-14.2.</i> | <i>Second IF (A10) Assemblies Diagram</i> | 5-61 |
| <i>Figure 5-15.</i> | <i>Bandwidth Filter Block Diagram</i> | 5-63 |
| <i>Figure 5-16.</i> | <i>10 dB Input Buffer Amplifier Gain Model</i> | 5-64 |
| <i>Figure 5-17.</i> | <i>DC Bias Path During Crystal Pole Operation</i> | 5-65 |
| <i>Figure 5-18.</i> | <i>DC Bias Path During LC Pole Operation</i> | 5-65 |
| <i>Figure 5-19.</i> | <i>10 dB Input Buffer During Crystal Pole Operation</i> | 5-67 |
| <i>Figure 5-20.</i> | <i>Crystal Model</i> | 5-67 |
| <i>Figure 5-21.</i> | <i>First Crystal Pole, Simplified Schematic</i> | 5-67 |
| <i>Figure 5-22.</i> | <i>Compensation Amplifier</i> | 5-68 |
| <i>Figure 5-23.</i> | <i>LC Pole Model</i> | 5-69 |
| <i>Figure 5-24.</i> | <i>First LC Pole, Simplified Schematic</i> | 5-70 |
| <i>Figure 5-25.</i> | <i>Bandwidth Filter Filter Component Locations</i> | 5-72 |
| <i>Figure 5-26.</i> | <i>Bandwidth Filter Assembly (A11, A13) Schematic Diagram</i> | 5-73 |
| <i>Figure 5-27.</i> | <i>Step Gain Amplifier Block Diagram</i> | 5-75 |
| <i>Figure 5-28.</i> | <i>Equivalent Circuit</i> | 5-76 |
| <i>Figure 5-29.</i> | <i>Step Gain Amplifier Component Locations</i> | 5-77 |
| <i>Figure 5-30.</i> | <i>Step Gain Amplifier Assembly (A12) Schematic Diagram</i> | 5-79 |

LIST OF TABLES

| | | |
|-------------------|---|------|
| <i>Table 1-1.</i> | <i>HP 8590A Spectrum Analyzer Performance Tests</i> | 1-1 |
| <i>Table 1-2.</i> | <i>Recommended Test Equipment</i> | 1-3 |
| <i>Table 1-3.</i> | <i>Sweep Time Accuracy Settings</i> | 1-8 |
| <i>Table 1-4.</i> | <i>Reference Level Accuracy Settings</i> | 1-19 |
| <i>Table 1-5.</i> | <i>Log Scale Fidelity Test Settings</i> | 1-23 |
| <i>Table 1-6.</i> | <i>Linear Scale Fidelity Test Settings</i> | 1-23 |
| <i>Table 1-7.</i> | <i>Resolution Bandwidth Switching Test Record</i> | 1-27 |
| <i>Table 2-1.</i> | <i>HP 8590A Spectrum Analyzer Adjustments</i> | 2-1 |
| <i>Table 2-2.</i> | <i>Reference Level Control Check</i> | 2-14 |
| <i>Table 2-3.</i> | <i>Log Fidelity Check</i> | 2-17 |
| <i>Table 2-4.</i> | <i>Linear Gain Check</i> | 2-18 |
| <i>Table 3-1.</i> | <i>Reference Designations and Abbreviations</i> | 3-2 |
| <i>Table 3-2.</i> | <i>Manufacturers Code List</i> | 3-4 |
| <i>Table 3-3.</i> | <i>Replaceable Parts</i> | 3-5 |
| <i>Table 4-1.</i> | <i>Spectrum Analyzer Hardware Error Message Definitions</i> | 4-4 |
| <i>Table 4-2.</i> | <i>Failure Codes for 4-Digit Segment</i> | 4-5 |
| <i>Table 4-3.</i> | <i>Reference Level Control States</i> | 4-10 |
| <i>Table 4-4.</i> | <i>DC Power Supply Continuity Test Points on IF Motherboard A15</i> | 4-16 |
| <i>Table 4-5.</i> | <i>Firmware History</i> | 4-24 |
| <i>Table 5-1.</i> | <i>Cost-effective Component-level Troubleshooting Times</i> | 5-4 |
| <i>Table 5-2.</i> | <i>Spectrum Analyzer Internal Assemblies</i> | 5-5 |

SAFETY SYMBOLS

The following safety symbols are used throughout this manual and in the instrument. Familiarize yourself with each of the symbols and its meaning before operating this instrument.



Instruction manual symbol. The instrument will be marked with this symbol when it is necessary for the user to refer to the instruction manual in order to protect the instrument against damage. Location of pertinent information within the manual is indicated by use of this symbol in the table of contents.



Indicates dangerous voltages are present. Be extremely careful.



The CAUTION sign denotes a hazard. It calls attention to a procedure that, if not correctly performed or adhered to, could result in damage to or destruction of the instrument. Do not proceed beyond a CAUTION sign until the indicated conditions are fully understood and met.



The WARNING sign denotes a hazard. It calls attentions to a procedure that, if not correctly performed or adhered to, could result in injury or loss of life. Do not proceed beyond a WARNING sign until the indicated conditions are fully understood and met.

GENERAL SAFETY CONSIDERATIONS

WARNING

BEFORE THIS INSTRUMENT IS SWITCHED ON, make sure it has been properly grounded through the protective conductor of the ac power cable to a socket outlet provided with the protective earth contact. Any interruption of the protective (grounding) conductor, inside or outside the instrument, or disconnection of the protective earth terminal, can result in personal injury.

WARNING

There are voltages at many points in the instrument that can, if contacted, cause personal injury. Be extremely careful! Any adjustments or service procedures that require operation of the instrument with protective covers removed should be performed only by trained service personnel.

CAUTION

BEFORE THIS INSTRUMENT IS SWITCHED ON, make sure its primary power circuitry has been adapted to the voltage of the ac power source. Failure to set the ac power input to the correct voltage could cause damage to the instrument when the ac power cable is plugged in.


ELECTROSTATIC DISCHARGE

Electrostatic discharge (ESD) can damage or destroy electronic components. Therefore, all work performed on assemblies consisting of electronic components should be done at a static-safe work station.

Shown below is an example of a static-safe work station, using two types of ESD protection:

- conductive table mat and wrist-strap combination
- conductive floor mat and heel-strap combination

These methods may be used together or separately. (A list of static-safe accessories is given on the next page.)

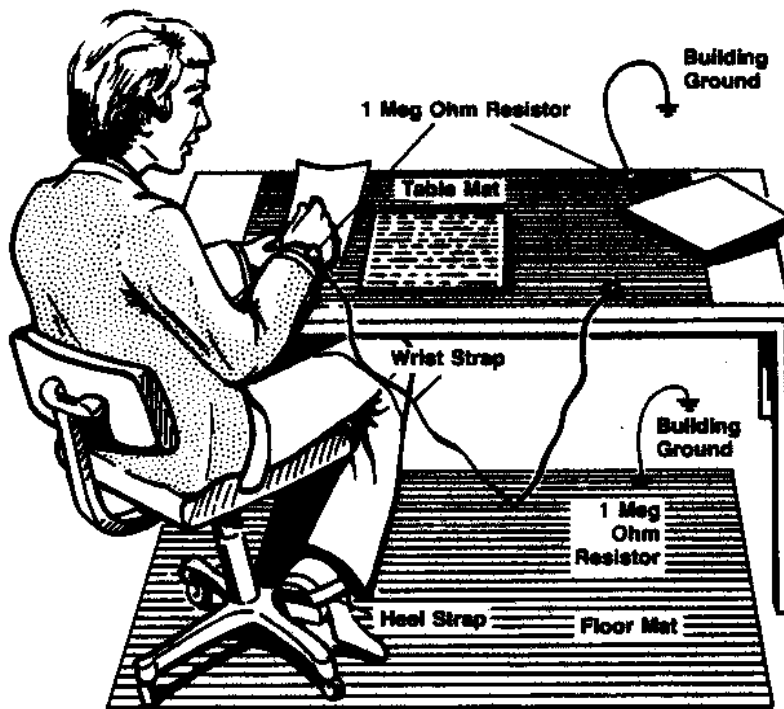

Example of the Static-safe Work Station

Reducing Damage Caused by ESD

The following suggestions may help reduce ESD damage that occurs during testing and servicing operations.

- Before connecting any coaxial cable to an analyzer connector for the first time each day, momentarily ground the center and outer conductors of the cable.
- Personnel should be grounded with a resistor-isolated wrist strap before touching the center pin of any connector and before removing any assembly from the unit.
- Be sure all instruments are properly earth-grounded to prevent buildup of static charge.

Static-safe Accessories

Static-safe accessories can be purchased from Hewlett-Packard by using the HP part numbers listed below.

Static-safe Accessories

| HP Part Number | Description |
|--|---|
| Note: the following items can be ordered through any Hewlett-Packard Sales and Service office. | |
| 9300-0797 | 3M static control mat, 0.6 m x 1.2 m (2 ft. x 4 ft) 4.6 m (15 ft) ground wire wrist strap and attachment cord |
| 9300-0980 | Wrist strap cord, 1.5 m (5 ft) |
| 9300-0985 | Wrist strap (large) |
| 9300-0986 | Wrist strap (small) |
| 9300-1169 | ESD heel strap (reusable 6 to 12 months) |
| 9300-0793 | Shoe ground strap (one-time use only) |

WARNING

The HP 8590A Spectrum Analyzer contains potentially hazardous voltages. Refer to the safety symbols provided on the analyzer and the general safety instructions in this manual before operating the unit with the covers removed. Ensure that safety instructions are strictly followed. Failure to do so can result in severe or fatal injury.

*Look @ installation
& verification manual.*

PERFORMANCE VERIFICATION

Introduction

The procedures in this chapter test the analyzer's electrical performance using the specifications of Table 1-1 in the Installation Manual (HP Part Number 08590-90003).

You must complete 14 tests to verify that analyzer performance meets all the specifications. The Installation Manual contains five tests that constitute Operation Verification. This chapter contains the remaining nine tests. Table 1-1 lists all the tests and indicates which manual contains each test. You must do the tests in the order shown in the table.

None of the performance tests require access to the interior of the analyzer.

Table 1-1. HP 8590A Spectrum Analyzer Performance Tests

| Test Name | Test Type | Manual Location |
|---|--------------------------|---------------------|
| Frequency Readout Accuracy | Operation Verification | Installation Manual |
| Displayed Average Noise Level | Operation Verification | Installation Manual |
| Frequency Response | Operation Verification | Installation Manual |
| Calibrator Amplitude and Frequency Accuracy | Operation Verification | Installation Manual |
| Frequency Span Readout Accuracy | Operation Verification | Installation Manual |
| Sweep Time Accuracy | Performance Verification | this chapter |
| Noise Sideband | Performance Verification | this chapter |
| Spurious Response | Performance Verification | this chapter |
| Residual Response | Performance Verification | this chapter |
| Reference Level Accuracy | Performance Verification | this chapter |
| Scale Fidelity | Performance Verification | this chapter |
| Frequency Drift | Performance Verification | this chapter |
| Resolution Bandwidth Switching | Performance Verification | this chapter |
| Gain Compression | Performance Verification | this chapter |

Before You Start

There are five things you must do before attempting the performance tests in this chapter:

1. Switch the analyzer on and let it warm up. If the analyzer was stored in an area where the ambient temperature is within the specified operating range (0 to 50°C), a 30-minute warmup is required. If the storage temperature was less than 0°C, warm up the analyzer for at least 2 hours.
2. Read Chapter 1 of the Operating Manual, "Making Your First Measurement."
3. After the analyzer has warmed up as specified, perform the Calibration procedure documented in "Making Your First Measurement." The performance of the analyzer is specified only after the calibration routines have been run.
4. Complete the Operation Verification tests in the Installation Manual, and record test results on a copy of the specified test record.
5. Read the rest of this section before you start any of the tests, and make a copy of the Performance Test Record described below.

Test Equipment You'll Need

Table 1-2 lists the recommended test equipment needed to maintain and test the analyzer. Each test includes a list of the equipment and accessories required for that test. Although Hewlett-Packard equipment is recommended, equivalent equipment may be used provided it meets the critical specifications shown in Table 1-2.

Recording the Test Results

Record the results on a copy of the Performance Verification Test Record (see page 1-31). The test record lists the specifications and acceptable limits for each analyzer test. The filled-out test record can be kept for later reference, if desired.

If the Analyzer Doesn't Meet Specifications

If the analyzer doesn't meet one of the specifications, complete any remaining tests in this chapter and record all test results on a copy of the test record.

Periodically Verifying Operation

The analyzer requires periodic verification of operation. Under most conditions of use, you should test the analyzer at least once a year. The Operation Verification tests in the Installation Manual can be done to check about 80% of analyzer functions. However, the additional tests in this chapter should be done to fully verify analyzer performance.

Table 1-2. Recommended Test Equipment

| Equipment | Critical Specifications | Recommended Model | Use* |
|--------------------------------|--|--|-------|
| 50-ohm Termination | not critical | HP 11593A | P |
| Power Splitter | equivalent output SWR: <1.2/1 frequency range: 10 MHz to 2 GHz maximum input power: > -10 dBm | HP 11667A | P |
| 1-dB Step Attenuator | frequency range: dc to 1 GHz accuracy: ± 0.25 dB calibrated at 30 MHz | HP 355C-H80 | P,A |
| 10-dB Step Attenuator | frequency range: dc to 1 GHz accuracy: ± 1.5 dB calibrated at 30 MHz | HP 355D-H82 | P,A |
| Logic Pulser | TTL voltage and current drive levels | HP 546A | T |
| Digital Current Tracer | Sensitivity: 1 mA to 500 mA Frequency response: pulse trains to 10 MHz Minimum pulse width: 50 nS Pulse risetime: < 200 nS | HP 547A | T |
| Logic Clip | TTL voltage and current drive levels | HP 548A | T |
| Synthesizer | frequency accuracy: 1×10^{-9} /day output flatness: ± 0.5 dB frequency range: 50 to 100 MHz | HP 3335A | P |
| Synthesizer Function Generator | harmonics: <-25 dB sinewave amplitude accuracy: ± 0.2 dB frequency resolution: 0.001 Hz | HP 3325A | P |
| Digital Voltmeter | input resistance: > 1×10^{10} ohms accuracy: $\pm 0.0011\%$ plus three counts (100-V scale) | HP 3456A | A,T |
| Digital Multimeter | input resistance: > 1×10^{10} ohms accuracy: $\pm 0.004\%$ plus one count (100-V scale) | HP 3455A (alternative to HP 3456A) | A,T |
| Power Meter | measure levels 0 to -90 dBm accuracy: $\pm 0.5\%$ | HP 436A | P,A,T |

* P=Performance Test; A=Adjustment/Calibration; T=Troubleshooting

Performance Verification

Table 1-2. Recommended Test Equipment (continued)

| Equipment | Critical Specifications | Recommended Model | Use* |
|----------------------------------|---|---|-------------|
| Crystal Detector | frequency range: .1 to 1.5 GHz | HP 423A | P |
| Frequency Counter | frequency range: 500 to 1,500 MHz accuracy: ± 1 count | HP 5342A | A,T |
| Frequency Counter | frequency range: 0.1 to 500 MHz accuracy: ± 1 count | HP 5383A | A,T |
| Sweep Oscillator | frequency accuracy: 1×10^{-9} /day output flatness: within ± 0.6 dB | HP 8340A | P |
| Sweep Oscillator | output flatness: within ± 0.6 dB | HP 8350A/83522A (alternative to HP 8340A for frequency re- sponse test) | P |
| Comb Generator | 1, 10, 100 MHz combs accuracy: $\pm 0.01\%$ | HP 8406A | P,A,T |
| Power Sensor | frequency range: 100 kHz to 2 GHz power range: 0.01 to 1 mW | HP 8482A | P,A,T |
| Power Sensor | frequency range: 10 MHz to 18 GHz power range: -70 dBm to 20 dBm maximum power: 200 mW | HP 8484A | P |
| 10-dB Attenuator (2 required) | frequency range: 10 to 1500 MHz accuracy: $\pm 5\%$ | HP 8491A | P |
| Signal Generator (2 required) | frequency range: 500 kHz to >500 MHz AM modulation: >20 Hz with external signal pulse modulation: 500-Hz PRF, >.002 ms pulse output flatness: ± 0.5 dB spurious: <-100 dBc | HP 8640B (alternative to HP 8340A for frequency readout accuracy up to 1024 MHz) | P,A,T |

* P=Performance Test; A=Adjustment/Calibration; T=Troubleshooting

Table 1-2. Recommended Test Equipment (continued)

| Equipment | Critical Specification | Recommended Model | Use* |
|--|--|---|---------|
| Signal Generator | frequency range: 100 kHz to 2115 MHz | HP 8642B (also alternative to HP 8340A for frequency readout accuracy and frequency response tests) | P |
| Directional Bridge | frequency range: 0.1 to 110 MHz directivity: > 40 dB VSWR maximum: 1.1/1 arm loss: < 6 dB | HP 8721A | P |
| Low-Pass Filter | 300 MHz low pass, rejection of unwanted signals: > 35 dB | Telenic TLP 300-4AB | P, A, T |
| Adapter (2 required) | BNC to BNC(m), <i>50 Ω</i> | HP 1250-1288-0216 | P |
| Adapter (3 required) | N(m) to BNC(f) | HP 1250-0780 | P |
| Adapter | N(m) to BNC(m) | HP 1250-0082 | P |
| Adapter | BNC tee | HP 1250-0781 | P |
| Adapter | BNC(f) to alligator clips | HP 8120-1292 | A |
| Adapter | SMC(m) to SMC(m) | HP 1250-0827 | A |
| Test Cable | SMC(f) to BNC(m) | HP 11592-60001 | A |
| Cable Assembly | banana plug alligator clips | HP 11102A | A |
| BNC Cable (4 required) | 120 cm (48 inch) | HP 10503A | P, A, T |
| BNC Cable | 20 cm (9 inch) | HP 10502A | P, A, T |
| Special Adapter | (per Figure 2-2) | HP 1250-1113 | A |
| Extender Board | used for Analog Interface A7 | HP 70205-60023 | T |
| Special Extender Board | with 51 ohm resistor w/HP 0757-0394 | HP 08505-60109 | A, T |
| Crystal Shorts (3 required) | (per Figure 2-8) | — | A, T |
| Additional Equipment for Option 001: | | | |
| NOTE: Use a 75 ohm to 50 ohm adapter, and change display units to dBm before attempting the following tests. | | | |
| 75 ohm Termination | not critical | HP 11652-60012 | P, A, T |
| Minimum Loss Adapter (75 ohm to 50 ohm) | frequency range: 0.1 to 1500 MHz maximum loss: < 3 dB | HP 08558-60031 | P, A, T |
| BNC Cable | 30 cm (12 inch), 75 ohm | HP 11652-60012 | P, A, T |
| Adapter | SMA(f) to SMA(f) | HP 1250-1158 | P, A, T |
| Adapter | BNC(f) to SMA(m) | HP 1250-1200 | P, A, T |

* P = Performance Test; A = Adjustment/Calibration; T = Troubleshooting

Sweep Time Accuracy Test

This test uses a synthesizer function generator to amplitude modulate a 500-MHz, CW signal from another signal generator. The analyzer demodulates this signal in zero span to display the signal pulses in time domain (i.e., like an oscilloscope). The marker delta function of the analyzer is used to read out the sweep time.

Specification

Frequency Sweep Readout Accuracy: $< \pm 10\%$ of indicated sweep time setting.

Equipment

| | |
|--------------------------------------|-----------|
| Synthesizer Function Generator | HP 3325A |
| Signal Generator | HP 8640B |
| BNC Cable 120 cm (48 in) | HP 10503A |
| BNC Cable 20 cm (9 in) | HP 10502A |

Additional Equipment for Option 001

| | |
|---|---|
| Minimum Loss Adapter, 75- to 50-ohm | HP 08558-6003I ^{11981A (08558)-60090} |
| BNC Cable, 30 cm (12 in), 75-ohm | HP 11652-60012 |
| Adapter, SMA(f) to SMA(f) | HP 1250-1158 |
| Adapter, BNC(f) to SMA(m) | HP 1250-1200 |

Test Procedure

1. Set the signal generator to output a 500-MHz, -10 dBm, CW signal. Set the AM and FM controls OFF.
2. Set the synthesizer function generator to output a 500-Hz, +5 dBm, CW signal.

Note: The lower the function generator output level, the narrower the displayed pulse on the analyzer CRT. If the function generator frequency setting is decreased to 1 Hz or lower, it may be necessary to increase the function generator output to +10 dBm to display an adequate signal on the analyzer CRT.

3. Press the following analyzer keys:
PRESET (wait until preset is complete)

SPAN **1** **0** **MHz**
FREQUENCY **5** **0** **0** **MHz**

4. Connect the equipment as shown in Figure 1-1. If your analyzer has Option 001 (75-ohm RF input), connect the 75-ohm side of the minimum loss adapter to the 75-ohm cable, connect the other end of the 75-ohm cable to the RF input of analyzer, and connect the 50-ohm cable from the signal generator to the 50-ohm side of the minimum loss adapter.

5. Make sure the test signal is displayed on the spectrum analyzer CRT. Press the following analyzer keys:
PEAK SEARCH [MKR →CF]
SPAN **0** Hz
SWEEP BW [RES BW] **3** **0** kHz
VID BW **3** **0** kHz
TRIG [VIDEO]
6. Set the signal generator AM switch to the PULSE position.
7. Press the following analyzer keys:
SWEEP BW [SWEEP TIME] **2** **0** ms
TRIG [SINGLE SWEEP]
MKR [MARKER NORMAL]
8. Set the marker to the first full time pulse from the left edge of the analyzer CRT. Press the **MKR** [MARKER DELTA] keys. Using the **PEAK SEARCH** [NEXT PK RIGHT] keys, place the movable marker on the eighth time pulse to the right (i.e. the last full time pulse on the right side of the CRT). Read the time indication from the marker delta readout. The time measured should be from 14 to 18 ms maximum. Record the test result on a copy of the test record.
9. Repeat steps 7 and 8 for each of the seven remaining settings given in Table 1-3. Record the associated test results on a copy of the test record.

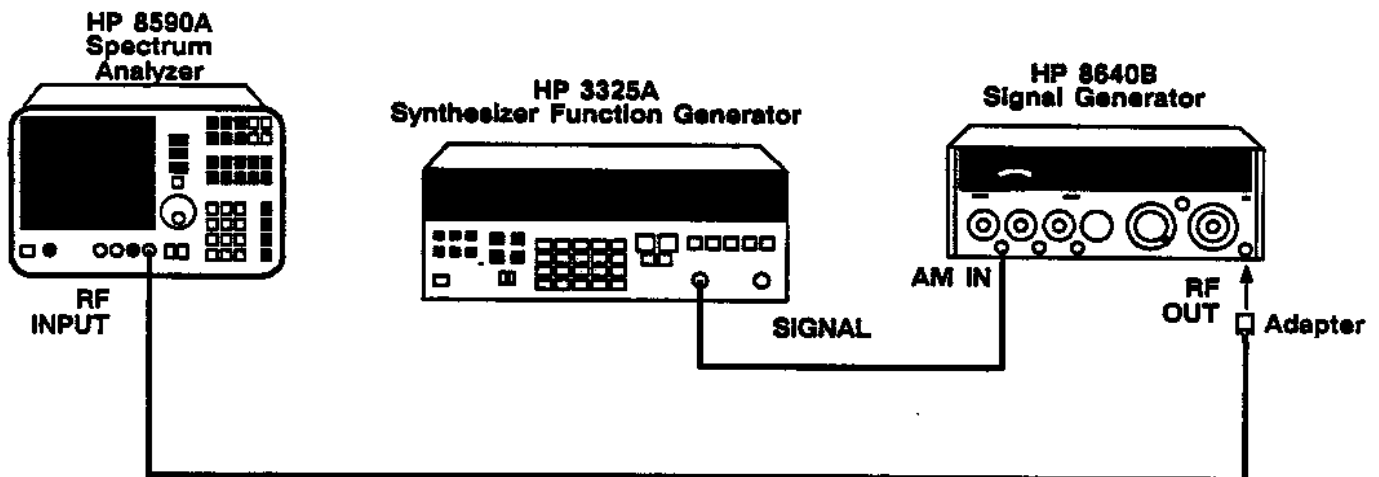


Figure 1-1. Sweep Time Accuracy Setup

Table 1-3. Sweep Time Accuracy Settings

| 8590A Sweep Time | 3325A Frequency | Time Pulses Measured on CRT | |
|---------------------|--------------------|-----------------------------|----------|
| | | Min. | Max. |
| 20 ms | 500 Hz | 14.0 ms | 18.0 ms |
| 50 ms | 200 Hz | 35.0 ms | 45.0 ms |
| 100 ms | 100 Hz | 70.0 ms | 90.0 ms |
| 500 ms | 20 Hz | 350.0 ms | 450.0 ms |
| 1 s | 10 Hz | 700.0 ms | 900.0 ms |
| 10 s | 1 Hz | 7.0 s | 9.0 s |
| 50 s | 0.2 Hz | 35.0 s | 45.0 s |
| 100 s | 0.1 Hz | 70.0 s | 90.0 s |

Noise Sideband Test

A 500 MHz, CW signal is applied to the analyzer RF input. The signal sidebands are examined for noise amplitude and unwanted responses.

Specification

Noise sideband levels: < -65 dB down and > 30 kHz offset from CW signal with 1 kHz resolution and 30 Hz video bandwidth.

Equipment

Signal Generator HP 8640B
 BNC Cable, 120 cm (48 in) HP 10503A

Additional Equipment for Option 001

Minimum Loss Adapter, 75 ohm to 50 ohm HP 08558-60031
 BNC Cable, 30 cm (12 in), 75 ohm HP 11652-60012
 Adapter, SMA(f) to SMA(f) HP 1250-1158
 Adapter, BNC(f) to SMA(m) HP 1250-1200

Test Procedure

1. Set the signal generator to output the 500 MHz, -20 dBm, CW signal. Set the AM and FM controls OFF, and the RF control ON.
2. Connect the equipment as shown in Figure 1-2. If your analyzer has Option 001 (75 ohm RF input), connect the 75 ohm side of the minimum loss adapter to the 75 ohm cable, connect the other end of the 75 ohm cable to the RF input of the analyzer, and connect the 50 ohm cable from the signal generator to the 50 ohm side of the minimum loss adapter.

3. Press the following analyzer keys:

[PRESET] (wait until preset is complete)

[FREQUENCY] 5 0 0 [MHz]

[SPAN] 3 0 0 [MHz] 10

[PEAK SEARCH]

~~[MKR] [MARKER NORMAL]~~ MKR → [MARKER → RL]

[SIGNAL TRACK]

[SPAN] 3 0 0 [MHz] 300 kHz

[SWEEP BW] [RES BW] 1 [kHz]

[VID BW] 3 0 [Hz]

[TRIG]

[SINGLE SWEEP]

[PEAK SEARCH] MARKER DELTA 30 kHz (-30 kHz) ~~MARKER NORMAL~~

~~[MKR] [MARKER NORMAL]~~

4111111111 Move MKR Δ to highest point - one division to either side of the 500 MHz signal.

~~MKR Δ reading should be -65 dB.~~ *only 1-31*

RECORD the MARKER reading in the Performance Test

Record (1 of 2)

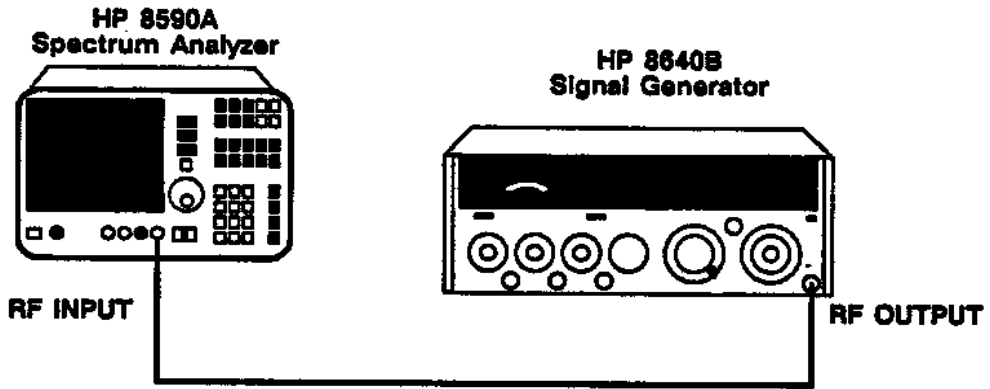


Figure 1-2. Noise Sideband Test Setup

Spurious Response Test

This test is performed in two parts. The first test part measures second harmonic distortion; the second test measures third-order intermodulation distortion.

To test second harmonic distortion a 300-MHz, CW signal is passed through a 10-dB attenuator and 300-MHz low-pass filter to the analyzer RF input. The low-pass filter ensures that harmonics measured are those generated by the analyzer, and not those of the signal generator. The distortion products are measured using the analyzer display (CRT).

For the third-order intermodulation distortion test, two signals are input to the analyzer. The distortion products are measured using the analyzer display (CRT).

Specification

Second Harmonic Distortion (for -45 dBm total power at mixer)

< -70 dBc for frequencies >5 MHz

< -60 dBc for frequencies \leq 5 MHz

Third Order Intermodulation Distortion

< -70 dBc for input signals greater than 5 MHz (input signals must be

-30 dBm at the input mixer and greater than 50 kHz apart)

< -60 dBc for 100 kHz to 5 MHz input signals

Equipment

| | |
|---|---------------------|
| Signal Generator (2 required) | HP 8640B |
| Attenuator, 10 dB (2 required) | HP 8491A |
| Low Pass Filter, 300-MHz | Telenic TLP 300-4AB |
| Directional Bridge, 100-MHz | HP 8721A |
| Adapter, Type N(m) to BNC(f) (2 required) | HP 1250-0780 |
| BNC Cable 120 cm (48 in) (2 required) | HP 10503A |

Additional Equipment for Option 001

| | |
|---|----------------|
| Minimum Loss Adapter, 75- to 50-ohm | HP 08558-60031 |
| BNC Cable, 30 cm (12 in), 75-ohm | HP 11652-60012 |
| Adapter, SMA(f) to SMA(f) | HP 1250-1158 |
| Adapter, BNC(f) to SMA(m) | HP 1250-1200 |

Test Procedure - Second Harmonic Distortion

1. Set the signal generator to output a 300-MHz, -45 dBm, CW signal. Set the AM and FM controls OFF, and the RF control ON.
2. Connect the equipment as shown in Figure 1-3. If your analyzer has Option 001 (75-ohm RF input), connect the 75-ohm side of the minimum loss adapter to the 75-ohm cable, connect the other end of the 75-ohm cable to the RF input of analyzer, and connect the 50-ohm cable from the low-pass filter to the 50-ohm side of the minimum loss adapter.

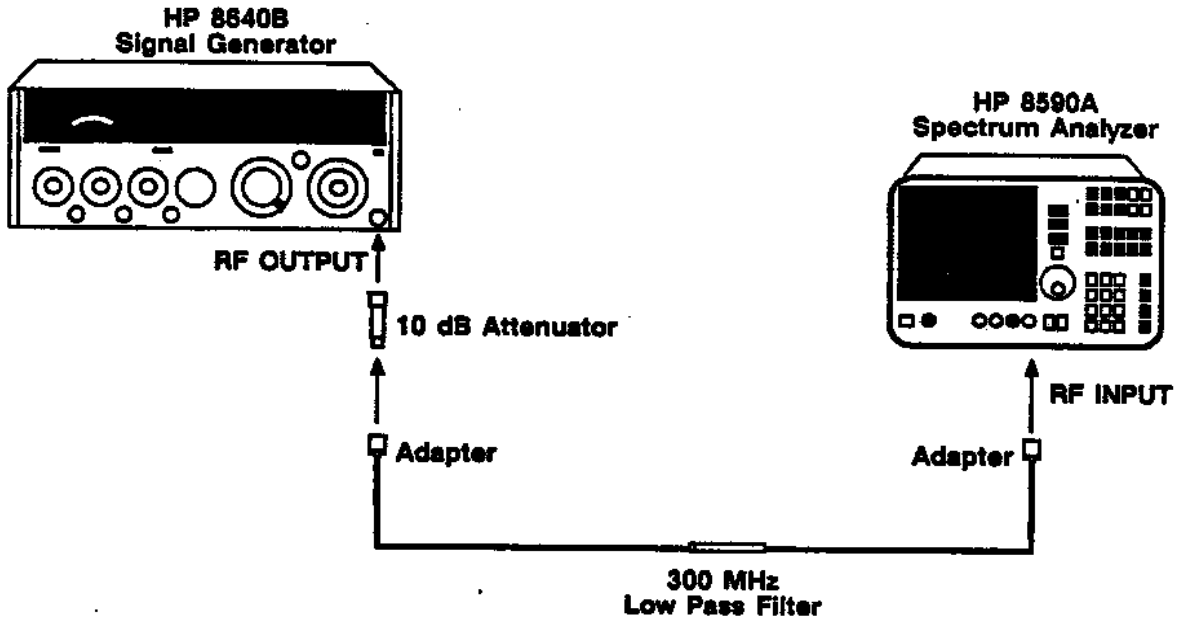


Figure 1-3. Spurious Response—Second Harmonic Distortion Test Setup

3. Press the following analyzer keys:
 - PRESET** (wait until preset is complete)
 - FREQUENCY** **3** **0** **0** **MHz**
 - SPAN** **3** **MHz**
 - PEAK SEARCH** [**MARKER** → **CF**]
 - SWEEP BW** [**RES BW**] **1** **kHz**
 - VID BW** **3** **0** **0** **Hz**
 - AMPLITUDE** **4** **0** **-dBm**
 - [ATTEN]** **0** **dB**
 - DISPLAY** [**DISPLAY LINE**] **1** **0** **5** **-dBm**
 - MKR** → [**MARKER** → **STEP**]
 - FREQUENCY**
4. Press the analyzer UP arrow key to step to the second harmonic. The second harmonic, which is at 600 MHz, should be below the display line.
5. Set the signal generator to output a 2-MHz, -45 dBm, CW signal.
6. Press the following analyzer keys:
 - FREQUENCY** [**CENTER FREQ**] **2** **MHz**
 - SPAN** **3** **MHz**
 - PEAK SEARCH** [**MARKER** → **CF**]
 - MKR** → [**MARKER** → **STEP**]
 - FREQUENCY**

7. Press the analyzer UP arrow key to step to the second harmonic.
Set the displayed center frequency by pressing:

FREQUENCY **3** **MHz**

The second harmonic, at 4 MHz, should be below the display line.

Test Procedure – Third-Order Intermodulation Distortion

- Set two signal generators so each outputs a 30-MHz, -20 dBm, CW signal. Set the AM and FM controls OFF and the RF controls ON.
- Connect the equipment as shown in Figure 1-4. If your analyzer has Option 001 (75-ohm RF input), connect the 75-ohm side of the minimum loss adapter to the 75-ohm cable, connect the other end of the 75-ohm cable to the RF input of the analyzer, and connect the 50-ohm side of the minimum loss adapter to the Directional Bridge.
- Press the following analyzer keys:
PRESET (wait until preset is complete)
FREQUENCY **3** **0** **MHz**
SPAN **5** **0** **0** **kHz**
SWEEP BW **[RES BW]** **3** **0** **kHz**
AMPLITUDE **[ATTEN]** **0** **dB**
AMPLITUDE **3** **0** **-dBm**
- Adjust the frequency of both signal generators until signals are two divisions apart and centered on the analyzer display (CRT). Adjust generator output levels to -30 dBm, as displayed on the analyzer. Refer to the example display shown in Figure 1-5.
- Press the following analyzer keys:
SWEEP BW **[RES BW]** **3** **kHz**
[VID BW] **3** **0** **0** **Hz**
DISPLAY **[DISPLAY LINE]** **1** **0** **0** **-dBm**
- Referring to Figure 1-5 and the analyzer display, locate the third-order distortion products, which are approximately three divisions on either side of the signal generator fundamentals. The third-order distortion products ($2f_2 - f_1$ or $2f_1 - f_2$) must have an amplitude of less than -70 dBc.

Note: If the intermodulation products can't be located, increase generator output levels by 10 dB, as shown on the CRT. After the products have been identified, reduce the generator output levels to -30 dBm. The third-order distortion products should disappear on the analyzer display.

Performance Verification

7. Although second-order intermodulation distortion products are not included in the analyzer electrical specifications, you can verify them at this point. Press the following analyzer keys:
FREQUENCY **1** **MHz**
SWEEP BW **[RES BW]** **3** **kHz**
8. Referring to Figure 1-5, locate the second-order distortion products ($f_2 - f_1$), which are near the left side of the analyzer display. The second-order intermodulation products should be more than -70 dBc.
9. Press the following analyzer keys:
FREQUENCY **8** **0** **MHz**
SWEEP BW **[RES BW]** **3** **0** **kHz**
10. Check for a second-order distortion product between $f_1 + f_2$ signals. The product should be more than -70 dBc.

Note: You can temporarily increase generator output levels by 10 dBm to help identify the second-order intermodulation responses between $f_1 + f_2$.

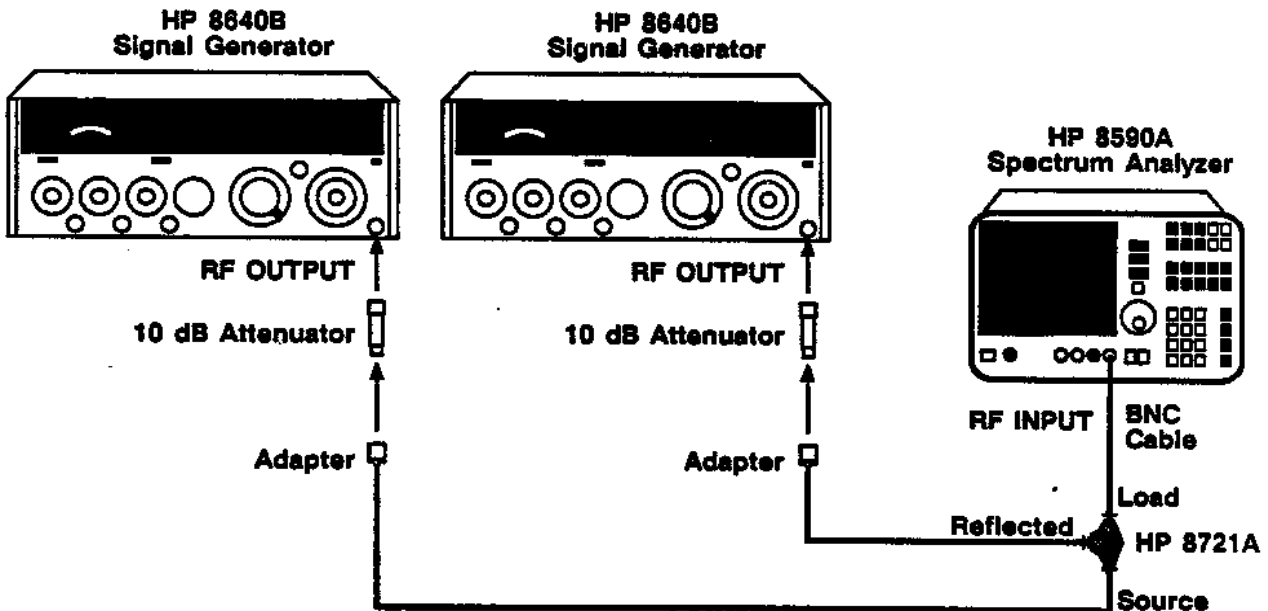


Figure 1-4. Spurious Response—Third-order Intermodulation Distortion Test Setup

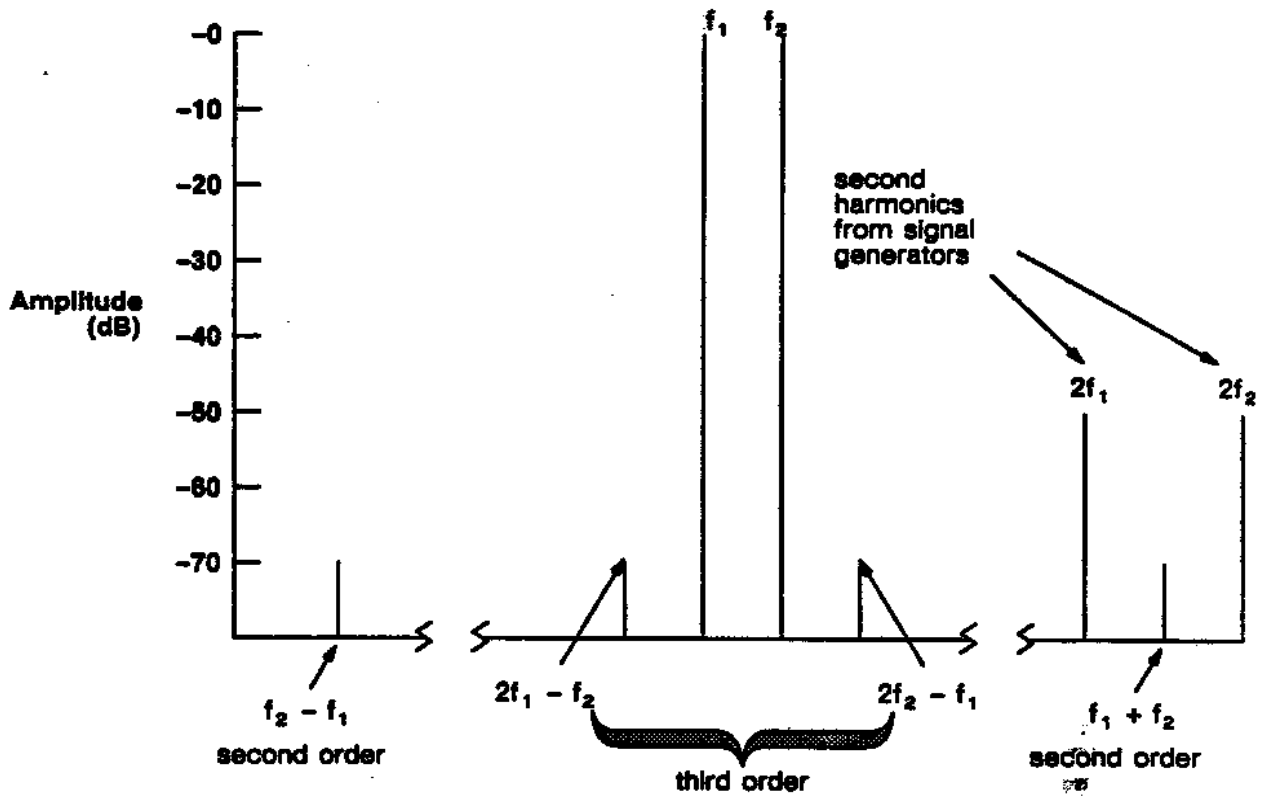


Figure 1-5. Spurious Response—Intermodulation Distortion Products

Residual Response Test

Residual response is checked by terminating the RF input of the analyzer, setting input attenuation to 0 dB, and measuring any residuals across the instrument's input frequency range. The analyzer CRT is used to make the measurements.

Specification

Residual Responses:

< -95 dBm with 0-dB input attenuation and no signal present at input.

Equipment

50-ohm Termination HP 11593A

Equipment for Option 001

75-ohm Termination HP 11652-60010

Test Procedure

Note: The following procedure requires approximately 30 minutes to complete with the frequency step size and span given.

1. Connect the 50-ohm termination to the analyzer RF input. If your analyzer has Option 001 (75-ohm RF input), connect the 75-ohm termination to the RF input instead.
2. Press the following analyzer keys:
[PRESET] (wait until preset is complete)
[FREQUENCY] [2] [5] [MHz]
[SPAN] [5] [0] [MHz]
[AMPLITUDE] [8] [0] [-dBm]
[ATTEN] [0] [dB]
[SWEEP BW] [RES BW] [3] [kHz]
[VID BW] [1] [kHz]
[DISPLAY] [DISPLAY LINE] [9] [5] [-dBm]
[FREQUENCY] [CF STEP SIZE] [4] [5] [MHz]
3. Press analyzer [TRIG] and [SINGLE SWEEP] keys, and wait for sweep completion. Look for any residual responses at or above the display line on the analyzer CRT. If a residual is suspected, press the [SINGLE SWEEP] key again to determine if the response persists. A residual will persist on repeated sweeps, but a noise peak will not. Any residual responses must be at or below the display line.
4. Press the analyzer UP arrow key to step to the next higher center frequency, which is 45 MHz above the last setting. Repeat Step 3.
5. Repeat Steps 3 and 4 until the complete analyzer frequency range has been evaluated (i.e., until you reach the maximum frequency of 1.510 GHz). This requires 33 additional frequency steps. There should be no residual responses at or above the display line at frequencies below 1500 MHz.

Reference Level Accuracy Test

A 30-MHz CW signal is passed through a 10-dB step attenuator to the analyzer RF input. Analyzer logarithmic IF gain is adjusted by setting the displayed log scale reference level to correspond to the attenuation value selected on the step attenuator. The difference between the displayed signal level on the CRT log scale and the attenuator setting is used to determine the accuracy of the selected reference level.

Specification

- < ± 1.75 dB for +30 to -120 dBm range (0- to 60-dB attenuation)
- < ± 1.25 dB for 0 to -120 dBm range (10-dB attenuation) at any fixed frequency
- < ± 0.5 dB for 0 to -59 dBm range (10-dB attenuation) at any fixed frequency

Equipment

| | |
|--|-------------------|
| Signal Generator | HP 8640B |
| Step Attenuator (calibrated at 30 MHz) | HP 355D-H82 |
| Adapter, BNC(f) to BNC(m) | HP 1250-1288 0216 |
| Adapter, Type N(m) to BNC(f) | HP 1250-0780 |
| BNC Cable, 20 cm (9 in) | HP 10502A |
| BNC Cable, 120 cm (48 in) | HP 10503A |

Additional Equipment for Option 001

| | |
|---|----------------|
| Minimum Loss Adapter, 75- to 50-ohm | HP 08558-60031 |
| BNC Cable, 30 cm (12 in), 75-ohm | HP 11652-60012 |
| Adapter, SMA(f) to SMA(f) | HP 1250-1158 |
| Adapter, BNC(f) to SMA(m) | HP 1250-1200 |

Test Procedure

1. Set the signal generator to output a 30-MHz, -10 dBm, CW signal. Set the AM and FM controls OFF and RF control ON.
2. Set step attenuator to 0 dB of attenuation.
3. Connect the equipment as shown in Figure 1-6. If your analyzer has Option 001 (75-ohm RF input), connect the 75-ohm side of the minimum loss adapter to the 75-ohm cable, connect the other end of the 75-ohm cable to the RF input of the analyzer, and connect the 50-ohm cable from the step attenuator to the 50-ohm side of the minimum loss adapter.

Performance Verification

4. Press the following analyzer keys:
 - PRESET** (wait until preset is complete)
 - FREQUENCY** **3** **0** **MHz**
 - SPAN** **1** **0** **MHz**
 - PEAK SEARCH**
 - MKR** **[MARKER NORMAL]**
 - SIGNAL TRACK**
 - SPAN** **5** **0** **kHz**
 - SWEEP BW** **[RES BW]** **1** **kHz**
 - [VID BW]** **3** **0** **Hz**
 - AMPLITUDE** **1** **0** **-dBm**
 - [ATTEN]** **0** **dB**
 - [LOG dB/DIV]** **1** **dB**
5. Locate the input signal on the analyzer display. Adjust the generator output level until displayed signal trace on CRT is one graticule division down from the reference level (i.e., -11 dBm).
6. For each spectrum analyzer reference level and step attenuator setting given in Table 1-4, measure the deviation from one division below reference level using the analyzer log scale display. Record this deviation on a copy of the test record, taking into account the step attenuator calibration accuracy. Analyzer reference level is set by pressing the **AMPLITUDE** key, and then specifying the desired level (e.g., **1** **0** **-dBm** for -10 dBm, or **1** **0** **dBm** for +10 dBm).

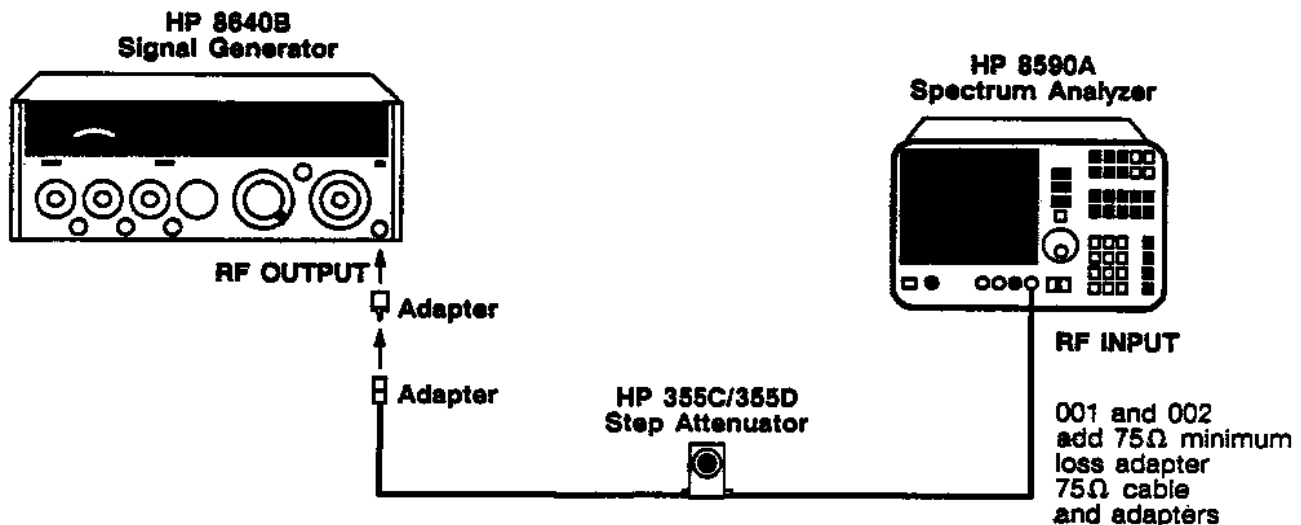


Figure 1-6. Reference Level Accuracy Test Setup

Table 1-4. Reference Level Accuracy Settings

| REFERENCE LEVEL Setting (dBm) | Step Attenuator Setting (dB) |
|-------------------------------------|------------------------------------|
| -10 | 0 |
| -20 | 10 |
| -30 | 20 |
| -40 | 30 |
| -50 | 40 |
| -60 | 50 |
| -70 | 60 |
| -80 | 70 |
| -90 | 80 |
| -100 | 90 |

Attenuations > reference level settings are positive (+). Attenuations < reference level settings are negative (-). For example, 9.99 dB calibration for a 10-dB attenuator setting represents an error of -0.01 dB.

Scale Fidelity Test

This test is performed in two parts. The first part measures log scale fidelity; the second part checks linear scale fidelity. Both procedures use the same test method.

A 30-MHz, CW signal is passed through a 10-dB step attenuator to the analyzer RF input. The generator output level is adjusted to place the signal peak at the selected analyzer reference level. The signal amplitude is then reduced using the step attenuator. The scale fidelity figure is determined by calculating the error between the actual displayed and theoretical amplitude levels. The calculations are performed using the analyzer marker amplitude difference function and the selected attenuation value.

Specification

Log Incremental Accuracy

< ± 0.1 dB/dB change over 70-dB range

Log Maximum Cumulative Error

± 0.75 dB maximum over -60 dB range from reference level

± 1.0 dB maximum over -70 dB range from reference level

Linear Accuracy

< $\pm 3\%$ of reference level setting

Equipment

| | |
|--|--------------|
| Signal Generator | HP 8640B |
| 10-dB Step Attenuator (calibrated at 30 MHz) | HP 355D-H82 |
| 1-dB Step Attenuator (calibrated at 30 MHz) | HP 355C-H80 |
| Adapter, BNC(f) to BNC(m) | HP 1250-1288 |
| Adapter, Type N(m) to BNC(f) | HP 1250-0780 |
| BNC Cable, 20 cm (9 in) | HP 10502A |
| BNC Cable, 120 cm (48 in) | HP 10503A |

Additional Equipment for Option 001

| | |
|---|----------------|
| Minimum Loss Adapter, 75- to 50-ohm | HP 08558-60031 |
| BNC Cable, 30 cm (12 in), 75-ohm | HP 11652-60012 |
| Adapter, SMA(f) to SMA(f) | HP 1250-1158 |
| Adapter, BNC(f) to SMA(m) | HP 1250-1200 |

Test Procedure - Log Scale Fidelity

1. Set the signal generator to output a 30-MHz, 0-dBm, CW signal. Set the Counter control to INT ON, AM and FM controls OFF, and RF control ON.
2. Set the 10-dB step attenuator to 0 dB.

Table 1-5. Log Scale Fidelity Test Settings

| Attenuator Setting (dB) | Minimum Amplitude (dB) | Maximum Amplitude (dB) |
|--------------------------------|-------------------------------|-------------------------------|
| 0 | 0 | 0 |
| 10 | 9.25 | 10.75 |
| 20 | 19.25 | 20.75 |
| 30 | 29.25 | 30.75 |
| 40 | 39.25 | 40.75 |
| 50 | 49.25 | 50.75 |
| 60 | 59.25 | 60.75 |
| 70 | 69.00 | 71.00 |

Table 1-6. Linear Scale Fidelity Test Settings

| Attenuator Setting (dB) | Minimum Amplitude (mV) | Maximum Value (mV) |
|--------------------------------|-------------------------------|---------------------------|
| 0 | -223.6 | -223.6 |
| 6 | 105.11 | 118.49 |
| 12 | 49.21 | 62.59 |

Frequency Drift Test

A 300 MHz, CW signal is applied to the analyzer RF input. After centering the signal on the analyzer display (CRT) for five minutes, the marker delta function of the analyzer is used to determine frequency drift over a five-minute period. The spectrum analyzer must be warmed up for a minimum of two hours prior to running this test.

Specification

Frequency drift:

< 50 kHz/five minutes after two-hour warmup and five minutes after setting center frequency

Equipment

Signal Generator HP 8640B
BNC Cable 120 cm (48 in) HP 10503A

Additional Equipment for Option 001

Minimum-Loss Adapter, 75 ohm to 50 ohm HP 08558-60031
BNC Cable, 30 cm (12 in), 75-ohm HP 11652-60012
Adapter, SMA(f) to SMA(f) HP 1250-1158
Adapter, BNC(f) to SMA(m) HP 1250-1200

Test Procedure

Note: Be sure the unit is warmed up as described in specifications before performing the frequency drift test. This is needed to ensure an accurate evaluation of instrument operation and calibration.

1. Set the signal generator to output a 300 MHz, -10 dBm, CW signal. Set the AM and FM controls OFF, RF control ON, and Counter Mode to LOCK.
2. Connect equipment as shown in Figure 1-8. If your analyzer has Option 001 (75 ohm RF input), connect the 75 ohm side of minimum loss adapter to the 75 ohm cable, connect the other end of the 75 ohm cable to the RF input of the analyzer, and connect the 50 ohm cable from the signal generator to the 50 ohm side of the minimum-loss adapter.
3. Press the following analyzer keys:
PRESET (wait until preset is complete)
FREQUENCY 3 0 0 MHz
SPAN 1 0 MHz
PEAK SEARCH
SIGNAL TRACK
SPAN 1 0 0 kHz

4. Wait 5 minutes, then press the following analyzer keys:

PEAK SEARCH **MARKER DELTA**

Wait 5 minutes, accurately timing the period using a timepiece. Press:

PEAK SEARCH

Read the marker delta frequency. Drift should not exceed 50 kHz plus a span accuracy of ± 0.3 kHz per graticule division.

Note: drift contribution provided by the signal generator is negligible, provided the critical specifications in recommended test equipment (Table 1-2) are satisfied.

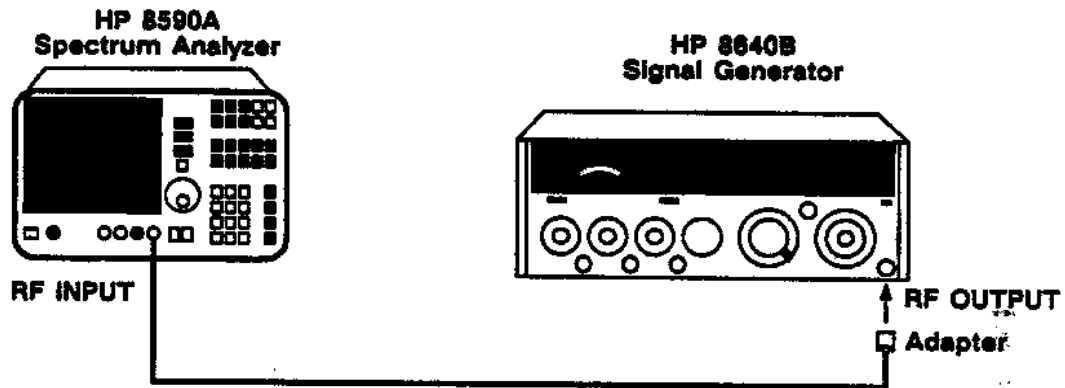


Figure 1-8. Frequency Drift Test Setup

Resolution Bandwidth Switching Test

In this test, the analyzer calibration (CAL Output) signal is applied to the RF input. The deviation in displayed peak signal amplitude for each IF resolution bandwidth filter is measured using the peak search function.

Specification

Resolution Bandwidth Switching (Amplitude Variation)
< ± 0.25 dB for 3-kHz to 3-MHz range

Equipment

BNC Cable 120 cm (48 in) HP 10503A

Equipment for Option 001

BNC Cable, 30 cm (12 in), 75-ohm HP 11652-60012

Test Procedure

1. Connect the BNC cable from the CAL output to the RF input of the analyzer.
2. Press the following analyzer keys:
[PRESET] (wait until preset is complete)
[FREQUENCY] [3] [0] [0] [MHz]
[SPAN] [1] [0] [MHz]
[PEAK SEARCH]
[SIGNAL TRACK]
[SPAN] [5] [0] [kHz]
[SWEEP BW] [RES BW] [3] [kHz]
[VID BW] [1] [kHz]
[AMPLITUDE] [2] [0] [-dBm]
[LOG dB/DIV] [1] [dB]
3. Note the marker amplitude displayed on the analyzer. This is the reference level that will be used to evaluate amplitude deviation in the following steps. Record the amplitude reference measurement on a copy of the test record given in Table 1-7.
4. Press the following analyzer keys to select the next resolution bandwidth indicated in Table 1-7:
[SWEEP BW] [RES BW] [1] [0] [kHz]
Read the marker amplitude deviation from the reference level that was determined in Step 3, and record this in Table 1-7. The maximum allowable marker deviation is ± 0.25 dB.

5. Repeat Step 4 for each of the remaining resolution bandwidths and spans indicated in Table 1-7. The maximum marker deviation allowed is ± 0.25 dB.

Table 1-7. Resolution Bandwidth Switching Test Record

| | Resolution Bandwidth | Span | Allowable Deviation |
|-------|----------------------|---------|---------------------|
| -19.8 | 3 kHz | 50 kHz | — |
| -19.8 | 10 kHz | 50 kHz | ± 0.25 dB |
| -19.9 | 30 kHz | 500 kHz | ± 0.25 dB |
| -19.8 | 100 kHz | 500 kHz | ± 0.25 dB |
| -19.8 | 300 kHz | 5 MHz | ± 0.25 dB |
| -19.8 | 1 MHz | 5 MHz | ± 0.25 dB |
| -19.8 | 3 MHz | 10 MHz | ± 0.25 dB |

Gain Compression Test

A signal generator and a synthesizer are used to input two signals to the analyzer input mixer via a directional bridge. The synthesizer is set to output an 80-MHz, -24 dBm, CW signal through the directional bridge, which has a 6-dB loss. This signal must be at least 20 dB below the analyzer's compression-level threshold, which is -10 dBm. The signal generator is set to output a 100-MHz, 0-dBm, CW signal at the directional bridge's load connector.

First, the signal generator and synthesizer output levels are calibrated using a power meter. The synthesizer output is then connected to the bridge and measured by the analyzer to establish a reference level for the test. Next, the signal generator is connected, and the synthesizer is disconnected, for the compression-level evaluation. The analyzer's marker delta function is used to determine the resulting compression level.

Specification

Gain Compression

RF Input <1 dB for -10 dBm total power at input mixer

Internal IF <1 dB when signals are higher than reference level and total power at input mixer is -20 dBm

Equipment

| | |
|---|-----------|
| Synthesizer | HP 3335A |
| Signal Generator | HP 8640B |
| Directional Bridge | HP 8721A |
| Power Meter | HP 436A |
| Power Sensor | HP 8484A |
| BNC Cable 120 cm (48 in) (4 required) | HP 10503A |

Additional Equipment for Option 001

| | |
|---|----------------|
| Minimum Loss Adapter, 75- to 50-ohm | HP 08558-60031 |
| BNC Cable, 30 cm (12 in), 75-ohm | HP 11652-60012 |
| Adapter, SMA(f) to SMA(f) | HP 1250-1158 |
| Adapter, BNC(f) to SMA(m) | HP 1250-1200 |

Test Procedure

1. Set the signal generator to output a 100-MHz, CW signal. Connect the signal generator to the REFLECTED power connector of the directional bridge, as shown in Figure 1-9. Use the power meter or power sensor to set the signal generator output level to 0 dBm, measured at the LOAD connector of the directional bridge. Temporarily disconnect the signal generator from the directional bridge. Terminate the REFLECTED port with a 50-ohm load.

2. Set the synthesizer to output an 80-MHz, CW signal. Connect the BNC cable to the synthesizer RF output. Use a power meter and power sensor to set the synthesizer output level to -24 dBm at the free end of the BNC cable. Connect the synthesizer to the SOURCE connector of the directional bridge, as shown in Figure 1-9.
3. Connect the analyzer to the LOAD connector of the directional bridge, as shown in Figure 1-9. If your analyzer has Option 001 (75-ohm RF input), connect the 75-ohm side of the minimum loss adapter to the 75-ohm cable, connect the other end of the 75-ohm cable to the RF input of the analyzer, and connect the 50-ohm cable from the directional bridge to the 50-ohm side of the minimum loss adapter.
4. Press the following analyzer keys:
PRESET (wait until preset is complete)
FREQUENCY **8** **0** **MHz**
SPAN **1** **0** **MHz**
PEAK SEARCH
SIGNAL TRACK
SWEEP BW **[RES BW]** **3** **MHz**
[VID BW] **3** **0** **0** **Hz**
AMPLITUDE **[LOG dB/DIV]** **5** **-dB**
[MKR] **[MARKER DELTA]**
5. Reconnect the signal generator to the REFLECTED connector of the directional bridge. Note the marker delta readout on the analyzer display. The marker delta amplitude change should not exceed 1 dB.

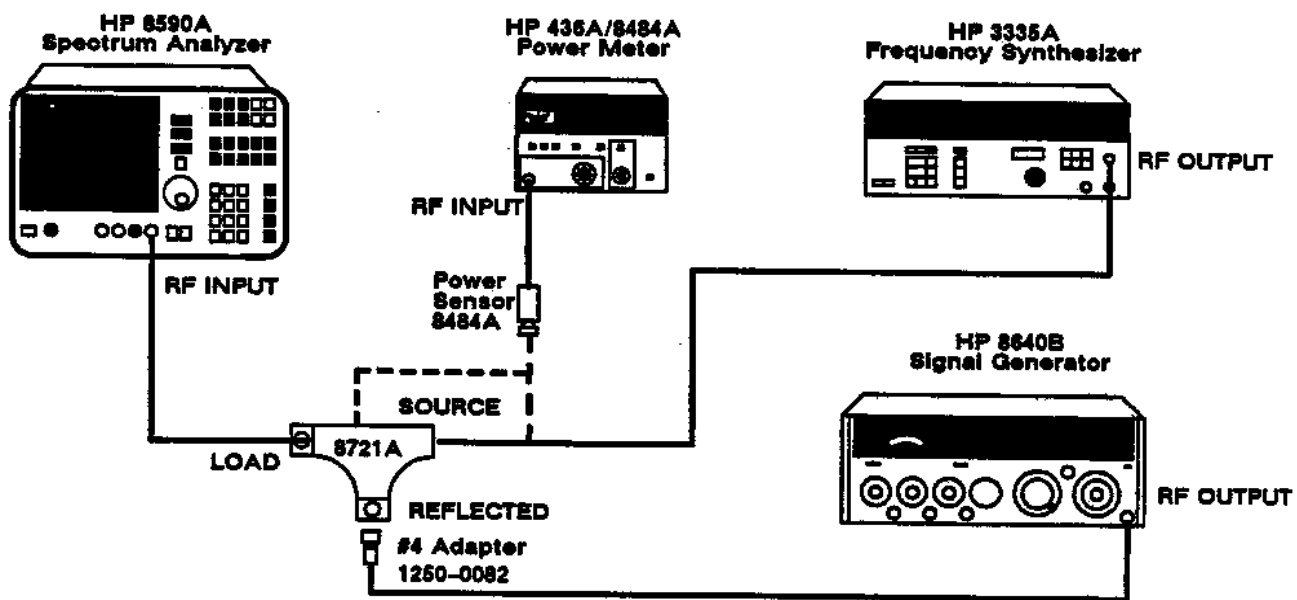


Figure 1-9. Gain Compression Test Setup

Performance Verification Test Record (1 of 2)

| Hewlett-Packard Company HP Model 8590A Spectrum Analyzer 10 kHz to 1.5 GHz | | Tested by: _____ Date: _____ Serial No. _____ | |
|--|----------|---|----------|
| Test Description | Results | | |
| | Min. | Actual | Max. |
| Sweep Time Accuracy | | | |
| 20 ms | 14.0 ms | _____ | 18.0 ms |
| 50 ms | 35.0 ms | _____ | 45.0 ms |
| 100 ms | 70.0 ms | _____ | 90.0 ms |
| 500 ms | 350.0 ms | _____ | 450.0 ms |
| 1 s | 700.0 ms | _____ | 900.0 ms |
| 10 s | 7.0 s | _____ | 9.0 s |
| 50 s | 35.0 s | _____ | 45.0 s |
| 100 s | 70.0 s | _____ | 90.0 s |
| Noise Sidebands | | | |
| >-65 dBc down | | _____ | |
| Spurious Response | | | |
| 2nd harmonic <-105 dBm | | _____ | |
| 3rd-order distortion <-70 dBc | | _____ | |
| (2nd-order products >-70 dBc) | | _____ | |
| Residual Response | | | |
| Residuals ≤ -95 dBm | | _____ | |
| Reference Level Accuracy | | | |
| -10 dBm | | Reference level | |
| -20 dBm | | _____ dB | |
| -30 dBm | | _____ dB | |
| -40 dBm | | _____ dB | |
| -50 dBm | | _____ dB | |
| -60 dBm | | _____ dB | |
| -70 dBm | | _____ dB | |
| -80 dBm | | _____ dB | |
| -90 dBm | | _____ dB | |

* For information only. This measurement not covered by HP 8590A specifications.

Performance Verification

Performance Verification Test Record (2 of 2)

| Hewlett-Packard Company HP Model 8590A Spectrum Analyzer 10 kHz to 1.5 GHz | | Tested by: _____ Date: _____ Serial No. _____ | |
|--|-----------|---|-----------|
| Test Description | Results | | |
| | Min. | Actual | Max. |
| Log Scale Fidelity | | | |
| 0 dB | 0 dB | Reference level | 0 dB |
| 10 dB | 9.5 dB | _____ dB | 10.5 dB |
| 20 dB | 19.5 dB | _____ dB | 20.5 dB |
| 30 dB | 29.5 dB | _____ dB | 30.5 dB |
| 40 dB | 39.5 dB | _____ dB | 40.5 dB |
| 50 dB | 49.5 dB | _____ dB | 50.5 dB |
| 60 dB | 59.5 dB | _____ dB | 60.5 dB |
| 70 dB | 69.2 dB | _____ dB | 70.8 dB |
| Linear Scale Fidelity | | | |
| 0 dB | -223.6 mV | Reference level | -223.6 mV |
| 6 dB | 105.11 mV | _____ | 111.49 mV |
| 12 dB | 49.21 mV | _____ | 62.59 mV |
| Frequency Drift** | | | |
| <50 kHz per 5 minutes | | _____ | |
| Resolution Bandwidth Switching | | | |
| 3 kHz | | _____ Ref. | |
| 10 kHz | | _____ dB | |
| 30 kHz | | _____ dB | |
| 100 kHz | | _____ dB | |
| 300 kHz | | _____ dB | |
| 1 MHz | | _____ dB | |
| 3 MHz | | _____ dB | |
| Gain Compression | | | |
| <1.0 dB | | _____ | |

** 2-hour minimum warmup required before running test.

ADJUSTMENTS

Introduction

The procedures in this chapter adjust the analyzer's electrical performance to the specifications of Table 1-1 in the Installation Manual (HP Part Number 08590-90003).

To fully calibrate the analyzer, all seven adjustments listed in Table 2-1 must be completed in the order shown. If one or more analyzer assemblies have been replaced or repaired, the relevant adjustment procedures should be done before performance testing the instrument. The internal CAL FREQ, CAL AMPTD, and CAL YTO DELAY must also be run.

All adjustments require access to the interior of the analyzer.

WARNING

The analyzer contains potentially hazardous voltages. Refer to the safety symbols provided on the analyzer and the general safety instructions in this manual before operating the unit with the cover removed. Ensure that safety instructions are strictly followed. Failure to do so can result in severe or fatal injury.

Table 2-1. HP 8590A Spectrum Analyzer Adjustments

| Adjustment Name | Affected Assembly |
|---|---|
| Second Converter LO and Bandpass Adjustment | Second Converter A5 |
| Third Converter LO and CAL Output Adjustment | Third Converter A9 |
| Second IF Bandpass Amplifier and Bandpass Filter Adjustment | Second IF A10 |
| Step Gain Assembly RF Gain Adjustment | Step Gain A12 |
| Step Amplifier Gain Adjustment | Step Gain A12 |
| Log Amplifier Log and Linear Adjustment | Log Amplifier A14 |
| Crystal and LC Bandwidth Filter Adjustments | Bandwidth Filter No. 1 A11 and Bandwidth Filter No. 2 A13 |

Before You Start

There are three things you must do *before* attempting the adjustment procedures in this chapter:

1. Remove the analyzer's dust cover. Familiarize yourself with the safety symbols marked on the analyzer and the general safety instructions and symbol definitions given in the front of this manual.
2. Plug the analyzer into the ac power mains. Switch the analyzer on and let it warm up. If the analyzer has been stored at least 2 hours in an area where the ambient temperature is within the specified operating range (0 to 55°C), a 30-minute warmup is required. If the storage temperature was less than 0°C, warm up the analyzer for at least 2 hours.
3. Read the rest of this section before you start any of the adjustment procedures.

Test Equipment You'll Need

Table 1-2 lists the recommended test equipment needed to maintain and adjust the analyzer. Each adjustment procedure includes a list of the equipment and accessories required for that adjustment. Although Hewlett-Packard equipment is recommended, equivalent equipment may be used provided it meets the critical specifications shown in Table 1-2.

Adjustment Tools

For adjustments requiring a nonmetallic tuning tool, use fiber tuning tool, HP Part Number 8170-0033. Never try to force an adjustment control in the analyzer. This is especially critical when tuning slug-tuned inductors and variable capacitors.

Abnormal Indications During Adjustment

If the indications received during calibration do not agree with the normal conditions given in the adjustment procedures, a fault exists in your analyzer. The fault should be repaired *before* proceeding with any further adjustments. Refer to the troubleshooting and repair information in Chapter 5.

Periodically Verifying Calibration

The analyzer requires periodic verification of operation. Under most conditions of use, you should test the analyzer at least once a year. To fully verify analyzer operation and calibration, you should run the entire set of performance tests indicated in Chapter 1. When test results show proper operation and calibration, no adjustments will be needed. However, if test results indicate the instrument doesn't meet specifications, the cause should be determined and rectified. Refer to Chapter 5 before attempting recalibration.

Second Converter LO and Bandpass Adjustments

The second converter LO is adjusted for 1728.7 MHz, and the bandpass filter is adjusted for a 2050-MHz bandpass.

Equipment

| | |
|------------------------------------|----------------|
| Frequency Counter | HP 5342A |
| Comb Generator | HP 8406A |
| Test Cable, SMC(f) to BNC(m) | HP 11592-60001 |
| Adapter, Type N(m) to BNC(f) | HP 1250-0780 |
| Adapter, SMC(f) to SMC(f) | HP 1250-1113 |
| Adapter, SMC(m) to SMC(m) | HP 1250-0827 |
| Adapter, SMC(m) to BNC(m) | HP 1250-0831 |
| BNC Cable, 120 cm (48 in) | HP 10503A |

Additional Equipment for Option 001

| | |
|---|----------------|
| Minimum Loss Adapter, 75- to 50-ohm | HP 08558-60031 |
| BNC Cable, 30 cm (12 in), 75-ohm | HP 11652-60012 |
| Adapter, SMA(f) to SMA(f) | HP 1250-1158 |
| Adapter, BNC(f) to SMA(m) | HP 1250-1200 |

Adjustment Procedure

1. Set equipment as follows:

| | |
|-------------------------------|----------|
| Frequency Counter: | |
| Range | 1750 MHz |
| Sample Rate | Full CCW |
| Comb Generator: | |
| Comb Frequency | 100 MHz |
| Interpolation Amplitude | OFF |

2. Press the following analyzer keys:

PRESET (wait for preset to complete)

FREQUENCY **3** **0** **0** **MHz**

SPAN **1** **0** **0** **MHz**

AMPLITUDE **2** **0** **-dBm**

[ATTEN] **0** **dB**

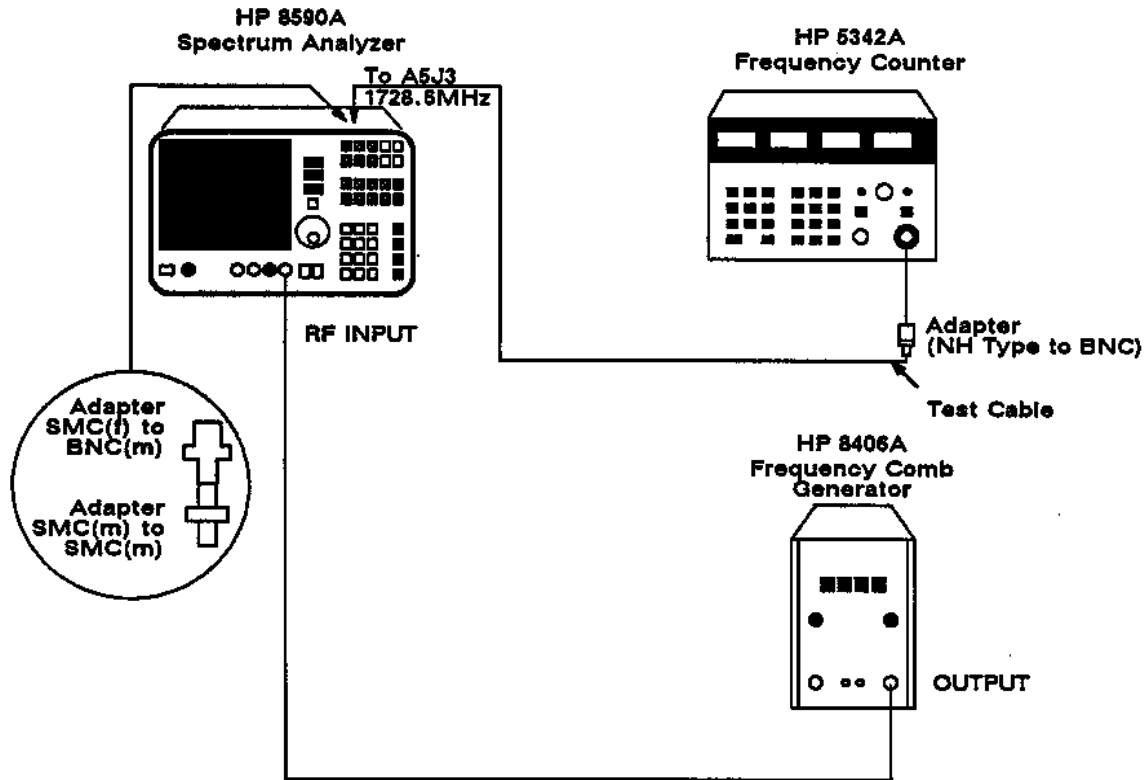


Figure 2-1. Second Converter LO and Bandpass Adjustment

3. Connect the equipment as shown in Figure 2-1. Connect the counter to the second LO test jack A5J3 at the top of Second Converter Assembly A5. Connect the comb generator to the analyzer RF input.

If your analyzer has Option 001 (75-ohm RF input), connect the 75-ohm side of the minimum loss adapter to the 75-ohm cable, connect the other end of the 75-ohm cable to the RF input of the analyzer, and connect the 50-ohm cable from the comb generator to the 50-ohm side of the minimum loss adapter.

4. Adjust the second LO frequency adjustment A5C4 for 1728.7 MHz. Use an Allen wrench through the center of the drilled-out 5/16-inch nut driver to enable the nut to be tightened without shifting frequency.
5. Set the comb generator for a 100-MHz comb.
6. Center the 300-MHz comb tooth with the RPG as necessary. Press the following analyzer keys:
SPAN 2 0 MHz
SWEEP/BW RES BW 3 0 0 kHz
7. Loosen the lock nuts on A5C1 and A5C2. Very carefully turn their tuning screws clockwise until they are bottomed on the cavity.

8. Turn the A5C1 and A5C2 tuning screws one turn counterclockwise and lightly tighten their lock nuts.
9. Loosen the lock nut on A5C3 and adjust the A5C3 tuning screw for peak signal on the CRT. Press **AMPLITUDE** [LINEAR] for best resolution while making final adjustments. It may also be necessary to increase amplitude on the CRT to see the signal.
10. Adjust the A5C1 for peak signal on the CRT. Reduce the REF level as necessary to keep a signal on the CRT by pressing **AMPLITUDE** and then the up arrow key (or use the numeric keypad).
11. Adjust the A5C2 for maximum signal on the CRT. Again it may be necessary to reduce the REF level to keep the signal on the CRT.
12. As tuning is completed, carefully tighten the lock nuts on the A5C1, A5C2, and A5C3 so that the signal level does not change on the CRT.
13. Adjust the A5L2 second mixer match adjustment for maximum signal on the CRT.
14. Check the second LO frequency for 1728.7. If the frequency error is greater than ± 0.5 MHz, repeat the procedure, beginning with Step 4.

Third Converter LO and CAL Output Adjustment

The third converter LO power is adjusted for $-20 \text{ dBm} \pm 1.0 \text{ dB}$ CAL output. The third LO frequency is checked for $299.9 \text{ MHz} \pm 300 \text{ kHz}$.

Equipment

| | |
|---|---------------------|
| Signal Generator | HP 8640B |
| Low Pass Filter, 300-MHz | Telonic TLP 300-4AB |
| Power Meter | HP 436A |
| Power Sensor | HP 8482A |
| Adapter, Type N(m) to BNC(f) (2 required) | HP 1250-0780 |
| Adapter, Type N(f) to BNC(m) | HP 1250-0077 |
| BNC Cable, 120 cm (48 in) (4 required) | HP 10503A |

Additional Equipment for Option 001

| | |
|---|----------------|
| Minimum Loss Adapter, 75- to 50-ohm | HP 08558-60031 |
| BNC Cable, 30 cm (12 in), 75-ohm | HP 11652-60012 |
| Adapter, SMA(f) to SMA(f) | HP 1250-1158 |
| Adapter, BNC(f) to SMA(m) | HP 1250-1200 |

Adjustment Procedure

1. Set the signal generator as follows:

| | |
|--------------------|-----------|
| Output Level | -20 dBm |
| Frequency | 299.9 MHz |
| AM and FM | OFF |
| RF | ON |
| Counter Mode | INT |

2. Press the following analyzer keys:

PRESET (wait for preset to complete)
FREQUENCY **2** **9** **9** **.** **9** **MHz**
SPAN **5** **0** **MHz**
SWEEP/BW **[RES BW]** **1** **MHz**
AMPLITUDE **1** **0** **-dBm**
[LINEAR]

3. Connect the equipment as shown in Figure 2-2. Connect the analyzer CAL output to the RF input jack.
4. Press **FREQUENCY** and use the RPG to center the 299.9-MHz Third LO signal on the CRT.
5. Adjust the A9L1 third converter FREQ adjustment for maximum signal amplitude.

6. Tune the signal generator to the frequency of the third converter LO ($299.9 \text{ MHz} \pm 300 \text{ kHz}$).

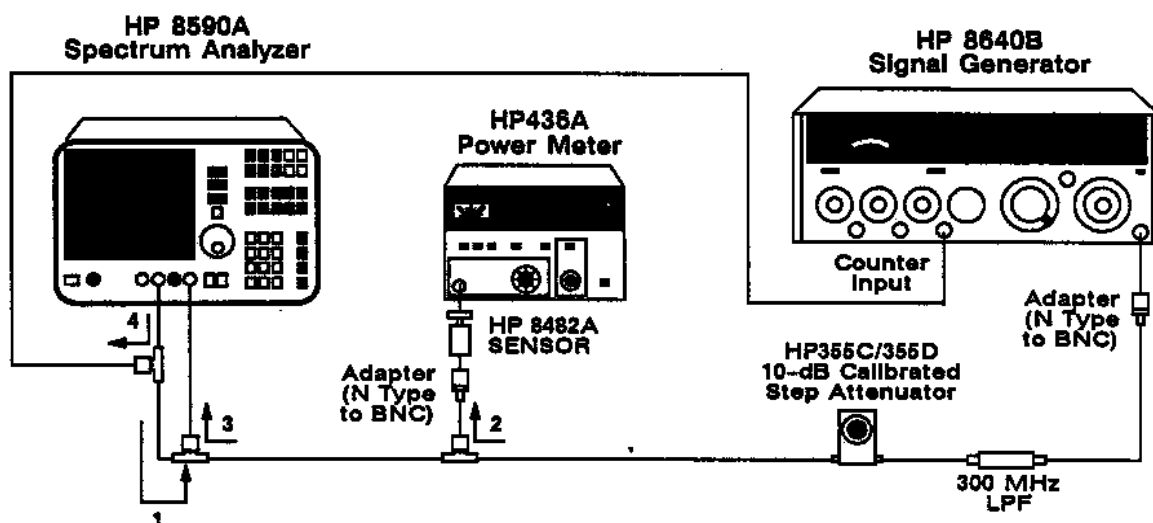


Figure 2-2. Third Converter LO and CAL Output Adjustment

7. Connect the signal generator through a 300-MHz LPF to the calibrated step attenuator. Set the step attenuator to 20 dB. Connect the power meter input to the other side of the attenuator, as shown in Figure 2-2.
8. Set the signal generator output level for $-20 \text{ dBm} \pm 1.0 \text{ dB}$ on the power meter. Leave the signal generator set at this level.
9. Connect the reference signal from Step 8 (attenuator output) to the analyzer RF input connector.
10. Set the signal from the signal generator to a convenient reference level on the analyzer display by pressing the analyzer **AMPLITUDE** key and using the RPG.
11. Adjust the A9R4 third converter calibrator level adjustment to the reference level (signal amplitude set in Step 10).
12. Connect the analyzer CAL output to the counter input of the signal generator. Set the signal generator counter mode to EXT EXPAND X10. The third LO frequency should read $299.9 \text{ MHz} \pm 300 \text{ kHz}$.

Second IF Bandpass Amplifier and Bandpass Filter Adjustment

The second IF 321.3-MHz bandpass amplifier and 321.3-MHz bandpass filter are adjusted for maximum signal amplitude.

Equipment

| | |
|------------------------------------|----------------|
| Signal Generator | HP 8640B |
| Adapter, Type N(f) to BNC(m) | HP 1250-0077 |
| Test Cable, SMC(f) to BNC(m) | HP 11592-60001 |

Adjustment Procedure

1. Press the following analyzer keys:
[PRESET] (wait for preset to complete)
[FREQUENCY] [3] [2] [0] [MHz]
[SPAN] [1] [0] [0] [MHz]
[SWEEP/BW] [RES BW] [1] [MHz]
[AMPLITUDE] [1] [0] [-dBm]
[ATTEN] [0] [dB]
2. Set the signal generator to output a 321.3-MHz, -35 dBm, CW signal.
3. Remove the W15 blue cable from the second IF BPF input, A10J1. Connect the signal generator through the test cable to A10J1, as shown in Figure 2-3.
4. Adjust bandpass filter capacitors A10C1, A10C2, and A10C3 on the second IF assembly fully counter-clockwise. Press [AMPLITUDE] and adjust the RPG as necessary for an on-screen display.
5. Adjust the A10C1 for maximum signal amplitude. Make final adjustments by pressing the analyzer [AMPLITUDE] [LINEAR] keys. Use the [AMPLITUDE] setting to keep the signal on the top half of display.
6. Adjust the A10C3 for maximum signal amplitude. There may be a double peak; tune past the first peak to the second peak. The displayed signal will peak, fall off, and then peak again.
7. Repeat Steps 5 and 6, adjusting the A10C1 and A10C3 for maximum amplitude.
8. Adjust the A10C2 for maximum signal amplitude. There may be a double peak; tune to the second peak. Reduce the signal generator input level to keep the signal on the display.

Note: The value of the A10L2 is set at the factory. Its adjustment has very little effect on the signal or performance of the analyzer. In turn, A10L2 doesn't require adjustment since the position of its core is not critical.

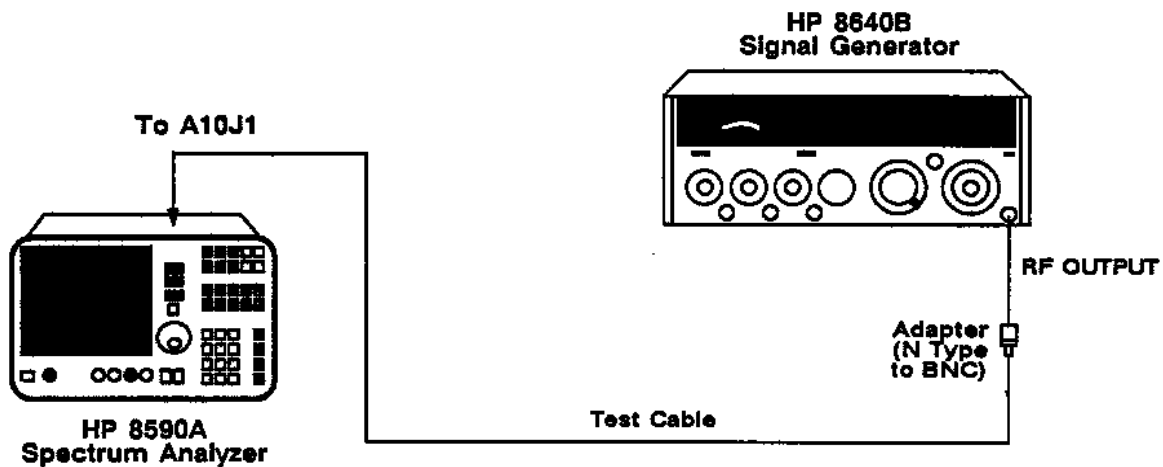


Figure 2-3. Second IF Bandpass and Bandpass Filter Adjustment

Step Gain Assembly IF Gain Adjustment

The IF gain (sensitivity) of the step gain assembly is adjusted by injecting a 21.4 MHz signal at A15XA9. The Third Converter Assembly is removed and replaced with a special extender board, used to inject the 21.4 MHz signal generator output.

Equipment

| | |
|--|----------------------------------|
| Signal Generator | HP 8640B |
| Power Meter | HP 436A |
| Power Sensor | HP 8482A |
| Adapter, Type N(m) to BNC(f) | HP 1250-0780 |
| Adapter, Type N(f) to BNC(m) | HP 1250-0077 |
| Adapter, BNC(f) to alligator clips (short leads) | HP 8120-1292 |
| BNC Cable, 120 cm (48 in) (2 required) | HP 10503A |
| Special Extender Board (w/51.1 ohm resistor) | HP 08505-60109 w/HP 0757-0394 |

Note: To make the special extender board, solder a 51.1 ohm resistor from pin 1 (GND) to pin 5 of a standard extender board, HP Part Number 08508-60109. Leave the resistor leads long enough for easy connection of clip leads.

Adjustment Procedure

1. Press the following analyzer keys:

PRESET
SPAN 0 **HZ**
SWEEP/BW [RES BW] 3 0 **KHZ**
CAL [CORRECT OFF/on] **OFF**
MKR [MARKER NORMAL]

2. Connect the output of the HP 8640B through adapters to the HP 8482A power sensor. Adjust the power for -11 dBm.
3. Remove the A9 assembly and insert the special extender board. Connect the output of the HP 8640A across the 51.1 ohm resistor on the extender board using the BNC-to-clip-lead adapter. The red lead (center conductor) should be connected to extender board pin 5, and the black lead should be connected to pin 1. Ensure that the cable is run straight up at least 10 inches from the extender board to avoid pickup of unwanted signals.
4. ^{ONE} Set the signal generator frequency for peak amplitude on the CRT display
5. Adjust the A12R4 gain (overall IF gain) adjustment for marker level of 0 dBm.
6. Remove the special extender board and replace the A9 assembly. Perform CAL AMP routine.

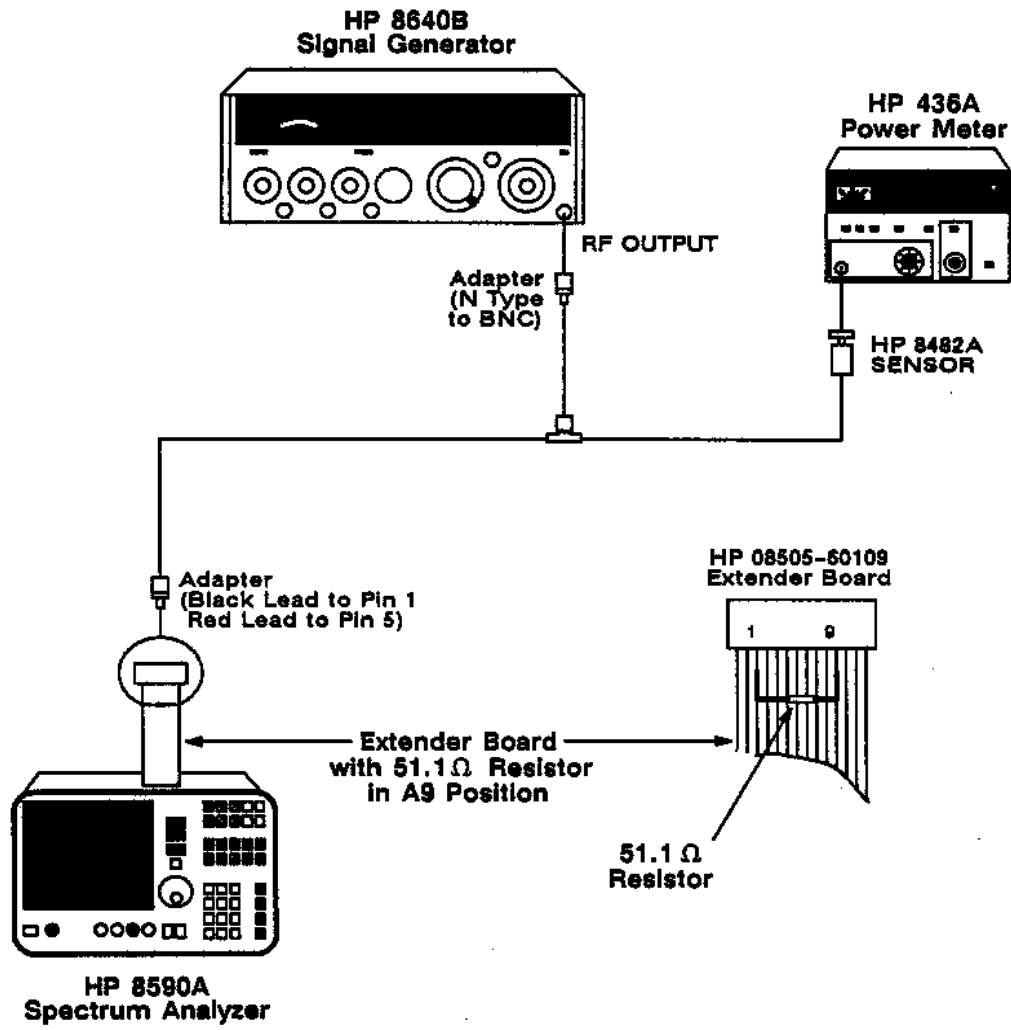


Figure 2-4. Step Gain Assembly RF Gain Adjustment Test Setup

Step Amplifier Gain Adjustments

Amplifier gain steps of 0 dB, 20 dB, and 40 dB are adjusted.

Equipment

| | |
|--|----------------|
| Signal Generator | HP 8640B |
| Power Meter | HP 436A |
| Power Sensor | HP 8482A |
| 10-dB Step Attenuator | HP 355D-H82 |
| Adapter, Type N(m) to BNC(f) | HP 1250-0780 |
| Test Cable, SMC(f) to BNC(m) | HP 11592-60001 |
| Adapter, SMC(m) to SMC(m) | HP 1250-0827 |
| BNC Cable, 120 cm (48 in) (2 required) | HP 10503A |

Adjustment Procedure

2 ① Press the following analyzer keys:

PRESET (wait for preset to complete)

FREQUENCY **3** **0** **0** **MHz**

PEAK SEARCH [NEXT PEAK]

SIGNAL TRACK

SPAN **1** **0** **MHz**

SWEEP/BW [RES BW] **1** **MHz**

SWEEP/BW [VID BW] **1** **MHz**

AMPLITUDE [LOG dB/DIV] **1** **dB/DIV**

MKR → REF LEVEL

1 ① Connect the equipment as shown in Figure 2-5. Set the signal generator to output a 321.3-MHz, -14 dBm, CW signal. Connect the signal generator to one side of a 10-dB step attenuator.

3. Disconnect cable W16 from the A9J1. Connect the other side of the 10-dB step attenuator to the A9J1 using the test cable.
4. Tune the signal generator frequency for peak amplitude on the display (near 321.3 MHz). Adjust the signal generator output level for a signal level of -10 dBm on the analyzer display.
5. Set the step attenuator to 10 dB and press the following analyzer keys:
AMPLITUDE **1** **0** **-dBm**.
6. Adjust the A12R19 10 dB adjustment for a signal level of -20 dBm on the analyzer display.
7. Set the step attenuator to 20 dB and press the following analyzer keys:
AMPLITUDE **2** **0** **-dBm**.

8. Adjust the A12R2 20 dB adjustment for a signal level of -30 dBm on the analyzer display.

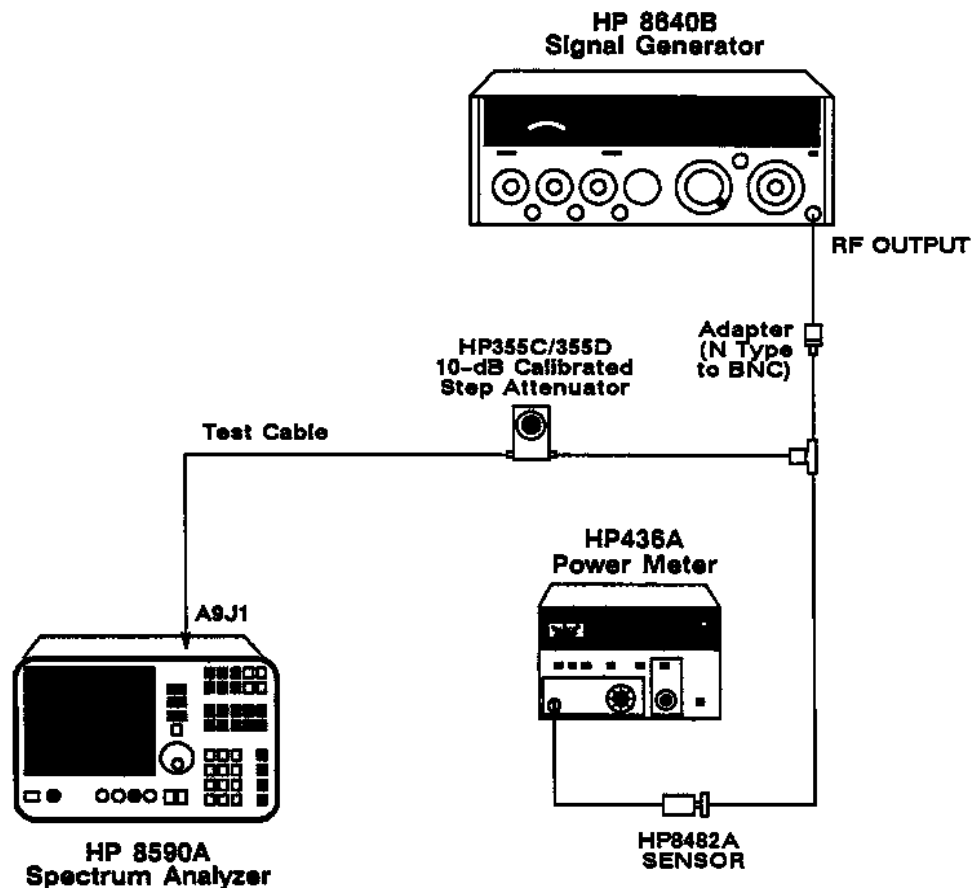


Figure 2-5. Step Amplifier Gain Adjustment Test Setup

9. Set the step attenuator to 40 dB and press the following analyzer keys:
AMPLITUDE **4** **0** **-dBm**.

Note: Increasing the amount of video filtering might help reduce noise. Set the video filter so noise is reduced but the signal amplitude remains unchanged.

10. Adjust the A12R1 40-dB adjustment for a signal level of -50 dBm on the analyzer display.
11. Check the REF level settings from 0 to -50 dBm, as shown in Table 2-2.
12. Disconnect the step attenuator and reconnect cable W16 to the A9J1.

Adjustments

Table 2-2. Reference Level Control Check

| Reference level (dBm) | Attenuator Setting (dB) | Reference Deviation |
|--------------------------|----------------------------|---------------------|
| 0 | 0 | Ref. _____ mV |
| -10 | 10 | ± 0.5 Division |
| -20 | 20 | ± 0.5 Division |
| -30 | 30 | ± 0.5 Division |
| -40 | 40 | ± 0.5 Division |
| -50 | 50 | ± 0.5 Division |

Log Amplifier Log and Linear Adjustment

Step attenuators are used to change, in calibrated steps, the input signal level of the spectrum analyzer. The AUX VIDEO output on the rear panel is monitored, and adjustments are performed to calibrate the Log Amplifier Assembly A14.

Equipment

| | |
|---|----------------|
| Signal Generator | HP 8640B |
| Digital Voltmeter | HP 3456A |
| 10 dB Step Attenuator | HP 355D-H82 |
| 1 dB Step Attenuator | HP 355C-H80 |
| Adapter, Type N(m) to BNC(f) | HP 1250-0780 |
| Test Cable, SMC(f) to BNC(m) | HP 11592-60001 |
| Cable Assembly, Banana Plug to Alligator Clip | HP 11102A |
| BNC Cable, 120 cm (48 in) (2 required) | HP 10503A |
| BNC Cable, 20 cm (9 in) | HP 10502A |

Adjustment Procedure

- Set the digital voltmeter as follows:

| | |
|----------|----------|
| Range | 10 |
| Function | DC VOLTS |
| Trigger | INTERNAL |
| Math | OFF |
| Auto Cal | ON |

- Press the following analyzer keys:

PRESET

FREQUENCY \square 2 0 0 1 Hz

CAL [CORRECT OFF] [MORE] [CAL FLATNESS] [STP GAIN ZERO]

TRACE A [CLEAR WRITE A]

SPAN 0 kHz

SWEEP/BW [RES BW] 1 0 kHz

AMPLITUDE 1 0 -dBm [LINEAR]

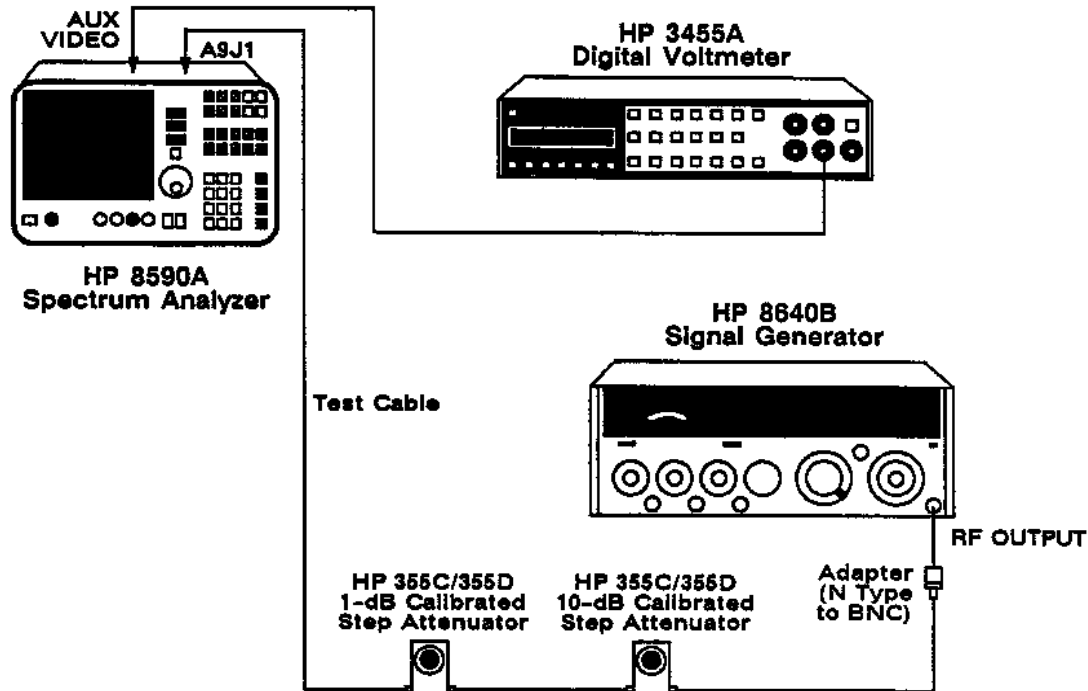


Figure 2-6. Log Amplifier Log and Linear Adjustment

3. Connect the equipment as shown in Figure 2-6. Set the 1-dB step attenuator to 10 dB. Set the signal generator frequency to 321.3 MHz and the output level to -13 dBm. Remove the W16 (red cable) from the A9J1. Connect the signal generator output through the step attenuators and the test cable to the A9J1.
4. Tune the signal generator frequency for maximum signal amplitude on the display, with the 10-dB step attenuator set to 0 dB. It may be necessary to reduce the signal generator output level slightly.
5. Disconnect the signal generator output from the step attenuator. Measure the offset at the AUX VIDEO output on the rear panel and record for later reference: _____ mV.
6. Connect the signal generator to the step attenuator and adjust the signal generator fine-tune control to peak the signal on the analyzer display.
7. Adjust the signal generator output level for DVM reading (± 1.0 mV) of 1000 mV plus the offset recorded in Step 5, as measured at the AUX VIDEO output on the rear panel.
8. Press the following analyzer keys:
AMPLITUDE [LOG dB/DIV] 1 0 dB/DIV.
9. Set the 10-dB step attenuator to 0 dB and adjust the A14R23 slope for a DVM reading (± 1 mV) of 1000 mV plus the offset recorded in Step 5, as measured at the AUX VIDEO output on the rear panel.

10. Set the 10 dB step attenuator to 60 dB and adjust the A14R10 offset for the DVM reading (± 1 mV) of 250 mV plus the offset recorded in Step 5, as measured at the AUX VIDEO output on the rear panel.
11. Repeat Steps 9 and 10 until no further adjustment is necessary.
12. Set the 10 dB step attenuator to 30 dB and adjust the A14R23 slope for a DVM reading (± 1 mV) of 625 mV plus the offset recorded in Step 5, as measured at the AUX VIDEO output on the rear panel.
13. Set the 10 dB attenuator to 0 dB and adjust the A14R69 -30 dB for a DVM (± 1 mV) of 1000 mV plus the offset recorded in Step 5, as measured at the AUX VIDEO output on the rear panel.
14. Repeat Steps 12 and 13 until no further adjustment is necessary.
15. Set the 10 dB step attenuator to 10 dB and adjust the A14R23 slope for a DVM reading of 875 mV ± 1 Mv plus the offset recorded in Step 5, as measured at the AUX VIDEO output on the rear panel.
16. Set the 10 dB step attenuator to 0 dB and adjust the A14R39 -10 dB for a DVM reading (± 1 mV) of 1000 mV plus the offset recorded in Step 5, as measured at the AUX VIDEO output on the rear panel.
17. Repeat Steps 15 and 16 until no further adjustment is necessary.
18. Repeat Steps 9 through 16 until the limits in Table 2-3 are met.

Table 2-3. Log Fidelity Check

| Attenuator Setting (dB) | DVM Reading* |
|-------------------------|----------------------|
| 0 | Ref: 1000 ± 1 mV |
| 10 | 875 ± 3 mV |
| 20 | 750 ± 4 mV |
| 30 | 625 ± 4 mV |
| 40 | 500 ± 5 mV |
| 50 | 375 ± 6 mV |
| 60 | 250 ± 7 mV |
| 70 | 125 ± 8 mV |
| * plus offset | |

Adjustments

Linear Output and Step Gain

19. Press the following analyzer keys:

AMPLITUDE **5** **0** **-dBm**
[LINEAR]

20. Set the 10 dB step attenuator to 0 dB and adjust the A14R34 LIN for a DVM reading (± 1 mV) of 1000 mV plus the offset recorded in Step 5, as measured at the AUX VIDEO output on the rear panel.
21. Make the adjustments indicated in Table 2-4.

Table 2-4. Linear Gain Adjustments.

| Adjustment | Step (dB) | Reference (dBm) | DVM Reading* |
|------------|-----------|-----------------|----------------------|
| A14R34 | 0 | -50 | Ref: 1000 \pm 1 mV |
| A14R33 | 10 | -60 | 1000 \pm 5 mV |
| A14R30 | 20 | -70 | 1000 \pm 5 mV |
| A14R27 | 30 | -80 | 1000 \pm 5 mV |
| None | 40 | -90 | 1000 \pm 30 mV |

*1000 mV plus offset from Step 5

Crystal and LC Bandwidth Filter Adjustments

The crystal and LC bandwidth filter circuits are adjusted for symmetry, center frequency, and peak amplitude. Checking the 3-dB bandwidths also verifies correct operation of the bandwidth control circuitry on Analog Interface Assembly A7.

Equipment

Crystal Shorts (3 required) See Figure 2-7
 BNC Cable, 120 cm (48 in) HP 10503A

Additional Equipment for Option 001

BNC Cable, 30cm (12 in), 75-ohm HP 11652-60012

Note: A crystal short (Figure 2-7) consists of a .01- μ F capacitor (HP Part Number 0160-0161) and a 90.9-ohm resistor (HP Part Number 0757-0400) connected in series. Two square-terminal connectors (HP Part Number 0362-0265) are used to connect the crystal shorts across the test points.

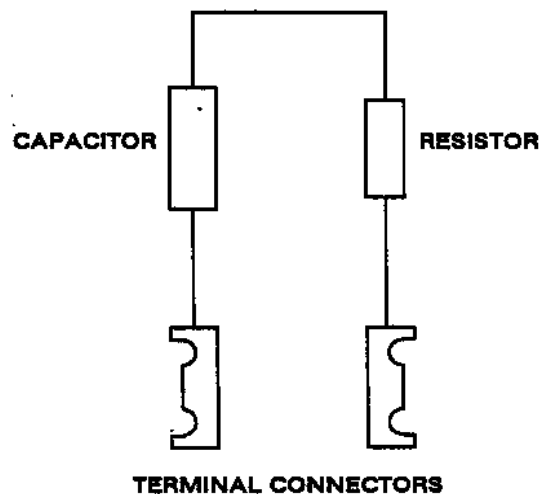


Figure 2-7. Crystal Short Configuration

Adjustments

Procedure

Connect See 2-8

1. Press the following analyzer keys:
PRESET (wait for preset to complete)
FREQUENCY **3** **0** **0** **MHz**
PEAK SEARCH [NEXT PK RIGHT]
SIGNAL TRACK
SPAN **2** **MHz**
SWEEP/BW [RES BW] **1** **MHz**
AMPLITUDE [ATTEN] **0** **dB**
AMPLITUDE **-1** **0** **-dBm**
MKR [MARKERS OFF]

Crystal Alignment

2. Connect the equipment as shown in Figure 2-8.
3. Press the menu **1** [3 dB points].
4. Check that the signal is 1 MHz \pm 200 kHz.
5. Press the following analyzer keys:
MKR [MARKERS OFF]
SPAN **5** **0** **kHz**
SWEEP/BW [RES BW] **1** **0** **kHz**
Press menu **1** [3 dB points]

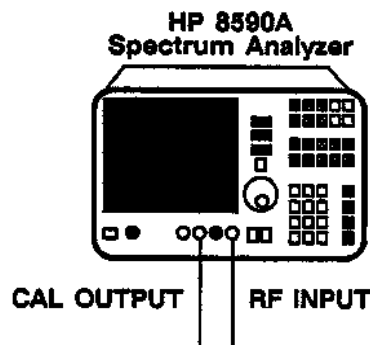


Figure 2-8. Crystal and LC Bandwidth Filter Adjustments

6. Check that the signal is 10 kHz \pm 2 kHz wide at the 3-dB points.
7. Press the following analyzer keys:
MKR [MARKERS OFF]
SPAN **2** **0** **0** **kHz**
SWEEP/BW [RES BW] **3** **0** **kHz**
AMPLITUDE LINEAR
DISPLAY UNITS dBm
PEAKSEARCH SIG TRACK

8. Press the analyzer **FREQUENCY** key and use the RPG to center the signal.
 9. Press the analyzer **AMPLITUDE** key and use the RPG to place the signal at the sixth graticule line. *attn 10dB*
- Note:** A nonmetallic tuning tool is required for adjustments on the A11 and A13 bandwidth filter assemblies.
10. Connect the crystal shorts (through cover access holes) across the following pairs of adjustment points: A13TP1/TP2, A11TP1/TP2, and A11TP4/TP5.
- Note:** Keep the crystal spike centered during adjustment. The SYM and CTR adjustments for each crystal interact.
11. Press **FREQUENCY** and use the RPG to center the bandpass spike (Figure 2-9) on the analyzer display.
 12. Adjust the A13C54 CTR for minimum signal amplitude. Then adjust the A13C38 SYM and A13C54 CTR for a centered and symmetrical bandpass, as shown in Figure 2-9.

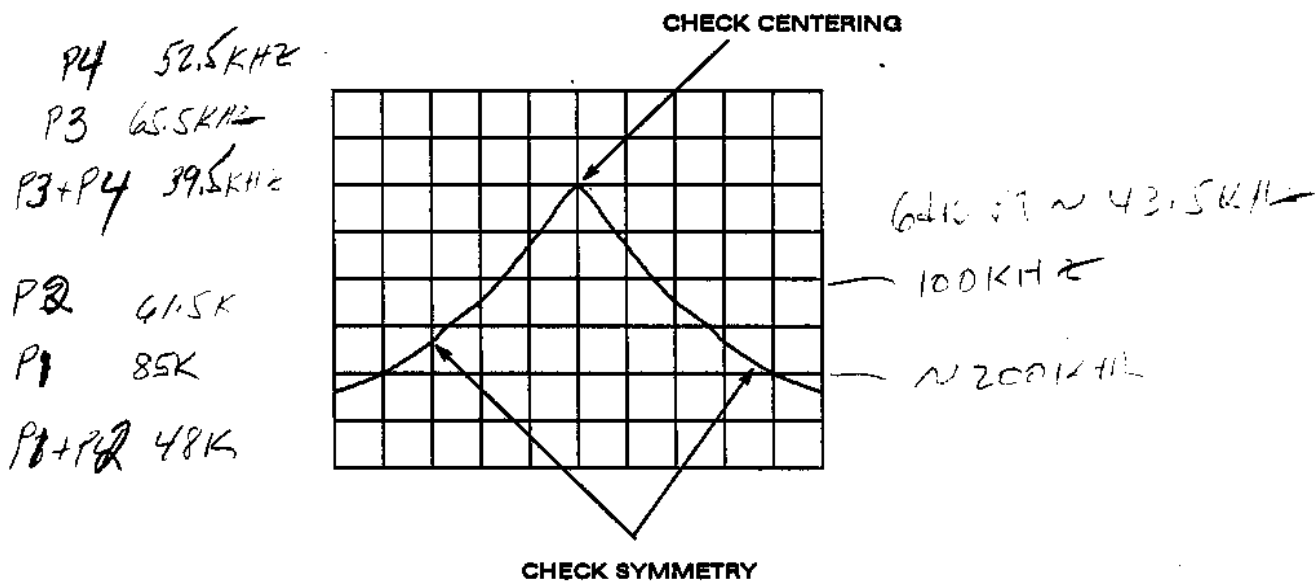


Figure 2-9. Adjusting Crystal Symmetry and Crystal Centering

13. Remove the crystal short from the A13TP1/TP2 and connect it across the A13TP4/TP5.
14. Adjust the A13C25 CTR for minimum signal amplitude. Then adjust the A13C15 SYM and A13C25 CTR for a centered and symmetrical bandpass.

Adjustments

15. Remove the crystal short from the A11TP4/TP5 and connect it across the A13TP1/TP2.
16. Adjust the A11C54 CTR for minimum signal amplitude. Then adjust the A11C38 SYM and A11C54 CTR for a centered and symmetrical bandpass.
17. Remove the crystal short from the A11TP1/TP2 and connect it across the A11TP4/TP5.
18. Adjust the A11C25 CTR minimum signal amplitude. Then adjust the A11C15 SYM and A11C25 CTR for a centered and symmetrical bandpass.
19. Remove the crystal shorts.
20. Press the following analyzer keys:
SPAN **5** **0** **kHz**
SWEEP/BW **[RES BW]** **3** **0** **kHz**
MARKEIS OFF
21. Press the analyzer **FREQUENCY** key and use the RPG to center the signal on the display.
22. Press the **SWEEP/BW** **[RES BW]** keys and switch between 30-kHz and 10-kHz resolution bandwidths, and back, several times. Verify that the signal shift does not exceed 3 kHz (0.6 division). If the signal shift is out of tolerance, repeat Steps 11 through 24.

LC Alignment

23. Press the following analyzer keys:
SWEEP/BW **[RES BW]** **1** **0** **0** **kHz**
SPAN **7** **MHz**

Referring to the Analog Interface Assembly A7 schematic shown in Figure 5-15, jumper the BW7 line to +15 V.

Note: When Bandwidth Filter Assemblies A11 and A13 are installed with covers in place, midget copper alligator clips (HP Part Number 1400- 0483) can be used to short test points to the cover.

24. Perform preliminary LC filter adjustments as follows:

Note: It might be necessary to press the analyzer **AMPLITUDE** key to set the REF level to obtain an on-screen display during the following adjustment.

- a. Remove the A13 cover and install A13 on an extender board.
- b. Short the following adjustment points to ground: A13TP6, A11TP3, and A11TP6. This widens all but one pole of the LC filters.

- c. Center the signal on the analyzer display using the **FREQUENCY** control key and the RPG. Adjust the A13C73 for minimum signal amplitude.
 - d. Disconnect the short from the A13TP6 and short the A13TP3 to ground.
 - e. Adjust the A13C74 for minimum signal amplitude.
 - f. Reinstall the A13 and its cover. Disconnect the short from the A11TP3. Remove the cover from Assembly A11 and install the A11 on the extender board.
 - g. Short the A13TP6 to ground.
 - h. Adjust the A11C73 for minimum signal amplitude.
 - i. Disconnect the short from A11TP6 and short the A11TP3 to ground.
 - j. Adjust the A11C74 for minimum signal amplitude.
 - k. Disconnect the shorts from the adjustment points and reinstall the A11 and its cover.
25. Short the A11TP3, A11TP6, and A13TP3 to ground. Press the following analyzer keys:
- SWEEP/BW** [RES BW] **1** **0** **0** kHz
SPAN **2** **0** **0** kHz
26. Center the signal on the analyzer display using the **FREQUENCY** key and the RPG. Adjust the A13C45 LC CTR for symmetrical bandpass on the display. Use the RPG to keep the crystal spike centered.
27. Move the short from the A13TP3 to the A13TP6. Leave the other shorts in place. Center the signal on the analyzer display with the RPG. Adjust the A13C23 LC CTR for symmetrical bandpass on the display, keeping the crystal spike centered.
28. Move the short from the A11TP6 to the A11TP3. Leave the other shorts in place. Center the signal on the display with the RPG. Adjust the A11C45 LC CTR for symmetrical bandpass on the display, keeping the crystal spike centered.
29. Move the short from the A11TP3 to the A11TP6. Leave the other shorts in place. Center the signal on the display with the RPG. Adjust the A11C23 LC CTR for symmetrical bandpass on the display, keeping the crystal spike centered.
30. Disconnect the shorts from the A11TP6, A13TP3, A13TP6, and from ground. Ground the BW7 control line at Analog Interface Assembly A7, connector J6, pin 2.
31. Press the following analyzer keys:
- SWEEP/BW** [RES BW] **3** **0** kHz
SPAN **1** **0** **0** kHz

Press the **FREQUENCY** key and center the signal on the display using the RPG. Then press the following analyzer keys:

SWEEP/BW [RES BW] **1** **0** **0** kHz

Adjustments

Note where the signal crosses the center vertical graticule line on the analyzer display.

32. Adjust the A11C23, A11C45, A13C23, and A13C45 in succession, so that the amplitude of the signal is peaked where it crosses the center line on the display. Repeat Step 33 between adjustments, as necessary.
33. Repeat Steps 33 and 34 until the 30-kHz and 100-kHz bandwidths are centered with each other. If the signal shift between the 30-kHz and 100-kHz bandwidths is greater than 10 kHz (one division), repeat steps 25 through 34.

Bandwidth Amplitude

34. Press the following analyzer keys:

SWEEP/BW **[RES BW]** **1** **0** **0** **kHz**
SPAN **1** **MHz**

Referring to the Analog Interface Assembly A7 schematic shown in Figure 5-10, jumper the BW7 control line at connector J6, pin 2, to +15 Vdc. (A7 J6 PIN 1)

35. Short the A11TP3, A11TP6, A13TP3, and A13TP6 to ground.
36. Press the following analyzer keys:
SPAN **2** **MHz**
37. ~~Center the signal~~ **ADJUST AMPLITUDE** at seven divisions on the analyzer display using the **AMPLITUDE** key and the RPG.
38. Remove the shorts from the A13TP3 and A13TP6, and center the signal with the RPG. Adjust the A13R26 LC for a signal amplitude of seven divisions.
39. Remove the short from the A11TP3 and A11TP6. Adjust the A11R26 LC for a signal amplitude of seven divisions.
40. Repeat Steps 37 through 41 until no further adjustment is necessary.
41. Adjust the A11R31 and A13R31 XTL fully counterclockwise.
42. Press the following analyzer keys:
SWEEP/BW **[RES BW]** **1** **kHz**
SPAN **5** **0** **kHz**
Press the **FREQUENCY** key and center the signal with the RPG. Adjust the A11R31 XTL and A13R31 XTL equally for a signal amplitude of seven divisions. Each potentiometer should be adjusted to accomplish half the necessary increase in signal amplitude.
43. Remove the jumper from the BW7 line on Analog Interface Assembly A7.
44. Press the following analyzer keys:

SWEEP/BW [RES BW] **3** **MHz**
SPAN **5** **MHz**

Press the analyzer **FREQUENCY** key and use the RPG to center the signal on the display. Press the **AMPLITUDE** key and use the RPG to set the displayed amplitude of the signal to seven divisions.

45. Press the analyzer **SWEEP/BW** [RES BW] keys, and then step down from 3 MHz to 300 kHz using the down arrow key. Variation in signal amplitude should be less than ± 0.4 dB.

46. Press the following analyzer keys:

SWEEP/BW [RES BW] **1** **0** **0** **kHz**
SPAN **2** **0** **kHz**

Press the analyzer **SWEEP/BW** [RES BW] keys, and then step down from 100 kHz to 1 kHz using the down arrow key. Variation in signal amplitude should no less than ± 0.7 dB from the seventh division display reference.

47. Repeat Steps 36 through 48 until the variation in signal amplitude is within limits.

3-dB Bandwidth Check

Center frequency, amplitude, and 3-dB bandwidths of the resolution BW filters are controlled by the processor through the A7 Analog Interface Assembly. The 3-dB bandwidths are not specified, but nominal tolerances are included for purposes of checking the BW's operation and ensuring correct operation of the built-in CAL routines.

Equipment

BNC Cable, 120 cm (48 in) (2 required) HP 10503A

Additional Equipment for Option 001

BNC Cable, 30 cm (12 in), 75-ohm HP 11652-60012

Adjustment Procedure

1. Connect the analyzer CAL output to the RF input.
2. Press the following analyzer keys:
PRESET (wait for preset to complete)
PEAK SEARCH [NEXT PK RIGHT] **SIGNAL TRACK**
SPAN **5** **MHz**
AMPLITUDE **1** **0** **-dBm**
SWEEP/BW [RES BW] **1** **MHz**
[VID BW] **1** **MHz**
3. Press the following analyzer keys:
menu **1** [3 dB POINTS]
The marker Δ readout should be 1 MHz \pm 200 kHz.
4. Press the following analyzer keys:
SWEEP/BW [RES BW] **3** **MHz**
SPAN **10** **MHz**
menu **1** [3 dB POINTS]
The marker Δ readout should be 3 MHz \pm 600 kHz.
5. Press the following analyzer keys:
SWEEP/BW [RES BW] **3** **0** **0** **kHz**
SPAN **1** **MHz**
menu **1** [3 dB POINTS]
The marker Δ readout should be 300 kHz \pm 60 kHz.

6. Press the following analyzer keys:
SWEEP/BW [RES BW] **1** **0** **0** **kHz**
SPAN **3** **0** **0** **kHz**
menu **1** [3 dB POINTS]
The marker Δ readout should be 100 kHz \pm 20 kHz.
7. Press the following analyzer keys:
SWEEP/BW [RES BW] **3** **0** **kHz**
SPAN **1** **0** **0** **kHz**
TRACE A [VIEW A]
menu **1** [3 dB POINTS]
The marker Δ readout should be 30 kHz \pm 6 kHz.
8. Press the following analyzer keys:
SWEEP/BW [RES BW] **1** **0** **kHz**
SPAN **5** **0** **kHz**
TRACE A [VIEW A]
menu **1** [3 dB POINTS]
The marker Δ readout should be 10 kHz \pm 2 kHz.
9. Press the following analyzer keys:
SWEEP/BW [RES BW] **3** **kHz**
SPAN **2** **0** **kHz**
TRACE A [VIEW A]
menu **1** [3 dB POINTS]
The marker Δ readout should be 3 kHz \pm 600 Hz.
10. Press the following analyzer keys:
SWEEP/BW [RES BW] **1** **kHz** [VID BW] **1** **kHz**
SPAN **1** **0** **kHz**
TRACE A [VIEW A]
menu **1** [3 dB POINTS]
The marker Δ readout should be 1 kHz \pm 200 Hz.

)

)

)

10. Frequency Response

10. Frequency Response

Description

The frequency response (flatness) of the spectrum analyzer is measured with the corrections off. The source is adjusted to place the displayed signal at the analyzer center horizontal graticule line.

The flatness data is then entered into the spectrum analyzer using the SERVICE CAL functions. The error corrections are stored in battery-backed RAM on the A16 Processor/Video Assembly.

Option 001: The 50Ω system is characterized before starting the "Frequency Response" adjustment procedure.

Equipment

Test Equipment

| | | |
|--|------------|---------|
| Synthesized Sweeper | HP 8340A/B | |
| Measuring Receiver (used as a power meter) | HP 8902A | 436A OK |
| Frequency Synthesizer | HP 3335A | |
| Power Sensor | HP 8482A | |
| Power Splitter | HP 11667A | |

Adapters

| | |
|-------------------------------|-----------|
| Type N(f) to APC 3.5(m) | 1250-1745 |
| Type N(m) to Type N(m) | 1250-1475 |

Cables

| | |
|-------------------------------|-----------|
| BNC, 122 cm (48 in.) | HP 10503A |
| Type N, 183 cm (72 in.) | HP 11500A |

Additional equipment for Option 001

| | |
|---|-----------|
| Power Meter | HP 436A |
| Power Sensor | HP 8483A |
| Cable, BNC, 120 cm (48 in) 75Ω | 5062-6452 |
| Adapter, Type N(f) 75Ω to Type N(m) 50Ω | 1250-0597 |
| Adapter, Type N(m) to BNC(m), 75Ω | 1250-1533 |

Procedure for System Characterization (Option 001 only)

1. Zero and calibrate the HP 8902A and HP 8482A as described in the HP 8902A Operation Manual.
2. Zero and calibrate the HP 436A and the HP 8483A as described in the HP 436A Operation Manual.
3. Press INSTRUMENT PRESET on the HP 8340A/B. Set the HP 8340A/B controls as follows:

| | |
|-------------------|--------------------------|
| CW | 41 MHz 10 MHz |
| FREQ STEP | 37 MHz 50 MHz |
| POWER LEVEL | 5 dBm |

10

The first part of the document discusses the importance of maintaining accurate records of all transactions. It emphasizes that every entry, no matter how small, should be recorded to ensure the integrity of the financial statements. This includes not only sales and purchases but also expenses and income.

The second part of the document provides a detailed breakdown of the accounting cycle. It outlines the ten steps involved in the process, from identifying the accounting entity to preparing financial statements. Each step is explained in detail, with examples provided to illustrate the concepts.

The third part of the document discusses the various types of accounts used in accounting. It categorizes accounts into assets, liabilities, equity, revenue, and expense accounts. It also explains how these accounts are used to record transactions and how they are balanced at the end of each period.

The fourth part of the document discusses the importance of adjusting entries. It explains how these entries are used to ensure that the financial statements reflect the true financial position of the company at the end of the period. Examples are provided to show how adjusting entries are recorded and how they affect the accounts.

The fifth part of the document discusses the preparation of financial statements. It outlines the steps involved in preparing the balance sheet, income statement, and statement of owner's equity. It also discusses the importance of providing a clear and concise explanation of the results of the financial statements.

The sixth part of the document discusses the importance of internal controls. It explains how these controls are used to prevent and detect errors and fraud. It also discusses the various types of internal controls that can be implemented in a business.

The seventh part of the document discusses the importance of ethics in accounting. It explains how accountants are expected to act in a fair and honest manner and to follow the principles of professional conduct. It also discusses the consequences of unethical behavior in the accounting profession.

The eighth part of the document discusses the importance of communication in accounting. It explains how accountants must be able to communicate effectively with their clients and colleagues. It also discusses the various ways in which accountants can improve their communication skills.

The ninth part of the document discusses the importance of technology in accounting. It explains how the use of accounting software can help to streamline the accounting process and reduce the risk of errors. It also discusses the various types of accounting software that are available.

The tenth part of the document discusses the importance of continuing education in accounting. It explains how accountants must stay up-to-date on the latest developments in the field. It also discusses the various ways in which accountants can pursue continuing education.

1

1

10. Frequency Response

4. Connect the equipment as shown in Figure 2-23.

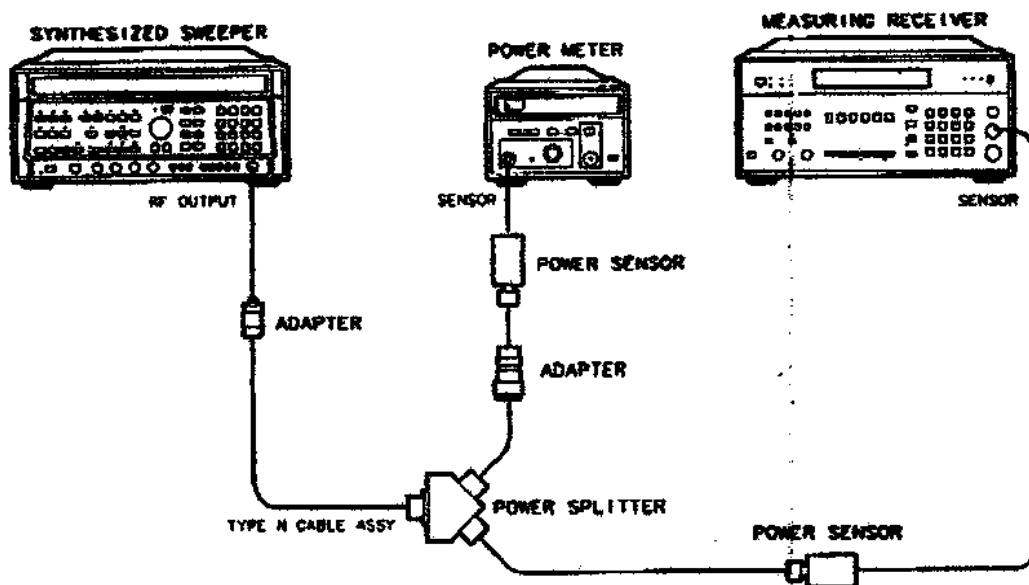


Figure 2-23. System Characterization Test Setup (*Option 001*)

5. Adjust the HP 8340A/B POWER LEVEL for a 0 dBm reading on the HP 8902A.
6. Record the HP 436A reading in Column 4 of Table 2-10, taking into account the cal factors of both the HP 8482A and the HP 8483A. *Take readings at 10 & 50 MHz - Record*
7. On the HP 8340A/B, press CW and STEP UP, to step through the remaining frequencies listed in Table 2-10.

At each new frequency repeat steps 5 and 6 and enter each power sensor cal factor into the respective power meter.

Adjustment Procedure

1. Zero and calibrate the HP 8902A and HP 8482A in log mode as described in the *HP 8902A Operation Manual*.
2. Connect the equipment as shown in Figure 2-24.

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

10. Frequency Response

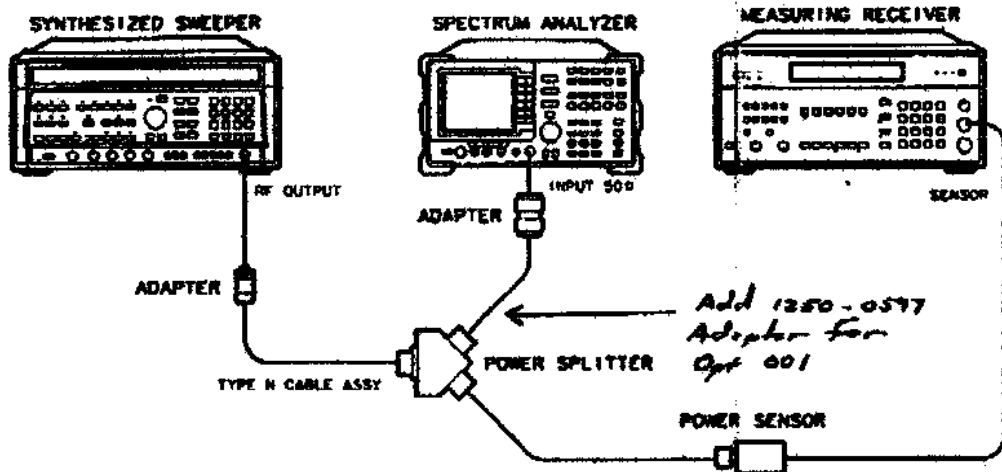


Figure 2-24. Frequency Response Setup

3. Press INSTRUMENT PRESET on the HP 8340A/B. Set the HP 8340A/B controls as follows:

CW300 MHz
 FREQ STEP~~50 MHz~~ 50 MHz
 POWER LEVEL-9 dBm (-14 for opt 001)

4. On the analyzer, press the following keys:

PRESET
~~CAL MORE 1 OF 2~~
~~CORRECT ON OFF (OFF)~~
FREQUENCY 300 [MHz]
~~GE 500 AUTO (MAN) 80 [MHz]~~ 50 MHz
SPAN 5 [MHz] [DISPLAY] [DISPLAY UNITS]
 (Option 001: press **AMPLITUDE** MORE 1 OF 2 AMPTD UNITS dBm.)
AMPLITUDE 10 [-dBm] (-2 for opt 001)
~~SCALE LOG LIN (LOG) 1 [dB]~~ LOG dB/DIV (LOG) 1 db
~~BW 1 [MHz] [RES BW] 1 MHz~~
PEAK SEARCH
SIGNAL TRACK (ON)

5. Adjust the HP 8340A/B POWER LEVEL for a MKR-TRK amplitude reading of -14 dBm ±0.1 dB. (-10 dBm for opt. 001)

6. Press RATIO mode on the HP 8902A.

7. Set the HP 8340A/B CW to 41 MHz. 10 MHz

8. Press the following analyzer keys:

FREQUENCY 41 [MHz] 10 MHz

10. Frequency Response

9. Adjust the HP 8340A POWER LEVEL for an analyzer MKR-TRK amplitude reading of $-14 \text{ dBm} \pm 0.1 \text{ dB}$. *(-10 dbm for Opt. 001)*
10. Record the power ratio here and in Column 2 of Table 2-10 for ~~41 MHz~~. *10 MHz*
 HP 8902A Reading at ~~41~~¹⁰ MHz _____ dB
11. Set the HP 8340A/B CW to ~~70 MHz~~. *50 MHz*
12. Press the following analyzer keys:
 FREQUENCY ~~70 MHz~~ *50 MHz*
13. Adjust the HP 8340A/B POWER LEVEL for an analyzer MKR-TRK amplitude reading of $-14 \text{ dBm} \pm 0.1 \text{ dB}$. *(-10 dbm for Opt. 001)*
14. Record the power ratio displayed on the HP 8902A in Column 2 of Table 2-10 for 78 MHz.
15. On the HP 8340A/B, press CW and STEP UP.
16. On the analyzer, press FREQUENCY and Δ (step up), to step through the remaining frequencies listed in Column 1 of Table 2-10. At each new frequency repeat steps 13 through 15, entering the power sensor Cal Factor into the HP 8902A as indicated in Column 3 of Table 2-10. *Include 10 MHz Point*

Frequency Response Error At 4 MHz

17. Using a cable, connect the HP 3335A directly to the INPUT 50 Ω . (See Figure 2-25.)

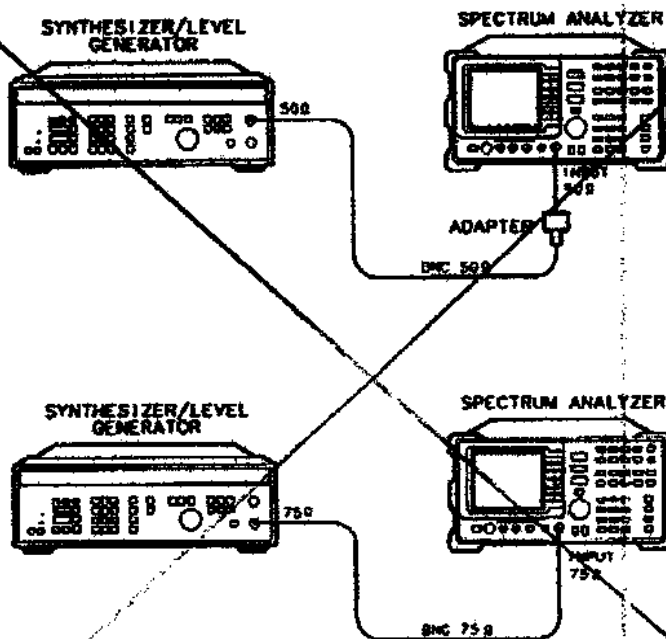


Figure 2-25. Frequency Response for 4 MHz Setup



16. Frequency Response

(Option 001: Using a 75Ω cable, connect the HP 3335A from the 75Ω OUTPUT to the INPUT 75Ω. Set the HP 3335A 50-75Ω switch to the 75Ω position. See Figure 2-25.)

Set the HP 3335A controls as follows:

FREQUENCY 41 MHz
 AMPLITUDE -15 dBm
 AMPTD INCR 0.05 dB

18. Press the following analyzer keys:

SPAN 10 **(MHz)**
FREQUENCY 41 **(MHz)**
BW 10 **(kHz)**
SPAN 100 **(kHz)**

Wait for AUTO ZOOM message to disappear.

19. Adjust the HP 3335A AMPLITUDE until the MKR-TRK reads -14 dBm. This corresponds to the amplitude at 41 MHz recorded in step 10. Record the HP 3335A amplitude here.

HP 3335A AMPLITUDE setting (41 MHz) _____ dBm

20. Set the HP 3335A FREQUENCY to 4 MHz.

21. AUTO ZOOM on the 4 MHz signal by pressing the following analyzer keys:

FREQUENCY 4 **(MHz)**
MKR **MARKERS** **OFF**
SPAN 20 **(MHz)**
PEAK SEARCH **NEXT PK** **RIGHT**
SIGNAL TRACK **(ON)**
SPAN 100 **(kHz)**

Wait for AUTO ZOOM message to disappear.

22. Adjust the HP 3335A AMPLITUDE for a MKR amplitude reading of -14.00 dBm ±.05 dB. Record the HP 3335A AMPLITUDE setting here.

HP 3335A AMPLITUDE setting (4 MHz) _____ dBm

23. Subtract the HP 3335A AMPLITUDE setting (4 MHz) recorded in Step 22 from the HP 3335A AMPLITUDE setting (41 MHz) recorded in Step 19. Record the result as the Amplitude Relative to 41 MHz here.


4 MHz Amplitude Relative to 41 MHz _____ dB

24. Add the result from Step 23 to the reading from Step 10 and enter that result in Column 2 of Table 2-10 (Option 001: Column 5) as the 4 MHz error (relative to 300 MHz).

Note



For Option 001 only: Starting with the error at 41 MHz, add Column 3 (System Error) to Column 2 (Error Relative to 300 MHz) and record the result in Column 5 (Corrected Error Relative to 300 MHz).



10. Frequency Response

Entering Flatness Correction Data

25. Enter the pass code by pressing the following analyzer keys:

PRESET
FREQUENCY -2001 **Hz**

26. To access the flatness correction menu, press the following analyzer keys:

(Option 001 Only: ~~AMPLITUDE~~ ~~MORE 1 OF 2 AMPLITUDE UNITS~~ ~~dBm~~) **DISPLAY** (DISPLAY UNITS)
(DBM)
~~CAL~~ ~~MORE 1 OF 2~~ ~~MORE 2 OF 3~~ (CAL FLATNESS)
~~SERVICE-GATE~~ (ENTER FLT ERR)
~~FLATNESS DATA~~ (START FREQ) 0 MHz, (STOP FREQ) 1500 MHz, (FREQ STEP) 500

Note



Perform the next step *only* if all the flatness correction data must be replaced in memory due to the repair or replacement of the A16 Processor/Video assembly.

~~27. To initialize the area of memory where the flatness correction data is stored, press the following keys:~~

~~**ENTER FLT**
PRESET
FREQUENCY 2001 **Hz**
(Option 001 Only: ~~AMPLITUDE~~ ~~MORE 1 OF 2 AMPLITUDE UNITS~~ ~~dBm~~)
~~CAL~~ ~~MORE 1 OF 2~~ ~~MORE 2 OF 3~~
~~SERVICE-GATE~~
~~FLATNESS DATA~~~~

~~28. To enter flatness corrections, press **DATA** **FLATNESS**.~~

29. The frequency of the first data point, ⁰4.00 MHz, will be displayed in the active function block of the analyzer display. *Enter the 10 Mhz Data*

30. Use the DATA keys on the analyzer to enter the amplitude value for 4 MHz from Column 2 of Table 2-10 (Option 001: Column 5), Frequency Response Errors. Terminate the entry with the **dB** key. When entering negative amplitude values, precede the numeric entry with the **-** and **dB** keys or the **-dB** key.

Note



The **BK SP** (backspace) key may be used to correct any entry if the terminator, **dB** or **-dB** key has *not* been pressed. Re-enter the data if the terminator has been pressed.

31. Press **▲** (step up) and enter the data from Table 2-10, Column 2 (Option 001: Column 5) for the next data point as described in step 29.

32. Repeat step 30 for the remaining flatness correction data points listed in Table 2-10.



10. Frequency Response

Note

At each point, verify that the frequency listed in the active function block corresponds to the frequency at which the data was taken. If these two frequencies do not correspond, press **▲** (step up) or **▼** (step down) until the proper frequency is displayed in the active function block. If some data is incorrect after entering all of the data from Table 2-10, select the incorrect data point using **▲** (step up) or **▼** (step down) and re-enter the proper data.

33. After all corrections have been input, ^{the program will} press the ~~STORE~~ softkey to store the correction data in nonvolatile memory. The instrument will automatically preset and display CAL: DONE in the active function block of the analyzer.

10

1

)

10. Frequency Response

Table 2-10. Frequency Response Errors.

| Column 1 Frequency (MHz) | Column 2 Error Relative to 300 MHz (dB) | Column 3 Sensor CAL FACTOR (GHz) | Column 4 (Opt 001) System Error (dB) | Column 5 (Opt 001) Corrected Error Relative to 300 MHz (dB) |
|--------------------------------|--|---|---|---|
| 10-4 | _____ | N/A | N/A | _____ |
| 50-41 | _____ | 0.03 | _____ | _____ |
| 100-78 | _____ | 0.1 | _____ | _____ |
| 150-116 | _____ | 0.1 | _____ | _____ |
| 200-152 | _____ | 0.1 | _____ | _____ |
| 250-189 | _____ | 0.3 | _____ | _____ |
| 300-226 | _____ | 0.3 | _____ | _____ |
| 350-263 | _____ | 0.3 | _____ | _____ |
| 400-300 | _____ | 0.3 | _____ | _____ |
| 450-337 | _____ | 0.3 | _____ | _____ |
| 500-374 | _____ | 0.3 | _____ | _____ |
| 550-411 | _____ | 0.3 | _____ | _____ |
| 600-448 | _____ | 0.3 | _____ | _____ |
| 650-485 | _____ | 0.3 | _____ | _____ |
| 700-522 | _____ | 0.3 | _____ | _____ |
| 750-559 | _____ | 1.0 | _____ | _____ |
| 800-596 | _____ | 1.0 | _____ | _____ |
| 850-633 | _____ | 1.0 | _____ | _____ |
| 900-670 | _____ | 1.0 | _____ | _____ |
| 950-707 | _____ | 1.0 | _____ | _____ |
| 1000-744 | _____ | 1.0 | _____ | _____ |
| 1050-781 | _____ | 1.0 | _____ | _____ |
| 1100-818 | _____ | 1.0 | _____ | _____ |
| 1150-855 | _____ | 1.0 | _____ | _____ |
| 1200-892 | _____ | 1.0 | _____ | _____ |

10

10. Frequency Response

Table 2-10. Frequency Response Errors. (continued)

| Column 1 Frequency (MHz) | Column 2 Error Relative to 300 MHz (dB) | Column 3 Sensor CAL FACTOR (GHz) | Column 4 (Opt 001) System Error (dB) | Column 5 (Opt 001) Corrected Error Relative to 300 MHz (dB) |
|--------------------------------|--|---|---|---|
| 120020 | _____ | 1.0 | _____ | _____ |
| 130060 | _____ | 1.0 | _____ | _____ |
| 1354000 | _____ | 1.0 | _____ | _____ |
| 1401040 | _____ | 1.0 | _____ | _____ |
| 1481077 | _____ | 1.0 | _____ | _____ |
| 1501114 | _____ | 1.0 | _____ | _____ |
| 1151 | _____ | 1.0 | _____ | _____ |
| 1188 | _____ | 1.0 | _____ | _____ |
| 1225 | _____ | 1.0 | _____ | _____ |
| 1262 | _____ | 1.0 | _____ | _____ |
| 1299 | _____ | 1.0 | _____ | _____ |
| 1336 | _____ | 1.0 | _____ | _____ |
| 1373 | _____ | 1.0 | _____ | _____ |
| 1410 | _____ | 1.0 | _____ | _____ |
| 1447 | _____ | 1.0 | _____ | _____ |
| 1484 | _____ | 1.0 | _____ | _____ |
| 1521 | _____ | 1.0 | _____ | _____ |
| 1558 | _____ | 2.0 | _____ | _____ |
| 1595 | _____ | 2.0 | _____ | _____ |
| 1632 | _____ | 2.0 | _____ | _____ |
| 1669 | _____ | 2.0 | _____ | _____ |
| 1706 | _____ | 2.0 | _____ | _____ |
| 1743 | _____ | 2.0 | _____ | _____ |
| 1780 | _____ | 2.0 | _____ | _____ |
| 1817 | _____ | 2.0 | _____ | _____ |

699-212533

~~408-628-6181~~

~~468442522~~

~~294-3915~~

342-2021

REPLACEABLE PARTS

Introduction

This chapter provides information for ordering replacement parts for the HP 8590A Spectrum Analyzer. Table 3-1 includes a list of reference designations and a list of abbreviations used in the parts list. Table 3-2 lists names and addresses that correspond to the manufacturer code numbers in the parts list. Table 3-3 lists the replaceable parts in alphanumerical order by reference designation.

Replacement Parts Lists

Table 3-3, the list of replaceable parts is organized as follows:

1. Major assemblies and their part numbers
2. Accessories supplied and their part numbers
3. Illustrated parts breakdowns: Figures 3-1 through 3-5 show the major replaceable mechanical parts of the analyzer

The following information is listed for each part:

1. The Hewlett-Packard part number
2. The part number check digit (CD)
3. The total quantity (Qty) in the instrument; this quantity is given only once, at the first appearance of the part in the list
4. The description of the part
5. A five-digit code indicating a typical manufacturer of the part
6. The manufacturer's part number

Ordering Information

To order a part listed in the replaceable parts table, quote the Hewlett-Packard part number (with check digit), indicate the quantity required, and address the order to the nearest Hewlett-Packard office. The check digit will ensure accurate and timely processing of your order.

To order a part that is not listed in the replaceable parts table, include the instrument model number, instrument serial number, the description and function of the part, and the number of parts required. Address the order to the nearest Hewlett-Packard office.

Replaceable Parts

Table 3-1. REFERENCE DESIGNATIONS AND ABBREVIATIONS (1 OF 2)

REFERENCE DESIGNATIONS

| | | | | | |
|----------|---|----------|--|----------|---|
| A | Assembly | F | Fuse | RT | Thermistor |
| AT | Attenuator, Isolator, Limiter, Termination | FL | Filter | S | Switch |
| B | Fan, Motor | HY | Circulator | T | Transformer |
| BT | Battery | J | Electrical Connector (Stationary Portion), Jack | TB | Terminal Board |
| C | Capacitor | K | Relay | TC | Thermocouple |
| CP | Coupler | L | Coil, Inductor | TP | Test Point |
| CR | Diode, Diode Thyristor, Step Recovery Diode, Varactor | M | Meter | U | Integrated Circuit, Microcircuit |
| DC | Directional Coupler | MP | Miscellaneous Mechanical Part | V | Electron Tube |
| DL | Delay Line | P | Electrical Connector (Movable Portion), Plug | VR | Breakdown Diode (Zener), Voltage Regulator |
| DS | Annunciator, Lamp, Light Emitting Diode (LED), Signaling Device (Visible) | Q | Silicon Controlled Rectifier (SCR), Transistor, Triode Thyristor | W | Cable, Wire, Jumper |
| E | Miscellaneous Electrical Part | R | Resistor | X | Socket |
| | | | | Y | Crystal Unit (Piezoelectric, Quartz) |
| | | | | Z | Tuned Cavity, Tuned Circuit |

ABBREVIATIONS

| | | | | | | | |
|--------------|---|----------------|--|-----------------|--|---|------------------------|
| A | | D | | FT | | Current Gain Bandwidth Product (Transition Frequency), Feet, Foot | |
| A | Across Flats, Acrylic, Air (Dry Method), Ampere | D | Deep, Depletion, Depth, Diameter, Direct Current | FXD | Fixed | | |
| ADJ | Adjust, Adjustment | DA | Darlington | G | | | |
| ANSI | American National Standards Institute | DAP-GL | Diallyl Phthalate Glass | DBL | Double | GEN | General, Generator |
| ASSY | Assembly | DCLR | Decoder | DEG | Degree | GND | Ground |
| AWG | American Wire Gage | D-HOLE | D-Shaped Hole | DIA | Diameter | GP | General Purpose, Group |
| B | | DIP | Dual In-Line Package | H | | | |
| BCD | Binary Coded Decimal | DIP-SLDR | Dip Solder | H | Henry, High | | |
| BD | Board, Bundle | D-MODE | Depletion Mode | HDW | Hardware | | |
| BE-CU | Beryllium Copper | DO | Package Type Designation | HEX | Hexadecimal, Hexagon, Hexagonal | | |
| BNC | Type of Connector | DP | Deep, Depth, Diametric Pitch, Dip | HLCL | Helical | | |
| BRG | Bearing, Boring | DP3T | Double Pole Three Throw | HP | Hewlett-Packard Company, High Pass | | |
| BRS | Brass | DPDT | Double Pole Double Throw | I | | | |
| BSC | Basic | DWL | Dowel | IC | Collector Current, Integrated Circuit | | |
| BTN | Button | E | | ID | Identification, Inside Diameter | | |
| C | | E-R | E-Ring | IF | Forward Current, Intermediate Frequency | | |
| C | Capacitance, Capacitor, Center Tapped, Cermet, Cold Compression | EXT | Extended, Extension, External, Extinguish | IN | Inch | | |
| CCP | Carbon Composition Plastic | F | | INCL | Including | | |
| CD | Cadmium, Card, Cord | F | Fahrenheit, Farad, Female, Film (Resistor), Fixed, Flange, Frequency | INT | Integral, Intensity, Internal | | |
| CER | Ceramic | FC | Carbon Film/Composition, Edge of Cutoff Frequency, Face | J | | | |
| CHAM | Chamfer | FDTHRU | Feed Through | J-FET | Junction Field Effect Transistor | | |
| CHAR | Character, Characteristic, Charcoal | FEM | Female | JFET | Junction Field Effect Transistor | | |
| CMOS | Complementary Metal Oxide Semiconductor | FIL-HD | Fillister Head | K | | | |
| CNDCT | Conducting, Conductive Conductivity, Conductor | FL | Flash, Flat, Fluid | K | Kelvin, Key, Kilo, Potassium | | |
| CONT | Contact, Continuous, Control, Controller | FLAT-PT | Flat Point | KNRLD | Knurled | | |
| CONV | Converter | FR | Front | KVDC | Kilovolts Direct Current | | |
| CPRSN | Compression | FREQ | Frequency | | | | |
| CUP-PT | Cup Point | | | | | | |
| CW | Clockwise, Continuous Wave | | | | | | |

Replaceable Parts

Table 3-2. Manufacturers Code List

| Mfr Code | Manufacturer Name | Address | Zip Code |
|----------|------------------------------------|--------------------|----------|
| 84013 | HITACHI AMERICA LTD | SUNNYVALE CA | 94086 |
| 84111 | TOKYO HATSODUKI CO LTD | TOKYO JP | |
| 84307 | SCHAFFNER AG | LUTERBACH SW | |
| 00000 | ANY SATISFACTORY SUPPLIER | | |
| 00779 | AMP INC | HARRISBURG PA | 17111 |
| 01121 | ALLEN-BRADLEY CO INC | EL PASO TX | 79935 |
| 01295 | TEXAS INSTRUMENTS INC | DALLAS TX | 75265 |
| 03888 | K D I PYROFILM CORP | WHIPPANY NJ | 07981 |
| 04713 | MOTOROLA INC SEMI-COND PROD | PHOENIX AZ | 85008 |
| 06885 | PRECISION MONOLITHICS INC | SANTA CLARA CA | 95050 |
| 07283 | FAIRCHILD CORP | MOUNTAIN VIEW CA | 94042 |
| 10899 | EASTERN AIR DEVICES INC | GREAT NECK NY | 11021 |
| 11045 | AM CASTLE & CO INC | FRANKLIN PARK IL | 60131 |
| 11236 | CTS CORP BERNE DIV | BERNE IN | 46711 |
| 13808 | SPRAGUE ELECTRIC SEMICON DIV | CONCORD NH | 03301 |
| 16299 | CORNING ELECTRONICS | RALEIGH NC | 27604 |
| 17856 | SILICONIX INC | SANTA CLARA CA | 95054 |
| 18736 | VOLTRONICS CORP | HANOVER NJ | 07936 |
| 19701 | MEPCO/CENTRALAB INC | WEST PALM BEACH FL | 33407 |
| 2M827 | ROHM CORP | IRVINE CA | 92718 |
| 24355 | ANALOG DEVICES INC | NORWOOD MA | 02062 |
| 24546 | CORNING ELECTRONICS | SANTA CLARA CA | 95050 |
| 27014 | NATIONAL SEMICONDUCTOR CORP | SANTA CLARA CA | 95052 |
| 28480 | HEWLETT-PACKARD CO CORPORATE HQ | PALO ALTO CA | 04304 |
| 3L585 | RCA CORP SOLID STATE DIV | SOMERVILLE NJ | |
| 34335 | ADVANCED MICRO DEVICES INC | SUNNYVALE CA | 94806 |
| 34344 | MOTOROLA INC | FRANKLIN PARK IL | 60131 |
| 34371 | HARRIS CORP | MELBOURNE FL | 32901 |
| 34849 | INTEL CORP | SANTA CLARA CA | 95054 |
| 37842 | MALLORY P R AND CO INC | INDIANAPOLIS IN | 46206 |
| 4M833 | ETRI INC | MONROE NC | 28110 |
| 51833 | FLUOROCARBON CO THE | SUNNYVALE CA | 94088 |
| 52783 | STETTNER ELECTRONICS INC | CHATTANOOGA TN | 37421 |
| 56289 | SPRAGUE ELECTRIC CO | NORTH ADAMS MA | 01247 |
| 72136 | ELECTRO MOTIVE CORP | FLORENCE SC | 06226 |
| 72982 | ERIE TECHNOLOGICAL PRODUCTS INC | ERIE PA | 18512 |
| 73138 | BECKMAN INDUSTRIAL CORP | FULLERTON CA | 92632 |
| 73899 | J F D ELECTRONICS CORP | BROOKLYN NY | 11219 |
| 74970 | EF JOHNSON CO | WASECA MN | 58093 |
| 78189 | ILLINOIS TOOL WORKS INC SHAKEPROOF | ELGIN IL | 60126 |
| 84411 | TRW CAPACITOR DIV | OGALLALA NE | 68153 |
| 9N171 | UNITROE CORP | LEXINGTON MA | 02173 |
| 91837 | DALE ELECTRONICS INC | EL PASO TX | 79936 |

| REF. DESIG. | HP PART NUMBER | DESCRIPTION |
|-------------|----------------|--|
| A1 | 08950-60004 | KEYBOARD BOARD ASSEMBLY |
| A1J1 | 1252-1065 | CONNECTOR, 24 CONN. |
| A1J2 | 1251-7678 | CONNECTOR, 5 CONT. |
| A1J3 | 1251-7678 | CONNECTOR, 5 CONT. |
| A1MP1 | 08590-20004 | BOARD - KEYBOARD |
| A2 | 5062-6404 | OEM, CRT DISPLAY (PRETESTED) |
| A2MP1 | 08590-00006 | SHIELD, CRT |
| A3 | 0955-0453 | ATTENUATOR, PROGRAMMABLE; 0 - 60 dB |
| A4 | 08590-60047 | 1st CONVERTER ASSEMBLY |
| A4J1 | 1250-1796 | CONNECTOR, RF; SMA 50 OHM |
| A4J2 | 1250-1796 | CONNECTOR, RF; SMA 50 OHM |
| A4J3 | 1250-1796 | CONNECTOR, RF; SMA 50 OHM |
| A4J4 | 1250-1796 | CONNECTOR, RF; SMA 50 OHM |
| A5 | 08590-60048 | 2nd CONVERTER ASSEMBLY |
| A5A1 | 08558-60048 | " " OSCILLATOR |
| A6 | 0955-0454 | YIG OSCILLATOR |
| A6A1 | 08590-60029 | YIG BOARD ASSEMBLY |
| A7 | 08590-60001 | ANALOG BOARD INTERFACE ASSEMBLY |
| A8 | 0950-1819 | POWER - SUPPLY; POWER 75 WATT; 4 OUTPUTS |
| A9 | 08590-60073 | 3rd CONVERTER BOARD ASSEMBLY (STD) |
| A9 | 08590-60048 | 3rd CONVERTER BOARD ASSEMBLY (001) |
| A10 | 08590-60055 | 2nd IF BOARD ASSEMBLY |
| A11 | 08590-60050 | BANDWIDTH FILTER BOARD ASSEMBLY |
| A12 | 08590-60039 | STEP GAIN BOARD ASSEMBLY |
| A13 | 08590-60050 | BANDWIDTH FILTER BOARD ASSEMBLY |
| A14 | 08590-60075 | LOG AMP BOARD ASSEMBLY |
| A15 | 08590-60003 | IF MOTHERBOARD ASSEMBLY |
| A16 | 08590-60002 | PROCESSOR A/D BOARD ASSEMBLY |
| A17 | 08590-60070 | VIDEO BOARD ASSEMBLY |
| A18 | 08590-60068 | HP-IB I/O BOARD ASSEMBLY |
| A19 | 08590-60018 | HP-IB CONNECTOR ASSEMBLY |
| | 08590-60052 | HP-IB KIT - HYBRID BUFFER |

→ A4 J1 062-0725
1st converter diodes.

FALL 2110-0725

| | | |
|----------------|---------------------|--|
| A20 | 9135-0270 | FILTER, LINE; 250 VOLT MAX. |
| A21 | 08590-60012 | RS-232 I/O ASSEMBLY |
| A22 | 08590-60019 | RS-232 CONNECTOR ASSEMBLY |
| A23 | 08590-60013 | HP-IL I/O ASSEMBLY |
| A24 | 08590-60020 | HP-IL CABLE CONNECTOR ASSEMBLY |
| B1 | 5062-0736 | FAN ASSEMBLY |
| J1 | <i>SEE W4</i> | |
| W1 | 08590-60024 | CABLE ASSEMBLY; 1st LO OUTPUT |
| W2 | 08590-60026 | CABLE ASSEMBLY; CAL OUT (STD) |
| W2 | 08590-60028 | CABLE ASSEMBLY; CAL OUT (001) |
| W3 | 08590-60065 | CABLE ASSEMBLY; PROBE POWER |
| W4 | 08590-60023 | CABLE ASSEMBLY; RF INPUT |
| <i>DPT 001</i> | <i>08590-60090</i> | <i>MLA w/w4</i> |
| W5 | 5061-9026 | WIRING ASSEMBLY; RPG |
| W6 | 08590-60014 | CABLE ASSEMBLY; RIBBON 24C |
| W7 | 08590-60021 | CABLE ASSEMBLY; VIDEO |
| W8 | 08590-20057 | CABLE ASSEMBLY; ISOLATOR - 1st CONVERTER |
| W9 | 08590-20059 | CABLE ASSEMBLY; LPF - 2nd CONVERTER |
| W10 | 08590-20007 | CABLE ASSEMBLY; RF ATTEN - 1st CONVERTER |
| W11 | 08590-60022 | CABLE ASSEMBLY; DC POWER |
| W12 | 8120-4823 | CABLE ASSEMBLY; 2 PHONO; 9.5 |
| W13 | 8120-4823 | CABLE ASSEMBLY; 2 PHONO; 9.5 |
| W14 | 8120-4823 | CABLE ASSEMBLY; 2 PHONO; 9.5 |
| W15 | 08590-60025 | CABLE ASSEMBLY; 2nd CONVERTER - IF |
| W16 | 08590-60027 | CABLE ASSEMBLY; 2nd IF - 3rd MIXER |
| W17 | SEE A18, A21 & A23; | P/O REMOTE I/O ASSEMBLIES |
| W18 | 8120-4823 | CABLE ASSEMBLY; 2 PHONO; 9.5 |
| W19 | 8120-4823 | CABLE ASSEMBLY; 2 PHONO; 9.5 |
| W20 | 8120-4823 | CABLE ASSEMBLY; 2 PHONO; 9.5 |
| W21 | 08590-20056 | CABLE ASSEMBLY; YIG - ISOLATOR |
| W22 | 08590-20058 | CABLE ASSEMBLY; 1st CONVERTER - LPF |
| W23 | 08590-60041 | CABLE ASSEMBLY; INTENSITY POT |
| W24 | 5062-0784 | CABLE ASSEMBLY; LINE SWITCH <i>To 2720-AC 1051 ↓</i> |
| | <i>5062-1998</i> | <i>" " " 2720-AC 1051 ↓</i> |
| W25 | 08590-60017 | CABLE ASSEMBLY; LINE SELECT |
| W26 | 08590-60037 | CABLE ASSEMBLY; CRT INTENSITY |
| W1 | 08590-60024 | CABLE ASSEMBLY; 1st LO OUTPUT |
| W1 | 08590-60024 | CABLE ASSEMBLY; 1st LO OUTPUT |
| W1 | 08590-60024 | CABLE ASSEMBLY; 1st LO OUTPUT |

The first part of the document discusses the importance of maintaining accurate records of all transactions. It emphasizes that every entry should be supported by a valid receipt or invoice. This ensures transparency and allows for easy verification of the data.

In the second section, the author outlines the various methods used to collect and analyze the data. This includes both primary and secondary data collection techniques. The primary data was gathered through direct observation and interviews, while secondary data was obtained from existing reports and databases.

The third section provides a detailed description of the data analysis process. This involves identifying trends, patterns, and anomalies within the dataset. Statistical tools and software were used to facilitate this process, ensuring that the results are both accurate and reliable.

Finally, the document concludes with a summary of the findings and their implications. It highlights the key insights gained from the study and offers recommendations for future research and practice. The author notes that while the current study provides valuable information, there are still several areas that require further investigation.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|------------------------------|--------|-----|--------------------------------------|----------|-----------------|
| A1 | 08590-60004 | 5 | 1 | KEYBOARD BOARD ASSEMBLY | 28480 | 08590-60004 |
| A1J1 | 1252-1065 | 5 | 1 | CONN-POST TYPE .100-PIN-SPCG 24-CONT | 28480 | 1252-1065 |
| A1J2 | 1251-7678 | 6 | 2 | CONN-POST TYPE .100-PIN-SPCG 5-CONT | 28480 | 1251-7678 |
| A1J3 | 1251-7678 | 6 | | CONN-POST TYPE .100-PIN-SPCG 5-CONT | 28480 | 1251-7678 |
| A1MP1 | 08590-20004 | 1 | 1 | BD-KEYBOARD | 28480 | 08590-20004 |
| | 08590-68004 | 1 | 1 | PC KIT CNTR SET | 28480 | 08590-68004 |
| A2 <i>5012-6404</i> | 0950-1813 | 0 | 1 | GEN CRT DATA DISPLAY; 75 X 102 MM | 28480 | 0950-1813 |
| A3 | 0955-0329 0453 | 1 | 1 | ATTENUATOR, PROGRAMMABLE 0-80 | 28480 | 0955-0329 |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|---|----------|----------------------|
| A4 | 08590-60047 | 8 | 1 | 1ST CONVERTER ASSEMBLY | 28480 | 08590-60047 |
| A4J1 | 1250-1798 | 5 | 4 | CONNECTOR-RF SMA FEM SCL-HOLE-RR 50-OHM | 28480 | 1250-1798 } 2226 |
| A4J2 | 1250-1798 | 5 | | CONNECTOR-RF SMA FEM SCL-HOLE-RR 50-OHM | 28480 | |
| A4J3 | 1250-1798 | 5 | | CONNECTOR-RF SMA FEM SCL-HOLE-RR 50-OHM | 28480 | |
| A4J4 | 1250-1798 | 5 | | CONNECTOR-RF SMA FEM SCL-HOLE-RR 50-OHM | 28480 | |
| A4P1 | 08558-00062 | 7 | 1 | GASKET 1ST CONV. | 28480 | 08558-00062 |
| A4P2 | 08590-20023 | 4 | 1 | COVER-1ST CONV | 28480 | 08590-20023 |
| A4P3 | 08590-20022 | 3 | 1 | MOUNT-1ST CONV | 28480 | 08590-20022 |
| A4R1 | 0898-7212 | 8 | 1 | RESISTOR 100 1% .05W F TC=0+-100 | 28548 | C3-1/8-10-100R-F |
| A4R2 | 0898-2033 | 4 | 1 | RESISTOR 237 1% .05W F TC=0+-100 | 91637 | CHF-50-21 |
| A4R3 | 0898-2032 | 3 | 2 | RESISTOR 147 1% .05W F TC=0+-100 | 91637 | CHF-50-21 |
| A4R4 | 0898-1947 | 7 | 1 | RESISTOR 38.3 1% .05W F TC=0+-100 | 91637 | CHF-50-21 |
| A4R5 | 0898-2032 | 3 | 1 | RESISTOR 147 1% .05W F TC=0+-100 | 91637 | CHF-50-21 |
| A4U1 | 5062-0785 | 5 | 1 | DIODE ASSY | 28480 | 5062-0785 |
| | 5021-6800 | 1 | 1 | DIODE MOUNT | 28480 | 5021-6800 |
| | | | | MISCELLANEOUS PARTS | | |
| | 2190-0067 | 4 | 4 | WASHER-LK INTL T 1/4 IN .256-IN-ID | 28480 | 2190-0067 |
| | 2200-0168 | 9 | 18 | SCREW-MACH 4-40 .438-IN-LG 82 DEG | 00000 | ORDER BY DESCRIPTION |

See introduction to this section for ordering information
 *Indicates factory selected parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|----------------------|
| <i>ASAI</i> | | | | | | |
| | <i>60174</i> | | | <i>REPL KIT, 2ND</i> | | |
| AS | 09590-60048 | 7 | 1 | 2ND CONVERTER ASSEMBLY | 28480 | 09590-60048 |
| ASC1 | 0160-3036 | 8 | 2 | CAPACITOR-FDTHRU 5000PF +80 -20% 200V | 28480 | 0160-3036 |
| ASC2 | 0160-3036 | 8 | | CAPACITOR-FDTHRU 5000PF +80 -20% 200V | 28480 | 0160-3036 |
| ASC3 | 0160-5435 | 5 | 1 | CAPACITOR-FDTHRU 8.5PF 8% 200V CER | 28480 | 0160-5435 |
| ASC4 | 0140-0075 | 7 | 1 | CAPACITOR-FDTHRU 22PF 10% 500V MICA | 72982 | 606-053-01A0-220K |
| ASCR1 | 1901-0950 | 2 | 1 | DIODE-SM SIG SCHOTTKY | 28480 | 1901-0950 |
| ASJ1 | 1250-1157 | 2 | 1 | CONNECTOR-RF SMA FEM THD-HOLE 50-OHM | 28480 | 1250-1157 |
| ASJ2 | 1250-1435 | 9 | 1 | CONN:RF: 500 OHM: SMC | 28480 | 1250-1435 |
| ASJ3 | 1250-0691 | 7 | 2 | CONNECTOR-RF SMB M SGL-HOLE-FR 50-OHM | 28480 | 1250-0691 |
| ASJ4 | 1250-0691 | 7 | | CONNECTOR-RF SMB M SGL-HOLE-FR 50-OHM | 28480 | 1250-0691 |
| ASL3 | 08565-90003 | 5 | 1 | COIL 2ND CONV | 28480 | 08565-90003 |
| ASL4 | 9100-2255 | 4 | 1 | INDUCTOR RF-CH-MLD 470NH 10% | 28480 | 9100-2255 |
| ASMP1 | 08565-20067 | 5 | 1 | BLOCK CAVITY | 28480 | 08565-20067 |
| ASMP2 | 08565-20092 | 6 | 1 | CAP DIELECTRIC | 28480 | 08565-20092 |
| ASMP3 | 2200-0151 | 0 | 1 | SCREW-MACH 4-40 .75-IN-LG PAN-HD-POZI | 00000 | ORDER BY DESCRIPTION |
| ASMP4 | 08565-20068 | 6 | 1 | CAP INNER ELEMENT | 28480 | 08565-20068 |
| ASMP5 | 08565-00152 | 7 | 1 | MTG TAB MXR DIO | 28480 | 08565-00152 |
| ASMP6 | 2200-0171 | 4 | 1 | SCREW-MACH 4-40 .75-IN-LG 82 DEG | 00000 | ORDER BY DESCRIPTION |
| ASMP7 | 3030-0397 | 6 | 4 | SCREW-SET 10-32 1-IN-LG FLAT-PT BR5 | 00000 | ORDER BY DESCRIPTION |
| ASMP8 | 3030-0397 | 6 | | SCREW-SET 10-32 1-IN-LG FLAT-PT BR5 | 00000 | ORDER BY DESCRIPTION |
| ASMP9 | 3030-0397 | 6 | | SCREW-SET 10-32 1-IN-LG FLAT-PT BR5 | 00000 | ORDER BY DESCRIPTION |
| ASMP10 | 3030-0397 | 6 | | SCREW-SET 10-32 1-IN-LG FLAT-PT BR5 | 00000 | ORDER BY DESCRIPTION |
| ASMP11 | 0390-0573 | 8 | 1 | STANDOFF-HEX .825-IN-LG 10-32-THD | 28480 | 0390-0573 |
| ASMP11 | 2740-0001 | 3 | 3 | NUT-HEX-DBL-CHAN 10-32-THD .109-IN-THK | 08000 | ORDER BY DESCRIPTION |
| ASMP12 | 2740-0001 | 3 | | NUT-HEX-DBL-CHAN 10-32-THD .109-IN-THK | 08000 | ORDER BY DESCRIPTION |
| ASMP13 | 2740-0001 | 3 | | NUT-HEX-DBL-CHAN 10-32-THD .109-IN-THK | 08000 | ORDER BY DESCRIPTION |
| ASMP14 | 2960-0078 | 8 | 1 | NUT-HEX-DBL-CHAN 10-32-THD .067-IN-THK | 28480 | 2960-0078 |
| ASMP22 | 08558-20074 | 5 | 1 | INSUL CPLG POST | 28480 | 08558-20074 |
| ASR3 | 0757-0346 | 2 | 1 | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| | 0180-0116 | 1 | 1 | CAPACITOR-FXD 8.8UF+-10% 35VDC TA | 56289 | 150D685X903582 |
| | 0180-0228 | 6 | 1 | CAPACITOR-FXD 22UF+-10% 15VDC TA | 56289 | 150D22X901582 |
| | 0360-0002 | 6 | 1 | TERMINAL-SLDR LUG PL-MTG FOR-#2-SCR | 28480 | 0360-0002 |
| | 0360-0043 | 5 | 1 | TERMINAL-SLDR LUG PL-MTG FOR-#6-SCR | 28480 | 0360-0043 |
| | 0520-0173 | 2 | 1 | SCREW-MACH 2-56 .188-IN-LG PAN-HD-POZI | 00000 | ORDER BY DESCRIPTION |
| | 0520-0174 | 3 | 2 | SCREW-MACH 2-56 .25-IN-LG PAN-HD-POZI | 00000 | ORDER BY DESCRIPTION |
| | 08558-00034 | 5 | 1 | CPLG LOOP INPUT | 28480 | 08558-00034 |
| | 08558-00028 | 3 | 1 | 80 2ND CONV OSC | 28480 | 08558-00028 |
| <i>ASAI</i> | 08565-00153 | 8 | 2 | CPLG LOOP FILTER | 28480 | 08565-00153 |
| | 08590-00014 | 1 | 1 | CVR-OSC HOUSING | 28480 | 08590-00014 |
| | 08590-20020 | 1 | 1 | COVER-2ND CONV | 28480 | 08590-20020 |
| | 08590-60033 | 0 | 1 | CBL ASSY ANL PWR | 28480 | 08590-60033 |
| | 08590-60037 | 4 | 1 | CBL AY-CRT INTEN | 28480 | 08590-60037 |
| | 2190-0124 | 4 | 1 | WASHER-LK INTL T NO. 10 .185-IN-ID | 28480 | 2190-0124 |
| | 2190-0557 | 7 | 3 | WASHER-LK INTL T NO. 10 .185-IN-ID | 78188 | 1210-06-00-0551 |
| | 2190-0572 | 6 | 6 | WASHER-LK HLCL NO. 0 .062-IN-ID .1-IN-OD | 28480 | 2190-0572 |
| | 2200-0105 | 4 | 2 | SCREW-MACH 4-40 .312-IN-LG PAN-HD-POZI | 00000 | ORDER BY DESCRIPTION |
| | 2200-0107 | 6 | 18 | SCREW-MACH 4-40 .375-IN-LG PAN-HD-POZI | 00000 | ORDER BY DESCRIPTION |
| | 2200-0119 | 0 | 8 | SCREW-MACH 4-40 1-IN-LG PAN-HD-POZI | 00000 | ORDER BY DESCRIPTION |
| | 3030-0400 | 2 | 6 | SCREW-SKT HD CAP 0-80 .094-IN-LG SST | 00000 | ORDER BY DESCRIPTION |
| | 3050-0003 | 3 | 1 | WASHER-FL NM NO. 8 .141-IN-ID .375-IN-OD | 28480 | 3050-0003 |
| | 3050-0178 | 1 | 4 | WASHER-FL HTLC NO. 8 .188-IN-ID | 11045 | AA-0107-255 |
| | 3050-0945 | 2 | 1 | WASHER-FL HTLC NO. 10 .2-IN-ID .33-IN-OD | 28480 | 3050-0945 |
| | 6040-0454 | 0 | 1 | THERMAL COMPOUND | 28480 | 6040-0454 |
| | 8090-0807 | 2 | 1 | SOLDER WIRE 361-DEG F .036-W-DIA | 28480 | 8090-0807 |
| ASA1R1 | 0883-4705 | 8 | 1 | RESISTOR 47 5% .25W CF TC=0-400 | 01121 | CB4705 |
| ASA1R2 | 0883-2715 | 6 | 1 | RESISTOR 270 5% .25W CF TC=0-400 | 01121 | CB2715 |

See introduction to this section for ordering information
 *Indicates factory selected value

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------------------|--------|-----|--|----------|-----------------|
| A6 | 0955-0088- ⁰⁴⁵⁴ | 4 | 1 | YIG OSCILLATOR | 28480 | 0955-0330 |
| A6MP1 | 08590-00009 | 4 | 1 | SHIELD-YIG | 28480 | 08590-00009 |
| A6MP2 | 08590-00010 | 7 | 1 | COVER-SHLD-YIG | 28480 | 08590-00010 |
| A6A1 | 08580-00029 | 4 | 1 | YIG BOARD ASSEMBLY | 28480 | 08580-00029 |
| A6A1J1 | 1251-7883 | 3 | 1 | CONN-POST TYPE .100-PIN-SPCG 18-CONT | 00779 | 87227-5 |
| A6A1MP2 | 1251-3172 | 7 | 1 | CONNECTOR-SGL CONT SKT .03-IN-BSC-SZ RND | 28480 | 1251-3172 |
| A6A1MP3 | 1251-2313 | 6 | 1 | CONNECTOR-SGL CONT SKT .04-IN-BSC-SZ RND | 28480 | 1251-2313 |
| A6A1VR1 | 1902-3224 | 1 | 1 | DIODE-ZNR 17.6V 5% DO-35 PD=0.4W | 28480 | 1902-3224 |
| A6A1VR2 | 1902-0048 | 2 | 1 | DIODE-ZNR 8.16V 5% DO-35 PD=0.4W | 28480 | 1902-0048 |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|------------------|
| A7 | 08590-80001 | 2 | 1 | ANALOG INTERFACE BOARD ASSEMBLY | 28480 | 08590-80001 |
| A7C1 | 0180-0118 | 1 | 9 | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X9035B2 |
| A7C2 | 0180-4832 | 4 | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0180-4832 |
| A7C3 | 0180-4835 | 7 | 43 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C4 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C5 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C6 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C7 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C8 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C9 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C10 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C11 | 0180-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0180-4832 |
| A7C12 | 0180-4800 | 6 | 2 | CAPACITOR-FXD 120PF +-5% 100VDC CER | 28480 | 0180-4800 |
| A7C13 | 0180-6502 | 9 | 1 | CAPACITOR-FXD 10UF +-2% 50VDC MET-POLYC | 84411 | HEW-249 |
| A7C14 | 0180-5916 | 7 | 1 | CAPACITOR-FXD .2UF +-1% 200VDC MET-POLYP | 28480 | 0180-5916 |
| A7C15 | 0180-0118 | 1 | 1 | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X9035B2 |
| A7C16 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C17 | 0180-0118 | 1 | | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X9035B2 |
| A7C18 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C19 | 0180-4800 | 6 | | CAPACITOR-FXD 120PF +-5% 100VDC CER | 28480 | 0180-4800 |
| A7C20 | 0180-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0180-4832 |
| A7C21 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C22 | 0180-4831 | 3 | 1 | CAPACITOR-FXD 4700PF +-10% 100VDC CER | 28480 | 0180-4831 |
| A7C23 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C24 | 0180-0118 | 1 | | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X9035B2 |
| A7C25 | 0180-0118 | 1 | | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X9035B2 |
| A7C26 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C27 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C28 | 0180-3787 | 6 | 1 | CAPACITOR-FXD 1UF +-10% 50VDC MET-POLYC | 28480 | 0180-3787 |
| A7C29 | 0180-4847 | 2 | 1 | CAPACITOR-FXD 2UF +-20% 50VDC MET-POLYE | 28480 | 0180-4847 |
| A7C30 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C31 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C32 | 0180-3510 | 3 | 3 | CAPACITOR-FXD 3UF +-10% 50VDC MET-POLYC | 28480 | 0180-3510 |
| A7C33 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C34 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C35 | 0180-3510 | 3 | | CAPACITOR-FXD 3UF +-10% 50VDC MET-POLYC | 28480 | 0180-3510 |
| A7C36 | 0180-3658 | 0 | 1 | CAPACITOR-FXD 10UF +-10% 50VDC MET-POLYC | 28480 | 0180-3658 |
| A7C37 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C38 | 0180-0118 | 1 | | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X9035B2 |
| A7C39 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C40 | 0180-0118 | 1 | | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X9035B2 |
| A7C41 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C42 | 0180-5098 | 6 | 2 | CAPACITOR-FXD .22UF +-10% 50VDC CER | 16299 | CAC05X7R224J050A |
| A7C43 | 0180-3510 | 3 | | CAPACITOR-FXD 3UF +-10% 50VDC MET-POLYC | 28480 | 0180-3510 |
| A7C44 | 0180-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0180-4832 |
| A7C45 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C46 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C47 | 0180-0378 | 5 | 1 | CAPACITOR-FXD .47UF+-10% 35VDC TA | 56289 | 150D474X9035A2 |
| A7C48 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C49 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C50 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C51 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C52 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C53 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C54 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C55 | 0180-0118 | 1 | | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X9035B2 |
| A7C56 | 0180-4834 | 6 | 1 | CAPACITOR-FXD .047UF +-10% 100VDC CER | 28480 | 0180-4834 |
| A7C57 | 0180-5098 | 6 | | CAPACITOR-FXD .22UF +-10% 50VDC CER | 16299 | CAC05X7R224J050A |
| A7C58 | 0180-5438 | 9 | 1 | CAPACITOR-FXD 1.0UF +-10% 80VDC POLYE | 28480 | 0180-5438 |
| A7C59 | 0180-2500 | 1 | 1 | CAPACITOR-FXD 1500UF+-60-10% 16VDC AL | 37942 | TT1520018G1C3P |
| A7C60 | 0180-0118 | 1 | | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X9035B2 |

See introduction to this section for ordering information
 *Indicates factory selected value

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|-------------------|
| A7C101 | 0180-4835 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C102 | 0180-4835 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C103 | 0180-4835 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C104 | 0180-4835 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C105 | 0180-4835 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C106 | 0180-4835 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C107 | 0180-4835 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C108 | 0180-4835 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C109 | 0180-4835 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C110 | 0180-4835 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C111 | 0180-4835 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C112 | 0180-4835 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7C113 | 0180-4835 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A7CR1 | 1901-0050 | | 3 | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 9N171 | 1N4150 |
| A7CR2 | 1901-0050 | | 3 | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 9N171 | 1N4150 |
| A7CR5 | 1901-0050 | | 3 | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 9N171 | 1N4150 |
| A7CR6 | 1901-0518 | | 8 | DIODE-SH SIG SCHOTTKY | 28480 | 1901-0518 |
| A7CR7 | 1901-0518 | | 8 | DIODE-SH SIG SCHOTTKY | 28480 | 1901-0518 |
| A7CR101 | 1901-0050 | | 3 | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 9N171 | 1N4150 |
| A7J1 | 1251-7988 | | 9 | CONN-POST TYPE .100-PIN-SPCG 50-CONT | 28480 | 1251-7988 |
| A7J2 | 1251-7983 | | 3 | CONN-POST TYPE .100-PIN-SPCG 10-CONT | 00779 | 87227-8 |
| A7J3 | 1252-0025 | | 5 | CONN-POST TYPE .100-PIN-SPCG 3-CONT | 28480 | 1252-0025 |
| A7J4 | 1252-0718 | | 3 | CONN-POST TYPE .100-PIN-SPCG 5-CONT | 28480 | 1252-0718 |
| A7J5 | 1251-2989 | | 8 | CONNECTOR-PHONO SINGLE PHONO JACK; DIP | 28480 | 1251-2989 |
| A7J6 | 1251-5380 | | 3 | CONNECTOR 2-PIN N POST TYPE | 28480 | 1251-5380 |
| A7J7 | 1251-4826 | | 1 | CONNECTOR 8-PIN N POST TYPE | 28480 | 1251-4826 |
| A7FP6 | 08590-20018 | | 7 | STANDOFF-REF | 28480 | 08590-20018 |
| A7FP7 | 08590-20027 | | 8 | NUT-STANDOFF | 28480 | 08590-20027 |
| A7Q1 | 1854-0468 | | 4 | TRANSISTOR NPN SI TO-3 PD=150W FT=800KHZ | 28480 | 1854-0468 0456 |
| A7Q2 | 1853-0314 | | 9 | TRANSISTOR PNP 2N2905A SI TO-39 PD=600MW | 04713 | 2N2905A |
| A7Q3 | 1855-0417 | | 7 | TRANSISTOR J-FET N-CHAN D-MODE TO-18 SI | 28480 | 1855-0417 |
| A7Q4 | 1855-0686 | | 2 | TRANSISTOR MOSFET P-CHAN E-MODE TO-92 SI | 17856 | VPO300L |
| A7Q5 | 1855-0420 | | 2 | TRANSISTOR J-FET 2N4391 N-CHAN D-MODE | 01298 | 2N4391 |
| A7Q6 | 1854-0215 | | 1 | TRANSISTOR NPN SI TO-92 PD=350MW | 04713 | 2N3904 |
| A7Q7 | 1855-0414 | | 4 | TRANSISTOR J-FET 2N4393 N-CHAN D-MODE | 17856 | 2N4393 |
| A7Q101 | 1853-0638 | | 2 | TRANSISTOR PNP SI PD=310MW FT=250KHZ | 27014 | 2N3906 |
| A7R1 | 0698-8624 | | 5 | RESISTOR 2K .1% .125W F TC=0+-25 | 28480 | 0698-8624 |
| A7R2 | 0698-8624 | | 5 | RESISTOR 2K .1% .125W F TC=0+-25 | 28480 | 0698-8624 |
| A7R3 | 0698-3132 | | 4 | RESISTOR 281 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-2610-F |
| A7R4 | 0698-0486 | | 2 | RESISTOR 48.33K .1% .1W F TC=0+-10 | 28480 | 0698-0486 |
| A7R5 | 0698-8343 | | 5 | RESISTOR 9K .1% .125W F TC=0+-25 | 28480 | 0698-8343 |
| A7R6 | 0698-8344 | | 6 | RESISTOR 900 .1% .125W F TC=0+-25 | 28480 | 0698-8344 |
| A7R7 | 0698-8323 | | 7 | RESISTOR 100 .1% .125W F TC=0+-25 | 28480 | 0698-8323 |
| A7R8 | 0698-8353 | | 1 | RESISTOR 50K .1% .125W F TC=0+-25 | 28480 | 0698-8353 |
| A7R9 | 0698-8353 | | 7 | RESISTOR 50K .1% .125W F TC=0+-25 | 28480 | 0698-8353 |
| A7R10 | 0698-1909 | | 1 | RESISTOR 2.31K .1% .125W F TC=0+-25 | 2N627 | CRB14 |
| A7R11 | 0698-8322 | | 0 | RESISTOR 4K .1% .125W F TC=0+-25 | 28480 | 0698-8322 |
| A7R12 | 0698-8322 | | 0 | RESISTOR 4K .1% .125W F TC=0+-25 | 28480 | 0698-8322 |
| A7R13 | 0698-8907 | | 1 | RESISTOR 320 .25% .25W F TC=0+-50 | 28480 | 0698-8907 |
| A7R14 | 0757-0417 | | 8 | RESISTOR 582 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-582R-F |
| A7R15 | 0698-3440 | | 7 | RESISTOR 198 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-198R-F |
| A7R16 | 0757-0280 | | 3 | RESISTOR 1K 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-1001-F |
| A7R17 | 0698-8343 | | 5 | RESISTOR 9K .1% .125W F TC=0+-25 | 28480 | 0698-8343 |
| A7R18 | 0698-8382 | | 8 | RESISTOR 1K .1% .125W F TC=0+-25 | 28480 | 0698-8382 |
| A7R19 | 0698-0903 | | 3 | RESISTOR 10K .1% .1W F TC=0+-10 | 28480 | 0698-0903 |
| A7R20 | 0698-0903 | | 3 | RESISTOR 10K .1% .1W F TC=0+-10 | 28480 | 0698-0903 |
| A7R21 | 0698-0903 | | 3 | RESISTOR 10K .1% .1W F TC=0+-10 | 28480 | 0698-0903 |
| A7R22 | 0698-0903 | | 3 | RESISTOR 10K .1% .1W F TC=0+-10 | 28480 | 0698-0903 |
| A7R23 | 0698-0903 | | 3 | RESISTOR 10K .1% .1W F TC=0+-10 | 28480 | 0698-0903 |
| A7R24 | 0698-0233 | | 2 | RESISTOR 3.4K 0.1% 0.1W F TC=0+-10 | 19701 | 50232 |
| A7R25 | 0698-1885 | | 8 | RESISTOR 3K 0.1% 0.1W F TC=0+-10 | 19701 | 50232 |
| A7R26 | 0698-2285 | | 4 | RESISTOR 200 0.1% 1W F TC=0+-10 | 19701 | |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|-------------------|
| A7R29 | 0699-0098 | 7 | 1 | RESISTOR 6K .1% .1W F TC=0+-15 | 28480 | 0699-0098 |
| A7R30 | 0699-1866 | 9 | 1 | RESISTOR 2.7K .1% .1W F TC=0+-10 | 19701 | 5023Z |
| A7R31 | 0699-1910 | 4 | 1 | RESISTOR 881.2K .1% .125W F TC=0+-25 | 21827 | CRB14 |
| A7R32 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A7R33 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A7R34 | 0699-0903 | 3 | | RESISTOR 10K .1% .1W F TC=0+-10 | 28480 | 0699-0903 |
| A7R35 | 0699-6360 | 6 | 2 | RESISTOR 10K .1% .125W F TC=0+-25 | 28480 | 0699-6360 |
| A7R36 | 0757-0416 | 7 | 1 | RESISTOR 511 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-511R-F |
| A7R37 | 0699-1885 | 8 | | RESISTOR 3K .1% .1W F TC=0+-10 | 19701 | 5023Z |
| A7R38 | 0757-0278 | 7 | 1 | RESISTOR 01.0 1% 0.125W F TC=0+-100 | 24546 | CT4-1/8-T0-8182-F |
| A7R39 | 0699-2285 | 4 | | RESISTOR 200 0.1% 1W F TC=0+-10 | 19701 | |
| A7R40 | 0699-2285 | 4 | | RESISTOR 200 0.1% 1W F TC=0+-10 | 19701 | |
| A7R41 | 0699-2285 | 4 | | RESISTOR 200 0.1% 1W F TC=0+-10 | 19701 | |
| A7R42 | 0699-3132 | 4 | | RESISTOR 281 1% 0.125W F TC=0+-100 | 24546 | CT4-1/8-T0-2810-F |
| A7R43 | 0699-0903 | 3 | | RESISTOR 10K .1% .1W F TC=0+-10 | 28480 | 0699-0903 |
| A7R44 | 0757-0442 | 9 | 19 | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R45 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R46 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R47 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A7R48 | 0757-0465 | 6 | 2 | RESISTOR 100K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1003-F |
| A7R49 | 0757-0465 | 6 | | RESISTOR 100K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1003-F |
| A7R50 | 0699-6360 | 6 | | RESISTOR 10K .1% .125W F TC=0+-25 | 28480 | 0699-6360 |
| A7R51 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R52 | 0699-3400 | 9 | 1 | RESISTOR 147 1% .5W F TC=0+-100 | 28480 | 0699-3400 |
| A7R101 | 0699-6630 | 3 | 6 | RESISTOR 20K .1% .125W F TC=0+-25 | 28480 | 0699-6630 |
| A7R102 | 0699-6630 | 3 | | RESISTOR 20K .1% .125W F TC=0+-25 | 28480 | 0699-6630 |
| A7R103 | 0699-6630 | 3 | | RESISTOR 20K .1% .125W F TC=0+-25 | 28480 | 0699-6630 |
| A7R104 | 0699-6630 | 3 | | RESISTOR 20K .1% .125W F TC=0+-25 | 28480 | 0699-6630 |
| A7R105 | 0699-6619 | 8 | | RESISTOR 15K 0.1% 0.125W F TC=0+-25 | 28480 | 0699-6619 |
| A7R106 | 0699-6619 | 8 | | RESISTOR 15K 0.1% 0.125W F TC=0+-25 | 28480 | 0699-6619 |
| A7R107 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R108 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R110 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R111 | 0757-0458 | 7 | 11 | RESISTOR 61.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A7R112 | 0757-0458 | 7 | | RESISTOR 51.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A7R113 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R114 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R115 | 0757-0458 | 7 | | RESISTOR 51.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A7R116 | 0757-0458 | 7 | | RESISTOR 61.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A7R117 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R118 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R119 | 0757-0458 | 7 | | RESISTOR 51.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A7R120 | 0757-0458 | 7 | | RESISTOR 51.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A7R121 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R122 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R123 | 0757-0458 | 7 | | RESISTOR 51.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A7R124 | 0757-0458 | 7 | | RESISTOR 51.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A7R125 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R126 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R127 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R128 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R129 | 0757-0458 | 7 | | RESISTOR 51.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A7R130 | 0757-0458 | 7 | | RESISTOR 51.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A7R131 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R132 | 0757-0458 | 7 | | RESISTOR 51.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A7R133 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A7R134 | 0699-3150 | 8 | 1 | RESISTOR 2.37K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2371-F |
| A7U1 | 1820-3100 | 8 | 1 | IC CDR TTL ALS BIN 3-T0-8-LINE 3-INP | 01295 | SN74ALS138N |
| A7U2 | 1820-1997 | 7 | 14 | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 34335 | AN74LS374AP |
| A7U3 | 1820-1997 | 7 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 34335 | AN74LS374AP |
| A7U4 | 1820-1997 | 7 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 34335 | AN74LS374AP |
| A7U5 | 1820-1997 | 7 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 34335 | AN74LS374AP |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|----------------------|
| A7U6 | 1820-1997 | 7 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 34335 | AM74LS374AP |
| A7U7 | 1820-1997 | 7 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 34335 | AM74LS374AP |
| A7U8 | 1820-1997 | 7 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 34335 | AM74LS374AP |
| A7U9 | 1820-1997 | 7 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 34335 | AM74LS374AP |
| A7U10 | 1820-1997 | 7 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 34335 | AM74LS374AP |
| A7U11 | 1820-1997 | 7 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 34335 | AM74LS374AP |
| A7U12 | 1826-1386 | 0 | 5 | D/A 12-BIT 18-PLASTIC CMOS | 24355 | AD11/548 |
| A7U13 | 1826-1386 | 0 | | D/A 12-BIT 18-PLASTIC CMOS | 24355 | AD11/548 |
| A7U14 | 1826-1386 | 0 | | D/A 12-BIT 18-PLASTIC CMOS | 24355 | AD11/548 |
| A7U15 | 1826-1386 | 0 | | D/A 12-BIT 18-PLASTIC CMOS | 24355 | AD11/548 |
| A7U16 | 1826-1386 | 0 | | D/A 12-BIT 18-PLASTIC CMOS | 24355 | AD11/548 |
| A7U17 | 1826-1048 | 1 | 13 | IC OP AMP PRCH 8-DIP-C PKG | 06665 | OP-07CZ |
| A7U18 | 1826-1048 | 1 | | IC OP AMP PRCH 8-DIP-C PKG | 06665 | OP-07CZ |
| A7U19 | 1826-1048 | 1 | | IC OP AMP PRCH 8-DIP-C PKG | 06665 | OP-07CZ |
| A7U20 | 1826-1048 | 1 | | IC OP AMP PRCH 8-DIP-C PKG | 06665 | OP-07CZ |
| A7U21 | 1826-1048 | 1 | | IC OP AMP PRCH 8-DIP-C PKG | 06665 | OP-07CZ |
| A7U22 | 1826-1048 | 1 | | IC OP AMP PRCH 8-DIP-C PKG | 06665 | OP-07CZ |
| A7U23 | 1826-1048 | 1 | | IC OP AMP PRCH 8-DIP-C PKG | 06665 | OP-07CZ |
| A7U24 | 1826-1048 | 1 | | IC OP AMP PRCH 8-DIP-C PKG | 06665 | OP-07CZ |
| A7U25 | 1826-1048 | 1 | | IC OP AMP PRCH 8-DIP-C PKG | 06665 | OP-07CZ |
| A7U26 | 1826-1048 | 1 | | IC OP AMP PRCH 8-DIP-C PKG | 06665 | OP-07CZ |
| A7U27 | 1826-1048 | 2 | 1 | IC OP AMP PRCH 8-DIP-C PKG | 06665 | OP-27CZ |
| A7U28 | 1826-1048 | 1 | | IC OP AMP PRCH 8-DIP-C PKG | 06665 | OP-07CZ |
| A7U29 | 1826-1048 | 1 | | IC OP AMP PRCH 8-DIP-C PKG | 06665 | OP-07CZ |
| A7U30 | 1826-1459 | 8 | 1 | IC OP AMP CUR 14-DIP-C PKG | 06665 | OP50-001Y |
| A7U31 | 1826-0610 | 1 | 2 | IC MULTIPLXR 4-CHAN-ANLG DUAL 16-DIP-C | 06665 | MUX24FQ |
| A7U32 | 1826-0610 | 1 | | IC MULTIPLXR 4-CHAN-ANLG DUAL 16-DIP-C | 06665 | MUX24FQ |
| A7U33 | 1826-0609 | 8 | 1 | IC MULTIPLXR ANLG 16-DIP-C PKG | 06665 | MUX08FQ |
| A7U34 | 1826-1514 | 6 | 1 | IC V RGLTR-V-REF-FXD 9.995/10.005V | 10899 | LT1021BCN8-10 |
| A7U35 | 1826-1186 | 9 | 2 | ANALOG SWITCH 4 SPST 18 -CERDIP | 06665 | SW-066Q |
| A7U36 | 1826-0611 | 4 | 1 | IC SWITCH ANLG QUAD 16-DIP-C PKG | 06665 | SW-01FQ |
| A7U37 | 1826-1186 | 8 | | ANALOG SWITCH 4 SPST 18 -CERDIP | 06665 | SW-066Q |
| A7U38 | 1826-0498 | 1 | 1 | IC V RGLTR TO-39 | 04713 | HC70L06ACG 1826-0220 |
| A7U39 | 1826-1048 | 1 | | IC OP AMP PRCH 8-DIP-C PKG | 06665 | OP-07CZ |
| A7U40 | 1826-0975 | 9 | 1 | IC OP AMP LOW-BIAS-H-IMP 8-DIP-C PKG | 04713 | PC3400480 1826-1461 |
| A7U101 | 1820-1997 | 7 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 34335 | AM74LS374AP |
| A7U102 | 1826-1253 | 0 | 3 | D/A 18-CERDIP BPLR | 06665 | DAC86EX |
| A7U103 | 1820-1997 | 7 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 34335 | AM74LS374AP |
| A7U104 | 1826-1253 | 0 | | D/A 18-CERDIP BPLR | 06665 | DAC86EX |
| A7U105 | 1820-1997 | 7 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 34335 | AM74LS374AP |
| A7U106 | 1826-1253 | 0 | | D/A 18-CERDIP BPLR | 06665 | DAC86EX |
| A7U107 | 1820-1997 | 7 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 34335 | AM74LS374AP |
| A7U108 | 1820-0471 | 0 | 1 | IC INV TTL HEX 1-IMP | 01295 | SN7408N |
| A7U109 | 1858-0074 | 6 | 3 | TRANSISTOR ARRAY 14-PIN PLSTC TO-116 | 04713 | MP08100 |
| A7U110 | 1858-0047 | 5 | 1 | TRANSISTOR ARRAY 16-PIN PLSTC DIP | 13806 | ULN-2003A |
| A7U111 | 1858-0074 | 8 | | TRANSISTOR ARRAY 14-PIN PLSTC TO-116 | 04713 | MP08100 |
| A7U112 | 1858-0074 | 8 | | TRANSISTOR ARRAY 14-PIN PLSTC TO-116 | 04713 | MP08100 |
| A7VR1 | 1902-0029 | 9 | 1 | DIODE-ZNR 12V 5% PD=1W IR-SUA | 28480 | 1902-0029 |
| A7VR2 | 1902-3149 | 8 | 1 | DIODE-ZNR 9.09V 5% DO-35 PD=.4W | 28480 | 1902-3149 |
| A7VR101 | 1902-0025 | 4 | 1 | DIODE-ZNR 10V 5% DO-35 PD=.4W TC=+.06% | 28480 | 1902-0025 |
| A7U1 | 8159-0005 | 0 | 2 | RESISTOR-ZERO OHMS 22 AWG LEAD DIA | 28480 | 8159-0005 |
| A7U2 | 8159-0005 | 0 | | RESISTOR-ZERO OHMS 22 AWG LEAD DIA | 28480 | 8159-0005 |
| A8 | 0850-1819 | 6 | 1 | PWR-SUPPLY; POME-75W; NO -OF-OUTPUTS-4 | 28480 | 0850-1819 |

See introduction to this section for ordering information
 *Indicates factory selected value

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C | D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|------------------------|---|---|-----|--|----------|-------------------|
| A8 | 08580-80073 | | | 1 | 3RD CONVERTER BOARD ASSEMBLY | 28480 | 08580-80073 |
| A9 | 08580-80073 | | | | 3RD OPT 001 | | |
| A9C1 | 0180-4801 | 7 | | 1 | CAPACITOR-FXD 100PF +-5% 100VDC CER | 28480 | 0180-4801 |
| A9C2 | 0180-4795 | 8 | | 1 | CAPACITOR-FXD 4.7PF +-5% 100VDC CER | 28480 | 0180-4795 |
| A9C3 | 0180-4792 | 5 | | 1 | CAPACITOR-FXD 8.2PF +-5% 100VDC CER | 28480 | 0180-4792 |
| A9C4 | 0180-4822 | 2 | | 9 | CAPACITOR-FXD 1000PF +-5% 100VDC CER | 28480 | 0180-4822 |
| A9C5 | 0180-4822 | 2 | | 2 | CAPACITOR-FXD 1000PF +-5% 100VDC CER | 28480 | 0180-4822 |
| A9C6 | 0180-4822 | 2 | | | CAPACITOR-FXD 1000PF +-5% 100VDC CER | 28480 | 0180-4822 |
| A9C7 | 0180-4788 | 8 | | 1 | CAPACITOR-FXD 18PF +-5% 100VDC CER 0+-30 | 28480 | 0180-4788 |
| A9C8 | 0180-4802 | 8 | | 1 | CAPACITOR-FXD 82PF +-5% 100VDC CER 0+-30 | 28480 | 0180-4802 |
| A9C9 | 0180-4805 | 1 | | 1 | CAPACITOR-FXD 47PF +-5% 100VDC CER 0+-30 | 28480 | 0180-4805 |
| A9C10 | 0180-4814 | 2 | | 1 | CAPACITOR-FXD 150PF +-5% 100VDC CER | 28480 | 0180-4814 |
| A9C11 | 0180-4554 | 7 | | 12 | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0180-4554 |
| A9C12 | 0180-4554 | 7 | | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0180-4554 |
| A9C13 | 0180-4554 | 7 | | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0180-4554 |
| A9C14 | 0180-4554 | 7 | | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0180-4554 |
| A9C15 | 0180-4554 | 7 | | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0180-4554 |
| A9C16 | 0180-4554 | 7 | | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0180-4554 |
| A9C17 | 0180-4554 | 7 | | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0180-4554 |
| A9C18 | 0180-4554 | 7 | | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0180-4554 |
| A9C19 | 0180-4554 | 7 | | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0180-4554 |
| A9C20 | 0180-4554 | 7 | | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0180-4554 |
| A9C21 | 0180-4554 | 7 | | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0180-4554 |
| A9C22 | 0180-4822 | 2 | | | CAPACITOR-FXD 1000PF +-5% 100VDC CER | 28480 | 0180-4822 |
| A9C23 | 0180-4822 | 2 | | | CAPACITOR-FXD 1000PF +-5% 100VDC CER | 28480 | 0180-4822 |
| A9C24 | 0180-4822 | 2 | | | CAPACITOR-FXD 1000PF +-5% 100VDC CER | 28480 | 0180-4822 |
| A9C25 | 0480-0197 | 8 | | 1 | CAPACITOR-FXD 2.2UF+-10% 20VDC TA | 56289 | 150D225X9020A2 |
| A9C28 | 0180-4554 | 7 | | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0180-4554 |
| A9C27 | 0180-4822 | 2 | | | CAPACITOR-FXD 1000PF +-5% 100VDC CER | 28480 | 0180-4822 |
| A9C28 | 0180-4822 | 2 | | | CAPACITOR-FXD 1000PF +-5% 100VDC CER | 28480 | 0180-4822 |
| A9C29 | 0180-0116 | 1 | | 1 | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X9035B2 |
| A9C30 | 0180-4822 | 2 | | | CAPACITOR-FXD 1000PF +-5% 100VDC CER | 28480 | 0180-4822 |
| A9CR1 | 1901-0040 | 1 | | 2 | DIODE-SWITCHING 30V 50MA 2HS DO-35 | 9N171 | 1N4148 |
| A9CR2 | 1901-0040 | 1 | | | DIODE-SWITCHING 30V 50MA 2HS DO-35 | 9N171 | 1N4148 |
| A9CR3 | 1901-1070 | 9 | | 1 | DIODE-PIN 110V | 28480 | 1901-1070 |
| A9J1 | 1250-0690 | 6 | | 2 | CONNECTOR-RF SMD N SGL-HOLE-FR 50-OHM | 28480 | 1250-0690 |
| A9J2 | 1250-0690 | 8 | | | CONNECTOR-RF SMD N SGL-HOLE-FR 50-OHM | 28480 | 1250-0690 |
| ASL1 | 08558-80012 | 7 | | 1 | COIL FREQ ADJUST | 28480 | 08558-80012 |
| ASL2 | 9100-2250 | 9 | | 1 | INDUCTOR RF-CH-MLD 180NH 10% | 28480 | 9100-2250 |
| ASL3 | 9100-2255 | 4 | | 2 | INDUCTOR RF-CH-MLD 470NH 10% | 28480 | 9100-2255 |
| ASL4 | 9100-2255 | 4 | | | INDUCTOR RF-CH-MLD 470NH 10% | 28480 | 9100-2255 |
| ASL5 | 9100-2891 | 4 | | 1 | INDUCTOR RF-CH-MLD 50NH 10% | 28480 | 9100-2891 |
| ASL6 | 9100-2251 | 0 | | 1 | INDUCTOR RF-CH-MLD 220NH 10% | 28480 | 9100-2251 |
| ASL7 | 9100-2259 | 8 | | 1 | INDUCTOR RF-CH-MLD 1.5UH 10% | 28480 | 9100-2259 |
| ASL8 | 9100-3582 | 8 | | 2 | INDUCTOR RF-CH-MLD 4.7UH 5% | 28480 | 9100-3582 |
| ASL9 | 9100-3582 | 8 | | | INDUCTOR RF-CH-MLD 4.7UH 5% | 28480 | 9100-3582 |
| ASL10 | 9140-0398 | 8 | | 1 | INDUCTOR RF-CH-MLD 12UH 5% | 28480 | 9140-0398 |
| ASL11 | 9100-3548 | 0 | | 3 | INDUCTOR RF-CH-MLD 470NH 5% | 28480 | 9100-3548 |
| ASL12 | 9100-3548 | 0 | | | INDUCTOR RF-CH-MLD 470NH 5% | 28480 | 9100-3548 |
| ASL13 | 9100-3548 | 0 | | | INDUCTOR RF-CH-MLD 470NH 5% | 28480 | 9100-3548 |
| ASL14 | 9100-2249 | 8 | | 1 | INDUCTOR RF-CH-MLD 150NH 10% | 28480 | 9100-2249 |
| A9Q1 | 1854-0345 | 8 | | 1 | TRANSISTOR NPN 2N5179 SI TO-72 PD=200MW | 04713 | 2N5179 |
| A9Q2 | 1854-0247 | 9 | | 1 | TRANSISTOR NPN SI TO-39 PD=1W FT=800MHZ | 28480 | 1854-0247 |
| A9Q3 | 1853-0036 | 2 | | 1 | TRANSISTOR PNP SI PD=310MW FT=250MHZ | 27014 | 2N3906 |
| A9Q4 | 1854-1032 | 2 | | 1 | TRANSISTOR NPN SI PD=2.5W | 04713 | HPF581 |
| A9Q5 | 1854-0215 | 1 | | 1 | TRANSISTOR NPN SI TO-92 PD=350MW | 04713 | 2N3904 |
| A9R1 | 0757-0280 | 3 | | 1 | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A9R2 | 0757-0394 | 0 | | 4 | RESISTOR 51.1 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-51R1-F |
| A9R3 | 0757-0424 | 7 | | 2 | RESISTOR 1.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1101-F |
| A9R4 | 2100-3123 | 0 | | 1 | RESISTOR-TRMR 500 10% C SIDE-ADJ 17-TRN | 73138 | 99PR500 |
| A9R5 | 0757-0346 | 2 | | 3 | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |

See introduction to this section for ordering information.

* Indicates factory selected value.

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C | D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|---|---|-----|---------------------------------------|----------|---------------------|
| ASR6 | 0757-0346 | 2 | | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| ASR7 | 0757-0398 | 4 | | 2 | RESISTOR 75 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-75R0-F |
| ASR8 | 0698-7227 | 6 | | 1 | RESISTOR 422 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-422R-F |
| ASR9 | 0698-7203 | 8 | | 1 | RESISTOR 42.2 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-42R2-F |
| ASR10 | 0698-7188 | 8 | | 1 | RESISTOR 10 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-10R-F |
| ASR11 | 0757-0394 | 0 | | | RESISTOR 51.1 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-51R1-F |
| ASR12 | 0757-0394 | 0 | | | RESISTOR 51.1 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-51R1-F |
| ASR13 | 0757-0294 | 9 | | 2 | RESISTOR 17.8 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-17R8-F |
| ASR14 | 0757-0294 | 9 | | | RESISTOR 17.8 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-17R8-F |
| ASR15 | 0757-0424 | 7 | | | RESISTOR 1.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1101-F |
| ASR16 | 0757-0419 | 0 | | 1 | RESISTOR 681 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-681R-F |
| ASR17 | 0757-0443 | 0 | | 1 | RESISTOR 11K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1102-F |
| ASR18 | 0698-3154 | 0 | | 1 | RESISTOR 4.22K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-4221-F |
| ASR19 | 0757-0405 | 4 | | 2 | RESISTOR 162 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-162R-F |
| ASR20 | 0757-0405 | 4 | | | RESISTOR 162 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-162R-F |
| ASR21 | 0757-0394 | 0 | | | RESISTOR 51.1 1% 0.125W F TC=0+-100 | 24546 | CT4-1/8-T0-51R1-F |
| ASR22 | 0757-0419 | 0 | | 1 | RESISTOR 681 1% 0.125W F TC=0+-100 | 24546 | CT4-1/8-T0-681R-F |
| ASR23 | 0698-0082 | 0 | | 2 | RESISTOR 4.22K 1% 0.125W F TC=0+-100 | 24546 | CT4-1/8-T0-4221-F |
| ASR24 | 0698-0108 | 0 | | 1 | RESISTOR 4.22K 1% 0.125W F TC=0+-100 | 24546 | CT4-1/8-T0-42K-F |
| ASR25 | 0757-0418 | 7 | | | RESISTOR 511 1% 0.125W F TC=0+-100 | 24546 | CT4-1/8-T0-511R-F |
| ASR26 | 0698-0082 | 7 | | 1 | RESISTOR 464 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-4640-F |
| ASR27 | 0757-0398 | 4 | | | RESISTOR 75 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-75R0-F |
| ASR28 | 0757-0346 | 2 | | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| ASR29 | 0698-7203 | 0 | | | RESISTOR 42.2 1% 0.125W F TC=0+-100 | | |
| ASU1 | 0955-0084 | 5 | | 1 | U-WAVE MIXER 500 MHZ MAX | 28480 | 0955-0084 |
| ASVR1 | 1902-3104 | 6 | | 1 | DIODE-ZNR 5.62V 5X DO-35 PD+.4W | 28480 | 1902-3104 |
| ASVR2 | 1902-0025 | 4 | | 1 | DIODE-ZNR 10V 5X DO-35 PD+.4W TC+.06% | 28480 | 1902-0025 |
| AGY1 | 0410-1854 | 5 | | 1 | SAMR 299.9 MHZ | 28480 | 0410-1854 |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|---------------------------------|-----------------------------------|-----|-----|---|----------|-------------------|
| A10 | 08590-60056 | 6 | 1 | 2ND IF BOARD ASSEMBLY | 28480 | 08590-60056 |
| <i>See Note front of manual</i> | | | | | | |
| A10C1 | 0121-0457 | 9 | 3 | CAPACITOR-V TRFR-PSTN .8-8.5PF 750V | 18738 | TP8 |
| A10C2 | 0121-0457 | 9 | | CAPACITOR-V TRFR-PSTN .8-8.5PF 750V | 18738 | TP8 |
| A10C3 | 0121-0457 | 9 | | CAPACITOR-V TRFR-PSTN .8-8.5PF 750V | 18738 | TP8 |
| A10C4 | 0160-3878 | 6 | 4 | CAPACITOR-FXD 1000PF +-20% 100VDC CER | 28480 | 0160-3878 |
| A10C5 | 0160-3878 | 6 | | CAPACITOR-FXD 1000PF +-20% 100VDC CER | 28480 | 0160-3878 |
| A10C6 | 0160-3877 | 6 | 1 | CAPACITOR-FXD 100PF +-20% 200VDC CER | 28480 | 0160-3877 |
| A10C7 | 0160-3878 | 6 | | CAPACITOR-FXD 1000PF +-20% 100VDC CER | 28480 | 0160-3878 |
| A10C8 | 0160-2236 | 8 | 1 | CAPACITOR-FXD 1PF +- .25PF 500VDC CER | 28480 | 0160-2236 |
| A10C9 | 0160-2250 | 6 | 5 | CAPACITOR-FXD 5.1PF +- .25PF 500VDC CER | 28480 | 0160-2250 |
| A10C10 | 0160-3878 | 6 | | CAPACITOR-FXD 1000PF +-20% 100VDC CER | 28480 | 0160-3878 |
| A10C11 | 0160-2250 | 6 | | CAPACITOR-FXD 5.1PF +- .25PF 500VDC CER | 28480 | 0160-2250 |
| A10C12 | 0160-2250 | 6 | | CAPACITOR-FXD 5.1PF +- .25PF 500VDC CER | 28480 | 0160-2250 |
| A10C13 | 0160-2252 | 8 | 1 | CAPACITOR-FXD 6.2PF +- .25PF 500VDC CER | 28480 | 0160-2252 |
| A10C14 | 0160-2250 | 6 | | CAPACITOR-FXD 5.1PF +- .25PF 500VDC CER | 28480 | 0160-2250 |
| A10C15 | 0160-2250 | 6 | | CAPACITOR-FXD 5.1PF +- .25PF 500VDC CER | 28480 | 0160-2250 |
| A10J1 | 1250-0690 | 8 | 2 | CONNECTOR-RF SHB H SGL-HOLE-FR 50-OHM | 28480 | 1250-0690 |
| A10J2 | 1250-0690 | 6 | | CONNECTOR-RF SHB H SGL-HOLE-FR 50-OHM | 28480 | 1250-0690 |
| A10L1 | 9100-2247 | 4 | 1 | INDUCTOR RF-CH-MLD 100NH 10% | 28480 | 9100-2247 |
| A10L2 | 08558-80005 | 8 | 1 | COIL PAR TANK | 28480 | 08558-80005 |
| A10Q1 | 1853-0007 | 7 | 1 | TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW | 04713 | 2N3251 |
| A10Q2 | 9086-4218 1854-1142 | 7 | 1 | 7031-IN TO-234W-C | 28480 | 5086-4218 |
| A10R1 | 0757-0442 | 9 | 1 | RESISTOR 10K 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-1002-F |
| A10R2 | 0886-3138 | 8 | 1 | RESISTOR 17.8K 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-1782-F |
| A10R3 | 0757-0438 | 3 | 1 | RESISTOR 5.11K 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-5111-F |
| A10R4 | 0886-3442 | 9 | 1 | RESISTOR 237 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-237R-F |
| A10R5 | 0757-0280 | 3 | 1 | RESISTOR 1K 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-1001-F |
| A10T1 | 08558-80003 | 6 | 1 | COIL B.P. FILTER | 28480 | 08558-80003 |

See introduction to this section for ordering information
 *Indicates factory selected value

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|---|----------|---------------------|
| A11 | 08590-60050 | | 1 | BANDWIDTH FILTER BOARD ASSEMBLY | 28480 | 08590-60050 |
| A11C1 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C2 | 0160-0127 | | 2 | CAPACITOR-FXD 1UF +-20% 50VDC CER | 28480 | 0160-0127 |
| A11C4 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C5 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C6 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C7 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C8 | 0160-2207 | | 3 | CAPACITOR-FXD 300PF +-5% 300VDC MICA | 28480 | 0160-2207 |
| A11C9 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C10 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C11 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C12 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C13 | 0160-4832 | | 2 | CAPACITOR-FXD 1000PF +-5% 100VDC CER | 28480 | 0160-4832 |
| A11C14 | 0160-2249 | | 3 | CAPACITOR-FXD 4.7PF +- .25PF 500VDC CER | 28480 | 0160-2249 |
| A11C15 | 0121-0090 | | 7 | CAPACITOR-V TRMR-CER 2-8PF 350V PC-MTG | 73899 | DV11PR8A |
| A11C16* | 0160-0134 | | 1 | CAPACITOR-FXD 220PF +-5% 300VDC MICA | 28480 | 0160-0134 |
| A11C17 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C18 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C19 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C20* | 0160-0134 | | 1 | CAPACITOR-FXD 220PF +-5% 300VDC MICA | 28480 | 0160-0134 |
| A11C21 | 0160-0437 | | 7 | CAPACITOR-FXD 12PF +-5% 500VDC CER | 28480 | 0160-0437 |
| A11C22 | 0160-4836 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4836 |
| A11C23 | 0121-0030 | | 0 | CAPACITOR-V TRMR-CER 5.5-18PF 350V | 73899 | DV11PR18A |
| A11C24 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C25 | 0121-0563 | | 8 | CAPACITOR-V TRMR-CER 3.5-10PF 180V | 52783 | 7R/S-TRIKO302448404 |
| A11C26 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C27 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C28 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C29 | 0160-4822 | | 2 | CAPACITOR-FXD 1000PF +-5% 100VDC CER | 28480 | 0160-4822 |
| A11C30 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C31 | 0160-4831 | | 3 | CAPACITOR-FXD 4700PF +-10% 100VDC CER | 28480 | 0160-4831 |
| A11C32 | 0160-4836 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4836 |
| A11C33 | 0160-2207 | | 3 | CAPACITOR-FXD 300PF +-5% 300VDC MICA | 28480 | 0160-2207 |
| A11C34 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C35 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C36 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C37 | 0160-2249 | | 3 | CAPACITOR-FXD 4.7PF +- .25PF 500VDC CER | 28480 | 0160-2249 |
| A11C38 | 0121-0090 | | 7 | CAPACITOR-V TRMR-CER 2-8PF 350V PC-MTG | 73899 | DV11PR8A |
| A11C39 | 0160-2997 | | 8 | CAPACITOR-FXD 8.2PF +- .5PF 1KVDC CER | 28480 | 0160-2997 |
| A11C40 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C41 | 0160-4822 | | 2 | CAPACITOR-FXD 1000PF +-5% 100VDC CER | 28480 | 0160-4822 |
| A11C42 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C43* | 0160-0134 | | 1 | CAPACITOR-FXD 220PF +-5% 300VDC MICA | 28480 | 0160-0134 |
| A11C44 | 0160-0437 | | 7 | CAPACITOR-FXD 12PF +-5% 500VDC CER | 28480 | 0160-0437 |
| A11C45 | 0121-0030 | | 0 | CAPACITOR-V TRMR-CER 5.5-18PF 350V | 73899 | DV11PR18A |
| A11C46 | 0160-4836 | | 7 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4836 |
| A11C47 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C48 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C49 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C50 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C51 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C52 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C53 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C54 | 0121-0563 | | 8 | CAPACITOR-V TRMR-CER 3.5-10PF 180V | 52783 | 7R/S-TRIKO302448404 |
| A11C55 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C56 | 0160-2997 | | 8 | CAPACITOR-FXD 8.2PF +- .5PF 1KVDC CER | 28480 | 0160-2997 |
| A11C60 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C61 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C62 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C63 | 0160-4832 | | 4 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C64* | 0160-0134 | | 1 | CAPACITOR-FXD 220PF +-5% 300VDC MICA | 28480 | 0160-0134 |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|--------------------|
| A11C85 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C86 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C87 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C88 | 0160-2258 | 4 | 1 | CAPACITOR-FXD 11PF +-5% 500VDC CER Q++30 | 28480 | 0160-2258 |
| A11C89 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A11C73 | 0121-0452 | 4 | 2 | CAPACITOR-V TRMR-AIR 1.3-5.4PF 175V | 74870 | 187-0103-028 |
| A11C74 | 0121-0452 | 4 | | CAPACITOR-V TRMR-AIR 1.3-5.4PF 175V | 74870 | 187-0103-028 |
| A11C75 | 0160-4788 | 9 | | CAPACITOR-FXD 18PF | | |
| A11CR1 | 1901-0047 | 8 | 6 | DIODE-SWITCHING 20V 75MA 10NS | 28480 | 1901-0047 |
| A11CR2 | 1901-0047 | 8 | | DIODE-SWITCHING 20V 75MA 10NS | 28480 | 1901-0047 |
| A11CR3 | 1901-1070 | 9 | 5 | DIODE-PIN 110V | 28480 | 1901-1070 |
| A11CR4 | 1901-1070 | 9 | | DIODE-PIN 110V | 28480 | 1901-1070 |
| A11CR5 | 1901-1070 | 9 | | DIODE-PIN 110V | 28480 | 1901-1070 |
| A11CR6 | 1901-0535 | 9 | 5 | DIODE-SM SIG SCHOTTKY | 28480 | 1901-0535 |
| A11CR8 | 1901-0535 | 9 | | DIODE-SM SIG SCHOTTKY | 28480 | 1901-0535 |
| A11CR9 | 1901-0047 | 8 | | DIODE-SWITCHING 20V 75MA 10NS | 28480 | 1901-0047 |
| A11CR10 | 1901-0047 | 8 | | DIODE-SWITCHING 20V 75MA 10NS | 28480 | 1901-0047 |
| A11CR11 | 1901-1070 | 9 | | DIODE-PIN 110V | 28480 | 1901-1070 |
| A11CR12 | 1901-1070 | 9 | | DIODE-PIN 110V | 28480 | 1901-1070 |
| A11CR13 | 1901-0047 | 8 | | DIODE-SWITCHING 20V 75MA 10NS | 28480 | 1901-0047 |
| A11CR14 | 1901-0535 | 9 | | DIODE-SM SIG SCHOTTKY | 28480 | 1901-0535 |
| A11CR15 | 1901-0535 | 9 | | DIODE-SM SIG SCHOTTKY | 28480 | 1901-0535 |
| A11CR16 | 1901-0047 | 8 | | DIODE-SWITCHING 20V 75MA 10NS | 28480 | 1901-0047 |
| A11CR17 | 1901-0535 | 9 | | DIODE-SM SIG SCHOTTKY | 28480 | 1901-0535 |
| A11L1 | 9140-0112 | 2 | 1 | INDUCTOR RF-CH-MLD 4.7UH 10% | 28480 | 9140-0112 |
| A11L2 | 9100-1641 | 0 | 1 | INDUCTOR RF-CH-MLD 240UH 5% | 28480 | 9100-1641 |
| A11L3 | 9140-0114 | 4 | 2 | INDUCTOR RF-CH-MLD 10UH 10% | 28480 | 9140-0114 |
| A11L4 | 9100-1624 | 9 | 3 | INDUCTOR RF-CH-MLD 30UH 5% | 28480 | 9100-1624 |
| A11L5 | 9140-0179 | 1 | 2 | INDUCTOR RF-CH-MLD 22UH 10% | 28480 | 9140-0179 |
| A11L6 | 9100-2813 | 0 | 2 | INDUCTOR 385NH 5% .312D-INX1.018LG-IN | 28480 | 9100-2813 |
| A11L7 | 9140-0399 | 7 | 2 | INDUCTOR RF-CH-MLD 2.2UH 5% | 28480 | 9140-0399 |
| A11L8 | 9140-0178 | 0 | 1 | INDUCTOR RF-CH-MLD 12UH 10% | 28480 | 9140-0178 |
| A11L9 | 9100-1619 | 2 | 2 | INDUCTOR RF-CH-MLD 6.8UH 10% | 28480 | 9100-1619 |
| A11L10 | 9140-0114 | 4 | | INDUCTOR RF-CH-MLD 10UH 10% | 28480 | 9140-0114 |
| A11L11 | 9100-1624 | 9 | | INDUCTOR RF-CH-MLD 30UH 5% | 28480 | 9100-1624 |
| A11L12 | 9140-0179 | 1 | | INDUCTOR RF-CH-MLD 22UH 10% | 28480 | 9140-0179 |
| A11L13 | 9140-0399 | 7 | | INDUCTOR RF-CH-MLD 2.2UH 5% | 28480 | 9140-0399 |
| A11L14 | 9100-1620 | 5 | 1 | INDUCTOR RF-CH-MLD 15UH 10% | 28480 | 9100-1620 |
| A11L15 | 9100-2813 | 0 | | INDUCTOR 385NH 5% .312D-INX1.018LG-IN | 28480 | 9100-2813 |
| A11L16 | 9140-0144 | 0 | 2 | INDUCTOR RF-CH-MLD 4.7UH 10% | 28480 | 9140-0144 |
| A11L17 | 9100-1624 | 9 | | INDUCTOR RF-CH-MLD 30UH 5% | 28480 | 9100-1624 |
| A11L18 | 9100-1619 | 2 | | INDUCTOR RF-CH-MLD 6.8UH 10% | 28480 | 9100-1619 |
| A11L19 | 9140-0144 | 0 | | INDUCTOR RF-CH-MLD 4.7UH 10% | 28480 | 9140-0144 |
| A11NP2 | 08559-00025 | 5 | 1 | BAFFLE INDUCTOR | 28480 | 08559-00025 |
| A11Q1 | 1854-0346 | 8 | 1 | TRANSISTOR NPN 2N5179 SI TO-72 PD=200MW | 04713 | 2N5179 |
| A11Q2 | 1854-0404 | 0 | 2 | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0404 |
| A11Q3 | 1853-0007 | 7 | 5 | TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW | 04713 | 2N3251 |
| A11Q4 | 1853-0007 | 7 | | TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW | 04713 | 2N3251 |
| A11Q5 | 1855-0287 | 5 | 2 | TRANSISTOR J-FET N-CHAN D-MODE TO-92 SI | 28480 | 1855-0287 |
| A11Q6 | 1853-0007 | 7 | | TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW | 04713 | 2N3251 |
| A11Q7 | 1854-0404 | 0 | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0404 |
| A11Q8 | 1853-0007 | 7 | | TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW | 04713 | 2N3251 |
| A11Q9 | 1855-0287 | 5 | | TRANSISTOR J-FET N-CHAN D-MODE TO-92 SI | 28480 | 1855-0287 |
| A11Q10 | 1853-0007 | 7 | | TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW | 04713 | 2N3251 |
| A11R1 | 0757-0444 | 1 | 3 | RESISTOR 12.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1212-F |
| A11R2 | 0698-3156 | 2 | 1 | RESISTOR 14.7K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1472-F |
| A11R3 | 0757-0402 | 1 | 2 | RESISTOR 110 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-111-F |
| A11R4 | 0757-0442 | 9 | 8 | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A11R5 | 0757-0405 | 4 | 1 | RESISTOR 182 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-182R-F |
| A11R6 | 0698-3431 | 6 | 1 | RESISTOR 23.7 1% .125W F TC=0+-100 | 03888 | PH55-1/8-T0-23R7-F |
| A11R7* | 0698-8821 | 8 | 1 | RESISTOR 5.62 1% .125W F TC=0+-100 | 28480 | 0698-8821 |
| A11R8 | 0757-0401 | 0 | 3 | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A11R9 | 0757-0439 | 4 | | RESISTOR 6.81K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-6811-F |
| A11R10 | 0757-1094 | 9 | 1 | RESISTOR 1.47K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1471-F |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|--------|-----|--|----------|---------------------|
| A11R11 | 0757-0440 | 7 | 1 | RESISTOR 7.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-7501-F |
| A11R12 | 0757-0447 | 4 | | RESISTOR 16.2K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1622-F |
| A11R13 | 0698-0082 | 7 | 1 | RESISTOR 464 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-4640-F |
| A11R14 | 0757-0346 | 2 | 4 | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A11R15 | 0698-3440 | 7 | 2 | RESISTOR 196 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-196R-F |
| A11R16 | 0757-0419 | 0 | 2 | RESISTOR 881 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-881R-F |
| A11R17 | 0698-3442 | 9 | 2 | RESISTOR 237 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-237R-F |
| A11R18 | 0698-3154 | 0 | 2 | RESISTOR 4.22K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-4221-F |
| A11R19 | 0698-3156 | 2 | 3 | RESISTOR 14.7K 1% 0.125W F TC=0+-100 | 24546 | CT4-1/8-T0-1471-F |
| A11R20 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A11R21 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A11R22 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A11R23* | 0757-0447 | 4 | 3 | RESISTOR 16.2K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1622-F |
| A11R24 | 0757-0199 | 3 | 2 | RESISTOR 21.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2152-F |
| A11R25 | 0698-3452 | 1 | 1 | RESISTOR 147K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1473-F |
| A11R26 | 2100-3162 | 7 | 1 | RESISTOR-TRMR 200K 10% C SIDE-ADJ 17-TRN | 73138 | 89PR200K |
| A11R27 | 0757-0444 | 1 | | RESISTOR 12.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1212-F |
| A11R28 | 0757-0443 | 0 | 2 | RESISTOR 11K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1102-F |
| A11R29 | 0698-0083 | 9 | 2 | RESISTOR 1.96K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1961-F |
| A11R30 | 0757-0402 | 1 | | RESISTOR 110 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-111-F |
| A11R31 | 2100-3052 | 4 | 1 | RESISTOR-TRMR 50 10% C SIDE-ADJ 17-TRN | 73138 | 89PR50 |
| A11R32* | 0757-0462 | 3 | 1 | RESISTOR 75K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-7502-F |
| A11R33 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A11R34 | 0757-0199 | 3 | | RESISTOR 21.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2152-F |
| A11R35 | 0757-0288 | 1 | 1 | RESISTOR 9.09K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-9091-F |
| A11R36 | 0698-0083 | 8 | | RESISTOR 1.96K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1961-F |
| A11R37 | 0757-0416 | 7 | 2 | RESISTOR 511 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-511R-F |
| A11R38 | 0698-3441 | 9 | 1 | RESISTOR 215 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-215R-F |
| A11R39 | 0757-0419 | 0 | | RESISTOR 881 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-881R-F |
| A11R40 | 0698-3442 | 9 | | RESISTOR 237 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-237R-F |
| A11R41 | 0698-3154 | 0 | | RESISTOR 4.22K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-4221-F |
| A11R42 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A11R43 | 0698-3156 | 2 | | RESISTOR 14.7K 1% 0.125W F TC=0+-100 | 24546 | CT4-1/8-T0-1471-F |
| A11R44 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A11R45 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A11R46 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A11R47 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A11R48* | 0757-0447 | 4 | | RESISTOR 16.2K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1622-F |
| A11R49 | 0757-0444 | 1 | | RESISTOR 12.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1212-F |
| A11R50 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A11R51 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A11R52 | 0757-0443 | 0 | | RESISTOR 11K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1102-F |
| A11R53 | 0698-3440 | 7 | | RESISTOR 196 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-196R-F |
| A11R54 | 0757-0416 | 7 | | RESISTOR 511 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-511R-F |
| A11R55 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A11R56* | 0757-0428 | 1 | 1 | RESISTOR 1.82K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1621-F |
| A11R57 | 0757-0180 | 2 | 2 | RESISTOR 31.6 1% .125W F TC=0+-100 | 28480 | 0757-0180 |
| A11R58 | 0698-3152 | 9 | 1 | RESISTOR 3.49K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3481-F |
| A11R59 | 0757-0180 | 2 | | RESISTOR 31.6 1% .125W F TC=0+-100 | 28480 | 0757-0180 |
| A11R60 | 0698-3153 | 9 | 1 | RESISTOR 3.83K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3831-F |
| A11R61 | 0757-0424 | 7 | 1 | RESISTOR 1.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1101-F |
| A11VR1 | 1902-0048 | 1 | 1 | DIODE-ZNR 6.81V 5% DO-35 PD=.4W | 28480 | 1902-0048 |
| A11Y1 | 0410-0776 | 8 | 4 | CRYSTAL-QUARTZ 21.4 MHZ HC-25/U-HLDR | 28480 | 0410-0776 |
| A11Y2 | 0410-0776 | 8 | | CRYSTAL-QUARTZ 21.4 MHZ HC-25/U-HLDR | 28480 | 0410-0776 |
| A11Y3 | 0410-0776 | 8 | | CRYSTAL-QUARTZ 21.4 MHZ HC-25/U-HLDR | 28480 | 0410-0776 |
| A11Y4 | 0410-0776 | 8 | | CRYSTAL-QUARTZ 21.4 MHZ HC-25/U-HLDR | 28480 | 0410-0776 |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|---------------------|
| A12 | 08590-60039 | 6 | 1 | STEP GAIN BOARD ASSEMBLY | 28480 | 08590-60039 |
| A12C1 | 0160-2055 | 9 | 16 | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C2 | 0160-2055 | 9 | | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C4 | 0160-2055 | 9 | | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C6 | 0160-2055 | 9 | | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C7 | 0160-2055 | 9 | | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C9 | 0160-2055 | 9 | | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C10 | 0160-2055 | 9 | | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C11 | 0160-2055 | 9 | | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C12 | 0160-4832 | 4 | 1 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A12C13 | 0160-2055 | 9 | | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C14 | 0160-2055 | 9 | | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C15 | 0160-2055 | 9 | | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C16 | 0160-3457 | 7 | 3 | CAPACITOR-FXD 2000PF +-10% 250VDC CER | 28480 | 0160-3457 |
| A12C17 | 0160-2055 | 9 | | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C18 | 0160-2055 | 9 | | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C19 | 0160-3457 | 7 | | CAPACITOR-FXD 2000PF +-10% 250VDC CER | 28480 | 0160-3457 |
| A12C20 | 0160-2055 | 9 | | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C21 | 0160-2055 | 9 | | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C22 | 0160-3457 | 7 | | CAPACITOR-FXD 2000PF +-10% 250VDC CER | 28480 | 0160-3457 |
| A12C23 | 0160-2055 | 9 | | CAPACITOR-FXD .01UF +80-20% 100VDC CER | 28480 | 0160-2055 |
| A12C24 | 0160-2199 | 2 | 2 | CAPACITOR-FXD 30PF +-5% 300VDC MICA | 28480 | 0160-2199 |
| A12C25 | 0160-2199 | 2 | | CAPACITOR-FXD 30PF +-5% 300VDC MICA | 28480 | 0160-2199 |
| A12CR1 | 1801-0047 | 8 | | DIODE | | |
| A12CR2 | 1801-0047 | 8 | | DIODE | | |
| A12CR4 | 1801-1070 | 8 | 3 | DIODE-PIN 110V | 28480 | 1801-1070 |
| A12CR5 | 1801-1070 | 8 | | DIODE-PIN 110V | 28480 | 1801-1070 |
| A12CR6 | 1801-1070 | 8 | | DIODE-PIN 110V | 28480 | 1801-1070 |
| A12L1 | 9140-0179 | 1 | 7 | INDUCTOR RF-CH-MLD 22UH 10% | 28480 | 9140-0179 |
| A12L2 | 9140-0179 | 1 | | INDUCTOR RF-CH-MLD 22UH 10% | 28480 | 9140-0179 |
| A12L3 | 9140-0179 | 1 | | INDUCTOR RF-CH-MLD 22UH 10% | 28480 | 9140-0179 |
| A12L4 | 9140-0179 | 1 | | INDUCTOR RF-CH-MLD 22UH 10% | 28480 | 9140-0179 |
| A12L6 | 9140-0179 | 1 | | INDUCTOR RF-CH-MLD 22UH 10% | 28480 | 9140-0179 |
| A12L7 | 9140-0179 | 1 | | INDUCTOR RF-CH-MLD 22UH 10% | 28480 | 9140-0179 |
| A12L8 | 9140-0179 | 1 | | INDUCTOR RF-CH-MLD 22UH 10% | 28480 | 9140-0179 |
| A12L9 | 9100-2260 | 1 | 1 | INDUCTOR RF-CH-MLD 1.8UH 10% | 28480 | 9100-2260 |
| A12L10 | 9140-0158 | 8 | 1 | INDUCTOR RF-CH-MLD 1UH 10% | 28480 | 9140-0158 |
| A12Q1 | 1853-0007 | 7 | 4 | TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW | 04713 | 2N3251 |
| A12Q2 | 1854-0345 | 8 | 3 | TRANSISTOR NPN 2N5179 SI TO-72 PD=200MW | 04713 | 2N5179 |
| A12Q3 | 1853-0007 | 7 | | TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW | 04713 | 2N3251 |
| A12Q4 | 1854-0345 | 8 | | TRANSISTOR NPN 2N5179 SI TO-72 PD=200MW | 04713 | 2N5179 |
| A12Q5 | 1853-0007 | 7 | | TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW | 04713 | 2N3251 |
| A12Q6 | 1854-0345 | 8 | | TRANSISTOR NPN 2N5179 SI TO-72 PD=200MW | 04713 | 2N5179 |
| A12Q7 | 1853-0007 | 7 | | TRANSISTOR PNP 2N3251 SI TO-18 PD=360MW | 04713 | 2N3251 |
| A12R1 | 2100-3103 | 6 | 2 | RESISTOR-TRMR 10K 10% C SIDE-ADJ 17-TRN | 73138 | 89PR10K |
| A12R2 | 2100-3103 | 6 | | RESISTOR-TRMR 10K 10% C SIDE-ADJ 17-TRN | 73138 | 89PR10K |
| A12R3 | 2100-3054 | 8 | 1 | RESISTOR-TRMR 50K 10% C SIDE-ADJ 17-TRN | 73138 | 89PR50K |
| A12R4 | 2100-3061 | 5 | 1 | RESISTOR-TRMR 500K 10% C SIDE-ADJ 17-TRN | 73138 | 89PR500K |
| A12R12 | 0698-3444 | 1 | 4 | RESISTOR 318 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-318R-F |
| A12R15 | 0757-0346 | 2 | 2 | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A12R16 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A12R19 | 0757-0290 | 5 | 1 | RESISTOR 6.19K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-6191-F |
| A12R20 | 0757-0279 | 0 | 4 | RESISTOR 3.16K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3161-F |
| A12R21 | 0698-3162 | 0 | 4 | RESISTOR 46.4K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-4642-F |
| A12R22 | 0757-0279 | 0 | | RESISTOR 3.16K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3161-F |
| A12R23 | 0698-3444 | 1 | | RESISTOR 318 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-318R-F |
| A12R24 | 0757-0395 | 1 | 3 | RESISTOR 58.2 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-58R2-F |
| A12R25 | 0757-0280 | 3 | 6 | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A12R26 | 0757-0417 | 8 | 1 | RESISTOR 58.2 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-58R2-F |
| A12R27 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A12R28 | 0757-0279 | 0 | | RESISTOR 3.16K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3161-F |
| A12R29 | 0698-3444 | 1 | | RESISTOR 318 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-318R-F |
| A12R30 | 0757-0395 | 1 | | RESISTOR 58.2 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-58R2-F |
| A12R31 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|--------|-----|-------------------------------------|----------|-------------------|
| A12R32 | 0757-0420 | 3 | 2 | RESISTOR 750 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-751-F |
| A12R33 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A12R34 | 0757-0279 | 0 | | RESISTOR 3.16K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3161-F |
| A12R35 | 0898-3444 | 1 | | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A12R36 | 0757-0395 | 1 | | RESISTOR 56.2 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-56R2-F |
| A12R37 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A12R38 | 0757-0420 | 3 | | RESISTOR 750 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-751-F |
| A12R39 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A12R40 | 0898-3440 | 7 | 1 | RESISTOR 196 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-196R-F |
| A12R47 | 0898-3162 | 0 | | RESISTOR 46.4K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-4642-F |
| A12R48 | 0898-3162 | 0 | | RESISTOR 46.4K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-4642-F |
| A12R49 | 0898-3162 | 0 | | RESISTOR 46.4K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-4642-F |
| A12R50 | 0898-3447 | 4 | 1 | RESISTOR 422 1% .125W F TC=0+-100 | 24648 | CT4-1/8-T0-422R-F |
| A13 | | | | SAME AS A11 ASSEMBLY | | |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--------------------------------------|----------|-----------------|
| A14 | 08580-00075 | 8 | 1 | LOG AMP BOARD ASSEMBLY | 28480 | 08580-00075 |
| A14C1 | 0160-4554 | 7 | 65 | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C2 | 0180-0197 | 8 | 1 | CAPACITOR-FXD 2.2UF+-10% 20VDC TA | 56289 | 150D225X9020A2 |
| A14C3 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C4 | 0160-4084 | 8 | 2 | CAPACITOR-FXD .1UF +-20% 50VDC CER | 28480 | 0160-4084 |
| A14C5 | 0160-4084 | 8 | | CAPACITOR-FXD .1UF +-20% 50VDC CER | 28480 | 0160-4084 |
| A14C6 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C7 | 0160-3879 | 7 | 1 | CAPACITOR-FXD .01UF +-20% 100VDC CER | 28480 | 0160-3879 |
| A14C8 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C9 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C10 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C11 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C12 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C14 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C15 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C16 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C17 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C18 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C19 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C20 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C21 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C22 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C23 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C24 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C25 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C26 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C27 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C28 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C29 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C30 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C31 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C32 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C33 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C34 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C36 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C37 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C38 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C39 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C40 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C41 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C42 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C43 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C44 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C45 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C46 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C47 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C48 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C49 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C50 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C51 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C52 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C53 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C54 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C55 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C56 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C57 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C58 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C59 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C60 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C61 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C62 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|--------------------|
| A14C63 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C64 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C65 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C66 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C67 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C68 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C69 | 0160-4554 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C70 | 0160-4519 | 4 | 1 | CAPACITOR-FXD 9.1PF +- .5PF 200VDC CER | 28480 | 0160-4519 |
| A14C71 | 0140-0195 | 2 | 1 | CAPACITOR-FXD 130PF +-5% 300VDC MICA | 72136 | 0M15F131J0300WVICR |
| A14C72 | 0160-4386 | 3 | 1 | CAPACITOR-FXD 33PF +-5% 200VDC CER 0+-30 | 28480 | 0160-4386 |
| A14C73 | 0160-3872 | 0 | 1 | CAPACITOR-FXD 2.2PF +- .25PF 200VDC CER | 28480 | 0160-3872 |
| A14C74 | 0160-4654 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14C77 | 0160-4654 | 7 | | CAPACITOR-FXD .01UF +-20% 50VDC CER | 28480 | 0160-4554 |
| A14CR1 | 1910-0016 | 0 | 1 | DIODE-GE 80V 60MA 1US DO-7 | 28480 | 1910-0016 |
| A14CR2 | 1901-0050 | 3 | 2 | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 9M171 | 1N4150 |
| A14CR4 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 9M171 | 1N4150 |
| A14CR6 | 1901-1085 | 6 | 17 | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR7 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR8 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR9 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR10 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR11 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR12 | 1901-1070 | 9 | 7 | DIODE-PIN 110V | 28480 | 1901-1070 |
| A14CR13 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR14 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR15 | 1901-1070 | 9 | | DIODE-PIN 110V | 28480 | 1901-1070 |
| A14CR16 | 1901-1070 | 9 | | DIODE-PIN 110V | 28480 | 1901-1070 |
| A14CR17 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR18 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR19 | 1901-1070 | 9 | | DIODE-PIN 110V | 28480 | 1901-1070 |
| A14CR20 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR21 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR22 | 1901-0040 | 1 | 1 | DIODE-SWITCHING 30V 50MA 2NS DO-35 | 9M171 | 1N4148 |
| A14CR23 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR24 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR25 | 1901-1070 | 9 | | DIODE-PIN 110V | 28480 | 1901-1070 |
| A14CR26 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR27 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14CR28 | 1901-1070 | 9 | | DIODE-PIN 110V | 28480 | 1901-1070 |
| A14CR29 | 1901-1070 | 9 | | DIODE-PIN 110V | 28480 | 1901-1070 |
| A14CR30 | 1901-1085 | 6 | | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2835 |
| A14L1 | 9100-1618 | 1 | 1 | INDUCTOR RF-CH-MLD 5.6UH 10% | 28480 | 9100-1618 |
| A14L2 | 9140-0144 | 0 | 1 | INDUCTOR RF-CH-MLD 4.7UH 10% | 28480 | 9140-0144 |
| A14L3 | 9140-0105 | 3 | 2 | INDUCTOR RF-CH-MLD 8.2UH 10% | 28480 | 9140-0105 |
| A14L4 | 9100-1618 | 2 | 2 | INDUCTOR RF-CH-MLD 6.8UH 10% | 28480 | 9100-1618 |
| A14L5 | 9100-1618 | 2 | | INDUCTOR RF-CH-MLD 6.8UH 10% | 28480 | 9100-1618 |
| A14L6 | 9140-0114 | 4 | 3 | INDUCTOR RF-CH-MLD 10UH 10% | 28480 | 9140-0114 |
| A14L7 | 9140-0114 | 4 | | INDUCTOR RF-CH-MLD 10UH 10% | 28480 | 9140-0114 |
| A14L8 | 9140-0114 | 4 | | INDUCTOR RF-CH-MLD 10UH 10% | 28480 | 9140-0114 |
| A14L9 | 9140-0112 | 2 | 1 | INDUCTOR RF-CH-MLD 4.7UH 10% | 28480 | 9140-0112 |
| A14L10 | 9140-0105 | 3 | | INDUCTOR RF-CH-MLD 8.2UH 10% | 28480 | 9140-0105 |
| A14L11 | 9100-1627 | 2 | 1 | INDUCTOR RF-CH-MLD 39UH 5% | 28480 | 9100-1627 |
| A14L12 | 9100-1629 | 4 | 1 | INDUCTOR RF-CH-MLD 47UH 5% | 28480 | 9100-1629 |
| A14L13 | 9100-1622 | 7 | 1 | INDUCTOR RF-CH-MLD 24UH 5% | 28480 | 9100-1622 |
| A14L14 | 9100-2257 | 6 | 1 | INDUCTOR RF-CH-MLD 820NH 10% | 28480 | 9100-2257 |
| A14Q1 | 1854-0837 | 1 | 1 | TRANSISTOR NPN 2N2219A SI TO-5 PD=800MW | 01295 | 2N2219A |
| A14Q2 | 1853-0281 | 9 | 2 | TRANSISTOR PNP 2N2907A SI TO-18 PD=400MW | 04713 | 2N2907A |
| A14Q3 | 1853-0281 | 9 | | TRANSISTOR PNP 2N2907A SI TO-18 PD=400MW | 04713 | 2N2907A |
| A14Q4 | 1853-0015 | 7 | 5 | TRANSISTOR PNP SI PD=200MW FT=500MHZ | 28480 | 1853-0015 |
| A14Q5 | 1853-0015 | 7 | | TRANSISTOR PNP SI PD=200MW FT=500MHZ | 28480 | 1853-0015 |
| A14Q6 | 1853-0007 | 7 | 1 | TRANSISTOR PNP 2N3251 SI TO-18 PD=380MW | 04713 | 2N3251 |
| A14Q7 | 1854-0019 | 3 | 12 | TRANSISTOR NPN SI TO-18 PD=380MW | 28480 | 1854-0019 |
| A14Q8 | 1853-0015 | 7 | | TRANSISTOR PNP SI PD=200MW FT=500MHZ | 28480 | 1853-0015 |
| A14Q9 | 1854-0019 | 3 | | TRANSISTOR NPN SI TO-18 PD=380MW | 28480 | 1854-0019 |
| A14Q10 | 1853-0015 | 7 | | TRANSISTOR PNP SI PD=200MW FT=500MHZ | 28480 | 1853-0015 |

See introduction to this section for ordering information
 *Indicates factory selected value

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C | D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|---|---|-----|--|----------|---------------------|
| A14Q11 | 1854-0019 | 3 | | | TRANSISTOR NPN SI TO-18 PD-360MW | 28480 | 1854-0019 |
| A14Q12 | 1853-0015 | 7 | | | TRANSISTOR PNP SI PD=200MW FT=500MHZ | 28480 | 1853-0015 |
| A14Q13 | 1854-0019 | 3 | | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q14 | 1854-0019 | 3 | | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q15 | 1854-0019 | 3 | | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q16 | 1854-0019 | 3 | | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q17 | 1854-0019 | 3 | | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q18 | 1854-0019 | 3 | | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q19 | 1854-0019 | 3 | | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q20 | 1854-0019 | 3 | | | TRANSISTOR NPN SI TO-18 PD=360MW | 28480 | 1854-0019 |
| A14Q21 | 1854-0475 | 5 | | 1 | TRANSISTOR-DUAL NPN PD=750MW | 28480 | 1854-0475 |
| A14Q22 | 1854-0404 | 0 | | 2 | TRANSISTOR NPN SI TO-18 PD=380MW | 28480 | 1854-0404 |
| A14Q24 | 1854-0404 | 0 | | 0 | TRANSISTOR NPN SI TO-18 PD=380MW | 28480 | 1854-0404 |
| A14Q25 | 1854-0019 | 3 | | | TRANSISTOR NPN SI TO-18 PD=380MW | 28480 | 1854-0019 |
| A14R1 | 0757-0317 | 7 | | 1 | RESISTOR 1.33K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1331-F |
| A14R2 | 0757-0280 | 3 | | 8 | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R3 | 0698-0084 | 9 | | 1 | RESISTOR 2.15K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2151-F |
| A14R4 | 0698-3430 | 5 | | 1 | RESISTOR 21.5 1% .125W F TC=0+-100 | 03888 | PHE55-1/8-T0-21R5-F |
| A14R5 | 0757-0443 | 0 | | 1 | RESISTOR 11K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1102-F |
| A14R6 | 0757-0442 | 9 | | 4 | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A14R7 | 0757-0465 | 6 | | 1 | RESISTOR 100K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1003-F |
| A14R8 | 0757-0442 | 9 | | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A14R9 | 0698-3460 | 9 | | 1 | RESISTOR 42.2K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-4222-F |
| A14R10 | 2100-2833 | 5 | | 1 | RESISTOR TRMR 1K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR1K |
| A14R11 | 0698-3460 | 9 | | | RESISTOR 42.2K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-4222-F |
| A14R12 | 0757-0458 | 7 | | 2 | RESISTOR 51.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A14R13 | 0757-0401 | 0 | | 8 | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A14R14 | 0757-0460 | 1 | | 1 | RESISTOR 61.9K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-6192-F |
| A14R15 | 0757-0458 | 7 | | | RESISTOR 51.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A14R16 | 0757-0180 | 2 | | 1 | RESISTOR 31.6 1% .125W F TC=0+-100 | 28480 | 0757-0180 |
| A14R17 | 0757-0464 | 5 | | 1 | RESISTOR 90.9K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-9092-F |
| A14R18 | 0698-3136 | 8 | | 2 | RESISTOR 17.8K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1782-F |
| A14R19 | 0757-0123 | 3 | | 1 | RESISTOR 34.9K 1% .125W F TC=0+-100 | 28480 | 0757-0123 |
| A14R20 | 0698-0083 | 8 | | 2 | RESISTOR 1.96K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1961-F |
| A14R21 | 2100-2489 | 9 | | 2 | RESISTOR-TRMR 5K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR5K |
| A14R22 | 0698-3463 | 2 | | 1 | RESISTOR 198K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1983-F |
| A14R23 | 2100-2514 | 1 | | 1 | RESISTOR-TRMR 20K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR20K |
| A14R24 | 0757-0274 | 5 | | 3 | RESISTOR 1.21K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1211-F |
| A14R25 | 0757-0274 | 5 | | | RESISTOR 1.21K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1211-F |
| A14R26 | 0757-0274 | 5 | | | RESISTOR 1.21K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1211-F |
| A14R27 | 2100-2489 | 9 | | | RESISTOR-TRMR 5K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR5K |
| A14R28 | 0757-0346 | 2 | | 14 | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R29 | 0757-0346 | 2 | | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R30 | 2100-2522 | 1 | | 3 | RESISTOR-TRMR 10K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR10K |
| A14R31 | 0757-0346 | 2 | | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R32 | 0757-0346 | 2 | | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R33 | 2100-2522 | 1 | | | RESISTOR-TRMR 10K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR10K |
| A14R34 | 2100-2521 | 0 | | 1 | RESISTOR-TRMR 2K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR2K |
| A14R35 | 0757-0346 | 2 | | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R36 | 0757-0346 | 2 | | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R37 | 0757-0442 | 9 | | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A14R38 | 0698-3151 | 7 | | 1 | RESISTOR 2.87K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2871-F |
| A14R39 | 2100-2520 | 9 | | 1 | RESISTOR-TRMR 50 20% C SIDE-ADJ 1-TRN | 73138 | 82PAR50 |
| A14R40 | 0757-0442 | 9 | | | RESISTOR 10K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1002-F |
| A14R41 | 0757-0290 | 5 | | 1 | RESISTOR 6.19K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-6191-F |
| A14R42 | 0757-0200 | 7 | | 1 | RESISTOR 5.62K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5621-F |
| A14R43 | 0757-0447 | 4 | | 1 | RESISTOR 16.2K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1622-F |
| A14R44 | 0757-0420 | 3 | | 1 | RESISTOR 750 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-751-F |
| A14R45 | 0698-3444 | 1 | | 8 | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R46 | 0698-3156 | 2 | | 1 | RESISTOR 14.7K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1472-F |
| A14R47 | 0757-0346 | 2 | | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R48 | 0698-3150 | 6 | | 4 | RESISTOR 2.37K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2371-F |
| A14R49 | 0698-3132 | 4 | | 1 | RESISTOR 261 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2610-F |
| A14R50 | 0757-0279 | 0 | | 4 | RESISTOR 3.16K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3161-F |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|---------------------|
| A14R51 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R52 | 0698-3444 | 1 | | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R53 | 0757-0444 | 1 | 6 | RESISTOR 12.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1212-F |
| A14R54 | 0757-0444 | 1 | | RESISTOR 12.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1212-F |
| A14R55 | 0757-0440 | 7 | 7 | RESISTOR 7.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-7501-F |
| A14R56 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A14R57 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R58 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R59 | 0698-3150 | 6 | | RESISTOR 2.37K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2371-F |
| A14R60 | 0698-3444 | 1 | | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R61 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R62 | 0757-0444 | 1 | | RESISTOR 12.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1212-F |
| A14R63 | 0757-0444 | 1 | | RESISTOR 12.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1212-F |
| A14R64 | 0757-0440 | 7 | | RESISTOR 7.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-7501-F |
| A14R65 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A14R66 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R67 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R68 | 0698-8958 | 2 | 1 | RESISTOR 511K 1% .125W F TC=0+-100 | 28480 | 0698-8958 |
| A14R69 | 2100-2692 | 6 | 1 | RESISTOR-TRMR 1M 20% C SIDE-ADJ 1-TRN | 73138 | 82PAR1M |
| A14R70 | 0698-3444 | 1 | | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R71 | 0757-0279 | 0 | | RESISTOR 3.16K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3161-F |
| A14R72 | 0757-0444 | 1 | | RESISTOR 12.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1212-F |
| A14R73 | 0757-0444 | 1 | | RESISTOR 12.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1212-F |
| A14R74 | 0757-0440 | 7 | | RESISTOR 7.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-7501-F |
| A14R75 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A14R76 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R77 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R78 | 0698-3150 | 6 | | RESISTOR 2.37K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2371-F |
| A14R79 | 0698-3444 | 1 | | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R80 | 0757-0289 | 2 | 8 | RESISTOR 13.3K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-1332-F |
| A14R81 | 0757-0289 | 2 | | RESISTOR 13.3K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-1332-F |
| A14R82 | 0757-0440 | 7 | | RESISTOR 7.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-7501-F |
| A14R83 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A14R84 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R85 | 0757-0279 | 0 | | RESISTOR 3.16K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3161-F |
| A14R86 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R87 | 0698-3444 | 1 | | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R88 | 2100-2522 | 1 | | RESISTOR-TRMR 10K 10% C SIDE-ADJ 1-TRN | 73138 | 82PAR10K |
| A14R89 | 0757-0440 | 7 | | RESISTOR 7.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-7501-F |
| A14R90 | 0757-0403 | 2 | 2 | RESISTOR 121 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-121R-F |
| A14R91 | 0757-0289 | 2 | | RESISTOR 13.3K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-1332-F |
| A14R92 | 0757-0289 | 2 | | RESISTOR 13.3K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-1332-F |
| A14R93 | 0698-3153 | 9 | 2 | RESISTOR 3.83K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3831-F |
| A14R94 | 0698-3150 | 8 | | RESISTOR 2.37K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2371-F |
| A14R95 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R96 | 0698-3444 | 1 | | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R97 | 0757-0289 | 2 | | RESISTOR 13.3K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-1332-F |
| A14R98 | 0757-0289 | 2 | | RESISTOR 13.3K 1% .125W F TC=0+-100 | 19701 | 5033R-1/8-T0-1332-F |
| A14R99 | 0757-0440 | 7 | | RESISTOR 7.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-7501-F |
| A14R100 | 0757-0403 | 2 | | RESISTOR 121 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-121R-F |
| A14R101 | 0698-3153 | 9 | | RESISTOR 3.83K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-3831-F |
| A14R102 | 0757-0346 | 2 | | RESISTOR 10 1% .125W F TC=0+-100 | 28480 | 0757-0346 |
| A14R103 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A14R104 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |
| A14R105 | 0698-3444 | 1 | | RESISTOR 316 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-316R-F |
| A14R106 | 0757-0417 | 8 | 1 | RESISTOR 582 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-582R-F |
| A14R107 | 0757-0199 | 3 | 1 | RESISTOR 21.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-2152-F |
| A14R108 | 0698-3434 | 9 | 1 | RESISTOR 34.8 1% .125W F TC=0+-100 | 28480 | 0698-3434 |
| A14R109 | 0757-0400 | 9 | 1 | RESISTOR 90.9 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-909R-F |
| A14R110 | 0757-0418 | 9 | 2 | RESISTOR 619 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-619R-F |
| A14R111 | 0698-3440 | 7 | 1 | RESISTOR 196 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-196R-F |
| A14R112 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R113 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A14R114 | 0698-3136 | 8 | | RESISTOR 17.8K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1782-F |
| A14R115 | 0757-0401 | 0 | | RESISTOR 100 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-101-F |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|---|----------|-------------------|
| A14R116 | 0757-0418 | | 9 | RESISTOR 819 1% .125W F TC=0+-100 | 24546 | CT4-1/8-TO-819R-F |
| A14R117 | 0757-0440 | | 7 | RESISTOR 7.5K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-TO-7501-F |
| A14R118 | 0698-0085 | | 0 | RESISTOR 2.61K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-TO-2611-F |
| A14R129 | 0698-0083 | | 8 | RESISTOR 1.86K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-TO-1961-F |
| A14R130 | 0757-0279 | | 0 | RESISTOR 3.16K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-TO-3161-F |
| A14R131 | 0757-0402 | | 1 | RESISTOR 110 1% 0.12W F TC=0+-100 | 24546 | CT4-1/8-TO-111-F |
| A14R132 | 0757-0280 | | | RESISTOR 8.19K 1% 0.125W F TC=0+-100 | | |
| A14R133 | 0686-7212 | | 2 | RESISTOR 100 1% 0.05W F TC=0+-100 | 24546 | C3-1/8-TO-100R-F |
| A14R134 | 0686-7212 | | 9 | RESISTOR 100 1% 0.05W F TC=0+-100 | 24546 | C3-1/8-TO-100R-F |
| A14R135 | 0686-7277 | | 8 | RESISTOR 51.1K 1% 0.12W F TC=0+-100 | 24546 | C3-1/8-TO-5112-F |
| A14R136 | 0686-7277 | | 6 | RESISTOR 51.1K 1% 0.12W F TC=0+-100 | 24546 | C3-1/8-TO-5112-F |
| A14R137 | 0686-7277 | | 6 | RESISTOR 51.1K 1% 0.12W F TC=0+-100 | 24546 | C3-1/8-TO-5112-F |
| A14J1 | 1828-0082 | | 3 | IC OP AMP GP DUAL TO-98 PKG | 28480 | 1828-0082 |
| A14J2 | 1828-0082 | | 3 | IC OP AMP GP DUAL TO-98 PKG | 28480 | 1828-0082 |
| A14VR1 | 1802-0901 | | 5 | DIODE-ZNR 5.4V 1% DO-35 PD=0.4W TC=+-0.048% | 28480 | 1802-0901 |
| A14W1 | 8158-0005 | | 0 | RESISTOR-ZERO OHMS 22 AWG LEAD DIA | 18480 | 8158-0005 |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C | D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|---|---|-----|--|----------|-------------------|
| A15 | 08590-60003 | 4 | | 1 | IF MOTHERBOARD ASSEMBLY | 28480 | 08590-60003 |
| A15C1 | 0160-4832 | 4 | | 10 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A15C2 | 0160-4832 | 4 | | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A15C3 | 0160-4832 | 4 | | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A15C4 | 0160-4832 | 4 | | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A15C5 | 0160-4832 | 4 | | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A15C6 | 0160-4832 | 4 | | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A15C7 | 0160-4832 | 4 | | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A15C8 | 0160-4832 | 4 | | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A15C9 | 0160-4832 | 4 | | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A15C10 | 0160-4832 | 4 | | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A15C11 | 0160-4835 | 7 | | 5 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A15C12 | 0160-4835 | 7 | | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A15C13 | 0160-3444 | 4 | | 4 | CAPACITOR-FXD 39UF+100-10% 40VDC AL | 28480 | 0160-3444 |
| A15C14 | 0160-4835 | 7 | | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A15C15 | 0160-3444 | 4 | | | CAPACITOR-FXD 39UF+100-10% 40VDC AL | 28480 | 0160-3444 |
| A15C16 | 0160-4835 | 7 | | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A15C17 | 0160-3444 | 4 | | | CAPACITOR-FXD 39UF+100-10% 40VDC AL | 28480 | 0160-3444 |
| A15C18 | 0160-4835 | 7 | | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A15C19 | 0160-3444 | 4 | | | CAPACITOR-FXD 39UF+100-10% 40VDC AL | 28480 | 0160-3444 |
| A15C20 | 0160-2216 | 6 | | 1 | CAPACITOR-FXD 350UF+75-10% 16VDC AL | 56289 | 30D357G016DH2 |
| A15CR1 | 1901-0036 | 5 | | 1 | DIODE-HV RECT 1KV 600MA D0-29 | 28480 | 1901-0036 |
| A15CR3 | 1901-0743 | 1 | | 3 | DIODE-PWR RECT 1N4004 400V 1A D0-41 | 01295 | 1N4004 |
| A15CR4 | 1901-0743 | 1 | | | DIODE-PWR RECT 1N4004 400V 1A D0-41 | 01295 | 1N4004 |
| A15CR5 | 1901-0743 | 1 | | | DIODE-PWR RECT 1N4004 400V 1A D0-41 | 01295 | 1N4004 |
| A15DS1 | 1990-0485 | 5 | | 5 | LED-LAMP LUM-INT+2MCD IF+30MA-MAX BVR+5V | 28480 | HLMP-1503 |
| A15DS2 | 1990-0485 | 5 | | | LED-LAMP LUM-INT+2MCD IF+30MA-MAX BVR+5V | 28480 | HLMP-1503 |
| A15DS3 | 1990-0485 | 5 | | | LED-LAMP LUM-INT+2MCD IF+30MA-MAX BVR+5V | 28480 | HLMP-1503 |
| A15DS4 | 1990-0485 | 5 | | | LED-LAMP LUM-INT+2MCD IF+30MA-MAX BVR+5V | 28480 | HLMP-1503 |
| A15DS5 | 1990-0485 | 5 | | | LED-LAMP LUM-INT+2MCD IF+30MA-MAX BVR+5V | 28480 | HLMP-1503 |
| A15E1 | 1970-0096 | 2 | | 1 | SURGE VOLTAGE PROTECTOR | 28480 | 1970-0096 |
| A15J1 | 1251-7300 | 1 | | 1 | CONN-POST TYPE .100-PIN-SPCG 50-CONT | 28480 | 1251-7300 |
| A15J2 | 1252-1468 | 2 | | 1 | CONN-POST TYPE .100-PIN-SPCG 50-CONT | 00779 | 2-103168-3 |
| A15J3 | 1252-1684 | 4 | | 1 | CONN-POST TYPE .156-PIN-SPCG 8-CONT | 28480 | 1252-1684 |
| A15J4 | 1252-1683 | 3 | | 1 | CONN-POST TYPE .156-PIN-SPCG 9-CONT | 28480 | 1252-1683 |
| A15J5 | 1251-2969 | 8 | | 2 | CONNECTOR-PHONO SINGLE PHONO JACK; DIP | 28480 | 1251-2969 |
| A15J6 | 1251-2969 | 8 | | | CONNECTOR-PHONO SINGLE PHONO JACK; DIP | 28480 | 1251-2969 |
| A15J7 | 1252-0025 | 5 | | 1 | CONN-POST TYPE .100-PIN-SPCG 3-CONT | 28480 | 1252-0025 |
| A15J8 | 1251-8507 | 2 | | 1 | CONN-UTIL MT-LK 6-CKT 6-CONT | 28480 | 1251-8507 |
| A15J9 | 1251-0472 | 4 | | 2 | CONNECTOR-PC EDGE 6-CONT/ROW 2-ROWS | 28480 | 1251-0472 |
| A15J10 | 1251-0472 | 4 | | | CONNECTOR-PC EDGE 6-CONT/ROW 2-ROWS | 28480 | 1251-0472 |
| A15J11 | 1251-1365 | 6 | | 4 | CONNECTOR-PC EDGE 22-CONT/ROW 2-ROWS | 28480 | 1251-1365 |
| A15J12 | 1251-1365 | 6 | | | CONNECTOR-PC EDGE 22-CONT/ROW 2-ROWS | 28480 | 1251-1365 |
| A15J13 | 1251-1365 | 6 | | | CONNECTOR-PC EDGE 22-CONT/ROW 2-ROWS | 28480 | 1251-1365 |
| A15J14 | 1251-1365 | 6 | | | CONNECTOR-PC EDGE 22-CONT/ROW 2-ROWS | 28480 | 1251-1365 |
| A15L1 | 9140-0158 | 6 | | 3 | INDUCTOR RF-CH-NLD 1UH 10% | 28480 | 9140-0158 |
| A15L2 | 9140-0158 | 6 | | | INDUCTOR RF-CH-NLD 1UH 10% | 28480 | 9140-0158 |
| A15L3 | 9100-2247 | 4 | | 1 | INDUCTOR RF-CH-NLD 100NH 10% | 28480 | 9100-2247 |
| A15L4 | 9140-0158 | 6 | | | INDUCTOR RF-CH-NLD 1UH 10% | 28480 | 9140-0158 |
| A15L5 | 9140-0328 | 2 | | 4 | INDUCTOR 10UH 10% .625D-INX1.125LG-IN | 28480 | 9140-0328 |
| A15L6 | 9140-0328 | 2 | | | INDUCTOR 10UH 10% .625D-INX1.125LG-IN | 28480 | 9140-0328 |
| A15L7 | 9140-0328 | 2 | | | INDUCTOR 10UH 10% .625D-INX1.125LG-IN | 28480 | 9140-0328 |
| A15L8 | 9140-0328 | 2 | | | INDUCTOR 10UH 10% .625D-INX1.125LG-IN | 28480 | 9140-0328 |
| A15R1 | 0698-3180 | 2 | | 1 | RESISTOR 68 2% 2W MD TC+0+-200 | 28480 | 0698-3180 |
| A15R2 | 0698-3442 | 9 | | 1 | RESISTOR 237 1% .125W F TC+0+-100 | 24546 | CT4-1/8-T0-237R-F |
| A15R3 | 0757-0395 | 1 | | 1 | RESISTOR 56.2 1% .125W F TC+0+-100 | 24546 | CT4-1/8-T0-56R2-F |
| A15R4 | 0757-0854 | 7 | | 2 | RESISTOR 56.2K 1% .5W F TC+0+-100 | 28480 | 0757-0854 |
| A15R5 | 0757-0854 | 7 | | | RESISTOR 56.2K 1% .5W F TC+0+-100 | 28480 | 0757-0854 |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|--------|-----|-------------------------------------|----------|-------------------|
| A1SR6 | 0757-0458 | 7 | 1 | RESISTOR 51.1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-5112-F |
| A1SR7 | 0698-3443 | 0 | 1 | RESISTOR 287 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-287R-F |
| A1SR8 | 0767-0280 | 3 | 2 | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A1SR9 | 0757-0317 | 7 | 2 | RESISTOR 1.33K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1331-F |
| A1SR10 | 0757-0280 | 3 | | RESISTOR 1K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1001-F |
| A1SR11 | 0757-0317 | 7 | | RESISTOR 1.33K 1% .125W F TC=0+-100 | 24546 | CT4-1/8-T0-1331-F |
| A1SR12 | 0764-0013 | 5 | 1 | RESISTOR 56 5% 2W NO TC=0+-200 | 28480 | 0764-0013 |
| A1SU1 | 1900-1038 | 6 | 1 | OPTO-ISOLATOR LED-PXSTR IF=60MA-MAX | 28490 | 1900-1038 |
| A1SVR1 | 1902-0551 | 1 | 1 | DIODE-ZNR 6.2V 5% PD=1W IR=10UA | 28480 | 1902-0551 |

See introduction to this section for ordering information
 *Indicates factory selected value

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|-----------------|
| A16 | 06590-60002 | 3 | 1 | PROCESSOR A/D BOARD ASSEMBLY | 28480 | 06590-60002 |
| A16C1 | 0160-4835 | 7 | 12 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A16C2 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A16C3 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A16C4 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A16C5 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A16C6 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A16C7 | 0160-4832 | 4 | 40 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C8 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C9 | 0160-0228 | 6 | 1 | CAPACITOR-FXD 22UF+-10% 15VDC TA | 56289 | 150D226X901582 |
| A16C10 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A16C11 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C12 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C13 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C14 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A16C15 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A16C16 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A16C17 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C18 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C19 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C20 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C21 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C22 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C23 | 0160-0116 | 1 | 9 | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X903582 |
| A16C24 | 0160-0163 | 6 | 1 | CAPACITOR-FXD .033UF +-10% 200VDC POLYE | 28480 | 0160-0163 |
| A16C25 | 0160-0156 | 6 | 1 | CAPACITOR-FXD 3300PF +-10% 200VDC POLYE | 28480 | 0160-0156 |
| A16C26 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A16C27 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C28 | 0160-4574 | 1 | 2 | CAPACITOR-FXD 1000PF +-10% 100VDC CER | 28480 | 0160-4574 |
| A16C29 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C30 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C31 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C32 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C33 | 0160-4807 | 3 | 1 | CAPACITOR-FXD 33PF +-5% 100VDC CER 0+-30 | 28480 | 0160-4807 |
| A16C34 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C35 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C36 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C37 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C38 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A16C39 | 0160-0116 | 1 | | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X903582 |
| A16C40 | 0160-0116 | 1 | | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X903582 |
| A16C41 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C42 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C43 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C44 | 0160-0116 | 1 | | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X903582 |
| A16C45 | 0160-4790 | 3 | 1 | CAPACITOR-FXD 12PF +-5% 100VDC CER 0+-30 | 28480 | 0160-4790 |
| A16C46 | 0160-4574 | 1 | | CAPACITOR-FXD 1000PF +-10% 100VDC CER | 28480 | 0160-4574 |
| A16C47 | 0160-4882 | 2 | 1 | CAPACITOR-FXD 1000PF +-2.5% 160VDC POLYP | 28480 | 0160-4882 |
| A16C48 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C49 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C50 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C51 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C52 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C53 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C54 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C55 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C56 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C57 | 0160-0116 | 1 | | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X903582 |
| A16C58 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C59 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C60 | 0160-0116 | 1 | | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D685X903582 |

See introduction to this section for ordering information
 *Indicates factory selected value

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|---|----------|------------------|
| A16C61 | 0160-0116 | 1 | | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 1500685X903582 |
| A16C62 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C63 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C64 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C65 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C66 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C67 | 0160-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0160-4832 |
| A16C68 | 0160-0116 | 1 | | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 1500685X903582 |
| A16C69 | 0160-1735 | 2 | 1 | CAPACITOR-FXD .22UF+-10% 35VDC TA | 56289 | 1500224X9035A2 |
| A16C70 | 0160-0116 | 1 | | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 1500685X903582 |
| A16CR1 | 1901-0050 | 3 | 7 | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 9N171 | 1N4150 |
| A16CR2 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 9N171 | 1N4150 |
| A16CR3 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 9N171 | 1N4150 |
| A16CR4 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 9N171 | 1N4150 |
| A16CR5 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 9N171 | 1N4150 |
| A16CR6 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 9N171 | 1N4150 |
| A16CR7 | 1901-0539 | 3 | 1 | DIODE-SM SIG SCHOTTKY | 28480 | 1901-0539 |
| A16CR8 | 1901-1131 | 3 | 1 | DIODE-SCHOTTKY SM SIG | 28480 | 5082-2810 |
| A16CR10 | 1901-0050 | 3 | | DIODE-SWITCHING 80V 200MA 2NS DO-35 | 9N171 | 1N4150 |
| A16CR11 | 1900-0856 | 4 | 16 | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16CR12 | 1900-0856 | 4 | | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16CR13 | 1900-0856 | 4 | | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16CR14 | 1900-0856 | 4 | | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16CR15 | 1900-0856 | 4 | | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16CR16 | 1900-0856 | 4 | | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16CR17 | 1900-0856 | 4 | | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16CR18 | 1900-0856 | 4 | | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16CR19 | 1900-0856 | 4 | | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16CR20 | 1900-0856 | 4 | | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16CR21 | 1900-0856 | 4 | | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16CR22 | 1900-0856 | 4 | | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16CR23 | 1900-0856 | 4 | | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16CR24 | 1900-0856 | 4 | | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16CR25 | 1900-0856 | 4 | | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16CR26 | 1900-0856 | 4 | | LED LAMP LUM-INT=150UCD IF=25MA-MAX | 28480 | 1900-0856 |
| A16J1 | 1251-7389 | 6 | 1 | CONN-POST TYPE .100-PIN-SPCG 50-CONT | 28480 | 1251-7389 |
| A16J2 | 1252-1470 | 6 | 2 | CONN-POST TYPE .100-PIN-SPCG 40-CONT | 00779 | 5188-892-3 |
| A16J3 | 1252-1470 | 6 | | CONN-POST TYPE .100-PIN-SPCG 40-CONT | 00779 | 5188-892-3 |
| A16J4 | 1252-1283 | 9 | 1 | CONN-POST TYPE .100-PIN-SPCG 24-CONT | 28480 | 1252-1283 |
| A16J5 | 1251-5639 | 5 | 1 | CONNECTOR 2-PIN M POST TYPE | 28480 | 1251-5639 |
| A16J6 | 1251-8254 | 2 | 2 | CONNECTOR-SGL CONT RTANG-F | 28480 | 1251-8254 |
| A16J7 | 1251-8254 | 2 | | CONNECTOR-SGL CONT RTANG-F | 28480 | 1251-8254 |
| A16J8 | 1251-5417 | 7 | 2 | CONNECTOR 40-PIN M POST TYPE | 28480 | 1251-5417 |
| A16J9 | 1251-5417 | 7 | | CONNECTOR 40-PIN M POST TYPE | 28480 | 1251-5417 |
| A16L1 | 9100-1631 | 8 | 1 | INDUCTOR RF-CH-MLD 56UH 5% | 28480 | 9100-1631 |
| A16Q1 | 1853-0038 | 2 | 2 | TRANSISTOR PNP SI PD=310MW FT=250MHZ | 27014 | 2N3906 |
| A16Q2 | 1853-0038 | 2 | | TRANSISTOR PNP SI PD=310MW FT=250MHZ | 27014 | 2N3906 |
| A16Q3 | 1855-0420 | 2 | 3 | TRANSISTOR J-FET 2N4391 N-CHAN D-MODE | 01295 | 2N4391 |
| A16Q4 | 1853-0007 | 7 | 1 | TRANSISTOR PNP 2N3251 SI TO-18 PD=380MW | 04713 | 2N3251 |
| A16Q5 | 1855-0420 | 2 | | TRANSISTOR J-FET 2N4391 N-CHAN D-MODE | 01295 | 2N4391 |
| A16Q6 | 1855-0414 | 4 | 1 | TRANSISTOR J-FET 2N4393 N-CHAN D-MODE | 04713 | 2N4393 |
| A16Q7 | 1855-0420 | 2 | | TRANSISTOR J-FET 2N4391 N-CHAN D-MODE | 01295 | 2N4391 |
| A16Q8 | 1855-0675 | 9 | 1 | TRANSISTOR MOSFET N-CHAN E-MODE SI | 04713 | MRF6880 |
| A16R1 | 0898-7236 | 7 | 11 | RESISTOR 1K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1001-F |
| A16R2 | 0898-7236 | 7 | | RESISTOR 1K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1001-F |
| A16R3 | 0898-7253 | 8 | 11 | RESISTOR 5.11K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-5111-F |
| A16R4 | 0898-7260 | 7 | 9 | RESISTOR 10K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1002-F |
| A16R5 | 0898-7253 | 8 | | RESISTOR 5.11K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-5111-F |
| A16R6 | 0898-7253 | 8 | | RESISTOR 5.11K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-5111-F |
| A16R7 | 0898-7205 | 0 | 3 | RESISTOR 51.1 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-5111-F |
| A16R8 | 0898-7231 | 2 | 1 | RESISTOR 619 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-619R-F |
| A16R9 | 0898-7212 | 9 | 3 | RESISTOR 100 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-100R-F |
| A16R10 | 0898-7236 | 7 | | RESISTOR 1K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1001-F |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|------------------------------------|----------|---------------------|
| A16R11 | 0698-7236 | 7 | | RESISTOR 1K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1001-F |
| A16R12 | 0698-7253 | 8 | | RESISTOR 5.11K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-5111-F |
| A16R13 | 0698-7236 | 7 | | RESISTOR 1K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1001-F |
| A16R14 | 0698-7253 | 8 | | RESISTOR 5.11K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-5111-F |
| A16R15 | 0698-7253 | 8 | | RESISTOR 5.11K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-5111-F |
| A16R18 | 0698-7188 | 8 | 1 | RESISTOR 10 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-10R-F |
| A16R17 | 0698-7236 | 7 | | RESISTOR 1K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1001-F |
| A16R18 | 0698-7236 | 7 | | RESISTOR 1K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1001-F |
| A16R19 | 0698-7260 | 7 | | RESISTOR 10K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1002-F |
| A16R20 | 0698-7260 | 7 | | RESISTOR 10K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1002-F |
| A16R21 | 0698-7260 | 7 | | RESISTOR 10K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1002-F |
| A16R22 | 0698-7219 | 6 | 2 | RESISTOR 196 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-196R-F |
| A16R23 | 0698-7196 | 8 | 1 | RESISTOR 21.5 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-21R5-F |
| A16R24 | 0698-6362 | 8 | 3 | RESISTOR 1K 1% .125W F TC=0+-25 | 28480 | 0698-6362 |
| A16R25 | 0698-7219 | 6 | | RESISTOR 196 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-196R-F |
| A16R26 | 0698-6347 | 9 | 2 | RESISTOR 1.5K 1% .125W F TC=0+-25 | 28480 | 0698-6347 |
| A16R27 | 0698-7248 | 1 | 5 | RESISTOR 3.16K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-3161-F |
| A16R28 | 0698-7214 | 1 | 1 | RESISTOR 121 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-121R-F |
| A16R29 | 0698-7284 | 5 | 4 | RESISTOR 100K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1003-F |
| A16R30 | 0698-7277 | 6 | 3 | RESISTOR 51.1K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-5112-F |
| A16R31 | 0698-7225 | 4 | 1 | RESISTOR 348 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-348R-F |
| A16R32 | 0698-7258 | 3 | 1 | RESISTOR 8.25K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-8251-F |
| A16R33 | 0698-7255 | 0 | 1 | RESISTOR 6.19K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-6191-F |
| A16R34 | 0698-7248 | 1 | 1 | RESISTOR 3.16K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-3161-F |
| A16R35 | 0698-7220 | 9 | 1 | RESISTOR 215 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-215R-F |
| A16R36 | 0698-7212 | 9 | | RESISTOR 100 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-100R-F |
| A16R37 | 0698-6320 | 8 | 1 | RESISTOR 5K 1% .125W F TC=0+-25 | 03888 | PHE55-1/8-T9-5001-B |
| A16R38 | 0698-6360 | 6 | 3 | RESISTOR 10K 1% .125W F TC=0+-25 | 28480 | 0698-6360 |
| A16R39 | 0698-7247 | 0 | 1 | RESISTOR 2.87K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-2871-F |
| A16R40 | 0698-7221 | 0 | | RESISTOR 237 1% .05W F TC=0+-100 | | C3-1/8-T0-237R-F |
| A16R41 | 0698-6317 | 3 | 4 | RESISTOR 500 .1% .125W F TC=0+-25 | 03888 | PHE55-1/8-T9-500R-B |
| A16R42 | 0698-6317 | 3 | | RESISTOR 500 .1% .125W F TC=0+-25 | 03888 | PHE55-1/8-T9-500R-B |
| A16R43 | 0698-6362 | 8 | | RESISTOR 1K 1% .125W F TC=0+-25 | 28480 | 0698-6362 |
| A16R44 | 0698-6317 | 3 | | RESISTOR 500 .1% .125W F TC=0+-25 | 03888 | PHE55-1/8-T9-500R-B |
| A16R45 | 0698-7202 | 7 | 2 | RESISTOR 38.3 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-383-F |
| A16R46 | 0698-7202 | 7 | | RESISTOR 38.3 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-383-F |
| A16R47 | 0698-7218 | 5 | 1 | RESISTOR 179 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-179R-F |
| A16R48 | 0698-7236 | 7 | | RESISTOR 1K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1001-F |
| A16R49 | 0698-7250 | 5 | 1 | RESISTOR 3.93K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-3931-F |
| A16R50 | 0698-7260 | 7 | | RESISTOR 10K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1002-F |
| A16R51 | 0698-7277 | 6 | | RESISTOR 51.1K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-5112-F |
| A16R52 | 0698-6362 | 8 | | RESISTOR 1K 1% .125W F TC=0+-25 | 28480 | 0698-6362 |
| A16R53 | 0698-6347 | 9 | | RESISTOR 1.5K 1% .125W F TC=0+-25 | 28480 | 0698-6347 |
| A16R54 | 0698-7284 | 5 | | RESISTOR 100K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1003-F |
| A16R55 | 0698-7212 | 9 | | RESISTOR 100 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-100R-F |
| A16R56 | 0698-7248 | 1 | | RESISTOR 3.16K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-3161-F |
| A16R57 | 0698-7248 | 1 | | RESISTOR 3.16K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-3161-F |
| A16R58 | 0787-0488 | 1 | | RESISTOR 1.82K 1% 0.12W | 24546 | C3-1/8-T0-1821-F |
| A16R59 | 0698-7245 | 8 | 1 | RESISTOR 2.37K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-2371-F |
| A16R60 | 0698-7260 | 7 | | RESISTOR 10K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1002-F |
| A16R61 | 0698-7284 | 5 | | RESISTOR 100K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1003-F |
| A16R62 | 0698-7277 | 6 | | RESISTOR 51.1K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-5112-F |
| A16R63 | 0698-7284 | 5 | | RESISTOR 100K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1003-F |
| A16R64 | 0698-6317 | 3 | | RESISTOR 500 .1% .125W F TC=0+-25 | 03888 | PHE55-1/8-T9-500R-B |
| A16R65 | 0698-6360 | 6 | | RESISTOR 10K 1% .125W F TC=0+-25 | 28480 | 0698-6360 |
| A16R66 | 0698-7205 | 0 | | RESISTOR 51.1 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-51R1-F |
| A16R67 | 0698-6631 | 4 | 1 | RESISTOR 2.5K 1% .125W F TC=0+-25 | 28480 | 0698-6631 |
| A16R68 | 0698-6360 | 6 | | RESISTOR 10K 1% .125W F TC=0+-25 | 28480 | 0698-6360 |
| A16R69 | 0698-7205 | 0 | | RESISTOR 51.1 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-51R1-F |
| A16R70 | 0698-7253 | 8 | | RESISTOR 5.11K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-5111-F |
| A16R71 | 0698-7260 | 7 | | RESISTOR 10K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1002-F |
| A16R72 | 0698-7221 | 0 | 1 | RESISTOR 237 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-237R-F |
| A16R73 | 0698-7253 | 8 | | RESISTOR 5.11K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-5111-F |
| A16R74 | 0698-7236 | 7 | | RESISTOR 1K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1001-F |
| A16R76 | 0698-7236 | 7 | | RESISTOR 1K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1001-F |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|--------------------|
| A16R77 | 0698-7238 | 7 | | RESISTOR 1K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1001-F |
| A16R78 | 0698-7253 | 8 | | RESISTOR 5.11K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-5111-F |
| A16R79 | 0698-7253 | 8 | | RESISTOR 5.11K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-5111-F |
| A16R80 | 0698-7280 | 7 | | RESISTOR 10K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1002-F |
| A16R81 | 0698-7280 | 7 | | RESISTOR 10K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-1002-F |
| A16R82 | 0698-7253 | 8 | | RESISTOR 5.11K 1% .05W F TC=0+-100 | 24546 | C3-1/8-T0-5111-F |
| A16U1 | 1820-2102 | 8 | 3 | IC LCH TTL LS D-TYPE OCTL | 01295 | SN74LS373N |
| A16U2 | 1820-2875 | 0 | 2 | IC TRANSCEIVER TTL LS BUS OCTL | 01295 | SN74LS648NT |
| A16U3 | 1820-2875 | 0 | 2 | IC TRANSCEIVER TTL LS BUS OCTL | 01295 | SN74LS648NT |
| A16U4 | 1818-3499 | 3 | 2 | IC NMOS 65536 (84K) ELEC-ER-PROM 300-NS | 28480 | 1818-3499 |
| A16U5 | 1818-3183 | 2 | 2 | IC CMOS 65536 (84K) STAT RAM 150-NS 3-S | 54013 | HM6264LP-15 |
| A16U6 | SEE PAGE 4-24 | | 1 | PROGRAMMED EPROM | 28480 | 08590-80088 |
| A16U7 | SEE PAGE 4-24 | | 1 | PROGRAMMED EPROM | 28480 | 08590-80089 |
| A16U8 | 1820-3401 | 2 | 1 | IC BFR TTL ALS OR QUAD 2-INP | 01295 | SN74ALS1032AN |
| A16U9 | 1820-1208 | 3 | 4 | IC GATE TTL LS OR QUAD 2-INP | 01295 | SN74LS32N |
| A16U10 | 1820-1201 | 6 | 1 | IC GATE TTL LS AND QUAD 2-INP | 01295 | SN74LS00N |
| A16U11 | 1810-0286 | 4 | 3 | NETWORK-RES 16-DIP 10.0K OHM X 15 | 11236 | 761-1-R10K |
| A16U12 | 1820-2505 | 5 | 1 | IC MPU; CLK FREQ=8MHZ, INSTRUCTION | 04713 | MC68000L8 |
| A16U13 | 1820-1212 | 9 | 1 | IC FF TTL LS J-K NEG-EDGE-TRIG | 01295 | SN74LS112AN |
| A16U14 | 1820-3195 | 9 | 2 | IC SCHMITT-TRIG CMOS/74HC INV HEX | 27014 | HM74HC14N |
| A16U15 | 1820-1218 | 3 | 4 | IC DCDR TTL LS 3-TO-8-LINE 3-INP | 01295 | SN74LS138N |
| A16U16 | 1820-1417 | 6 | 2 | IC GATE TTL LS NAND QUAD 2-INP | 01295 | SN74LS26N |
| A16U17 | 1813-0128 | 0 | 1 | IC OSC HYBRID | 34344 | SP82358 |
| A16U18 | 1820-2102 | 8 | | IC LCH TTL LS D-TYPE OCTL | 01295 | SN74LS373N |
| A16U19 | 1820-3789 | 9 | 4 | IC FF CMOS/74HC D-TYPE POS-EDGE-TRIG COM | 27014 | HM74HC574N |
| A16U20 | 1820-3789 | 9 | 4 | IC FF CMOS/74HC D-TYPE POS-EDGE-TRIG COM | 27014 | HM74HC574N |
| A16U21 | 1818-3499 | 3 | | IC NMOS 65536 (84K) ELEC-ER-PROM 300-NS | 28480 | 1818-3499 |
| A16U22 | 1818-3183 | 2 | | IC CMOS 65536 (84K) STAT RAM 150-NS 3-S | 54013 | HM6264LP-15 |
| A16U23 | SEE PAGE 4-24 | | 1 | PROGRAMMED EPROM | 28480 | 08590-90070 |
| A16U24 | SEE PAGE 4-24 | | 1 | PROGRAMMED EPROM | 28480 | 08590-90071 |
| A16U25 | 1251-4787 | 2 | 1 | SHUNT-DIP 8 POS | 28480 | 1251-4787 |
| A16U26 | 1820-1204 | 8 | 1 | IC GATE TTL LS NAND QUAD 4-INP | 01295 | SN74LS20N |
| A16U27 | 1820-1218 | 3 | 3 | IC DCDR TTL LS 3-TO-8-LINE 3-INP | 01295 | SN74LS138N |
| A16U28 | 1820-1300 | 6 | 1 | IC SHF-RGTR TTL LS R-S PRL-IN PRL-OUT | 01295 | SN74ALS195AN |
| A16U29 | 1820-1194 | 6 | 2 | IC CNTR TTL LS BIN UP/DOWN SYNCHRO | 01295 | SN74ALS193N |
| A16U30 | 1820-1200 | 5 | 1 | IC INV TTL LS HEX | 01295 | SN74LS05N |
| A16U31 | 1820-1218 | 3 | | IC DCDR TTL LS 3-TO-8-LINE 3-INP | 01295 | SN74LS138N |
| A16U32 | 1820-1197 | 9 | 2 | IC GATE TTL LS NAND QUAD 2-INP | 01295 | SN74LS08N |
| A16U33 | 1858-0077 | 1 | 3 | TRANSISTOR ARRAY 14-PIN PLSTC T0-116 | 04713 | MPQ2222P |
| A16U34 | 1810-0037 | 3 | 1 | NETWORK-RES 16-DIP 1.0K OHM X 8 | 11236 | 761-3-R1K |
| A16U35 | 1826-0758 | 8 | 1 | IC COMPARATOR GP QUAD 14-DIP-C PKG | 04713 | LM339J |
| A16U36 | 1820-1194 | 6 | | IC CNTR TTL LS BIN UP/DOWN SYNCHRO | 01295 | SN74ALS193N |
| A16U37 | 1820-1112 | 8 | 3 | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN74LS74AN |
| A16U38 | 1810-0205 | 7 | 2 | NETWORK-RES 8-SIP 4.7K OHM X 7 | 11236 | 750-81-R4.7K |
| A16U39 | 1820-1417 | 6 | | IC GATE TTL LS NAND QUAD 2-INP | 01295 | SN74LS26N |
| A16U40 | 1820-3425 | 0 | 1 | IC-PROGRAMMABLE INTERVAL TIMER,DC-10MHZ | 34848 | D8254-2 |
| A16U41 | 1820-1208 | 3 | | IC GATE TTL LS OR QUAD 2-INP | 01295 | SN74LS32N |
| A16U42 | 1820-1208 | 3 | | IC GATE TTL LS OR QUAD 2-INP | 01295 | SN74LS32N |
| A16U43 | 1820-1208 | 3 | | IC GATE TTL LS OR QUAD 2-INP | 01295 | SN74LS32N |
| A16U44 | 1858-0077 | 1 | | TRANSISTOR ARRAY 14-PIN PLSTC T0-116 | 04713 | MPQ2222P |
| A16U45 | 1826-1045 | 8 | 1 | IC OP AMP H-SLEW-RATE 8-DIP-C PKG | 34371 | HA7-2616-S |
| A16U46 | 1826-1178 | 8 | 1 | SAMPLE AND HOLD 14 -CERDIP | 34371 | HA1-5320-5 |
| A16U47 | 1826-1522 | 8 | 1 | A/D 12-DGT 28-CERDIP HYB | 24355 | AD574AJ (SELECTED) |
| A16U48 | 1810-0286 | 4 | | NETWORK-RES 16-DIP 10.0K OHM X 15 | 11236 | 761-1-R10K |
| A16U49 | 1820-3789 | 9 | | IC FF CMOS/74HC D-TYPE POS-EDGE-TRIG COM | 27014 | HM74HC574N |
| A16U50 | 1820-2102 | 8 | | IC LCH TTL LS D-TYPE OCTL | 01295 | SN74LS373N |
| A16U51 | 1820-1430 | 3 | 2 | IC CNTR TTL LS BIN SYNCHRO POS-EDGE-TRIG | 01295 | SN74LS181AN |
| A16U52 | 1820-1216 | 3 | | IC DCDR TTL LS 3-TO-8-LINE 3-INP | 01295 | SN74LS138N |
| A16U53 | 1810-0286 | 4 | | NETWORK-RES 16-DIP 10.0K OHM X 15 | 11236 | 761-1-R10K |
| A16U54 | 1820-2024 | 3 | 2 | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN74LS244N |
| A16U55 | 1820-1112 | 8 | | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN74LS74AN |
| A16U56 | 1820-1851 | 2 | 1 | IC ENCODR TTL LS | 34336 | AM74LS148N |
| A16U57 | 1820-3440 | 8 | 1 | IC-PARALLEL INTERFACE/TIMER/8MHZ/MC68000 | 04713 | MC68230L8 |
| A16U58 | 1810-0205 | 7 | | NETWORK-RES 8-SIP 4.7K OHM X 7 | 11236 | 750-81-R4.7K |
| A16U59 | 1810-0204 | 6 | 2 | NETWORK-RES 8-SIP 1.0K OHM X 7 | 11236 | 750-81-R1K |
| A16U60 | 1810-0204 | 6 | | NETWORK-RES 8-SIP 1.0K OHM X 7 | 11236 | 750-81-R1K |

See introduction to this section for ordering information.

* Indicates factory selected value.

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C | D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|---|---|-----|--|----------|-----------------|
| A18U61 | 1826-1478 | 1 | | 1 | IC OP AMP PRCH 8-DIP-C PKG | 08665 | OP15-223Z |
| A18U62 | 1858-0032 | 8 | | 1 | TRANSISTOR ARRAY 14-PIN PLSTC DIP | 3L585 | CA3148E |
| A18U63 | 1858-0077 | 1 | | | TRANSISTOR ARRAY 14-PIN PLSTC TO-118 | 04713 | HPQ2222P |
| A18U64 | 1826-0609 | 8 | | 1 | IC MULTIPLXR ANLG 18-DIP-C PKG | 08665 | MU008FQ |
| A18U65 | 1820-3789 | 9 | | | IC FF CMOS/74HC 0-TYPE POS-EDGE-TRIG CDM | 27014 | HT74HC574N |
| A18U66 | 1820-1997 | 7 | | 1 | IC FF TTL LS D-TYPE POS-EDGE-TRIG PRL-IN | 34335 | SN74LS374AP |
| A18U67 | 1820-1436 | 3 | | | IC CNTR TTL LS BIN SYNCRD POS-EDGE-TRIG | 01295 | SN74LS161AH |
| A18U68 | 1820-2024 | 3 | | | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN74LS244N |
| A18U69 | 1820-1207 | 2 | | 1 | IC GATE TTL LS NAND 8-IMP | 01295 | SN74LS30N |
| A18U70 | 1820-1197 | 9 | | | IC GATE TTL LS NAND 2-IMP | 01295 | SN74LS00N |
| A18U71 | 1820-1112 | 8 | | | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN74LS74AN |
| A18U72 | 1820-3195 | 9 | | | IC SCHMITT-TRIG CMOS/74HC 10V HEX | 27014 | HT74HC14N |
| A18VR1 | 1902-3104 | 6 | | 1 | DIODE-ZNR 5.62V 5X DC J6 PD=.4W | 28480 | 1902-3104 |
| A18W1 | 8150-0005 | 0 | | 3 | RESISTOR-ZERO OHMS 22 AWG LEAD DIA | 28480 | 8150-0005 |
| A18W2 | 8150-0005 | 0 | | | RESISTOR-ZERO OHMS 22 AWG LEAD DIA | 28480 | 8150-0005 |
| A18W3 | 8150-0005 | 0 | | | RESISTOR-ZERO OHMS 22 AWG LEAD DIA | 28480 | 8150-0005 |

See introduction to this section for ordering information
 *Indicates factory selected value

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------------|-----|-----|--|----------|-------------------|
| A17 | 08590-80070 | | 1 | VIDEO BOARD ASSEMBLY | 28480 | 08590-80070 |
| A17C1 | 0180-4835 | 7 | 6 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A17C2 | 0180-0116 | 1 | 1 | CAPACITOR-FXD 6.0UF+-10% 35VDC TA | 56289 | 150D885X9035B2 |
| A17C3 | 0180-4832 | 4 | 11 | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0180-4832 |
| A17C4 | 0180-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0180-4832 |
| A17C5 | 0180-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0180-4832 |
| A17C6 | 0180-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0180-4832 |
| A17C7 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A17C8 | 0180-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0180-4832 |
| A17C9 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A17C10 | 0180-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0180-4832 |
| A17C11 | 0180-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0180-4832 |
| A17C12 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A17C13 | 0180-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0180-4832 |
| A17C14 | 0180-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0180-4832 |
| A17C15 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A17C16 | 0180-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0180-4832 |
| A17C17 | 0180-4832 | 4 | | CAPACITOR-FXD .01UF +-10% 100VDC CER | 28480 | 0180-4832 |
| A17C18 | 0180-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A17CR1 | 1901-0539 | 3 | | | | |
| A17J1 | 1252-1469 | 3 | 1 | CONN-POST TYPE .100-PIN-SPCG 40-CONT | 00779 | 103292-2 |
| A17J2 | 1252-0718 | 3 | 1 | CONN-POST TYPE .100-PIN-SPCG 5-CONT | 28480 | 1252-0718 |
| A17J3 | 1251-6254 | 2 | 1 | CONNECTOR-SGL CONT RTANG-F | 28480 | 1251-6254 |
| A17Q1 | 1854-0477 | 7 | 1 | TRANSISTOR NPN 2N2222A SI TO-18 PD=500MW | 04713 | 2N2222A |
| A17Q2 | 1854-0218 | 1 | | TRANSISTOR | | |
| A17R1 | 0757-0399 | 5 | 1 | RESISTOR 82.5 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-82R5-F |
| A17R2 | 0757-0398 | 4 | 1 | RESISTOR 75 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-75R0-F |
| A17R3 | 0898-3444 | 1 | 1 | RESISTOR 316 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-316R-F |
| A17R4 | 0898-3132 | 4 | 1 | RESISTOR 261 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-2610-F |
| A17R5 | 0757-0442 | 9 | 3 | RESISTOR 10K 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-1002-F |
| A17R6 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-1002-F |
| A17R7 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-1002-F |
| A17R8 | 0757-0438 | 3 | 2 | RESISTOR 5.11K 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-S111-F |
| A17R9 | 0757-0438 | 3 | | RESISTOR 5.11K 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-S111-F |
| A17R10 | 0898-8820 | | | RESISTOR 4.84K 1% 0.12W | | |
| A17R11 | 0898-0444 | 1 | | RESISTOR 316 1% 0.12W | | |
| A17R12 | 0898-0082 | 7 | | RESISTOR 484 | | |
| A17R13 | 0757-0278 | 8 | | RESISTOR 1.78K | | |
| A17U1 | 1820-0535 | 7 | 1 | IC DRYR TTL AND DUAL 2-INP | 01295 | SN754518P |
| A17U2 | 1820-4480 | 0 | 1 | IC ADVANCED CRT CONTROLLER/DMA INT/9MHZ | 54111 | M063484-8 |
| A17U3 | 1820-2102 | 8 | 2 | IC LCH TTL LS D-TYPE OCTL | 01295 | SN74LS373M |
| A17U4 | 1820-2102 | 8 | | IC LCH TTL LS D-TYPE OCTL | 01295 | SN74LS373M |
| A17U5 | 08590-80001 | 4 | 1 | PROGRAMMED PAL | 28480 | 08590-80001 |
| A17U6 | 1810-0533 | 4 | 2 | NETWORK-RES 16-DIP 33.0 OHM X 8 | 28480 | 1810-0533 |
| A17U7 | 1820-1112 | 8 | 1 | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN74LS74AH |
| A17U8 | 1820-1194 | 6 | 1 | IC CNTR TTL LS 8IN UP/DOWN SYNCHRO | 01295 | SN74LS193N |
| A17U9 | 1818-3214 | 0 | 4 | IC TMS4418-15NL | 28480 | 1818-3214 |
| A17U10 | 1820-1922 | 8 | 2 | IC SHF-RGTR TTL LS PRL-IN SERIAL-OUT | 01295 | SN74LS166AN |
| A17U11 | 1810-0533 | 4 | | NETWORK-RES 16-DIP 33.0 OHM X 8 | 28480 | 1810-0533 |
| A17U12 | 1818-3214 | 0 | | IC TMS4418-15NL | 28480 | 1818-3214 |
| A17U13 | 1820-1199 | 1 | 1 | IC INV TTL LS HEX 1-INP | 01295 | SN74LS04N |
| A17U14 | 1820-1201 | 6 | 1 | IC GATE TTL LS AND QUAD 2-INP | 01295 | SN74LS08N |
| A17U15 | 1818-3214 | 0 | | IC TMS4418-15NL | 28480 | 1818-3214 |
| A17U16 | 1820-1922 | 8 | | IC SHF-RGTR TTL LS PRL-IN SERIAL-OUT | 01295 | SN74LS166AN |
| A17U17 | 1820-1197 | 9 | 1 | IC GATE TTL LS NAND QUAD 2-INP | 01295 | SN74LS00N |
| A17U18 | 1818-3214 | 0 | | IC TMS4418-15NL | 28480 | 1818-3214 |
| A17U19 | 1820-3298 | 6 | | IC GATE TTL LS OR QUAD 2-INP | 01295 | |
| A17U20 | 1813-0245 | 1 | 1 | XTAL-CLOCK-OSCILLATOR 25-FMHZ 0.05% TTL | 28480 | 1813-0245 |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|-------------------|
| A18 | 08590-80088 | 1 | 1 | HP-IB I/O BOARD ASSEMBLY | 28480 | 08590-80088 |
| A18C1 | 0160-4835 | 7 | 3 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A18C2 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A18C3 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A18J1 | 1252-1489 | 3 | 1 | CONN-POST TYPE .100-PIN-SPCG 40-CONT | 00779 | 103292-2 |
| A18J2 | 1252-1065 | 5 | 1 | CONN-POST TYPE .100-PIN-SPCG 24-CONT | 28480 | 1252-1065 |
| A18R1 | 0757-0442 | 9 | 3 | RESISTOR 10K 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-1002-F |
| A18R2 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-1002-F |
| A18R3 | 0757-0442 | 9 | | RESISTOR 10K 1% .125W F TC=0+-100 | 24548 | CT4-1/8-T0-1002-F |
| A18P4 | 0886-8820 | 7 | | RESISTOR 4.84K 1% 0.12W | | |
| A18U1 | 1820-3513 | 7 | 1 | IC TRANSCEIVER TTL S INSTR-BUS IEEE-488 | 27014 | DS75161AN |
| A18U2 | 1820-3431 | 6 | 1 | IC TRANSCEIVER TTL S INSTR-BUS IEEE-488 | 27014 | DS75180AN |
| A18U3 | 1820-2024 | 3 | 1 | IC DRVYR TTL LS LINE DRVYR OCTL | 01295 | SN74LS244N |
| A18U4 | 1820-2548 | 6 | 1 | IC-GENERAL PURPOSE INTERFACE BUS ADAPTER | 28480 | 1820-2548 |
| A18U5 | 1820-1208 | 3 | 1 | IC GATE TTL LS OR QUAD 2-IMP | 01295 | SN74LS32N |
| A19 | 08590-80018 | 1 | 1 | HP-IB CONNECTOR ASSY | 28480 | 08590-80018 |
| A20 <u>MODULE</u> | 9135-0270 | 2 | 1 | FILTER-LINE OPERATING VOLTAGE:250 V MAX | 54307 | FN 385-4/01 |
| A20 F1 | 2110-0703 | | | Fuse ↑ | | |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--------------------------------------|----------|-------------------|
| A21 | 08590-60012 | 5 | 1 | RS-232 I/O BOARD ASSEMBLY | 28480 | 08590-60012 |
| A21C1 | 0160-4835 | 7 | 6 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A21C2 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A21C3 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A21C4 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A21C5 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A21C8 | 0160-4835 | 7 | | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A21C7 | 0180-0116 | 1 | 1 | CAPACITOR-FXD 6.8UF+-10% 35VDC TA | 56289 | 150D885X903582 |
| A21J1 | 1252-1489 | 3 | 1 | CONN-POST TYPE .100-PIN-SPCG 40-CONT | 00779 | 103292-2 |
| A21J2 | 1252-1036 | 0 | 1 | CONN-POST TYPE .100-PIN-SPCG 26-CONT | 28480 | 1252-1036 |
| A21R1 | 0757-0436 | 3 | 3 | RESISTOR 5.11K 1% .125W F TC-0+-100 | 24546 | CT4-1/8-T0-5111-F |
| A21R2 | 0757-0436 | 3 | | RESISTOR 5.11K 1% .125W F TC-0+-100 | 24546 | CT4-1/8-T0-5111-F |
| A21R3 | 0757-0436 | 3 | | RESISTOR 5.11K 1% .125W F TC-0+-100 | 24546 | CT4-1/8-T0-5111-F |
| A21U1 | 1820-3823 | 0 | 1 | IC-ASYNCHRONOUS COMM.INTERFACE | 27014 | INS8250AN |
| A21U2 | 1820-3322 | 8 | 1 | IC DRVR DTL COMM EIA RS-232C QUAD | 04713 | MC1488P |
| A21U3 | 1820-1112 | 8 | 1 | IC FF TTL LS D-TYPE POS-EDGE-TRIG | 01295 | SN74LS74AN |
| A21U4 | 1820-3321 | 5 | 1 | IC RCVR DTL COMM EIA RS-232C QUAD | 04713 | MC1489AP |
| A21U5 | 1820-1200 | 5 | 1 | IC INV TTL LS HEX | 01295 | SN74LS05N |
| A21U6 | 1820-2024 | 3 | 1 | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN74LS244N |
| A21U7 | 1820-1208 | 3 | 1 | IC GATE TTL LS OR QUAD 2-IMP | 01295 | SN74LS32N |
| A21U8 | 1826-0300 | 6 | 1 | IC V RGLTR T0-39 | 07263 | 79H12HC |
| A22 | 08590-60019 | 2 | 1 | RS 232 CONNECTOR ASSY | 28480 | 08590-60019 |
| | 08590-60052 | | | HP1B RETROFIT KIT | | |
| | 08590-60053 | | | HP1L RETROFIT KIT | | |
| | 08590-60054 | | | RS 232 RETROFIT KIT | | |

See Introduction to this section for ordering information
 *Indicates factory selected value

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|--------|-----|--|----------|-------------------|
| A23 | 08590-80013 | 6 | 1 | HP-IL I/O BOARD ASSEMBLY | 28480 | 08590-80013 |
| A23C1 | 0180-0374 | 3 | 1 | CAPACITOR-FXD 10UF+-10% 20VDC TA | 56289 | 150D106X902082 |
| A23C2 | 0180-4835 | 7 | 3 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0180-4835 |
| A23C3 | 0160-4800 | 6 | 1 | CAPACITOR-FXD 120PF +-5% 100VDC CER | 28480 | 0160-4800 |
| A23C4 | 0160-4835 | 7 | 1 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A23C5 | 0160-4835 | 7 | 1 | CAPACITOR-FXD .1UF +-10% 50VDC CER | 28480 | 0160-4835 |
| A23J1 | 1252-1468 | 3 | 1 | CONN-POST TYPE .100-PIN-SPCG 40-CONT | 00779 | 103202-2 |
| A23J2 | 1252-1287 | 3 | 1 | CONN-POST TYPE .100-PIN-SPCG 10-CONT | 28480 | 1252-1287 |
| A23L1 | 9100-1631 | 8 | 1 | INDUCTOR RF-CH-MLD 50UH 5% * | 28480 | 9100-1631 |
| A23R1 | 0757-0442 | 8 | 1 | RESISTOR 10K 1% .125W F TC=0+-100 * | 24546 | CT4-1/8-T0-1002-F |
| A23U1 | 1L83-0003 | 8 | 1 | HP-IL CHIP | 28480 | 1L83-0003 |
| A23U2 | 1820-1208 | 3 | 1 | IC GATE TTL LS OR QUAD 2-IMP | 01295 | SN74LS32N |
| A23U3 | 1820-2024 | 3 | 1 | IC DRVR TTL LS LINE DRVR OCTL | 01295 | SN74LS244N |
| A23U4 | 1810-0851 | 7 | 1 | NETWORK-RDC 10 PIN SIP; R1=R2=15K+-5% * | 28480 | 1810-0851 |
| A23U5 | 9100-4226 | 3 | 1 | TRANSFORMER | 28480 | 9100-4226 |
| A24 | 08590-80020 | 5 | 1 | HP-IL CBL CONNECTOR ASSY | 28480 | 08590-80020 |
| A26 | | | | | | |

See introduction to this section for ordering information
 *Indicates factory selected value

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|------------------------------|
| | | | | CHASSIS PARTS | | |
| | 08590-60010 | 3 | 1 | COVER ASSY INSTRUMENT | 28480 | 08590-60010 |
| | 08590-00004 | 9 | 1 | COVER INSTRUMENT | 28480 | 08590-00004 |
| | 08590-40002 | 1 | 2 | SPACER FOOT-REAR | 28480 | 08590-40002 |
| | 0900-0024 | 8 | 4 | O-RING .145-IN-ID .07-IN-XSECT-DIA SIL | 51633 | AS568-007 (SILICONE-60 DURO) |
| | 1460-2164 | 8 | 2 | SPRING COMPRESSION | 28480 | 1460-2164 |
| | 2190-0587 | 3 | 4 | WASHER-LK HLCL 5.0 MM 5.1-MM-ID | 28480 | 2190-0587 |
| | 5001-8728 | 4 | 2 | PLATE BACKUP | 28480 | 5001-8728 |
| | 5021-6332 | 4 | 1 | PLATE HANDLE | 28480 | 5021-6332 |
| | 5021-6343 | 7 | 2 | GEAR RING | 28480 | 5021-6343 |
| | 5021-6344 | 8 | 2 | SOCKET-GEAR | 28480 | 5021-6344 |
| | 5041-3937 | 1 | 2 | FOOT REAR | 28480 | 5041-3937 |
| | 5041-3990 | 6 | 1 | HANDLE | 28480 | 5041-3990 |
| | 5041-3991 | 7 | 2 | TRIM CAP-HANDLE | 28480 | 5041-3991 |
| | 08590-00001 | 8 | 1 | PAD ASSY-MATCHING 75 GRN | 28480 | 08590-00001 |
| | 08590-60080 | 9 | 1 | PAD ASSY-MATCHING | 28480 | 08590-60080 |
| | 0515-1114 | | 6 | SCREW | | |
| | 0515-1218 | | 4 | SCREW | | |

See introduction to this section for ordering information.
 * Indicates factory selected value.

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-------------------------|----------------------|-----|-----|---|----------|--------------------------------|
| CABLES (SEE FIGURE 3-2) | | | | | | |
| A3W1 | 08590-60034 | 1 | 1 | CABLE ASSY, ATTENUATOR | 28480 | 08590-60034 |
| A5W1 | 08590-60033 | 0 | 1 | CABLE ASSY, ANALOG POWER | 28480 | 08590-60033 |
| A6W1 | 08590-60035 | 2 | 1 | CABLE ASSY, YIG-POWER | 28480 | 08590-60035 |
| A20W1 | 08590-60016 | 9 | 1 | CABLE ASSY, LINE POWER (INCLUDES A20 PREWIRED) | 28480 | 08590-60016 |
| U1 | 08590-60024 | 9 | 1 | CABLE ASSY, 1 LO OUTPUT | 28480 | 08590-60024 |
| U2 | 08590-60026 | 1 | 1 | CABLE ASSY, CAL OUT | 28480 | 08590-60026 |
| U2 | 08590-60028 | 3 | 1 | CABLE ASSY, CAL OUT | 28480 | 08590-60028 |
| U3 | 08590-60065 | 8 | 1 | CABLE ASSY, PROBE POWER | 28480 | 08590-60065 |
| U4 | 08590-60023 | 8 | 1 | CABLE ASSY, RF INPUT | 28480 | 08590-60023 |
| U5 | 6001-0028 | 3 | 1 | WIRING ASSY, RPG | 28480 | 6001-0028 0960-0745 |
| U6 | 08590-60014 | 7 | 1 | CABLE ASSY, RIBBON 24C | 28480 | 08590-60014 |
| U7 | 08590-60021 | 6 | 1 | CABLE ASSY, VIDEO | 28480 | 08590-60021 |
| U8 | 08590-20057 | 4 | 1 | CABLE ASSY, ISOLATOR TO FIRST CONV | 28480 | 08590-20057 |
| U8 | 08590-20059 | 6 | 1 | CABLE ASSY, LPF TO 2ND CONV. | 28480 | 08590-20059 |
| U10 | 08590-20007 | 4 | 1 | CABLE ASSY, RF ATTN - 1ST | 28480 | 08590-20007 |
| U11 | 08590-60022 | 7 | 1 | CABLE ASSY, DC POWER | 28480 | 08590-60022 |
| U12 | 8120-4823 | 7 | 38 | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| U13 | 8120-4823 | 7 | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| U14 | 8120-4823 | 7 | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| U15 | 08590-60026 | 0 | 1 | CABLE ASSY, SECOND CONV-SEC. IF | 28480 | 08590-60026 |
| U16 | 08590-60027 | 2 | 1 | CABLE ASSY, 2ND IF TO 3RD MIXER | 28480 | 08590-60027 |
| U17 | | | | SEE A19, A21 & A23 P/O REMOTE I/O ASSYS | | |
| U18 | 8120-4823 | 7 | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| U19 | 8120-4823 | 7 | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| U20 | 8120-4823 | 7 | | CABLE ASSY, 2 PHONO 9.5 | 28480 | 8120-4823 |
| U21 | 08590-20056 | 3 | 1 | CABLE ASSY, YIG TO ISOLATOR | 28480 | 08590-20056 |
| U22 | 08590-20058 | 5 | 1 | CABLE ASSY, FIRST CONV TO LPF | 28480 | 08590-20058 |
| W23 | 08590-60041 | 0 | 1 | CABLE ASSY, INTENSITY POT | 28480 | 08590-60041 |
| W24 | 5082-0784 | 4 | 1 | CABLE ASSY, LINE SWITCH | 28480 | 5082-0784 #2722AD2081 & BELOW |
| W25 | 08590-60017 | 0 | 1 | CABLE ASSY, LINE SELECT | 28480 | 08590-60017 |
| W26 | 08590-60037 | 4 | | CABLE ASSY, CRT INTENSITY | | |
| W24 | 5062-1998 | | | #2722AD2082 & ABOVE | | |

See introduction to this section for ordering information.
* Indicates factory selected value.

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|------------------------------|--------|-----|--|----------|----------------------|
| | | | | MISCELLANEOUS PARTS-MAIN IPB (SEE FIGURE 3-1) | | |
| 1 | 0515-0888 | 9 | 8 | SCREW-THD-RLG M4 X 0.7 12MM-LG PAN-HD | 00000 | ORDER BY DESCRIPTION |
| 2 | 0515-0886 | 3 | 22 | SCREW-MACH M3 X 0.5 8MM-LG PAN-HD | 28480 | 0515-0886 |
| 3 | 0515-1125 | 5 | 4 | SCREW-MACH M3 X 0.5 10MM-LG | 28480 | 0515-1125 |
| 4 | 0515-1367 | 7 | 20 | SCREW-MACH M4 X 0.7 8MM-LG 90-DEG-FLH-HD | 28480 | 0515-1367 |
| 5 | 0515-1468 | 8 | 1 | SCREW-MACH M3 X 0.5 45MM-LG PAN-HD | 28480 | 0515-1468 |
| 6 | 0515-1666 #113 | 9 | 2 | SCREW-MACH M4 X 0.7 35MM-LG PAN-HD | 28480 | 0515-1666 |
| 7 | 3050-0105 | 6 | 3 | WASHER-FL MTLG NO. 4 .125-IN-ID | 28480 | 3050-0105 |
| 8 | 5001-5828 | 8 | 2 | COVER, BANDWIDTH FILTER | 28480 | 5001-5828 |
| 9 | 5001-8788 | 2 | 1 | MAIN DECK | | |
| 10 | 08590-00006 | 1 | 1 | SHIELD, CRT | 28480 | 08590-00006 |
| 11 | 08590-00007 | 2 | 1 | BRACKET, POWER SUPPLY | 28480 | 08590-00007 |
| 12 | 08590-00008 | 3 | 1 | BRACKET, MONITOR | 28480 | 08590-00008 |
| 13 | 08590-00088 | 1 | 1 | HP-IB I/O BOARD ASSEMBLY | 28480 | 08590-00088 |
| 14 | 08590-00018 | 3 | 1 | COVER, STEP GAIN | 28480 | 08590-00018 |
| 15 | 08590-00017 | 4 | 1 | COVER, LOG AMP | 28480 | 08590-00017 |
| 16 | 08590-00018 | 5 | 1 | COVER, 2ND IF | 28480 | 08590-00018 |
| 17 | 08590-20019 | 8 | 4 | FRAME, SIDE | 28480 | 08590-20019 |
| 18 | 08590-40001 | 0 | 2 | SUPPORT, POWER SUPPLY | 28480 | 08590-40001 |
| | 0515-1588 | 1 | 2 | SCREW, M4 16MM-LG PAN-HD | | |
| 19 | 08590-00027 | | | COVER 3RD STD | | |
| 19 | 08590-00031 | | | COVER 3RD 001 | | |

See introduction to this section for ordering information.

*Indicates not shown on IPB.

Replaceable Parts

Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|----------------|-----|-----|--|----------|----------------------------|
| | | | | MISCELLANEOUS PARTS-FRONT PANEL ASSY (FIGURE 3-3) | | |
| B1 | 5062-0736 | | 1 | FAN ASSY | | |
| 21 | 0370-3069 | 2 | 1 | KNOB, ROUND .250 GY | 28480 | 0370-3069 |
| 22 | 0370-3079 | 4 | 1 | KNOB, ROUND .125 JG | 28480 | 0370-3079 |
| 23 | 0510-1148 | 2 | 2 | RETAINER-PUSH ON KB-TO-SHFT EXT | 28480 | 0510-1148 |
| 24 | 0515-0894 | 3 | 8 | SCREW-MACH M2.5 X 0.45 8MM-LG PAN-HD | 28480 | 0515-0894 |
| 25 | 0515-0897 | 6 | 12 | SCREW-MACH M3 X 0.5 8MM-LG PAN-HD | 28480 | 0515-0897 |
| 26 | 0515-1822 | 7 | 4 | SCREW-SKT-HD-CAP M4 X 11 7 8MM-LG | 28480 | 0515-1822 |
| 27 | 0590-1251 | 8 | 3 | NUT-SPCLY 15/32-32-THD .1-IN-THK .562-LD | 00000 | ORDER BY DESCRIPTION |
| 28 | 1000-0823 | 8 | 1 | FILTER CRT 5.2 X 4.2 | 28480 | 1000-0823 DS46 |
| 29 (P27A + ABW) | 2190-0016 | 3 | 2 | WASHER-LK INTL T 3/8 IN .377-IN-ID | 28480 | 2190-0016 |
| *30 | 2190-0027 | 6 | 1 | WASHER-LK INTL T 1/4 IN .256-IN-ID | 28480 | 2190-0027 |
| 31 | 2950-0043 | 8 | 2 | NUT-MEX-DEB-CHAM 3/8-32-THD .094-IN-THK | 00000 | ORDER BY DESCRIPTION |
| *32 | 2950-0072 | 3 | 1 | NUT-MEX-DEB-CHAM 1/4-32-THD .082-IN-THK | 00000 | ORDER BY DESCRIPTION |
| *33 | 3030-0007 | 5 | 2 | SCREW-SET 4-40 .125-IN-LG SMALL CUP-PT | 00000 | ORDER BY DESCRIPTION |
| *34 | 3050-0103 | 4 | 2 | WASHER-FL MTLG NO. 12 .25-IN-ID | 28480 | 3050-0103 |
| 35 | 5021-7480 | 5 | 1 | FRAME, FRONT | 28480 | 5021-7480 5021-9920 # 3228 |
| 36 | 5041-3936 | 0 | 2 | BUMPER TOPR/BOTL | 28480 | 5041-3936 |
| 37 | 5041-3938 | 2 | 1 | KEYPAD, RUBBER | 28480 | 5041-3938 |
| 38 | 5041-3939 | 3 | 1 | KEY, '0' | 28480 | 5041-3939 |
| 39 | 5041-3940 | 8 | 1 | KEY, '1' | 28480 | 5041-3940 |
| 40 | 5041-3941 | 7 | 2 | KEY, '2' | 28480 | 5041-3941 |
| 41 | 5041-3942 | 8 | 2 | KEY, '3' | 28480 | 5041-3942 |
| 42 | 5041-3943 | 9 | 1 | KEY, '4' | 28480 | 5041-3943 |
| 43 | 5041-3944 | 0 | 1 | KEY, '5' | 28480 | 5041-3944 |
| 44 | 5041-3945 | 1 | 1 | KEY, '6' | 28480 | 5041-3945 |
| 45 | 5041-3946 | 2 | 1 | KEY, '7' | 28480 | 5041-3946 |
| 46 | 5041-3947 | 3 | 1 | KEY, '8' | 28480 | 5041-3947 |
| 47 | 5041-3948 | 4 | 1 | KEY, 'BK SP' | 28480 | 5041-3948 |
| 48 | 5041-3949 | 5 | 1 | KEY, 'PK SEARCH' | 28480 | 5041-3949 |
| 49 | 5041-3950 | 8 | 1 | KEY, 'MKR-RIGHT ARROW' | 28480 | 5041-3950 |
| 50 | 5041-3951 | 9 | 1 | KEY, 'HOLD' | 28480 | 5041-3951 |
| 51 | 5041-3954 | 2 | 2 | KEY, '9' | 28480 | 5041-3954 |
| 52 | 5041-3955 | 3 | 2 | KEY, 'STEP' | 28480 | 5041-3955 |
| 53 | 5041-3956 | 4 | 4 | KEY, 'TERM' | 28480 | 5041-3956 |
| 54 | 5041-3957 | 5 | 1 | KEY, 'PRESET' | 28480 | 5041-3957 |
| 55 | 5041-3960 | 0 | 1 | KEY, 'FREQUENCY' | 28480 | 5041-3960 |
| 56 | 5041-3961 | 1 | 1 | KEY, 'SPAN' | 28480 | 5041-3961 |
| 57 | 5041-3962 | 2 | 1 | KEY, 'AMPLITUDE' | 28480 | 5041-3962 |
| 58 | 5041-3964 | 4 | 1 | KEY, 'SAVE' | 28480 | 5041-3964 |
| 59 | 5041-3965 | 5 | 1 | KEY, 'RECALL' | 28480 | 5041-3965 |
| 60 | 5041-3967 | 7 | 1 | KEY, 'AUTO COUPLE' | 28480 | 5041-3967 |
| 61 | 5041-3974 | 6 | 1 | KEY, 'DISPLAY' | 28480 | 5041-3974 |
| 62 | 5041-3976 | 8 | 1 | KEY, 'TRIG' | 28480 | 5041-3976 |
| 63 | 5041-3984 | 8 | 2 | BUMPER, TOPL/BOTR | 28480 | 5041-3984 |
| 64 | 5041-3995 | 1 | 8 | ACTUATOR, SOFTKEY | 28480 | 5041-3995 |
| 65 | 5041-7251 | 0 | 1 | KEY, 'PRINT' | 28480 | 5041-7251 |
| 66 | 5041-7252 | 1 | 1 | KEY, 'PLOT' | 28480 | 5041-7252 |
| 67 | 5041-7253 | 2 | 1 | KEY, 'CAL' | 28480 | 5041-7253 |
| 68 | 5041-7254 | 3 | 1 | KEY, 'CONFIG' | 28480 | 5041-7254 |
| 69 | 5041-7255 | 4 | 1 | KEY, 'LOCAL' | 28480 | 5041-7255 |
| 70 | 5041-7256 | 5 | 1 | KEY, 'MKR' | 28480 | 5041-7256 |
| 71 | 5041-7257 | 6 | 1 | KEY, 'SIG TRK' | 28480 | 5041-7257 |
| 72 | 5041-7258 | 7 | 1 | KEY, 'TRACE A' | 28480 | 5041-7258 |
| 73 | 5041-7259 | 8 | 1 | KEY, 'TRACE B' | 28480 | 5041-7259 |
| 74 | 5041-7260 | 1 | 1 | KEY, 'SWEEP-BW' | 28480 | 5041-7260 |
| 75 | 5060-0467 | 6 | 1 | CONNECTOR, NALE PROBF | 28480 | 5060-0467 |
| 76 | 5082-0783 | 3 | 1 | BEZEL ASSY, CRT | 28480 | 5082-0783 OLD COLOR |
| *77 | 8160-0520 | 7 | 3 | GASKET, EMI 3.97M DIA | 28480 | 8160-0520 |
| 78 | 08590-00002 | 7 | 1 | PANEL, FRONT DRESS (08590-00012, OPT 001) | 28480 | 08590-00002 |
| 79 | 0960-0745 | | | RPG | | |

* for serial nos. 2833A 03227 and below

See introduction to this section for ordering information.
*Indicates not shown on IPB.


Table 3-3. Replaceable Parts

| Reference Designation | HP Part Number | C D | Qty | Description | Mfr Code | Mfr Part Number |
|-----------------------|--------------------------|-----|-----|--|----------|----------------------|
| | | | | MISCELLANEOUS PARTS - REAR PANEL (FIGURE 3-4) | | |
| | 1900 | | | | | |
| 81 | 0380-0011 | 9 | 4 | SPACER-RND .75-IN-LG .18-IN-ID .25-IN-OD | 28480 | 0380-0011 |
| 82 | 0510-1148 | 2 | 3 | RETAINER-PUSH ON KB-TO-SHFT EXT | 28480 | 0510-1148 |
| 83 | 0515-0898 | 7 | 1 | SCREW-MACH M4 X 0.7 6MM-LG PAN-HD | 28480 | 0515-0898 |
| 84 | 0515-1125 | 5 | 2 | SCREW-MACH M3 X 0.5 10MM-LG | 28480 | 0515-1125 |
| 85 | 0515-1666 | 9 | 4 | SCREW-MACH M4 X 0.7 35MM-LG PAN-HD | 28480 | 0515-1666 |
| *86 | 0535-0025 | 4 | 2 | NUT-HEX DBL-CHAM M3 X 0.5 2.4MM-THK | 00000 | ORDER BY DESCRIPTION |
| 87 | 1250-1558 | 7 | 6 | ADAPTER-CDAX STR F-BNC F-RCA-PHONO | 28480 | 1250-1558 |
| *88 | 1251-2942 | 7 | 1 | SCREW LOCK KIT-SUBMIN D CONN | 28480 | 1251-2942 |
| *89 | 2110-0703 | 7 | 2 | FUSE 6.3A 250V NTO IEC | 28480 | 2110-0703 |
| *90 | 2190-0586 | 2 | 2 | WASHER-LK HLCL 4.0 MM 4.1-MM-ID | 28480 | 2190-0586 |
| *91 | 3050-0893 | 9 | 2 | WASHER-FL HLCL 4.0 MM 4.4-MM-ID | 28480 | 3050-0893 |
| 92 | 4860-0309 | 5 | 1 | FINGER GUARD | 48633 | 12601-43 UL VERSION |
| 93 | 8160-0520 | 7 | 3 | GASKET, EMI 3.97H OIA | 28480 | 8160-0520 |
| 94 | 8001-8750 | 2 | 1 | PANEL, REAR DRESS | 28480 | 8001-8750 |
| 95 | 8021-5479 | 8 | 1 | FRAME, REAR | 28480 | 8001-8750 |
| *96 | 08590-80012 | 7 | 1 | COVER, 8590A POLY | 28480 | 08590-80012 |
| 97 | 0535-0023 | 2 | 2 | NUT-HEX DBL-CHAM M4 X 0.7 3.2MM-THK | 00000 | ORDER BY DESCRIPTION |
| 98 | 5021-8391 | 5 | 2 | SCREW, CONN HP-IB | 28480 | 5021-8391 |
| *99 | 08590-00021 | 0 | 2 | COVER, HP-IL | 28480 | 08590-00021 |
| *100 | 08590-00022 | 1 | 1 | RETAINER, HP-IL | 28480 | 08590-00022 |
| *101 | 08590-00021 | 0 | | BOARD ASSY, HP-IL I/O | 28480 | 08590-00021 |
| *102 | 08590-60022 | 7 | 1 | CABLE ASSY, HP-IL | 28480 | 08590-60022 |
| | | | | MISCELLANEOUS PARTS - RF SECTION (FIGURE 3-5) | | |
| 110 | 08590-00001 0960-0084 | | 1 | BRACKET, RF ISOLATOR 2-4.1 GHz | | |
| | | | | * FOR SERIALS 2713A 01615 and below | | |
| | | | | Rear Frames | | |
| | | | | 08590-20017 | | |
| | | | | LINE MODULE | | |
| | | | | 9135-0270 | | |

See introduction to this section for ordering information.

*Indicates not shown on IPB.



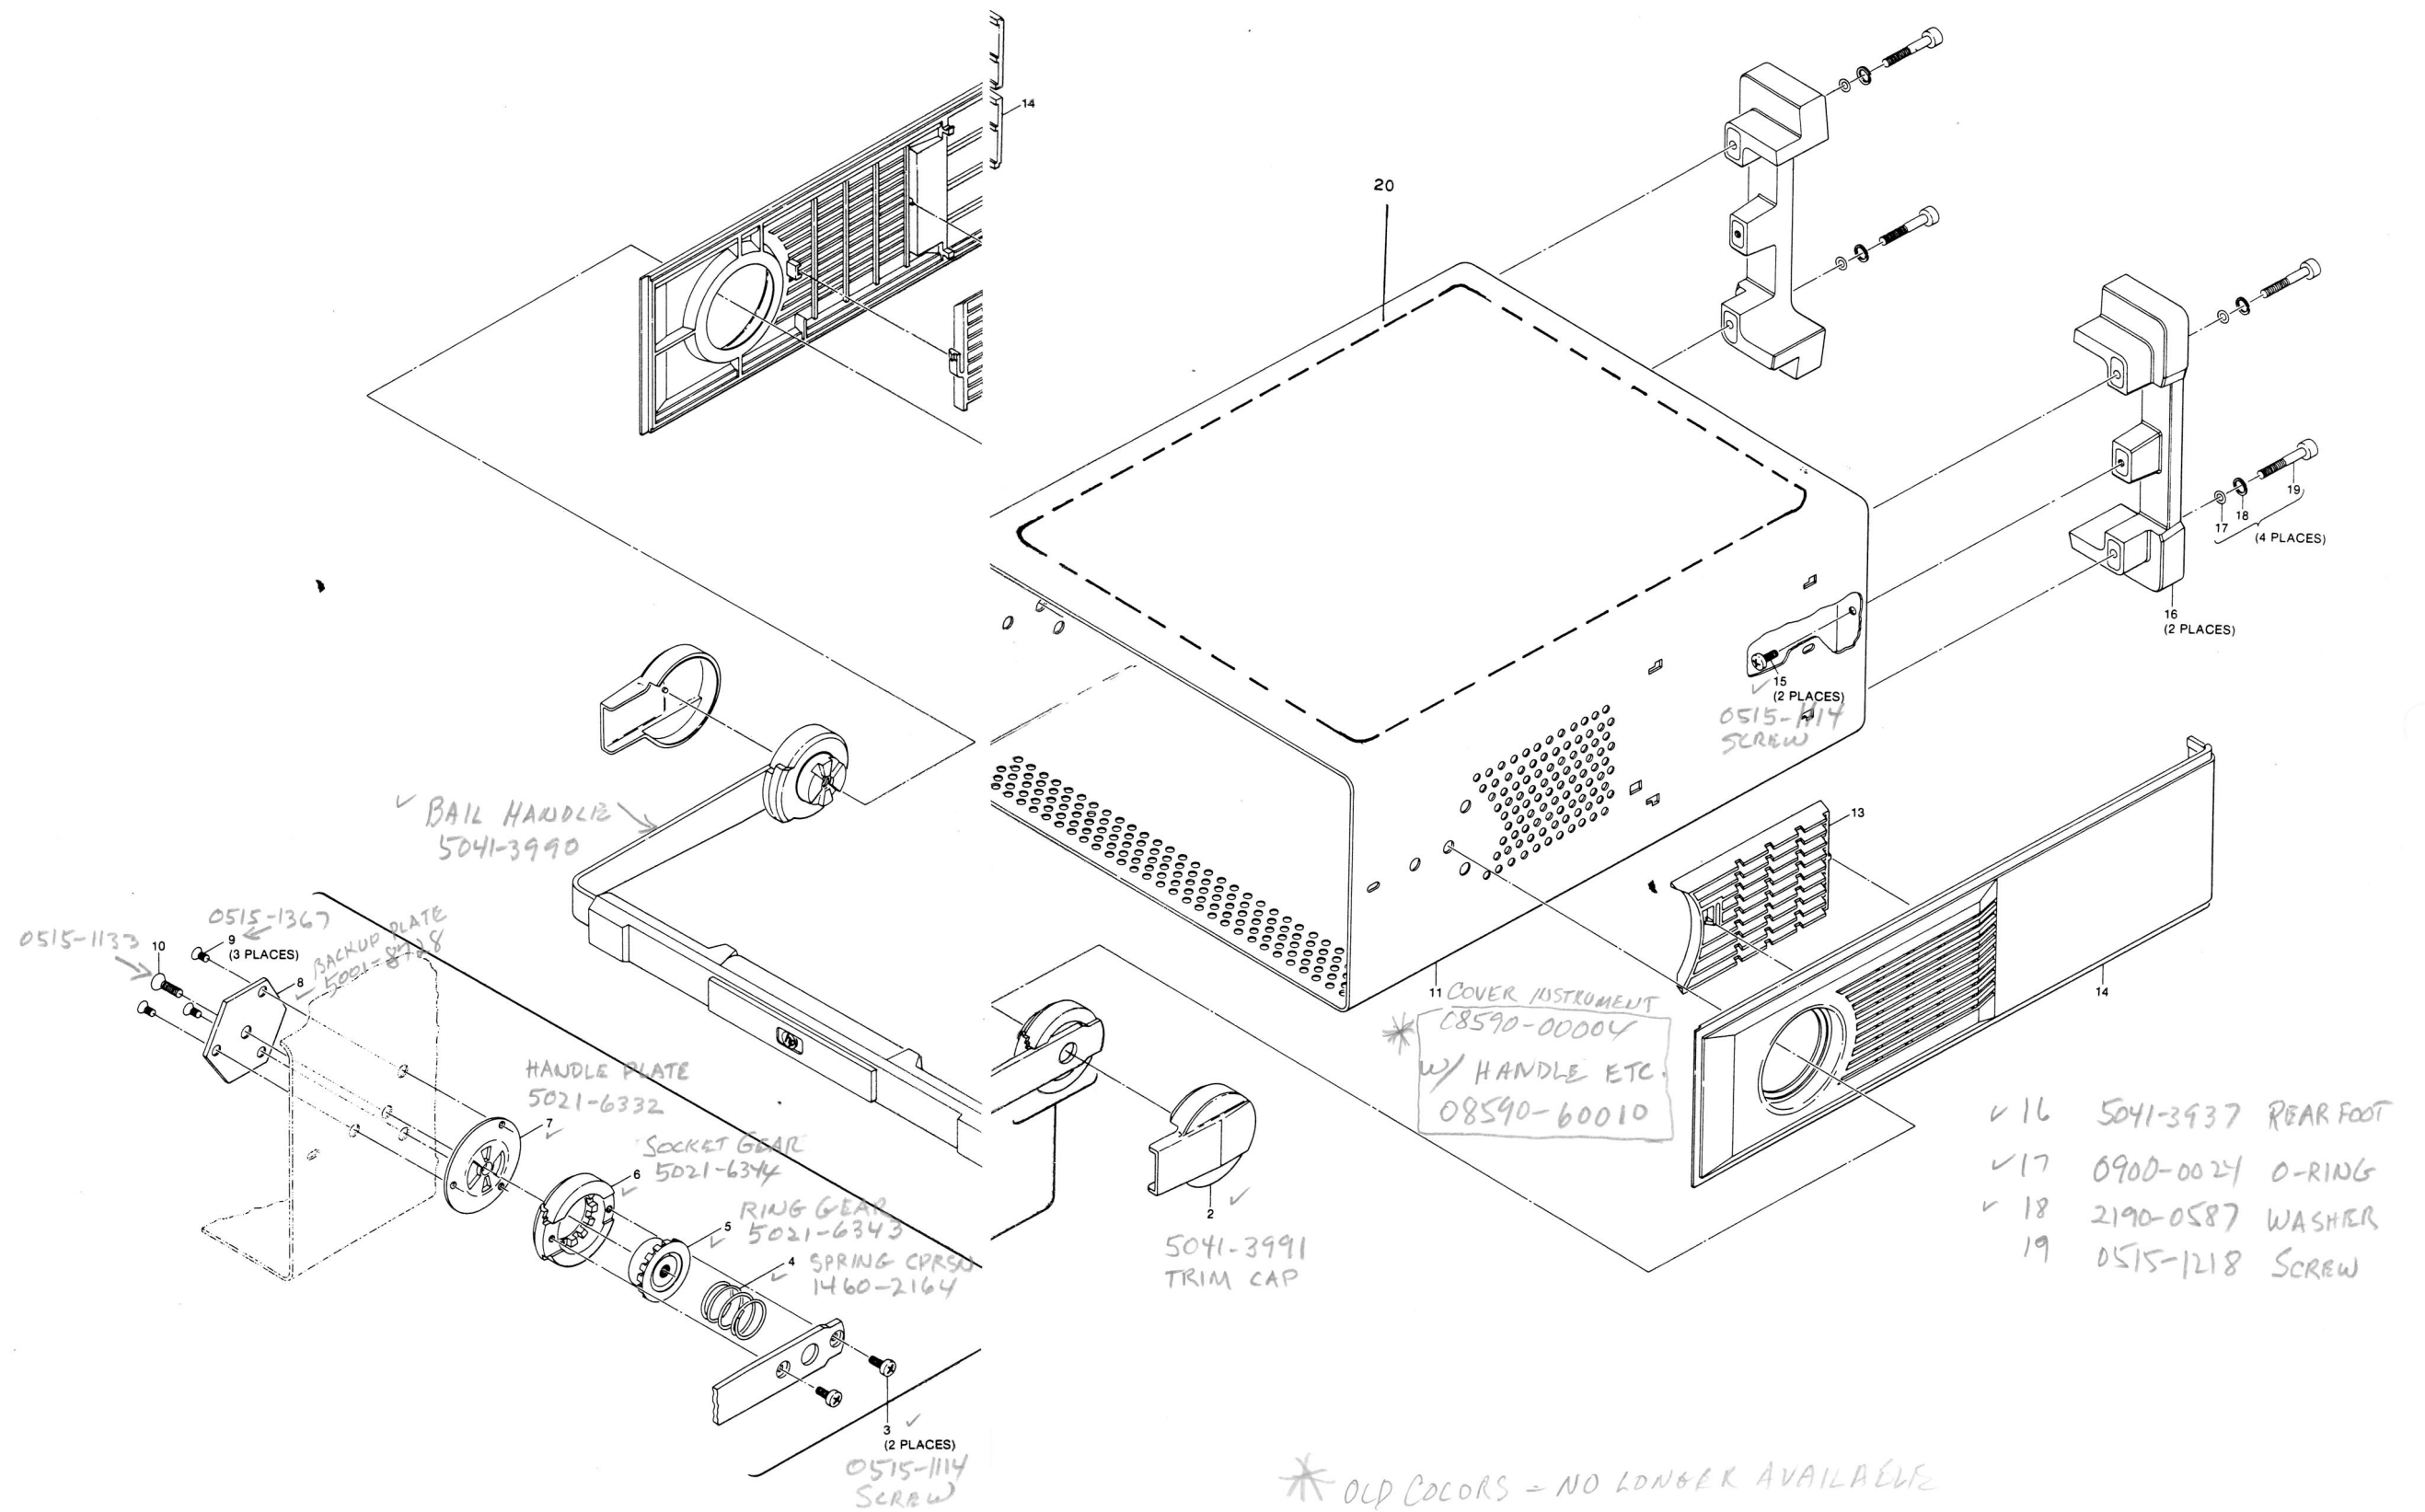

- ✓ 16 5041-3937 REAR FOOT
- ✓ 17 0900-0021 O-RING
- ✓ 18 2190-0587 WASHER
- 19 0515-1218 SCREW

* OLD COLORS - NO LONGER AVAILABLE
 NEW:
 COVER 08590-00041
 COVER ASSY 08590-60181

Figure 2-2 Instrument Cover Assembly Mechanical Parts 2-23

Impact cover kit
5062-4805

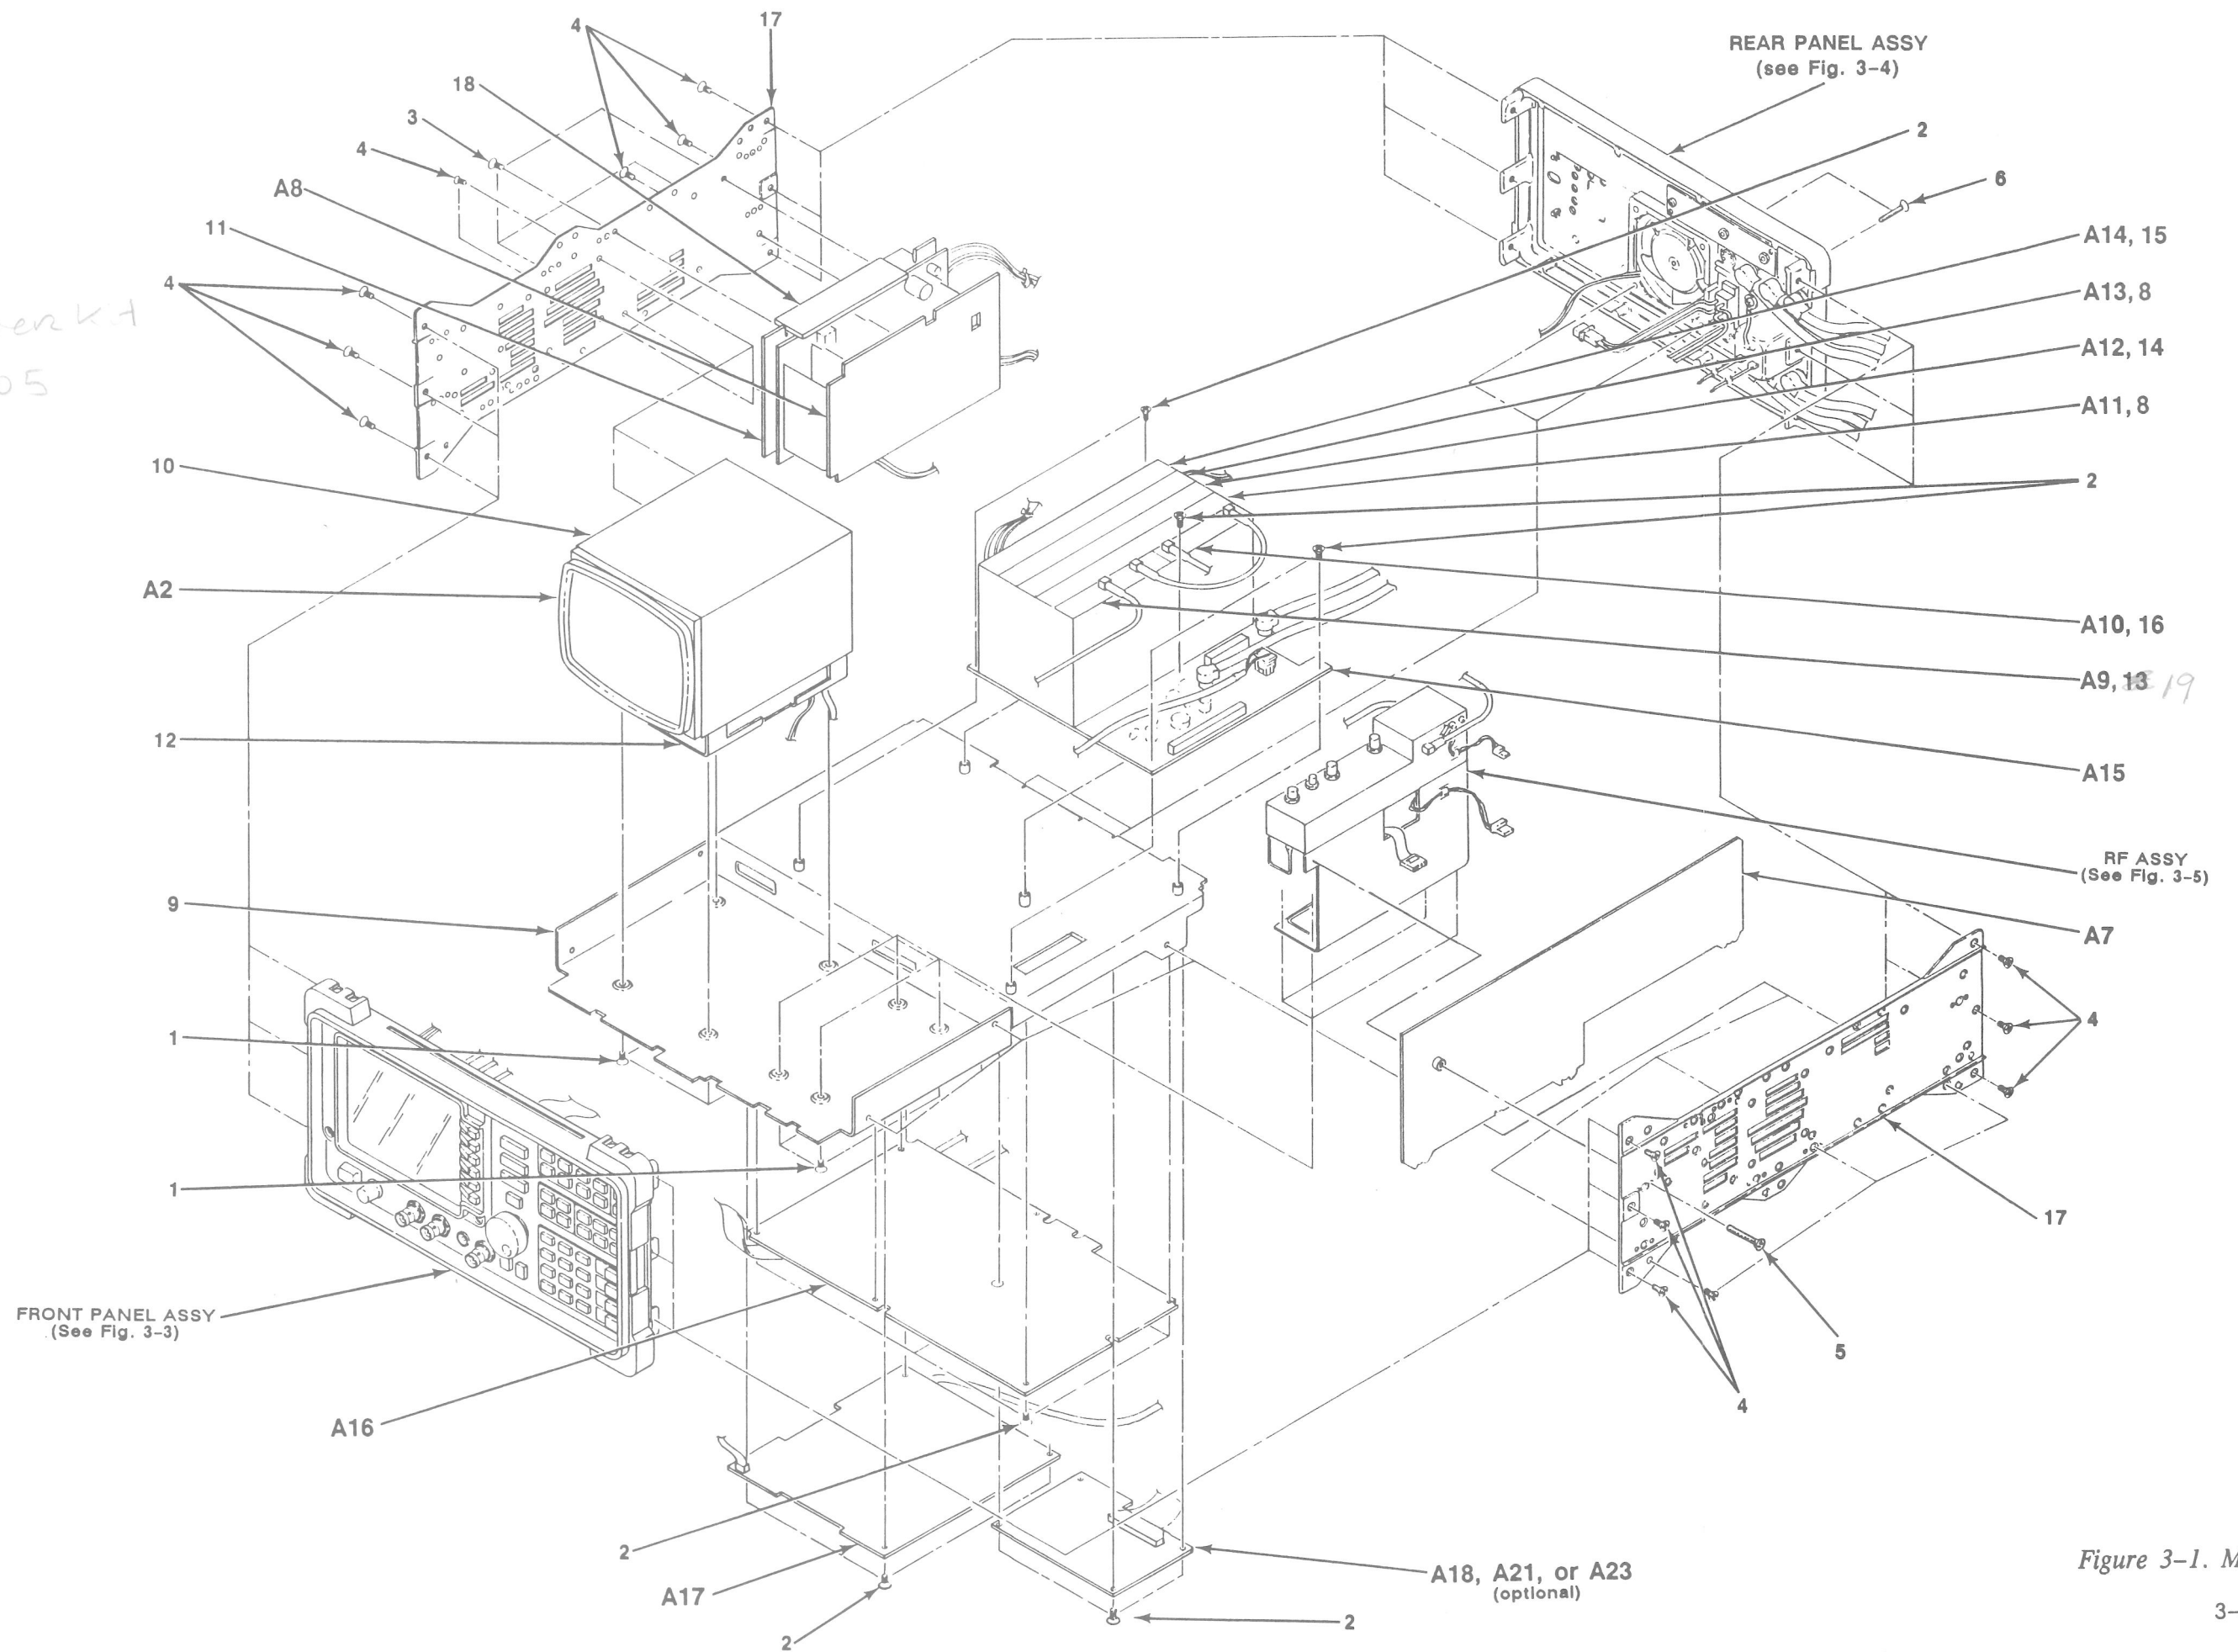


Figure 3-1. Main IPB

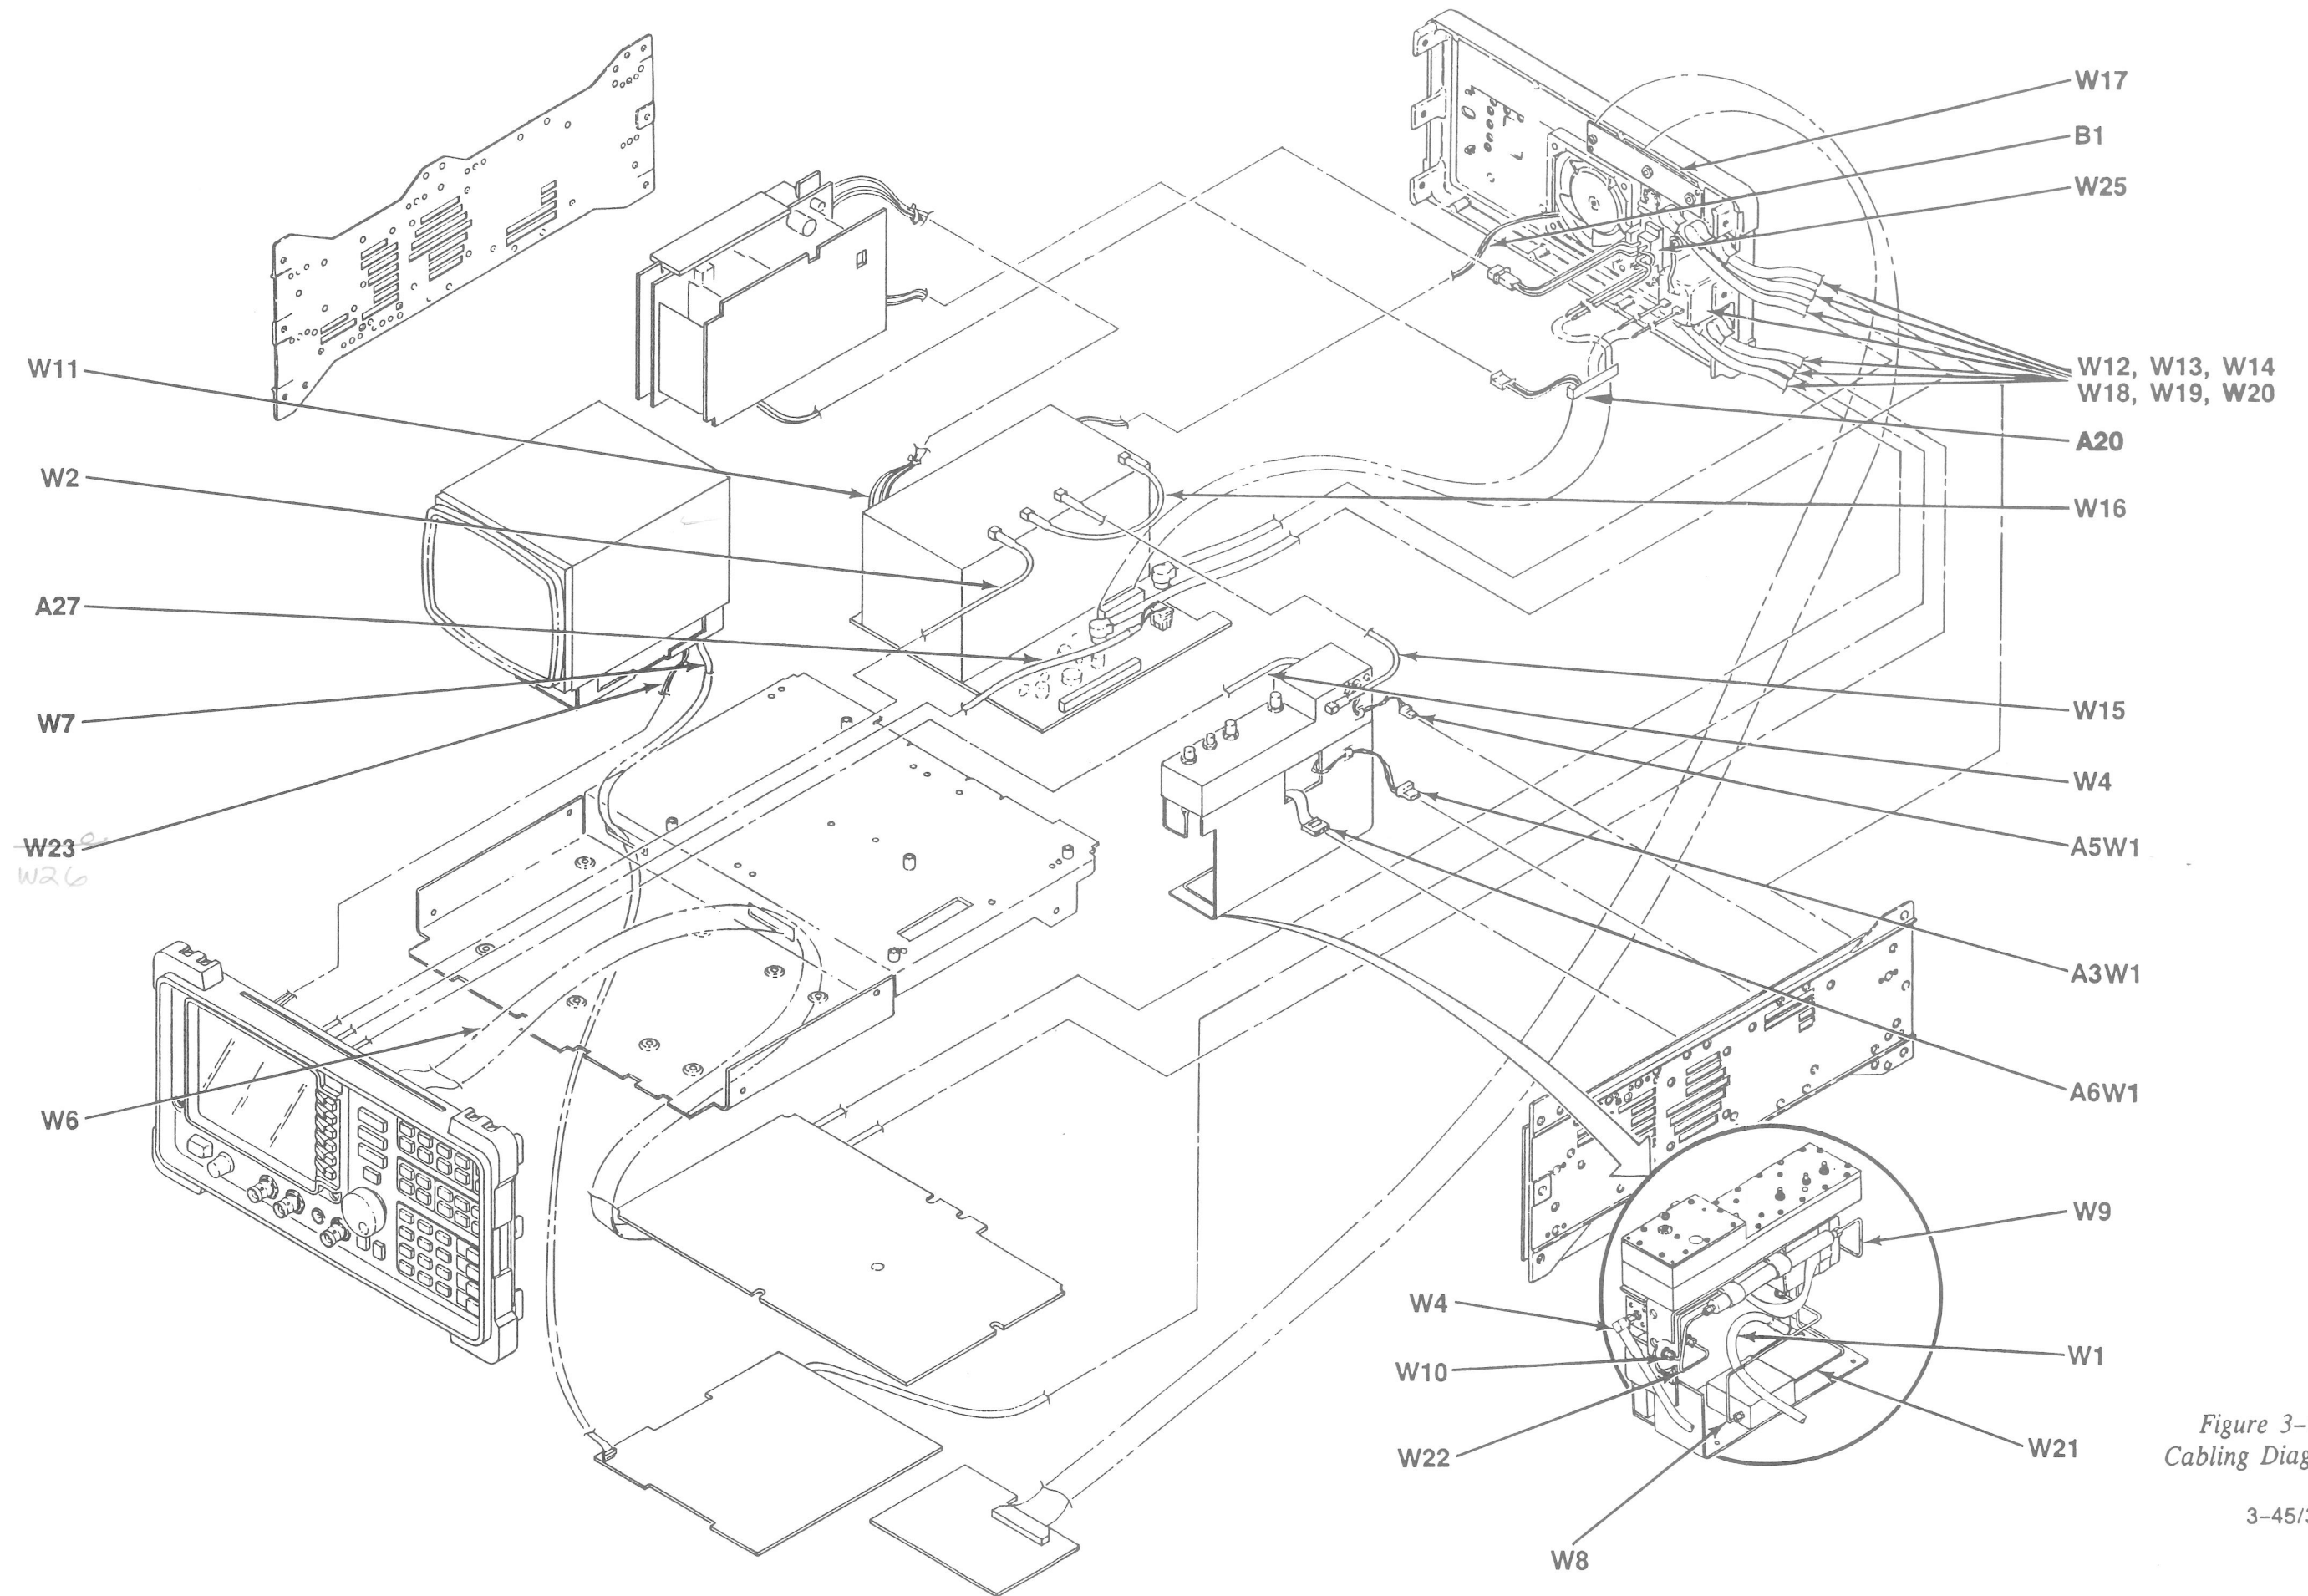


Figure 3-2.
Cabling Diagram

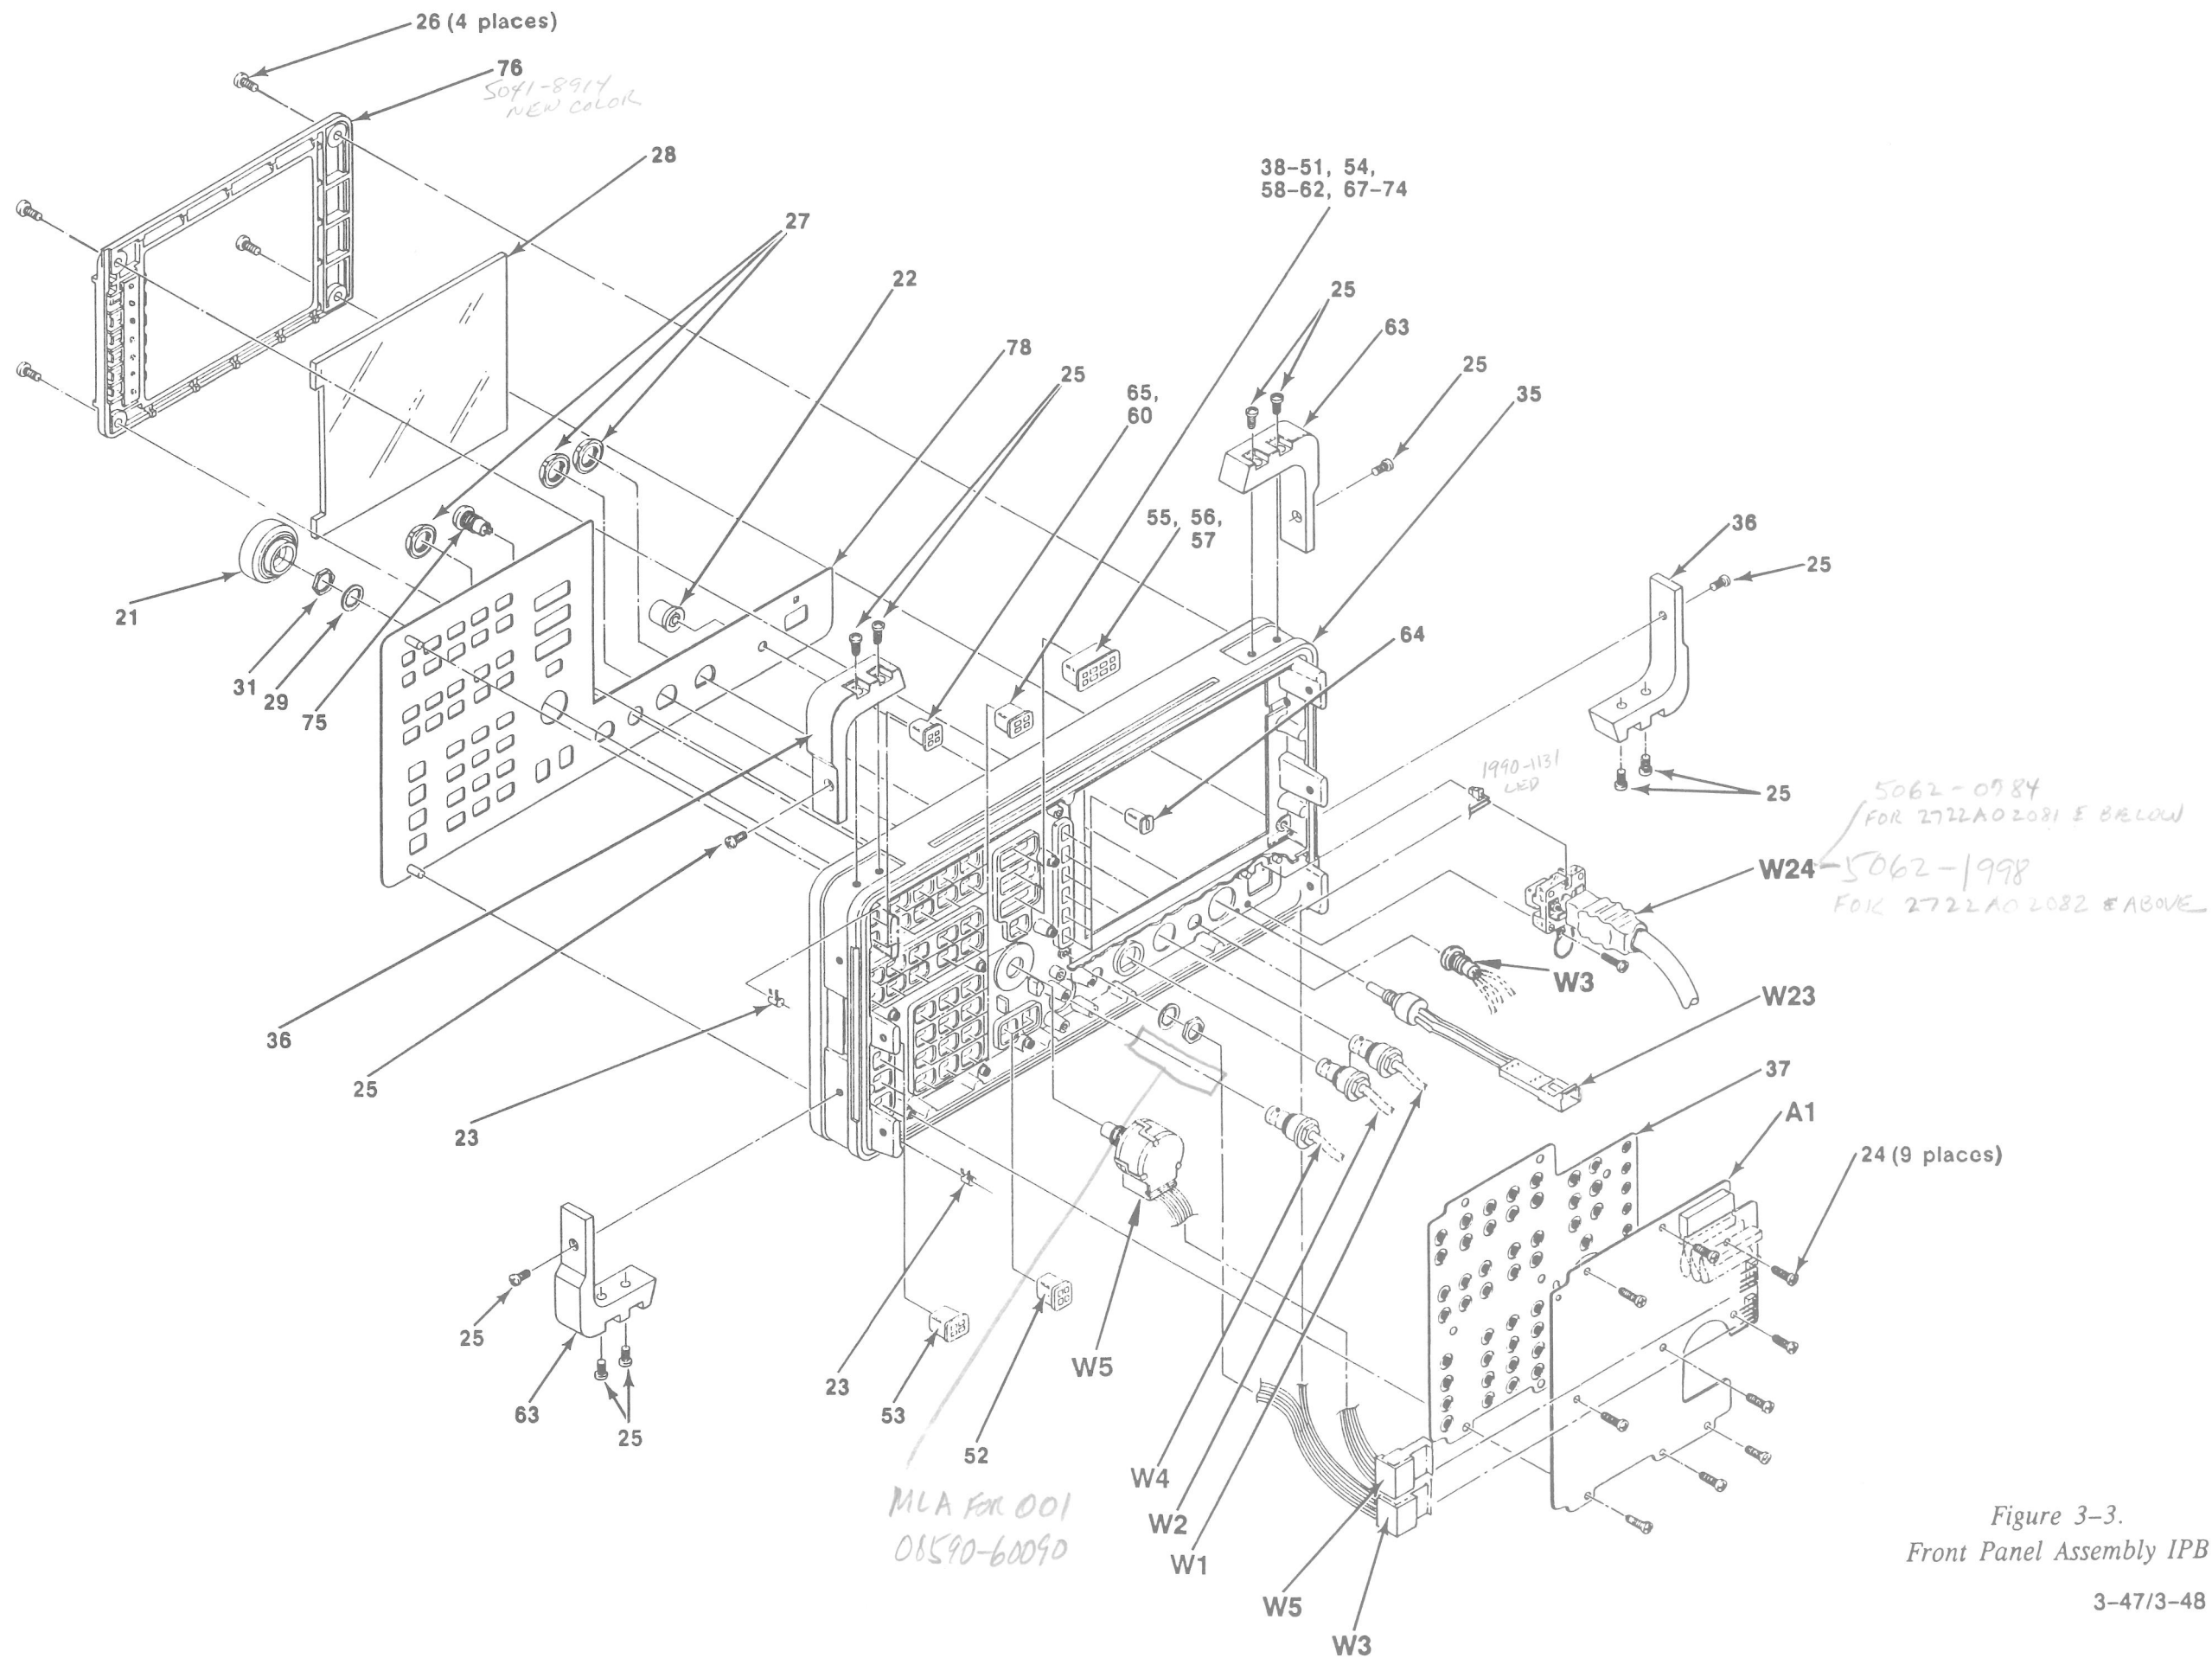


Figure 3-3.
Front Panel Assembly IPB

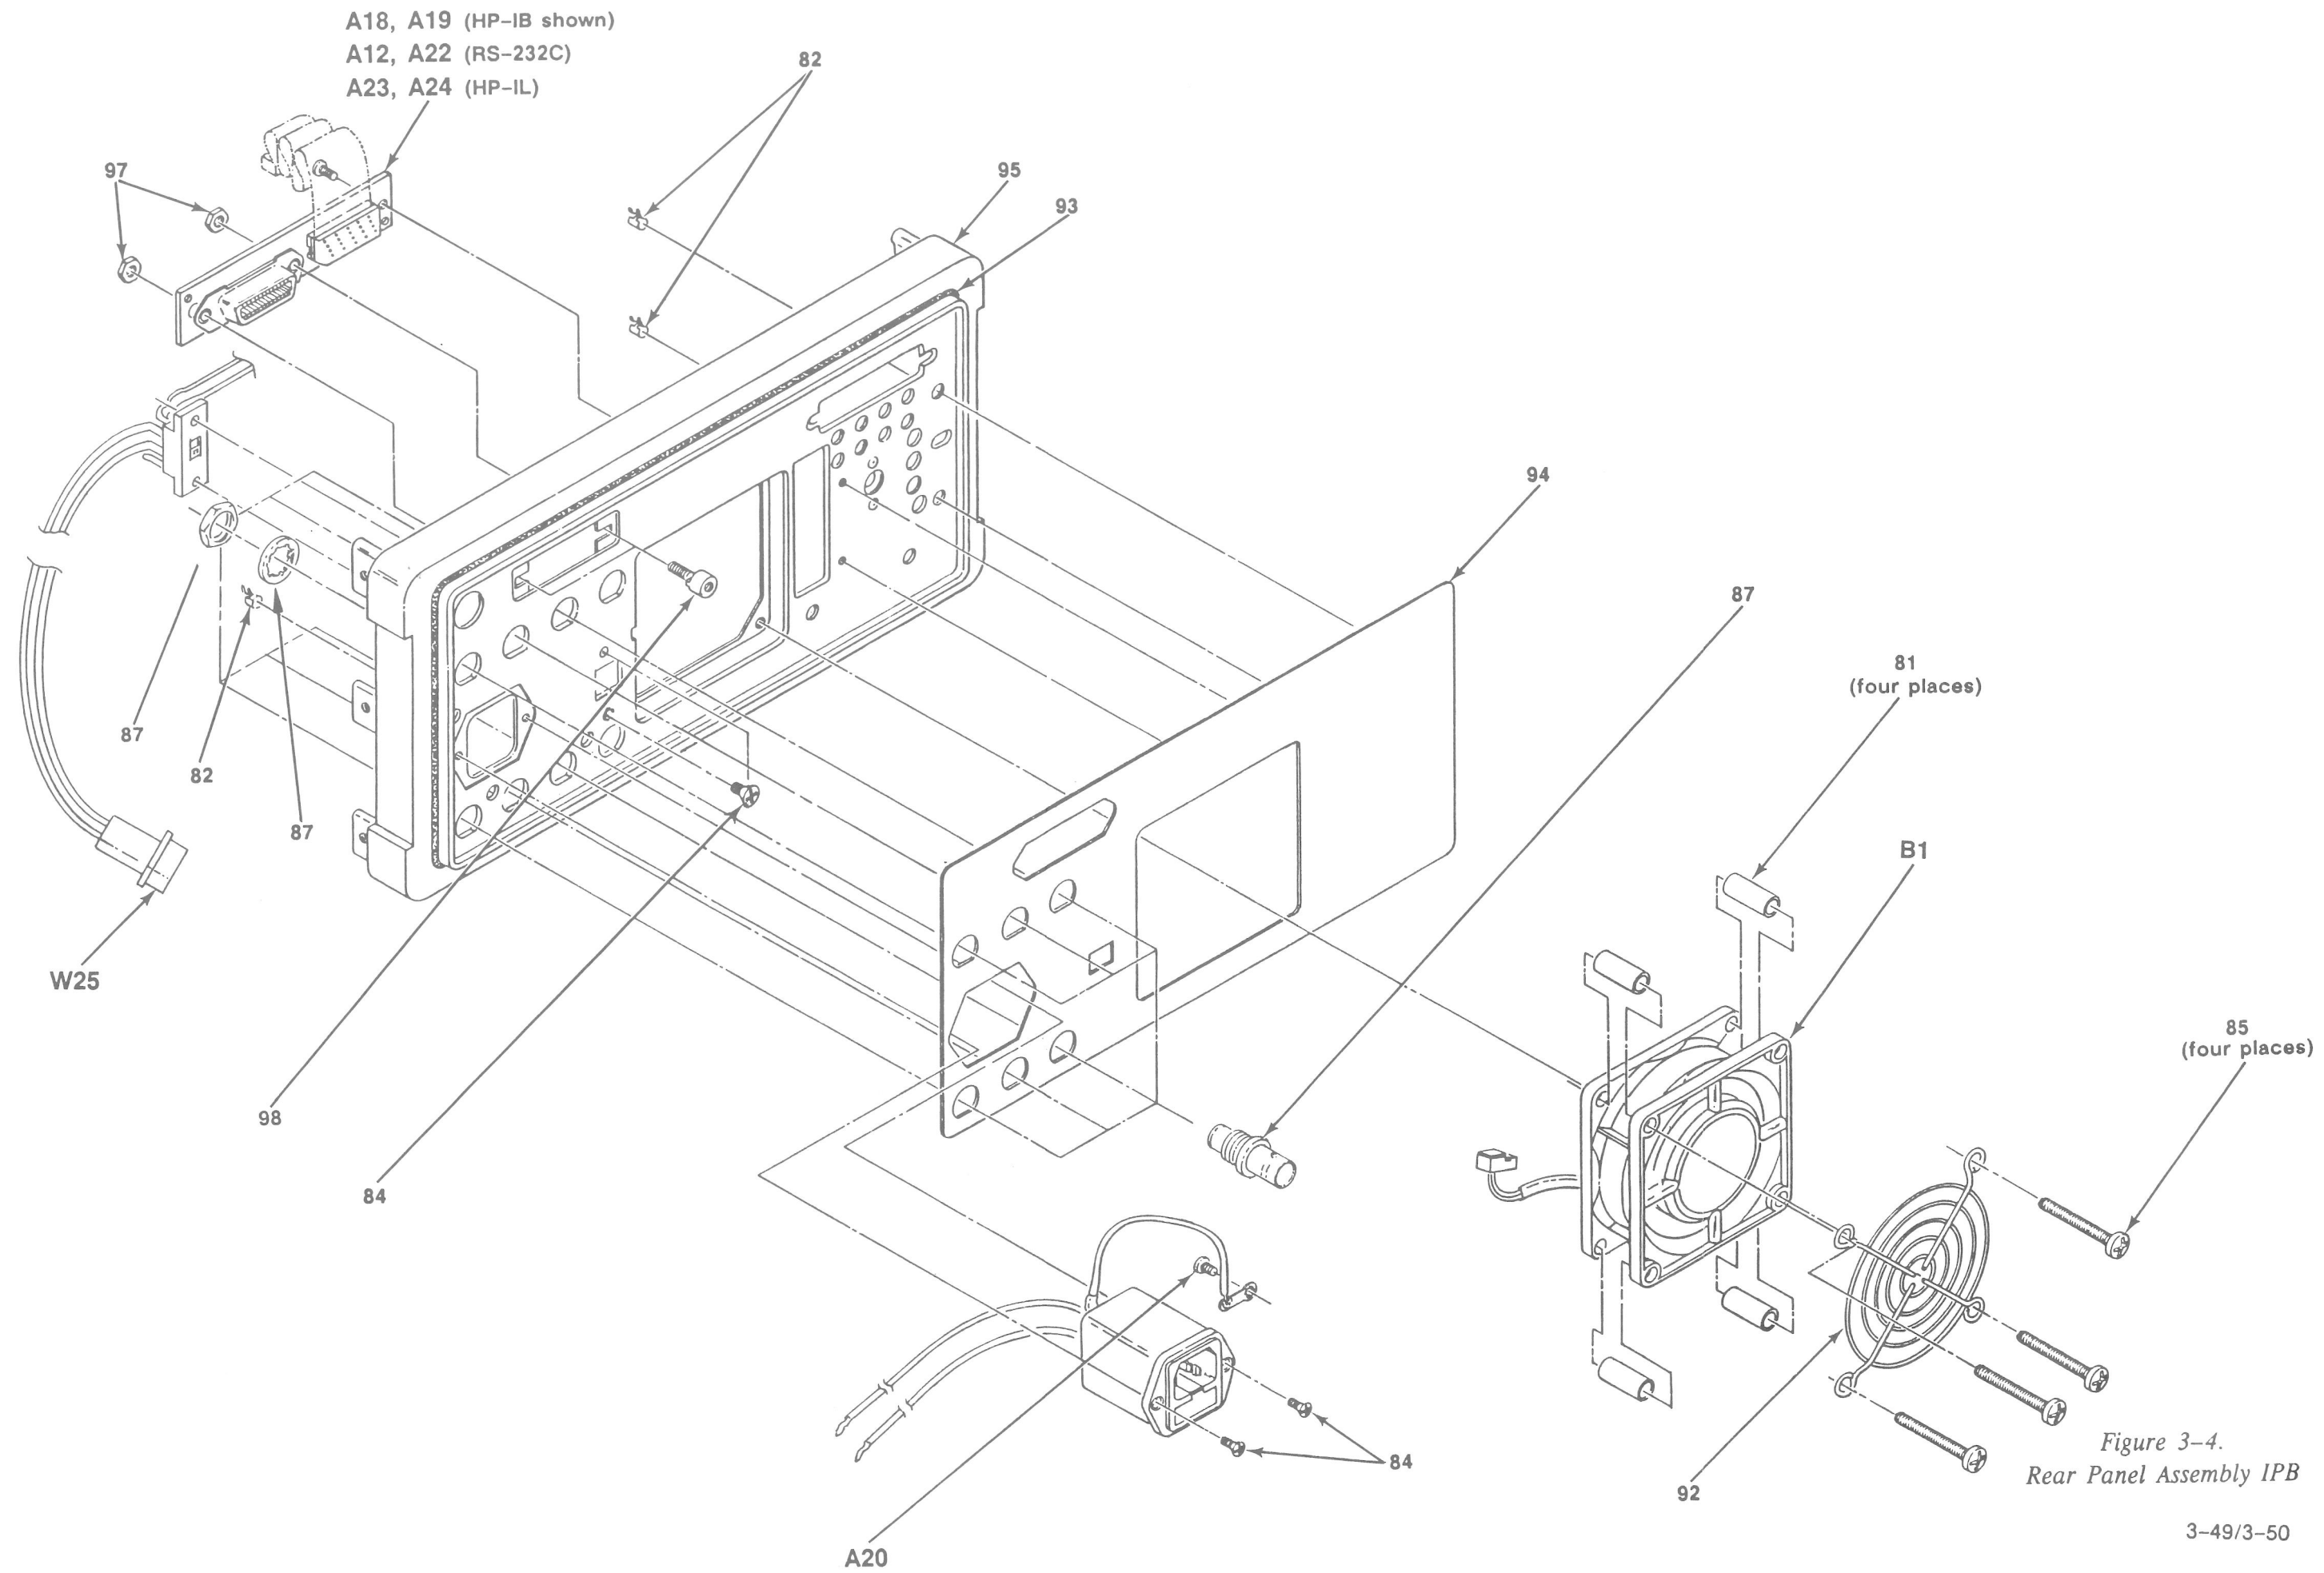


Figure 3-4.
Rear Panel Assembly IPB

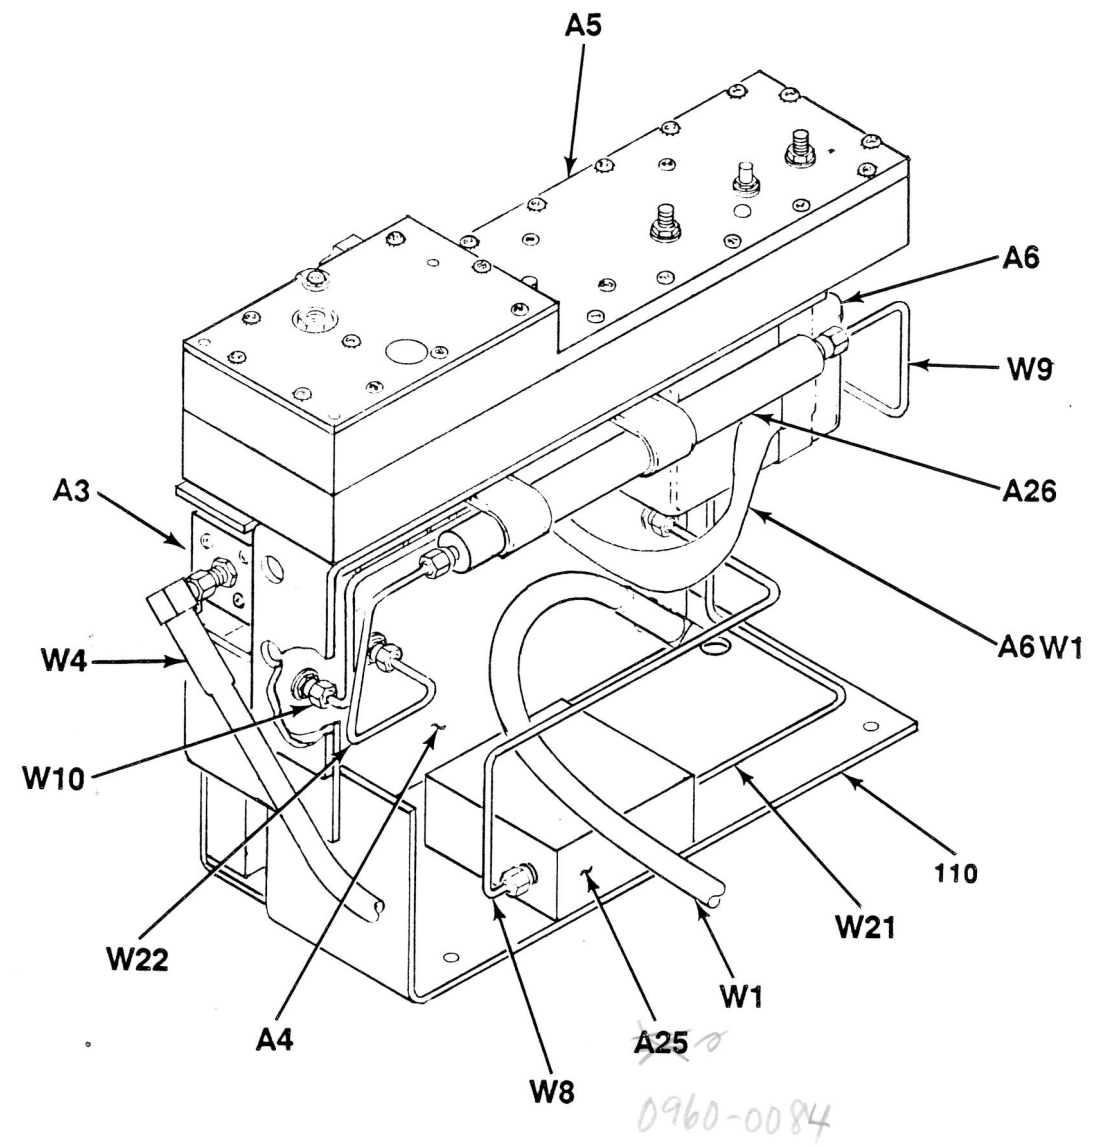


Figure 3-5. RF Section IPB

TROUBLESHOOTING

Introduction

This chapter presents general procedures and troubleshooting hints to help you relate symptoms of analyzer problems to specific assemblies. Once you have identified a suspect assembly, you can find more information about that assembly in Chapter 5, Assembly Descriptions.

This chapter contains the following major sections:

- **Understanding Error Messages** presents information about the diagnostic messages that appear on the CRT screen and suggests assemblies to suspect.
- **Troubleshooting From the Front Panel** describes checks you can perform from the front panel. In some cases, these checks require measurements inside the unit to confirm the suspect assembly.
- **Locating RF/IF Problems** guides you through the fault isolation process within the RF/IF section. The block diagram at the end of the chapter is used with these instructions.
- **Troubleshooting a Dead Analyzer** explains the basic things to check when the analyzer is not working at all.
- **Calibration Data Problems** describes a particular kind of problem that can arise if the analyzer calibration constants are destroyed or altered. It also contains procedures for generating and entering new calibration constants. This should be done if the Attenuator Assembly A3 is replaced, or if a repair or adjustment is done that would affect the frequency response of the analyzer.

Test Equipment You'll Need

Table 1-2 lists the recommended test equipment for troubleshooting and repairing the analyzer. Although Hewlett-Packard equipment is recommended, other instruments may be used, provided they meet the critical specifications shown in Table 1-2.

Troubleshooting

Before Working on the Analyzer

Maintenance of the analyzer requires access to its interior. There are four things you must do *before* attempting any troubleshooting, repair, or adjustments inside the analyzer:

1. Remove its dust cover as follows:
 - a. Disconnect the analyzer from ac power. *Remove The 50 Ω load and/or any adapters on the front panel connectors.*
 - b. Carefully place the analyzer on its front panel, using a soft cloth or towel to protect the front panel from damage.
 - c. Unscrew, but do not remove, the four screws attaching the cover to the instrument.
 - d. Pull the cover off to the rear of the analyzer.
2. If the analyzer has been stored in an area where the ambient temperature is less than 0°C, allow the unit to come up to room temperature before proceeding (with no ac power applied).
3. Familiarize yourself with the safety symbols marked on the analyzer and with the general safety instructions and symbol definitions given in the front of this manual.
4. Read the rest of this chapter before you start troubleshooting the analyzer.

WARNING

The analyzer contains potentially hazardous voltages. Refer to the safety symbols provided on the analyzer and the general safety instructions in this manual before operating the unit with the cover removed. Failure to do so can result in severe or fatal injury.

Replacement Assemblies

The following assemblies are not component repairable. They are replaced as an assembly. Detailed assembly descriptions and component-level troubleshooting information for these assemblies are not included in Chapter 5, Assembly Descriptions.

- Display Module A2
- Attenuator Assembly A3
- First Local Oscillator A6
- Power Supply Module A8
- Connector Assemblies A19, A22, and A24 (for optional HP-IB, HP-IL, and RS-232 I/O ports)
- Line Module A20

- Fan Assembly B1
- Line Switch Assembly S1

Replacement assemblies for the above can be ordered from your nearest Hewlett-Packard office.

All other analyzer assemblies are component repairable. Replacement component parts or assemblies can be ordered from your nearest Hewlett-Packard support facility. Chapter 5, Assembly Descriptions, gives recommended troubleshooting times for each assembly. These times are given to assist you in making cost-effective repair-or-replace decisions.

After You Have Repaired the Analyzer

After you replace or repair any assemblies in the RF or IF sections of the analyzer, execute the related tests or adjustments to verify the analyzer performs to its specifications. If the analyzer must be recalibrated, perform all adjustment procedures listed in Table 2-1.

After you test the analyzer, do the analyzer (firmware) calibration procedure given in the HP 8590A Operating Manual. This ensures maximum measurement accuracy when the unit is placed into service.

Understanding Error Messages

The instrument controller executes diagnostic routines during power-up of the analyzer or when the **PRESET** key is pressed. Table 4-1 shows error message definitions and suspect assemblies for the error messages. Unless directed otherwise in the table, refer to Chapter 5, Assembly Descriptions, to troubleshoot the suspect assemblies.

Table 4-1. Spectrum Analyzer Hardware Error Message Definitions

| Error Message | Meaning | Suspect Assemblies |
|------------------------|--|--|
| ADC-GND FAIL | A failure occurred in the analog-to-digital converter. | Processor A/D A16 $\pm 1.5V$ ✓ |
| ADC-TIME FAIL | A failure occurred in the analog-to-digital converter. | Processor A/D A16 $\pm 5V$ ✓ |
| ADC-2v FAIL | A failure occurred in the analog-to-digital converter. | Processor A/D A16 $-12.6V, \pm 1.5V$ |
| CAL: FM SPAN SENS FAIL | The analyzer could not set up span sensitivity of the YIG FM coil. | Analog Interface A7 FM Coil Driver |
| CAL: LINEAR DET FAIL | The linear calibration routine failed. | Attenuator calibration constant overwritten or missing. See Calibration Data Problems. or Step Gain A12 or Log Gain A14. See RF/IF Troubleshooting. |
| CAL: RES BW AMPL FAIL | Relative insertion loss resolution bandwidth is incorrect | See RF/IF Troubleshooting. |
| CAL: SPAN SENS FAIL | The calibration YIG main coil sensitivity routine failed | Analog Interface A7 Main Coil Driver See Table 4-2. |
| FAIL: _____ | A specific hardware error was discovered during the analyzer's power-up. The 4-digit by 10-digit code indicates the error source (see Table 4-2) | |

The following table and example explain how to interpret the failure codes announced on the CRT and the indications of the LEDs on the processor board A16. The failure codes on the CRT refer to errors found by the processor during the turn-on or preset self-test routines. Failure codes consist of two parts: a 4-digit segment and a 10-digit segment. For example:

Bad Front to rear on A16 Normal is 0300
 Preset 1300

FAIL: 1330 0000000000
 4-digit segment 10-digit segment

The 4-digit segment indicates the component/circuit that failed as shown in Table 4-2.

Table 4-2. Failure Codes for 4-Digit Segment

| Digits From Example | Digit Value | LEDs on A16(3) | Circuit Tested | Reference Designator | Notes |
|--------------------------|-------------|----------------|-----------------|----------------------|------------|
| Most significant digit: | | | | | |
| 1 | 8 | 15 | Video Ram | U9, U12, U15, U18 | (1) |
| | 4 | 14 | I/O Bus Address | | (1) |
| | 2 | 13 | Processor | U12 | |
| | 1 | 12 | 68230 | U57 | |
| 3 | 8 | 11 | I/O Bus | Odd byte (to A7) | (2) |
| | 4 | 10 | I/O Bus | Even byte (to A7) ← | |
| | 2 | 9 | Ram Odd FF4000 | Not used | |
| | 1 | 8 | Ram Even FF4000 | Not used | |
| 3 | 8 | 7 | RAM Odd FF8000 | U5 | |
| | 4 | 6 | RAM Even FF8000 | U22 | |
| | 2 | 5 | EEPROM Odd | U4 ✓ | |
| | 1 | 4 | EEPROM Even | U21 | |
| Least significant digit: | | | | | |
| 0 | 8 | 3 | ROM Odd B LSB | U6 | } FIRMWARE |
| | 4 | 2 | ROM Even B MSB | U23 | |
| | 2 | 1 | ROM Odd A LSB | U7 | |
| | 1 | 0 | ROM Even A MSB | U24 | |


Notes:

- (1) See 10-digit segment for more information.
- (2) These LEDs are on during normal operation.
- (3) A16 has a row of test LEDs. These LEDs indicate the same error as the CRT Fail code.

F = 15
 E = 14
 D = 13
 C = 12
 B = 11
 A = 10

Troubleshooting

The 10-digit segment gives the I/O address, the data bus or the video board RAM. It is divided as shown below:

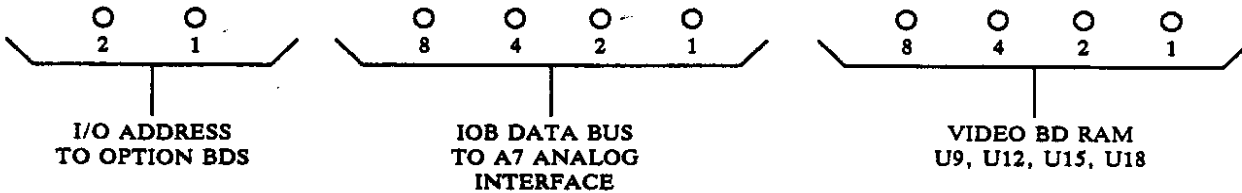

Therefore, FAIL: 1330 0000000000 would be interpreted as follows:

- 1 (MSD) is LED12, for the 68230 IC.
- 3 is RAM at FF4000. This is the normal code.
- 3 is EEPROM checksum failure.
- 0 (LSD) means the ROMs are okay (no failure).

The 10-digit segment is all zeros, since there was no failure affecting the I/O address or data bus or the video board RAM.

FAIL: ~~1310~~, ~~1320~~, or 1330 0000000000 is a fairly common error, usually indicating some bad data was picked up by the EEPROM. Normal operation (calibrated) can be restored by pressing **[SAVE] [1]**, then rerunning the CAL FREQ and CAL AMPTD routines in firmware. Remember to press CAL STORE after running these two calibration routines.

*1310 and 1320 are indicative of a EEPROM failure
replace the corresponding EEPROM*

Troubleshooting From the Front Panel



IMMEDIATELY unplug the analyzer from ac power mains if the unit shows any of the following fault symptoms:

- a. **Smoke and/or audible noise from inside the unit.**
- b. **No response of any kind when unit is plugged into ac power mains and turned on.**
- c. **The unit's ac power fuse blows, or a circuit breaker/fuse on the ac mains blows.**

These potentially serious faults must be rectified before proceeding. Refer to Troubleshooting a Dead Analyzer.

The following steps can be done only if your analyzer has none of the conditions indicated in the note above. Once a suspect assembly has been identified, refer to Chapter 5, Assembly Descriptions, unless directed otherwise.

1. Plug the analyzer into the ac power line and press the **LINE** switch to **ON**. If the analyzer is operating normally, the fan will operate, and the **CRT** display will show a grid and trace with notations and soft key labels.
2. If the fan does not operate, check that all of the green **LEDs** on the **IF Motherboard A15** are lit. If none is lit, the power supply on **A15** may be defective. If the **LED** for the **+15-Vdc** supply is lit, the fan itself probably is defective.
3. If the display does not light at all with the **INTENSITY** control fully clockwise, or the monitor's display is distorted, check the **+12V** supply to the **Display Module A2** at **A17J2** pin 4 on the **Video Board A17**.

If the **+12V** supply is low, verify that the analyzer is:

1. a serial number above 500, or
2. a serial number below 500 that has not had the new power supply installed in it, or
3. a serial number below 500 that has had the new power supply installed as well as the accompanying change to the **IF Motherboard** (see **IF Motherboard Assembly Descriptions**, page 5-93).

If your instrument meets any of the above qualifications, check for a loading problem with the +12V supply. If the +12V supply is good, use an oscilloscope to check the following:

1. 19.2-kHz signal (HSYNC) at A17J2 pin 5,
2. 60-Hz signal (VSYNC) at A17J2 pin 2, and
3. presence of a signal (VIDEO) at A17J2 pin 3 (GND is A17J2 pin 1).

If these signals are wrong or missing, suspect the Video Board (A17).

If these signals are good, connect the CAL OUTPUT to the RF INPUT of the analyzer. Connect the Y input of an oscilloscope to AUX VIDEO OUTPUT and the X input to SWEEP OUTPUT. If you obtain a display that looks like Figure 4-1a without the annotation, the Display Module is defective.

4. If an error message appears on the display, see the previous section, "Understanding Error Messages".
5. If indications are normal, connect the CAL OUTPUT (299.9 MHz) signal on the front panel to the RF INPUT connector. Press **PRESET**. The CRT should look similar to Figure 4-1.

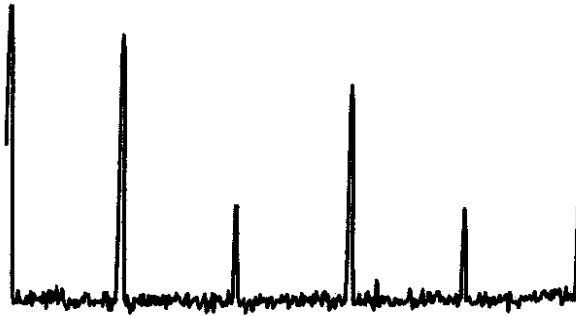


Figure 4-1a. Normal Oscilloscope or CRT Display

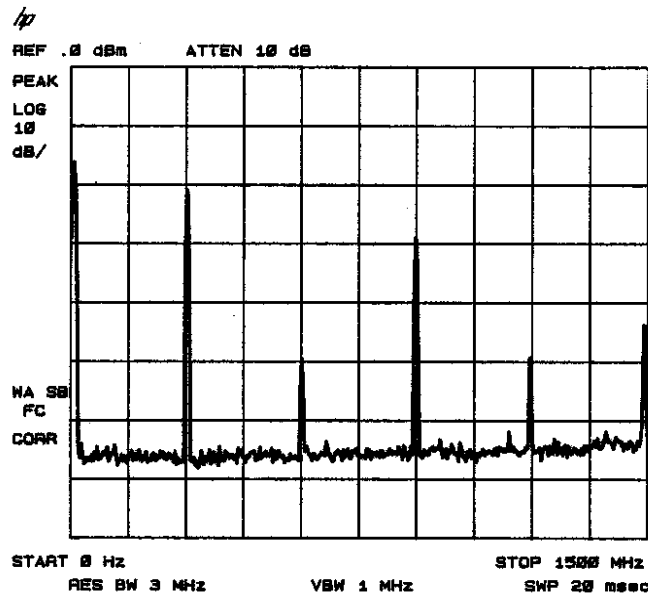


Figure 4-1b. CAL Data Display Sample
Typical Display with Cal signal applied

6. If no signal trace is displayed or if the display is incorrect, check the CAL OUTPUT signal by connecting a frequency counter to the front panel connector. If there is no 299.9-MHz signal, the local oscillator (LO) in the Third Converter A9, may be defective.
7. If the selected center frequency or span is incorrect, refer to the Troubleshooting Hints for the Analog Interface assembly in Chapter 5. Check the 1st LO OUTPUT on the front panel using a power meter. The signal should be +14 dBm ± 2 dB.

8. With the CAL OUTPUT signal connected to the RF INPUT on the front panel, select reference levels from 0 dBm to -50 dBm in 10 dB steps, for example:

AMPLITUDE [LOG dB/DIV] 1 0 -dB

The displayed CAL signal trace amplitude should vary in 10 dB steps per the selected reference levels.

9. If the readings from Step 8 are abnormal, put the Analog Interface A7 on an extender board. Check the signals IFG 1 through 6 at the Analog Interface connector A7J1, pins 24, 23, and 44. Compare the states with the reference level control states shown in Table 4-3. If the states are incorrect, suspect the Analog Interface. If the states are correct, suspect the Step Gain Amplifier A12.

Table 4-3. Reference Level Control States

| Reference Level Settings with Input Attenuation | | | Log Gain | | | Step Gain | | |
|--|--------------------|-----------------|----------|----|----|-----------|----|--------|
| | | | 20 | 10 | 10 | 20 | 20 | 10 dB |
| Total IF Gain | Reference Level | Mode Log/Lin | 6 | 5 | 4 | 3 | 2 | 1 IFG |
| | | | 13 | 12 | 11 | 10 | 9 | 8 IOB |
| 0 | 0 | Log & Lin | 0 | 0 | 0 | 0 | 0 | 0 |
| 10 | -10 | Log & Lin | 0 | 0 | 0 | 0 | 0 | 1 |
| 20 | -20 | Log & Lin | 0 | 0 | 0 | 0 | 1 | 0 +8.5 |
| 30 | -30 | Log & Lin | 0 | 0 | 0 | 0 | 1 | 1 0 |
| 40 | -40 | Log & Lin | 0 | 0 | 0 | 1 | 1 | 0 |
| 50 | -50 | Log & Lin | 0 | 0 | 0 | 1 | 1 | 1 |
| 60 | -60 | Lin | 0 | 0 | 1 | 1 | 1 | 1 |
| 70 | -70 | Lin | 0 | 1 | 1 | 1 | 1 | 1 |
| 80 | -80 | Lin | 1 | 0 | 1 | 1 | 1 | 1 |
| 90 | -90 | Lin | 1 | 1 | 1 | 1 | 1 | 1 |

47 48 50 44 23 24 PIN

10. Press:

PEAK SEARCH [NEXT RIGHT]

SIGNAL TRACK

SPAN 100 **MHz**

AMPLITUDE [ATTEN] 0 **dB**

~ +10.8 0
~ -2.8 1

Select from 0 to -60 dBm in 10 dB steps using the reference level up-arrow key. The attenuator should be heard clicking and the signal peak should drop in 10 dB steps. This exercises the attenuator through all its steps.

Troubleshooting

11. If indications from Step 10 are abnormal, check these pins on connector A7J4 of the Analog Interface:
- Pin 2 10 dB pad
 - Pin 3 20 dB pad
 - Pin 4 30 dB attenuator pad

When selected, the line should have an inductive spike toward ground. If the signals are correct, the attenuator probably is defective; otherwise suspect the Analog Interface.

12. Determine if the analyzer has any of the I/O options installed: HP-IB (A18), HP-IL (A23), or RS-232 (A21). If you suspect a failure in the I/O circuits, follow these steps:
- a. Connect a suitable printer or plotter to the interface connector.
 - b. Ready the printer/plotter for operation. Set addresses, baud rate, etc.
 - c. Press the **[PRESET]** key.
 - d. After the preset operation has completed, tune the analyzer to the 299.9 MHz CAL OUTPUT signal using a resolution bandwidth of 1 MHz.
 - e. Press the COPY **[FRNT]** or COPY **[PLOT]** key, as applicable.

The currently displayed trace should be the output to the printer/plotter. If this is not the case, suspect the I/O board as being defective.

NOTE: Disconnect any controller on the HP-IB, HP-IL, or RS-232 bus before printing.

Locating RF/IF Problems

This section provides information for assembly-level fault isolation. Once a suspect assembly has been identified, refer to the appropriate section of Chapter 5, Assembly Descriptions, unless directed otherwise.

The information on the Troubleshooting Block Diagram, Figure 4-4 (located at the back of this chapter) forms the basis of fault isolation. A power meter and power sensor, or another spectrum analyzer (if available), is needed to measure the test points shown. Analyzer settings for the measurements are the **[PRESET]** conditions with CAL connected to the RF input.

The following troubleshooting hints should be considered:

1. To determine whether the fault is in the RF section or IF section, press **[PRESET]** and check for a ≈ -13 dBm, 321.3 MHz IF signal at A9J1 of the ~~Second Converter~~, A9. If this signal is present, the RF section is probably okay. *Third*
2. If the fault is in the IF Section, run the calibration amplitude and frequency tests to help determine whether the fault is in the Bandwidth Filter boards A11 and A13, the Step Gain board A12, or the Log Amplifier board A14. Press:
[CAL AMPTD]
[CAL FREQ]

If these tests generate error messages, the messages are explained in Understanding Error Messages or the Error Messages Appendix of the accompanying Installation Manual. Visually monitor these tests to determine where they fail.

To check an individual BW setting, press:


[TRACE A] [VIEW A]
[MENU1] [3 db POINTS]

This will read out the bandwidth at the particular setting.


Troubleshooting

3. If you suspect a tuning stability problem, check the output of the First LO A6 for excessive noise on the CRT:
 - a. Tune the LO feedthrough to Center.
 - b. Use the MRK-SIGNAL track.
 - c. Narrow the span to 10 kHz and the resolution bandwidth to 1 kHz.
 - d. Use the slope detection now to check residual FM.

Residual FM is not specified, but is generally ≤ 1 kHz. See Figure 4-2 for the CRT display before going to zero span and at zero span. If excessive noise is present, suspect the -10V voltage reference A7U29 and A7Q2, or a defective YIG oscillator A6. Also refer to troubleshooting notes under the TAB A3, A4, A5, A6.

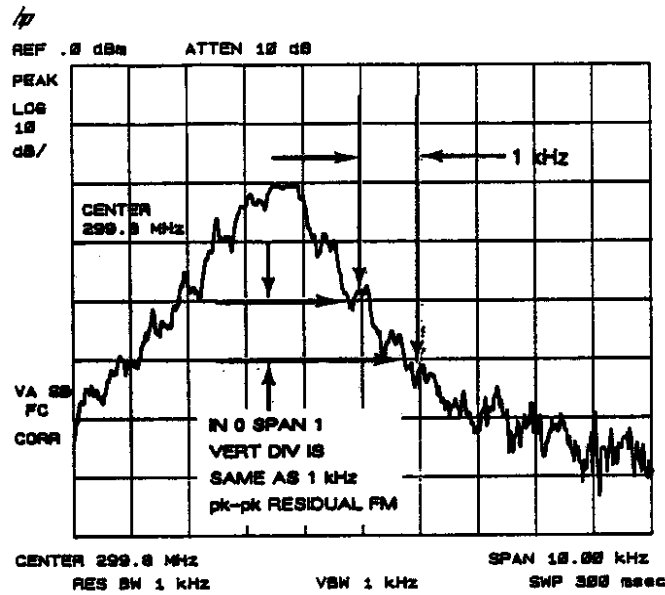

a. For slope detection

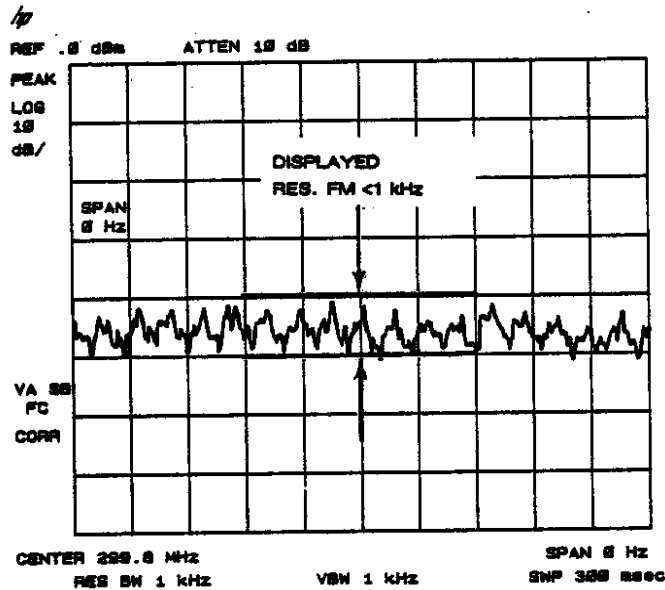

b. Slope detected residual FM at zero span from display a above

Figure 4-2. Displays of Residual FM

A display like that shown in Figure 4-2b means that the YIG oscillator is probably good and the -10V reference on the Analog Interface A7 probably is also good (i.e., <2.5 mV on -10V reference).

Troubleshooting a Dead Analyzer

This problem generally is limited to one of the following causes:

- Voltage selector switch on rear panel set incorrectly for your ac mains.
- Blown ac power fuse.
- Front panel LINE switch bad.
- An internal short in the ac power wiring or dc power supply output.
- Shorted high-voltage dc supply inside the Display Module A2

With ac power disconnected, perform the following checks to isolate the fault:

1. Note the setting of the voltage selector switch on the rear panel. The voltage setting must agree with your ac mains voltage (see the accompanying Installation Manual).
2. Check the ac power fuse using an ohmmeter. If the fuse is blown, use the ohmmeter to check the continuity of the ac wiring at the rear panel ac power connector.


If you find a short in the ac wiring, remove the cover and repair before proceeding. Visually inspect the analyzer for burn marks, melted insulation, and other indications of shorted wiring, and repair as required.

If the continuity check is okay, suspect a fuse failure due to fatigue. Replace the fuse and reapply power. If the fuse blows again, suspect a shorted dc power supply output.

WARNING

If the fuse must be replaced, always ensure that the proper fuse type and rating is used. Failure to do so can cause substantial damage to the unit, and serious fire danger.

3. Remove the cover and check the front panel LINE switch using an ohmmeter. When set to the one position, the switch connects the following test points on the IF Motherboard A15 connector J3:

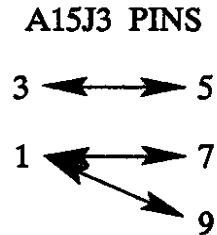

4. Check the dc power supply outputs for continuity using an ohmmeter at the test points given in Table 4-4. Visually check for burn marks, melted insulation, and other indications of problems, and repair as necessary. (The power supply outputs can also be checked with ac power connected by checking to see if the test LEDs on the motherboard are lit.)

If no shorts exist at the dc supply test points, suspect a fault on the IF Motherboard A15.

Table 4-4. DC Power Supply Continuity Test Points on IF Motherboard A15

| Test Point | Pin on J4 | Line Description |
|--------------|--------------------|--------------------------|
| TP1 and ATP2 | 2 and 3 4 and 5 | Digital Ground +5 Vdc |
| TP3 | 6 | +12 Vdc |
| TP4 | 7 | Analog Ground |
| TP5 | 9 | +15 Vdc |
| TP6 | 10 | -15 Vdc |

Calibration Data Problems

Certain analyzer problems are caused if the analyzer user inadvertently deletes the calibration constants. They include correction factors for frequency response flatness and the attenuator 20 dB pad. These constants are stored in EEPROM and are not changed in normal operation. Check the Symptoms section below to see if this could be the problem with your analyzer.

2618A
For analyzers with serial numbers below 2618A00588, a user inadvertently can delete or alter these constants by pressing either softkey [SET 20 dB ERR] or [ENTER FLT ERR]. For analyzers with serial numbers 2628A00588 and above, these keys have a lockout combination that must be entered before the calibration constants are altered. All customer analyzers with firmware dated earlier than 11.12.86 should have the firmware replaced by ordering Firmware Update kit HP Part Number 08590-60074. This kit, a set of four ROMs, should be ordered from CPC as "Warranty Always." The firmware date can be viewed on the CRT when first powering up the analyzer or by turning the analyzer OFF and then ON. The analyzer will not require recalibration after replacing the set of four ROMs.

Symptoms

NOTE

Make sure that your instrument has the appropriate firmware revision. Neglecting to do so may result in instrument failure. See Firmware History, Table 4-5, page 4-24.

The failure symptoms described below are caused by loss of or overwriting of the EEPROM correction constants.

- The display has only a flat line at the top of the display rather than a normal trace when signals are present.
- Spurious signals or random noise spikes appear (they may be only a few dB up to 30 dB in amplitude), occurring singly or in multiples.
- The error message LIN DET FAIL may appear on the active region of the CRT.
- Other numerical messages may appear, such as:

```
SRQ 110  
1330 0000000000  
5300 0000000000
```

If you have one of these symptoms, a quick test to verify that the calibration constants have been altered is to turn off the correction feature:

1. Connect CAL OUTPUT to RF INPUT.
2. Press **[CAL]** [CORRECT/on OFF].
3. The mnemonic CORR should disappear at the lower left side of the CRT, and you should see a normal trace with the CAL signal harmonics present. If you don't see a normal trace, the problem probably is gain-related. Check the first, second and third LO power levels. Substitute an external signal which has a power level verified on a power meter, then confirm that the analyzer gives the correct level. If the level on the analyzer is wrong and all three LOs are at the correct power levels, the first mixer diodes probably have been degraded. Replace the first mixer diodes. Check the CAL DATA display to see if the DAC settings are in the correct ranges (RL-VENR column from near 230-240 at the top to near 3-20 at the low end).

Checking the Calibration Data

Currently stored calibration data for the analyzer can be displayed using the CAL data display function. To access the data, press the following keys:

[CAL] [MORE]
[DISPLAY CAL DATA]

Figure 4-3 shows a sample CAL data display with CAL output connected to RF Input.

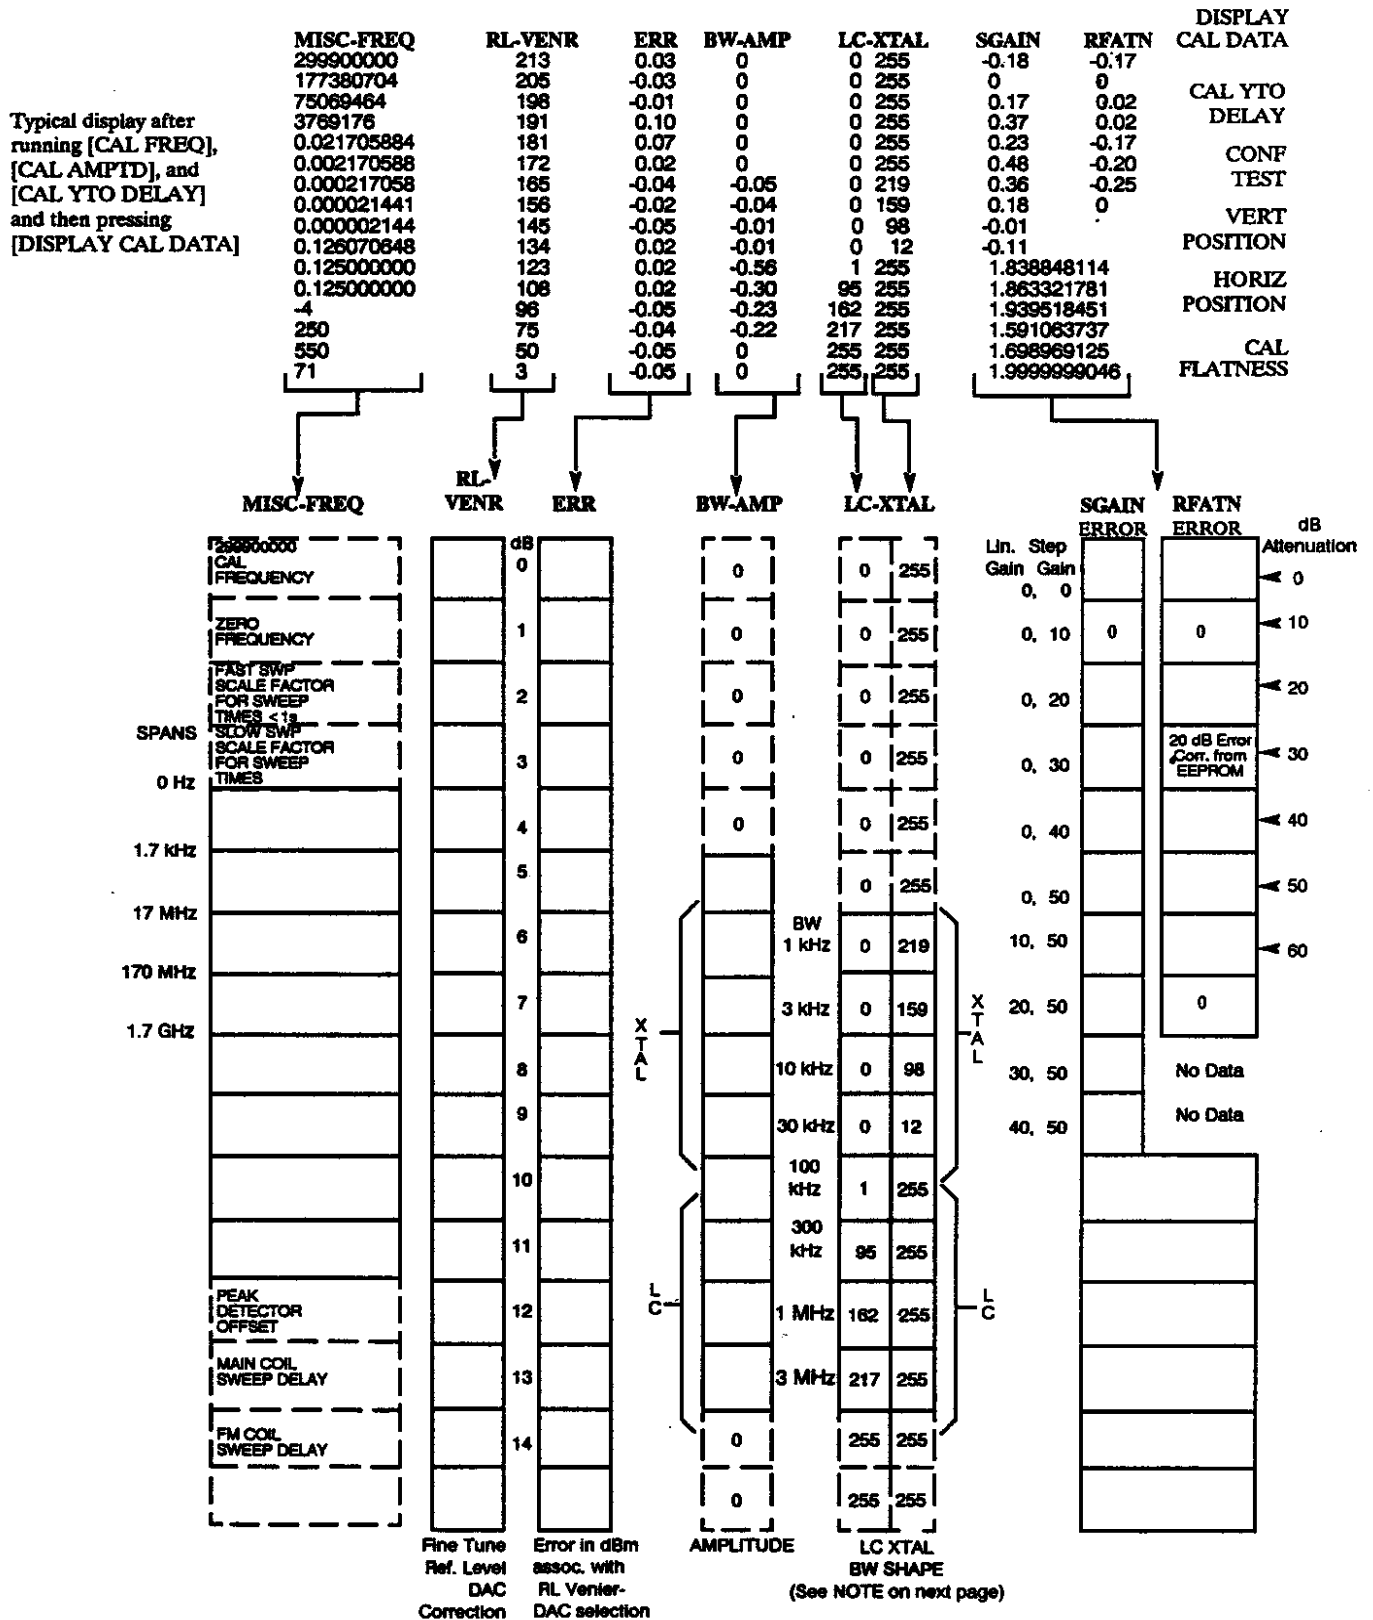


Figure 4-3. Explanation of Calibration Data Display

Checking the Calibration Data

Currently stored calibration data for the analyzer can be displayed using the CAL data display function. To access the data, press the following keys:

[CAL] [MORE]

[DISPLAY CAL DATA]

Figure 4-3 shows a sample CAL data display with CAL output connected to RF Input.

Troubleshooting

MISSING XTAL column

Typical display after running [CAL FREQ], [CAL AMPTD], and [CAL YTO DELAY] and then pressing [DISPLAY CAL DATA]

| MISC-FREQ | RL-VENR | ERR | BW-AMP | LC-XTAL | SGAIN | RFATN | DISPLAY CAL DATA |
|-------------|---------|-------|--------|---------|-------------|-------|------------------|
| 299900000 | 213 | 0.03 | 0 | 0 | -0.18 | -0.17 | CAL YTO DELAY |
| 177380704 | 205 | -0.03 | 0 | 0 | 0 | 0 | CAL YTO DELAY |
| 75069464 | 198 | -0.01 | 0 | 0 | 0.17 | 0.02 | CONF TEST |
| 3769176 | 191 | 0.10 | 0 | 0 | 0.37 | 0.02 | CONF TEST |
| 0.021705884 | 181 | 0.07 | 0 | 0 | 0.23 | -0.17 | VERT POSITION |
| 0.002170588 | 172 | 0.02 | 0 | 0 | 0.48 | -0.20 | VERT POSITION |
| 0.000217058 | 165 | -0.04 | -0.05 | 0 | 0.36 | -0.25 | HORIZ POSITION |
| 0.000021441 | 156 | -0.02 | -0.04 | 0 | 0.18 | 0 | HORIZ POSITION |
| 0.000002144 | 145 | -0.05 | -0.01 | 0 | -0.01 | | CAL FLATNESS |
| 0.126070648 | 134 | 0.02 | -0.01 | 0 | -0.11 | | |
| 0.125000000 | 123 | 0.02 | -0.56 | 1 | 1.838848114 | | |
| 0.125000000 | 108 | 0.02 | -0.30 | 95 | 1.863321781 | | |
| -4 | 96 | -0.05 | -0.23 | 162 | 1.939518451 | | |
| 250 | 75 | -0.04 | -0.22 | 217 | 1.591063737 | | |
| 550 | 50 | -0.05 | 0 | 255 | 1.698969125 | | |
| 71 | 3 | -0.05 | 0 | 255 | 1.999999046 | | |

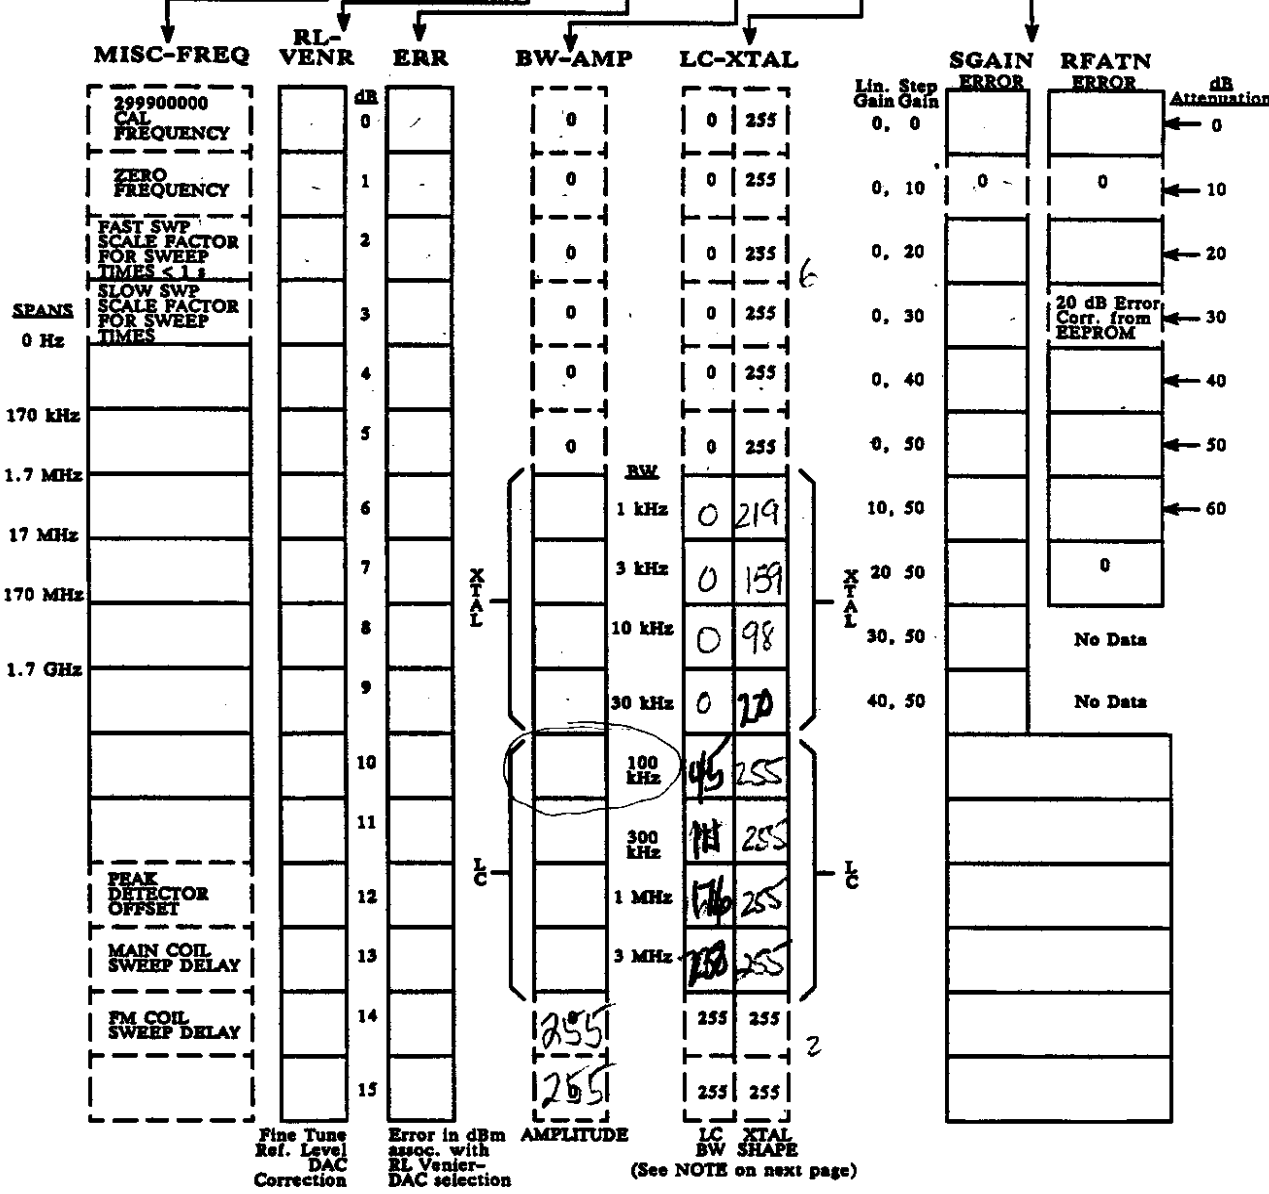


Figure 4-3. Explanation of Calibration Data Display

The processor uses the "boxed" values as calibration correction factors. The "dotted" values are calibration constants (i.e., they are the same value in every analyzer).

NOTE for LC-XTAL DAC's:

LC COLUMN:

BW's 1 Hz to 30 kHz - 0

BW's 100 kHz to 3 MHz - some setting between 0 and 255

(100 kHz - 0, 300 kHz - 100, 1 MHz - 160, 3 MHz - 220)

BW's 10 and 30 MHz - 255

XTAL COLUMN:

BW's 1 Hz to 300 Hz - 255

BW's 1 kHz - 220, 3 kHz - 160, 10 kHz - 100, 300 kHz - 10

BW's 100 kHz to 50 MHz - 255

GENERATING NEW CALIBRATION DATA

Troubleshooting

The accuracy of the HP 8590A is achieved and maintained through mechanical adjustments and correction constants. The two types of correction constants stored in EEPROM are flatness correction and 20 dB attenuator step error. The 20 dB step error data is used in the HP 8590A internal calibration routines.

If the A3 Attenuator Assembly, or A4 First Mixer Assembly is replaced, new correction constants must be generated. Presently, the HP 8590A must be returned to a Hewlett-Packard Repair Center to have new data generated.

If the correction constants are destroyed or the A16 Processor Board Assembly is replaced, factory-generated data can be re-entered using the procedure given below. This procedure involves two main tasks: setting the attenuator error, and entering flatness correction data. Contact the nearest Hewlett-Packard Repair Center to obtain the factory-generated correction constants.

To set the 20 dB attenuator error:

1. Turn on the HP 8590A.
2. Press the following keys:
FREQUENCY \square **2** **0** **0** **1** **Hz**
CAL **[MORE]** **[CAL FLATNESS]** **[SET 20 dB ERROR]**
3. The analyzer will prompt you: "ENTER 20 dB ATTEN ERROR." Enter the error and terminate the entry with the appropriate **[dB]** key.
The processor will preset the analyzer.
4. Press **CAL** **[CAL FETCH]** or cycle the power off then on.

NOTE

To confirm that the correct data was entered, press: **[MORE] DISPLAY CAL DATA**. The 20 dB step error is located in the right column **[RFATN]**, (fourth number from the top). See Figure 4-3 of the HP 8590A Support Manual.

To enter the flatness calibration data:

1. Turn on the HP 8590A.
 2. ^{PRESET} Press **FREQUENCY** \square **2** **0** **0** **1** **Hz**
 3. Press **CAL**, **[MORE]**, and **[CAL FLATNESS]**
 4. ^{ENT FLAT. DATA} Enter the start, stop, and CF step size. Press:
~~**FREQUENCY**~~ **0** **MHz**
1 **7** **5** **0** **MHz**
5 **0** **MHz**
- 1800* *EEPROM INIT*

Troubleshooting

5. Enter the flatness calibration data in sequence from 0 MHz to 1750 MHz. The entry of each set of data must be terminated by pressing **[MHz]** before more data is entered.

NOTE

You may observe which center frequency you are entering by looking in the lower left corner of the CRT.

6. Continue until all data have been entered. After the last entry is terminated, the processor will preset the analyzer.

7. Press **[CAL]** [CAL FETCH] or cycle the power off, then on. The HP 8590A is ready for operation.

Troubleshooting

To determine which firmware date code you have, cycle power OFF then ON and look in the active function block on the analyzer's screen for firmware revision information.

Table 4-5. Firmware History

| Revision | Revision Date (ddmmyy) | ROM Part Number U6, U7, U23, U24 | Serial Break | Major Changes |
|------------|------------------------|---|--|---|
| Original | | 08590-80003 08590-80004 08590-80005 08590-80006 | 2618A00001 through 2618A00587 | CAUTION *Update all instruments that have the original firmware. Failure to do so may result in loss of calibrated flatness data. |
| Revision B | 11.12.86 | 08590-80020 08590-80021 08590-80022 08950-80023 | prior SN 2618A00587 first SN 2618A00588 | *Sets up lock on flatness data entry (first must enter -2001 Hz). |
| Revision C | 9.1.87 | 08590-80028 08590-80029 08590-80030 08590-80031 | prior SN 2618A00796 first SN 2618A00797 | |
| Revision D | 31.7.87 | 08590-80042 08590-80043 08590-80044 08590-80045 | prior SN 2742A02206 first SN 2749A02207 | |
| Revision E | 29.7.88 | 08590-80113 08590-80114 08590-80115 08990-80116 | prior SN 2753A02717 first SN 2816A02718 | <i>→2816A03157</i> <i>→2833A03138</i> |
| Revision F | 14.10.88 | 08590-80127 08590-80128 08590-80129 08590-80130 | S/N not known at this time | Allows calibration with LO feedthrough amplitude less than calibration output |

08590-60074 Always latest ROM Revision
PHS 5-18-89

Troubleshooting

5. Enter the flatness calibration data in sequence from 0 MHz to 1750 MHz. The entry of each set of data must be terminated by pressing **[MHz]** before more data is entered.

NOTE

You may observe which center frequency you are entering by looking in the lower left corner of the CRT.

6. Continue until all data have been entered. After the last entry is terminated, the processor will preset the analyzer.
7. Press **[CAL]** [CAL FETCH] or cycle the power off, then on. The HP 8590A is ready for operation.

Troubleshooting

To determine which firmware date code you have, cycle power OFF then ON and look in the active function block on the analyzer's screen for firmware revision information.

Table 4-5. Firmware History

| Revision | Revision Date (ddmmyy) | ROM Part Number U6, U7, U23, U24 | Serial Break | Major Changes |
|------------|------------------------|--|--|---|
| Original | | 08590-80003 08590-80004 08590-80005 08590-80006 | 2618A00001 through 2618A00587 | <div style="border: 1px dashed black; padding: 5px; display: inline-block;"> CAUTION </div> *Update all instruments that have the original firmware. Failure to do so may result in loss of calibrated flatness data. |
| Revision B | 11.12.86 | 08590-80020 08590-80021 08590-80022 08950-80023 | prior SN 2618A00587 first SN 2618A00588 | *Sets up lock on flatness data entry (first must enter -2001 Hz). |
| Revision C | 9.1.87 | 08590-80028 08590-80029 08590-80030 08590-80031 | prior SN 2618A00796 first SN 2618A00797 | |
| Revision D | 31.7.87 | 08590-80042 08590-80043 08590-80044 08590-80045 | prior SN 2742A02206 first SN 2749A02207 | |
| Revision E | 1.3.88 | 08590-80068 08590-80069 08590-80070 08590-80071 | prior SN 2753A02717 first SN 2816A02718 | |

*NAF

NOTE: 08590-60074 FIRMWARE UPDATE KIT WILL ALWAYS HAVE LATEST REVISION.

Next Page

ASSEMBLY DESCRIPTIONS

Introduction

This chapter contains detailed descriptions of each major assembly in the analyzer. It is intended to assist you in troubleshooting the suspect assembly that you located using the techniques presented in Chapter 4.

The first section presents an overview of the analyzer operation with an accompanying simplified block diagram. This section also includes a table with recommended troubleshooting times for each assembly. You can use these recommendations to decide whether to fix an assembly or buy a replacement.

Each major assembly or group of related assemblies is marked with a tab. The order of subject matter within each section is:

- Overview of the assembly
- Detailed description
 - Troubleshooting hints
 - Assembly block diagram
- Component location diagram
- Schematic diagram

Overview

A simplified block diagram of the analyzer is shown in Figure 5-1. Each block corresponds to a physical assembly indicated by an "A" number (e.g. A4, First Converter Assembly). The second part of this chapter is organized by physical assemblies.

The analyzer is a microprocessor-controlled swept receiver covering a frequency range of 10 kHz to 1.5 GHz. It uses a CRT monitor to display signal characteristics. An optional I/O port can be used for external control, and data collection.

Processor A/D

The microprocessor controls internal operation of the analyzer. It receives requests from either the front panel keyboard or an external computer when an I/O port is used. The functions performed by the microprocessor are determined by internal firmware instructions stored in ROM. When an I/O port is used, an external computer can poll analyzer status, download measurement instructions, and collect measurement data from the microprocessor.

I/O Port

Three different types of I/O port are available: two serial ports and one parallel port. The HP-IB parallel port, Option 021, is a standard IEEE-488 bus suitable for connection to any HP-IB or GPIB-compatible calculator or computer. This type of port is used for high-performance test systems. The HP-IL port, Option 022, is a lower-cost serial port used as an alternative to HP-IB. It is based on a loop or ring architecture. The HP-IL port is used with low-cost Hewlett-Packard calculators or with computers having an HP-IL interface. Option 023 is a standard RS-232C serial port. This can be used with any compatible computer system.

Analog Interface

The analog interface generates analog control signals for the analyzer's RF and IF sections. The signals are developed from digital data passed by the microprocessor.

RF Section

The analyzer front-end, or RF section, receives input signals via a 50-ohm input, or via a 75-ohm input for Option 001. Input power must be less than +30 dBm (or +77 dBmV for Option 001) to protect the input mixer and attenuator. The RF signals are passed through a 0- to 60-dB step attenuator that provides input attenuation in 10-dB steps, as selected.

The analyzer uses triple conversion to convert incoming RF signals to a 21.4-MHz IF frequency. Two of these stages are in the RF section. The third stage is in the IF section, described later.

The first stage converts incoming signals to an IF midpoint of 2.05 GHz by mixing a 2.05- to 3.55-GHz tuning signal from the first local oscillator (LO). The frequency of the YIG oscillator is selected by the controller via the digital-to-analog interface. The resulting 2.05-GHz first IF signal is then downconverted by the second converter stage to an IF midpoint of 321.3 MHz, using a fixed 1728.7-MHz oscillator.

IF Section

The 321.3-MHz IF signals from the second stage are downconverted by the third stage to the final IF frequency of 21.4 MHz, using the 299.9-MHz third local oscillator signal.

The desired IF passband, or resolution bandwidth, is established by four Gaussian-shaped bandpass filters. Eight possible IF bandwidths in the range of 1 kHz to 3MHz can be selected. The bandpass filters can be coupled to the frequency span of the first LO for an optimum ratio of span-to-resolution bandwidth. The step-gain amplifier provides a maximum of 50 dB of amplification for the IF signals in linear steps. The log amplifier provides 70 dB of logarithmic amplification in log mode. In the linear mode it provides an additional 40 dB of gain selectable in 10-dB steps.

Video Control

The video signal is converted to digital format to derive measurement data, which is passed to the microprocessor. The resulting video signal is then passed to the Video Assembly for conversion to the CRT raster display.

Recommended Assembly Troubleshooting Times

Table 5-1 lists some guidelines on cost-effective troubleshooting times for the various component-repairable analyzer assemblies. If the indicated time to isolate to a faulty component or components is exceeded, it may be more cost effective to order a replacement assembly rather than continue component-level fault isolation. However, since part costs can vary widely depending on your geographic location, you may want to adjust the indicated times for your own conditions.

Table 5-1. Cost-Effective Component-level Troubleshooting Times

| Assembly | Designator | Repair Time |
|--------------------|------------|--------------|
| Analog Interface | A7 | 2 to 3 hours |
| Third Converter | A9 | 1 hour |
| Second IF | A10 | 1 hour |
| Bandwidth Filter | A11, A13 | 2 to 3 hours |
| Step Gain | A12 | 1 hour |
| Log Amplifier | A14 | 1 hour |
| IF Motherboard | A15 | 1 hour |
| Processor Assembly | A16 | 2 to 3 hours |
| Video | A17 | 1 hour |
| HP-IB I/O Board | A18 | .5 hour |
| RS-232C I/O Board | A21 | .5 hour |
| HP-IL I/O Board | A23 | .5 hour |

Analyzer Internal Assemblies

Table 5-2 lists the internal assemblies of the analyzer, their reference designators (Ref Des), and their major functions. Use the reference designations to locate information in this manual. See Chapter 3 for part numbers used for ordering replacement parts or assemblies.

Table 5-2. Spectrum Analyzer Internal Assemblies

| Ref Des | Assembly Name | Major Function(s) |
|---------|------------------------------|--|
| A1 | Keyboard | Manual command input |
| A2 | Display Module | CRT display of RF input signals |
| A3 | Attenuator | RF input scaling from 0 to 60 dB in 10-dB steps |
| A4 | First Converter | First IF downconversion |
| A5 | Second Converter | Second IF downconversion |
| A6 | First Local Oscillator (YIG) | Tuning |
| A7 | Analog Interface | Digital-to-analog conversion of data from Processor A/D A16 |
| A8 | Power Supply Module | Instrument power supply |
| A9 | Third Converter | Third IF downconversion |
| A10 | Second IF | Second IF bandpass amplifier and filter |
| A11 | First Bandwidth Filter | First selectable bandpass filter assembly |
| A12 | Step Gain | Linear step gain IF amplifier |
| A13 | Second Bandwidth Filter | Second selectable bandpass filter assembly |
| A14 | Log Amplifier | Log and linear gain IF amplifiers |
| A15 | IF Motherboard | Motherboard and power supply filters for IF section |
| A16 | Processor A/D | Microprocessor-based controller and A/D conversion of video signal to digital display data |
| A17 | Video | Conversion of digitized IF spectra to raster video signal |
| A18 | HP-IB I/O | HP-IB (IEEE-488) I/O port, Option 021 |
| A19 | HP-IB Connector | Connector assembly for HP-IB Option 021 |
| A20 | Line Module | RFI filter for ac power input |

continued

Assembly Descriptions

Table 5-2. Spectrum Analyzer Internal Assemblies (continued)

| Ref Des | Assembly Name | Major Function(s) |
|----------------|----------------------|--|
| A21 | RS-232C I/O | Standard serial I/O port, Option 023 |
| A22 | RS-232C Connector | Connector assembly for Option 023 |
| A23 | HP-IL I/O | HP-IL I/O port, Option 022 |
| A24 | HP-IL Connector | Connector assembly for HP-IL Option 022 |
| B1 | Fan | Cooling fan for unit |
| S1 | Line Switch | On/Off switch for ac power |

Attenuator Assembly A3

The Attenuator Assembly attenuates the RF input signal in 10-dB steps from 0 to 60 dB. Repeatable attenuation and gain in the signal path preserve amplitude calibration and direct reading of signal amplitudes on the CRT. Operator adjustment of the attenuator establishes the optimum signal level applied to First Converter Assembly A4.

First Converter Assembly A4

Within the First Converter Assembly (Figure 5-2 and 5-4) the incoming signal mixes with the local oscillator signal from the First Local Oscillator Assembly generating the 2.05-GHz first IF signal. An input low-pass filter passes RF signals below 1.55 GHz to the mixer. A 2.05- to 3.55-GHz tuning signal from the First Local Oscillator Assembly is routed to the mixer through a power splitter. The power splitter generates a nominal local oscillator output of +12 dBm. The 2.05-GHz IF from the mixer is attenuated by a 6-dB pad and passed through a 5.00-GHz low-pass filter to restrict out-of-band signals. The resulting 2.05-GHz first IF signal is then passed to the Second Converter Assembly, through the 2.06 GHz LPF, A26.

Detailed Description

The RF signal input passes through a 1.55-GHz low-pass filter to the Mixer Diode Assembly U1. Seen from the mixer, the output impedance of this low-pass filter is effectively a short circuit at 2.05 GHz, reflecting any IF power back to the mixer.

The first LO (local oscillator) input from the YIG Oscillator Assembly A6 passes through a 3-dB power splitter consisting of two resistors, R1 and R2, and etched transmission lines. One of the power splitter outputs provides the front panel signal 1ST LO OUTPUT; the other output provides drive voltage to the mixer diode through a balun or short piece of semirigid coaxial transmission line. The local oscillator signal is coupled to one mixer diode through the balun shield and to the other mixer diode through the balun center conductor. This splits the local oscillator signal voltage evenly between the two mixer diodes.

The 2.05-GHz output signal from the mixer is split-line coupled to a 6-dB π resistive matching pad composed of R3, R4, and R5. A small block of polyiron is placed over the split-output line. The polyiron helps balance the mixer and absorbs harmonics of the mixing signals. A 5.00-GHz low-pass filter etched on the printed circuit board of the First Converter Assembly provides additional filtering to the 2.05-GHz IF signal. The signal is then coupled to the Second Converter Assembly through a ~~semirigid coaxial cable~~.

2.06 GHz LPF A55, A26.

Assembly Descriptions

Troubleshooting Hints

First check the supply voltages. If the supply voltages are OK, use the analyzer setup and power levels shown on the schematic in Figure 5-6.

The most common first converter problem is damage to the mixer diode. The usual symptom is a 10- to 14-dB loss of sensitivity. For example, a signal will measure -34 dBm when its amplitude is known to be -20 dBm.

If there is residual FM, suspect the first local oscillator. Residual FM can be induced in the local oscillator by noise on the -10V reference to the oscillator or a noisy main coil driver or filter. If you suspect a spurious response problem, check for loose or faulty RF connections.

ANY CHANGES IN THE RF PATH WILL REQUIRE A RECALIBRATION
A defective IM coil Assy can cause OSC in the yig
e.g. random spikes on either side of the LO.
yig is susceptible to microphonics

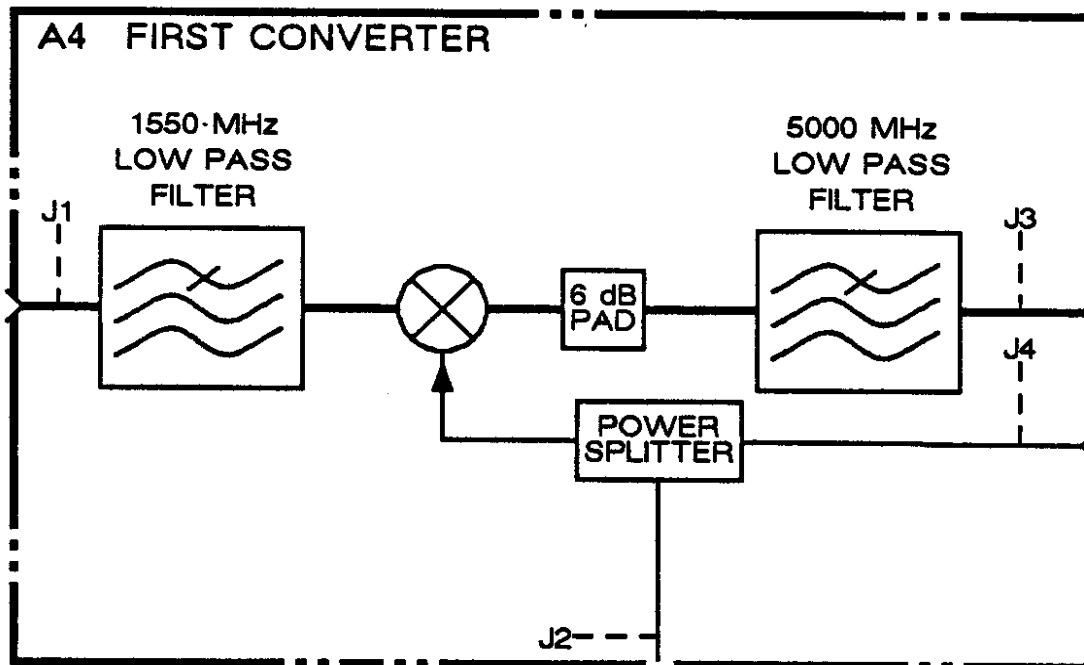


Figure 5-2. First Converter Block Diagram

Second Converter Assembly A5

Within the Second Converter Assembly, the first IF signal mixes with a fixed 1.7287-GHz second local oscillator signal, generating the 321.3-MHz second IF signal. Several functional elements are included in the Second Converter Assembly (see Figures 5-3 and 5-5). The 2.05-GHz bandpass filter uses the resonant characteristics of three precisely machined cavities in the aluminum-block housing to filter the first IF signal. A fourth cavity in the housing is used as a resonant circuit for the 1.7287-GHz second local oscillator signal. The second local oscillator is biased using reference voltages from the Analog Interface Assembly. The resulting 321.3-MHz IF signal from the mixer is routed to the Second IF Assembly through a matching filter.

Detailed Description

The IF signal from the First Converter Assembly is coupled into the Second Converter bandpass filter through coupling loop L3. The bandpass filter consists of three circular, slug-tuned cavity resonators operating as less than a quarter wavelength inductive transmission lines. The cavities provide high "Q" for good selectivity at 2.05 GHz. Coupling loops L4 and L5 provide coupling between the cavities. The 2.05-GHz signal is loop coupled to the cathode end of the second mixer diode CR1. The second local oscillator signal is loop coupled to the anode end of CR1.

The second local oscillator is a Colpitts-type circuit operating at 1.7287 GHz. The capacitive "fingers" etched on the printed circuit board of the Second Connector Assembly and the internal transistor capacitances of A5A1Q1 provide the positive feedback necessary to sustain oscillation. The oscillator tank circuit is a slug-tuned cavity. The signal from the second local oscillator is coupled into cavity Z4 by a 5-40 machine screw extending down into the cavity. The second local oscillator output signal is also available at test jack A5J3.

The 1.7287-MHz local oscillator provides the drive for mixer diode CR1. The frequency difference between the 2.05-GHz first IF signal and the 1.7287-GHz second local oscillator signal is 321.3 MHz. This 321.3-MHz signal is coupled through the matching filter to the Second IF Assembly. The matching filter is a passive network designed to match the relatively high (-200 ohms) impedance of the second mixer to the low (-50 ohms) input impedance of the second IF. The match may be optimized by adjusting A5L2, 2nd MIXER MATCH adjustment.

Troubleshooting Hints

Check the second local oscillator output at the test jack A5J3 for $1728.7 \text{ MHz} \pm 0.5 \text{ MHz}$. If the second local oscillator signal is missing, check the supply voltages at the edge of Second Converter.

a flat baseline without signals, or a start/stop freq. off hundreds of MHz are symptoms of a defective 2nd LO.

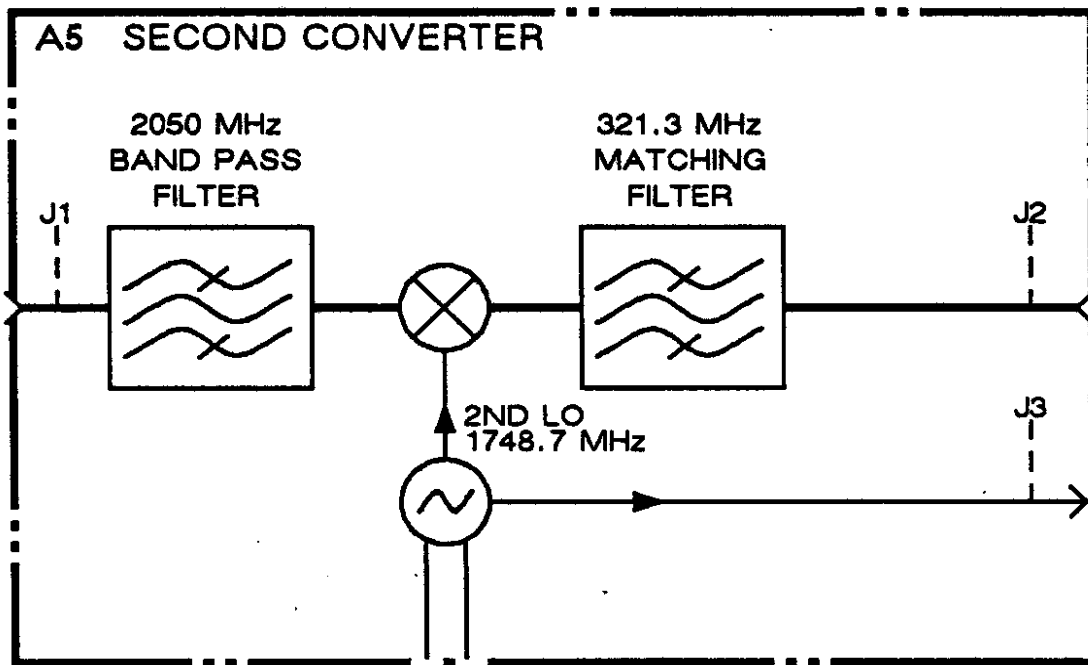


Figure 5-3. Second Converter Block Diagram

First Local Oscillator A6

The First Local Oscillator Assembly is a YIG-tuned oscillator (YTO). YIG (yttrium-iron-garnet), a ferro-magnetic material, is polished into a small sphere and precisely oriented in a magnetic field. Changes in this magnetic field alter the frequency of the signal generated by the YTO. Voltage control of the magnetic field surrounding the YIG sphere allows the analyzer to be swept or tuned within the frequency range of 2.05 to 3.55 GHz used in the First LO. A sweep control voltage generated by the Analog Interface Assembly tunes the YTO in sync with the horizontal deflection of the CRT beam of the display module. A tuning voltage offsets the sweep to set up the YTO center frequency.


Troubleshooting Hints

First check the supply voltage. If the supply voltages are OK, use the analyzer setup and power levels shown on the schematic (Figure 5-6) to isolate the problem.

If you observe excessive residual FM, the YIG Oscillator is the most likely suspect. Before replacing the YIG, however, check the -10V reference from the Analog Interface Assembly. Observed noise level greater than 2.5 mV could be the cause of the residual FM. Also check the main coil driver, main coil filter, and FM coil driver in Analog Interface Assembly. If you suspect a spurious response problem, check for loose or faulty RF connections.

A4

EXTERNAL VIEW

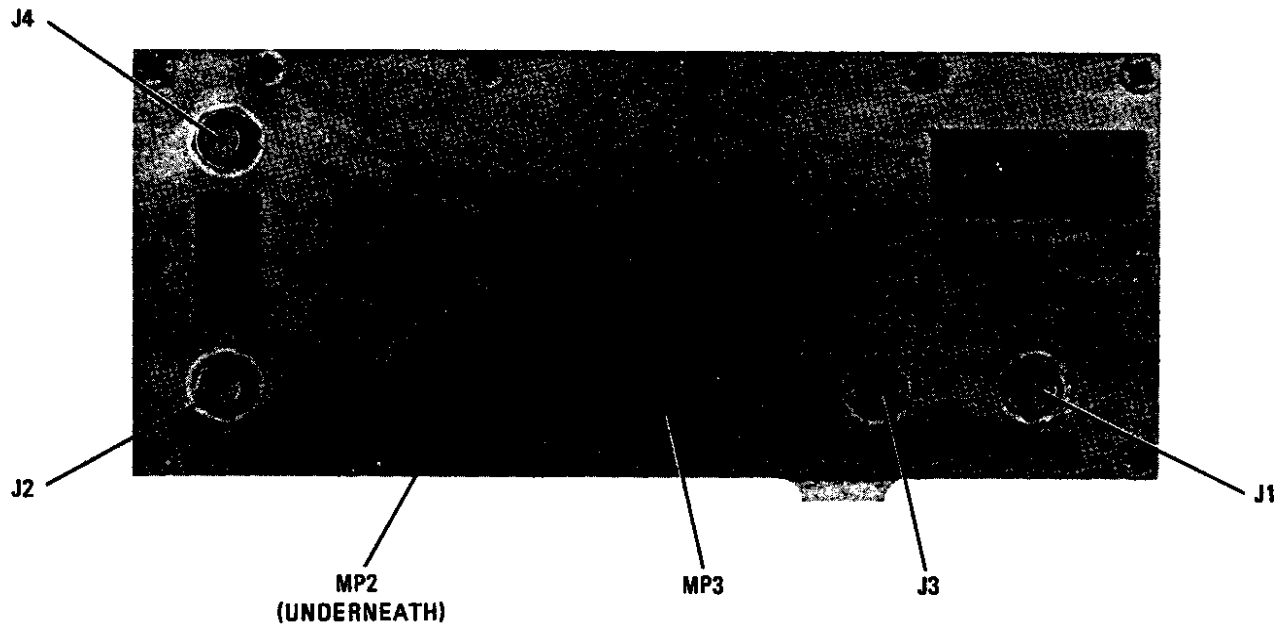

INTERNAL VIEW

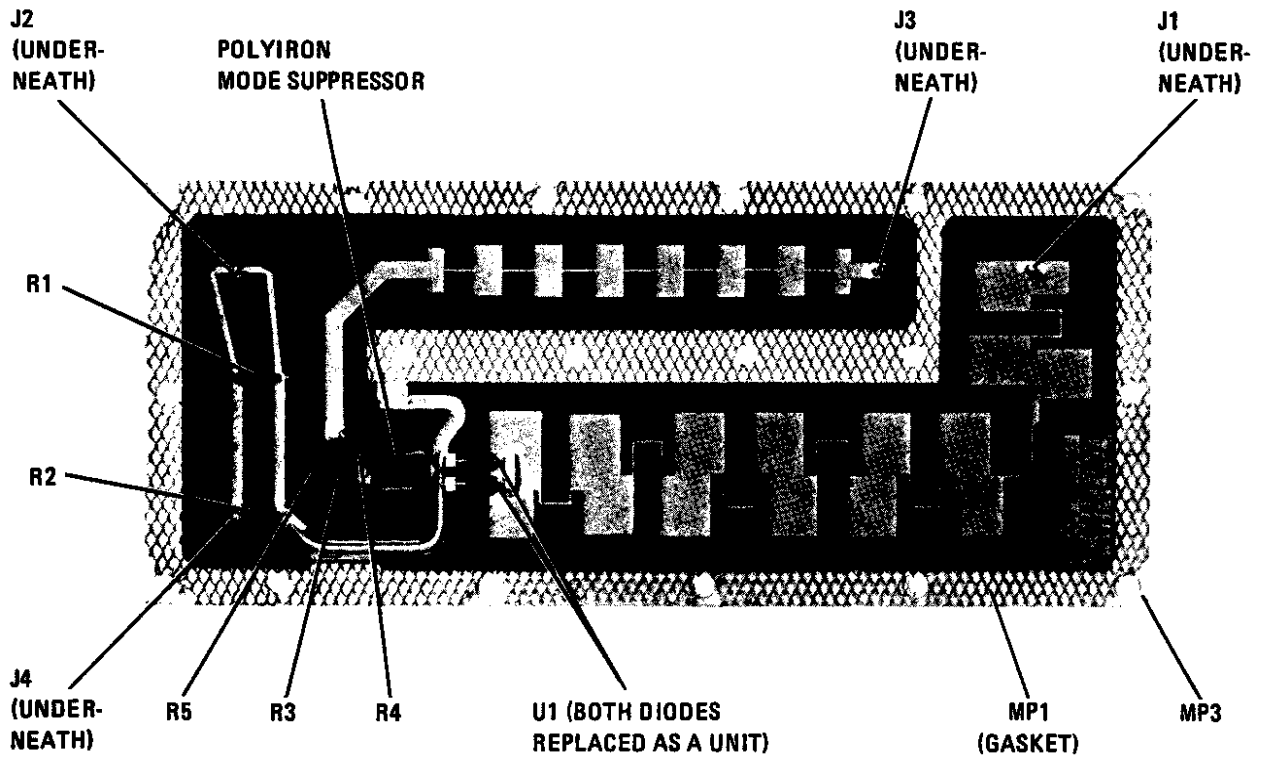


Figure 5-4. First Converter (A4) Component Locations


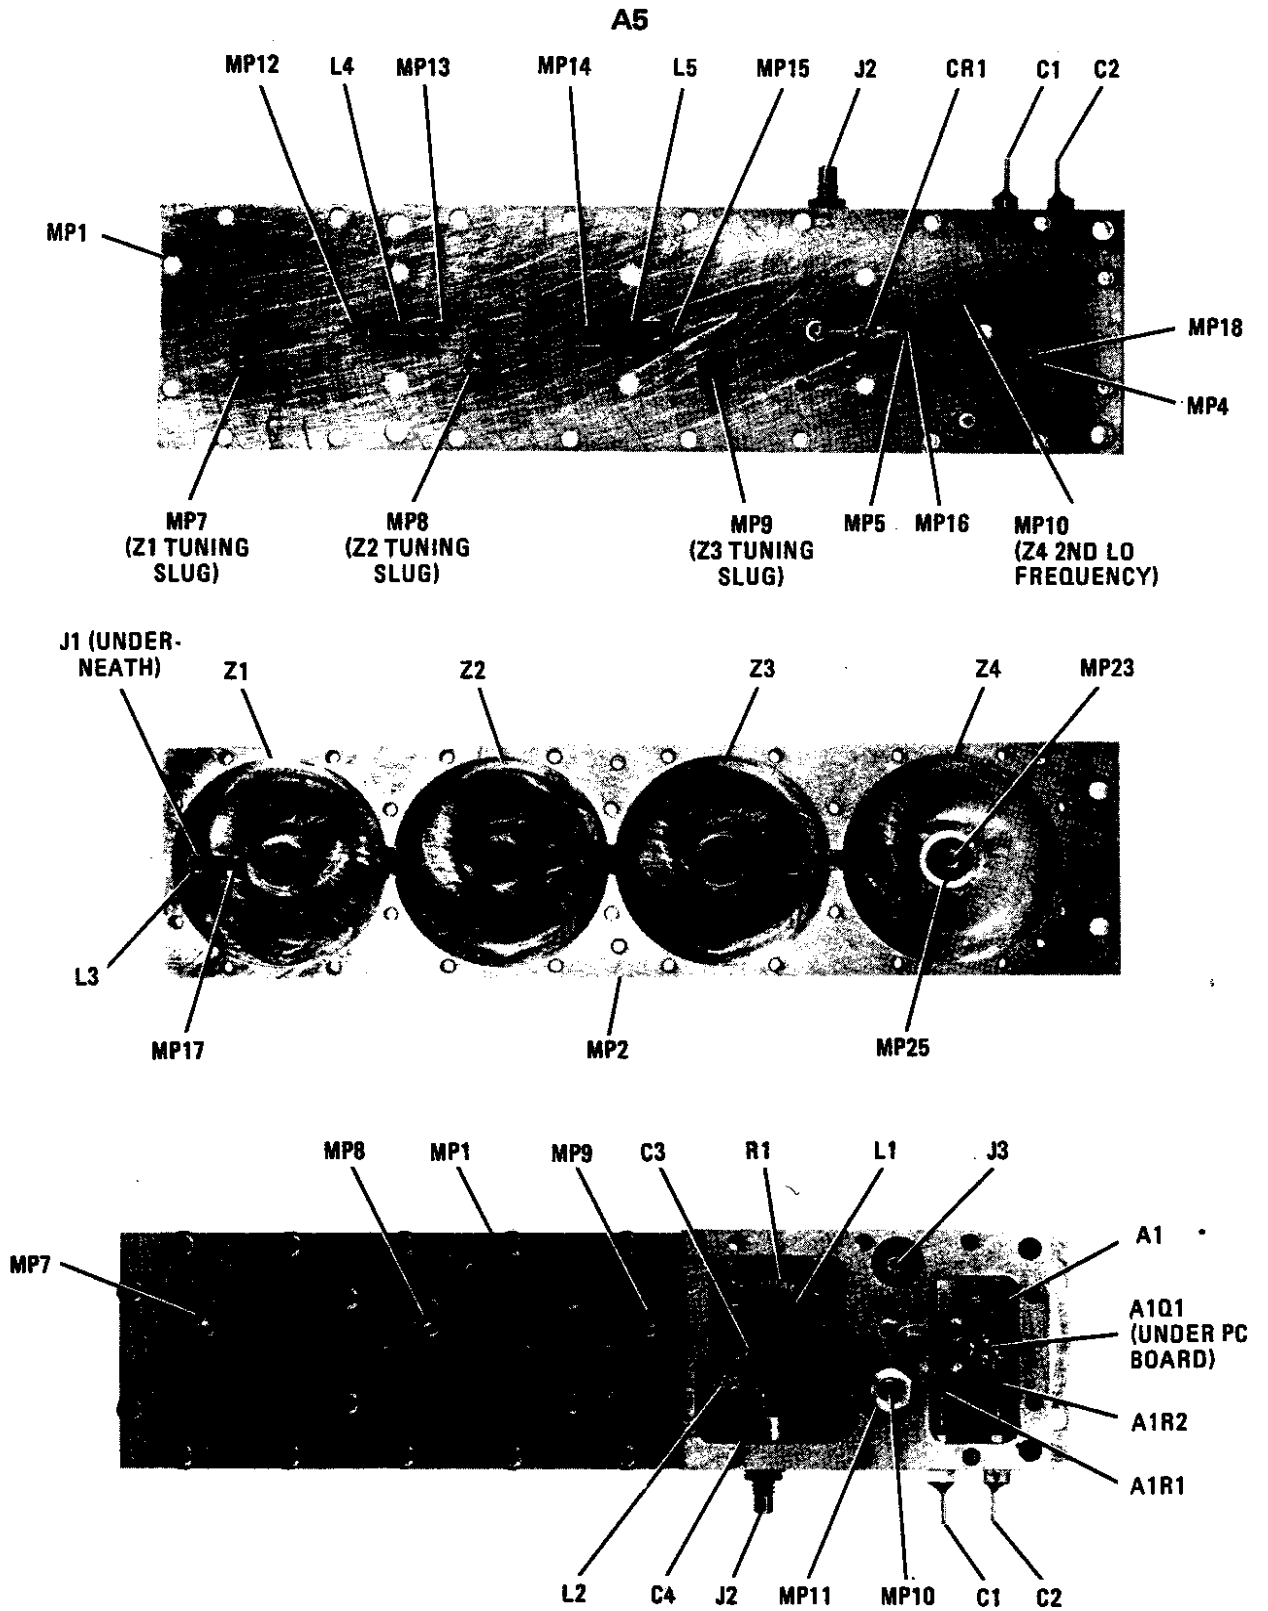


Figure 5-5. Second Converter Component Locations



Analog Interface A7

The Analog Interface Assembly performs digital-to-analog conversion on data received from the Processor A/D Assembly. The resulting analog signals control the assemblies in the RF and IF sections. See Figure 5-8 at the end of this section for a block diagram of the Analog Interface Assembly.

Data is received via the I/O bus (IOB0 through IOB15) from the Processor A/D Assembly. Incoming data is latched into the appropriate device in the analog interface from IOB address lines from the processor. The data is then routed to the associated digital-to-analog converter (DAC) in the analog-interface assembly, where it is converted to an analog current. The analog current is used to control one or more functional elements in the RF or IF section assemblies.

Detailed Description

The Analog Interface Assembly develops control and tuning currents from digital data passed via I/O bus lines IOB0-IOB15 from the Processor A/D Assembly. This assembly contains these main functional elements (refer to Figures 5-9 and 5-10):

- Main coil driver, including coarse tune DAC, fine tune DAC, sweep time DAC, and binary span DAC
- FM coil driver, including extra fine tune DAC, sweep time DAC, binary span DAC
- Sweep ramp generator
- Step gain control
- Log amplifier control
- Bandwidth control
- Third converter REF_CAL
- Attenuator driver

Main Coil Driver

The main coil driver (Figure 5-7) generates the control current for the main tuning coil of the YTO. The main coil driver consists of amplifier U28, Q1, Q7 and associated FET switches U35A-D, U37A-D and the passive biasing components.

Tuning data loaded into the coarse and fine tune DACs are converted to an analog voltage when the processor places the data on IOB0-IOB11 and asserts the write strobe (WC for coarse data; WF for fine data) to the bus receivers. U21 and U25 output drives current and drives the input of the main coil driver. The reference voltage for the DACs is +10 volts at pin 17

YTO main coil tuning is accomplished by the main span voltage ramp generated by the binary span DAC. The main span current from U23 is applied to the input of the main coil driver, along with the -10 V reference and the output of the coarse and fine tune DACs.

Assembly Descriptions

The main coil driver, U28, Q7, and Q1, has FET switches U35 and U37 that select passive components in the main coil driver to control the coil driver bandwidth. The switch states are determined by the state of the LFLT and HCHG lines (IOB14 and IOB15 from the processor). Figure 5-7 shows the circuit configuration and the selectable main coil driver bandwidths and components used in different spans.


Sweep Generator

The Sweep Generator generates a sweep ramp signal that is eventually used to sweep-tune the First Local Oscillator. The sweep signal is applied to the binary span DAC, where it is scaled to drive the main coil and FM coil drivers. The sweep generator consists of the following active components:


- Bus receivers U6 and U7
- Sweep time DAC U14
- Reference amplifier U19
- Sweep ramp generator U20, U36A, U36D
- Sweep output driver U24

Tuning data is loaded into the I/O bus lines DAC and converted to an analog voltage when the processor places the data on IOB0-IOB11 and asserts the write strobe WST to the bus receivers. Output drive and a reference level for the DAC output is provided by U19.


The sweep ramp generator develops the sweep signal from the output of U19. FET switch U36A opens at the start of the sweep cycle to allow C14 to charge. When C14 is fully charged at the end of the sweep cycle, LRST is asserted by the processor via IOB13, and U36A closes. When sweep times longer than one second are selected, the processor asserts HFSL via IOB12 to close FET switch U36D and switch in C13. The sweep ramp output is applied to the reference input of binary span DAC. The output of U20 is also routed to sweep output driver U24 to provide the SWEEP OUT signal at J5 on the analyzer rear panel.

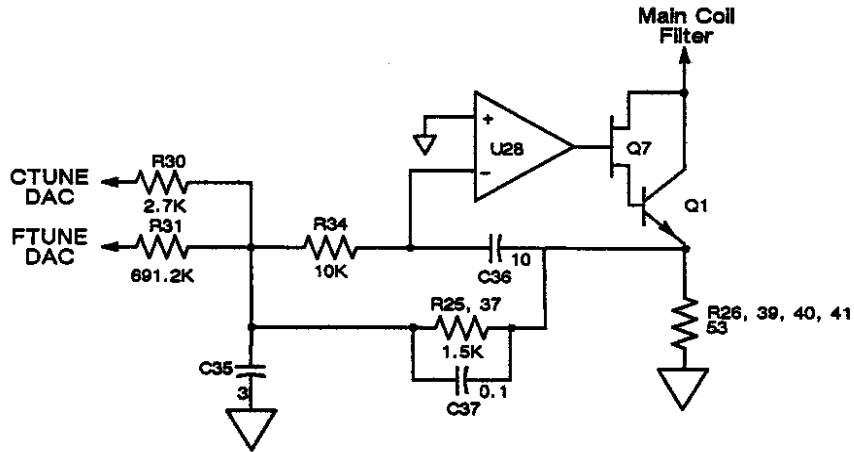

a. Span < 2 MHz Bandwidth = 1.5 Hz

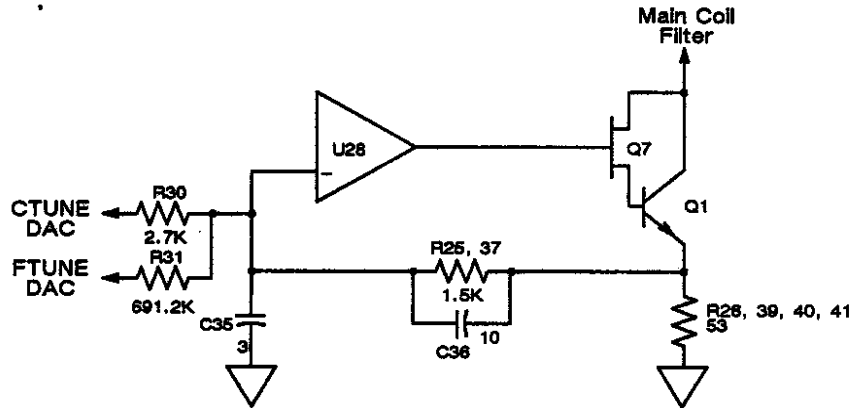

b. 2 MHz < Span < 17 MHz Bandwidth = 10 Hz

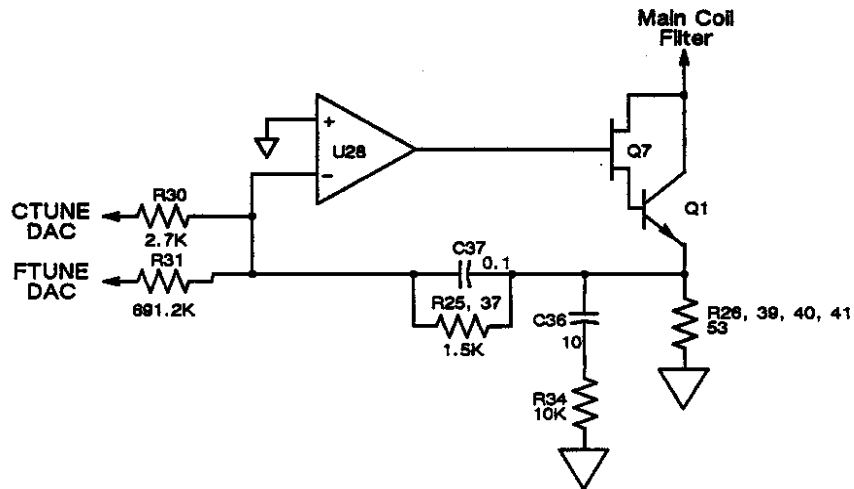

c. Span > 17 MHz Bandwidth = 1 kHz

Figure 5-7. Main Coil Driver Simplified Schematics

Assembly Descriptions

Step Gain, Log Gain, and Bandwidth Filter Control

This circuitry generates control voltages and select lines for the step gain amplifier A12, log amplifier A13, and bandwidth filters A11 and A13. It consists of the following active components:

- Bus receivers U101, U103, and U107
- BW6 DAC U102 and BW7 DAC U104
- Transistor packages U109, U110, U111, and U112

Bandwidth data is loaded into the BW6 and BW7 DACs and converted to analog currents when the processor places the data on IOB0-IOB15 and asserts the write strobe LBW to bus receivers U101 and U103. The output of DAC U104 is sent to bandwidth filters A11 and A13. The output of U102 is summed with BW6 drive current output by U109B and then routed to the bandwidth filters A11 and A13.

BW6 and BW5 select data are passed to the line driver circuits when the processor places the data on IOB8-IOB15 and asserts the write strobe LGAIN to U107 bus receiver. The transistor packages U109, U110, U111, and U112 generate the required drive for the control lines (-8VT, Log-Lin, IFG1-IFG6, BW5, and BW6) to the step gain, log gain, and bandwidth filter circuits.

Note that Attenuator A3 is controlled by the RF10, RF20, and RF30 lines, which are received from the processor on IOB12 through IOB14. The lines are buffered by inverters U110E through U110G and output directly to the attenuator.

FM Coil Driver

The FM Coil Driver sums the sweep ramp from the FM span driver and the extra fine tune DAC current for the FM tuning coil (FM +) of the First Local Oscillator (YIG) A6. The major active component is U30.

Tuning data is loaded into the extra fine tune DAC and converted to an analog current when the processor places the data on IOB0-IOB11 and asserts write strobe WXF to the bus receivers. +15VR reference level for the extra fine tune DAC output is provided by U17. This is applied, along with the sweep ramp from the Binary Span DAC, to FM coil driver U30.

Binary Span DAC

The binary span DAC takes the sweep ramp input (VREF) and divides it in decade steps as necessary for the main coil driver and the FM coil driver. It consists of the following active components:

- Bus receivers U4 and U5
- Binary span DAC U13
- Reference amplifier U18
- Multiplexers U31A and U32B
- Main span and FM span drivers U23 and U22

Tuning data is loaded into the DAC and converted to an analog voltage when the processor places the data on IOB0-IOB11 and asserts write strobe WSP to the bus receivers. Output drive is provided by U18. Resistors R5 and R6 divide the voltage by 10 and 100, respectively, for spans from 1.7 GHz, 170 MHz, 17 MHz, 1.7 MHz, and 170 kHz. The decade values are applied to the multiplexers and are selected according to the FMS0 and FMS1 control lines, which are determined by IOB12 and IOB13 from the processor. The span selected determines the appropriate span driver used: main or FM coil driver.

Third Converter LO Reference

The Third Converter RTF CAL circuit (Figure 5-10, sheet 3) generates a reference voltage (REF_CAL) that is used to control gain in Third Converter A9. It consists of the following active components:

- Bus receiver U105
- Reference DAC U106

Calibration reference data is loaded into the DAC and converted to an analog voltage when the processor places the data on IOB0 through IOB7 and asserts write strobe LGAIN to the bus receiver (note that it is loaded along with the gain/bandwidth control byte). The resulting REF_CAL voltage from U106 is passed to the local oscillator in the Third Converter Assembly.

Test Point Mux/Processor Control Buffer

This circuitry provides multiplexed processor access to DACs. These test point outputs can be viewed through softkey diagnostics under the Sweep/BW key menus. It consists of the following active components:

- Multiplexers U31B, U32A, and U33
- Driver U26
- Demultiplexer U1

The DAC, sweep, and control signals are available from the ANA_TEST output of U26 when the ATP0 through ATP2 lines to multiplexer U33 are set. The ANA_TEST signal is passed to the Processor A/D Assembly and is displayed when firmware diagnostics under the **[SWP/BW]** menu are executed.

Demultiplexer U1 generates the data load strobes for the bus receivers from states on the I/O address and control lines received from the processor.

Troubleshooting Hints

If a problem occurs only when spans greater than 17 MHz are selected, the fault probably lies in the circuitry associated with the main coil driver. If a problem occurs only when spans less than or equal to 17 MHz are selected, the fault probably lies in the circuitry associated with the FM coil driver. If the problem occurs when any span is selected, suspect the binary span DAC, associated bus receivers U4 and U5, or multiplexers U31A and U32B. In this case, also check the sweep circuitry for presence of the indicated ramp waveform.

Assembly Descriptions

Note that both the main coil driver and FM coil driver circuitry can be susceptible to excessive noise. If you suspect a frequency stability or residual FM problem, use an oscilloscope to verify the noise level at FET switch U37D pin 15. It should be less than 2.5 mV. If this and other coil driver checks are OK, suspect a problem in the First LO Oscillator.

If you suspect RF attenuator control, the problem is most likely in bus receiver U8, or line drivers in U110. If these are OK but the controls still are incorrect, suspect the Attenuator Assembly. However, if the coarse tune DAC operation is wrong, test with softkey [COARSE TUNE DAC] under the front panel key.

These softkey tests are documented later in this section. If a main coil filter problem is also present, suspect a bus driver/receiver problem on I/O bus lines IOB12 through IOB-14.

If you suspect a tuning problem, note that the coarse, fine, and extra fine DACs function as a 28-bit equivalent DAC, with 3% nominal resolution. Consider the amount of tuning error present to find the probable fault location.

Diagnostics Routines

The analyzer firmware has built-in diagnostics routines that allow front panel troubleshooting. The Analog Interface Assembly has several test points multiplexed to the 68000 microprocessor. The firmware routines that allow access to these test points on the Analog Interface board are accessed using the front panel **[SWEEP BW]** key.

To access the firmware routines, press these keys:

[SWEEP BW]
[DETECTOR]
[ANALYZER TEST]

A menu appears with these choices:


MAIN COIL DR 1,2,3
FM COIL DRIVE 1,2
FM SPAN 1,2
[MAIN COIL DR]
[FM COIL DRIVE]
[FM SPAN]
[BINARY SPAN]
[MORE]

Press **[MORE]** to access the second set of choices. All of these are test points on the Analog Interface Assembly.


[SWEEP RAMP]
[SWEEP TIME DAC]
[COARSE TUNE DAC]
[FINE TUNE DAC]
[X FINE TUNE DAC]

The following pages show typical screen displays for each of these routines.

[MAIN COIL DR] Routine

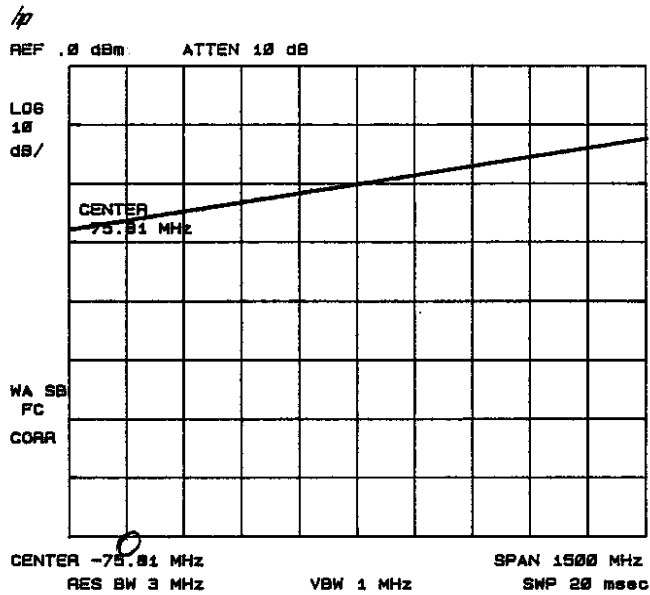

1
 a. Low Frequency. Output of A7Q1 is linear.

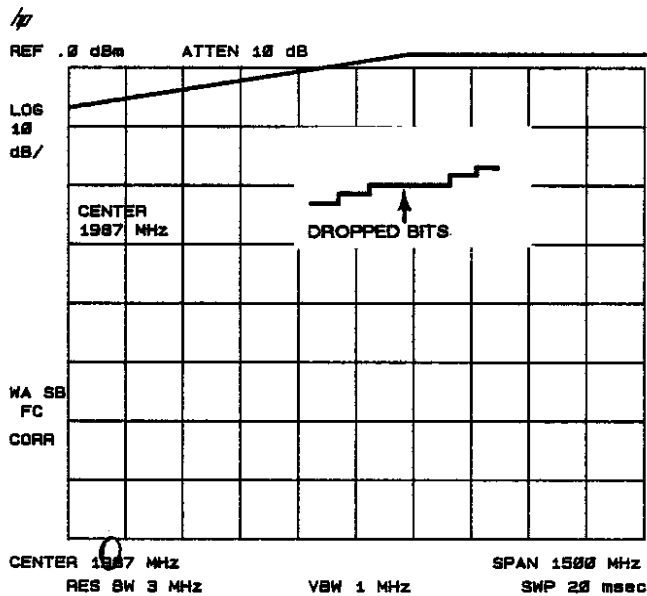


2
 b. High Frequency. Output of A7Q1 is in saturation.

Emitter of A7Q1, signal MC_DVR, in main coil driver, block D of Figure 5-10

Assembly Descriptions

[MAIN COIL DR] Routine (continued)

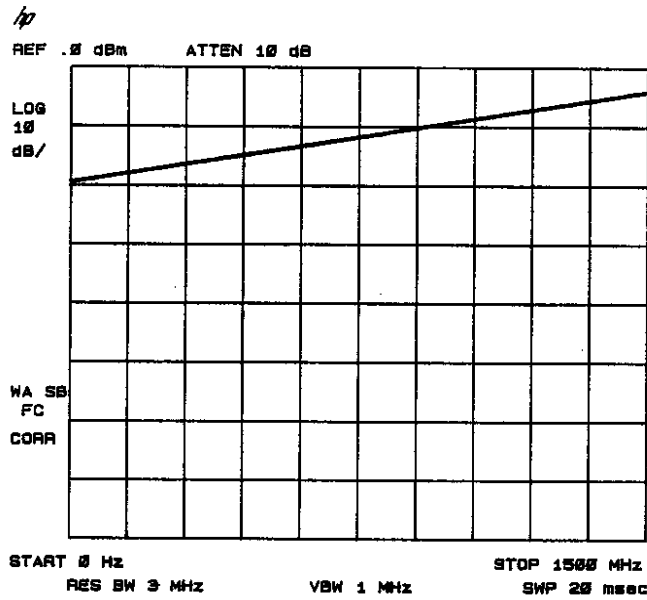


3


c. *Nominal output of A7Q1 after running [CAL FREQ] & [CAL AMPTD] routines.*

Emitter of A7Q1, signal MC_DVR, in main coil driver, block D of Figure 5-1 (continued)

[FM COIL DRIVE] Routine

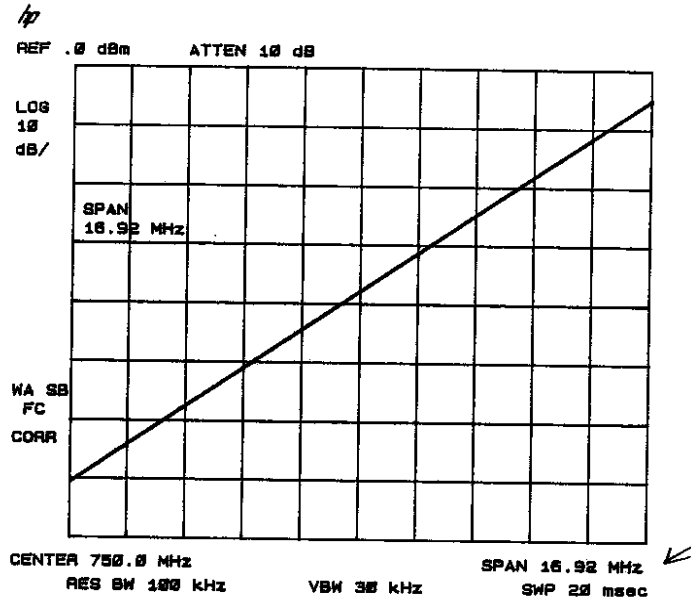

a. At -17 MHz, just before drive switches to main coil drive.

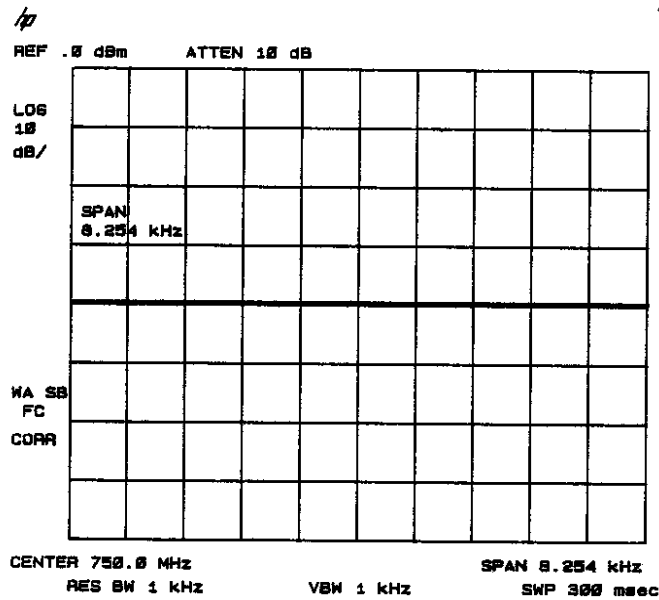


b. For lower frequencies, drive is essentially zero volts with no noticeable change on CRT down to 1-kHz span.


Output of A7U30, signal FM_DVR, in FM coil driver, block J of Figure 5-10

Assembly Descriptions

[MAIN SPAN] Routine

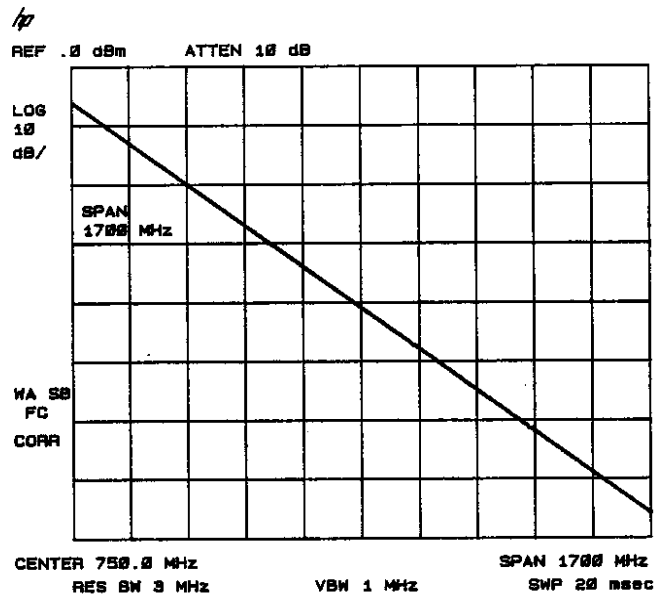

- a. At maximum span, press [MAIN SPAN] and **SPAN** and turn RPG to maximum. Active area of CRT should display "SPAN 1700 MHz."

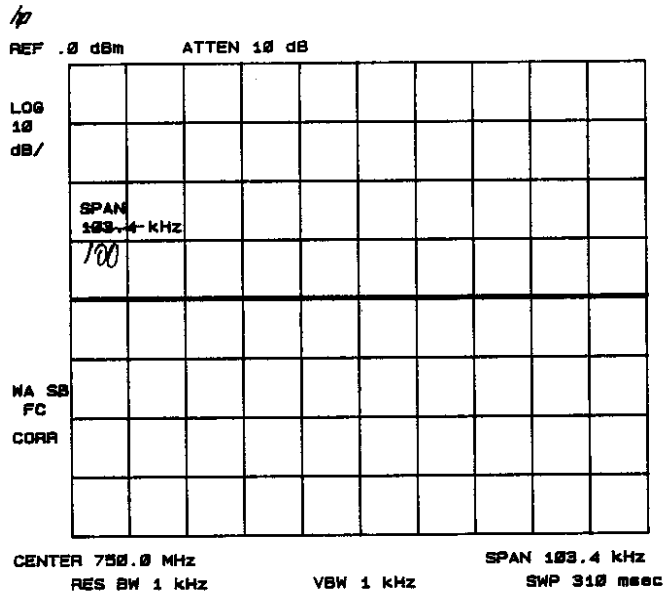


- b. At ± 0.1 kHz
100 SPAN

Output of A7U23, signal MC_SPAN, Block E of Figure 5-10

[MAIN SPAN] Routine (continued)

3

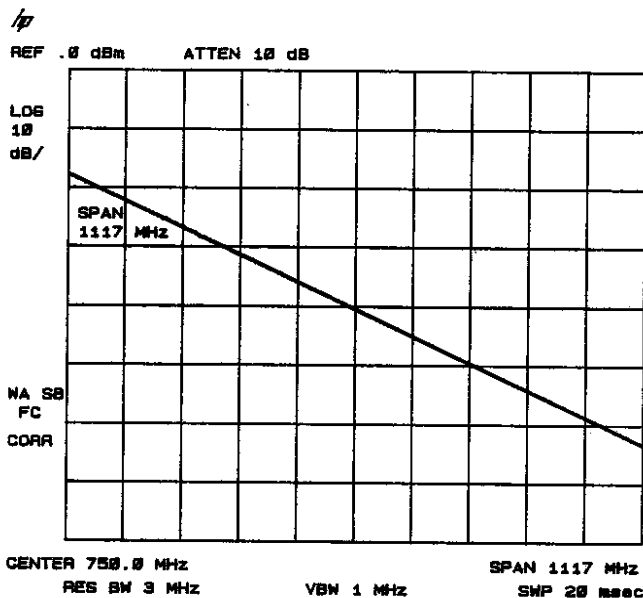


c. At 1117 MHz. SPAN


Output of A7U23, signal MC_SPAN, block E. of Figure 5-10 (continued)

Assembly Descriptions

[FM SPAN] Routine

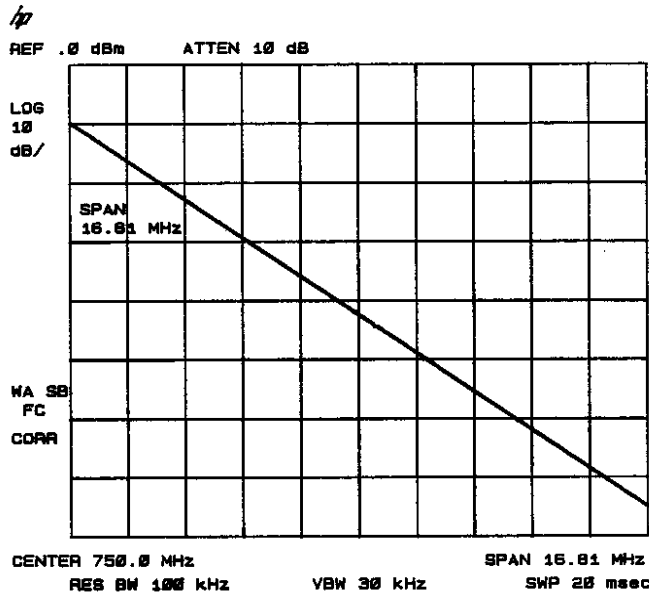

a. At 16.7 MHz, just before switching to main coil span.

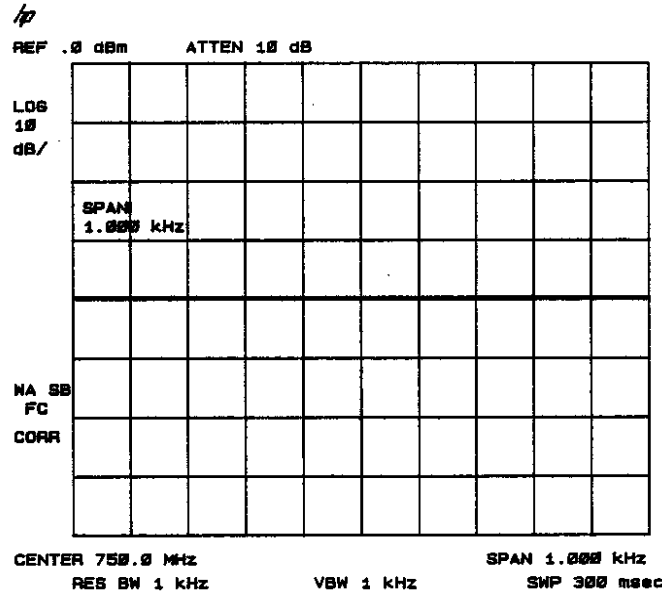


b. At 1 kHz


Output of A7U22, signal FM_SPAN, block G of Figure 5-10

From 1 kHz to 17 MHz the output should be continuously variable. At frequencies greater than 17 MHz, the output of A7U22 goes to zero (displayed as flat line at center of CRT) and the drive switches to A7U23, the main span driver.

[X FINE TUNE DAC] Routine

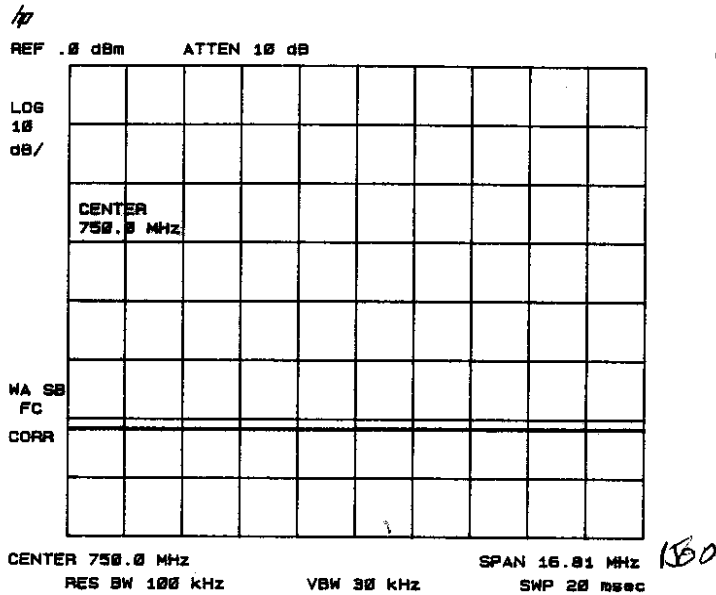

- a. After pressing
[DETECTOR]
[ANALYZER TEST]
[MORE]
then pressing
[X FINE TUNE DAC]
and
[FREQUENCY].
Turn the RPG to vary
DAC output (A7U17
output).

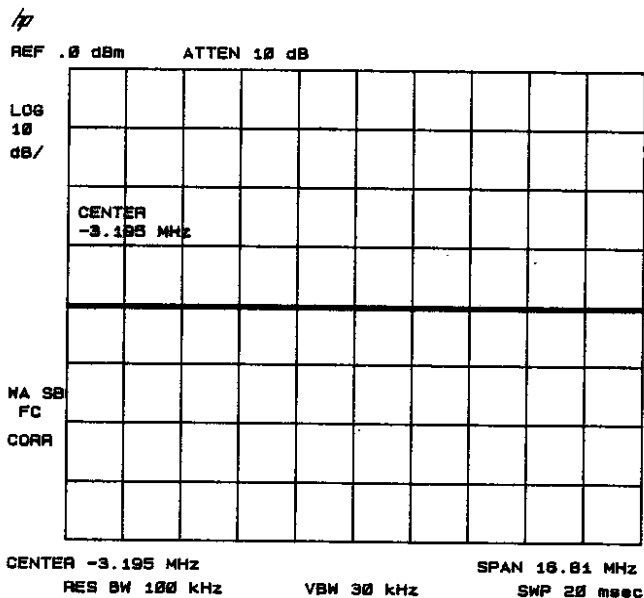


- 2
b. At minimum frequency
(-0V). RPG turned CCW

Output of A7U17, SIGNAL XFTUNE, Block F in Figure 5-10

Assembly Descriptions


[X FINE TUNE DAC] Routine (continued)

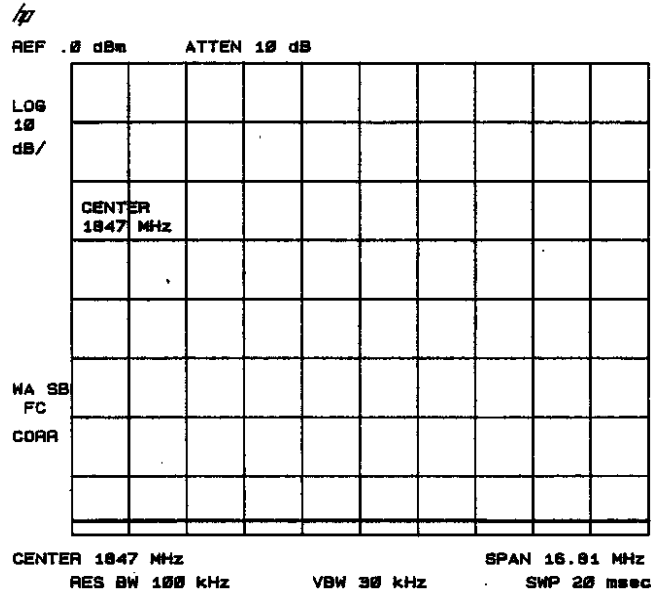

c. At maximum frequency (-10V)
 RPS CW


Output of A7U17, signal XFTUNE, block F in Figure 5-10 (continued)

[BINARY SPAN] Routine

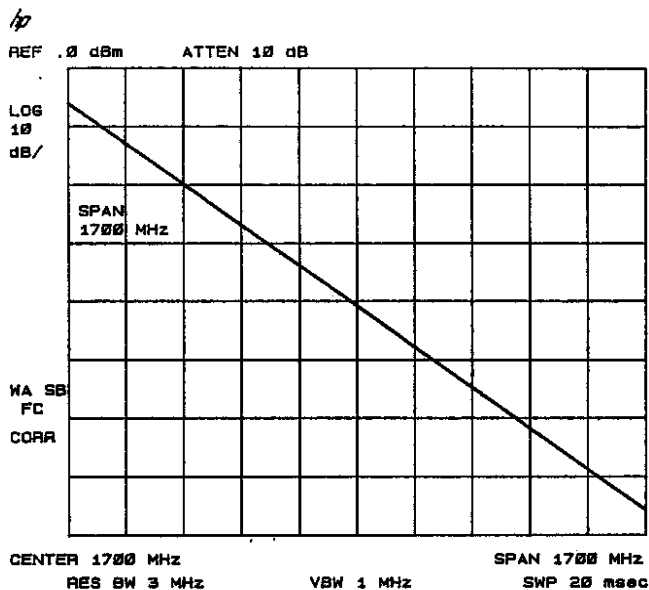

a. At minimum span of 1700 MHz. Rotate RPG CCW after pressing **[SPAN]** to show change in output.

THE LINE ROTATES THROUGH THE DAC SWITCH POINTS (4 TIMES) AS THE ANALYZER IS TUNED DOWN IN SPAN. THE SWITCH POINTS ARE 17 MHz, 1.7 MHz, AND 170 kHz.

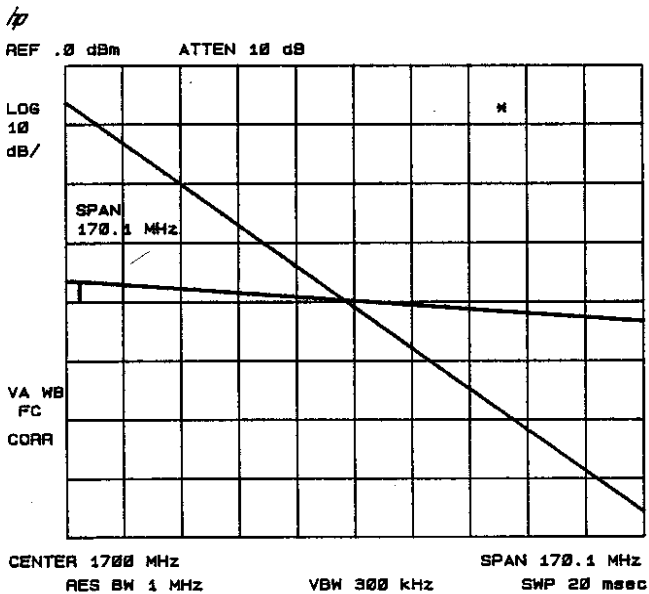


b. Binary span DAC rotating through first switch points. Line rotates as shown as RPG is rotated.

Output of A7U18, signal BIN_SPAN, Block F of Figure 5-10

Assembly Descriptions

[BINARY SPAN] Routine (continued)

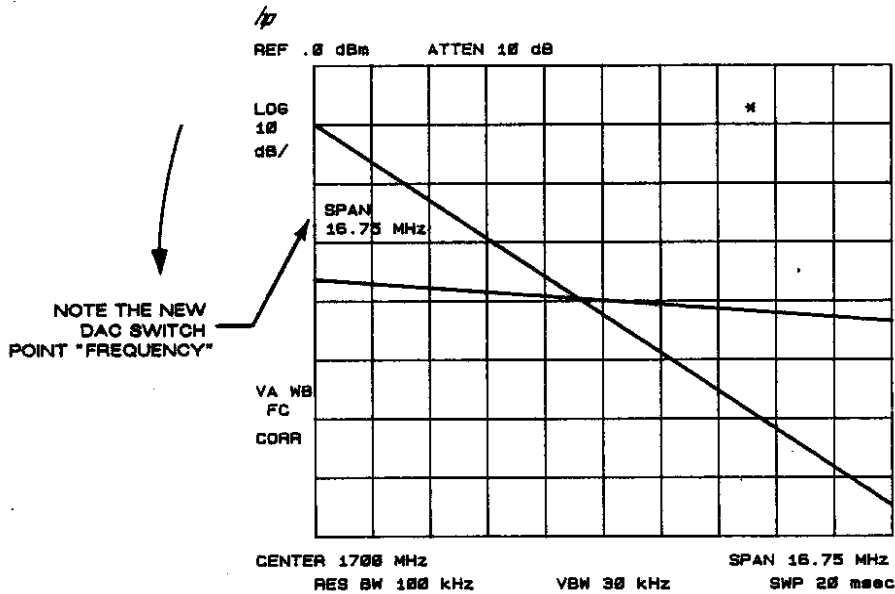

c. Binary span DAC rotating through remaining switch points. Line rotates as RPG is rotated.

Output of A7U18, signal BIN_SPAN, Block F of Figure 5-10

The binary span DAC is divided into five decade ranges. The processor controls multiplexers U31A and U32B. The multiplexers switch the output of A7U18 across resistors R5, R6, and R7 to set up these ranges:

FM Coil Spans

- 1 kHz to 170 kHz
- 170 kHz to 1.7 MHz
- 1.7 MHz to 17 MHz


Main Coil Spans > 17 MHS

- 17 MHz to 170 MHz
- 170 MHz to 1700 MHz

The analyzer also has a zero span where the YIG oscillator is not swept, and the analyzer can be manually tuned to any frequency in the 10 kHz to 1500 MHz range by turning the RPG.

[SWEEP RAMP] Routine

Press PRCSET

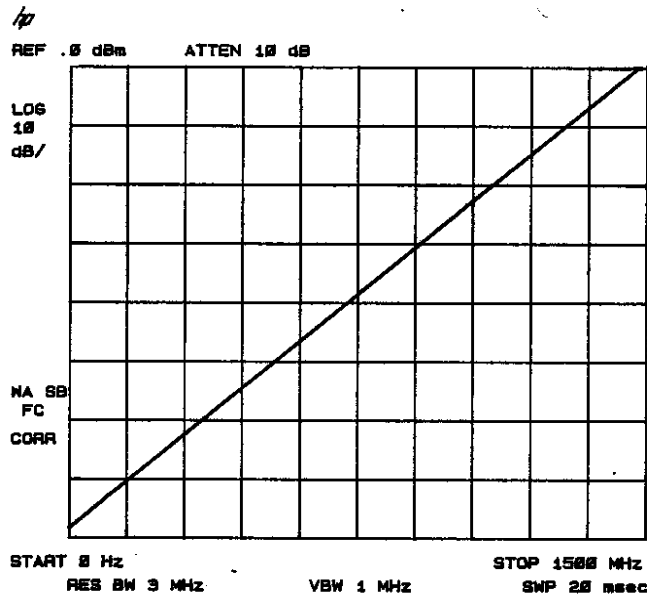


Output is shown after running [CAL FREQ] and [CAL AMPTD] routines and resetting the analyzer. Ramp goes from -10V to +10V.


Output of A7U20, signal SWP_RMP, block I of Figure 5-10

Assembly Descriptions

[SWEEP TIME DAC] Routine

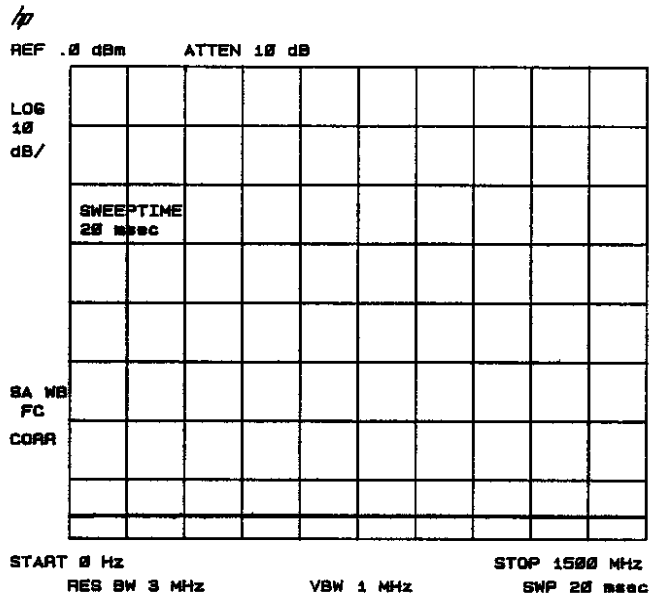


a. For sweep range = 20 ms.

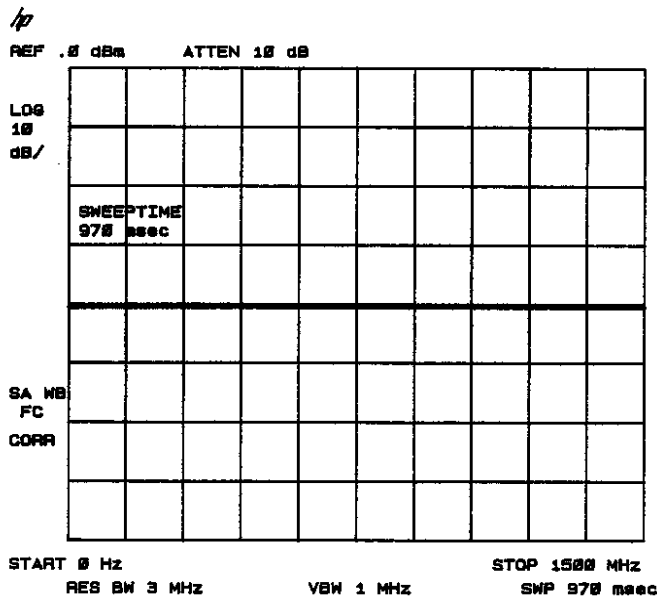


b. For sweep range = 970 ms.

Output of A7U19, signal SUP_DAC, block H of Figure 5-10

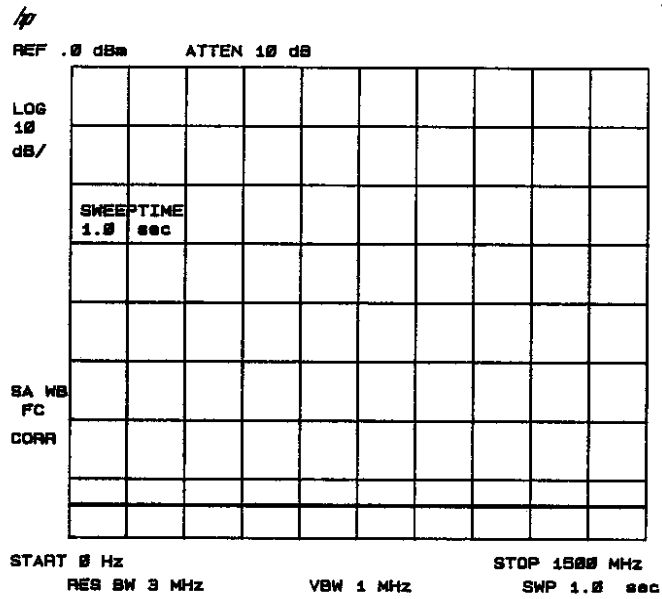

c. For sweep range = 1.0s.

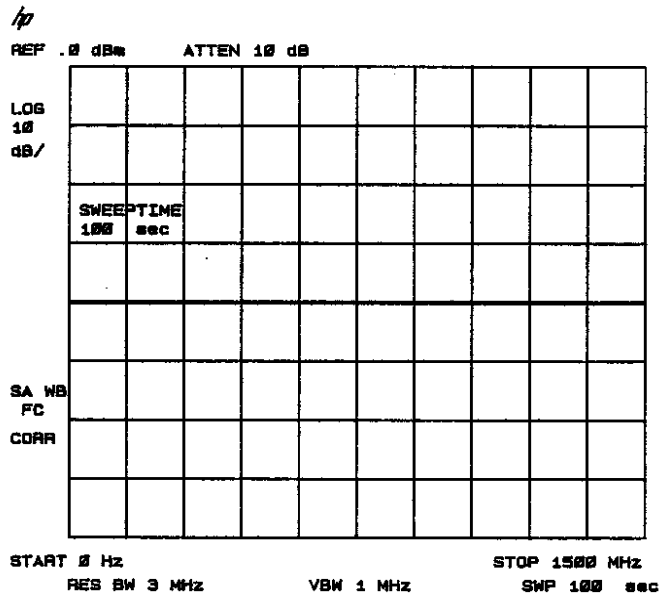


d. For sweep range = 100s.


Output of A7U19, signal SWP_DAC, block H of Figure 5-10 (continued)

Assembly Descriptions

[FINE TUNE DAC] Routine

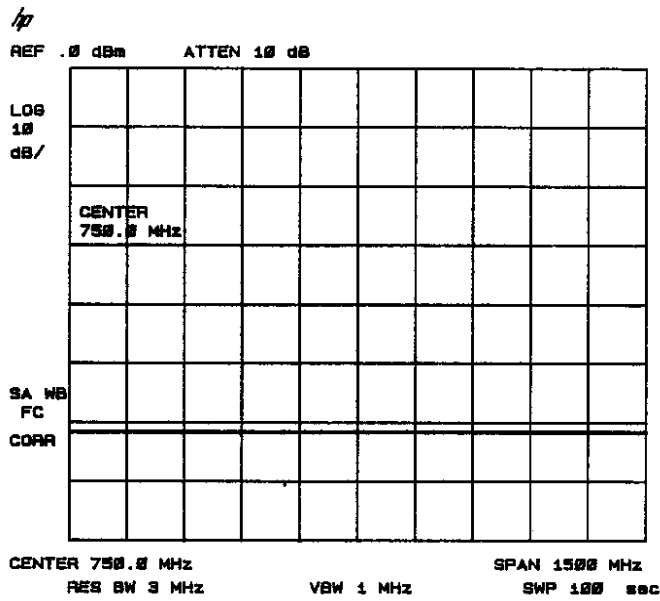


- a. After presetting the analyzer and pressing [FINE TUNE DAC] and **FREQUENCY**

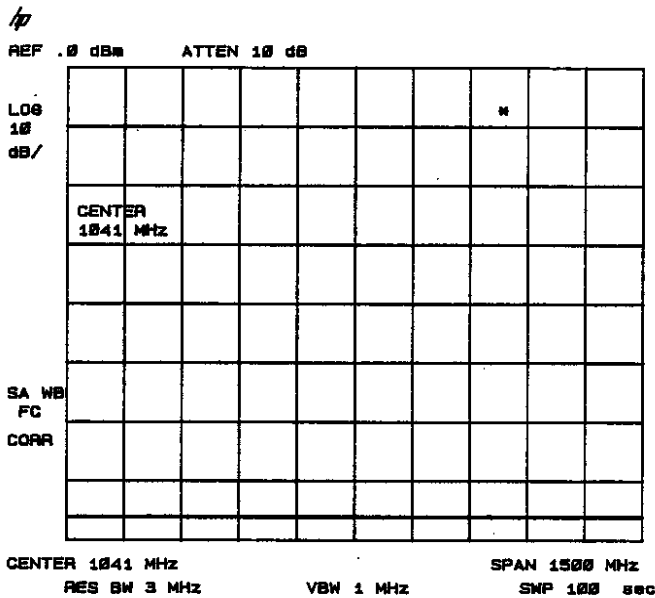

- b. At 1041 MHz. Notice when turning the RPG, the output jumps from higher to lower levels at each end of DAC range. This is due to overlap of 4 bits of each of the 12-bit DACs (A7U15 and A7U16) to A7U12, the extra fine tune DAC.

Output of A7U25, signal FTUNE, block A of Figure 5-10

[FINE TUNE DAC] Routine (continued)

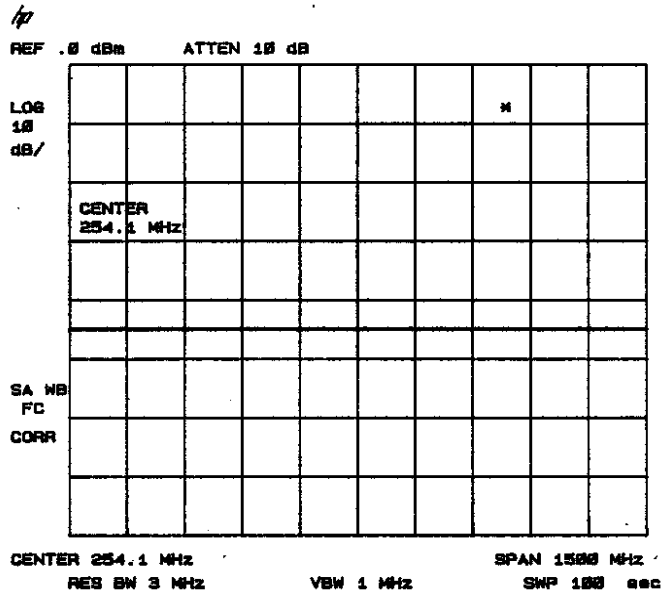


3

c. At 254.1 MHz. The output jumps level at this end of range as shown by B.


Output of A7U25, signal FTUNE, block A of Figure 5-10 (continued)

Assembly Descriptions

[COARS TUNE DAC] Routine

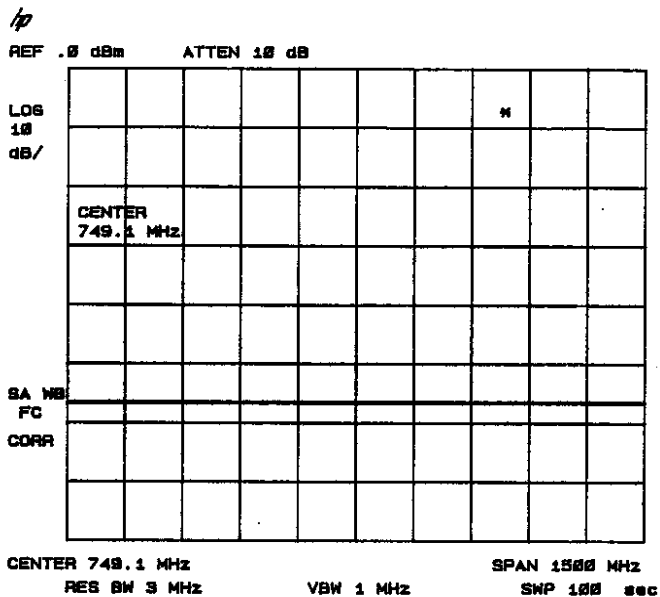


a. After presetting analyzer and pressing [COARSE TUNE DAC] and **FREQUENCY**

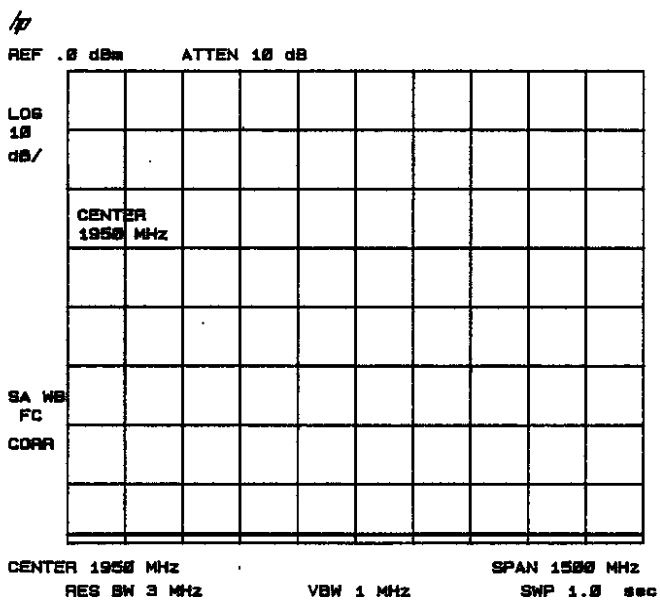

b. At maximum frequency (--10V).

Output of A7U21, signal CTUNE, block A of Figure 5-10

[COARSE TUNE DAC] Routine (continued)

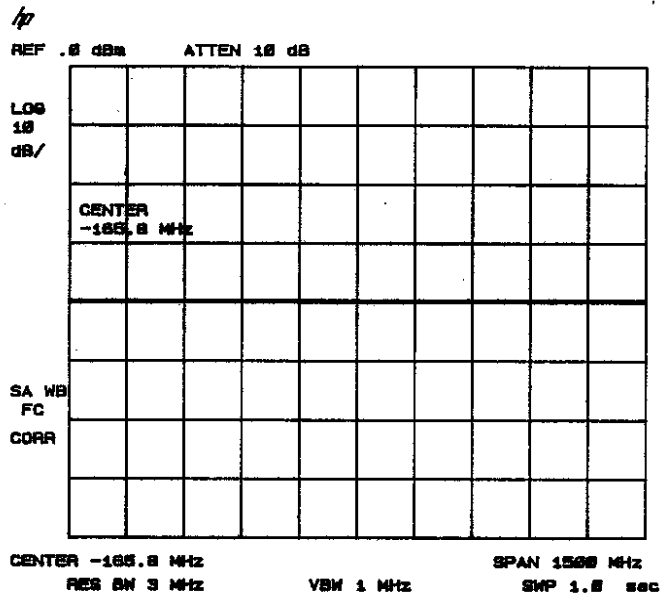


c. At minimum frequency (-0V).

Output of A7U21, signal CTUNE, block A of Figure 5-10 (continued)


Assembly Descriptions

[+10V REF DETECTOR] Routine

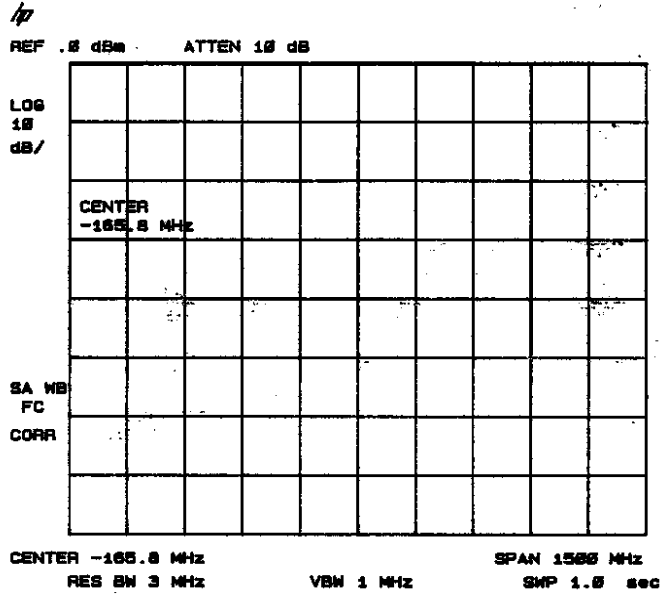

See A16 Blk M
Checking I 10V REF Blk B

[-10V REF DETECTOR] Routine

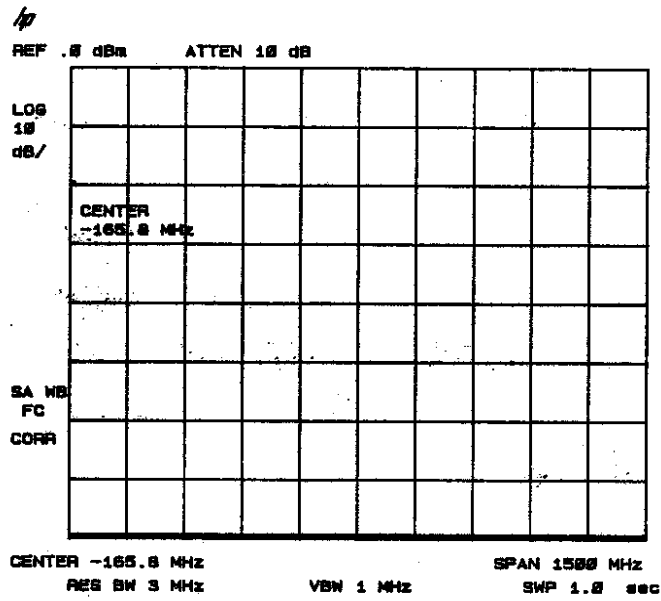

Note: The remaining softkeys of this menu, AUX A, AUX B, and DROOP, are not used at this time.

Assembly Descriptions

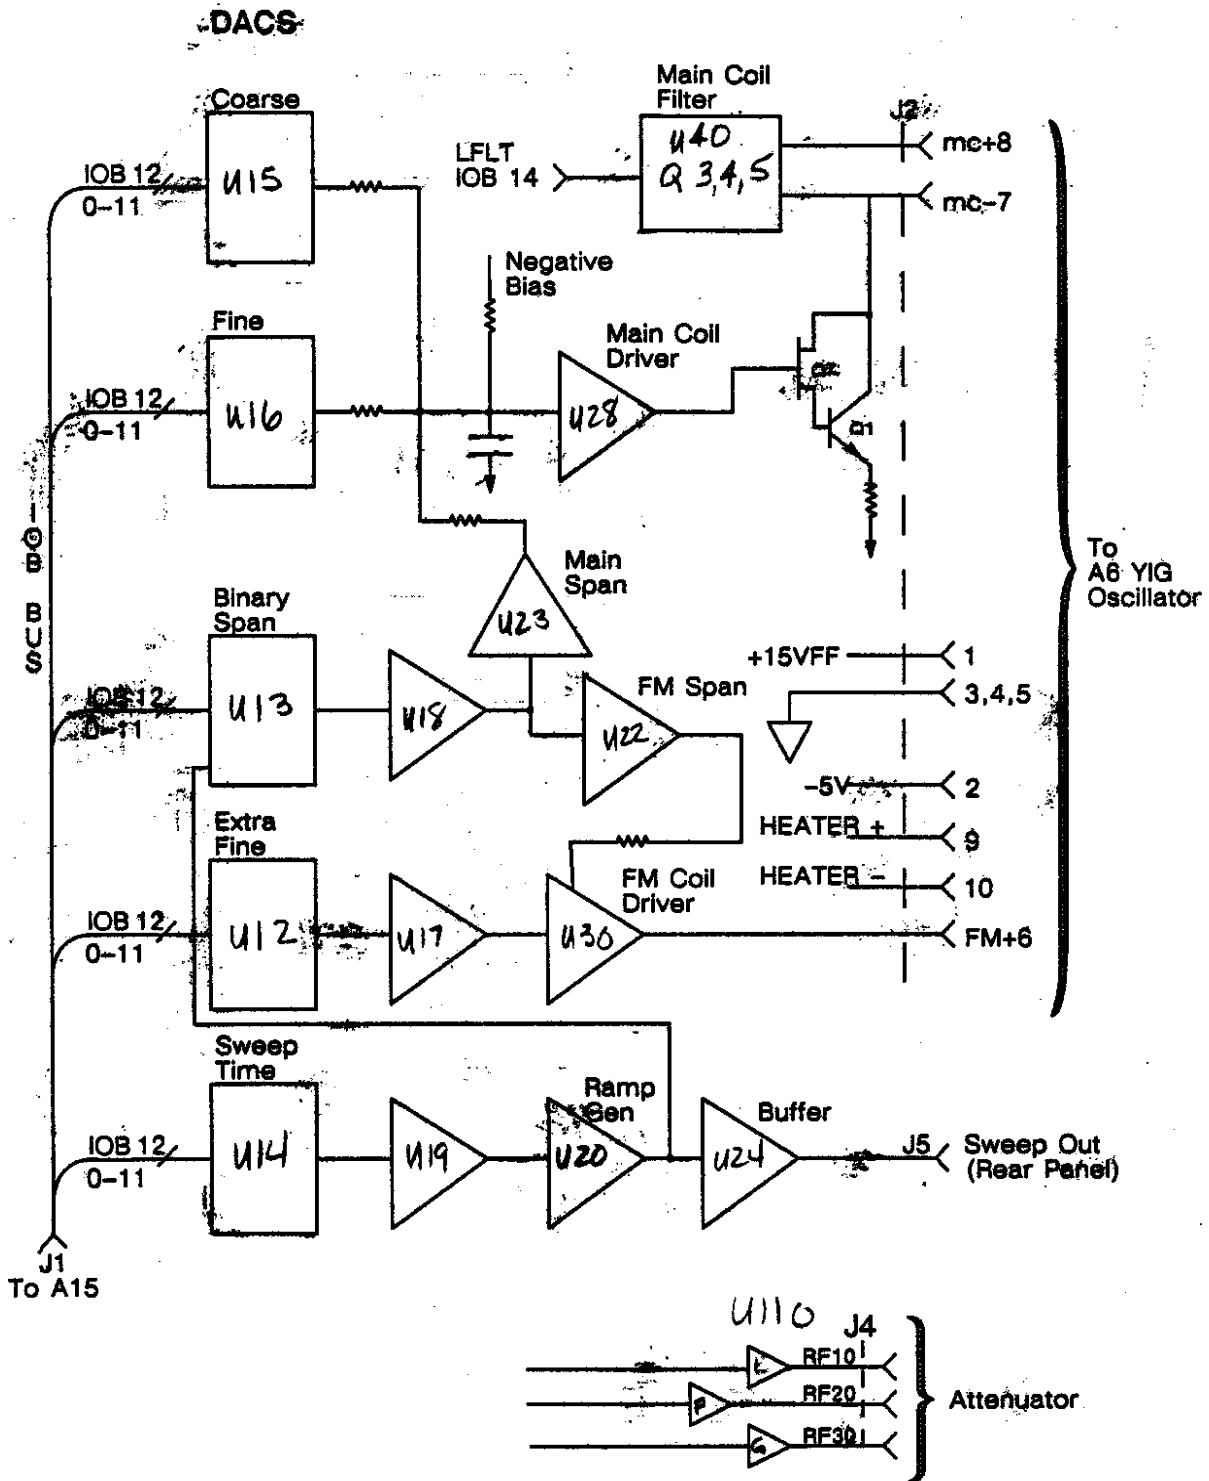


Figure 5-8. Analog Interface (A7) Block Diagram

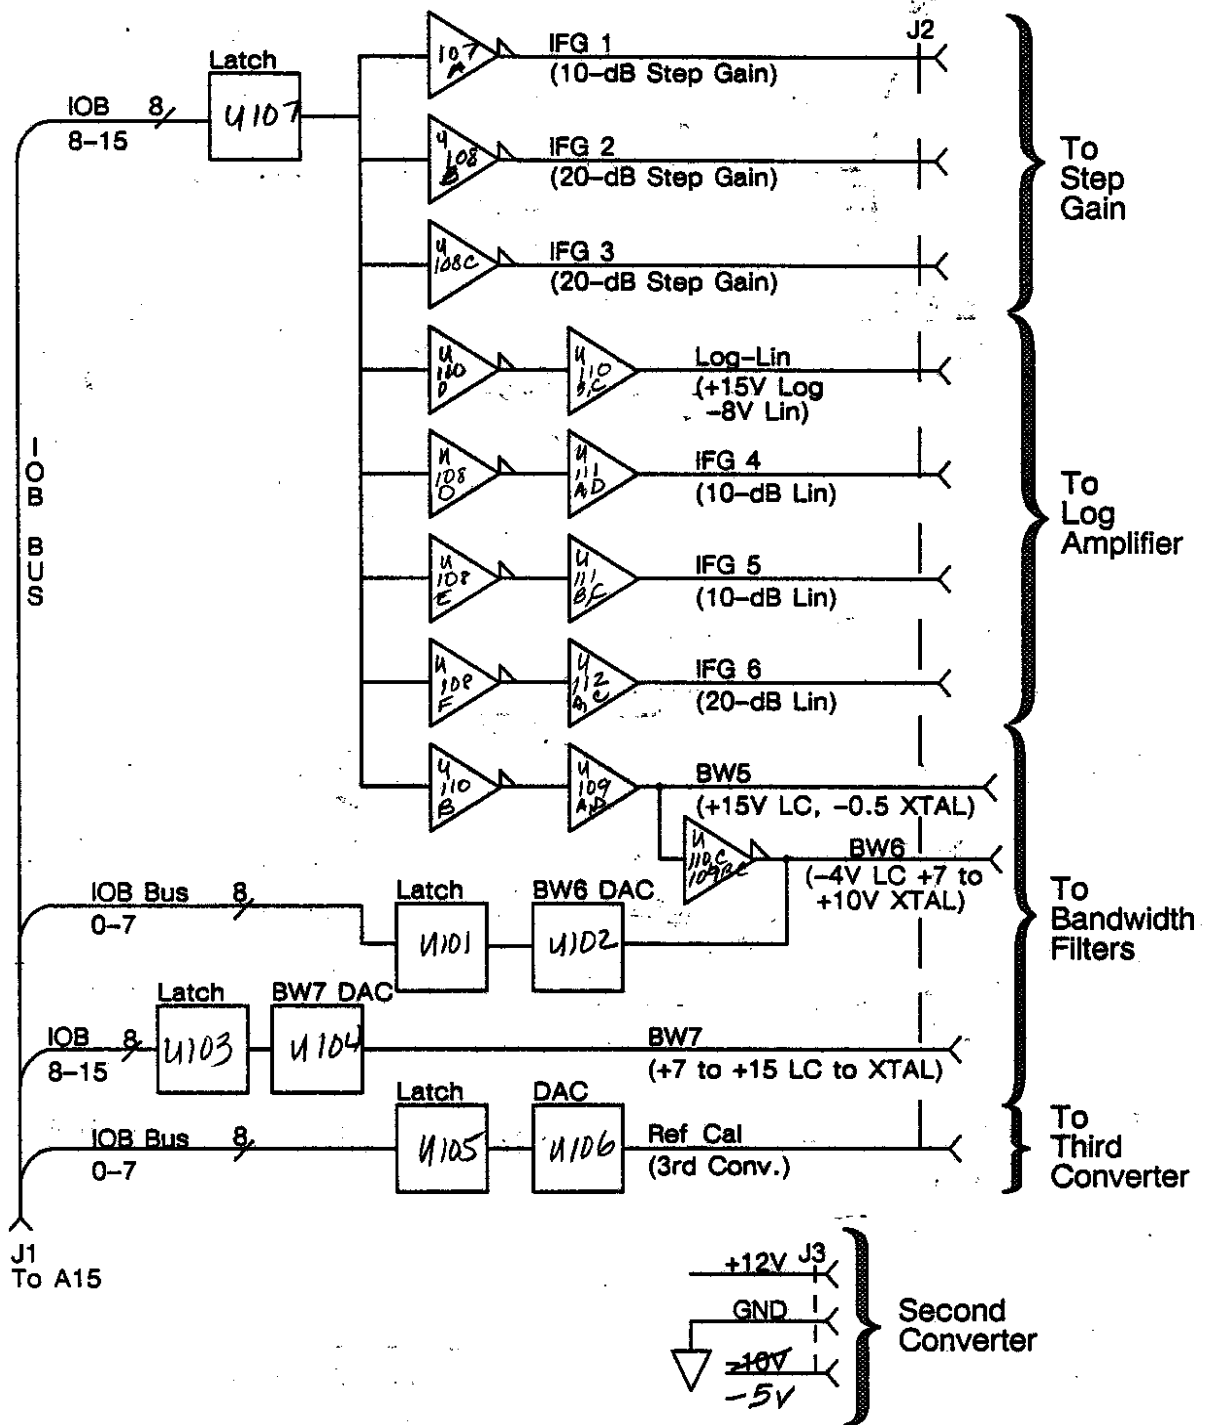


Figure 5-8. Analog Interface (A7) Block Diagram (continued)

Assembly Descriptions

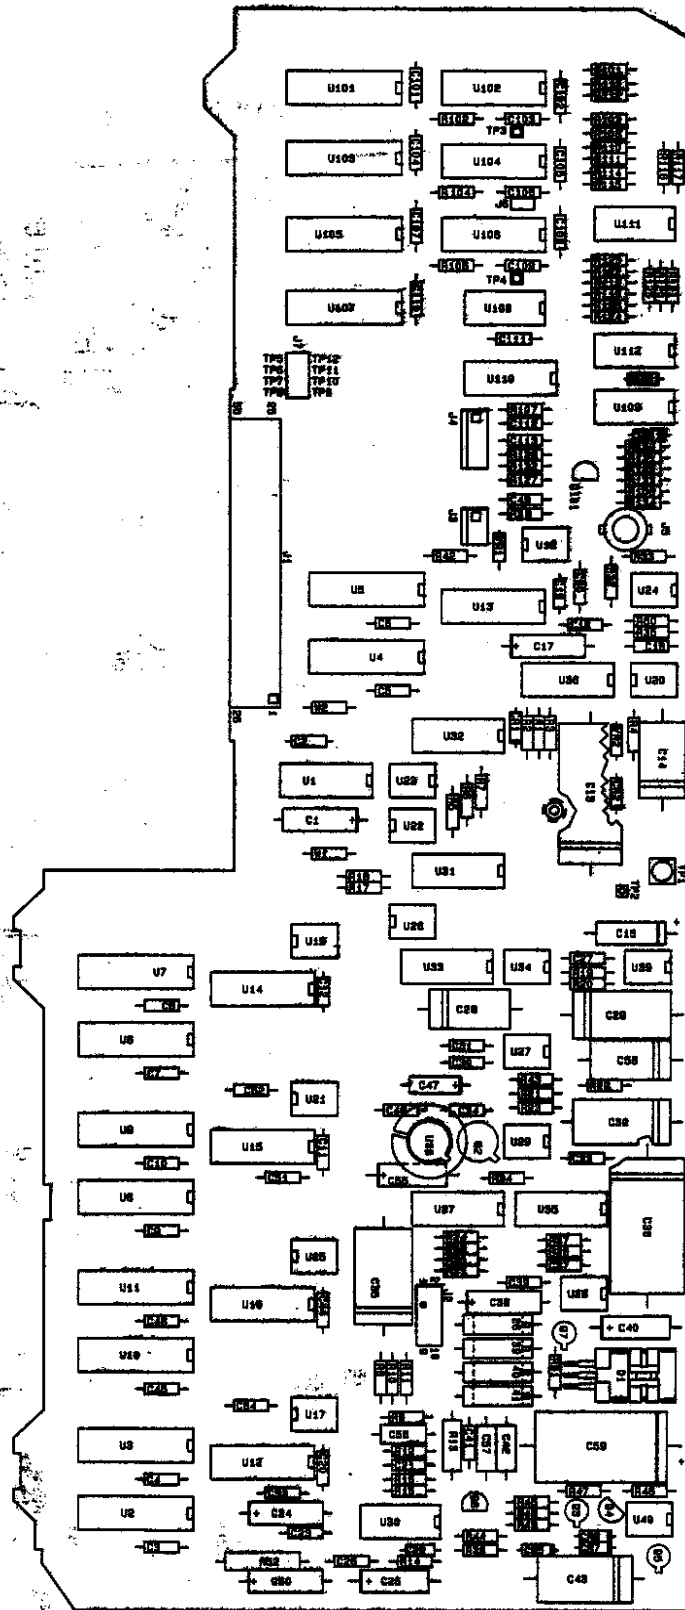


Figure 5-9. Analog Interface (A7) Component Locations

Third Converter Assembly A9

The Third Converter Assembly contains the third mixer/filter, the Third Local Oscillator buffer amplifier, a buffer amplifier, and a CAL amplifier (Figure 5-11). The double-balanced third mixer produces sum and difference images, as do other mixers, but rejects input and LO frequencies. This simplifies the subsequent filtering. The third LO, fixed at 299.9 MHz, when mixed with 321.3-MHz second IF, produces a difference frequency of 21.4 MHz, the final IF signal. The final IF signal passes through a matching filter to the buffer amplifier. The CAL amplifier provides reference level and frequency response compensation. The calibrated gain of the IF amplifier is set up by the REF_CAL current received from the Analog Interface Assembly.

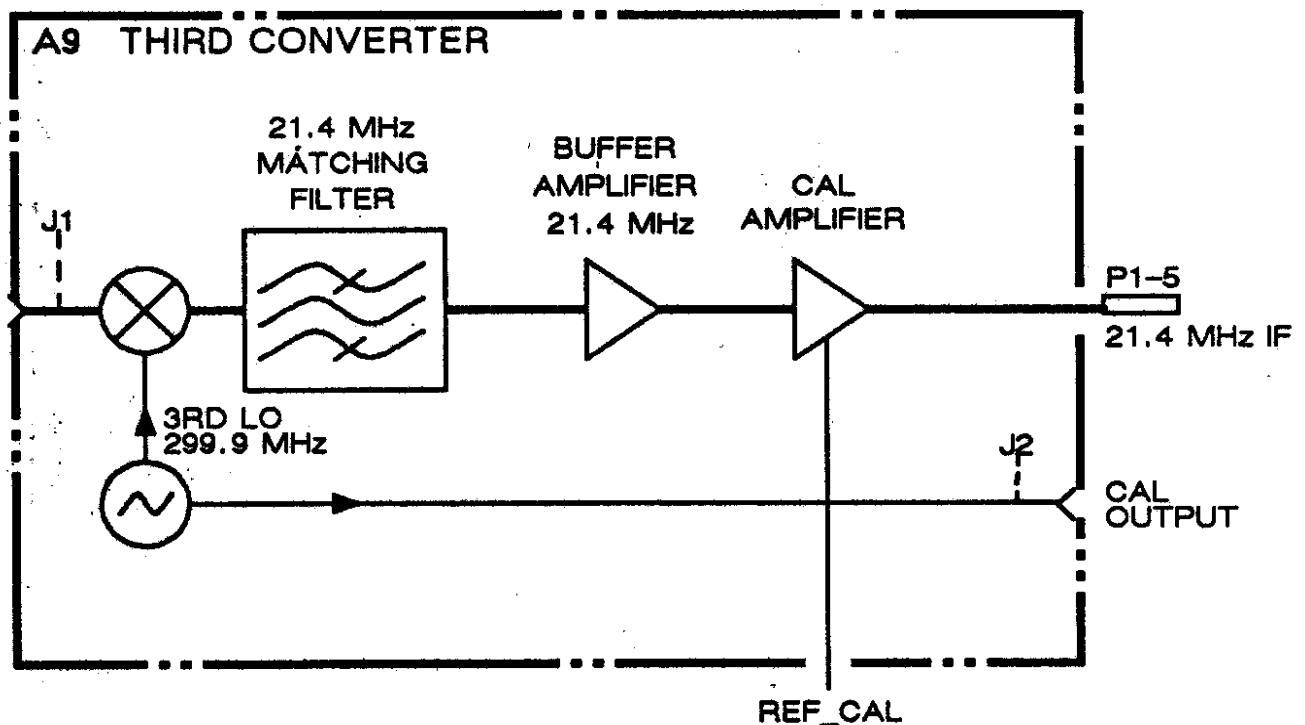


Figure 5-11. Third Converter Block Diagram

Detailed Description

The 321.3-MHz second IF signal from A10 is mixed with the 299.9-MHz signal from the Third Local Oscillator in balanced mixer A9U3. The output from the mixer is the difference frequency, 21.4 MHz, which is applied to the matching filter. The matching filter is a 21.4-MHz bandpass filter that also acts as an inter-stage impedance matching device.

Assembly Descriptions

The signal is amplified by the 21.4-MHz buffer and CAL amplifiers and coupled to the First Bandwidth Filter Assembly. The REF_CAL signal from A7 DAC U106 is controlled by the processor to compensate for frequency response flatness and 1-dB gain steps for reference level control. The 21.4-MHz third IF output signal is coupled to the input of the First Bandwidth Filter. The 299.9-MHz oscillator also provides the front panel CAL OUTPUT 299.9-MHz -20 dBm signal. It is sometimes necessary to select a different value for R9 to provide the -20 dBm CAL OUTPUT level while maintaining the proper input level to the balanced mixer.

Third Local Oscillator (A)

The Third Local Oscillator is a modified Colpitts circuit with a 299.9-MHz surface acoustic wave resonator (SAWR) A9Y1 in the positive feedback path to provide increased frequency stability. Inductor A9L3, connected in parallel with the SAWR, tunes out the SAWR shunt capacitance. 14

The oscillator-tuned circuit consists of capacitors A9C2, C3, and inductors L1 and L2. This tuned circuit ensures that the oscillator oscillates only on the proper overtone of the SAWR. Although A9L1 is called the LO FREQ adjustment, it is used to adjust for maximum local oscillator output power and has only a slight effect on the output frequency.

Inductor A9L3 provides a dc path for the base bias of buffer amplifier A9Q2. Diodes A9CR1 and CR2 provide temperature compensation for the 299.9-MHz oscillator and indirectly stabilize the CAL OUTPUT level. Power output from the oscillator through L2 transforms the output to approximately 50 ohms at a level of 0 dBm.

The output level of the circuit is controlled by CALIBRATOR LEVEL adjustment A9R4, which sets the emitter current of A9Q1, and allows adjustment for a -20 dBm, 299.9-MHz front-panel CAL OUTPUT level. It is sometimes necessary to select a different value for A9R3 to provide the proper Third Local Oscillator output level.

Buffer amplifier A9Q2 provides isolation for the 299.9-MHz oscillator and provides about 10 dB of power gain to the L port of balanced mixer U3. The buffer amplifier also provides the proper output level to the front-panel CAL OUTPUT by selecting A9R9 for a given balanced mixer input.

Balanced Mixer (Third Mixer) (B)

The Third Local Oscillator 299.9-MHz input to the L port of the balanced mixer is approximately +10 dBm. The level of the 321.3-MHz second IF signal inputs to the R port of the mixer is approximately -12 dBm or less. The third mixer output is the 21.4-MHz difference frequency, produced by heterodyning the 321.3-MHz IF and the 299.9-MHz LO. The third mixer has a conversion loss of about 7 dB.

Matching Filter

The output of the balanced mixer is applied to the matching filter, which consists of A9L5, L6, L7, C7, C8, C9, C10, R11, R12, R13, and R14. The matching filter is a 21.4-MHz bandpass filter that also serves as an impedance matching network. The circuit raises the low (-10 ohms) input impedance of the 21.4-MHz amplifier to match the higher (-50 ohms) output impedance of the balanced mixer.

21.4-MHz Buffer Amplifier (C)

The 21.4-MHz buffer amplifier consists of A9Q4 in a common-emitter configuration and A9Q3 for feedback and bias control. The output of the 21.4-MHz amplifier is passed to A9Q5 CAL amplifier.

CAL AMP (D)

The gain of A9Q5 CAL AMP is controlled by DAC A7U106 ~~to compensate for frequency response flatness.~~ A9Q5 also provides the 1-dB reference-level gain changes. The REF_CAL line from the Analog Interface Assembly changes the resistance of diode A9CR3 connected across R22 (ac signal path only, not dc bias). The change in resistance of A9CR3 changes the gain as needed of A9Q5. *The gain of a 5 can be varied over 16dB*

Second IF Assembly A10

The Second IF Assembly contains an amplifier and bandpass filter for the second IF (see Figures 5-12 and 5-13). The amplifier provides about 12 dB of fixed gain to the incoming second IF signal. The amplifier output is passed through a 321.3-MHz bandpass filter, which rejects unwanted signals from the IF passband. The resulting signal is routed to the Third Converter Assembly.

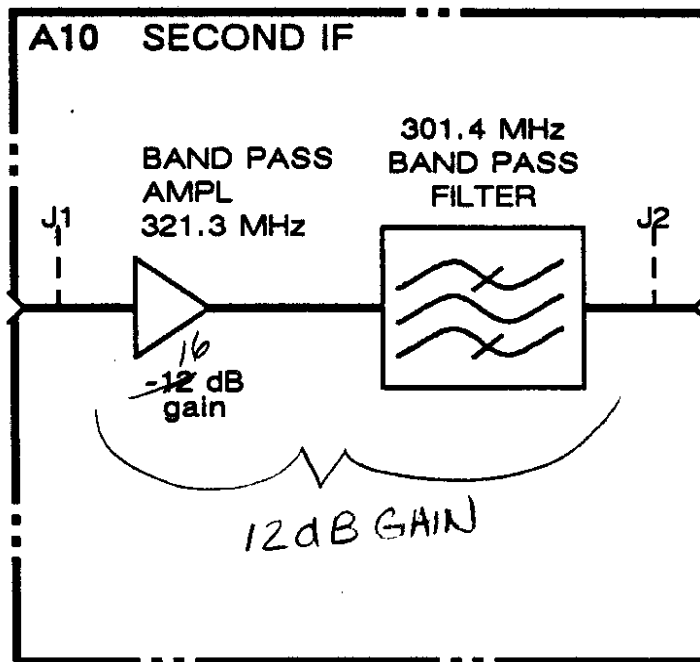


Figure 5-12. Second IF Block Diagram

Detailed Description

The Second IF Assembly contains a bandpass amplifier that provides a gain of approximately 16 dB at 321.3 MHz. It also contains a bandpass filter that provides further rejection of unwanted signals. The bandpass filter has a 3-dB loss, giving the Second IF Assembly a net gain of approximately 13 dB at 321.3 MHz. The 321.3-MHz IF output signal is coupled to the Third Converter Assembly. This signal is the input to the R port of the balanced mixer on the Third Converter Assembly.

Bandpass Amplifier (A)

The bandpass amplifier consists of A10Q2 in a common-emitter configuration, and A10Q1 connected to control the base drive and bias current of A10Q2. Capacitors A10C4, C5, C7, and C10 serve as decoupling for high frequencies. The gain of the bandpass amplifier is set by the high-frequency characteristics of A10Q2, R5, and the small amount of inductance on the emitter connection of Q2. The emitter inductance is used to establish a 50-ohm input impedance and to help stabilize the current gain of A10Q2. Resistor A10R5 is the output load resistance of A10Q2 and establishes an output impedance of about 500 ohms.

Components A10L2, C8, C9 and the collector capacitance (C_c) of Q2 form the collector tank circuit (see Figure 5-14). This tank circuit determines the center frequency of the bandpass amplifier and transforms the 500-ohm output impedance at the collector of A10Q1 down to 50 ohms. The output of the bandpass amplifier goes from A10C9 through a 50-ohm microstrip transmission line etched on the printed circuit board to the bandpass filter. The bandpass amplifier has a gain of about 16 dB from the base of A10Q2 to the 50-ohm output of A10C9.

Bandpass Filter (B)

The output of the bandpass amplifier passes through a 321.3-MHz bandpass filter. The bandpass filter is made up of A10L3, L4, L5, C11, C12, C13, C14 and adjustable piston-type capacitors A10C1, C2, and C3. Capacitors A10C11 and C15 are used to transform the bandpass filter input and output impedance to 50 ohms. Inductors A10L3, L4, and L5 are wound on a common coil form that provides mutual inductance coupling between filter sections. The bandpass filter has an insertion loss of approximately 3 dB and a 3-dB bandwidth of about 12 MHz.

Assembly Descriptions



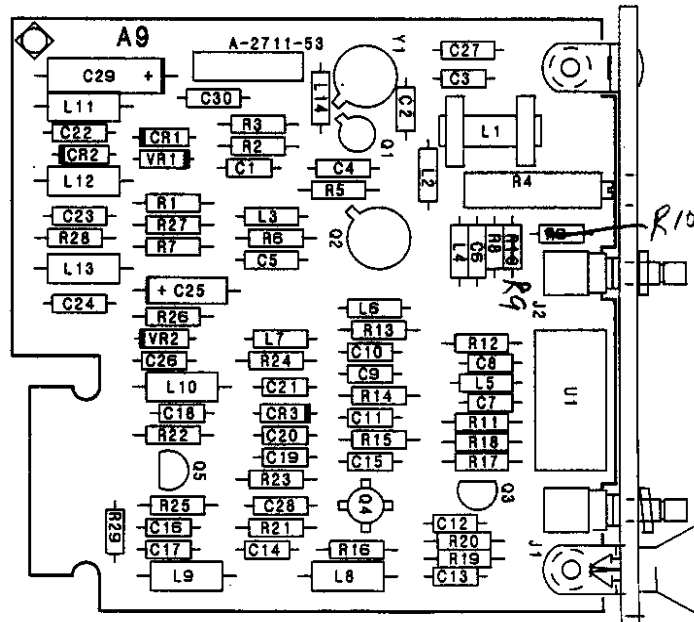


Figure 5-13. Third Converter, Second IF Component Locations

08590-60073

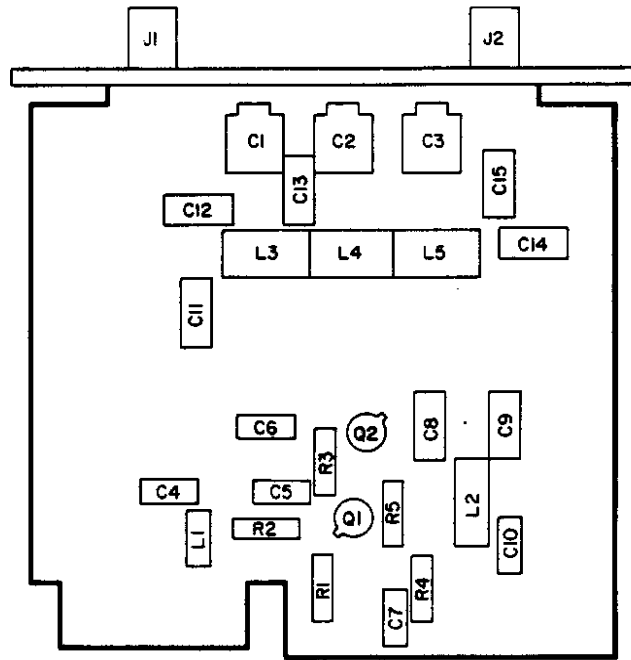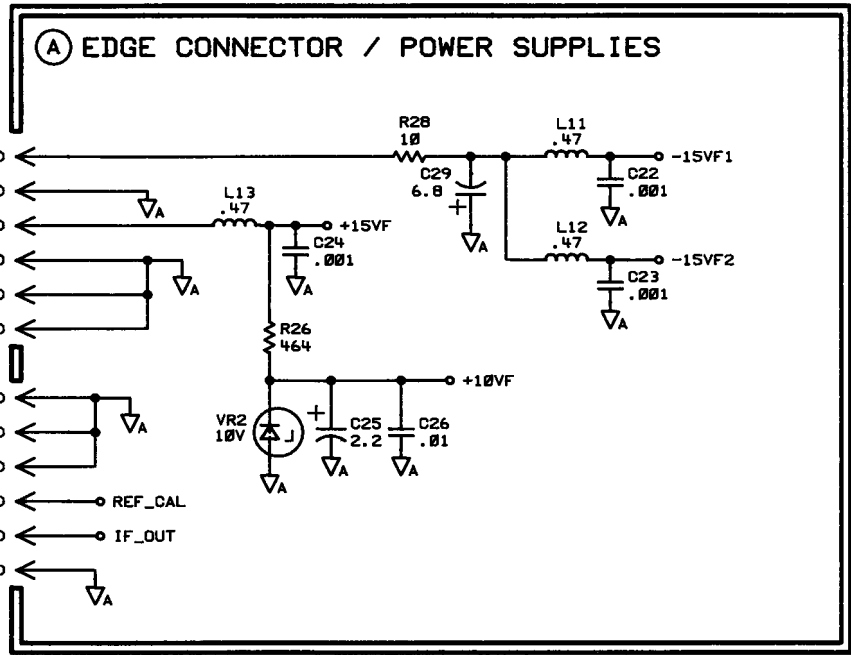

NOTES:

1. REFERENCE DESIGNATORS WITHIN THIS ASSEMBLY ARE ABBREVIATED. PREFIX ABBREVIATION WITH ASSEMBLY NUMBER FOR COMPLETE REFERENCE DESIGNATOR.
2. UNLESS OTHERWISE INDICATED: RESISTANCE IN OHMS (Ω) CAPACITANCE IN MICROFARADS (μF) INDUCTANCE IN MICROHENRIES (μ)
3. MNEMONIC TABLE

| MNEMONIC | DESCRIPTION |
|----------|-----------------------|
| +15VF | +15 VOLT SUPPLY |
| -15VF1 | -15 VOLT SUPPLY #1 |
| -15VF2 | -15 VOLT SUPPLY #2 |
| REF_CAL | REF LEVEL CAL CONTROL |
| IF_OUT | 21.4 MHz IF OUTPUT |

HP PROPRIETARY
THIS DOCUMENT CONTAINS CONFIDENTIAL, PROPRIETARY INFORMATION THAT IS HEWLETT-PACKARD (HP) PROPERTY. DO NOT DISCLOSE TO OR DUPLICATE FOR OTHERS EXCEPT AS AUTHORIZED BY HP.






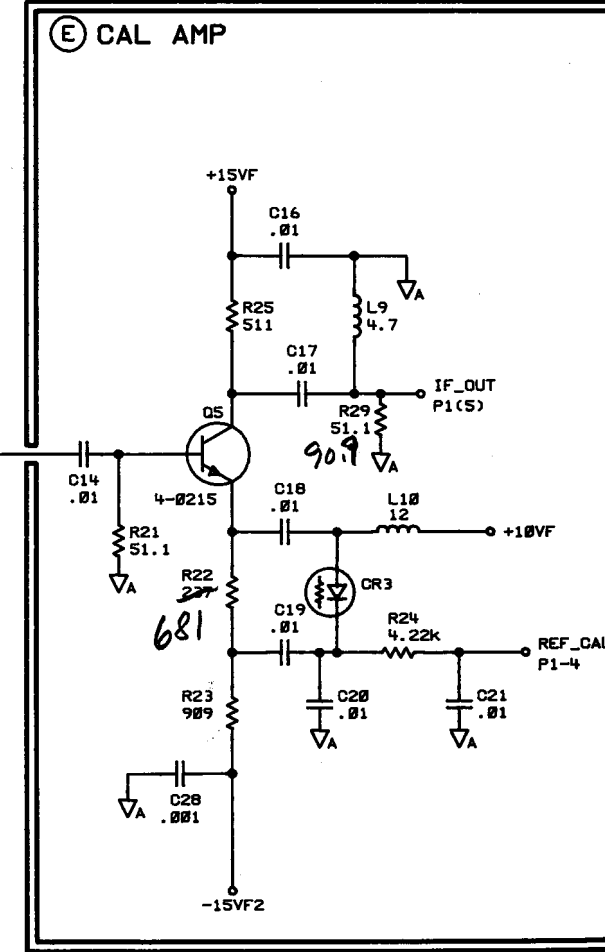


Figure 5-14. Third Converter Assembly (A9), Schematic Diagram


(A) EDGE CONNECTOR / POWER SUPPLIES

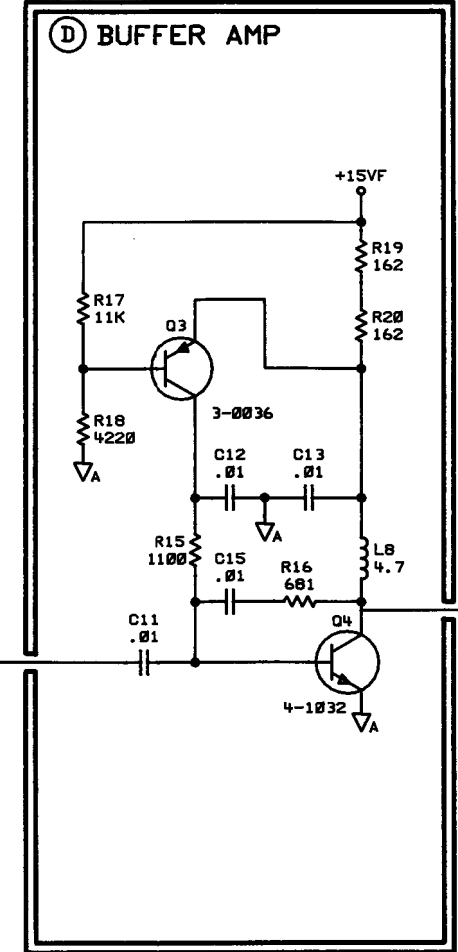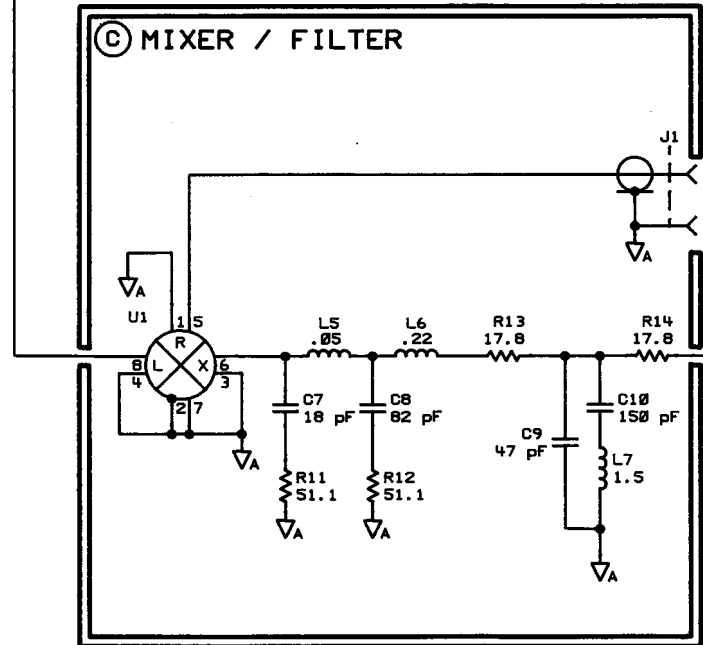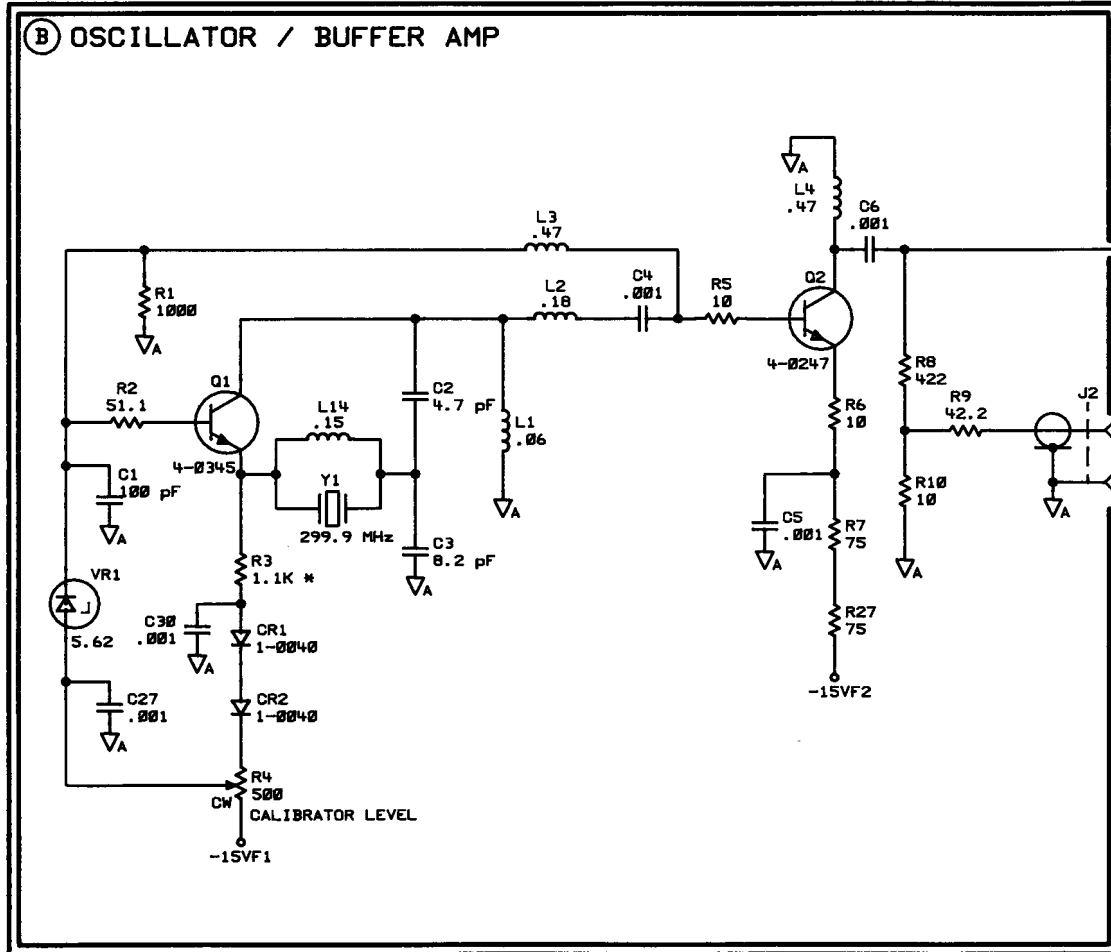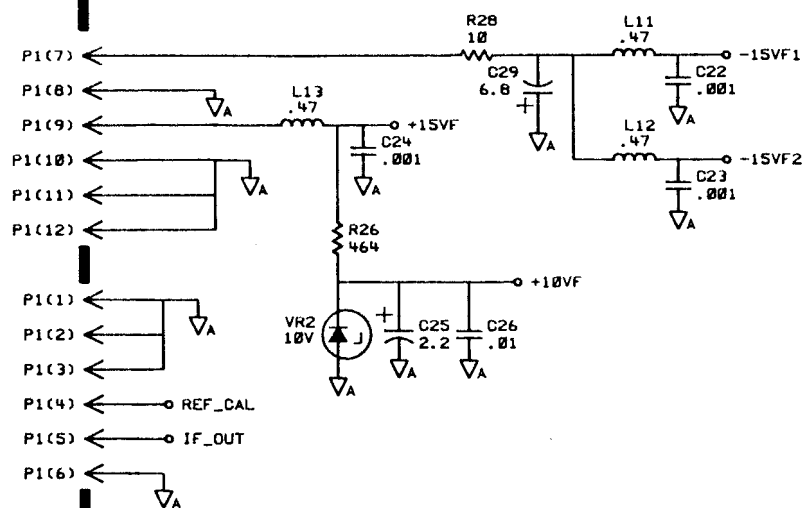


(B) OSCILLATOR / BUFFER AMP

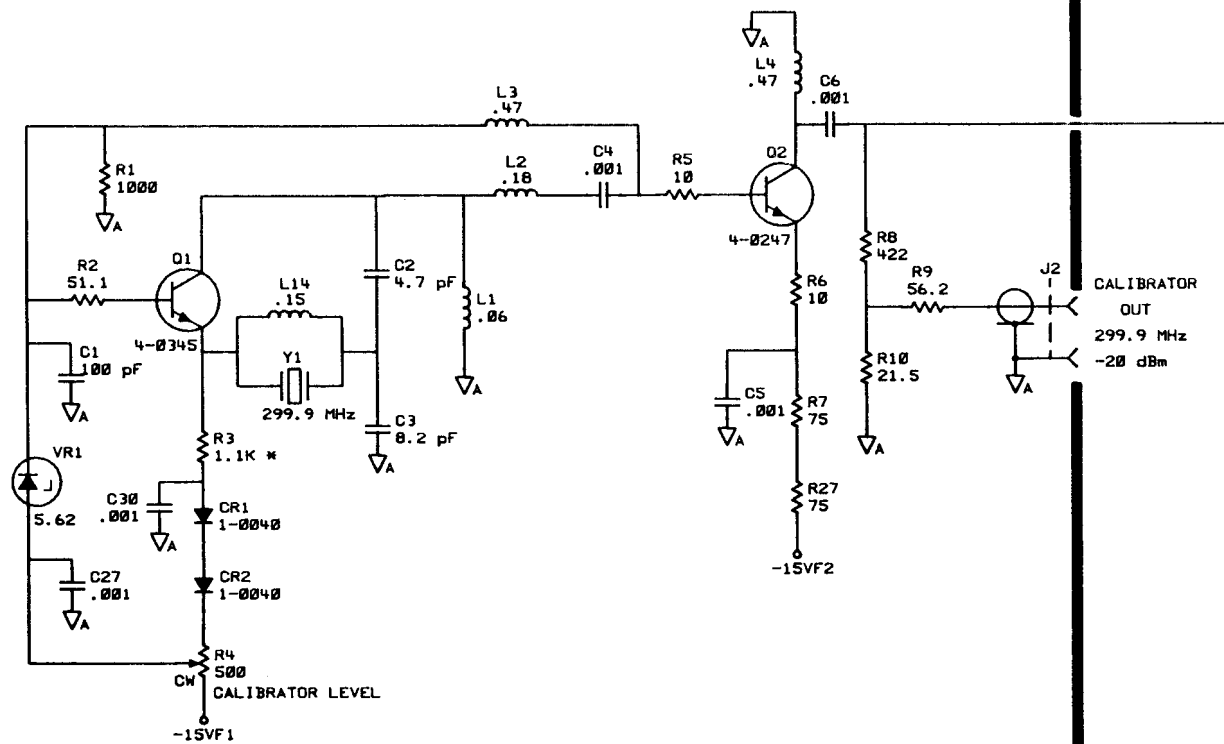


(C) MIXER / FILTER

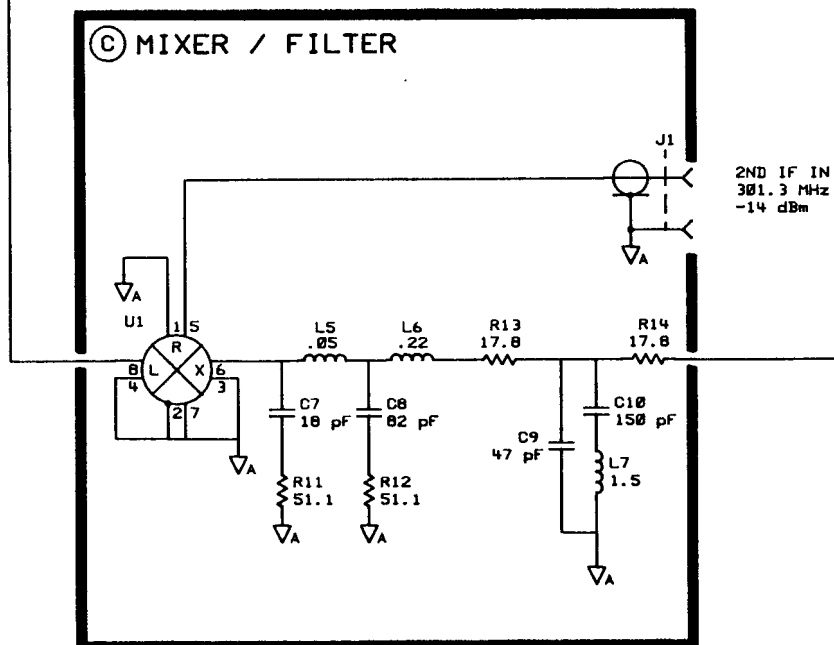

(D) BUFFER AMP


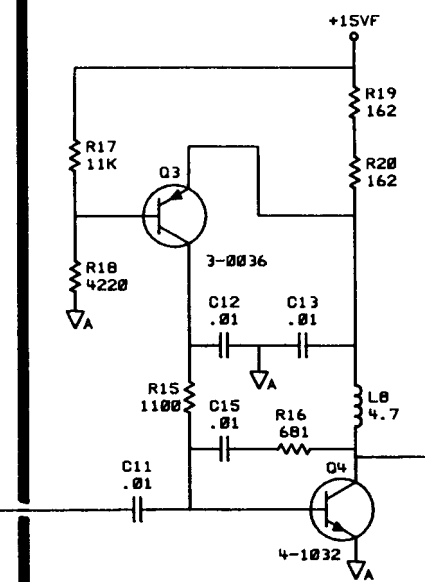


(E) CAL AMP

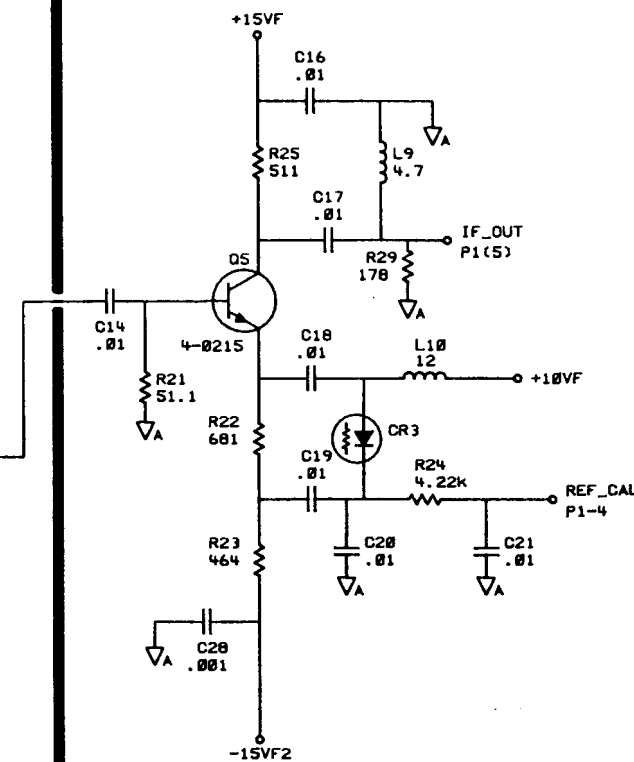

A10 SECOND IF
08590-60055

| PIN | SIGNAL |
|-----|--------|
| 1 | GND |
| 2 | GND |
| 3 | GND |
| 4 | GND |
| 5 | GND |
| 6 | GND |
| 7 | GND |
| 8 | GND |
| 9 | GND |
| 10 | GND |
| 11 | +15 VF |
| 12 | GND |

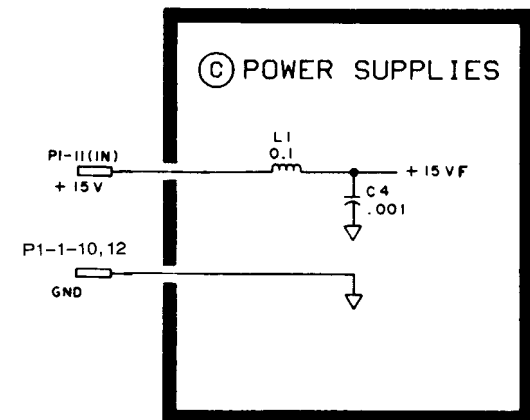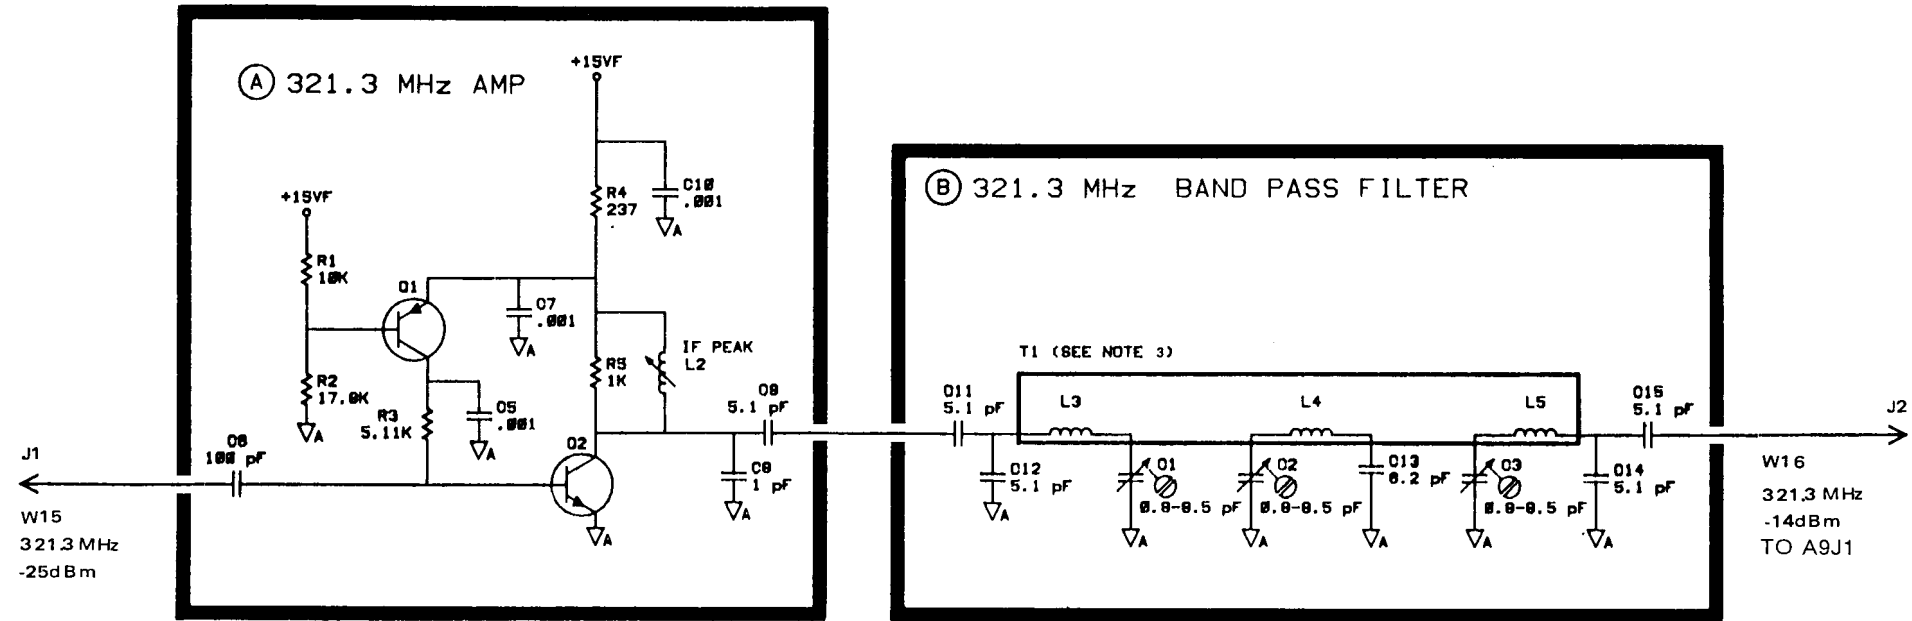

First and Second Bandwidth Filters A11 and A13

The Bandwidth Filter Assemblies are identical. Each assembly contains two synchronously tuned filter poles isolated by buffer amplifiers (see Figure 5-15). Unlike stagger-tuned poles, the filter poles have identical center frequencies. The bandwidth of all four filter poles is changed synchronously by the resolution bandwidth selected on the analyzer front panel using the [RES BW] soft key. The currents that control bandwidth selection are received from the Analog Interface Assembly A7. Because the variable bandwidth filters are much narrower than the filters in the RF section, the selected resolution bandwidth value determines overall analyzer bandwidth. LC filters provide bandwidths from 3 MHz to 100 kHz. Crystal filters provide the narrow (30 to 1 kHz) bandwidths. The bandwidth filters have a Gaussian bandpass characteristic.

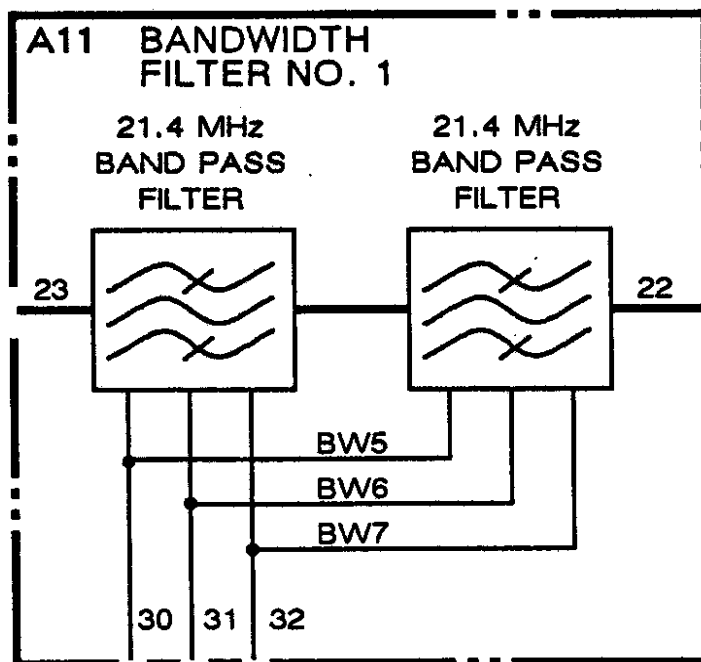


Figure 5-15. Bandwidth Filter Block Diagram

Detailed Description

The Bandwidth Filter Assemblies operate at 21.4 MHz with eight available bandwidths: 3 MHz, 1 MHz, 300 kHz, 100 kHz, 30 kHz, 10 kHz, 3 kHz, or 1 kHz. Four stages of filtering are used for all eight bandwidths; each assembly contains two stages. The bandwidths from 1 kHz to 30 kHz are obtained from synchronously tuned crystal filters; the remaining four bandwidths (100 kHz to 3 MHz) use synchronously tuned LC tank circuits.

Assembly Descriptions

The four crystal-filter stages contain factory-selected matched crystals (A11Y1, A11Y2, A13Y1, and A13Y2) that must be replaced as a set. If replacement of a bandwidth filter assembly is necessary, the new assembly is shipped with two crystals installed and two packaged separately to replace the crystals on the other assembly. In addition to the filter stages, each board contains a 10-dB Buffer Amplifier, a Unity Gain Buffer Amplifier, and an Output Buffer Amplifier.

10-dB Input Buffer Amplifier (B)

The 10-dB Input Buffer Amplifier is shown as a noninverting operational amplifier in Figure 5-16. Gain for the amplifier is expressed by the equation:

$$\text{gain} = 1 + R_f/R_{in}$$

The total resistance of R5, R6, and R7 forms the feedback path (R_f); R3 forms the input resistance (R_{in}). This ac model of the amplifier's operations is true for all but the narrowest bandwidths, as illustrated later.

Two current paths are used for dc bias in the input buffer amplifier: one for crystal filter poles, another for LC filter poles. When a crystal-filtered bandwidth of less than 30 kHz is selected, Q3 (block D) and Q1 are the sources for the current through Q2 (see Figure 5-17). The base voltage of Q2 is fixed by the divider R9 and R10, while the emitter is fixed by R8. The collector, therefore, becomes a constant-current sink for 20 mA of current supplied by Q1 and Q3. A decrease in the current supplied by Q3 results in increased current through Q1, keeping the current through Q2 constant. If an LC-filtered bandwidth is selected, BW5F (filtered bandwidth control line 5 in block C) supplies current via CR1 and R13 (see Figure 5-18); Q3 is effectively removed from the circuit.

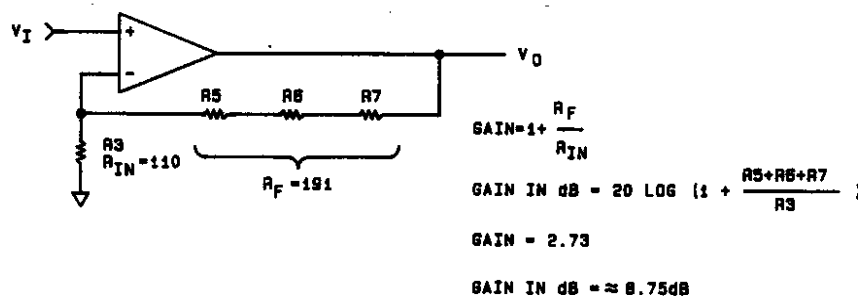


Figure 5-16. 10-dB Input Buffer Amplifier Gain Model

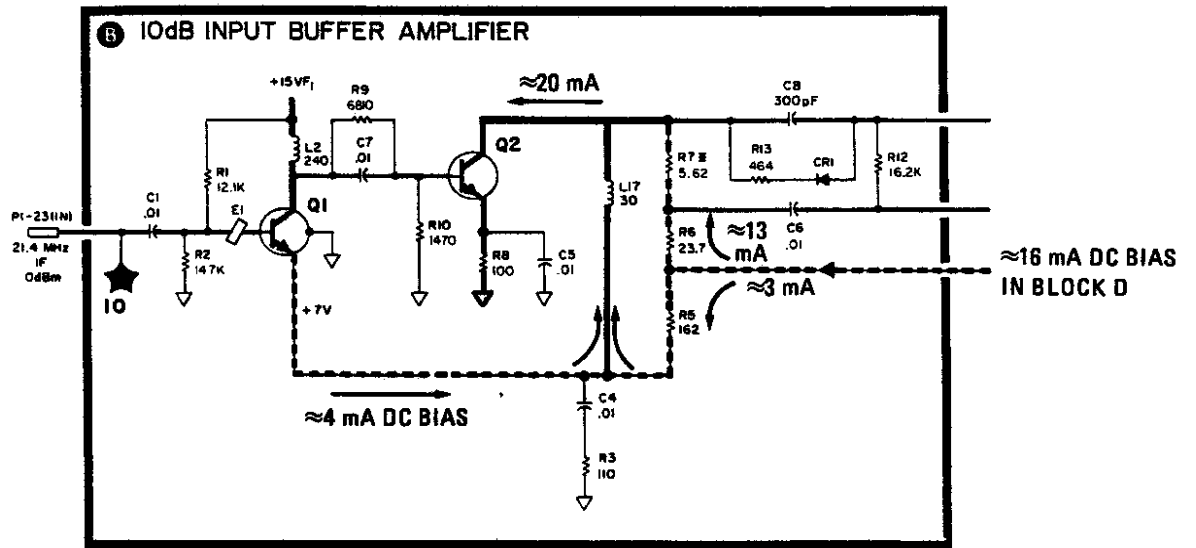


Figure 5-17. DC Bias Path During Crystal Pole Operation

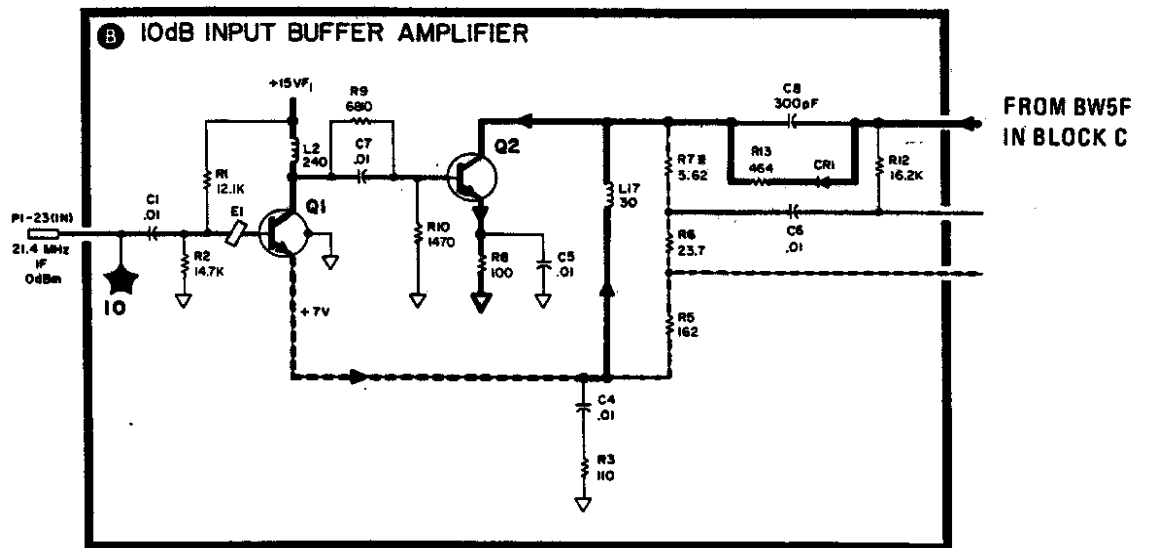


Figure 5-18. DC Bias Path During LC Pole Operation

Assembly Descriptions

A different model is needed for crystal filtering modes (see Figure 5-19). Resistor R7 has been omitted to simplify the model. The emitter load of Q3 (R_t) is the series combination of the internal resistance of Y1 (R_s) and a resistance determined by the bandwidth selected (see First Xtal Pole description). The crystal's series resistance at resonance (R_s) is constant at about 10 ohms. In the 30-kHz bandwidth, R23* is in series with R_s . Since R23* is very large by comparison, it represents the total load on Q3 (R_t). When R23* is substituted into the gain equation for R_t , a gain of 2.7 (8.6 dB) results. This is roughly equal to the gain without Q3 in the circuit. In fact, the larger R_t becomes, the closer the gain becomes.


When the 1-kHz bandwidth is selected, CR4 is biased on and has a resistance of about 60 ohms. This resistance forms a voltage divider with R_s and results in signal amplitude loss across the crystal. Increased gain in the input buffer amplifier, caused by the load on Q3, compensates for these losses. The gain increase occurs when the reduction in the R_t turns Q3 on even harder, resulting in some of the feedback from R6 being shunted to ground through the collector of Q3. This reduction in negative feedback increases the gain of the input buffer amplifier. By substituting the 1-kHz bandwidth R_t ($10 + 60 = 70$ ohms) into the gain formula, a new gain of 4.0 (12 dB) is derived.

First XTAL Pole (D)

Crystal filtering is used for bandwidths of 1 kHz, 3 kHz, 10 kHz, and 30 kHz. Individual poles have a bandwidth about 2.3 times the selected bandwidth, and each filter board assembly (two poles combined) has a bandwidth of about 1.5 times the selected bandwidth. For example, when the 1-kHz bandwidth is selected, each pole has a 3-dB bandwidth of about 2.3 kHz, and each assembly has a bandwidth of 1.5 kHz. The signal from the input buffer amplifier is routed to Q3 and to compensation amplifier Q4. (The action of Q3 is discussed in the 10-dB Input Buffer Amplifier description.) From Q3, the signal is applied to the crystal (Y1) where it is filtered before going to the unity gain buffer amplifier.

The crystal functions as a series-resonant filter tuned to 21.4 MHz. An equivalent circuit is shown in Figure 5-20. Parallel capacitance C_o is the result of terminal and case capacitances in the crystal; R_s is the effective resistance at resonance (about 10 ohms). Both C_o and R_s are detrimental to the pole's performance, so compensation is used to nullify their effects. Because they are canceled, C_o and R_s are not shown in the simplified crystal pole schematic.

Pin diode CR4 (see Figure 5-21) controls the filter's bandwidth by functioning as a variable resistance at 21.4 MHz. The voltage applied to BW6F controls the current through CR4 and its resistance. An increase in current decreases the resistance and narrows the bandshape.

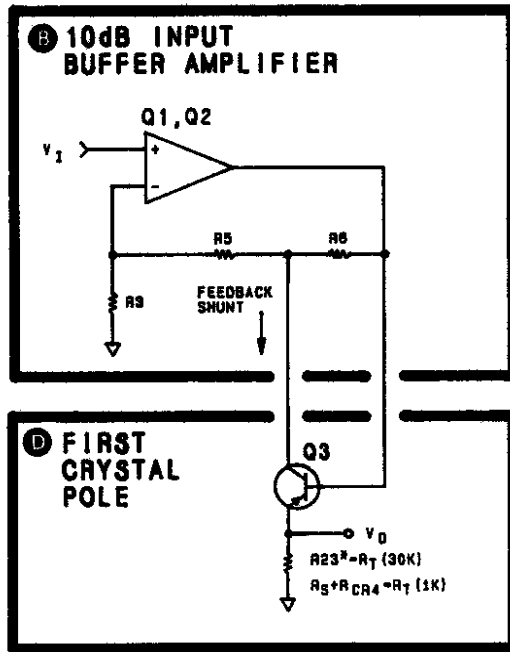

$$GAIN = \frac{1 + \frac{R5+R6}{R8}}{1 - \frac{R6}{R7}}$$

FOR 30K BW:
When: $R7 = 6250 \Omega$

Then: $GAIN = \frac{1 + \frac{185.7}{110}}{1 - \frac{29.7}{62.50}} = 2.69 \text{ GAIN } 2.70 \approx 8.6\text{dB}$

FOR 1K BW:
When: $R7 = 70 \Omega$
Then: $GAIN = \frac{2.69}{.66} \approx 4.0 \approx 12\text{dB}$

Figure 5-19. 10-dB Input Buffer During Crystal Pole Operation

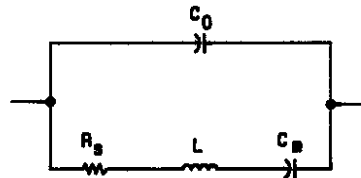


Figure 5-20. Crystal Model

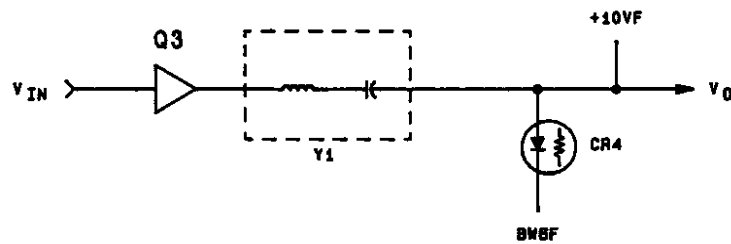


Figure 5-21. First Crystal Pole, Simplified Schematic

Assembly Descriptions

The crystal presents a low impedance (R_s) to the signal at resonance so that the signal voltage is developed across CR4. As the signal frequency varies from the 2.4-MHz center frequency the impedance of the crystal increases, making it part of a voltage divider with CR4 and causing more signal voltage to be developed across the crystal. The frequencies where crystal impedance and PIN diode resistance become equal are the 3-dB points of the bandpass. Varying the PIN diode resistance, therefore, varies the bandwidth.

The case capacitance of the crystal (C_0) would cause a second resonant point, or dip, in the bandpass if compensation were not used to nullify its effects. Compensation is provided by Q4 as a current equal to and opposite in phase with the current flowing through C_0 , as shown in Figure 5-22. Capacitor C15 (SYM) adjusts the phase of the compensating current.

The sum of the input capacitances of the unity gain buffer, the trace capacitances, and the capacitance of the PIN diode causes the center frequency of the filter to be altered. Compensation is used to eliminate this effect. These capacitances are tuned out by including them in the parallel resonant circuit (at 21.4 MHz) formed with L7 and fine tuned by C25 (CTR). Adjusting C25 tunes the circuit to present a high impedance at resonance.

When LC filtering is selected, BW5F forward biases CR2, effectively grounding the emitter of Q3. During crystal filtering, CR2 is reverse biased.

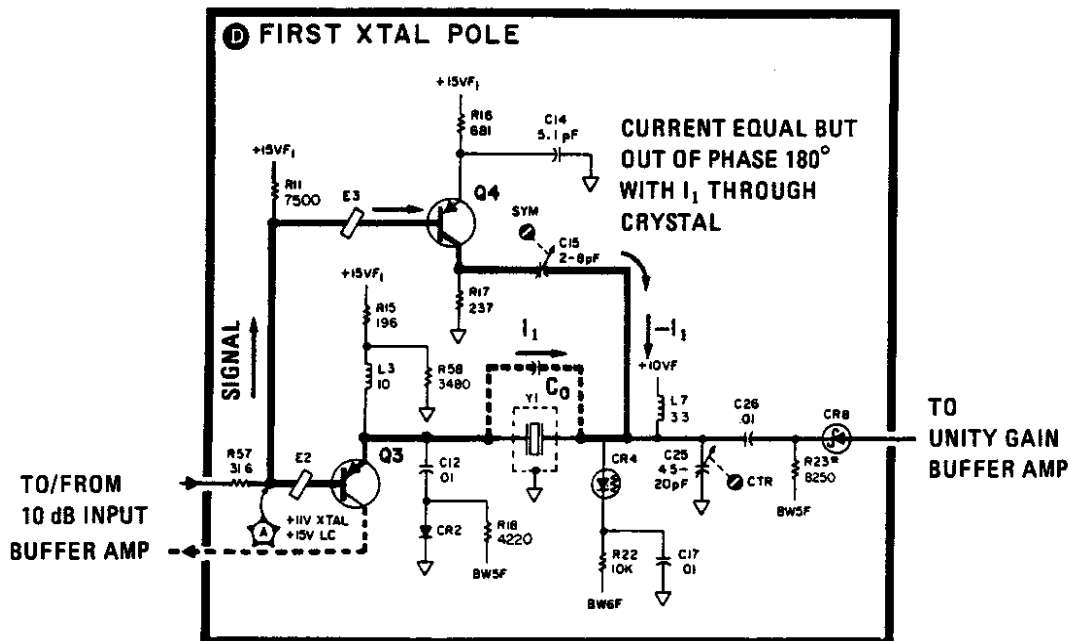


Figure 5-22. Compensation Amplifier

First LC Pole (C)

LC filtering is used for bandwidths of 100 kHz, 300 kHz, 1 MHz, and 3 MHz. The relationship of the individual pole's bandwidth to the selected bandwidth is the same as that of the crystal poles: 2.3 times per pole and 1.5 times per assembly. The LC filter pole comprises a metallized inductor (L6) in parallel with four capacitors: the series combination of C16* and C20*, C21 (temperature compensation), and C23 (center adjust). This resonant circuit is driven through CR3, which functions as a variable resistor. Bandwidth control line BW7F establishes the current through CR3 and thereby controls the pole's bandwidth. Feedback from the unity gain buffer replenishes losses in the resonant circuit.

A simplified model of the LC Pole is shown in Figure 5-23. At resonance, a voltage divider is formed between CR3 and the resonant circuit. The 3-dB points of the bandpass occur when the PIN resistance and the impedance of the resonant circuit are equal. Varying the PIN resistance varies the filter's 3-dB points. The higher the PIN resistance, the narrower the bandwidth. When the 100-kHz bandwidth is selected, CR3 is reverse biased and R19* sets the bandwidth; if one of the other bandwidths is selected the parallel combination of R19* and CR3 is utilized. The intrinsic capacitance of PIN diode CR3 affects the bandpass, if it is not compensated for. Adjustable capacitance C73 (LC DIP) and L5 are in parallel with the PIN capacitance and allow it to be tuned out of the circuit.

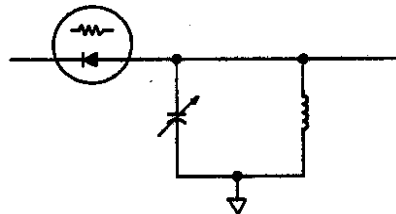


Figure 5-23. LC Pole Model

A simplified schematic of the first LC pole is shown in Figure 5-24. The fundamental frequency-determining components are L6 and the center-tapped capacitance C16* and C20*. Positive feedback is applied to the center-tap at 21.4 MHz to compensate for losses in the tank circuit. The feedback makes it important that C16* and C20* be the same value for proper pole operation. The feedback level is controlled by CR5, acting as a variable resistance. LC feedback control R26 establishes the current through CR5 and its resistance.

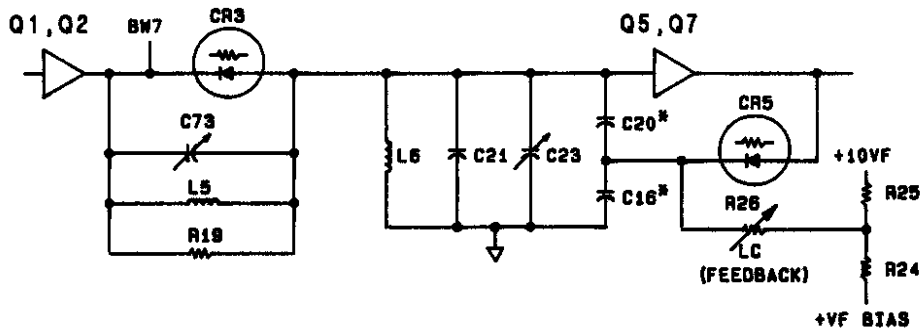


Figure 5-24. First LC Pole, Simplified Schematic

When an LC filtered bandwidth is selected, BW5F is at +15V; BW7F is at a voltage greater than or equal to +6.8V and supplies bandwidth-determining bias current to CR3. Supply line +VF BIAS is always at +6.8V. Control line BW5F reverse biases CR8 (block B), disabling the crystal pole, and forward biases CR1 (block B) opening the dc bias path to Q2. During LC operation, CR6 is reverse biased, keeping C28 out of the circuit. When a crystal filtered bandwidth is selected, BW5F forward biases CR6 and allows C28 to ground the signal path.

Unity Gain Buffer Amplifier (E)

Operation of the Unity Gain Buffer Amplifier is similar to the 10-dB Input Buffer Amplifier, except that it has an FET input (Q5) and unity gain. The input signal path is activated by the BW5F line, which switches on CR9 during LC mode or CR8 during crystal mode.

When the crystal mode is selected, the current through the input FET (Q5) is determined by Q6 and constant sink Q7, which sinks about 4 mA. During LC mode, current is supplied through R37 and CR10 from BW5F. The input FET current is a good indication of the stage's operation and can be monitored by measuring the gate-to-source voltage. This voltage should fall between +0.2V and +1.5V. An increase in current decreases the voltage.

Capacitor C68 and L19 form a feedback circuit that tunes Q7 to 21.4 MHz. Trimmer Resistor R31 (XTL FEEDBACK) adjusts the feedback and controls the stage gain, as do R5 and R6 in block (B).

Second XTAL Pole (G)

The operation of the Second Xtal Pole is the same as the First Xtal Pole.

Second LC Pole (F)

Operation of the Second LC Pole is the same as the First LC Pole, except that R56* performs the same function as PIN diode CR5.

Output Buffer Amplifier (H)

The Output Buffer Amplifier is composed of a complementary pair of transistors. Transistor Q9 is a source follower with its output current boosted by Q10. The current through input FET Q9 is established by R53:

$$I_{\text{FET}} = \frac{V_{\text{be}}(\text{Q10})}{R_{53}}$$

which becomes: $I_{\text{FET}} = .7/196$, or about 3 mA

The total current through Q9 and Q10 is set by R54. The input signal path is selected by either CR15 (during crystal mode) or CR16 (during LC mode).

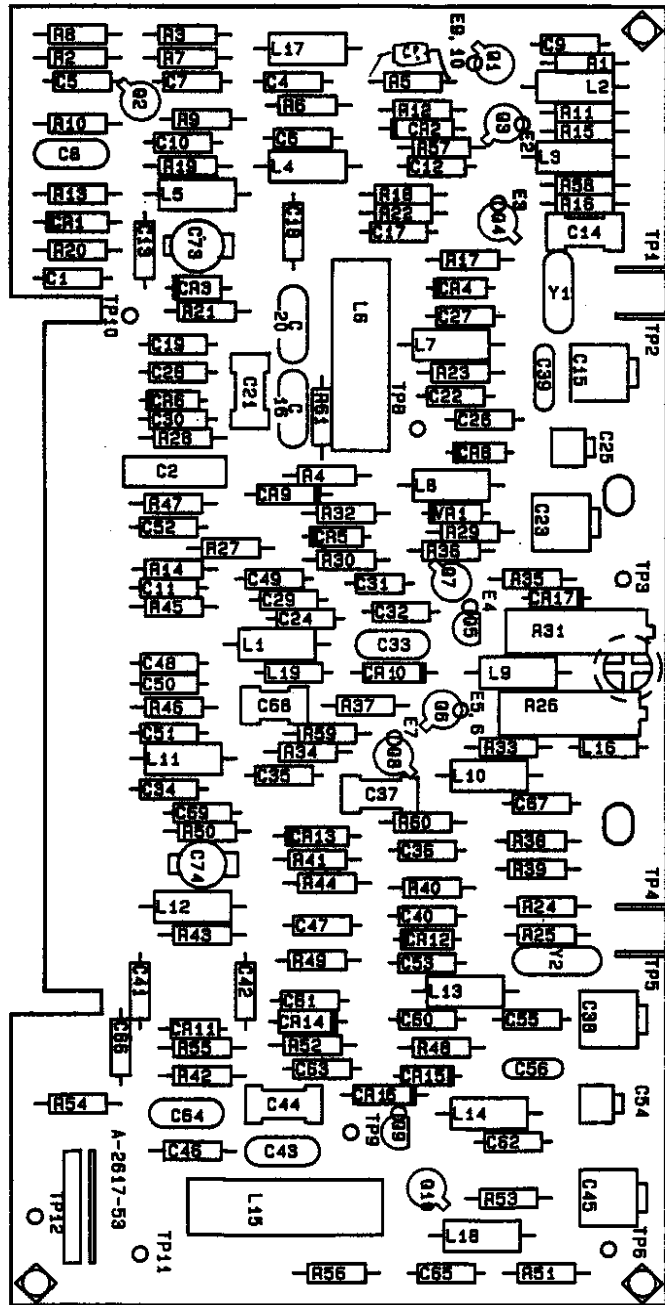


Figure 5-25. Bandwidth Filter Component Locations